 
 


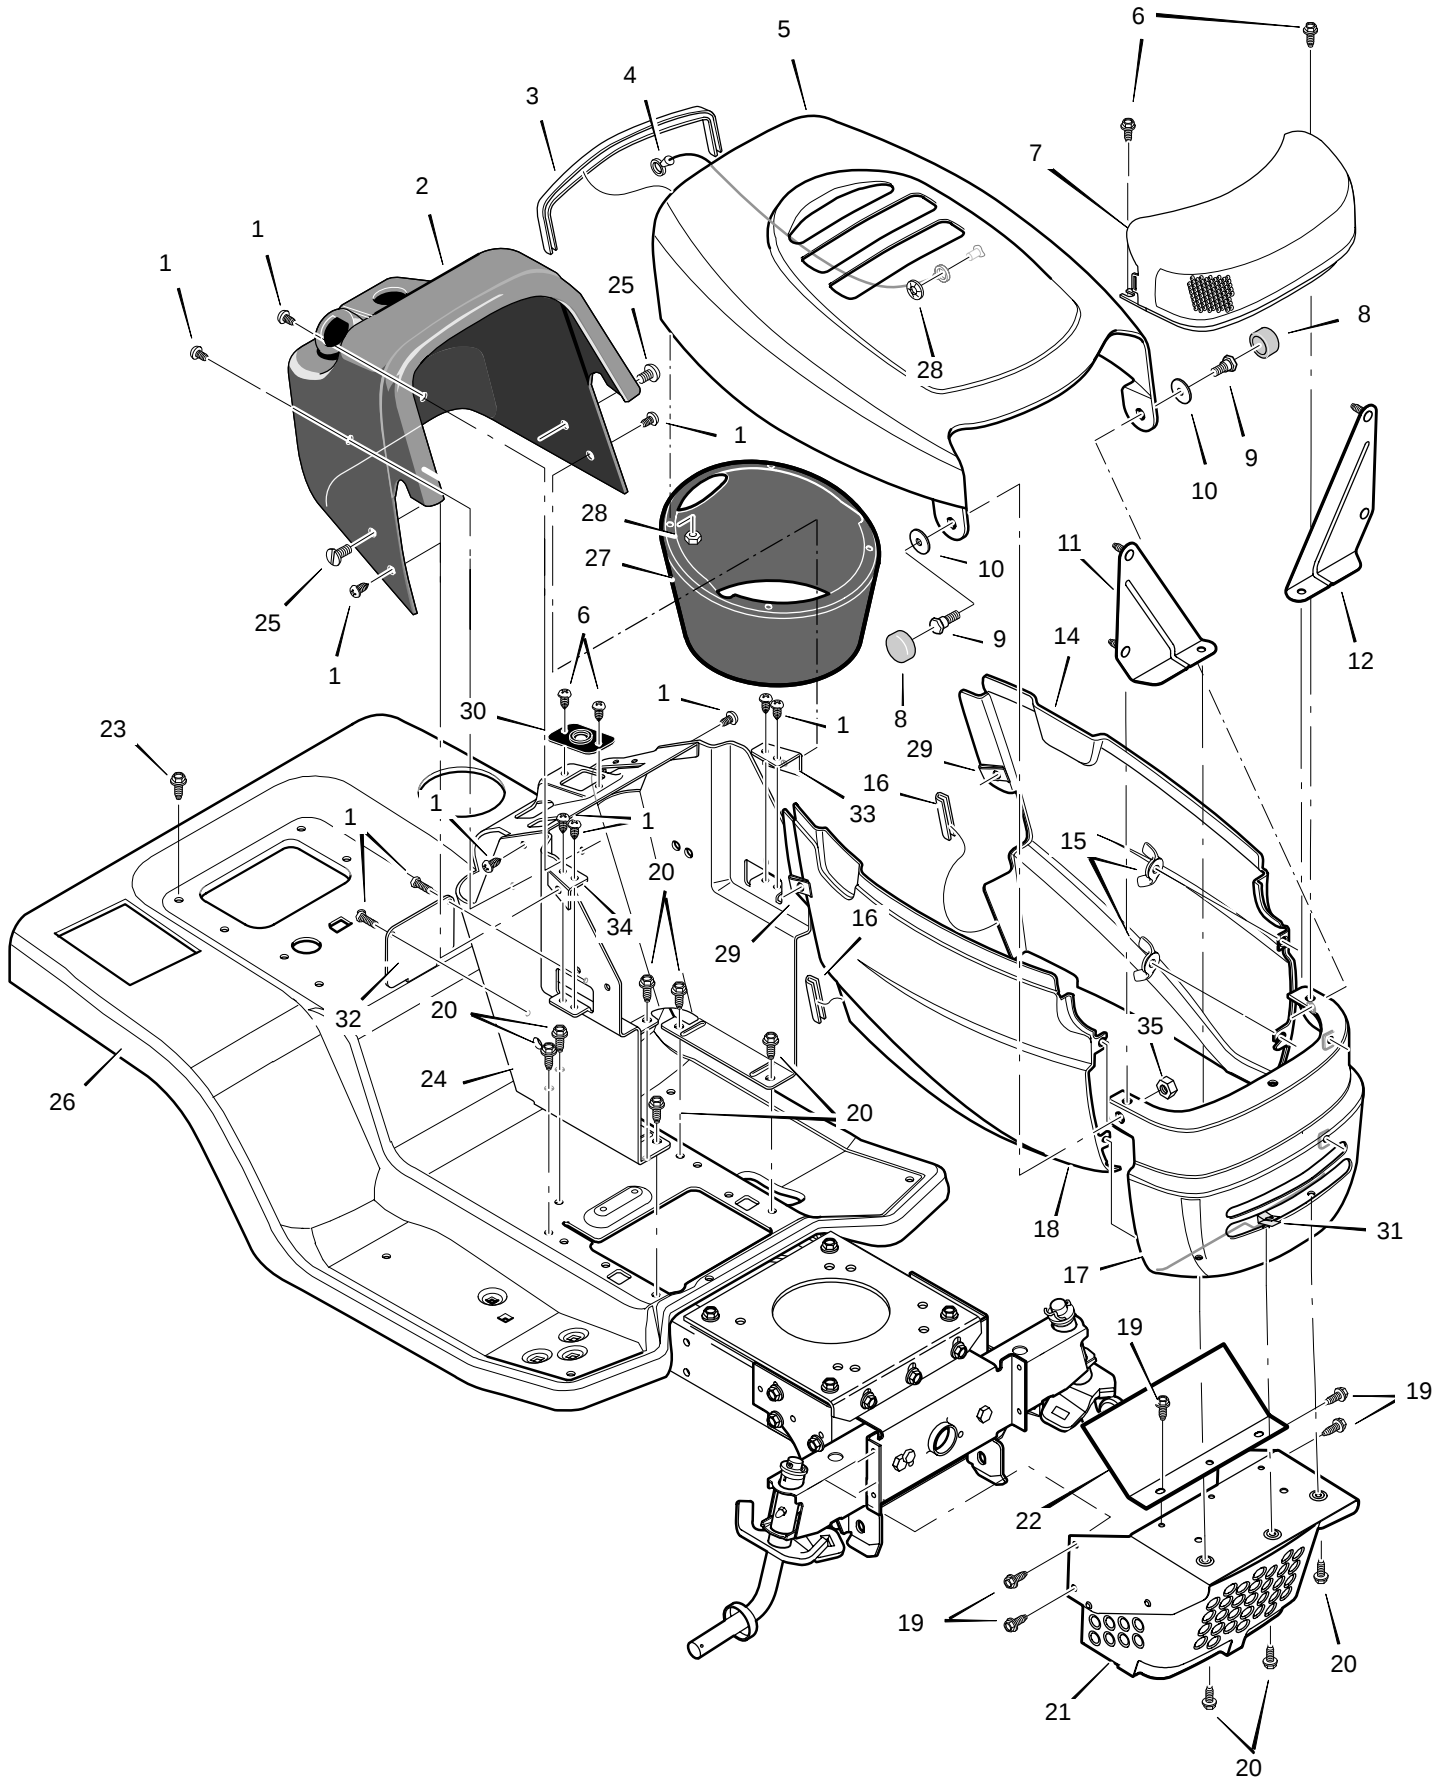

MODEL 525607x692A

REPAIR PARTS HOOD & GRILLE


Key No.	Description	Part No.
1	Screw	26x270
2	Dash	1001114
3	Trim 2.23"	7601029
4	Cable	643129
5	Hood Assemnly	1001186E010
6	Screw	26x238
7	Lens & Reflector Assembly	95234
8	Cap, Pivot	690113
9	Bolt, Shoulder	9x49
10	Base, Pivot	690114
11	Brace, Right Grille Assembly	1001169E700
12	Brace, Left Grille Assembly	1001171E700
14	Panel, Left Side	94457E700
15	Wingnut	14x79
16	Trim 0.39"	7601029
17	Grille	1001126E700
18	Panel, Right Side	94458E700
19	Screw	26x277
20	Screw	26x249
21	Guard Assembly, Muffler	1001191
22	Shield, Upper Heat	1001156
23	Screw	26x263
24	Console	95173E700
25	Screw	26x239
26	Deck Seat	1001099E700
27	Plenum	1001158
28	Retainer, Push	28x49
29	Cap, Push	28x23
30	Bearing, Steering	94075
31	U-Nut	28x57
32	Panel, Access	93007
33	Bracket, Right Console	94464E700
34	Bracket, Left Console	94465E700
35	Nut	15x84
—	Book, Instruction	F-010753L

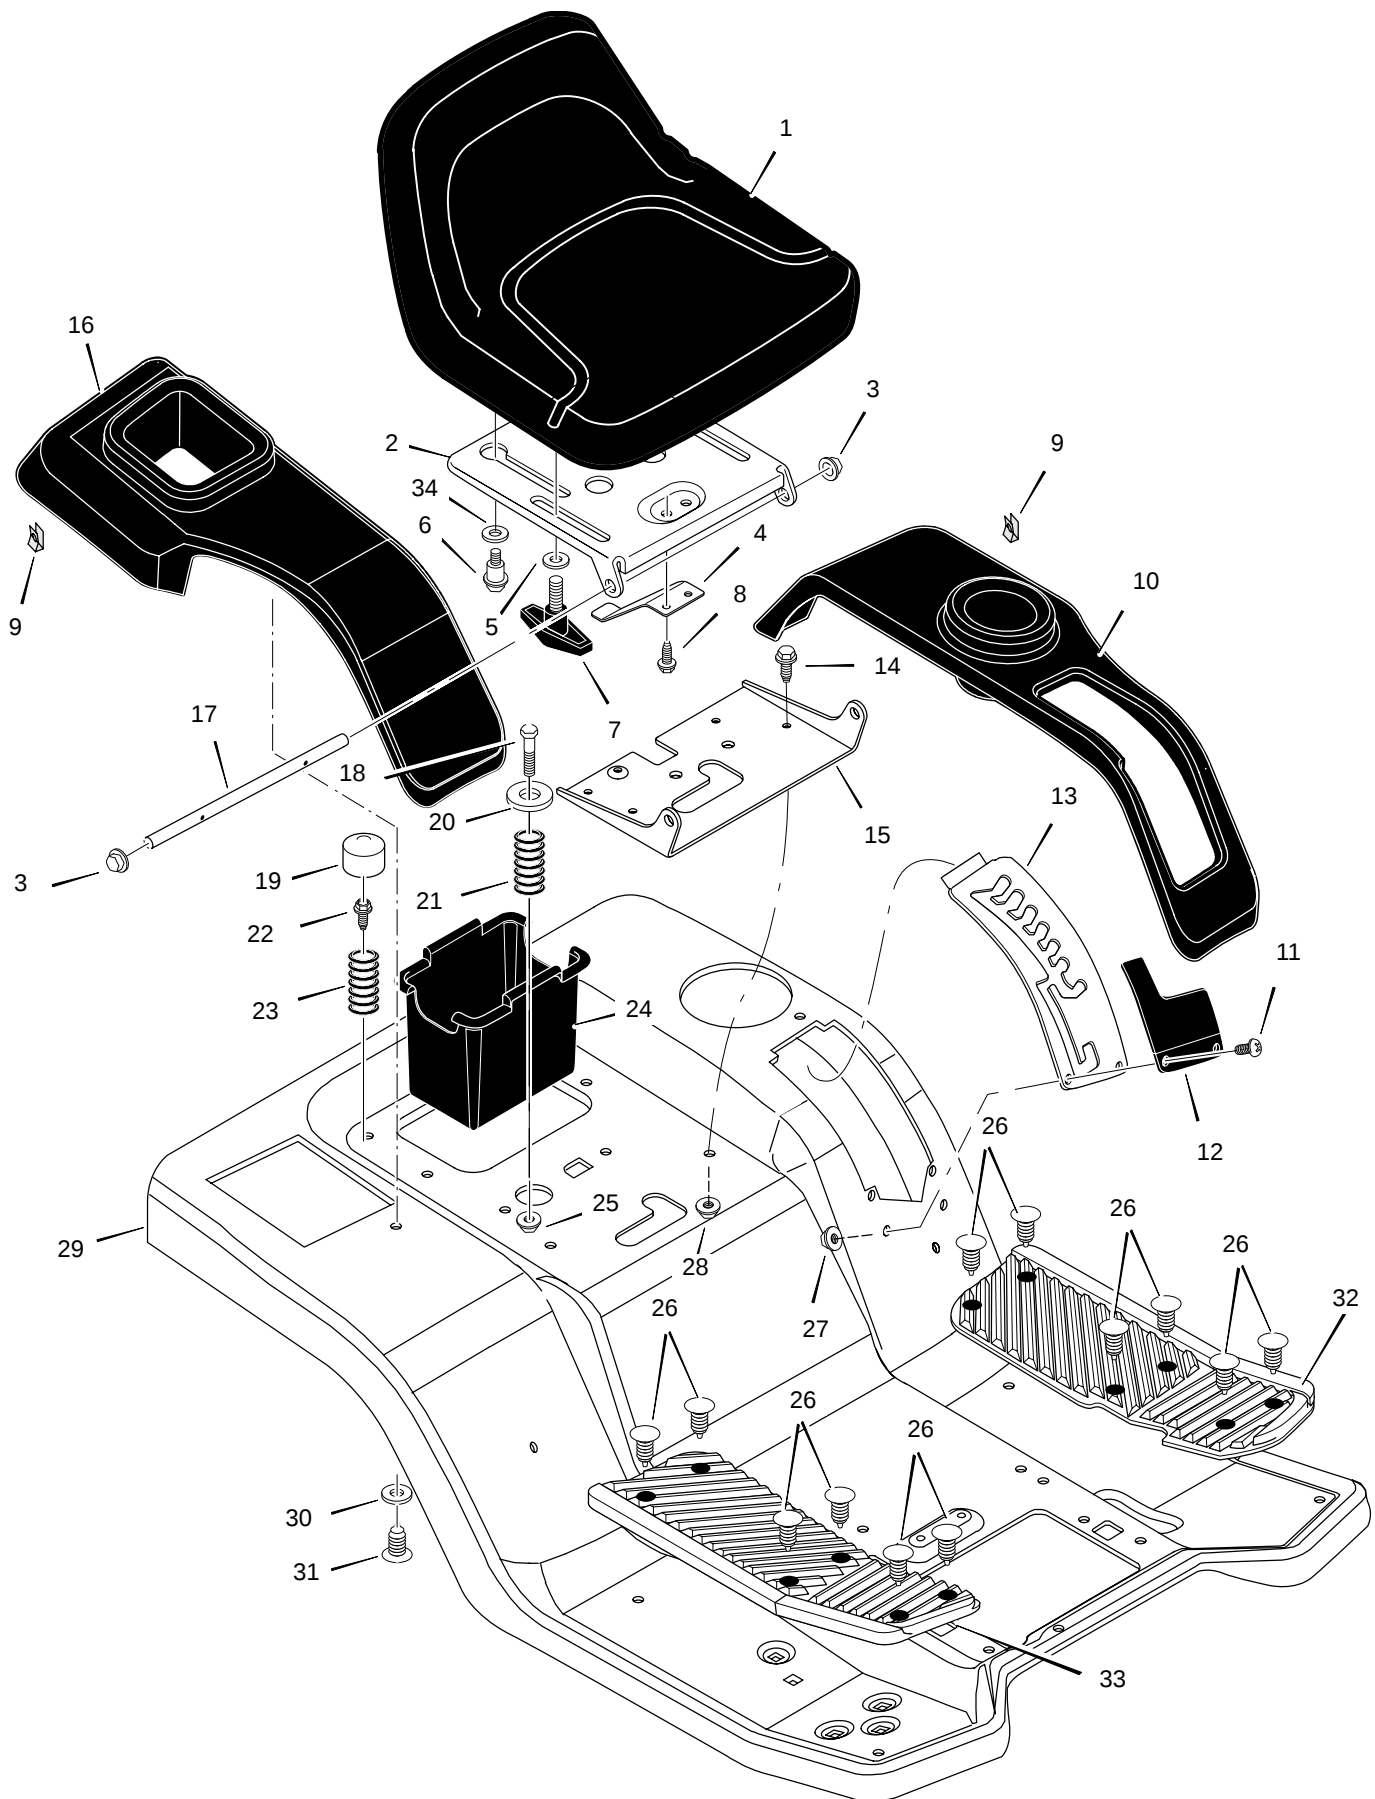

Key No.	Description	Part No.
1	Seat	1001244
2	Support, Seat	94154E700
3	Capo, Push	28x23
4	Spring, Leaf	94057
5	Washer	17x47
6	Bolt, Shoulder	9x56
7	Bolt, Wing	1001054
8	Screw	26x229
9	U-Clip	1001218
10	Panel, Left Shoulder	1001095
11	Bolt, Shoulder	9x47
12	Cover, Detent Lockout	94483
13	Plate, Lift Detent	94194
14	Bolt, Hex	1x45
15	Bracket, Pivot	94153E700
16	Panel, Right Shoulder	1001094
17	Rod, Pivot	94156 Z
18	Bolt, Shoulder	9x55
19	Cap	20107
20	Washer, Cup	94155 Z
21	Spring, Compression	164x31
22	Screw	26x249
23	Spring, Compression	164x30
24	Container, Battery	690424
25	Nut, Centerlock	15x89
26	Fastener, Panel	193x1
27	Locknut	15x81
28	Nut, Nylock	15x123
29	Deck, Seat	1001099E700
30	Washer	17x207
31	Screw	26x284
32	Mat, Left	95408
33	Mat, Right	95409
34	Washer	17x102

MODEL 525607x692A

 REPAIR PARTS DRIVE ASSEMBLY

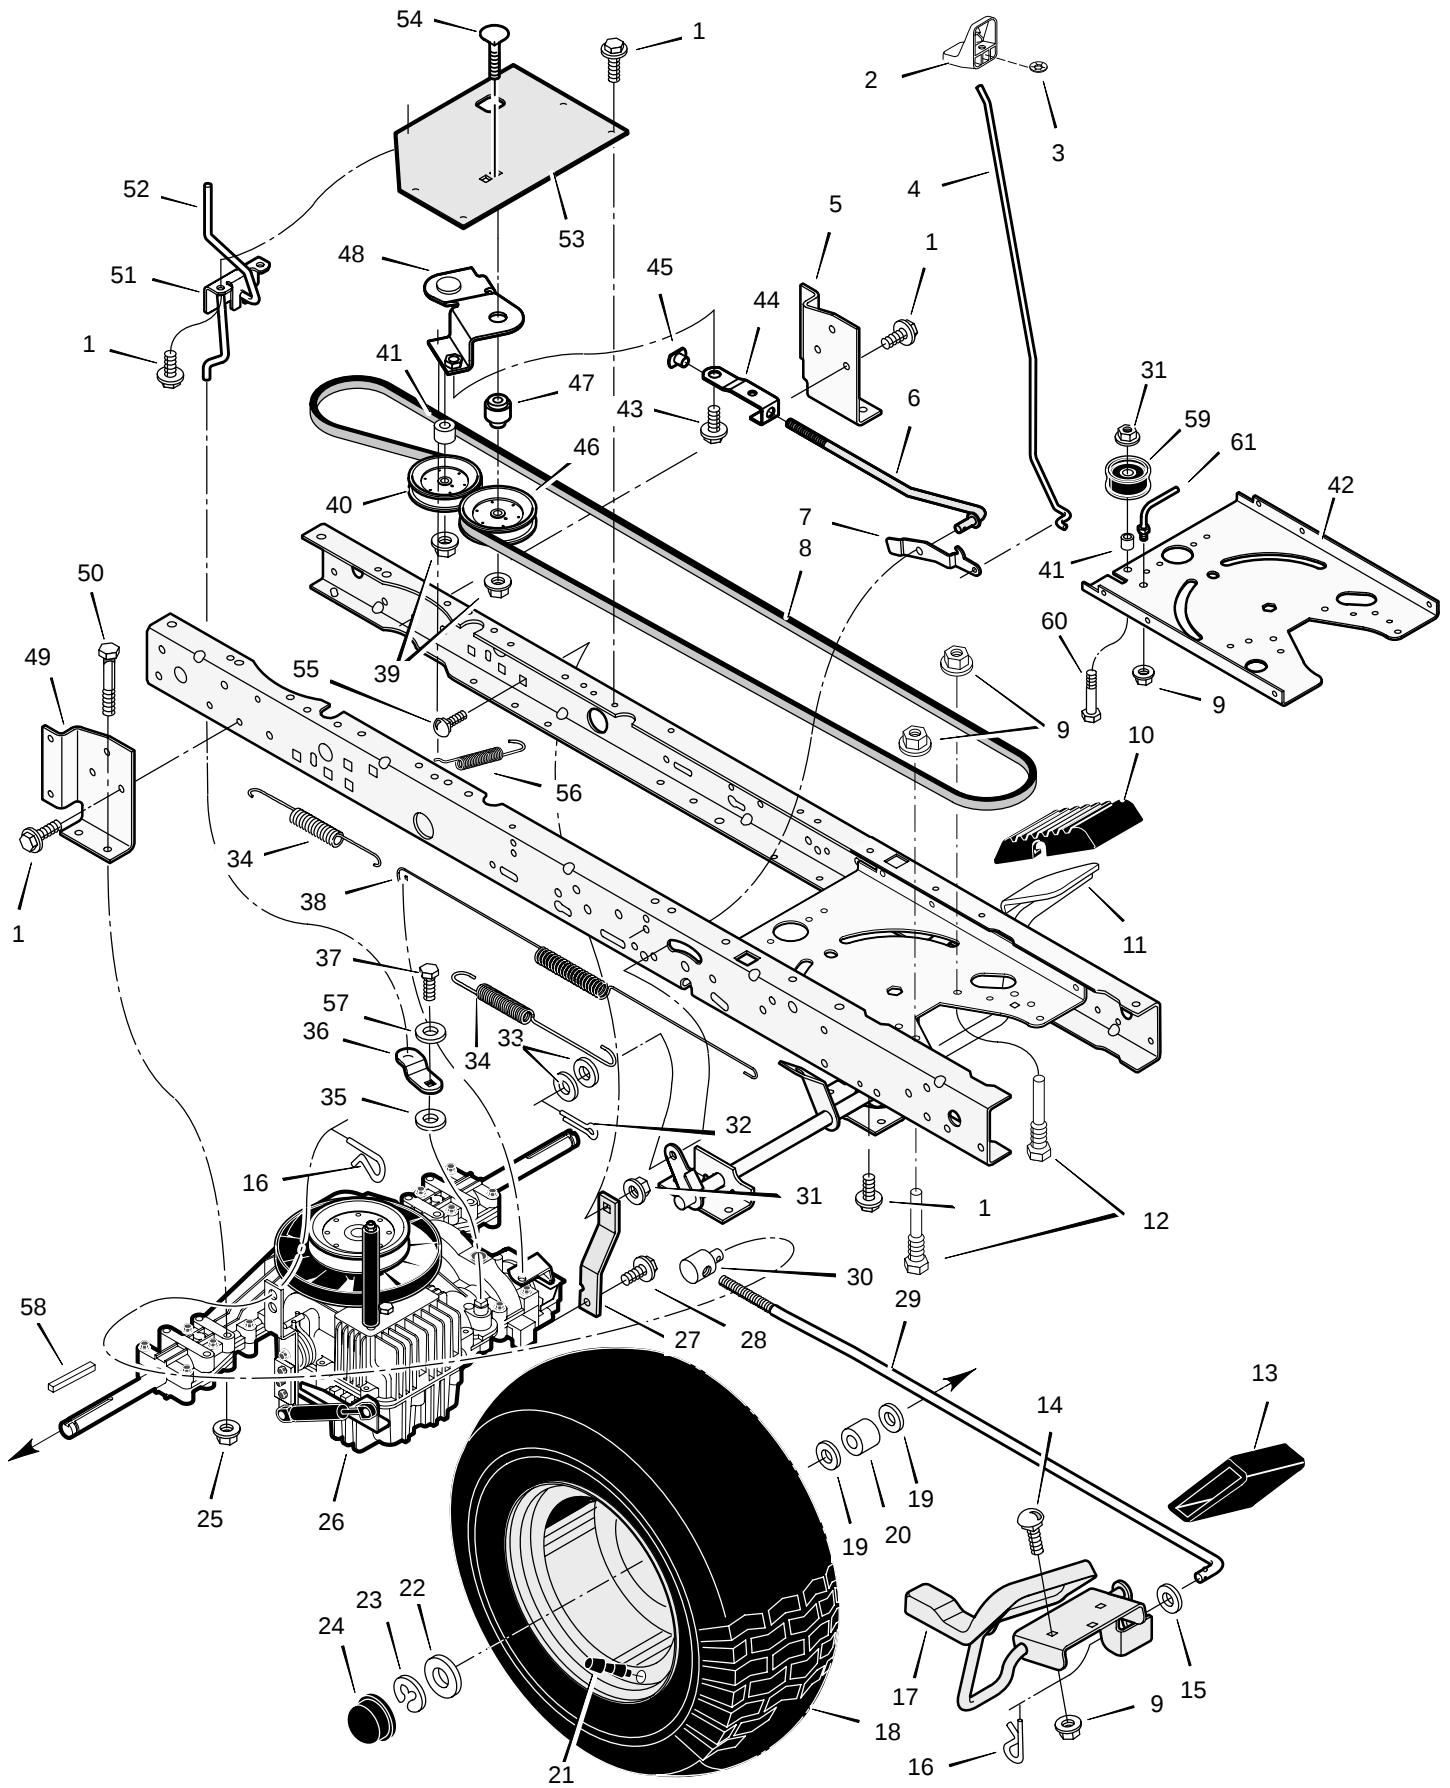


MODEL 525607x692A


REPAIR PARTS DRIVE ASSEMBLY

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Screw	26x249	31	Nut, Centerlock	15x84
2	Knob, Parking Brake	95315	32	Pin, Cotter	30x20
3	Nut, Push	711691	33	Washer	17x48
4	Rod, Parking Brake	1001217 Z	34	Spring, Extension	165x92
5	Bracket, Left Transaxle	94185E700	35	Washer	17x148
6	Rod, Clutch	1001013 Z	36	Arm, Disconnect	1001086 Z
7	Latch, Parking Brake	94045 Z	37	Capscrew	6x105
8	V-Belt, Drive	7769209	38	Spring, Brake	165x150
9	Nut, Flange	15x79	39	Locknut, Flange	15x98
10	Pad, Brake/Clutch	95220	40	Pulley, Idler	690409
11	Rod Assembly, Clutch/Brake	1001190	41	Spacer	690369
12	Screw, Guide	94384	42	Plate, Steering Mount	1001121
13	Pad, Pedal	94798	43	Bolt, Shoulder	9x49
14	Bolt, Carriage	2x53	44	Link, Clutch	1001007 Z
15	Washer	17x57	45	Nut, Tee	1001014
16	Pin, Hair	31x4	46	Pulley, Idler	690410
17	Pedal Assembly, Hydro	1001231	47	Bushing, Pivot	1001012
18	Wheel & Tire Assembly	94756-010	48	Arm Assembly, Idler	1001018 Z
--	Tire ONLY	342117	49	Bracket, Right Transaxle	94184E700
--	Tube ONLY	407050	50	Bolt, Hex	1x155
19	Washer	17x160	51	Bracket, Disconnect	1001214 Z
20	Spacer	690554 Z	52	Rod, Disconnect	1001215 Z
21	Stem, Valve	24373	53	Bracket, Idler Pivot	1001108
22	Washer	17x195	54	Bolt, Carriage	2x92
23	E-Ring	11x3	55	Bolt, Carriage	2x78
24	Cap, Hub	94618	56	Spring, Clutch	165x155
25	Nut, Centerlock	15x88	57	Washer	17x38
26	Transaxle *	—	58	Key, Square	21553
27	Strap, Torque	1001085	59	Pulley, Idler	1001187
28	Screw	26x216	60	Bolt	1x111
29	Rod, Control	1001234 Z	61	Screw, Belt Guide	1001122
30	Nut, Adjusting	92132			

 
* For information on Replacement Parts see the Central Parts Distributor in your area.

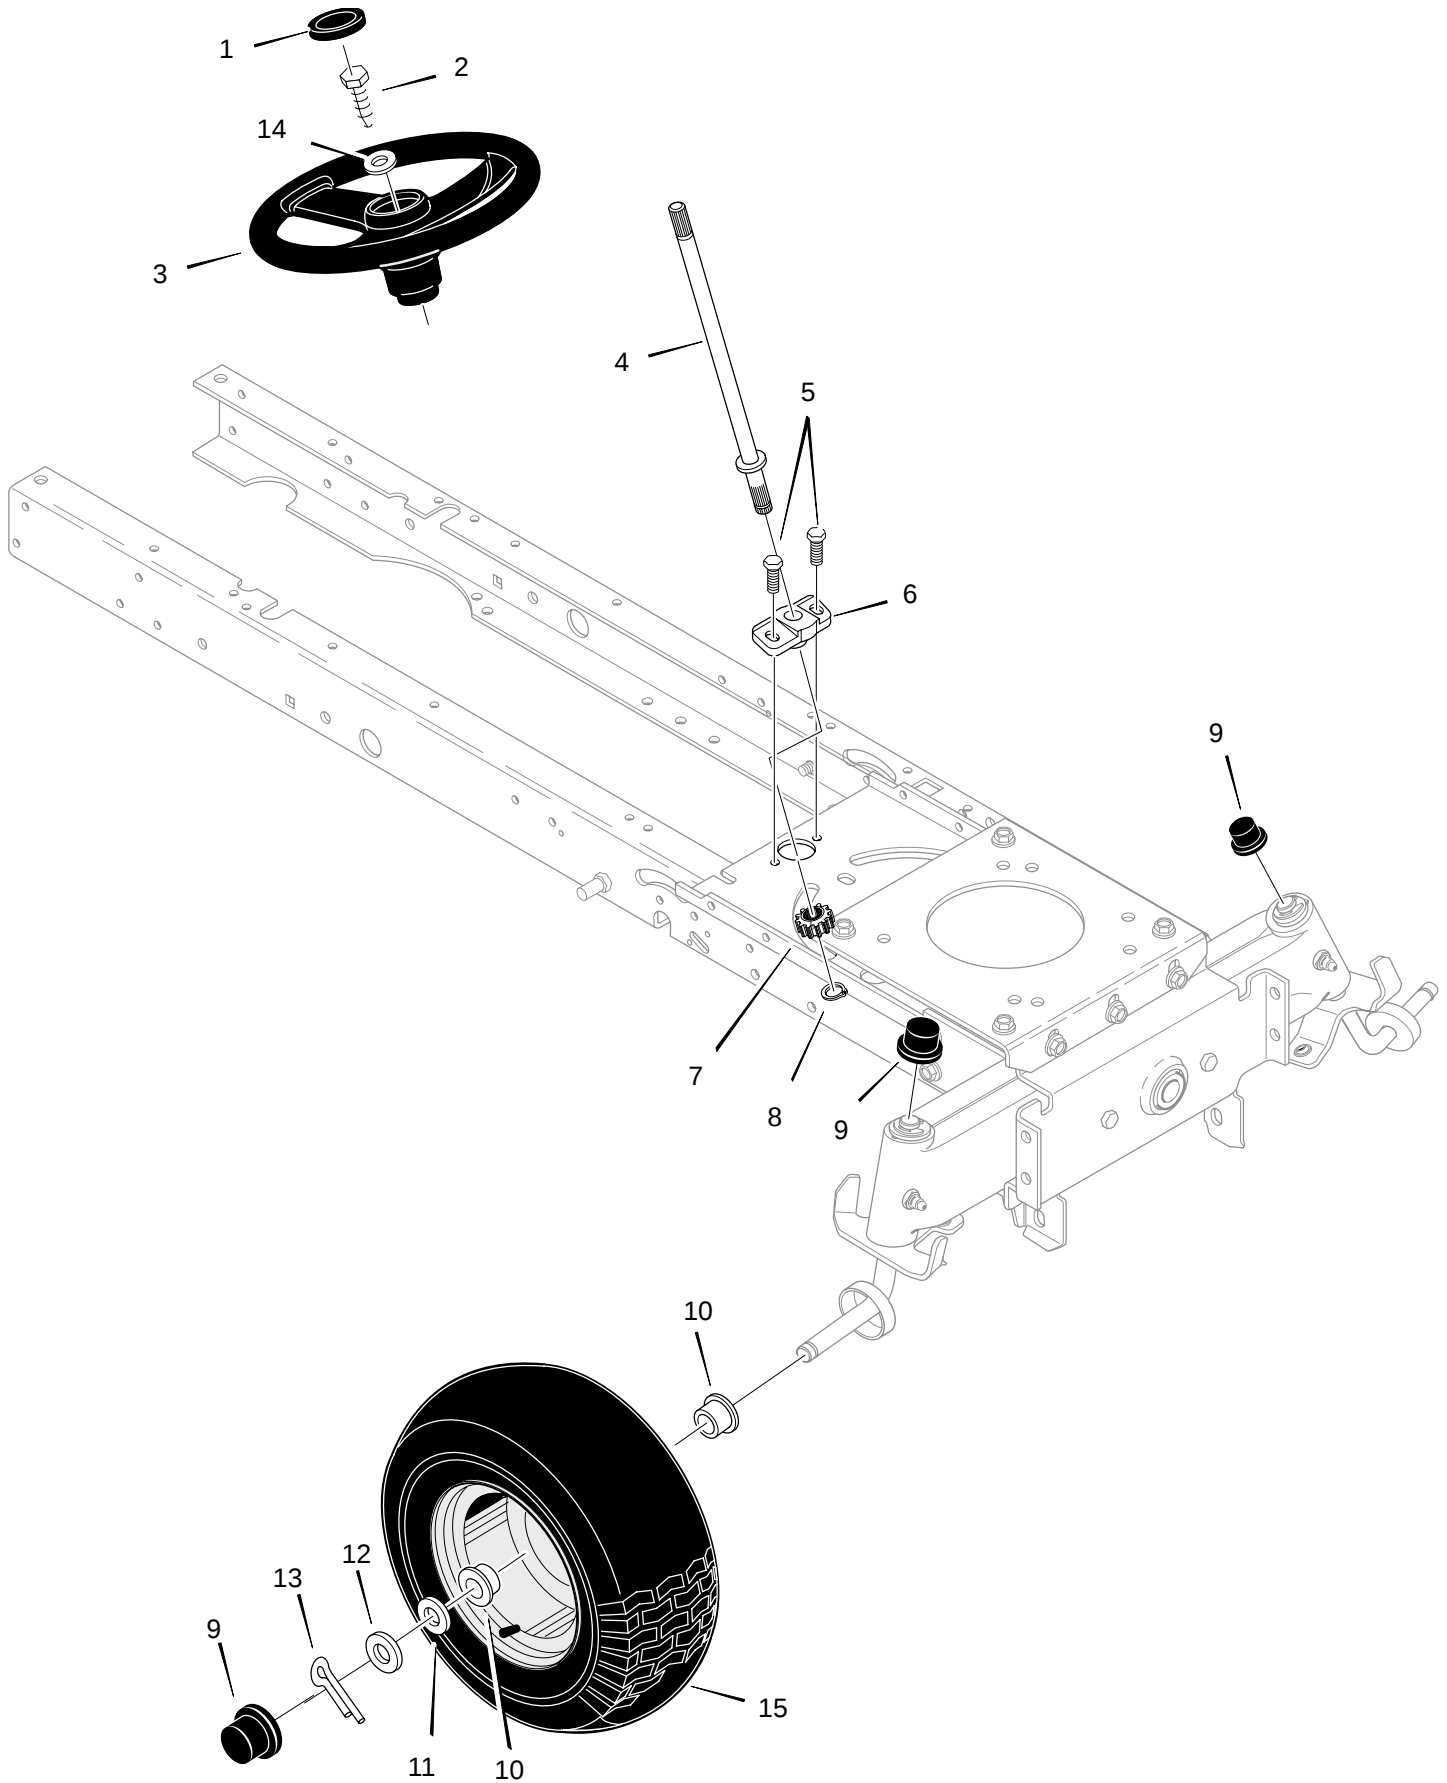


Key No.	Description	Part No.
1	Cap	1001255
2	Screw	25x3
3	Wheel, Steering	1001226
4	Shaft, Steering	690625
5	Screw	26x267
6	Bearing	94124
7	Gear, Pinion	690183
8	Ring, Snap	11x25
9	Cap	94618
10	Bearing, Wheel	91334
11	Washer	17x195
12	Washer	17x192
13	Pin, Cotter	30x49
14	Washer	17x146
15	Wheel & Tire, Front	94581-601
--	Tire Only	91912
--	Tube	407924
--	Stem, Valve	24373

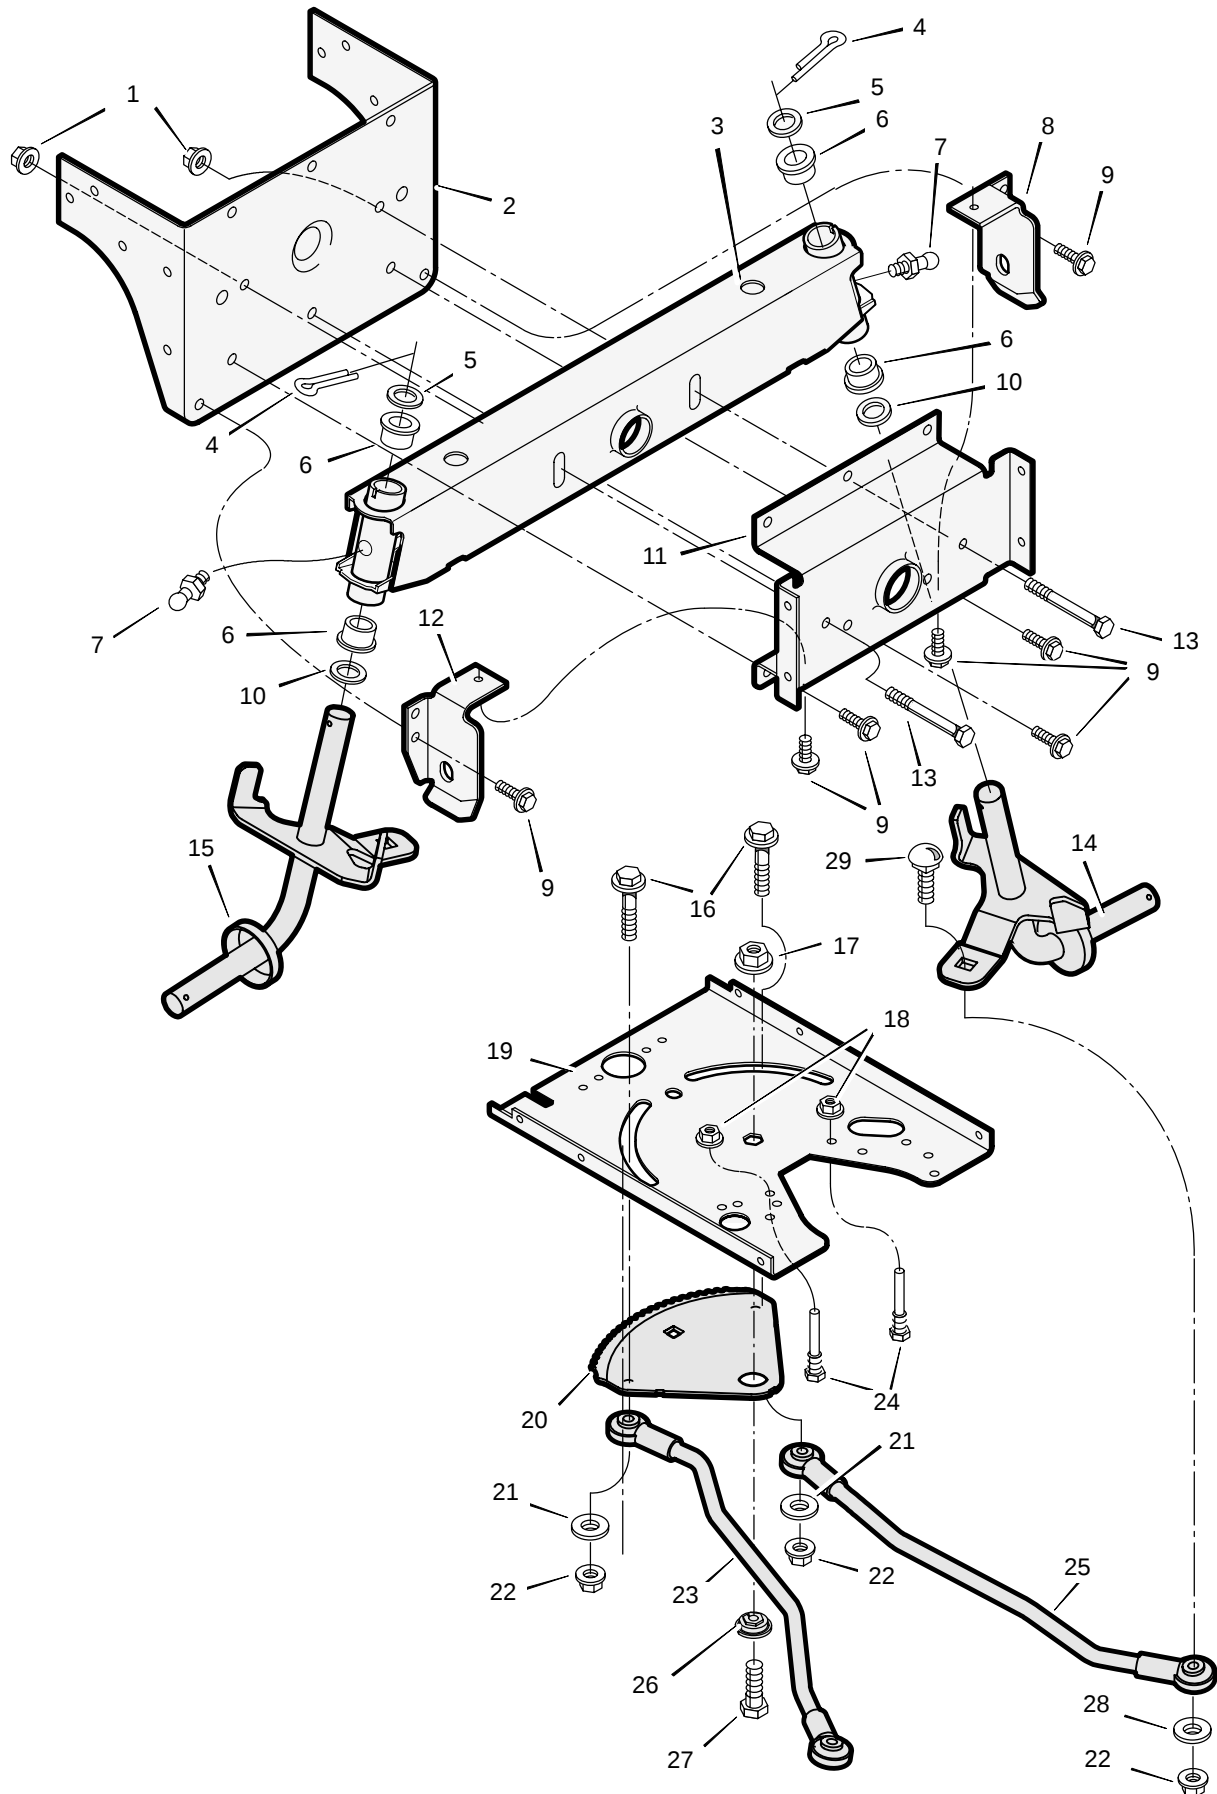 

Key No.	Description	Part No.
1	Locknut, Flange	15x118
2	Bracket, Rear Hanger	94013
3	Assembly, Axle (with Zerk)	690211E700
4	Pin, Cotter	30x49
5	Washer	17x195
6	Bearing, Spindle	690150
7	Fitting, Grease	92530
8	Hanger, Left Deck	94027E700
9	Screw	26x249
10	Washer	17x113
11	Hanger, Axle	94007
12	Hanger, Right Deck	94026E700
13	Bolt, Hex	1x146
14	Assembly, Left Spindle	1001173E700
15	Assembly, Right Spindle	1001175E700
16	Bolt, Shoulder	9x62
17	Locknut, Flange	15x111
18	Locknut, Flange	15x79
19	Plate, Steering Mount	1001121
20	Gear, Sector	1001176
21	Washer	17x168
22	Nut, Flange Centerlock	15x84
23	Link, Drag –Right	1001178
24	Guide, Belt	94384
25	Link, Drag –Left	1001177
26	Bearing, Sector Gear	94123
27	Bolt, Hex	1x84
28	Washer	17x104
29	Bolt, Carriage	2x96

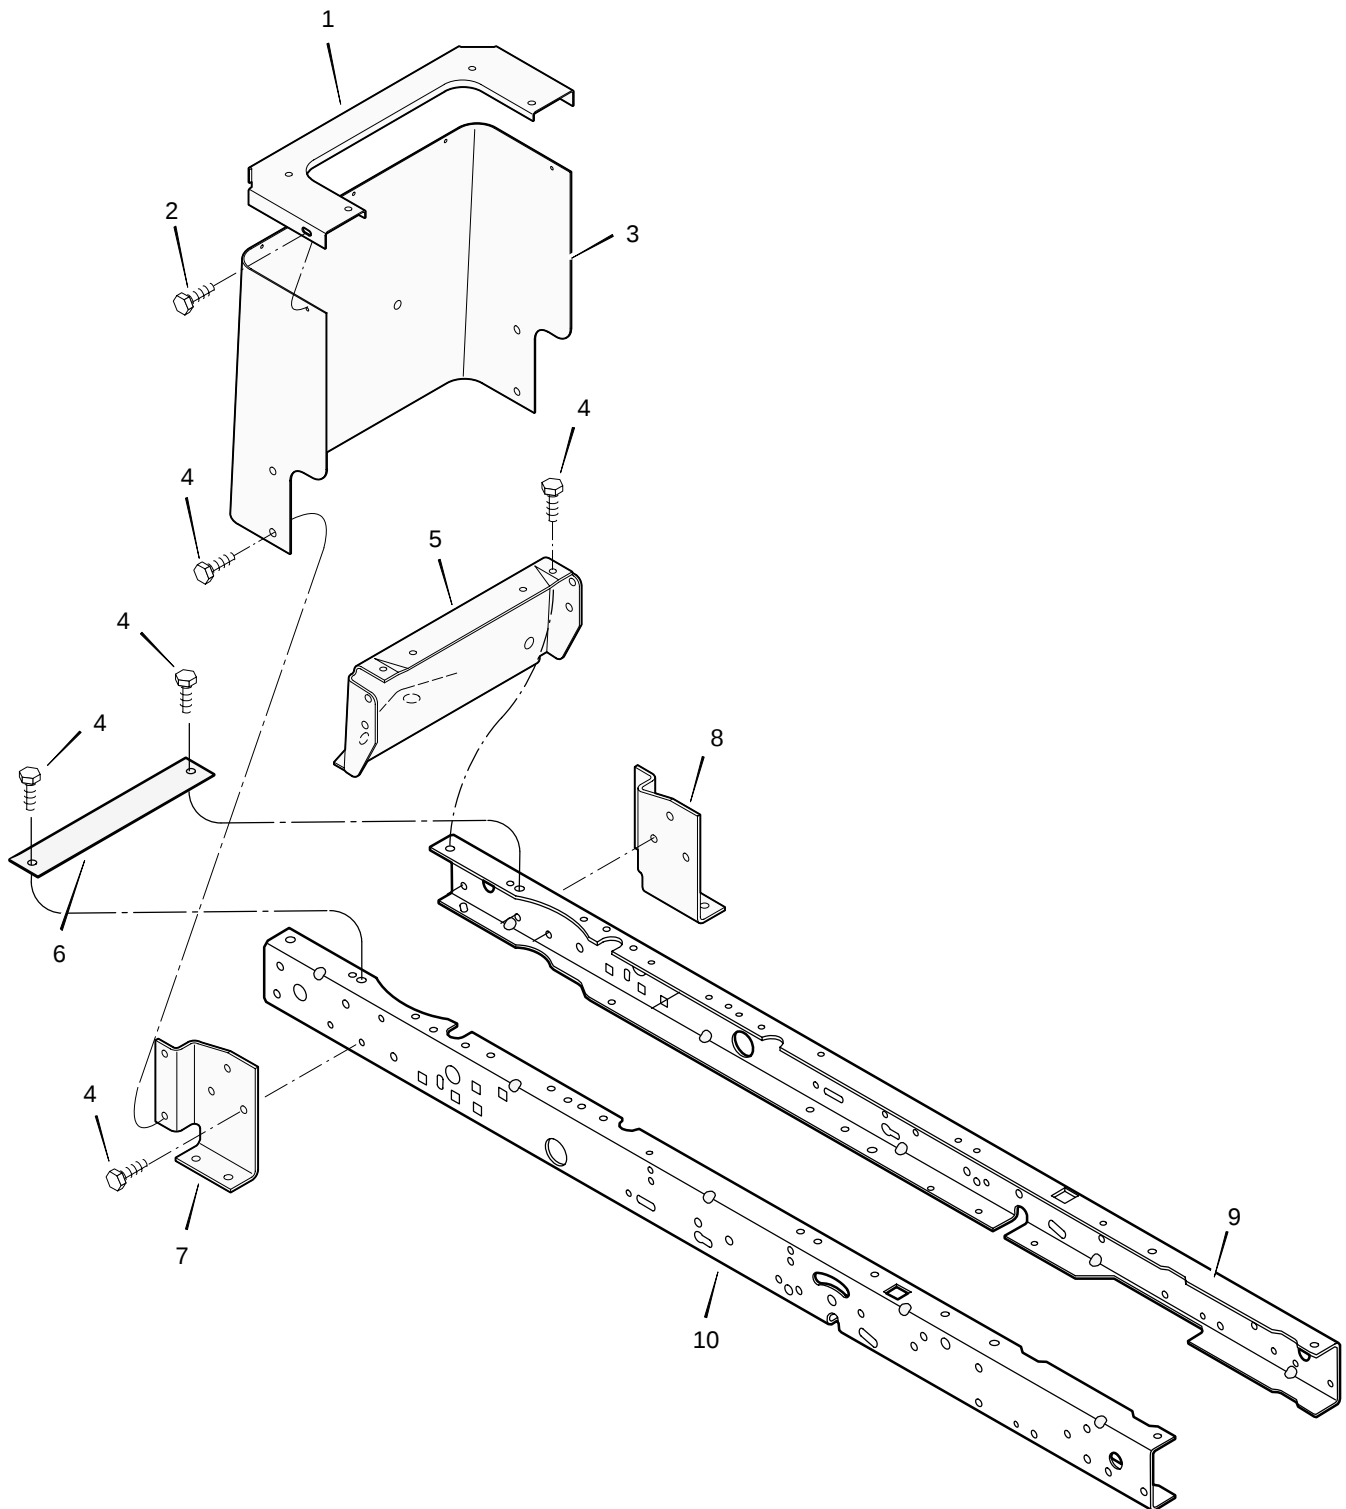 


Key No.	Description	Part No.
1	Plate, Top Rear	94186E700
2	Screw	26x270
3	Plate, Rear	690218E700
4	Screw	26x249
5	Plate, Hitch	1001002
6	Bracket, Support	94385E700
7	Bracket, Right Transaxle	94184E700
8	Bracket, Left Transaxle	94185E700
9	Frame, Left	1001123E700
10	Frame, Right	1001124E700

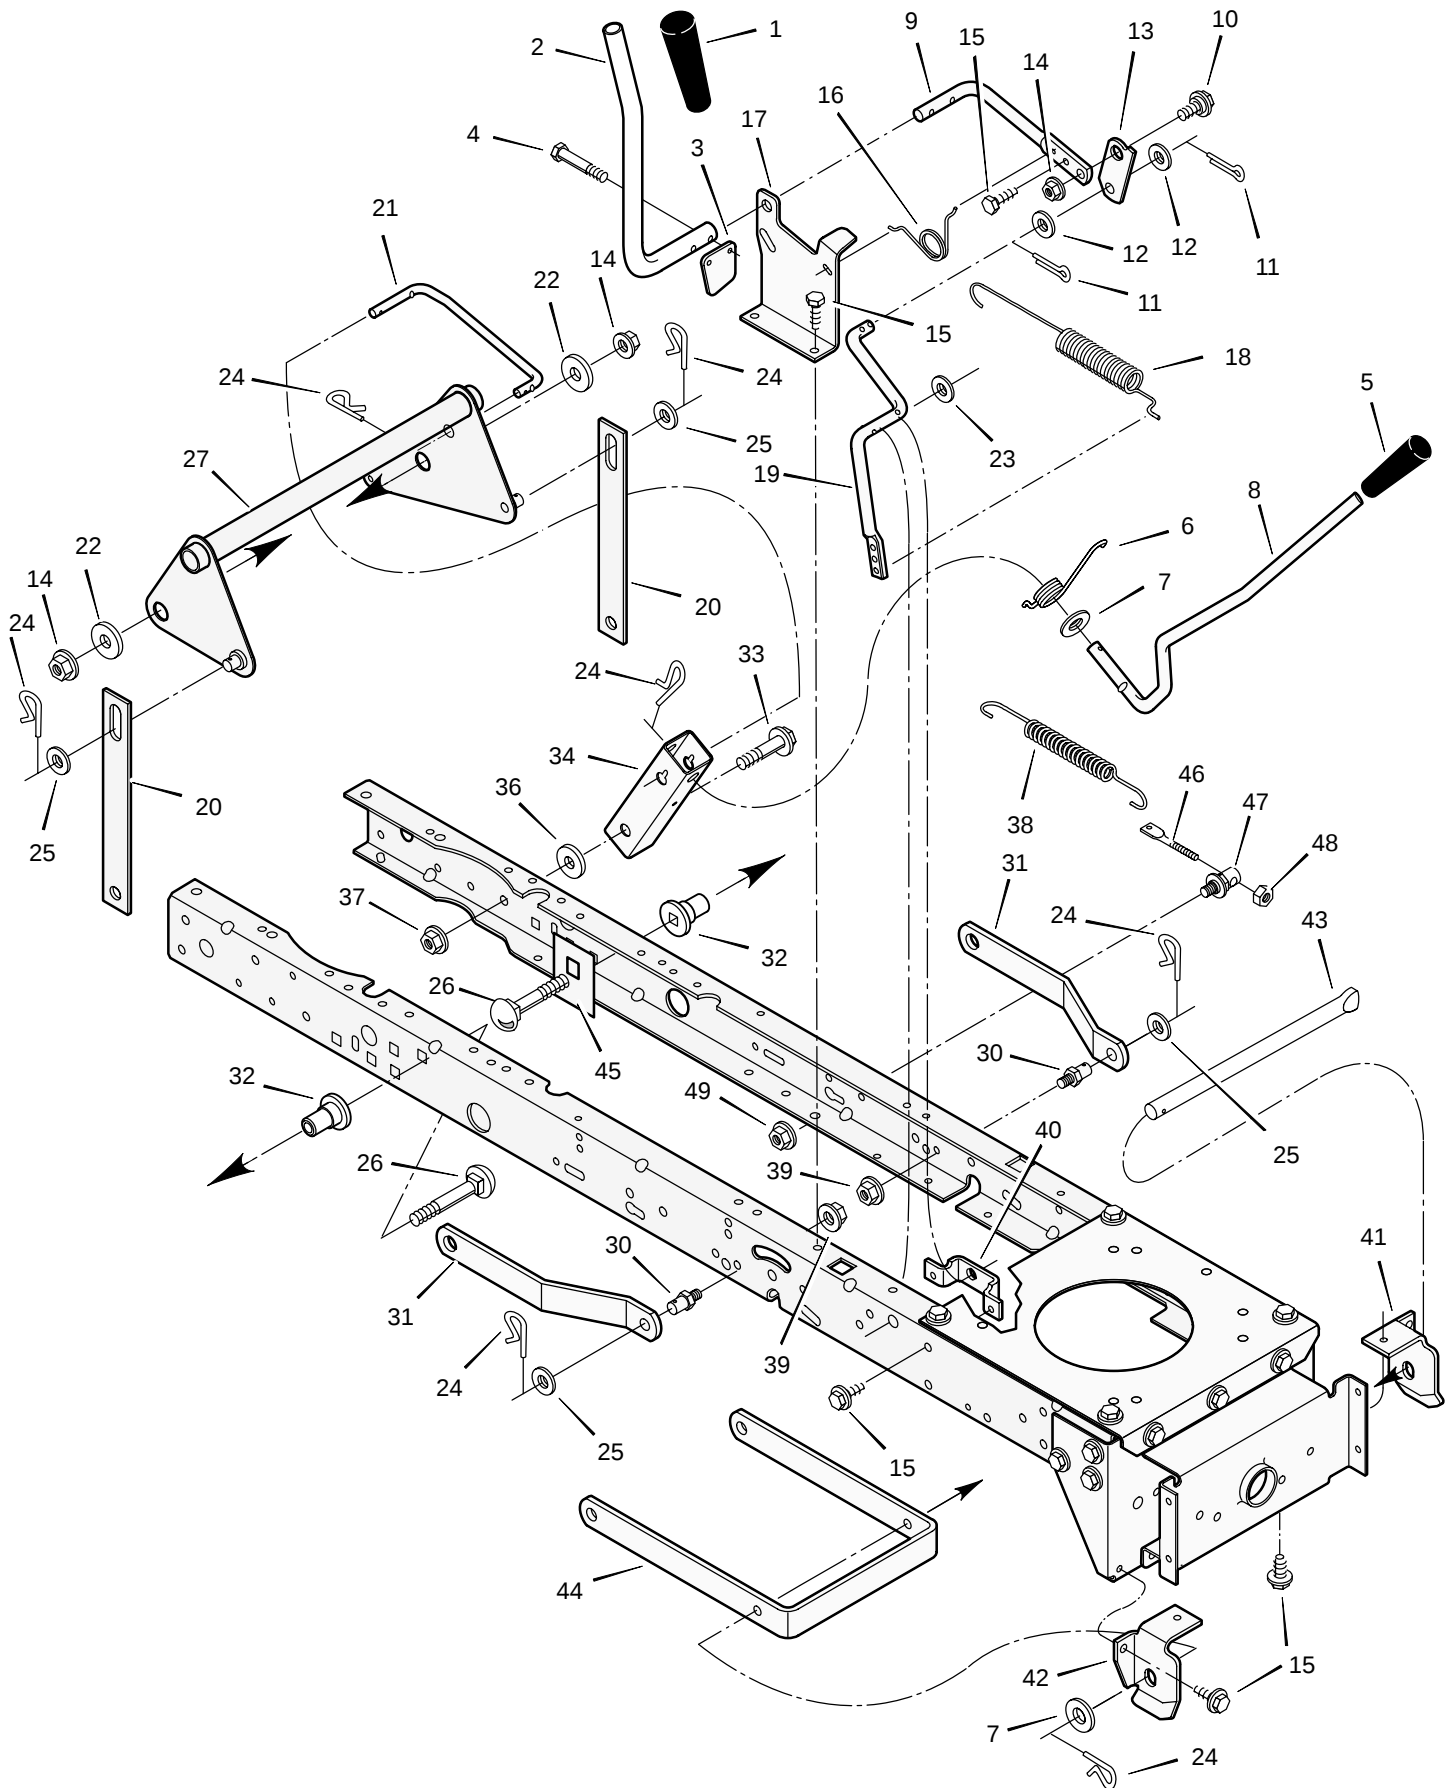 


MODEL 525607x692A**REPAIR PARTS
MOWER HOUSING SUSPENSION**

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Grip	94496	24	Pin, Hair	31x4
2	Handle, PTO	94826 Z	25	Washer	17x91 Z
3	Pad, Switch	94022 Z	26	Bolt, Carriage	2x85
4	Bolt	25x3	27	Lever Assembly, Lift	1001111E700
5	Grip	94497	30	Pin	94067
6	Spring	166x40	31	Bracket, Rear Suspension	94055E700
7	Washer	17x103	32	Spacer, Lifter	690151
8	Lever, Lift	690533	33	Bolt, Shoulder	9x53
9	Lever, PTO	94017 Z	34	Bracket, Pivot	94015E700
10	Bolt, Shoulder	9x39	36	Washer	17x191
11	Pin, Cotter	30x20	37	Nut, Flange	15x84
12	Washer	17x57	38	Spring	165x133
13	Link, PTO	94004 Z	39	Nut, Flange	15x68
14	Nut, Flange	15x84	40	Bracket, PTO Crank	94005E700
15	Screw	26x249	41	Hanger, Left Deck	94027E700
16	Spring	166x39	42	Hanger, Right Deck	94026E700
17	Bracket, PTO	94018E700	43	Rod, Hanger	94158Z
18	Spring	165x119	44	Bracket, Suspension	690539E700
19	Crank, PTO	690394E700	45	Plate, Stiffening	1001098E700
20	Link, Lift	690550E700	46	Stud, Spring Mount	94042 Z
21	Link, Lift Handle	690122E700	47	Stud, Swivel	690182
22	Washer	17x168	48	Nut	15x79
23	Washer	17x57	49	Nut	15x84

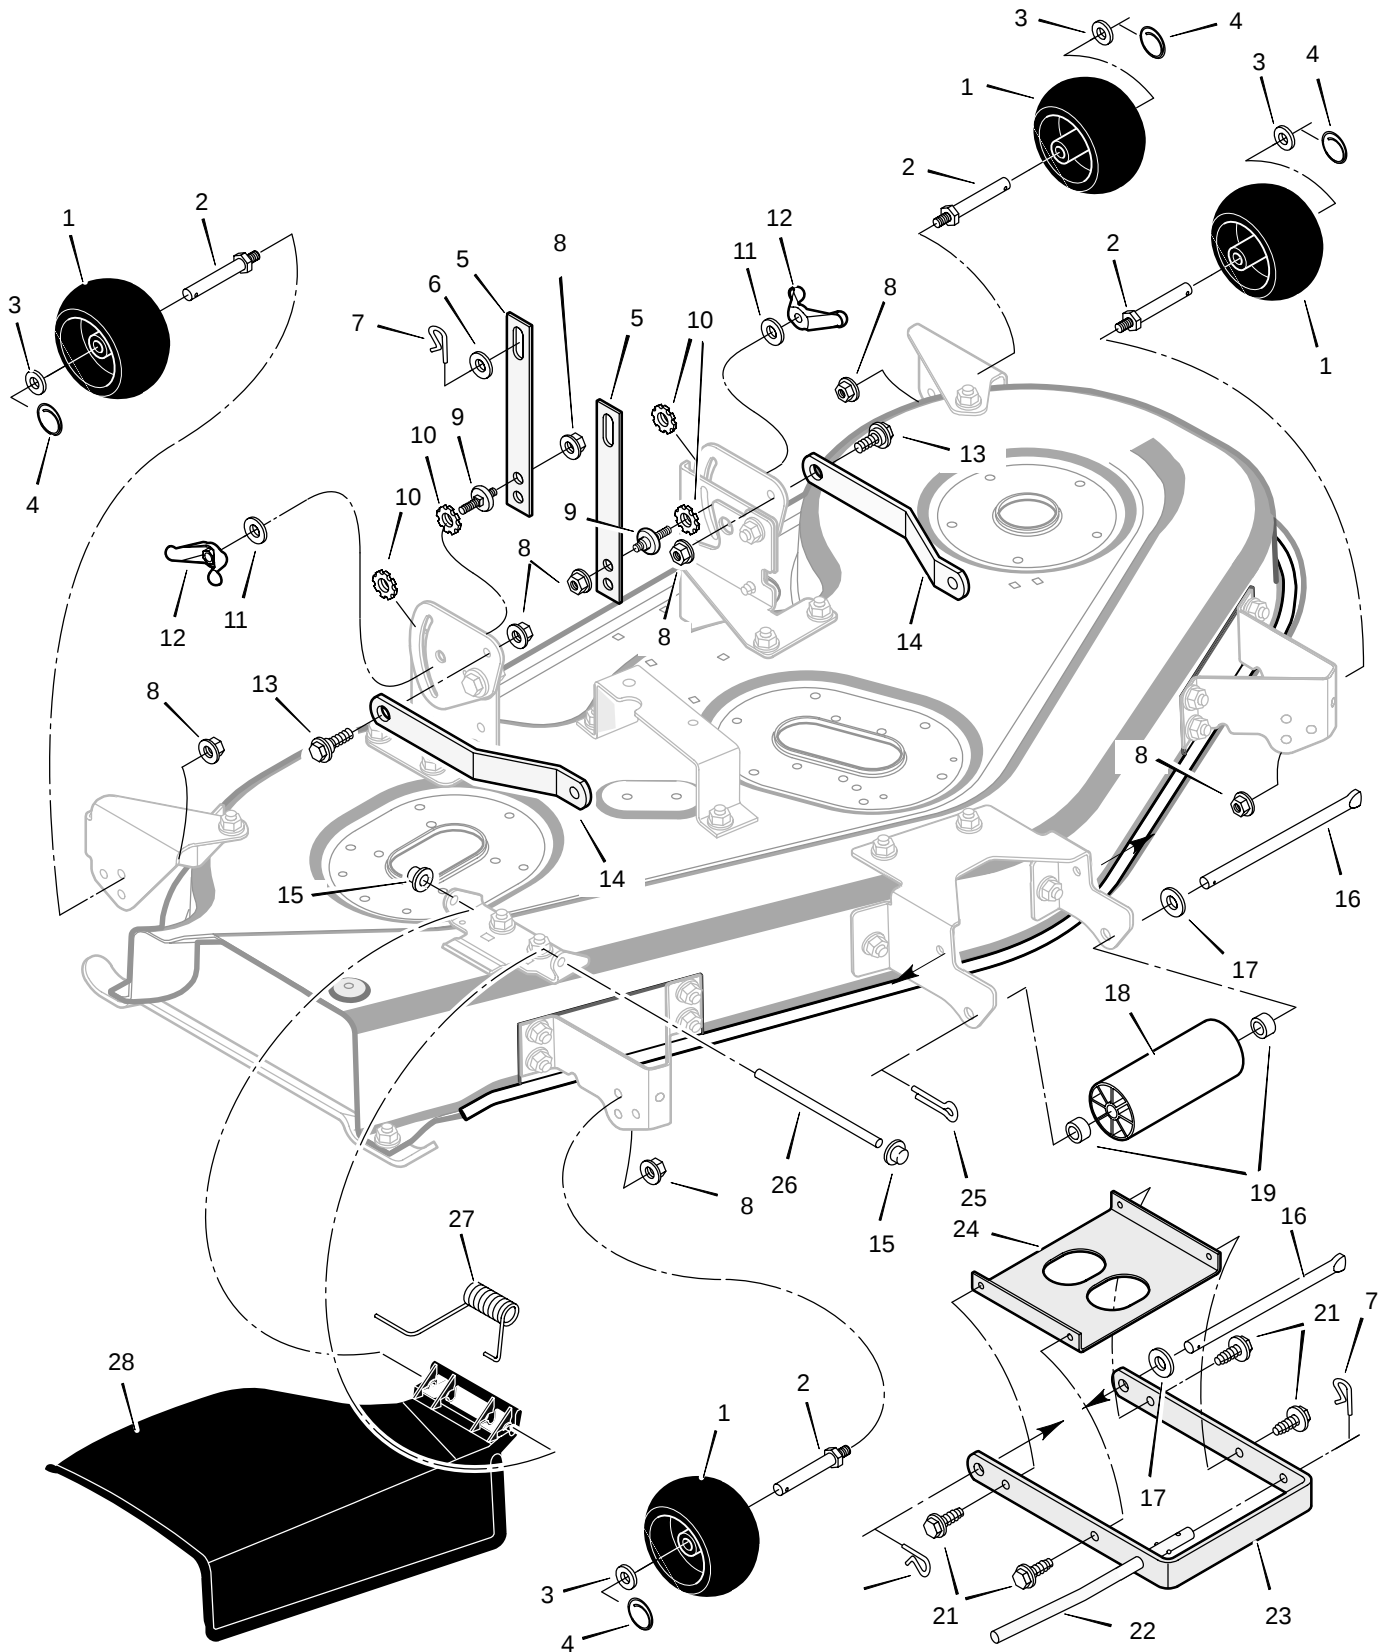 


Key No.	Description	Part No.
1	Wheel, Gage	92265
2	Bolt, Gage Wheel	94025
3	Washer	17x91
4	Pin, Hair	31x11
5	Link, Lift	690550E700
6	Washer	17x91 Z
7	Pin, Hair	31x4
8	Locknut	15x84
9	Pin, Hanger	95194
10	Washer	19x44
11	Washer	17x45
12	Wingnut	95004
13	Bolt, Shoulder	9x52
14	Bracket, Rear Suspension	94055E700
15	Cap, Push	28x23
16	Rod, Deck Suspension	94996
17	Washer	17x103
18	Roller	92137
19	Spacer	91925
21	Screw	26x249
22	Rod, Hanger	94158 Z
23	Bracket, Front Suspension	690539E700
24	Stiffener	94604E700
25	Pin, Cotter	30x49
26	Rod, Deflector	92159 Z
27	Spring, Torsion	166x34
28	Deflector, Chute	92100

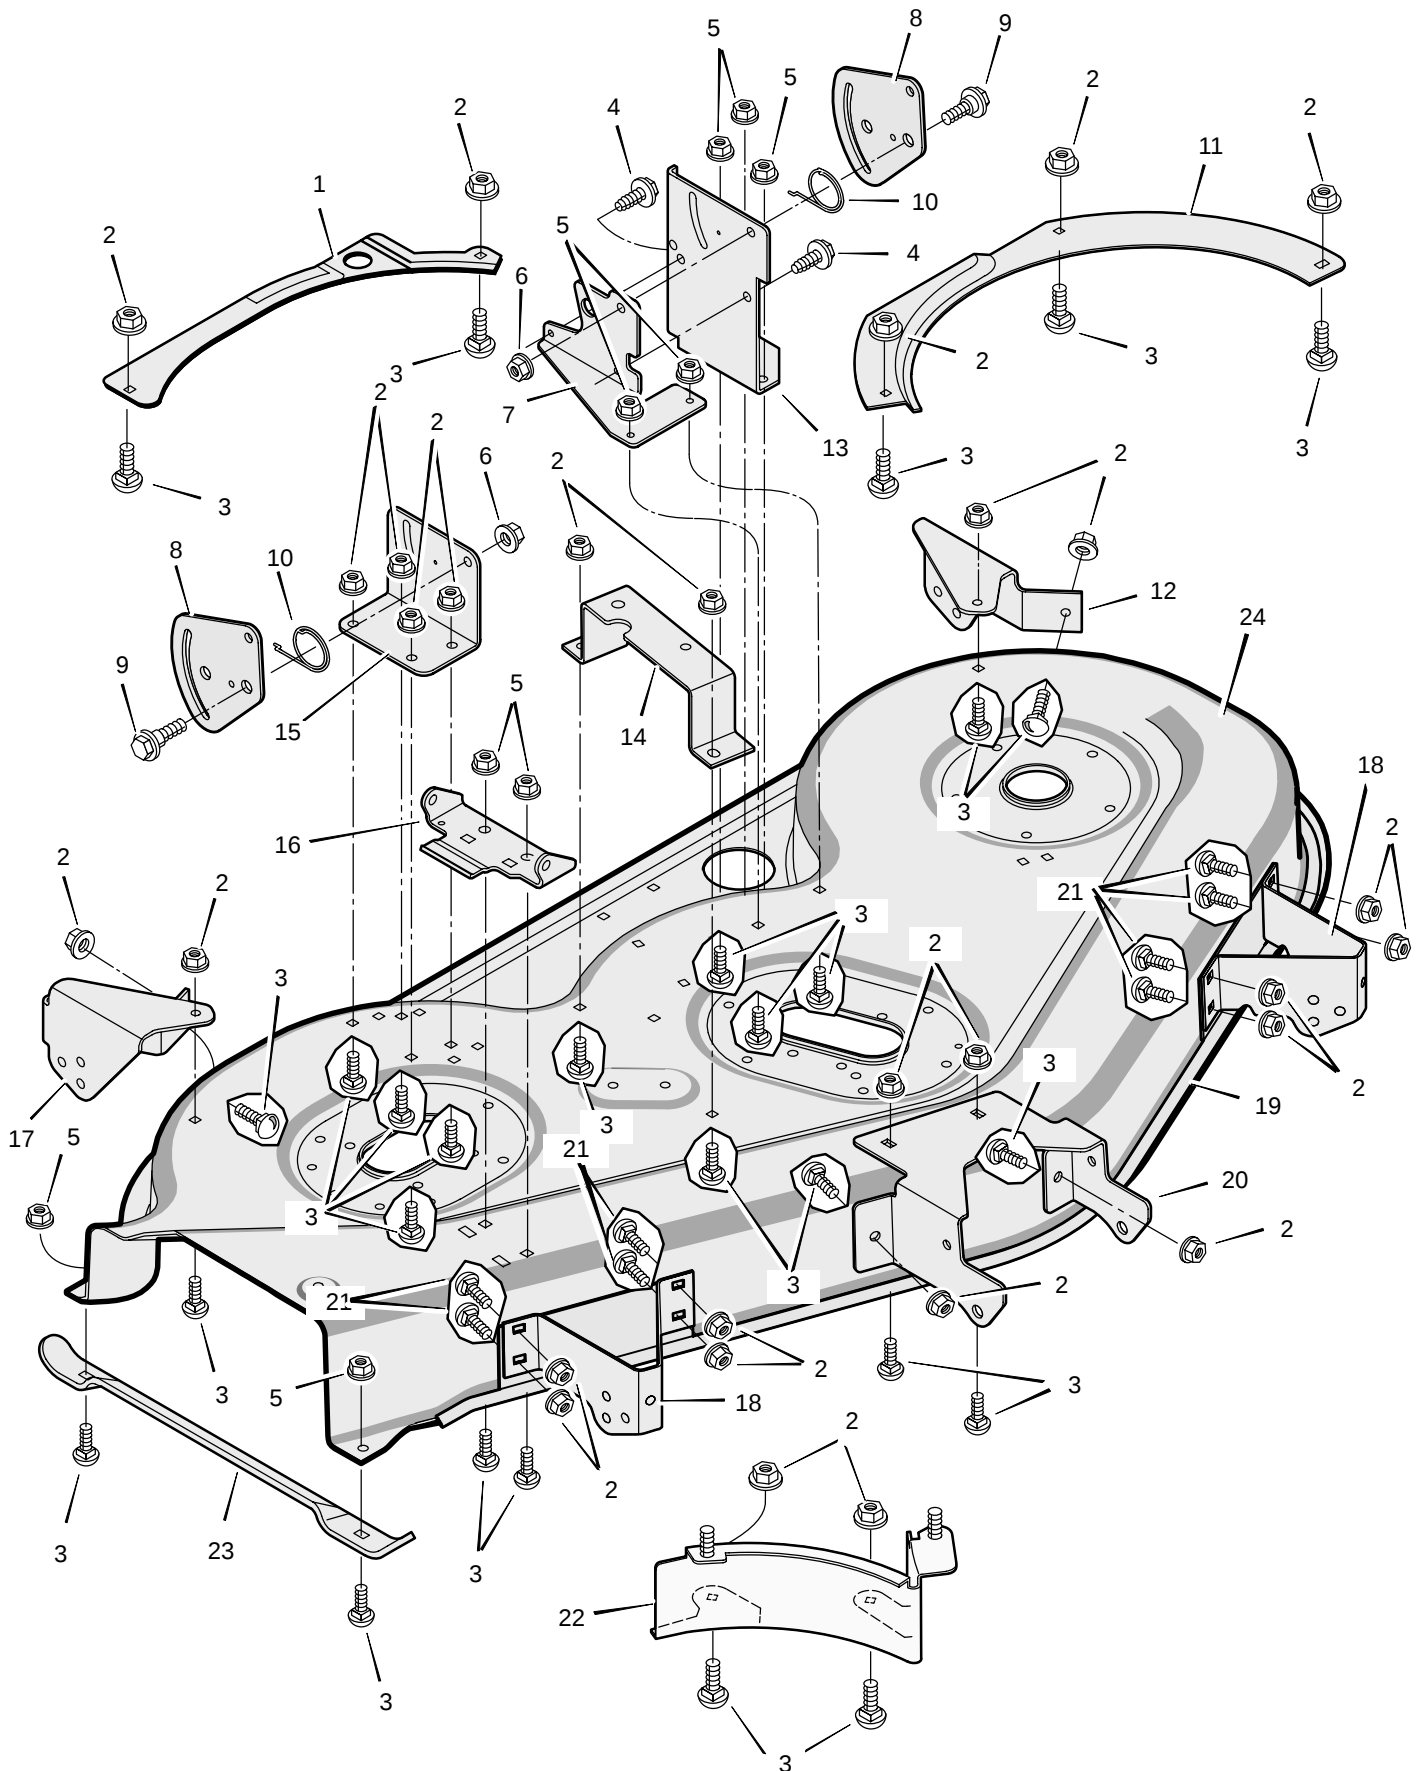 

MODEL 525607x692A

REPAIR PARTS MOWER HOUSING


Key No.	Description	Part No.
1	Baffle, Right Bottom	94117E700
2	Locknut, Flange	15x79
3	Bolt, Carriage	2x53
4	Screw	26x249
5	Locknut	15x88
6	Locknut	15x84
7	Brace, Hi Lifter	690078E700
8	Plate, Suspension	1001154E700
9	Bolt, Shoulder	9x51
10	Spring, Torsion	166x42
11	Baffle, Left Bottom	94118E700
12	Bracket, Rear Gage Wheel	94717E700
13	Bracket, Left Lifter	690164E700
14	Bracket, Bellcrank	690118E700
15	Bracket, Right Lifter	94694E700
16	Bracket, Hinge	92104E700
17	Bracket, Rear Gage Wheel	94716E700
18	Bracket, Front Gage Wheel	1001272E700
19	Assembly, Reinforcement	1001181E700
20	Bracket, Front Deck	94693E700
21	Bolt, Carriage	2x64
22	Assembly, Baffle	690135E700
23	Bracket, Chute Support	95176E700
—	Mower Housing, Complete	7601030

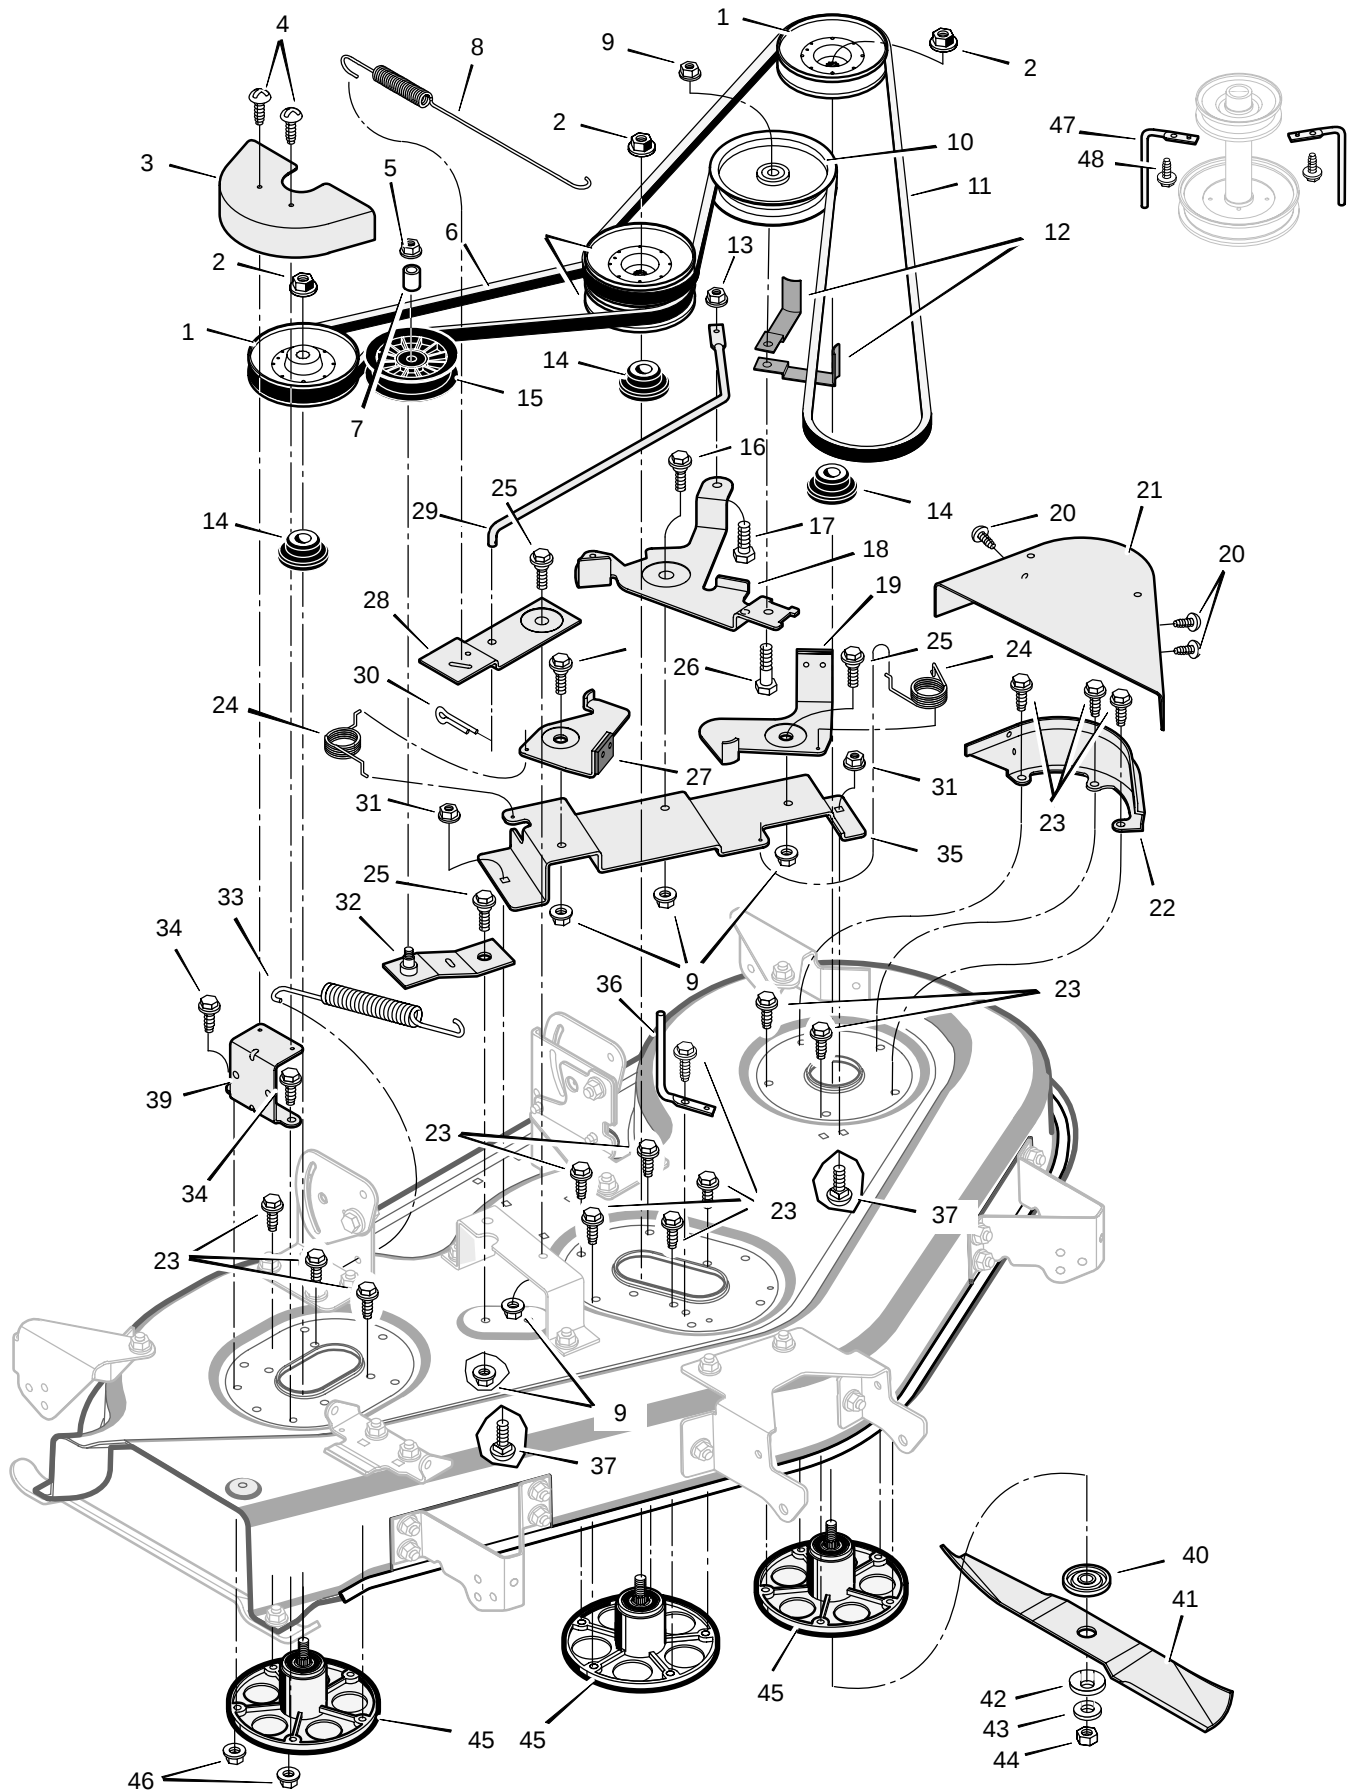 

MODEL 525607x692A

REPAIR PARTS BLADE DRIVE SYSTEM

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Pulley	690444	25	Bolt, Shoulder	9x39
2	Nut	15x121	26	Bolt	1x111
3	Cover, Right Pulley	94607E700	27	Assembly, Brake Arm	94698
4	Screw	26x250	28	Bellcrank	94808E700
5	Locknut, Flange	15x98	29	Link	690119 Z
6	Belt, Secondary	7769223	30	Pin, Cotter	30x20
7	Spacer	690369	31	Locknut, Flange	15x79
8	Spring, Extension	165x138	32	Assembly, Idler Arm	94701
9	Locknut	15x84	33	Spring, Extension	165x130
10	Pulley, Idler	95068	34	Bolt	1x84
11	Belt, Primary	7769212	35	Bracket, Brake Mounting	690414E700
12	Spring, Belt Guide	94809	36	Rod, Belt Guide	92424
13	Locknut	15x89	37	Bolt, Carriage	2x53
14	Spacer, Pulley	1001197	38	Screw	25x15
15	Pulley, Backside Idler	690549	39	Bracket, Cover	92140E700
16	Bolt, Shoulder	9x42	40	Adapter, Blade	7769213
17	Bolt, Shoulder	9x54	41	Blade	7769205
18	Bracket, Idler	690068E700	42	Washer	17x166
19	Assembly, Brake Arm	95074	43	Washer	17x165
20	Screw	26x277	44	Nut	15x100
21	Cover, Left Pulley	94645E700	45	Assembly, Jackshaft Housing	1001200
22	Bracket, Pulley Cover	690221E700	46	Nut	15x88
23	Bolt	25x7	47	Guide, Belt	91797 S
24	Spring, Torsion	166x41	48	Screw	25x15

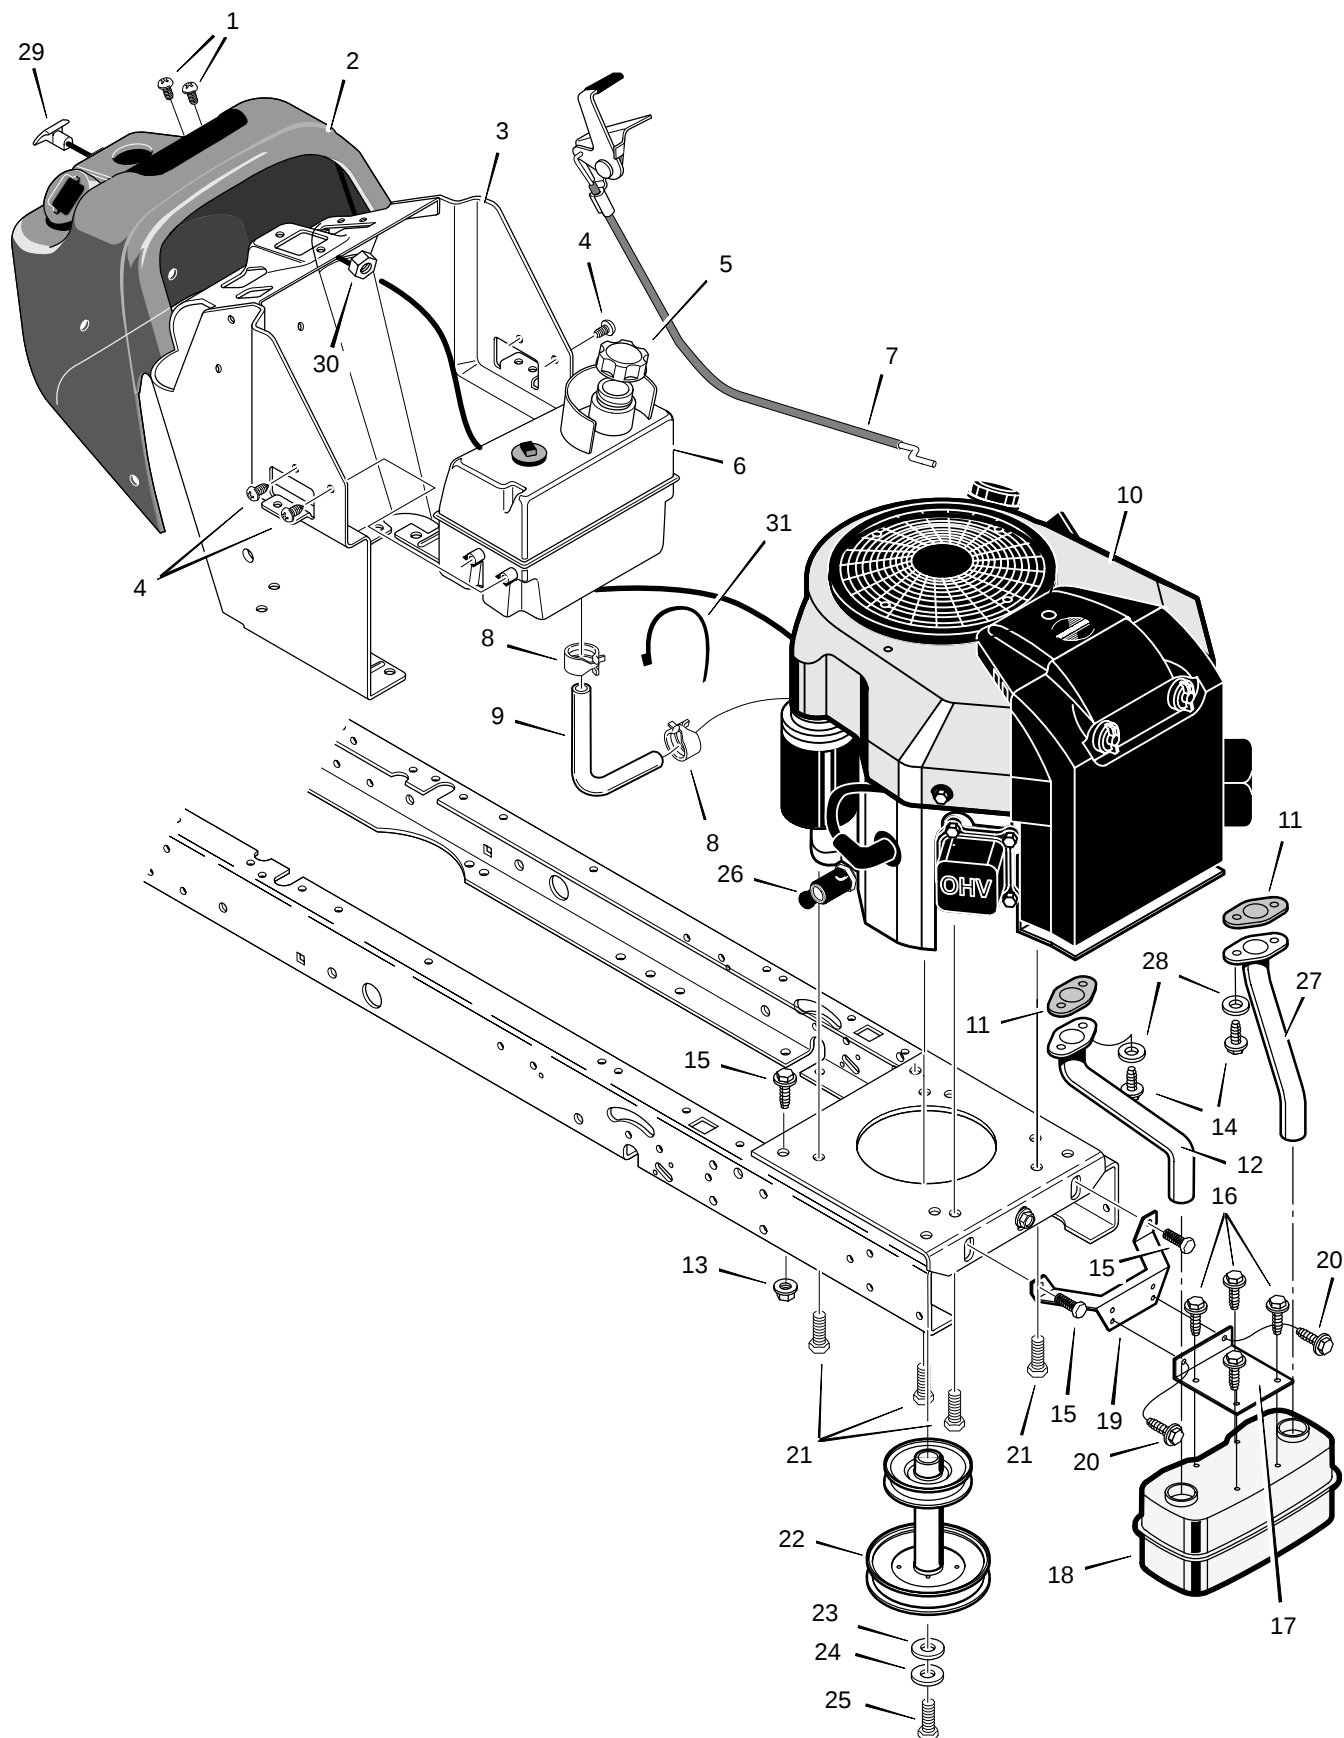 


MODEL 525607x692A

REPAIR PARTS ENGINE MOUNT

Key No.	Description	Part No.
1	Screw	26x270
2	Dash	1001114
3	Console	95173
4	Screw	26x253
5	Cap, Fuel	92317
6	Tank, Fuel	94086
7	Control, Throttle	1001225
8	Clamp, Hose	95197
9	Line, Fuel	50
10	Engine *	_____
11	Gasket, Exhaust	711851
12	Tube, Right Exhaust	1001038
13	Nut	15x88
14	Bolt	1x91
15	Screw	26x249
16	Screw	26x263
17	Bracket, Muffler	690538
18	Muffler	93259
19	Bracket, Muffler Mount	690537
20	Screw	26x214
21	Bolt, Engine Mount	25x7
22	Pulley, Stack	690507
23	Washer	17x170
24	Washer, Star	19x35
25	Bolt, Hex	1x140
26	Drain, Oil	325547
27	Tube, Left Exhaust	1001039
28	Washer	18x15
29	Choke	690401
30	Nut	15x68
31	Strap, Tie	32618

 * For information on Replacement Parts see the Central Parts Distributor in your area.

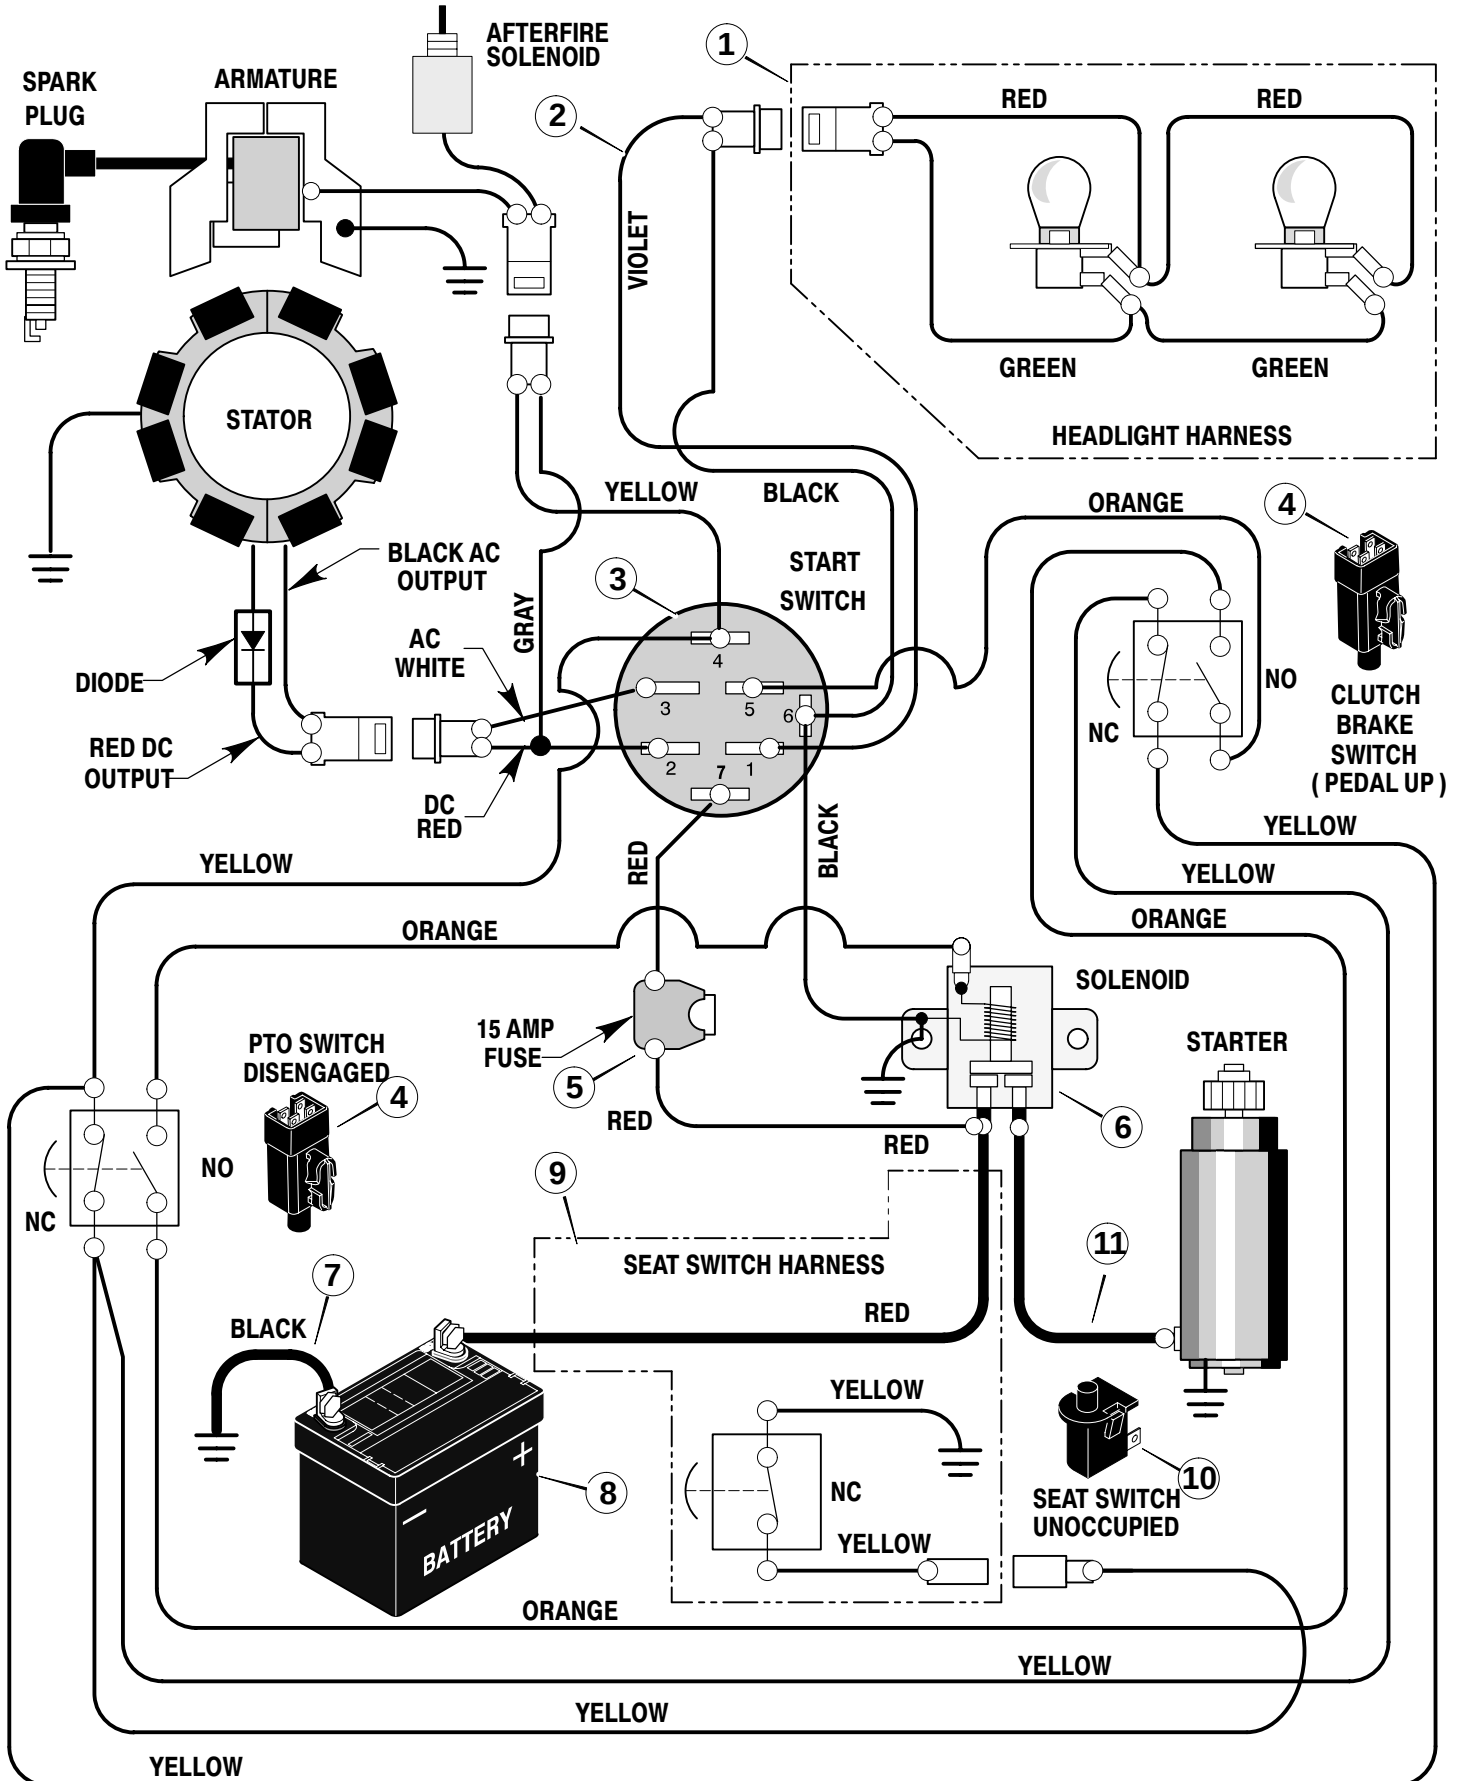

MODEL 525607x692A

REPAIR PARTS ELECTRICAL SYSTEM

Key No.	Description	Part No.
1	Harness, Light Wire	250x106
	Socket, Light	92372
	Bulb, Light	90084
2	Harness, Chassis Wire	250x105
3	Switch, Ignition	92556
	Key, Ignition	7769214
	Nut, Hex	91489
	Cap, Ignition	91488
4	Switch, Limit	94136
5	Fuse	54212
	Holder, Fuse	407078
6	Solenoid	7766224
	Screw, Mounting	26x229
	Locknut	15x116
7	Cable, Battery Ground	24x32
	Screw, Ground Cable	26x213
8	Battery	21075
	Bolt, Carriage	2x82
	Wingnut	14x79
9	Harness, Seat Switch Wire	250x104
10	Switch, Seat Sensor	94159
11	Cable	24x31