


Models 761, 765, 771 & 775

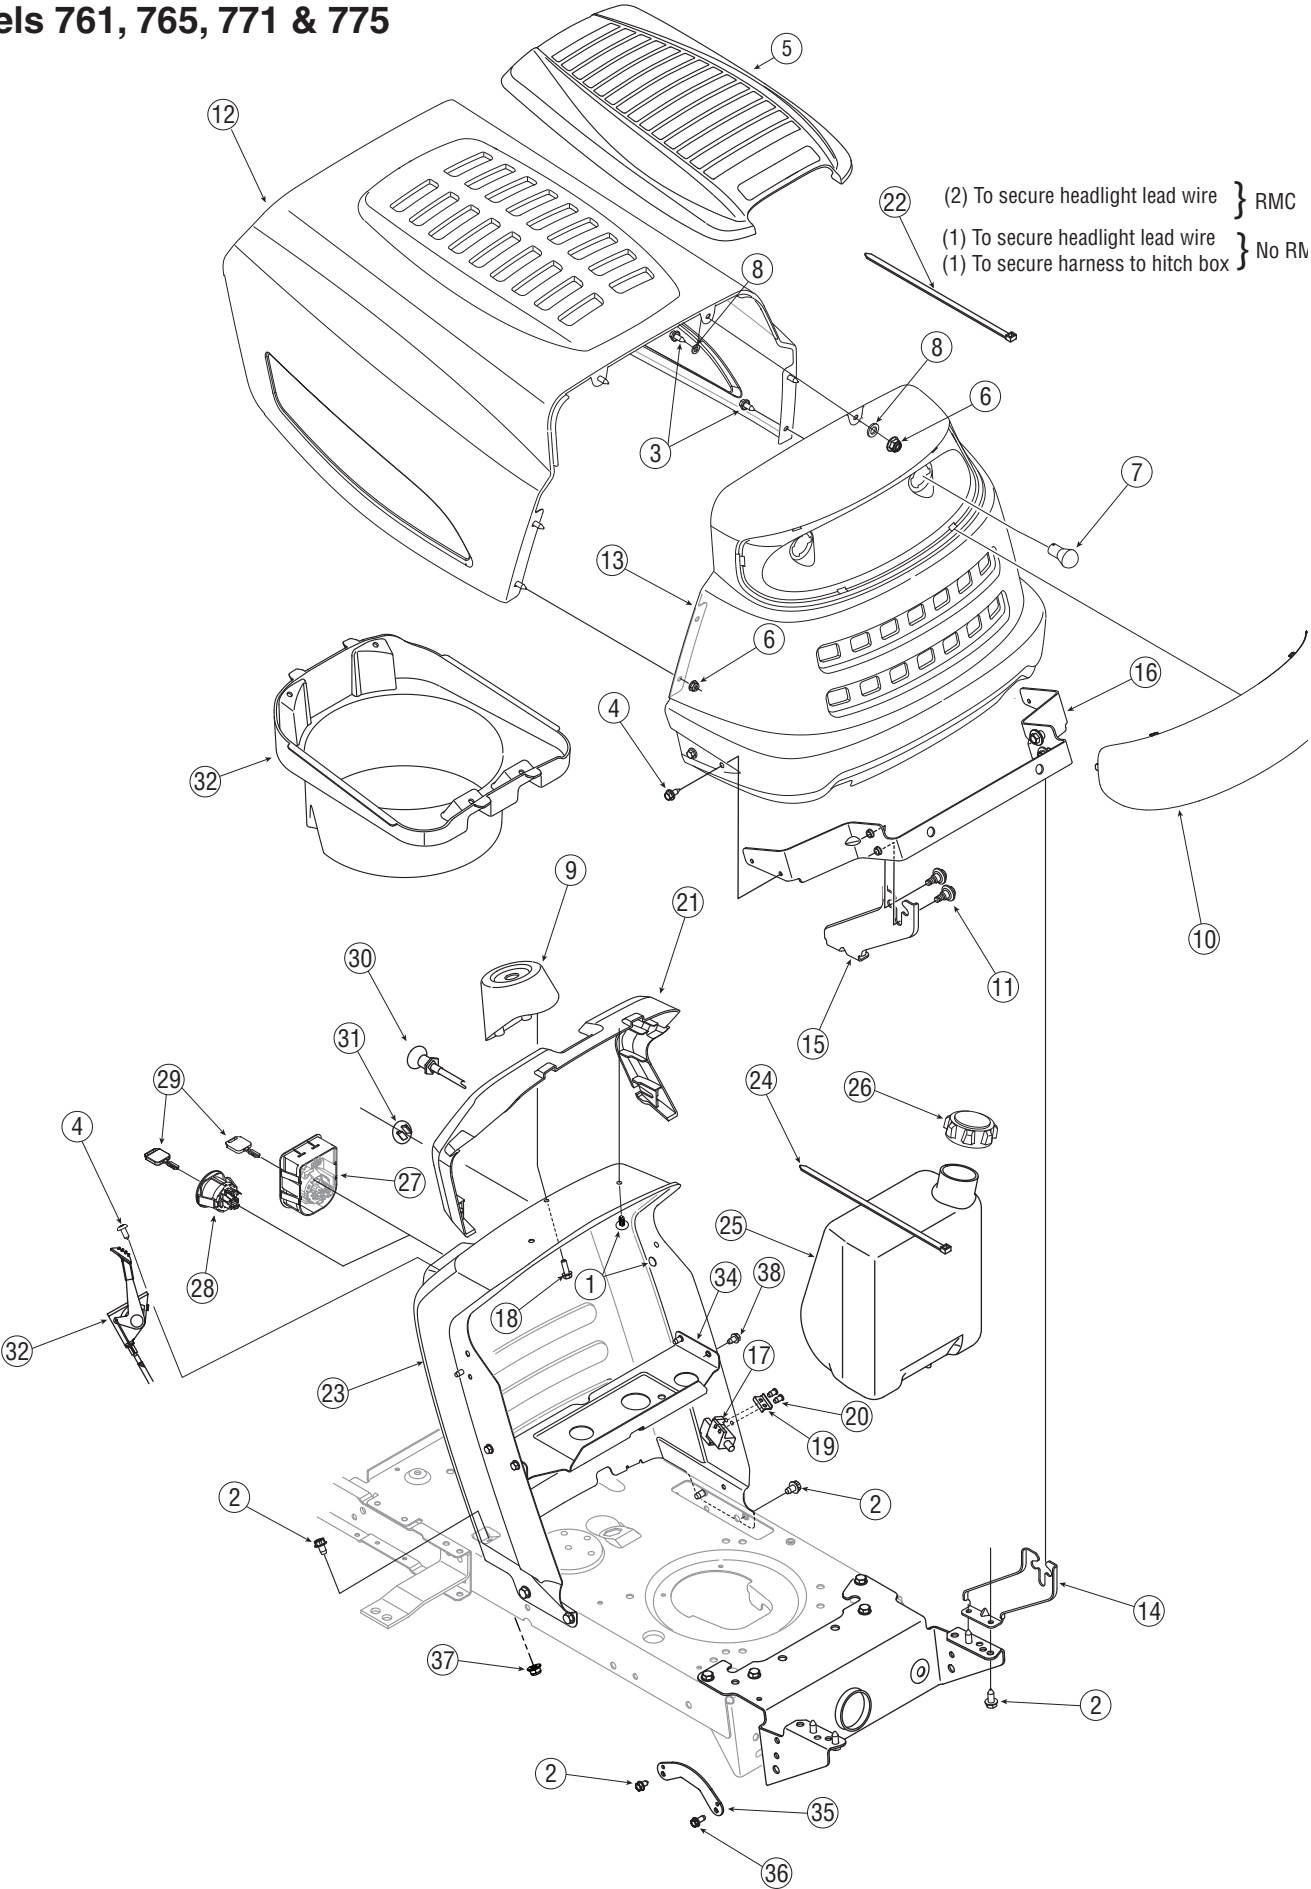

Ref. No.	Part No.	Description
1	726-04072	Ratchet Clip .250 Dia. x .500 Lg.
2	710-0604A	Screw, 5/16-18, 0.625
3	710-0751	Screw, 1/4-20, .620, Gr5
4	710-04483	Screw, 1/4-20, .500
5	731-05522††	5-Style Hood Cover
6	712-04064	Nut, Flange Lock, 1/4-20, Gr5
7	725-0963	Headlamp, 12V
8	736-0176	Washer, Flat, .265 x .938 x .120
9	731-04945	Support, Steering
10	731-04949	Lens
11	738-04091	Screw, Shoulder, .43 x.29, 5/16-18
12	783-04551	Hood
13	783-04552	Grille
14	783-04577A	Pivot Bracket, LH
15	783-04578A	Pivot Bracket, RH
16	783-04621	Pivot Bracket, Grille
17	725-04039†	Switch
18	710-0895	Screw, 1/4-15, 0.750
19	17962†	Switch Plate
20	728-04021†	Pop Rivet
21	731-04947A	Collar, Dash
22	725-0157	Cable Tie
23	783-04892	Dash Assembly (RMC*)
	783-04873	Dash Assembly (No RMC)

Ref. No.	Part No.	Description
24	726-0230	Cable Tie, 34.75
25	751-0555B	Fuel Tank, 1.5 gal.
26	751-0603	Fuel Tank Cap
27	725-04227B	Module, Ignition Switch (RMC*)
28	725-1741	Ignition, Switch (No RMC)
29	725-1744	Key
30	746-1085A	Choke Control, 37.5"
31	731-05265	Plug
32	731-05147A	Plenum (Single Cylinder Engine)
	731-05566	Plenum (Kohler Single Cylinder)
	731-05165	Plenum (Twin Cylinder Engine)
33	746-04364	Throttle/Choke Control, 25"
		(Single Cylinder Engine)
	746-1086	Throttle Control, 39"
		(Twin Cylinder Engine)
34	783-04584	Gas Tank Support Bracket
35	783-05027	Front Pivot Support Bracket
36	710-1260A	Screw, 5/16-18 x .750
37	712-04063	Flange Lock Nut 5/16-18
38	710-0599	Screw, 1/4-20, 0.500
—	725-04432	Wire Harness (RMC)
—	725-04433	Wire Harness (No RMC)
—	725-04481	Wire Harness (No RMC) <i>Kohler Only</i>
—	777X41984	Headlight Lens Reflector

* Reverse Caution Mode
† Models equipped with Reverse Caution Mode
†† 765 & 775 Models Only

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.




Ref. No.	Part No.	Description
1	783-04979	Grille
2	710-0599	Screw, 1/4-20, 0.500
3	710-0642	Screw, 1/4-20, 0.750
4	726-04072	Ratchet Clip .250 dia. x .500 lg.
5	712-04063	Nut, Flange Lock, 5/16-18, GrF
6	712-04064	Nut, Flange Lock, 1/4-20, GrF
7	726-04012	Nut, Push-on, .25 Dia
8	726-0233	Push Nut, .25ID x .50OD
9	731-05012A	Collar, Dash, 0-Style
10	731-1503A	Lens
11	738-0952A	Screw, Shldr, .375 x .125, 1/4-20
12	749-04220	Support Rod, Grill
13	783-04608	Hood
14	783-04892	Dash Assembly (RMC*)
	783-04873	Dash Assembly (No RMC)
15	710-0604A	Screw, 5/16-18, 0.625
16	710-0895	Screw, 1/4-15, 0.750
17	725-04039†	Switch
18	17962†	Switch Plate
19	731-04945	Support, Steering
20	725-0963	Headlamp, 12V
21	746-04364	Throttle/Choke Cable, 25" (Sgl. Cyl.)

Ref. No.	Part No.	Description
	746-1086	Throttle Control, 39" (Twin Cylinder)
22	710-04483	Screw, 1/4-14, .500
23	726-0201	Speed Nut, .3125
24	710-3008	Screw, 5/16-18, .750
25	726-0230	Cable Tie, 34.75
26	751-0555B	Fuel Tank, 1.5 gal.
27	751-0603	Fuel Tank Cap
28	725-04227B	Module, Ignition Switch (RMC*)
29	725-1741	Module, Ignition Switch (No RMC*)
30	725-1744	Key
31	746-1085A	Choke Control, 37.5"
32	731-05265	Choke Plug
33	783-04584	Gas Tank Support Bracket
34	725-0157	Cable Tie
35	728-0162	Rivet, Flat Head 1/4"
36	728-04021†	Pop Rivet
37	736-3078	Flat Washer, .344 x 1.00 x .063
—	725-04432	Wire Harness (RMC)
—	725-04433	Wire Harness (No RMC)
—	725-04481	Wire Harness (No RMC) <i>Kohler Only</i>
—	777X40065	Headlight Lens Reflector

* Reverse Caution Mode
† Models equipped with Reverse Caution Mode

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model 76T & 77T

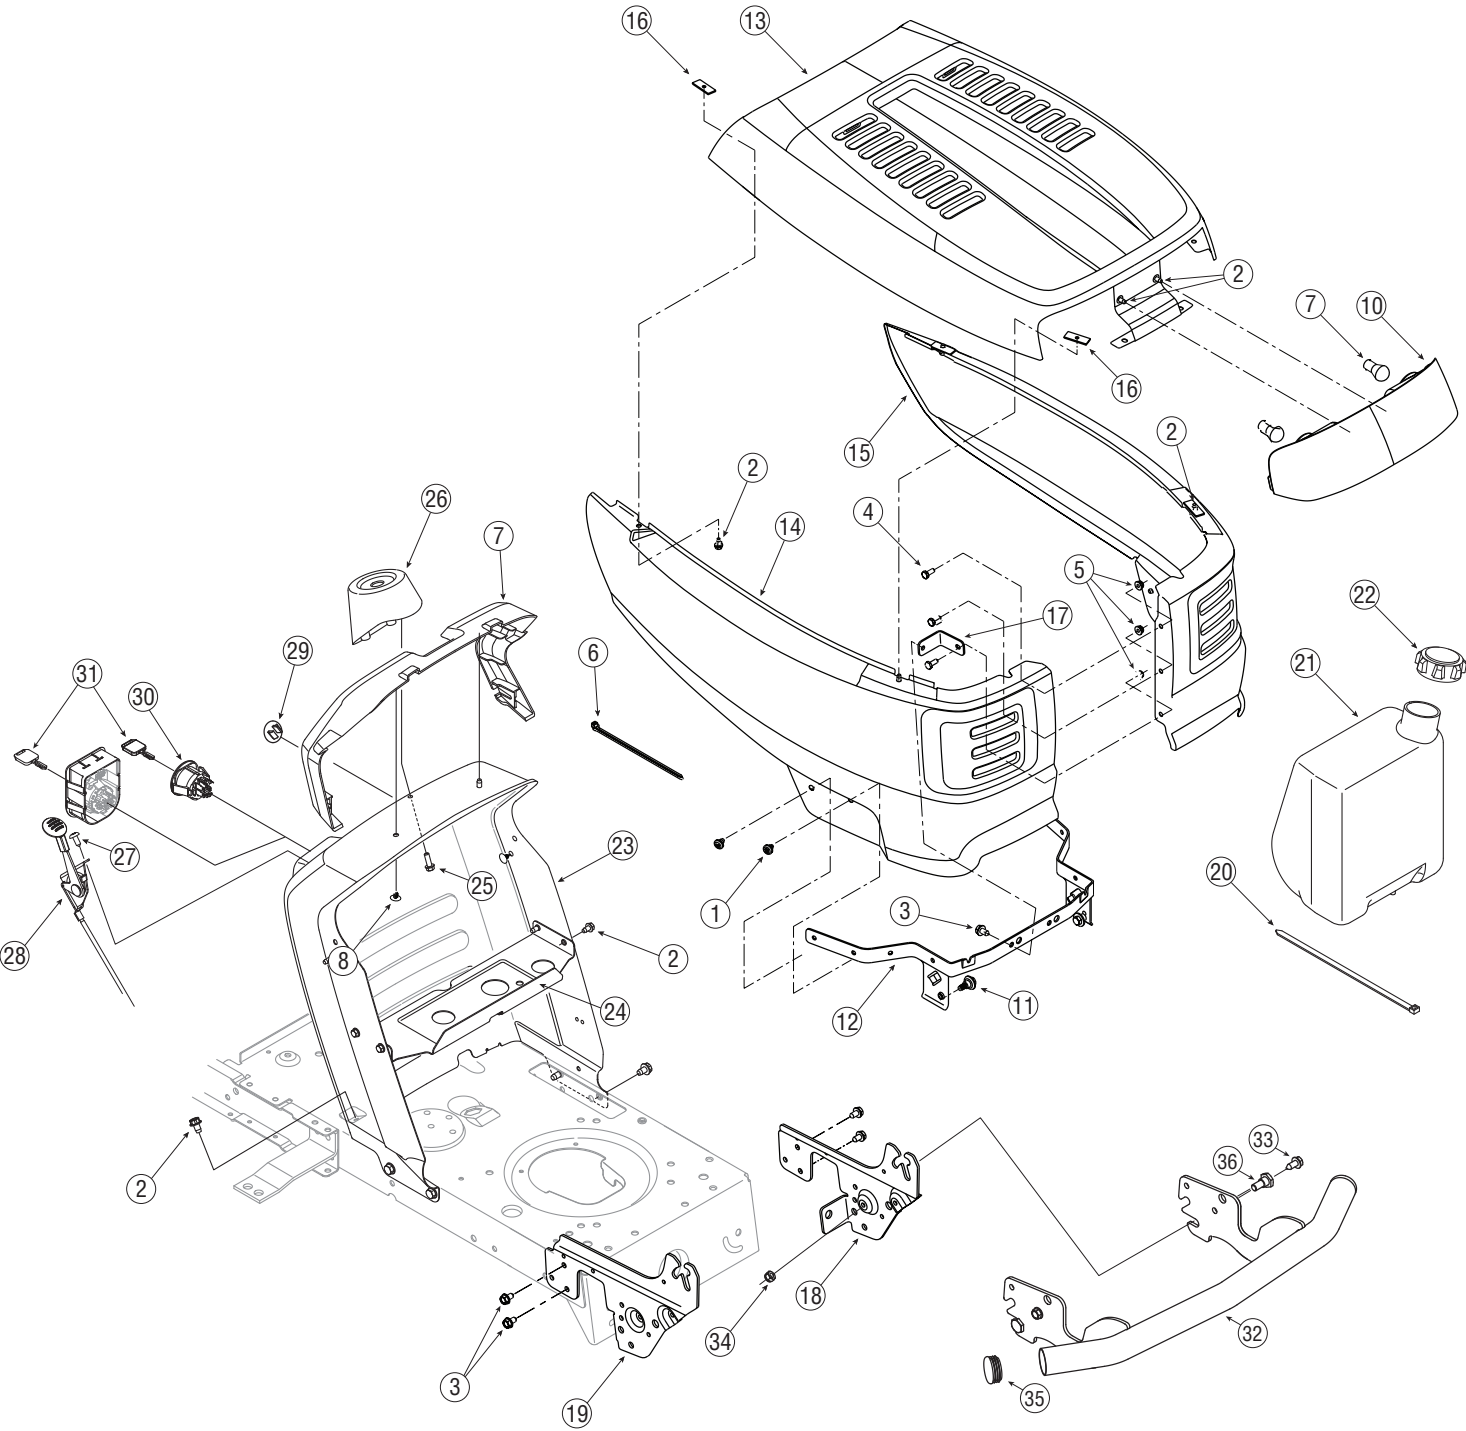


Ref. No.	Part No.	Description
1	710-04593	Screw, 5/16-18, .375
2	710-0599	Screw, 1/4-20, 0.500
3	710-0604A	Screw, 5/16-18, 0.625
4	710-0751	Screw, 1/4-20, 0.620
5	712-04064	Flange Lock Nut, 1/4-20
6	725-0157	Cable Tie, 3/16 x .05 x 7.4
7	725-0963	Headlamp, 12V
8	726-04072	Ratchet Clip
9	731-05078B	Collar, Dash, 3-Style
10	731-05357	Troy-Bilt Lens
11	738-04091	Screw, Shldr, .43 x .29, 5/16-18
12	783-04606B	Pivot Bracket
13	783-04827	Troy-Bilt Hood
14	783-04828	Troy-Bilt Side Panel, RH
15	783-04967	Troy-Bilt Side Panel, LH
16	783-05223	T-Style Hood Fastener
17	783-05315	Front Hood Bracket
18	783-05327	Hood Pivot Bracket, LH
19	783-05328	Hood Pivot Bracket, RH
20	726-0230	Cable Tie, 3/4.75
21	751-0555B	Fuel Tank, 1.5 gal.

Ref. No.	Part No.	Description
22	751-0603	Fuel Tank Cap
23	783-04873	Dash Assembly (No RMC*)
	783-04892	Dash Assembly (RMC*)
24	783-04584	Gas Tank Support Bracket
25	710-0895	Screw, 1/4-15, .750
26	731-04945	Support, Steering
27	710-04483	Screw, 1/4-14, .500
28	746-04258	Throttle/Choke Control, 25.0
29	731-05265	Choke Plug
30	725-1741	Module, Ignition Switch (No RMC)
	725-04227B	Module, Ignition Switch (RMC)
31	725-1744	Key
32	683-04219A	Bumper Assembly
33	710-0726	Screw, 5/16-12, 0.750
34	712-04065	Flange Lock Nut, 3/8-16
35	731-05674	Bumper Cap
36	738-0143	Shoulder Bolt, 3/8-16
—	725-04433	Wire Harness (No RMC*)
—	725-04432	Wire Harness (RMC*)
—	777X42188	Headlight Lens Reflector RH
—	777X42187	Headlight Lens Reflector LH

* Reverse Caution Mode

** Models So Equipped


† Models equipped with Reverse Caution Mode

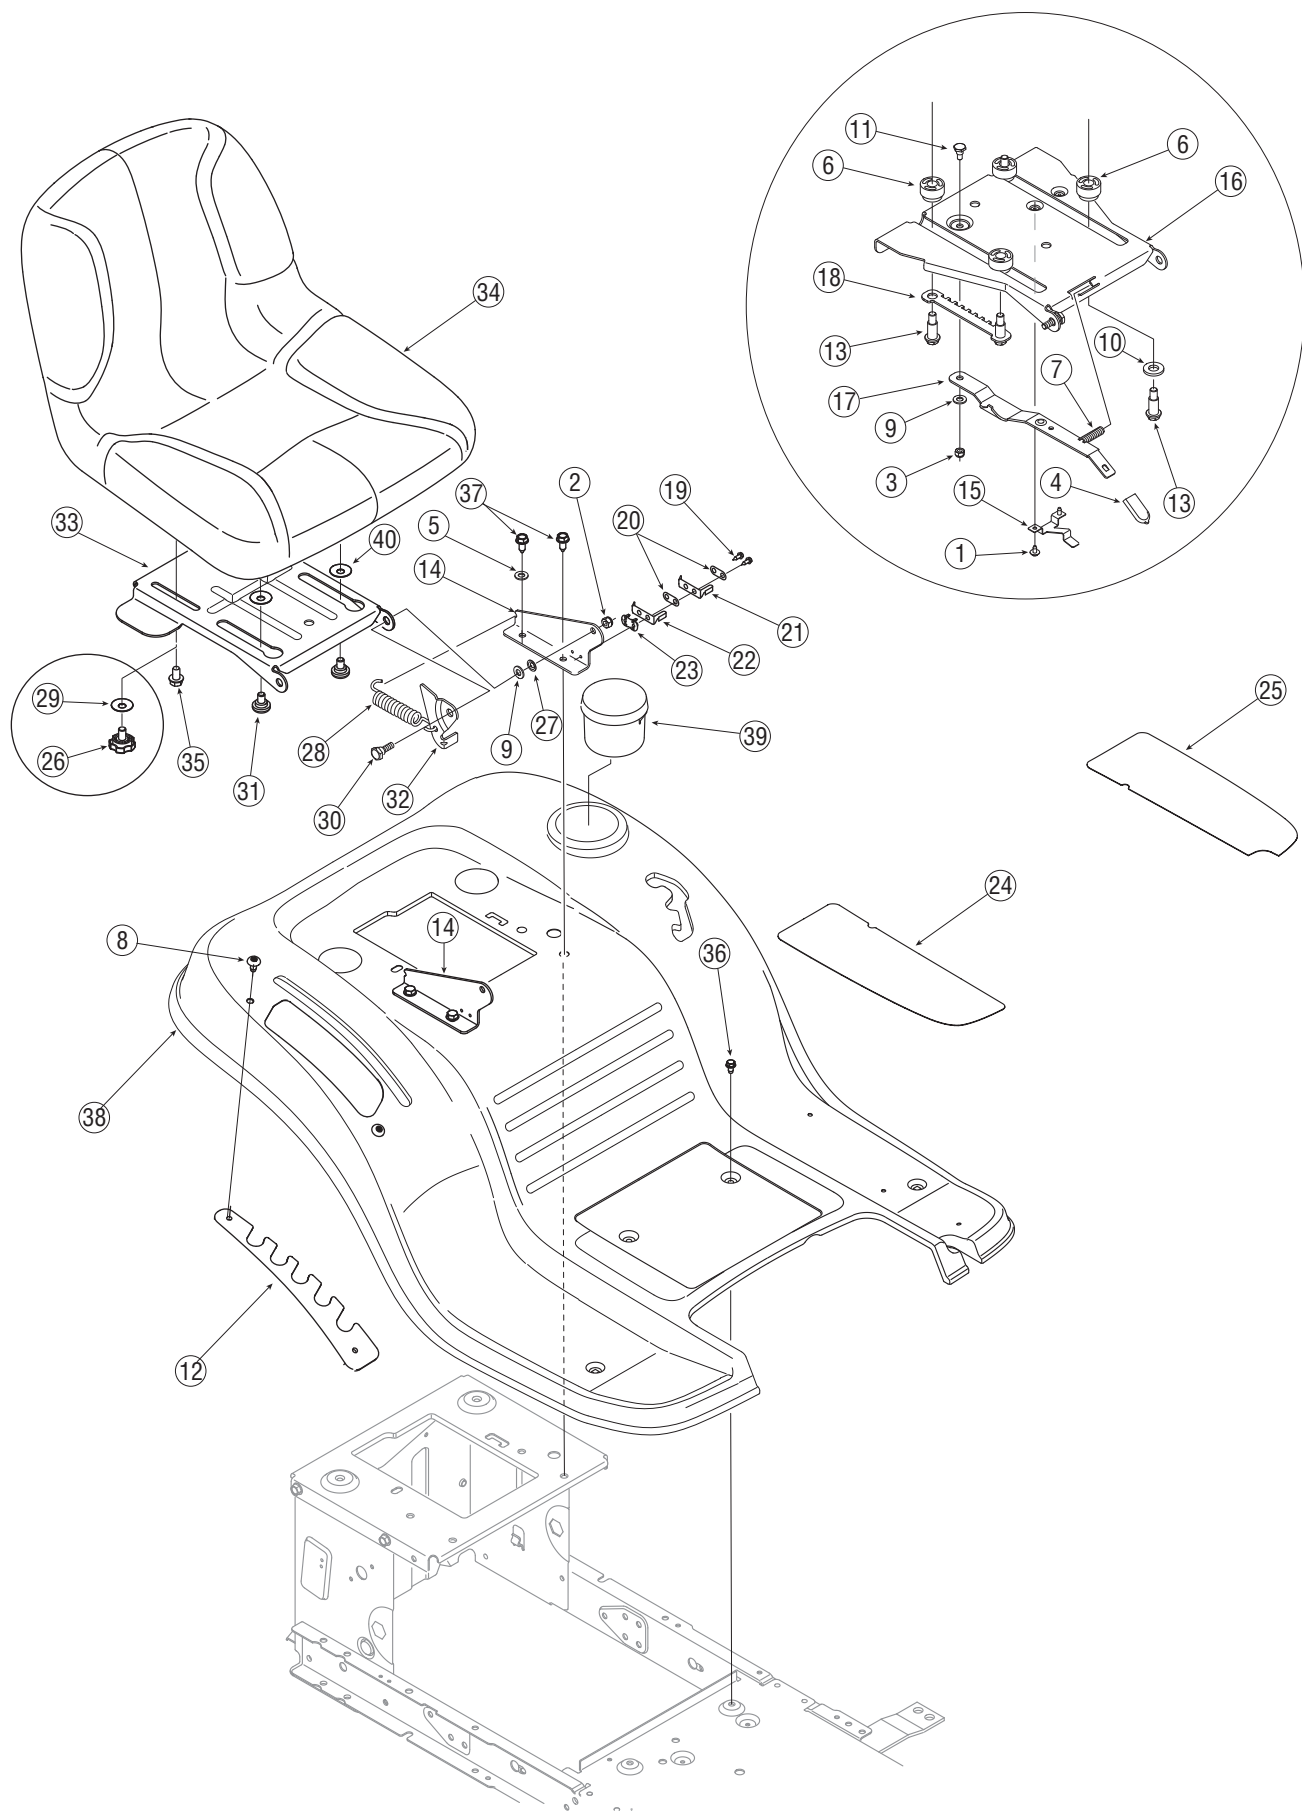

Ref. No.	Part No.	Description
1	710-1268	Screw, #10-16, .375
2	712-04063	Nut, Flange Lock, 5/16-18, GrF
3	712-3027	Nut, Flange Lock, 1/4-20
4	720-0309A	Seat Adjuster Grip
5	736-0607	Lock Washer, 5/16
6	731-04074	Spacer
7	732-0499	Compression Spring, .41 x 1.5
8	710-04483	Screw, 1/4-20 x .500
9	736-0275	Wash, Flat, .344 x .688 x .065
10	736-3019	Wash, Flat, .531x 1.062 x.134
11	738-0137A	Screw, Shlder, .340 x .285,1/4-20
12	783-04843	Lift Adjustment Bracket
13	738-0966	Screw, Shlder, .50 x .925, 3/8-16
14	783-1489C	Mounting Bracket, Seat
15	783-0611	Seat Stop
16	783-0738B	Seat Pivot Bracket
17	783-0739A	Seat Adjustment Lever
18	783-0753	Seat Adjustment Selector
19	710-0227	Screw, #8-18 x .50
20	726-0279	Plate, Insulator
21	725-1303	Spring Switch, Outer
22	725-1439	Spring Switch, Inner
23	726-0278	Plate, Insulator Boss

Ref. No.	Part No.	Description
24	723-04025	Foot Pad, Abrasive, RH
	735-04048	Foot Pad, Rubber RH
25	723-04026	Foot Pad, Abrasive, LH
	735-04047	Foot Pad, Rubber LH
26	720-04061	Knob, 3/8-16, .875
27	726-0201	Nut, Speed, .3125 Id
28	732-1184	Spring, Exten., .84 Dia x 4.6 Lg.
29	736-0101	Washer, Flat, .406 x 1.00 x .030
30	738-0296	Scr., Shlder, .437 x .268, 5/16-18
31	738-04012A	Screw, Shlder, .625 x .175, 3/8-16
32	783-0209D	Lift Bracket, Seat
33	783-04081A	Pivot Bracket, Seat
34	757-04001A	Seat, Low, Black
	757-04037	Seat, Medium, Black
	757-04038A	Seat, Low, Yellow
35	710-04482	Screw, 3/8-16, .875
36	710-0599	Screw, 1/4-20, 0.500
37	710-0604A	Screw, 5/16-18, 0.625
38	783-04587A	Fender
39	731-04591A	Cup Holder
40	736-0300	Flat Washer, .406 x .875 x .059
	736-0140	Flat Washer, .395 x .62 x .063
—	726-3046	Ratchet Clip <i>(For use w/ rubber foot pad)</i>

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

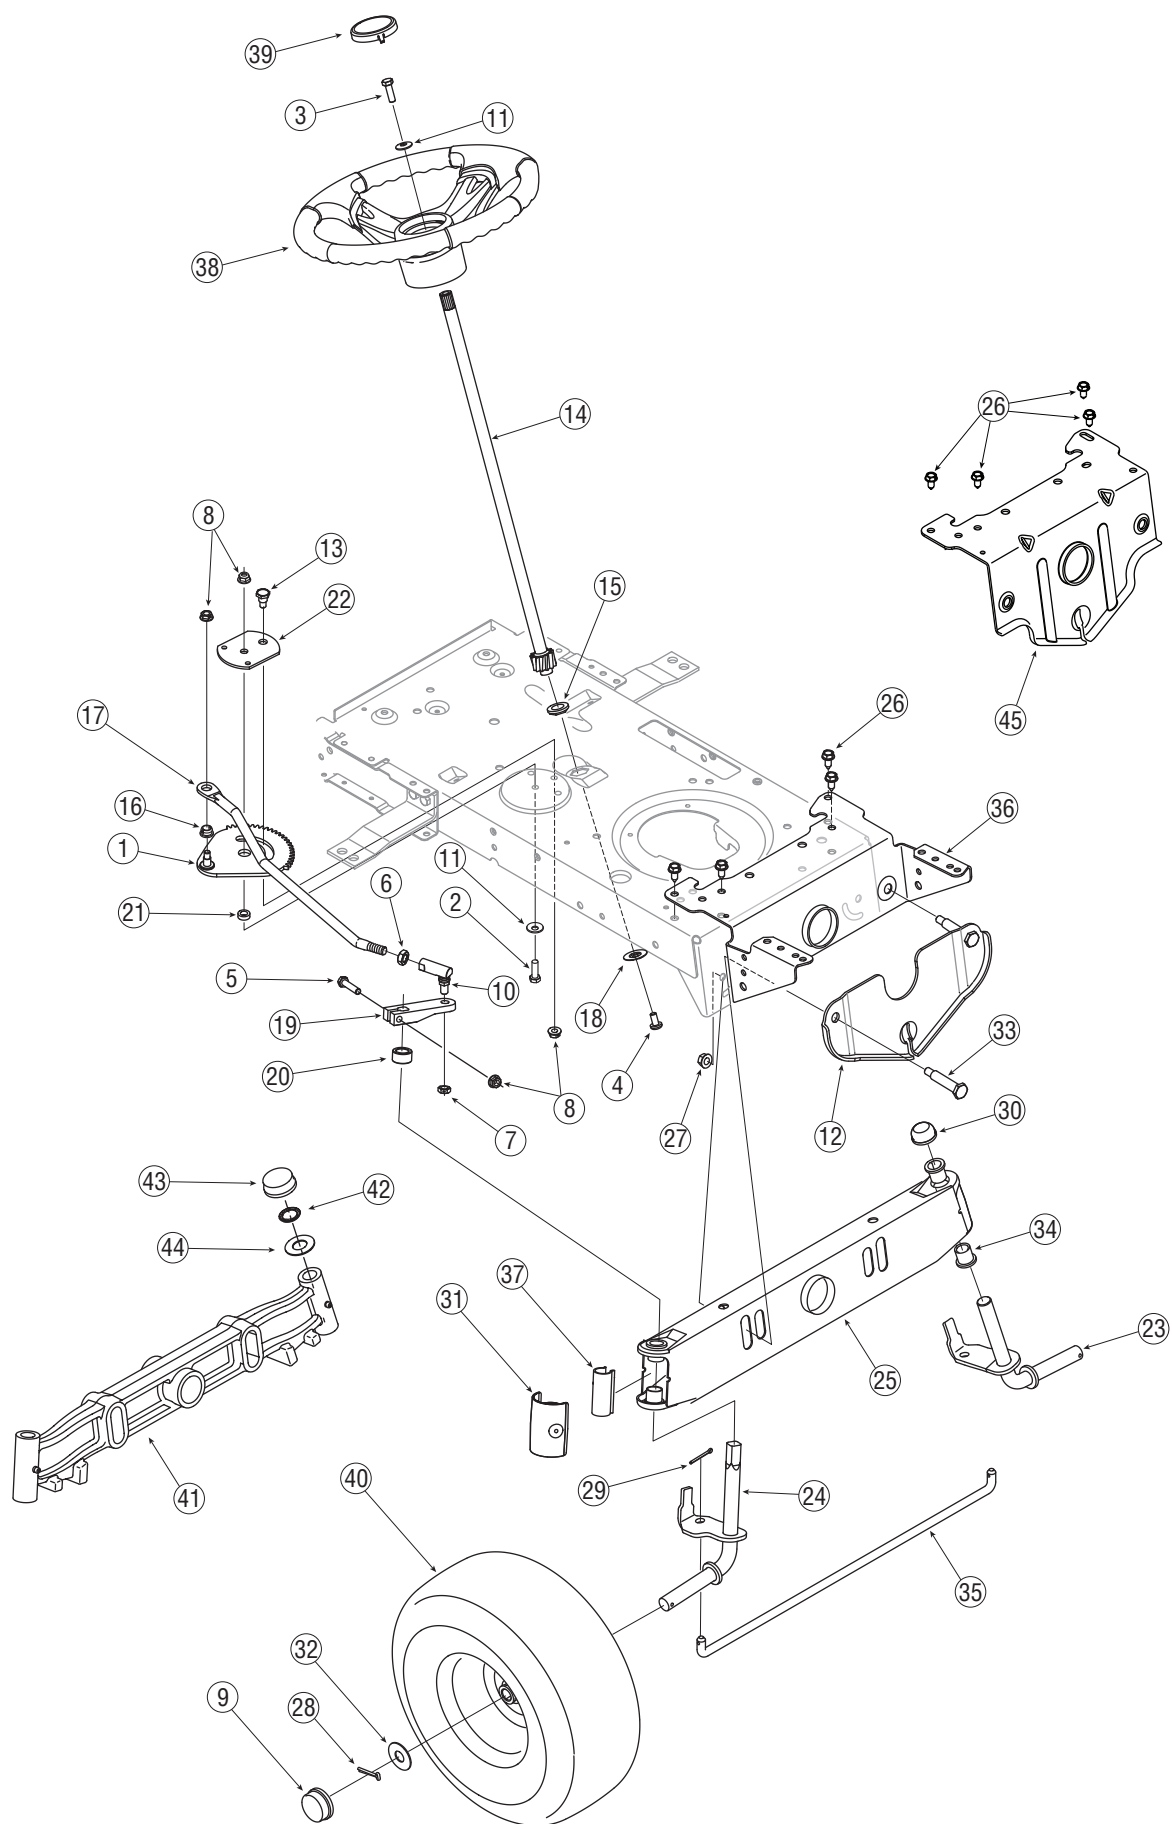


Ref. No.	Part No.	Description
1	617-04024	Gear Assembly, Steering
2	710-0376	Screw, 5/16-18, 1.00, Gr5
3	710-0643	Screw, 5/16-18, 1.00, Gr5, Lock
4	710-1309	Screw, Mach, 5/16-18, 0.750
5	710-3180	Screw, 5/16-18, 1.75, Gr5
6	712-0240	Nut, Jam, 7/16-20, Gr2
7	712-0262	Nut, Jam Lock, 3/8-24, Gr2
8	712-04063	Nut, Flange Lock, 5/16-18, Grf
9	731-0484A	Hub Cap
10	723-0448A	Ball Joint, 7/16-20, Lock
11	736-0242	Washer, Bell, .340 x .872 x .060
12	783-04568	Front Hanger Bracket, Deck
13	738-04141	Scr., Shlder, .435 x .3485, 5/16-18
14	738-0919	Steering Shaft, 5/8 Spline x 21.86
15	741-04124	Bearing, Flange, Hex 5/8
16	741-0475	Plastic Bushing .380 ID
17	747-04298	Drag Link, Steering
18	748-0389	Cap, 1.25 x .16
19	748-04065	Steering, Block
20	748-04068	Spacer, .710 ID x .125 OD x .56
21	750-04418	Spacer, .322 ID x .625 OD x .21
22	783-04644	Stabilizer Plate, Gear Segment
23	638-04007	Axle Assmbly LH (38" & 42" Deck)
	638-04013	Axle Assembly, LH (46" Deck)
24	638-04008	Axle Assmbly RH (38" & 42" Deck)
	638-04014	Axle Assembly, RH (46" Deck)
25	683-0128B	Pivot Bar
26	710-0604A	Screw, 5/16-18, 0.625

Ref. No.	Part No.	Description
27	712-04065	Nut, Flange Lock, 3/8-16, GrF
28	714-04039	Pin, Cotter, 5/32, 1.25
29	714-0474	Pin, Cotter, 1/8 x 0.75
30	726-0341	Push Cap, 3/4
31	731-04057A	End Cap, Pivot Bar (Standard)
	731-1291A	End Cap, Pivot Bar (w/ Fitting)
32	736-04228	Washer, Flat, .781 x 1.59
33	738-04128	Scr., Shlder, .500 x 2.380, 3/8-16
34	741-0660A	Bearing, Flange, .760 x .941 x 1.0
35	747-04299A	Tie Rod
36	783-04601B	Bracket, Pivot
37	731-04057A	Axle End Cap, Standard
38	631-04028	Steering Wheel, Standard Grip
	631-04008	Steering Wheel, Soft Grip
39	731-04039	Cap, Steering Wheel (no logo)
	731-04040	Cap, Steering Wheel (sprig logo)
	731-04681	Cap, Steering Wheel (tine logo)
40	634-04325	Wheel Ass'y, Round Shoulder
	734-04240A	Tire Only, 15 x 6 x 6, Round Shld.
	634-04086	Wheel Ass'y, Square Shoulder
	734-1731	Tire Only, 15 x 6 x 6, Square Shld.
	634-04081	Rim Assembly (Incl. bearings and valve stem)
41	719-04105	Pivot Bar, Cast
42	726-04035	Push Nut 3/4 Dia.
43	731-04693	Push Cap
44	736-0316	Washer, Flat, .78 x 1.59 x .60
45	783-05326	Pivot Bar Bracket, T-Style Hood

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 760-779

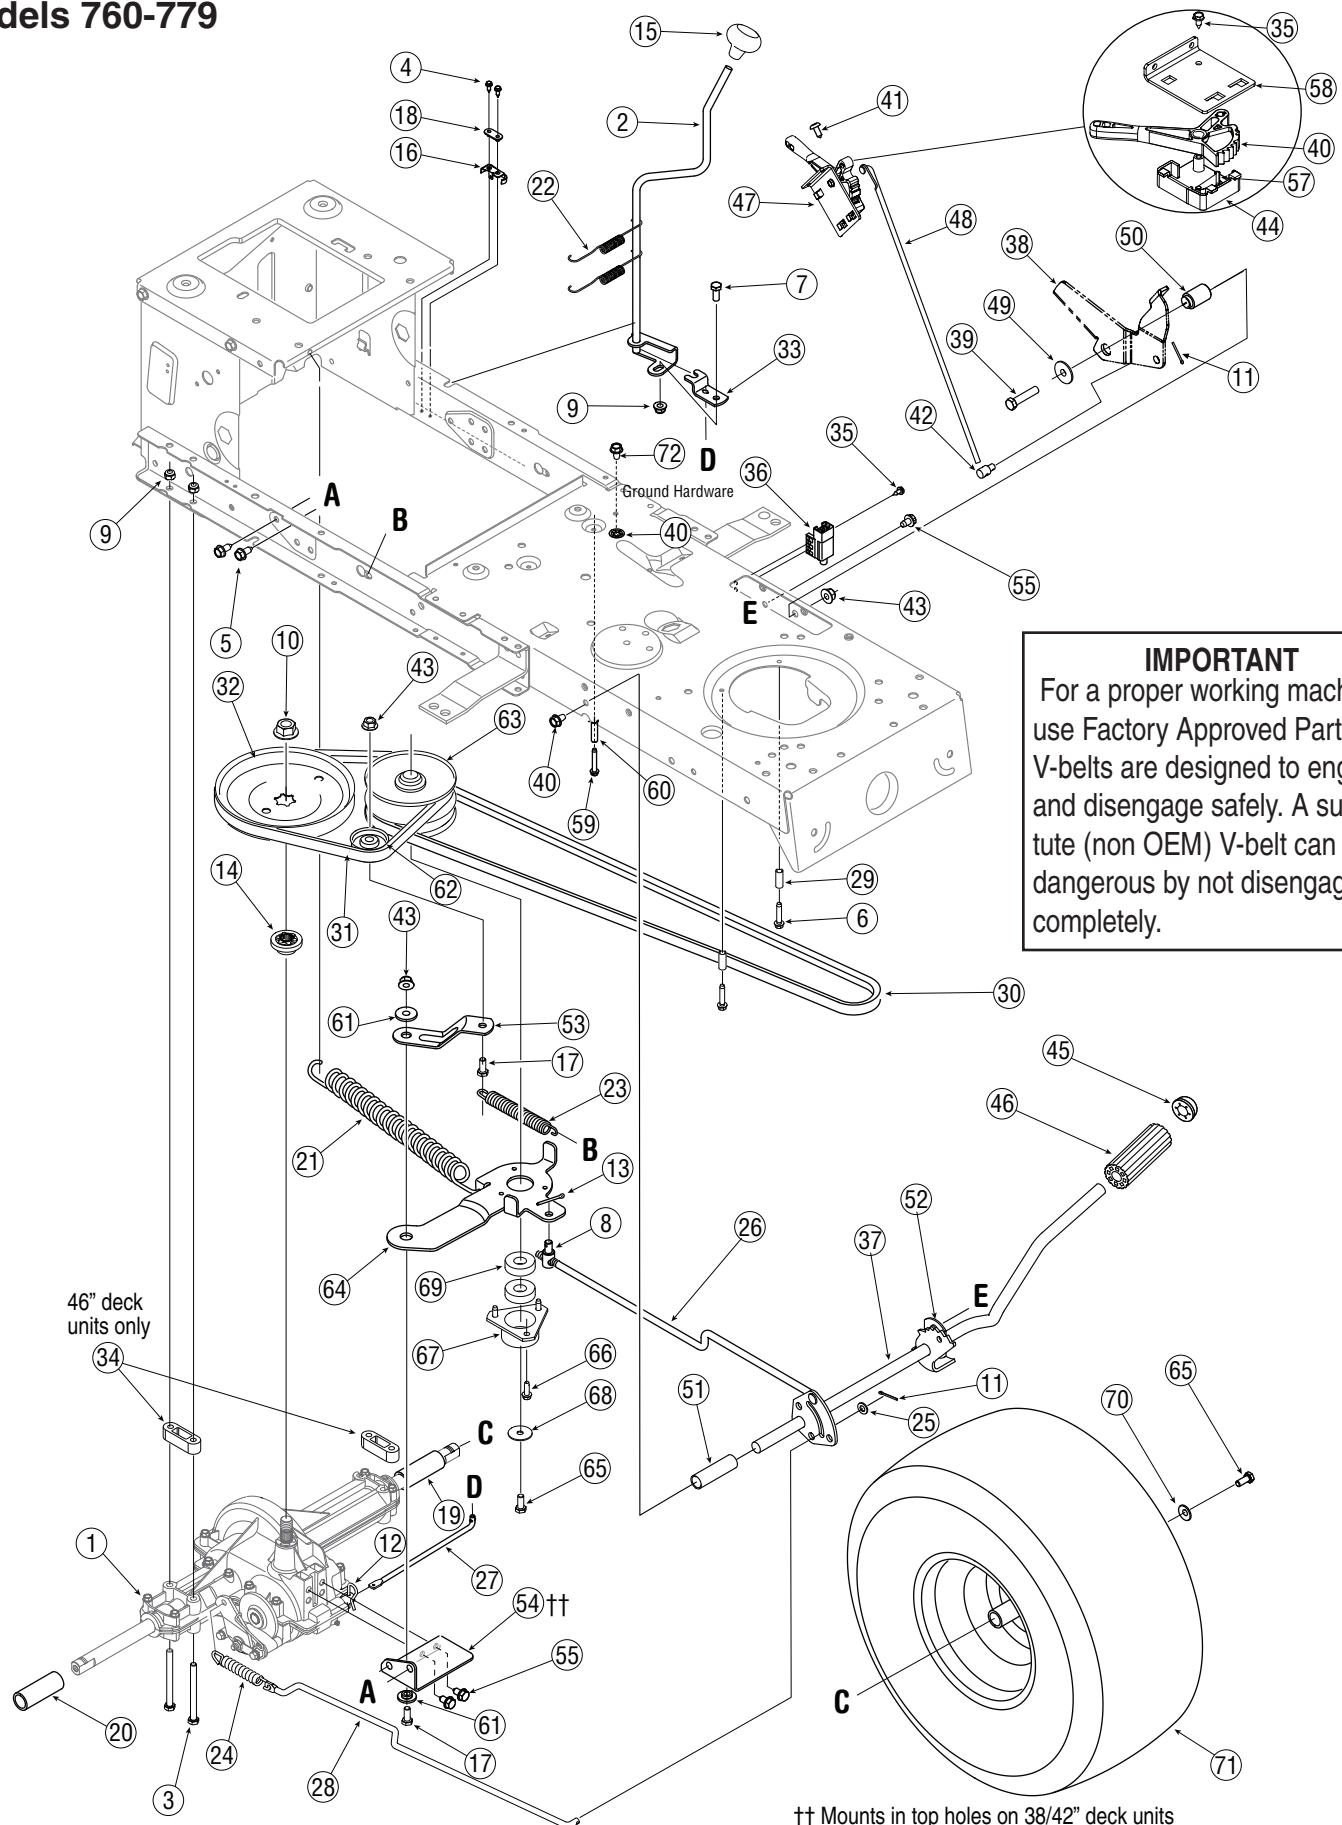


IMPORTANT
For a proper working machine, use Factory Approved Parts. V-belts are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Ref. No.	Part No.	Description
1	618-04034	Transmission Assembly
2	647-04035	Lever Assembly, Shift
3	710-0176	Screw, 5/16-18, 2.75 (38/42" Dk.)
	710-1266	Screw, 5/16-18, 3.50 (46" Deck)
4	710-0227	Screw, #8-18, 0.500
5	710-0726	Screw, 5/16-12, 0.750
6	710-0809	Screw, 1/4-20, 1.250
7	710-3008	Screw, 5/16-18, .75, Gr5
8	711-04075A	Ferrule, 3/8-24 x .375 Dia.
9	712-04063	Nut, Flange Lock, 5/16-18, GrF
10	712-0700	Nut, Flange, 9/16-18, Gr2
11	714-0111	Pin, Cotter, 3/32, 1.0
12	714-0209	Cotter Pin, Internal .125 Dia
13	714-0470	Pin, Cotter, 1/8 x 1.25
14	718-0758A	Hub, Pulley, 5/8 Spline
15	720-04028	Knob, Shift
16	725-1644	Spring Switch, Short
17	710-0520	Screw, 3/8-16 x 1.50
18	726-0320	Plate, Insulator Nut
19	731-04602	Sleeve, .758 x .821 x 3.3125
20	731-04604	Sleeve, .758 x .821 x 2.4375
21	732-04076A	Spring, Extension, 1.15 OD x 7.90
22	732-04276A	Spring, Extension
23	732-04306	Spring, Extension, .80 OD x 3.28
24	732-0716C	Spring, Extension, .59 OD x 4.00
25	736-0264	Washer, Flat, .330 x .630 x .0635
26	747-04265	Control Rod Var. Spd. (38/42" Dk.)
	747-04568	Control Rod, Var. Spd. (46" Deck)
27	747-04277	Rod, Shift
28	747-04287	Rod, Brake
29	750-0566A	Spacer, .260 x .372 x 1.030
30	754-04001A	Belt
31	754-0241A	Belt
32	756-04002	Pulley, V-Type, 7.25 Dia
33	783-04595	Shift Bracket, Adjustable
34	748-0334	Spacer .68
35	738-04237	Screw, #10-16, 0.500
36	725-04363	Switch, Interlock
37	647-04034C	Pedal Assembly, Drive
38	783-04862	Latch Bracket (RMC*)
	783-04903	Latch Bracket (No RMC)

Ref. No.	Part No.	Description
39	710-3144	Screw, 3/8-16, 2.00, Gr5
40	736-0222	Lock Washer, 1/4
41	710-04483	Screw, 1/4-20, 0.500
42	711-0736	Adjustment Ferrule 1/4-20
43	712-04065	Nut, Flange Lock, 3/8-16, GrF
44	731-05361	Control Cover
45	726-0214	Push Cap, 5/8
46	735-0239	Pad, Foot, 4.0
47	683-04225	Shift Cont. Assembly, 6-Spd
	683-04216	Shift Cont. Assembly, 7-Spd
	683-04274	Shift Cont. Assembly, 7-Spd TB
48	747-04430	Control Rod, Speed Selector
49	736-0247	Washer, Flat, .406 x 1.25 x .157
50	750-04465	Spacer, Flge, .390 x .671 x 1.095
51	750-0802	Spacer, .640 ID x .76 OD x 2.63
52	783-04536	Support Bracket, Pedal
53	683-04207	Bracket, Idler
54	683-04176A	Torque Bracket, Transmission
55	710-0604A	Screw, 5/16-18, 0.625
56	710-0520	Screw, 3/8-16, 1.25, Gr5
57	732-0627	Shift Lever Spring
58	783-04830	Control Bracket
59	710-1325	Screw, 1/4-20 x 1.625
60	750-04456	Spacer, .260 x .372 x 1.420
61	738-0347	Spacer, Shoulder, .625 ID x .169
62	756-04213	Pulley, Flat Idler
63	656-04015	Pulley Ass'y, Variable Speed
64	683-04206	Bracket Ass'y, Variable Speed
65	710-0627	Screw, 5/16-24, .750, Gr5
66	710-0778	Screw, 1/4-20, 1.50
67	718-04261	Cup, Bearing
68	736-0362	Washer, Flat, .330 x 1.25 x .06
69	741-0124	Bearing, Ball, 17 x 40 x 12
70	736-0242	Bell Washer, .34 x .872 x .060
71	634-04324	Wheel Ass'y, Round Shoulder
	734-04241	Tire Only, 20 x 8 x 8, Round Shld.
	634-0070	Rim Assy. <i>(Inc. bearings, valve stem)</i>
	634-0104	Wheel Ass'y, Square Shoulder
	734-1730	Tire Only, 20 x 8 x 8, Square Shld
	734-0603A	Rim Assy. <i>(Inc. bearings, valve stem)</i>
72	710-0599	Screw, 1/4-20 x .500


* Reverse Caution Mode

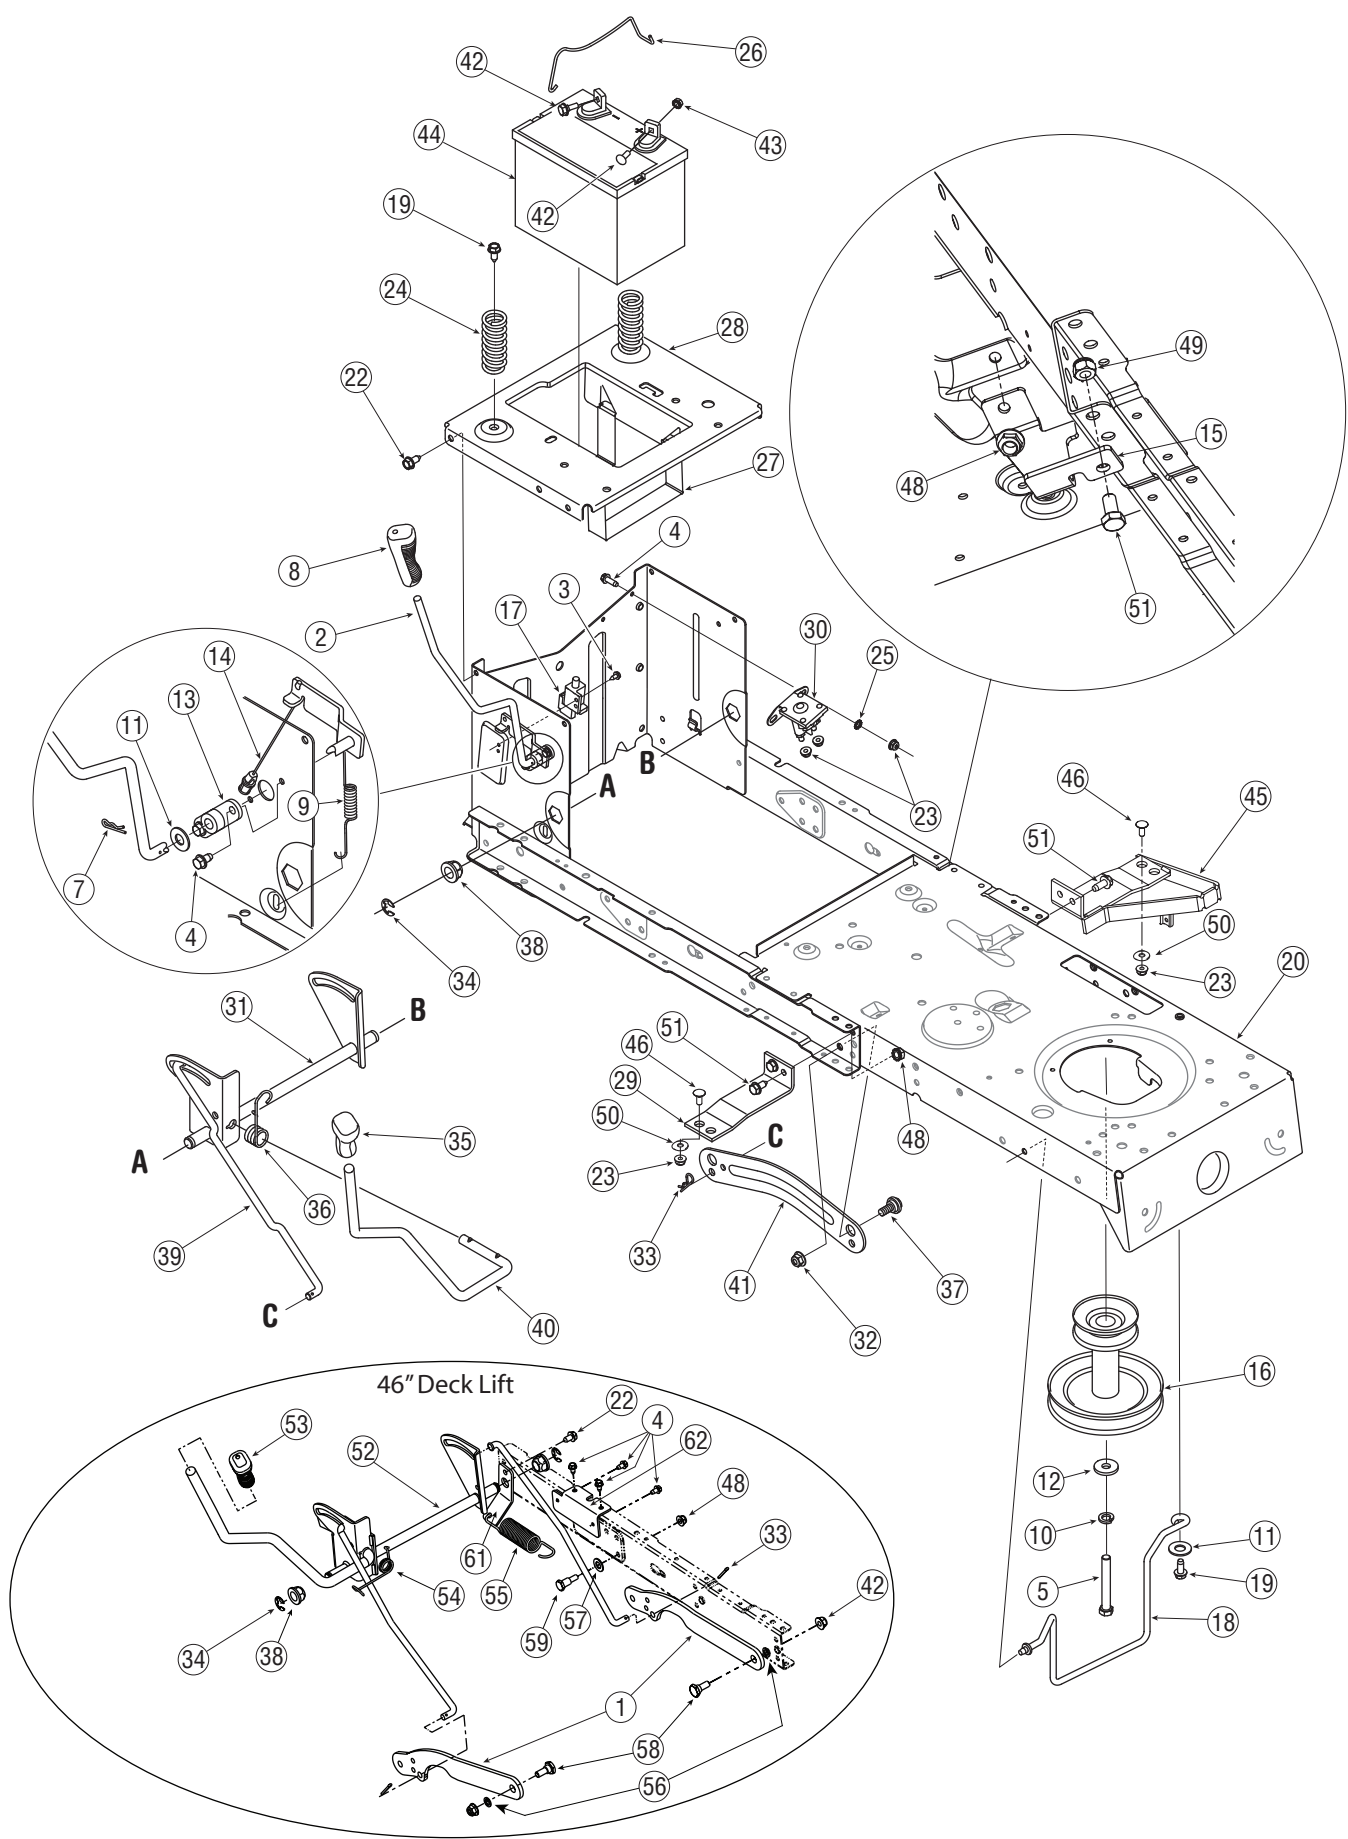

Ref. No.	Part No.	Description
1	783-0678C	Deck Lift Link
2	647-04096	Handle Asswmbly, PTO
3	738-04237	Shoulder Screw, #10-16, 0.500
4	710-0599	Screw, 1/4-20, 0.500
5	710-3157A	Screw, 7/16-20, 3.25 38 & 42" Dk.
	710-04607	Screw, 7/16-20, 2.75 46" Deck
7	714-0145	Pin, Click, .092 x 1.64
8	720-04049	Grip, Handle, 3/8
9	732-04276A	Spring, Extension
10	736-0171	Washer, Lock, 7/16
11	736-0300	Washer, Flat, .406 x .875 x .059
12	736-0322	Washer, Flat, .450 x 1.250 x .164
13	741-04119	Bearing, PTO
14	746-04173B	Cable, Deck Engagement
15	783-04753	Frame Support Bracket
16	756-04196	Engine Pulley, 38" & 42" Deck
	756-04207	Engine Pulley, 46" Deck
17	725-04363	Switch, Interlock
18	747-04332A	Rod, Belt Keeper (38" Deck)
	747-04307	Rod, Belt Keeper (42/46" Deck)
19	710-1260A	Screw, 5/16-18, .750
20	683-04163A	Frame Assembly
21	710-0642	Screw, 1/4-20, 0.750
22	710-0604A	Screw, 5/16-18, 0.625
23	712-04064	Nut, Flange Lock, 1/4-20, GrF
24	732-04035	Spring, Compr. , 1.28 OD x 3.125
25	736-0222	Washer, Lock, 1/4
26	747-04385	Hold Down Rod, Battery
27	783-04869	Bracket, Battery
28	783-04548A	Seat Bracket, Frame
29	783-04637	Bracket, Runing Board
30	725-04439	Solenoid
31	683-04155A	Shaft Assembly Lift 38/42" Decks
32	712-04065	Nut, Flange Lock, 3/8-16, GrF

Ref. No.	Part No.	Description
33	714-04043	Pin, Cotter .08 x 1.56 Intern. RH
	714-0470	Pin, Cotter .080 x 1.25 Intern. LH
34	716-0106A	Ring, E-Type, .625 Dia.
35	720-0311	Grip, Handle, 1/2
36	732-04225	Spring, Torsion 38/42" Decks
37	738-04130	Screw, Shldr. , .625 x .175, 3/8-16
38	741-0225	Bearing, Hex Flange
39	747-04393	Rod, Lift
40	747-04282	Deck Handle, Lift, 38/43" Decks
41	783-04494	Lift Arm, Deck - RH
	783-04711	Lift Arm, Deck - LH
42	710-04466	Screw, Carriage, 1/4-20, .75, Gr5
43	712-0271	Nut, Sems, 1/4-20
44	725-1737A	Battery, 190 CCA
	725-1704A	Battery, 125 CCA
45	683-04195	Support Bracket Assembly
46	710-0134	Carriage Screw, 1/4-20 x .62
47	710-3025	Screw, 5/16-18 x .625
48	712-04063	Flange Lock Nut, 5/16-18
49	712-0429	Hex Lock Nut, 5/16-18
50	736-0173	Flat Washer, .28 x .74 x .063
51	710-3008	Hex Screw, 5/16-18 x .75
52	683-04334	Shaft Assembly Lift 46" Decks
53	720-0298	Grip, Handle, 5/8
54	732-04438	Spring, Torsion 46" Deck
55	732-0934	Extension Spring
56	736-0140	Washer, Flat, .385 x .62 x .063
57	736-0226	Washer, Flat, .474 x .879 x .064
58	738-0380	Bolt, Shldr. .500 x .270 3/8-16
59	738-0754	Screw, Shldr. , .437 x .54
60	747-04653	Deck Handle, Lift, 46" Deck
61	783-04462	Lift Bracket
62	783-05389	Frame Brace Bracket


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

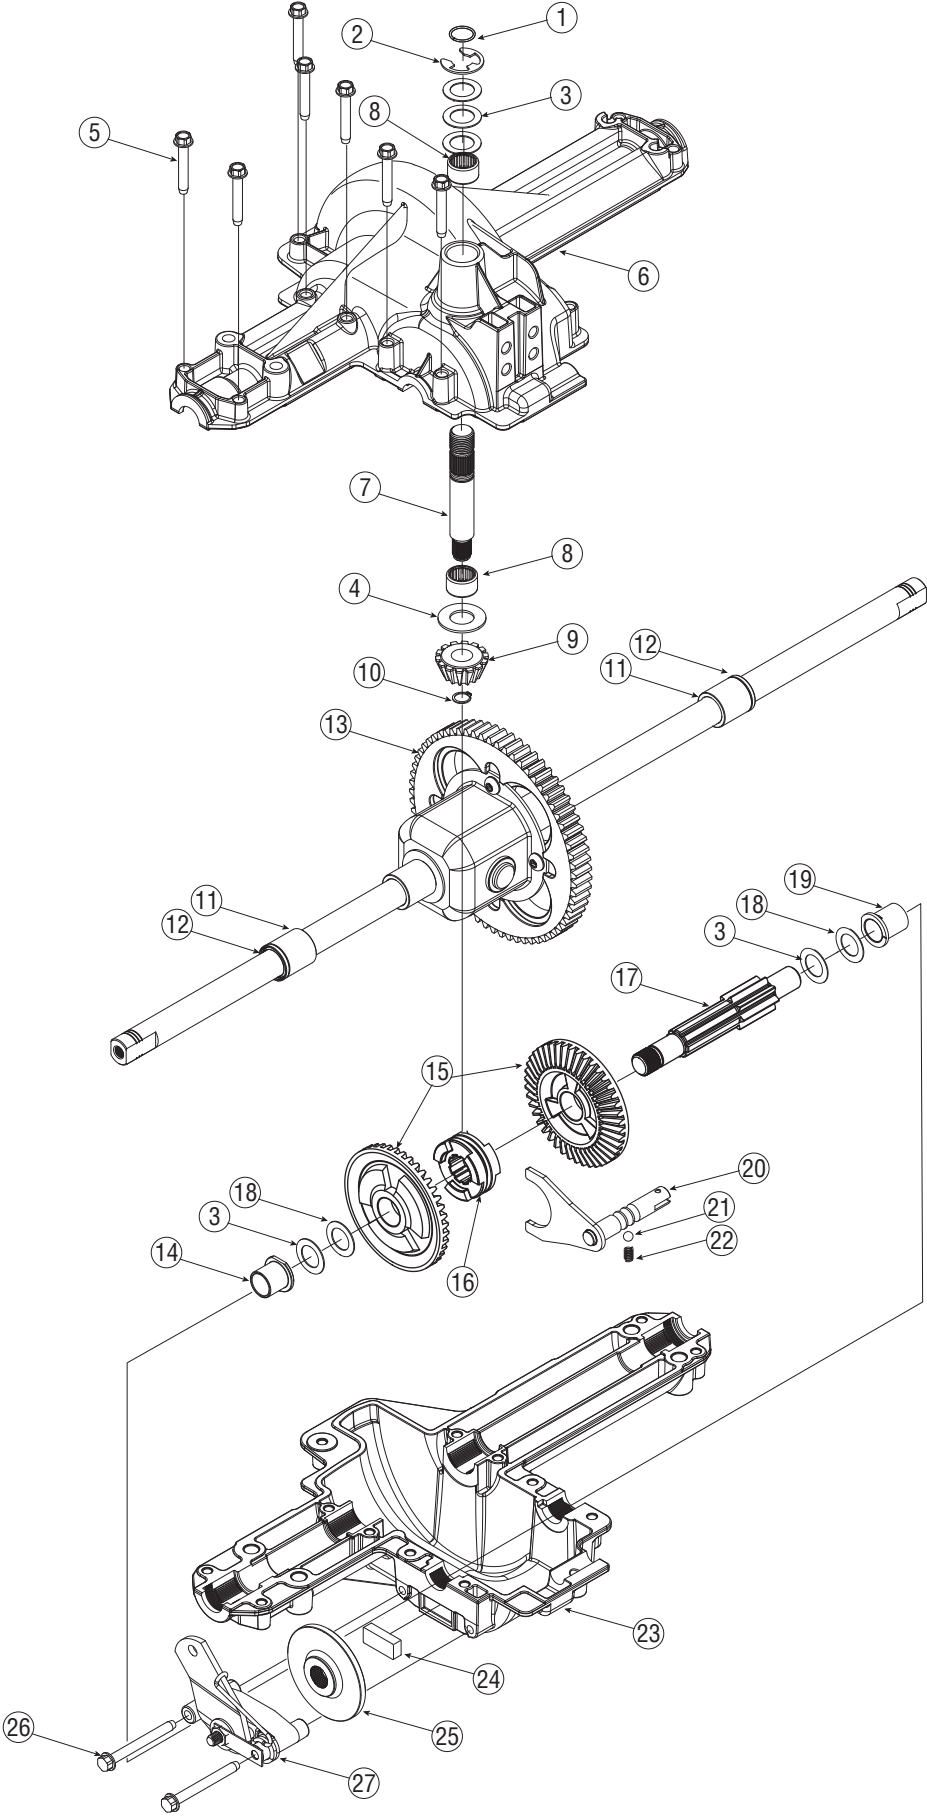

Ref. No.	Part No.	Description
1	732-0614	Ring, Wire
2	716-0231	Ring, E Type,.750
3	736-0336*	Flat Washer, 5/8 x 1.0 x.030
	736-0337*	Flat Washer, 5/8 x 1.0 x.040
	736-0349*	Flat Washer, 5/8 x 1.0 x.020
4	736-0335	Washer, Thrust.635 x 1.26 x.06
5	710-1325	Self-tapping Screw, 1/4-20 x 1.625
6	719-04017	Upper Housing
7	711-1109	Input Shaft
8	741-0335	Needle Bearing,.625 x.813 x.495
9	717-1464	14-tooth Bevel Pinion
10	716-0108	Retaining Ring,.437
11	741-0340	Sleeve Bearing,.75 x 1.0 x 1.0
12	721-0338	Seal,.75 x 1.0 x.125
13	618-04041A	Differential Assembly
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	717-04056	42-tooth Bevel Gear
16	718-04045	Clutch Collar
17	711-04134	Drive Shaft
18	736-0495*	Thrust Washer, 1.0 x.632 x.0
	736-0494*	Flat Washer,.632 x 1.00 x.035
19	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
20	611-0011	Detent Shaft Assembly
21	741-0862	Detent Ball
22	732-0863	Compression Spring
23	719-04018	Lower Housing
24	717-0678	Brake Puck
25	761-0202	Brake Disc
26	710-1206	Self-tapping Screw, 1/4-20 x 2.375
27	661-0001	Brake Assembly
—	737-0148	Grease (19 oz.)

* Use applicable flat washer (ref. #'s 3 or 18) in this application allowing .0150/.0020 in. end-play

NOTE: If rebuilding the upper housing, include two ounces (2 oz.) of Unirex® N3 grease (Part No. 737-0289) in the input shaft cavity.

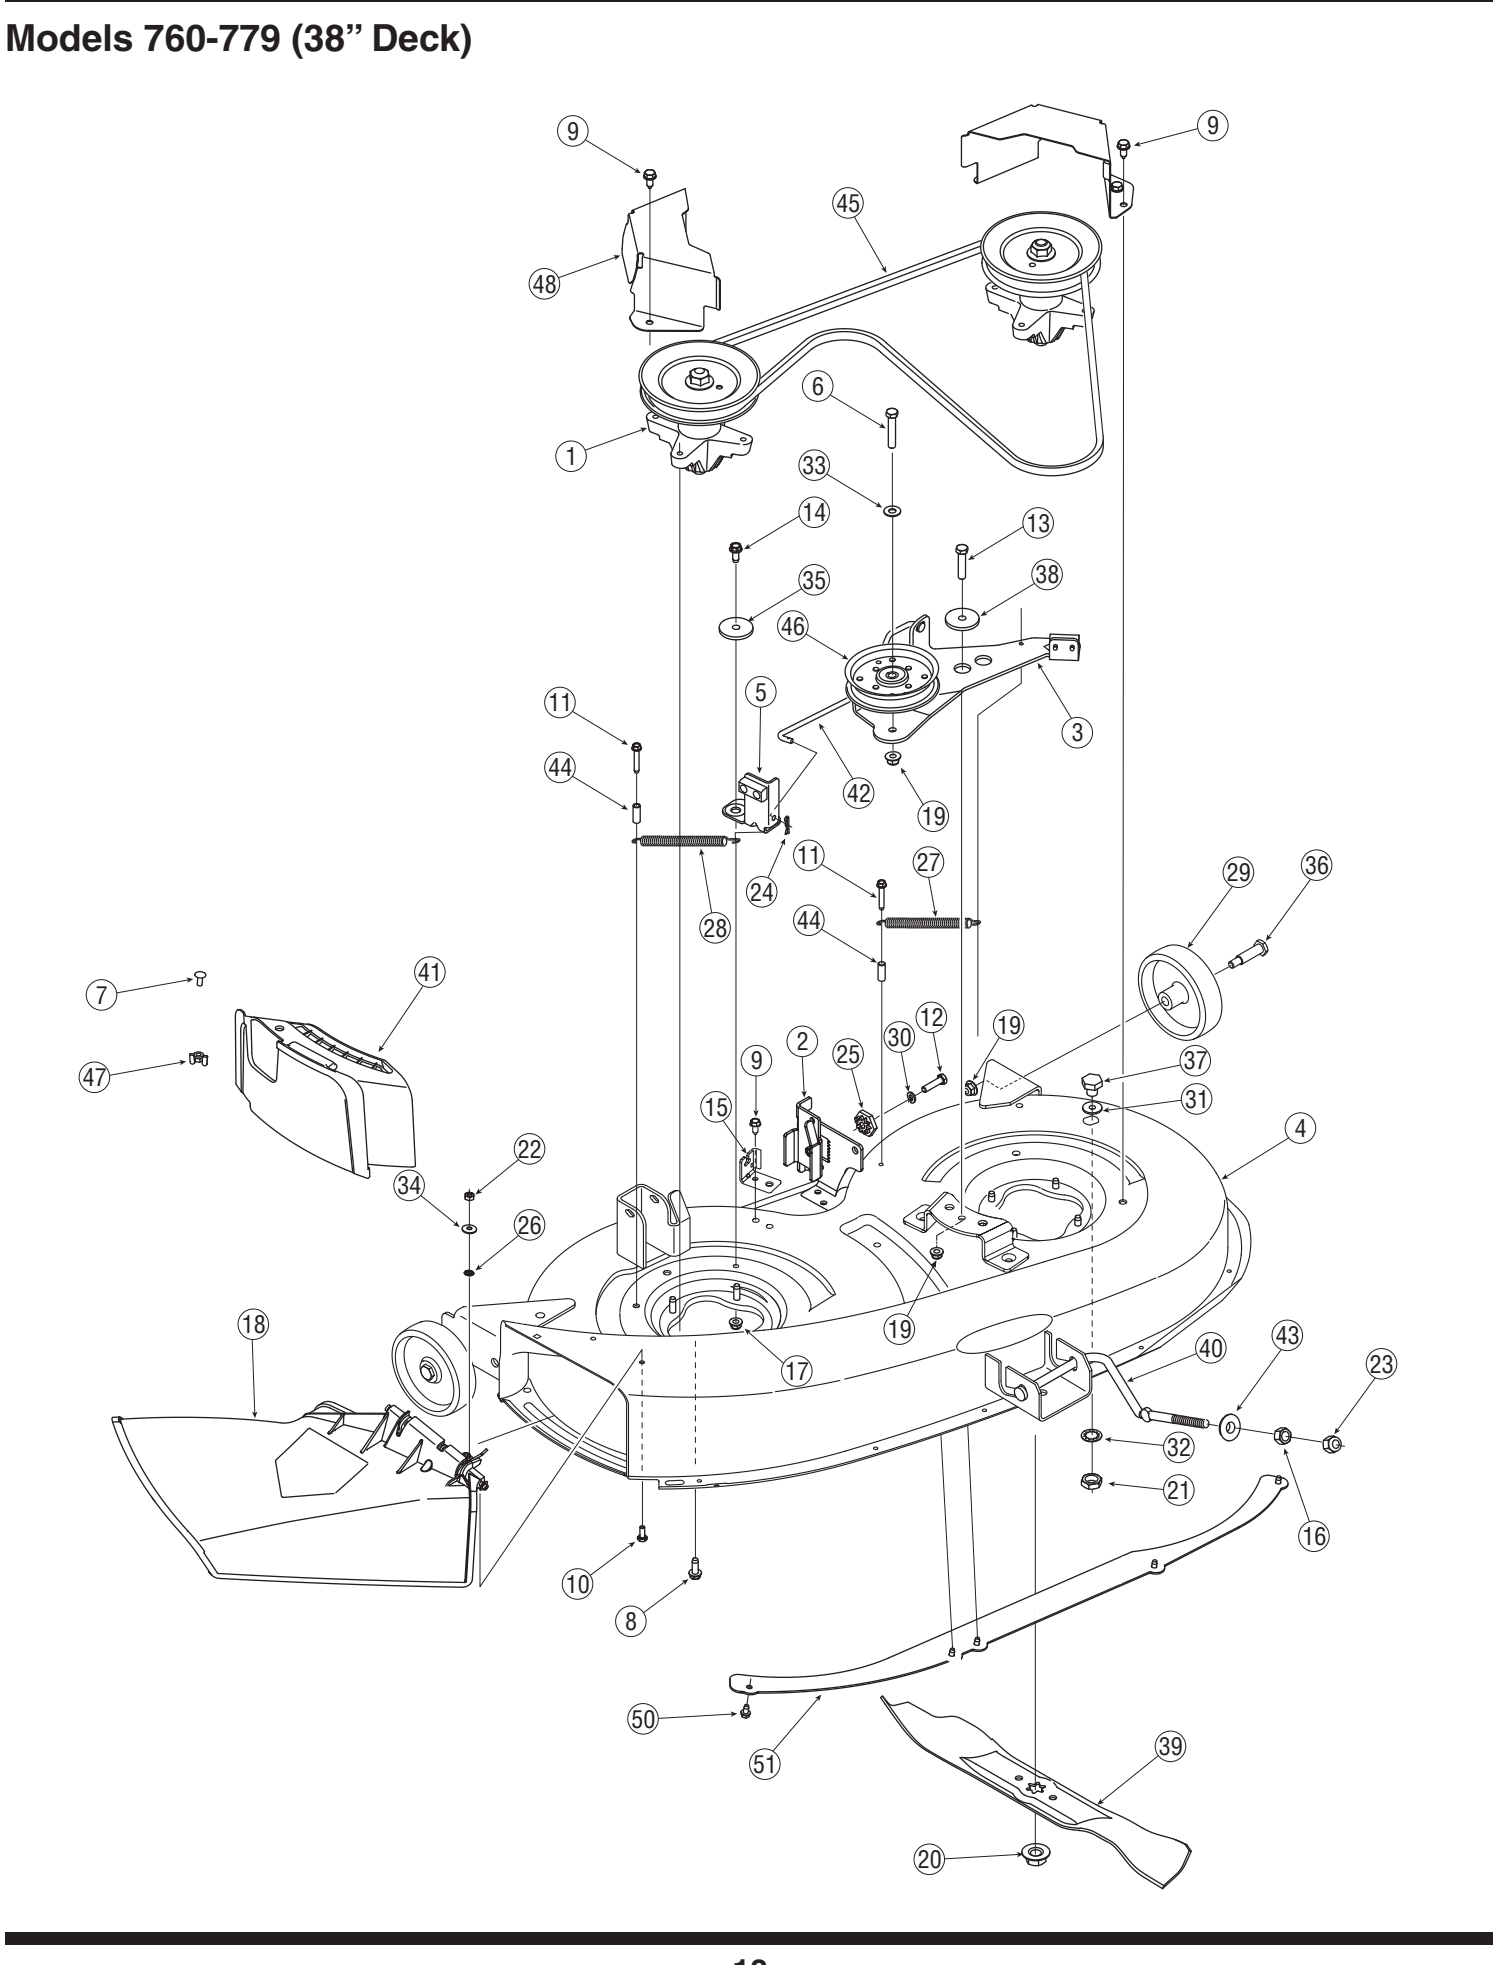

Ref. No.	Part No.	Description
1	618-04474	Spindle Assembly, Pul, 5.75" Dia
2	683-04228	Brkt. Assembly, Deck, Hanger LH
3	683-04138B	Brake Assembly, Deck
4	683-04263	Deck Shell, 38" (w/o Wheel Brkt)
	683-04161	Deck Shell, 38" (w/ Wheel Brkt)
5	683-04167	Brake Assembly, Deck
6	710-0347	Screw, 3/8-16, 1.75, Gr5
7	710-0134†	Carriage Screw, , 1/4-20 x .62
8	710-1260A	Screw, 5/16-18, 0.75
9	710-0604A	Screw, 5/16-18, 0.625
10	710-3015	Screw, 1/4-20, .75, Gr5
11	710-0778	Screw, 1/4-20, 1.500
12	710-0528	Screw, 5/16-18, 1.250
13	710-3005	Screw, 3/8-16, 1.25, Gr5
14	710-3008	Screw, 5/16-18, .75, Gr5
15	783-04740	Deck Engagement Cable Bracket
16	712-0206	Nut, Hex, 1/2-13, Gr5
17	712-04063	Nut, Flange Lock, 5/16-18, GrF
18	731-1032B	Chute Assembly, Discharge
19	712-04065	Nut, Flange Lock, 3/8-16, GrF
20	712-0417A	Nut, Flange, 5/8-18
21	712-0641	Nut, Hex, M16-1.5
22	712-3006	Nut, Hex, 1/4-20, Gr5
23	712-3083	Nut, Hex Lock, 1/2-13, Gr8, Nylon
24	714-0104	Pin, Cot, .072 Dia. x 1.13 Lg
25	717-04074	Gear, Deck Adjustment

Ref. No.	Part No.	Description
26	726-0233	Nut, Push, .25 ID x .50 OD
27	732-04280B	Spring, Exten. , .75 Dia. x 6.375
28	732-04287	Spring, Exten. , .50 Dia. x 6.375
29	734-0973†	Wheel, Deck 5.0 x 1.38
30	736-0119	Washer, Lock, 5/16
31	736-0187	Washer, Flat, .64 x 1.24 x .06
32	736-0225	Washer, Lock, 5/8, Internal Tooth
33	736-0300	Washer, Flat, .406 x .875 x .059
34	736-0270	Washer, Bell, .265 x .75 x .062
35	738-04166	Spacer, Shoulder, .5000 x .1475
36	738-0373†	Screw, Shldr, .498 x 1.53, 3/8-16
37	738-04146	Plug, Screw, M16 x 1.5
38	738-04162A	Spacer, Shoulder, .8840 x .190
39	742-0610A	Blade, 19.38", Star 3-in-1
40	747-04322	Deck Rod, Front Adjustable
41	731-2363†	Mulch Plug
42	747-04381	Control Rod, Brake
43	748-04069	Pivot Cup, Deck Lift
44	750-0566A	Spacer, .260 x .372 x 1.030
45	754-04062	Belt, V-Type
46	756-04129	Idler Pulley, 4.25" Dia.
47	712-3087†	Wing Nut, 1/4-20
48	783-04602A	Cover, Belt, 5.66 Dia.
50	710-0599 †	Screw, 1/4-20, .500
51	783-1297 †	38" Deck Skirt


† If Equipped

IMPORTANT

For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 760-779 (42" Deck)

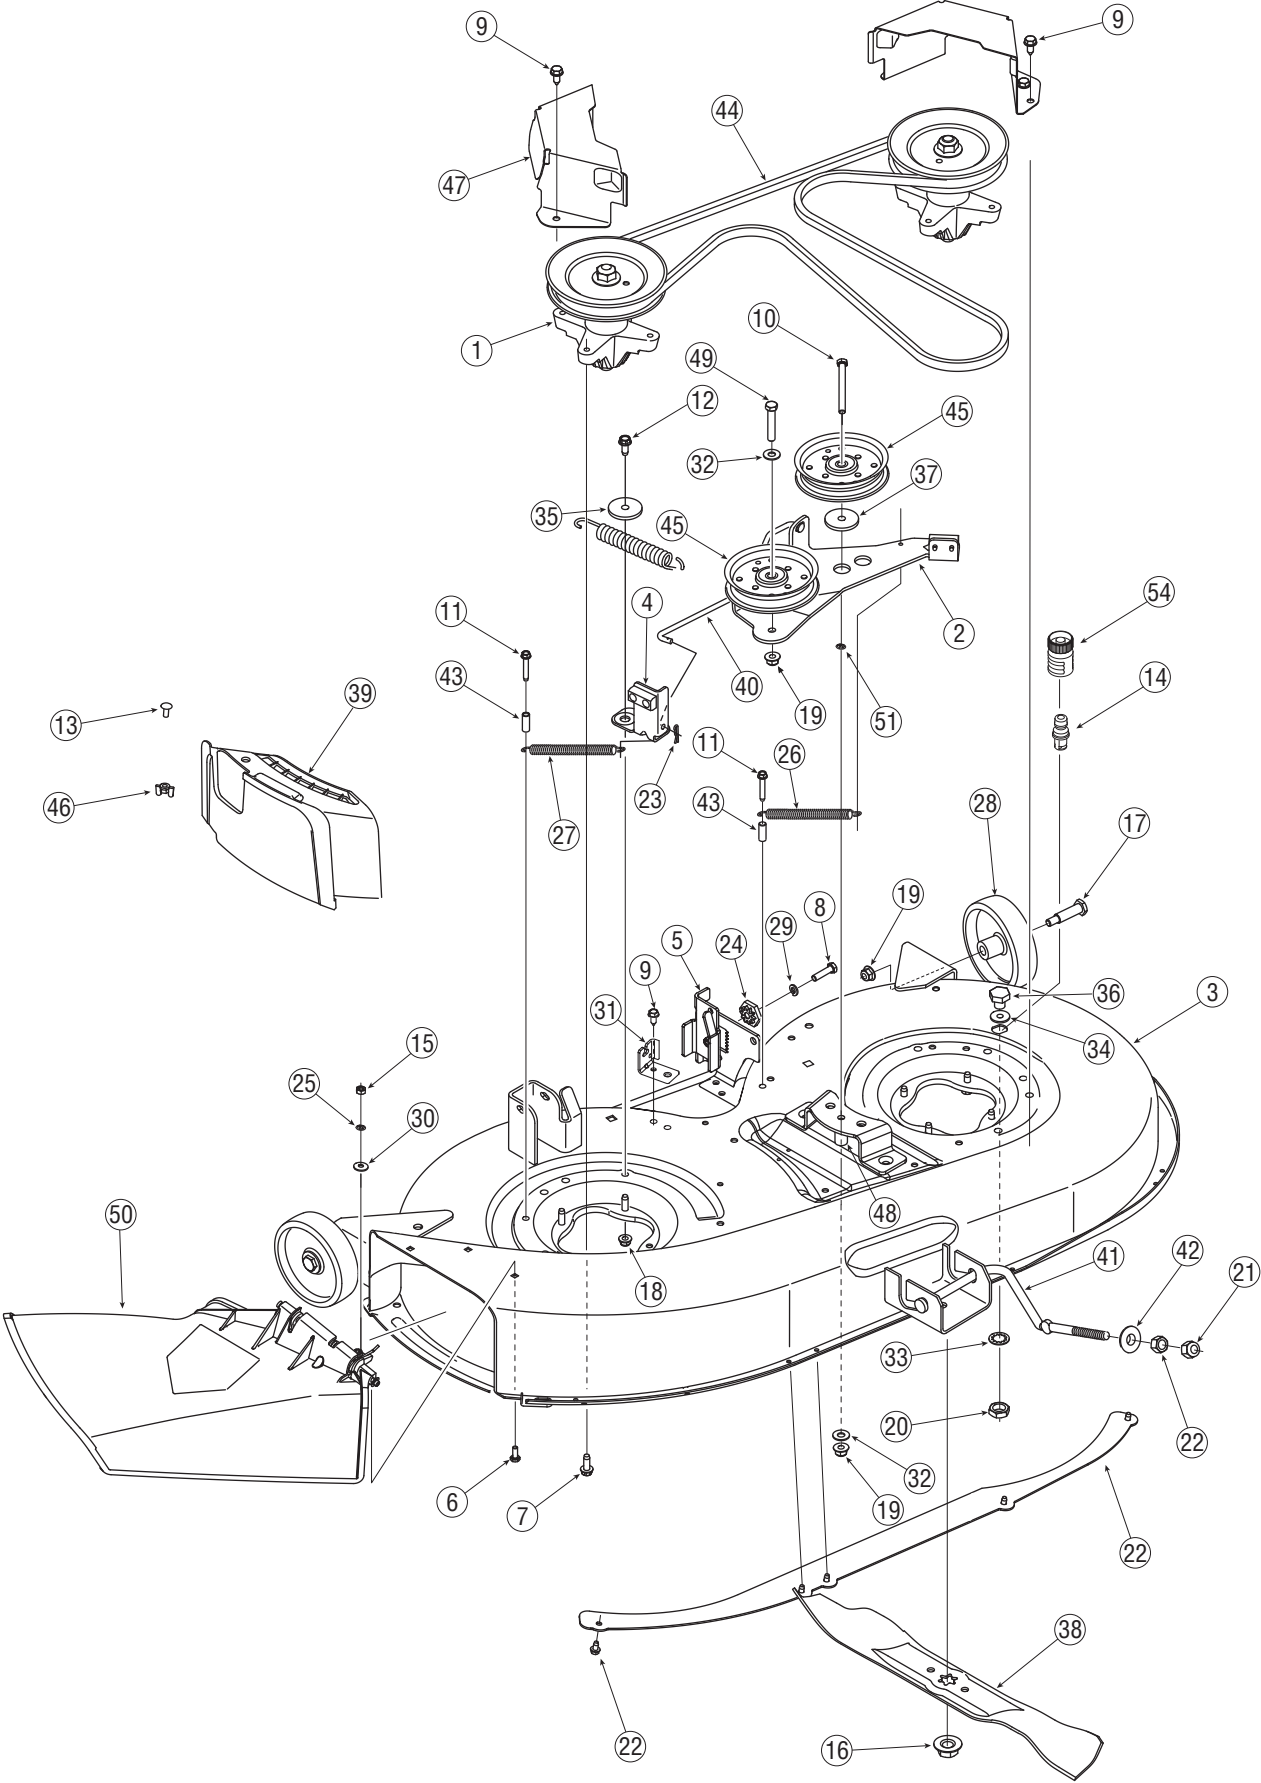

Ref. No.	Part No.	Description
1	618-04456	Spindle Assembly, Pul, 6.3" Dia
2	683-04138B	Brake Assembly, Deck
3	683-04165A	Deck Shell, 42" (w/o Wheel Brkt)
	683-04162A	Deck Shell, 42" (w/ Wheel Brkts.)
4	683-04167	Brake Assembly, Deck
5	683-04228	Brkt. Ass'y, Deck, Hanger LH
6	710-3015	Screw, 1/4-20, .75, Gr5
7	710-1260A	Screw, 5/16-18, 0.750
8	710-0528	Screw, 5/16-18, 1.250
9	710-0604A	Screw, 5/16-18, 0.625
10	710-3085	Screw, 3/8-16, 3.50, Gr5
11	710-0778	Screw, 1/4-20, 1.500
12	710-3008	Screw, 5/16-18, .75, Gr5
13	710-0134†	Carriage Screw, , 1/4-20 x .62
14	737-04003C†	Deck Water Nozzle
15	712-3006	Nut, Hex, 1/4-20, Gr5
16	712-0417A	Nut, Flange, 5/8-18
17	738-0373	Screw, Shldr, .498 x 1.53, 3/8-16
18	712-04063	Nut, Flange Lock, 5/16-18, GrF
19	712-04065	Nut, Flange Lock, 3/8-16, GrF
20	712-0641	Nut, Hex, M16-1.5
21	712-3083	Nut, Hex Lock, 1/2-13, Gr8
22	712-0206	Nut, Hex, 1/2-13, Gr5
23	714-0104	Pin, Cot, .072 Dia. x 1.13 Lg
24	717-04074	Gear, Deck Adjustment
25	726-0233	Nut, Push, .25 ID x .50 OD
26	732-04280B	Spring, Exten. , .75 Dia. x 6.375
27	732-04287	Spring, Exten. , .50 Dia. x 6.375

Ref. No.	Part No.	Description
28	734-0973†	Wheel, Deck 5.0 x 1.38
29	736-0119	Washer, Lock, 5/16
30	736-0270	Washer, Bell, .265 x .75 x .062
31	783-04740	Deck Engagement Cable Bracket
32	736-0267	Washer, Flat, .385 x .87 x .06
33	736-0225	Washer, Lock, 5/8, Internal Tooth
34	736-0187	Washer, Flat, .64 x 1.24 x .06
35	738-04166	Spacer, Shoulder, .5000 x .1475
36	738-04146	Plug, Screw, M16 x 1.5
37	738-04162A	Spacer, Shoulder, .8840 x .190
38	742-0616A	Blade, 21.23", Star 3-in-1
39	731-2363†	Mulch Plug
40	747-04379A	Control Rod, Brake
41	747-04269A	Deck Rod, Front Adjustable
42	748-04069	Pivot Cup, Deck Lift
43	750-0566A	Spacer, .260 x .372 x 1.030
44	754-04060B	Belt, V-Type
45	756-04129	Idler Pulley, 4.25" Dia.
46	712-3087†	Wing Nut, 1/4-20
47	783-04327A	Cover, Belt, 6.00 Dia.
48	750-04446	Spacr, 3/8 ID x .68 OD x 1.46 Lg.
49	710-0347	Screw, 3/8-16 x 1.75
50	731-1032B	Chute Assembly, Discharge
51	712-0229	Nut, Push, 3/8
52	710-0599†	Screw, 1/4-20, 0.500
53	783-1146A†	Deck Skirt
54	721-04041†	Water Nozzle Adapt

† If Equipped


IMPORTANT

For a proper working machine,
use Factory Approved Parts.

V-belts are designed to
engage and disengage safely.
A substitute (non OEM) V-belt
can be dangerous by not
disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 760-779 (46" Deck)

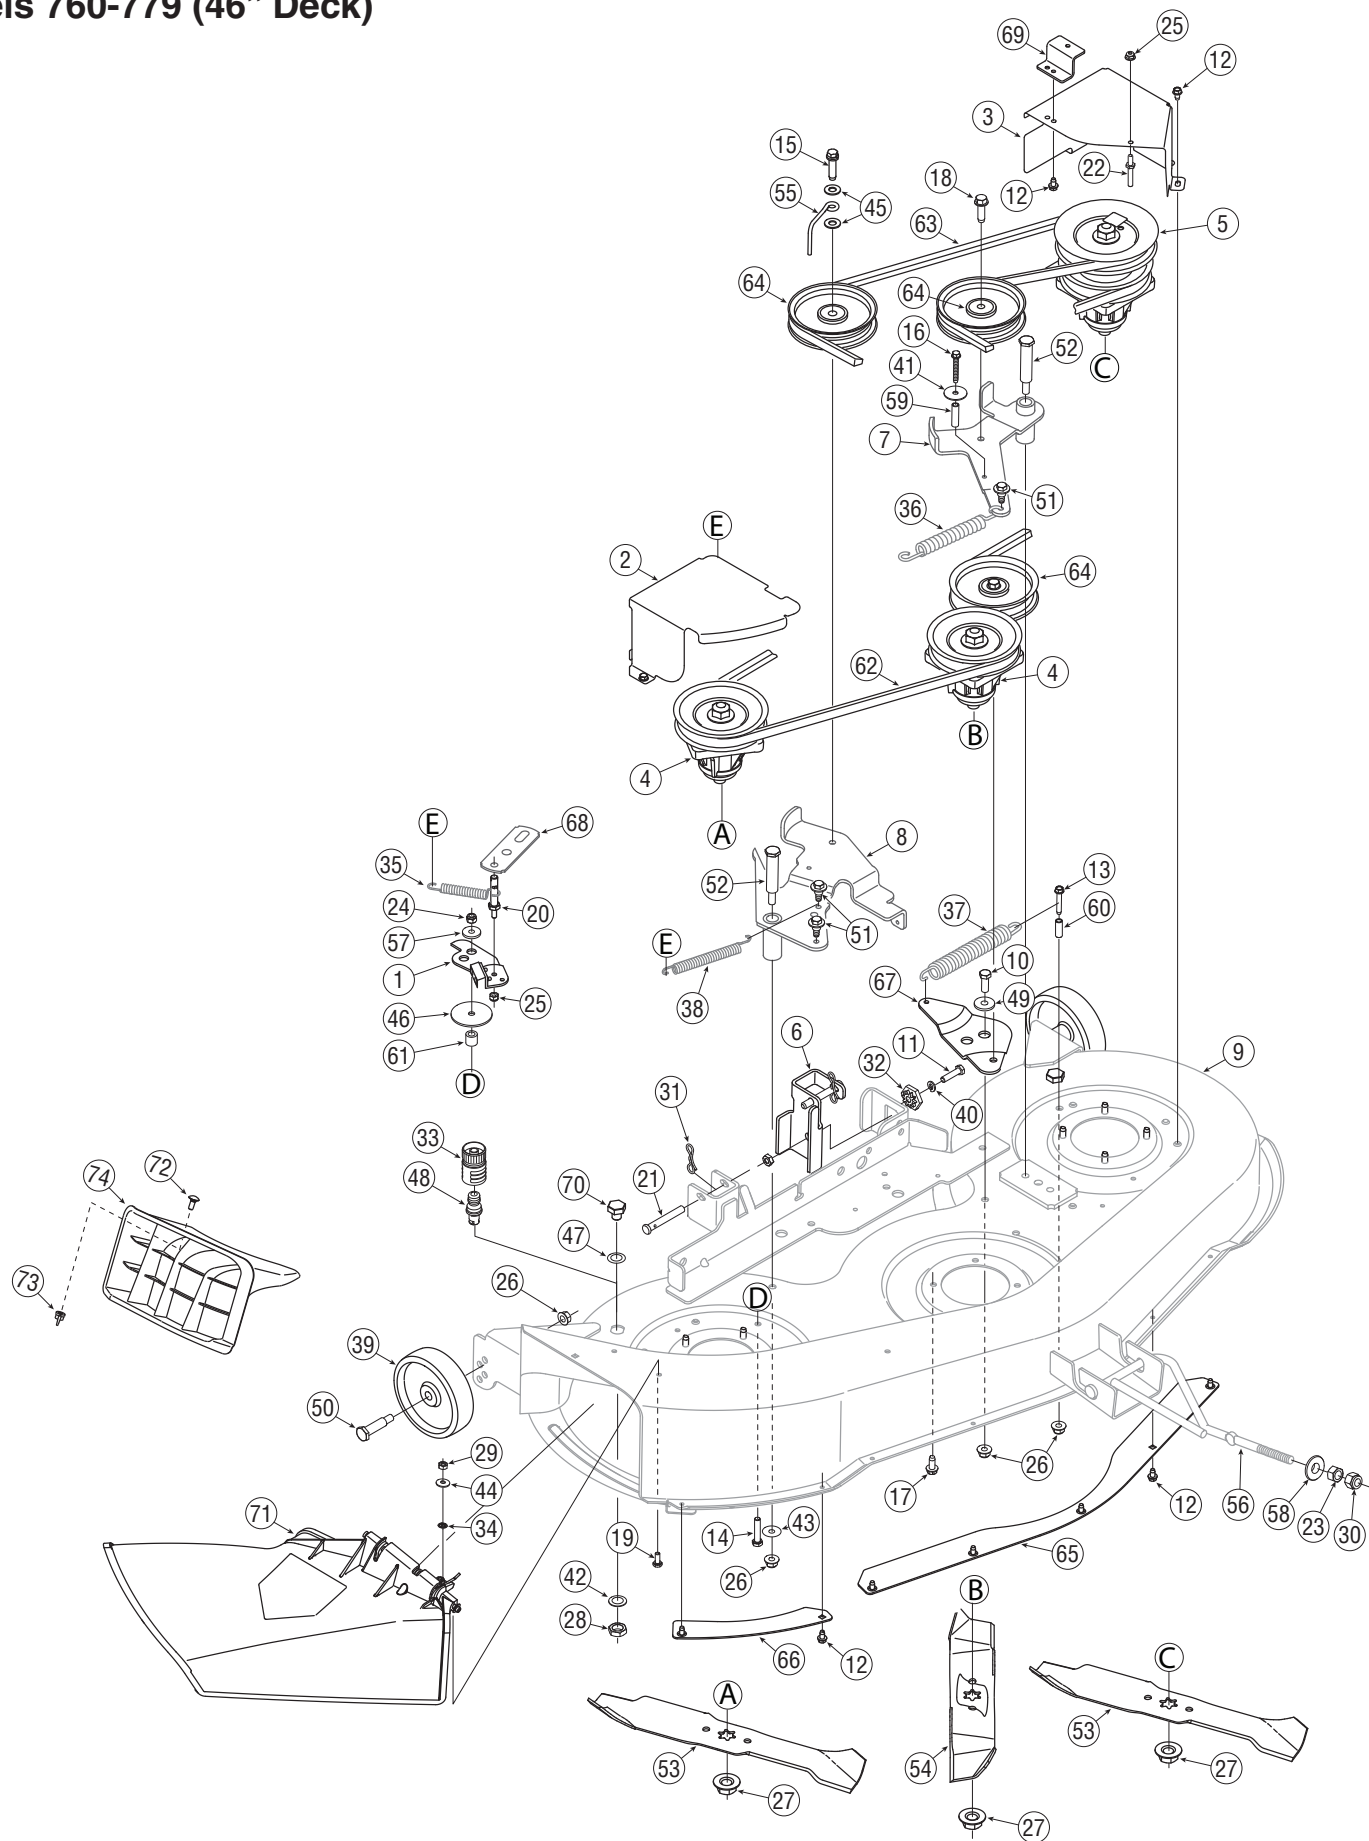











Ref. No.	Part No.	Description
1	17116	Deck Brake Assembly
2	17258E	Deck Belt Cover RH
3	783-1348D	Deck Belt Cover LH
4	618-0240A	Spindle Assembly
5	618-04134B	Double Pulley Spindle Assy.
6	683-0254B	Deck Hanger Bracket Assy.
7	683-04250A	Idler Bracket Assembly LH
8	683-04251A	Idler Bracket Assembly RH
9	683-04306	Deck Assembly
10	710-0514	Hex Screw, 3/8-16 x 1.00
11	710-0528	Hex Screw, 5/16-18 x 1.25
12	710-0599	Screw, 1/4-20 x .50
13	710-0778	Screw, 1/4-20 x 1.50
14	710-0805	Hex Screw, 5/16-18 x 1.50
15	710-1007	Sems Screw, 3/8-16 x 1.50
16	710-1026	Screw, 1/4-20 x 1.75
17	710-1260A	Screw, 5/16-18, .750
18	710-1315	Screw, 3/8-16, x 1.25
19	710-3015	Screw, 1/4-20 x .75
20	711-04636	Pin, 1/4-20: 3/8 x 2.685
21	711-04669	Clevis Pin, 3/8 dia. x 2.75
22	711-0993	Belt Guard Pin, 1/4 x 1.43 lg.
23	712-0206	Hex Nut, 1/2-13
24	712-04063	Flange Lock Nut, 5/16-18
25	712-04064	Flange Lock Nut, 1/4-20
26	712-04065	Flange Lock Nut, 3/8-16
27	712-0417A	Flange Nut, 5/8-18
28	712-0641	Hex Nut, M16-1.5
29	712-3006	Hex Nut, 1/4-20
30	712-3083	Hex Lock Nut, 1/2-13
31	714-04043	Bow-Tie Cotter Pin
32	717-04074	Deck Adjustment Gear
33	721-04041 †	Water Nozzle Adapter
34	726-0233	Push Nut, .25 ID x .50 OD
35	732-0429A	Extension Spring, .50 x 3.97 Lg.
36	732-04400	Extension Spring, .75 x 6.835 Lg.
37	732-0594A	Extension Spring, .91 x 7.33 Lg.

Ref. No.	Part No.	Description
38	732-0814	Extension Spring, .56 x 5.52 lg.
39	734-0973	Deck Wheel 5.0 x 1.38
40	736-0119	Lock Washer, 5/16
41	736-0211	Flat Washer, .285 x 1.25 x .06
42	736-0225	Lock Washer, 5/8 Int. Tooth
43	736-0258	Flat Washer, .385 x 1.0 x .135
44	736-0270	Bell Washer, .265 x .75 x .062
45	736-0300	Flat Washer, .406 x .875 x .059
46	736-0418A	Flat Washer, .406 x .875 x .059
47	736-0187	Flat Washer, .64 x 1.24 x .06
48	737-04003C †	Deck Water Nozzle
49	738-0347	Shoulder Spacer, .625 ID x .169
50	738-0373	Shoulder Bolt .496 x 1.525: 3/8-16
51	738-04091	Shoulder Screw .43 x .29:5/16-18
52	738-04216A	Shoulder Bolt .625 x 2.515: 3/8-16
53	742-0611A	Blade, 3 in 1 star, 16.28" Lg.
54	742-0612A	Blade, 3 in 1 star, 14.88" Lg.
55	747-04530	Belt Keeper Rod
56	747-04645	Front Deck Adjustment Rod
57	748-0234	Shoulder Spacer
58	748-04069	Deck Lift Pivot Cup
59	750-04456	Spacer, .260 x .372 x 1.420 Lg.
60	750-0566A	Spacer, .260 x .372 x 1.030 Lg.
61	750-1320	Spacer, .375 x .63 x .595 Lg.
62	754-0349	V-Belt, 79.10 Lg.
63	754-04142	V-Belt, 91.4 Lg.
64	756-04129	Idler Pulley, 4.25" dia.
65	783-0141	Center Deck Skirt
66	783-0142	RH Deck Skirt
67	783-04641A	Idler Bracket
68	783-05321	Brake Bracket
69	783-05360	Deck Stop Bracket
70	738-04146	Bolt Plug, M16 x 1.5
71	731-1032B	Discharge Chute
72	710-0134 †	Carriage Screw, 1/4-20 x .62
73	712-3087 †	Wing Nut, 1/4-20
74	731-05264 †	Mulch Plug, 46" Deck

† If Equipped

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 760-779

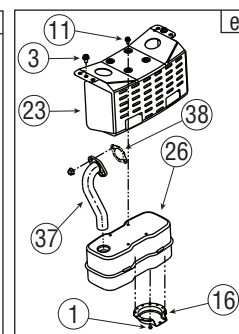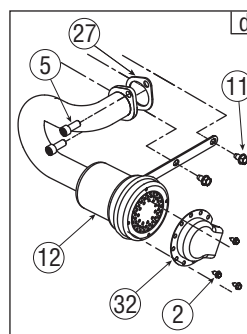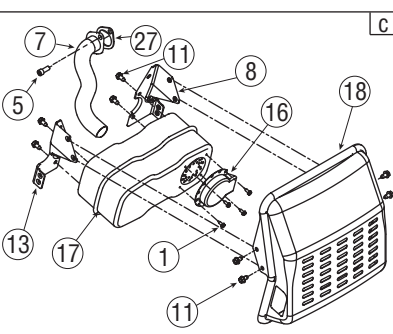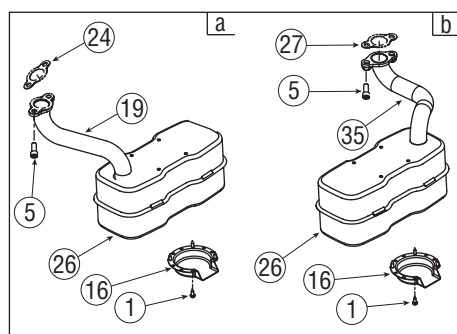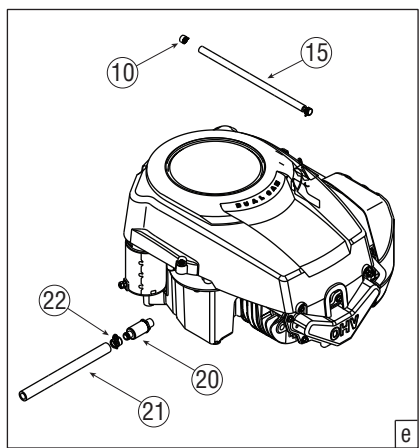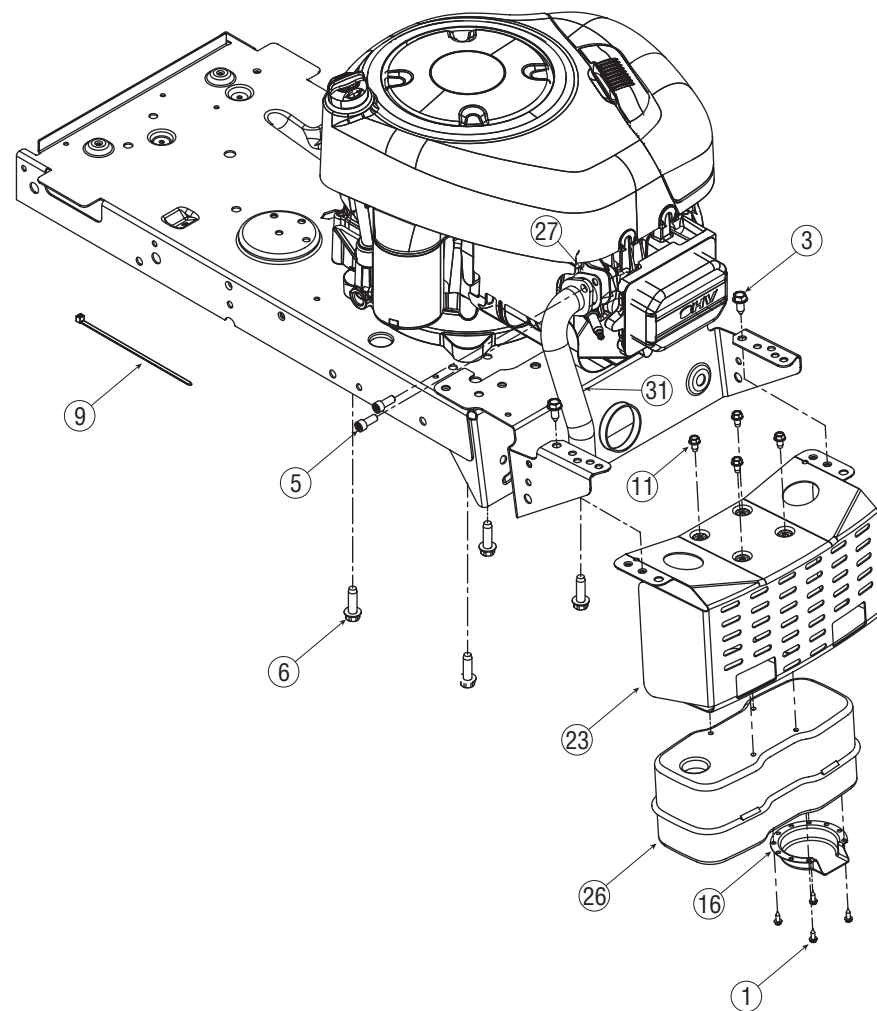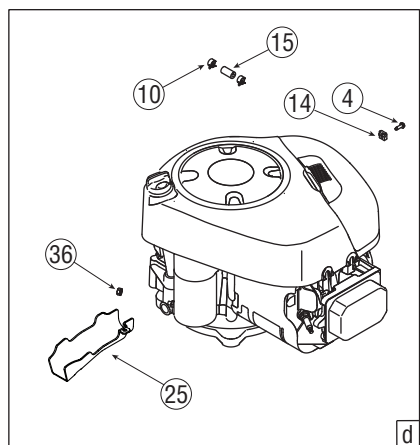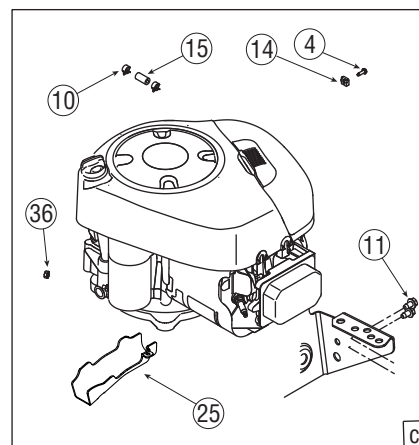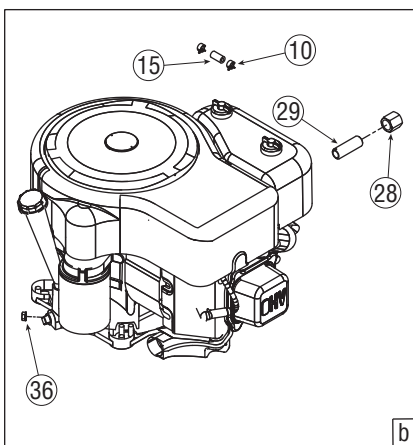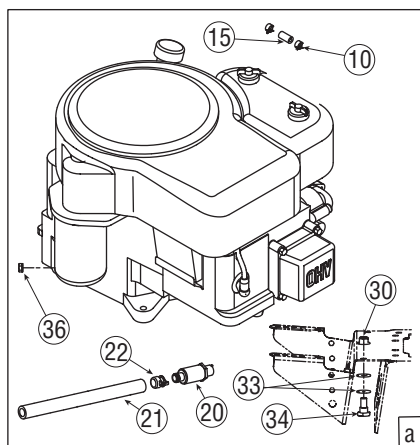

Ref. No.	Part No.	Description
1	710-0227	Screw, #8-18 x .50
2	710-1502	Screw, #8-18 x .375
3	710-0604A	Self-tapping Screw, 5/16-18, .625
4	710-1237	Screw, #10-32, .625
5	710-1314A	Socket Cap Screw, 5/16-18, .625
6	710-1315	Self-tapping Screw, 3/8-16, 1.25
7	751-10013	Exhaust Pipe
8	783-04573	LH Muffler Bracket
9	725-0157	Cable Tie, 7.4"
10	726-0205	Hose Clamp, .490
11	710-0599	Screw, 1/4-20, 0.500
12	751-9986A	Muffler, Bug
13	783-04574	RH Muffler Bracket
14	751B221535	Casing Clamp
15	751-10349	Fuel Line Hose
16	751-0564B	Muffler Deflector
17	751-10162	Muffler, Single Inlet
18	783-04576	Muffler Shield
19	751-0620A	Exhaust Pipe

Ref. No.	Part No.	Description
20	751-3140	Oil Drain Valve
21	751-3141	Oil Drain Hose
22	751-3142	Oil Drain Cap
23	783-0615D	Muffler Heat Shield
24	721-0348	Exhaust Gasket
25	731-05628	Oil Drain Sleeve
26	751-0617B	Muffer, Single Inlet
27	721-0208	Exhaust Gasket
28	737-0143	Oil Drain Cap, 3/8-18
29	737-0199	Oil Drain Pipe, 3/8-16, 2.0
30	712-04065	Flange Lock Nut, 3/8-16
31	751-0619A	Exhaust Pipe
32	751B222261	Muffler Deflector
33	736-0300	Flat Washer, .406 x .875 x .059
34	738-0143	Shldr Screw, .498 x .340 x 3/8-16
35	751-0622A	Exhaust Pipe
36	712-0271	Hex Sems Nut, 1/4-20
37	751-10047	Kohler Courage Exhaust Pipe
38	KH-20-041-12-S	Gasket, Kohler Courage

- (a) Tractor models with Tecumseh Single-cylinder Engine (16 HP - 18 HP)
- (b) Tractor models with Tecumseh Single-cylinder Engine (12 HP - 15 HP)
- (c) Tractor models with Briggs and Stratton OHV Single-cylinder Engine
- (d) Tractor models with Briggs and Stratton OHV Single-cylinder Engine (canister muffler)
- (e) Tractor models with Kohler Single-cylinder Engine (16 HP - 20 HP)

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.