



PARTS LIST FOR MODELS LTX-1842 (P609G) & LTX-2146 (T609H)

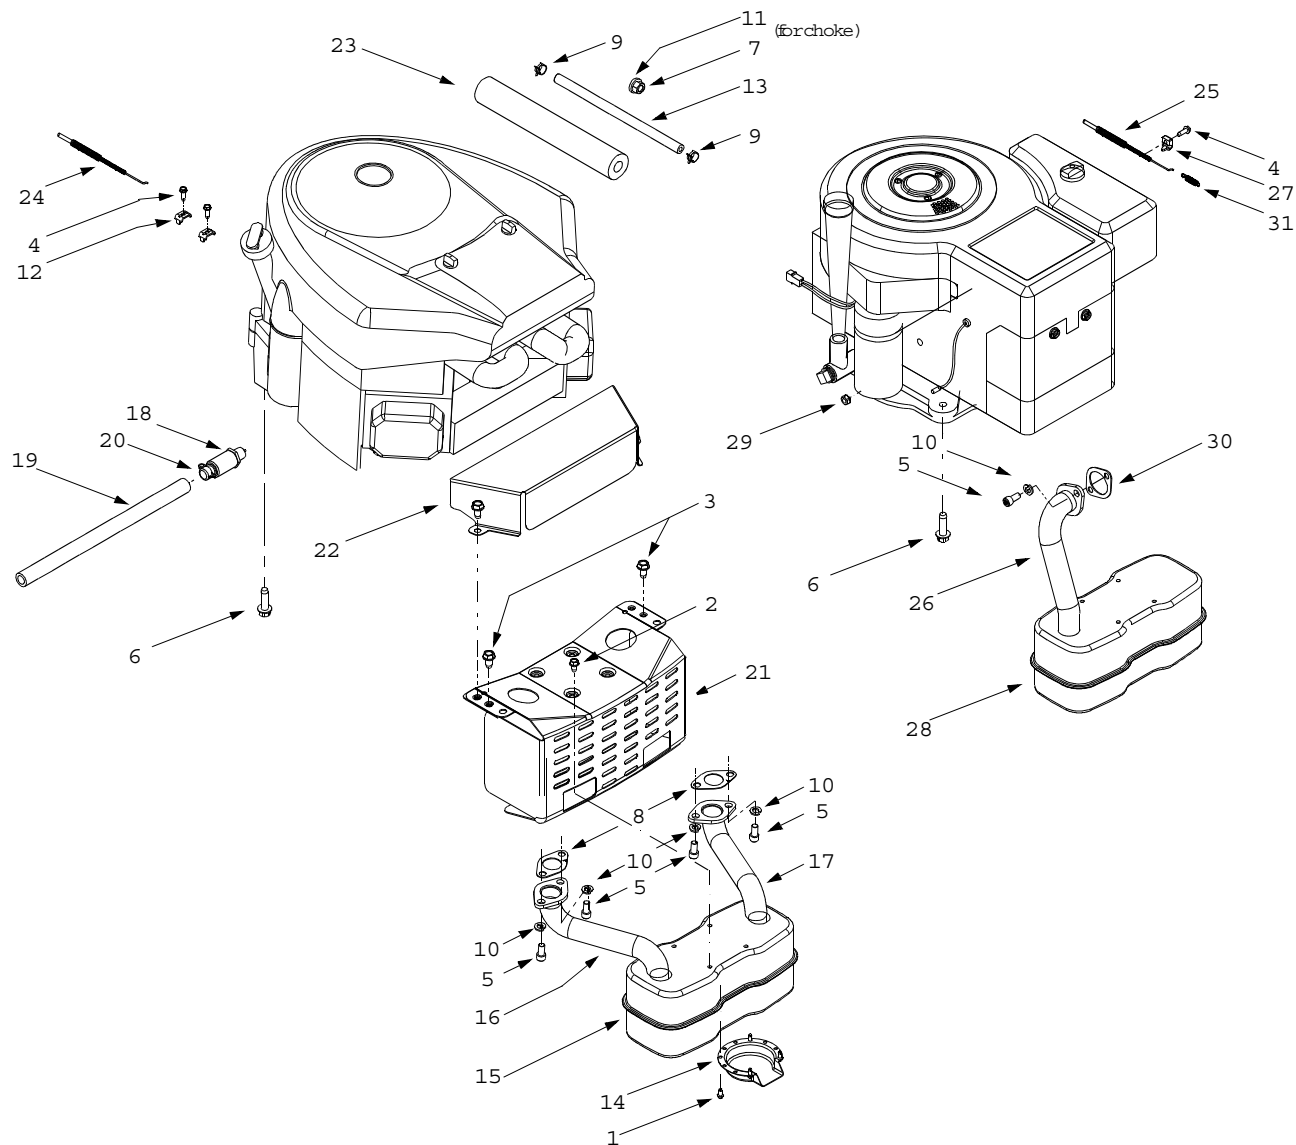

NOTE: Engine accessory parts are applicable to all models except where otherwise noted.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Self-tapping Screw, #8-18 x .5	16	751-0650	RH Exhaust Pipe (Model LTX-2146)
2	710-0599	Self-tapping Screw, 1/4-20 x .5	17	751-0651	LH Exhaust Pipe (Model LTX-2146)
3	710-0604A	Self-tapping Screw, 5/16-18 x .625	18	751-3140	Oil Drain Valve
4	710-1237	Screw, #10-32 x .625	19	751-3141	Oil Drain Hose
5	710-1314A	Socket Cap Screw, 5/16-18 x .625	20	751-3142	Oil Drain Cap
6	710-1315	Self-tapping Screw, 3/8-16 x 1.25	21	783-0615B	Muffler Heat Shield
7	712-3017	Hex Nut, 3/8-16 (Model LTX-2146)	22	783-0625C	Engine Heat Shield (Model LTX-2146)
8	721-0460	Exhaust Gasket (Model LTX-2146)	23	722-0263	Foam (over fuel line) (Model LTX-2146)
9	726-0205	Hose Clamp	24	746-1086	Throttle Cable (Model LTX-2146)
10	736-0119	Lock Washer, 5/16	25	746-1084	Throttle Cable (Model LTX-1842)
11	736-0300	Flat Washer (Model LTX-2146)	26	751-0619	Exhaust Pipe (Model LTX-1842)
12	751B221535	Casing Clamp (Model LTX-2146)	27	751B213146	Casing Clamp (Model LTX-1842)
13	751-0535	Fuel Line Hose	28	751-0617	Muffler, Single Inlet (Model LTX-1842)
14	751-0564	Muffler Deflector	29	712-0271	Hex Sems Nut, 1/4-20 (for starter cable)
15	751-0616	Muffler, Twin Inlet (Model LTX-2146)	30	721-0208	Exhaust Gasket (Model LTX-1842)


Models LTX-1842 & LTX-2146

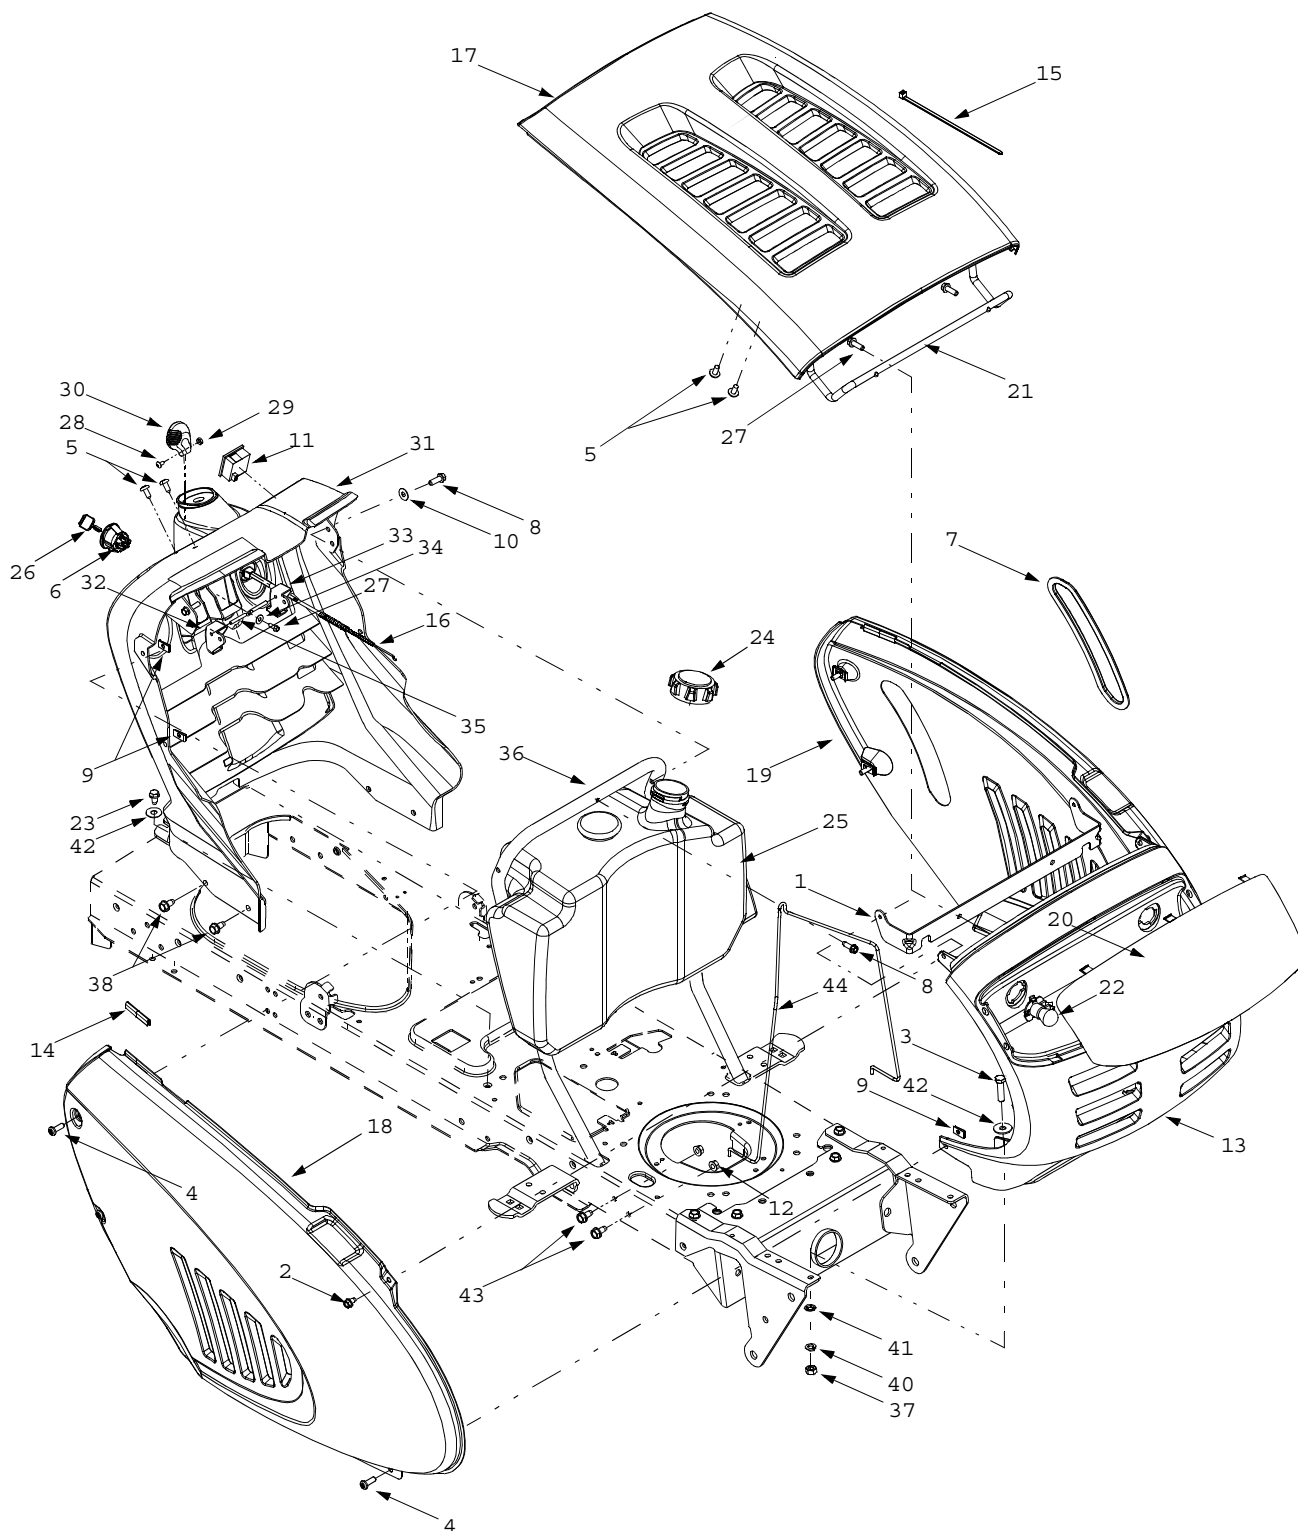

Models LTX-1842 & LTX-2146

REF. NO.	PART NO.	DESCRIPTION
1	783-1346	Grill Support Bracket (9-style)
2	710-0599	Self-tapping Screw, 1/4-20 x .5
3	710-0528	Hex Cap Screw, 5/16-18 x 1.25
4	710-0924	Phillips Pan Screw, 1/4-20 x .75
5	710-1017	Truss Phillips Screw, 1/4-20 x .625
6	725-1741	Ignition Switch
7	735-04019	Side Panel Seal
8	710-0642	Self-tapping Screw, 1/4-20 x .75
9	712-0292	U-type Speed Nut, 1/4-20
10	736-0270	Bell Washer, 265 x .75 x .062
11	725-04036	Systems Indicator Monitor
12	712-3004A	Hex Nut, 5/16-18
13	731-2119A	Grille (9-style)
14	731-0511	Trim Strip, 4
15	725-0157	Cable Tie, 3/16 x .05 x 7.4
16	746-1085	Choke Knob/Cable (Model LTX-2146)
17	783-0783	Hood (9-style)
18	783-0784	RH Side Panel (9-style)
19	783-04200	LH Side Panel (9-style)
20	731-2637	Headlight Lens (9-style)
21	747-2138	Hood Hinge Rod
22	625-0051	Headlight Assembly
23	710-0726	Self-tapping Screw, 5/16-12 x .75
24	751-0603	Fuel Cap
25	751-3213	Fuel Tank, Three-gallon
26	725-1745	Ignition Key w/ plastic cover
	725-1744	Ignition Key w/o plastic cover
27	710-0895	Self-tapping Screw, 1/4-15 x .75
28	710-3217	Truss Phillips Screw, #8-32 x .375
29	712-0142	Hex Nut, #8-32
30	731-1857	Throttle Control Knob
31	631-04037	Dash Panel Assembly w/ Cargo Net
32	731-04217	Cruise Control Button
33	731-04215	Parking Brake Button
34	736-0142	Flat Washer, 9/32 x 1/2 x 1/16
35	747-1196	Brake/Cruise Pivot Rod
36	749-1087C	Dash Support Tube
37	712-3010	Hex Nut, 5/16-18
38	710-1611B	Self-tapping Screw, 5/16-18 x .75
39	726-3046	Ratchet Clip
40	736-0119	Lock Washer, 5/16
41	726-0201	Speed Nut, .3125
42	736-3078	Flat Washer, 3/4 x 1.0 x .063
43	710-1238	Screw, 5/16-18 x .875 (Grade 5)
44	747-04132	Fuel Tank Support Rod
-	629-0469A	Headlight Wire Harness (Not Shown)
-	629-04050	Tractor Wire Harness (Not Shown)


Models LTX-1842 & LTX-2146

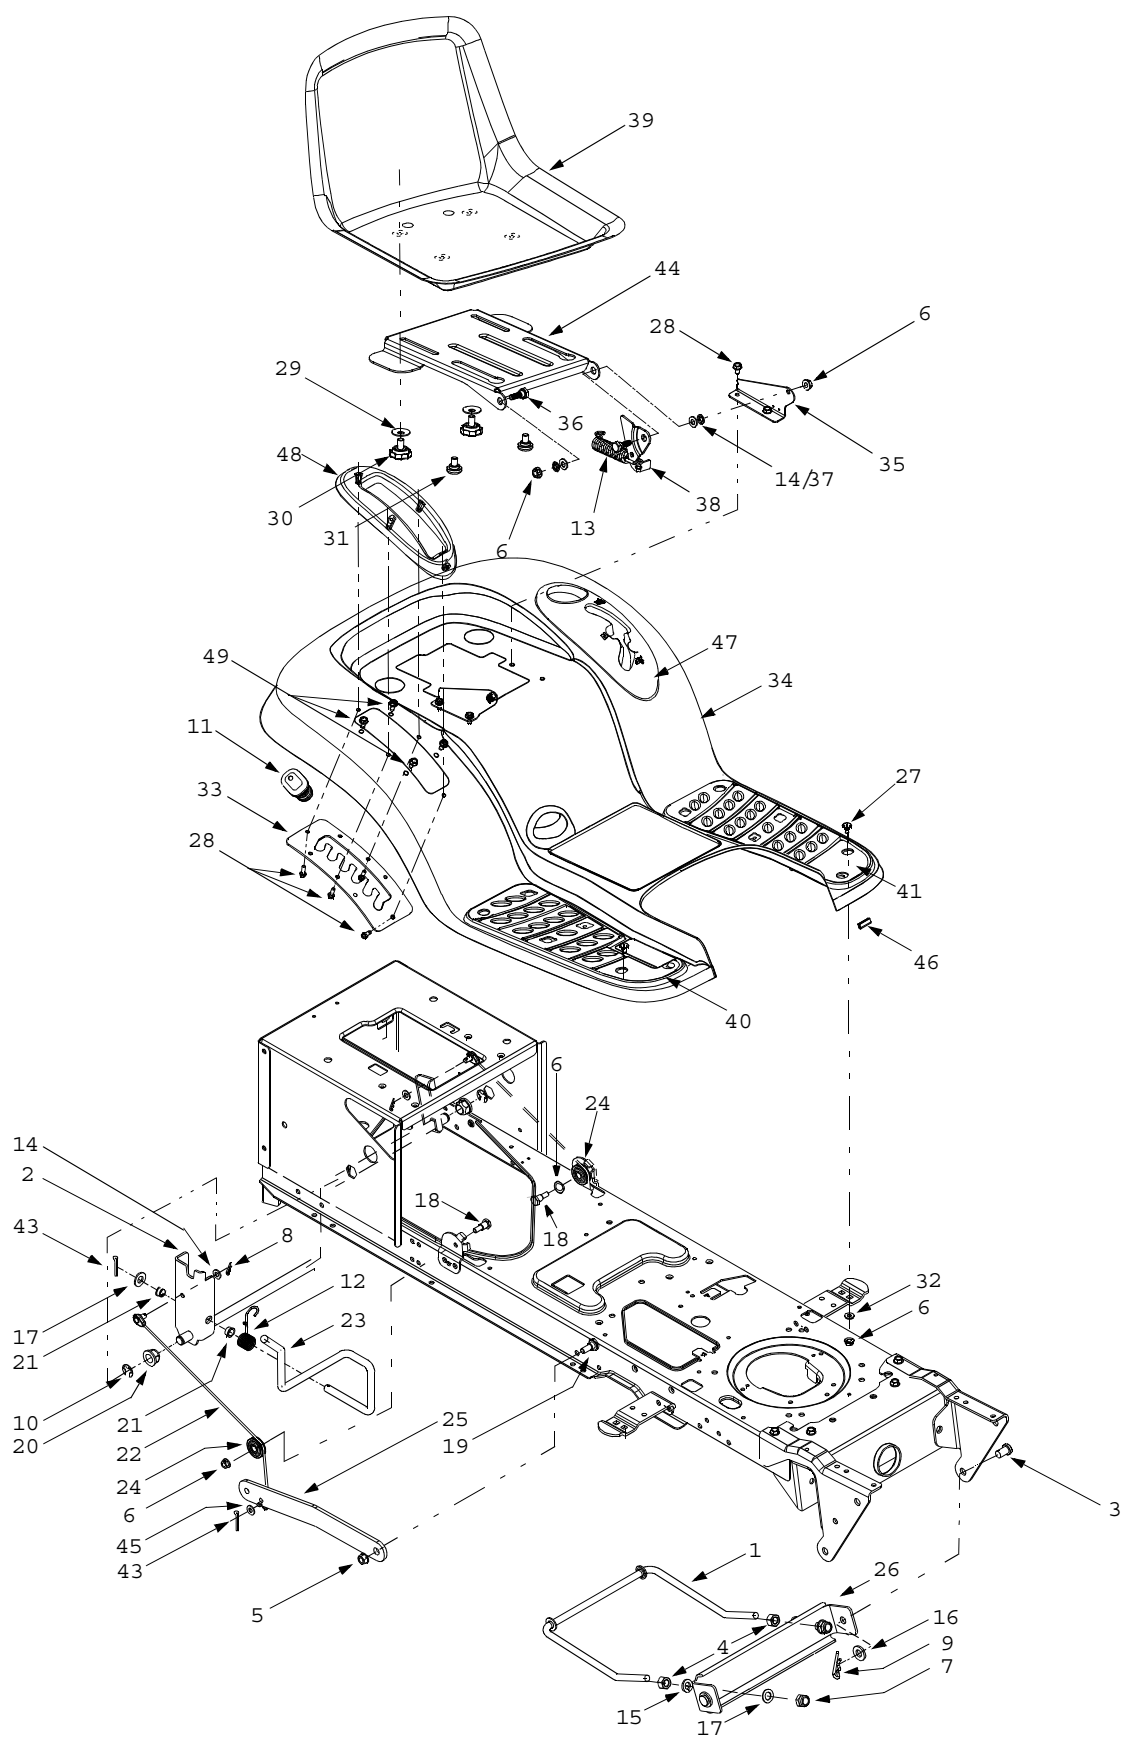

Models LTX-1842 & LTX-2146

REF. NO.	PART NO.	DESCRIPTION
1	747-1130B	Deck Stabilizer Rod
2	683-0197B	Lift Shaft Assembly
3	711-0332	Clevis Pin, 5 x .78
4	712-0206	Hex Nut, 1/2-13
5	712-0431	Flange Lock Nut, 3/8-16
6	712-3004A	Flange Lock Nut, 5/16-18
7	712-3083	Hex Nut, 1/2-13
8	714-0104	Internal Cotter Pin
9	714-0145	Internal Cotter Pin
10	716-0106	E-ring
11	720-0311	Handle Grip
12	732-0874	Torsion Spring
13	732-1184	Extension Spring, .84 x 4.6
14	736-0275	Flat Washer, 5/16
15	736-0921	Lock Washer, 1/2
16	736-3019	Flat Washer, 531 x 1.062 x .134
17	736-3084	Flat Washer, 51 x 1.12 x .06
18	738-0138A	Hex Cap Screw, 5/16-18 x .62
19	738-0143	Shoulder Screw, 3/8-16
20	741-0225	Hex Flange Bearing
21	741-0715	Snap Flange Bearing
22	746-0968	Lift Cable, 16.16 (LTX-1842)
	746-1144	Lift Cable, 15.62 (LTX-2146)
23	747-1111A	Lift Handle
24	756-1154	Roller Pulley
25	783-0678A	Arm Lift
26	783-0720A	Deck Stabilizer Bracket
27	710-0260A	Carriage Bolt, 5/16 x .62
28	710-0604A	Self-tapping Screw, 5/16-18 x .625
29	736-0331	Bell Washer, 390 x 1.13 x .062
30	720-04009	Knob, 3/8-16
31	738-04012	Shoulder Screw
32	736-3078	Flat Washer, 349 x 1.0 x .063
33	783-1010	Lift Adjustment Bracket
34	783-0840A	Fender
35	783-1489	Seat Mounting Bracket
36	738-0296	Shoulder Screw
37	726-0201	Speed Clip
38	783-0209A	Seat Lift Bracket
39	757-04011	Medium Back Seat, Yellow
40	735-0672	RH Foot Pad, Rubber
41	735-0673	LH Foot Pad, Rubber
42	726-3046	Foot Pad Clips
43	714-0111	Cotter Pin
44	783-04081	Seat Pivot Bracket
45	736-0204	Flat Washer, 344 x .62
46	731-0511	Trim Strip
47	731-1990	Lift Lever Cover
48	731-2104B	Shift Lever Cover w/Cup Holder
49	710-0895	Self-tapping Screw, 1/4-15 x .75

Models LTX-1842 & LTX-2146

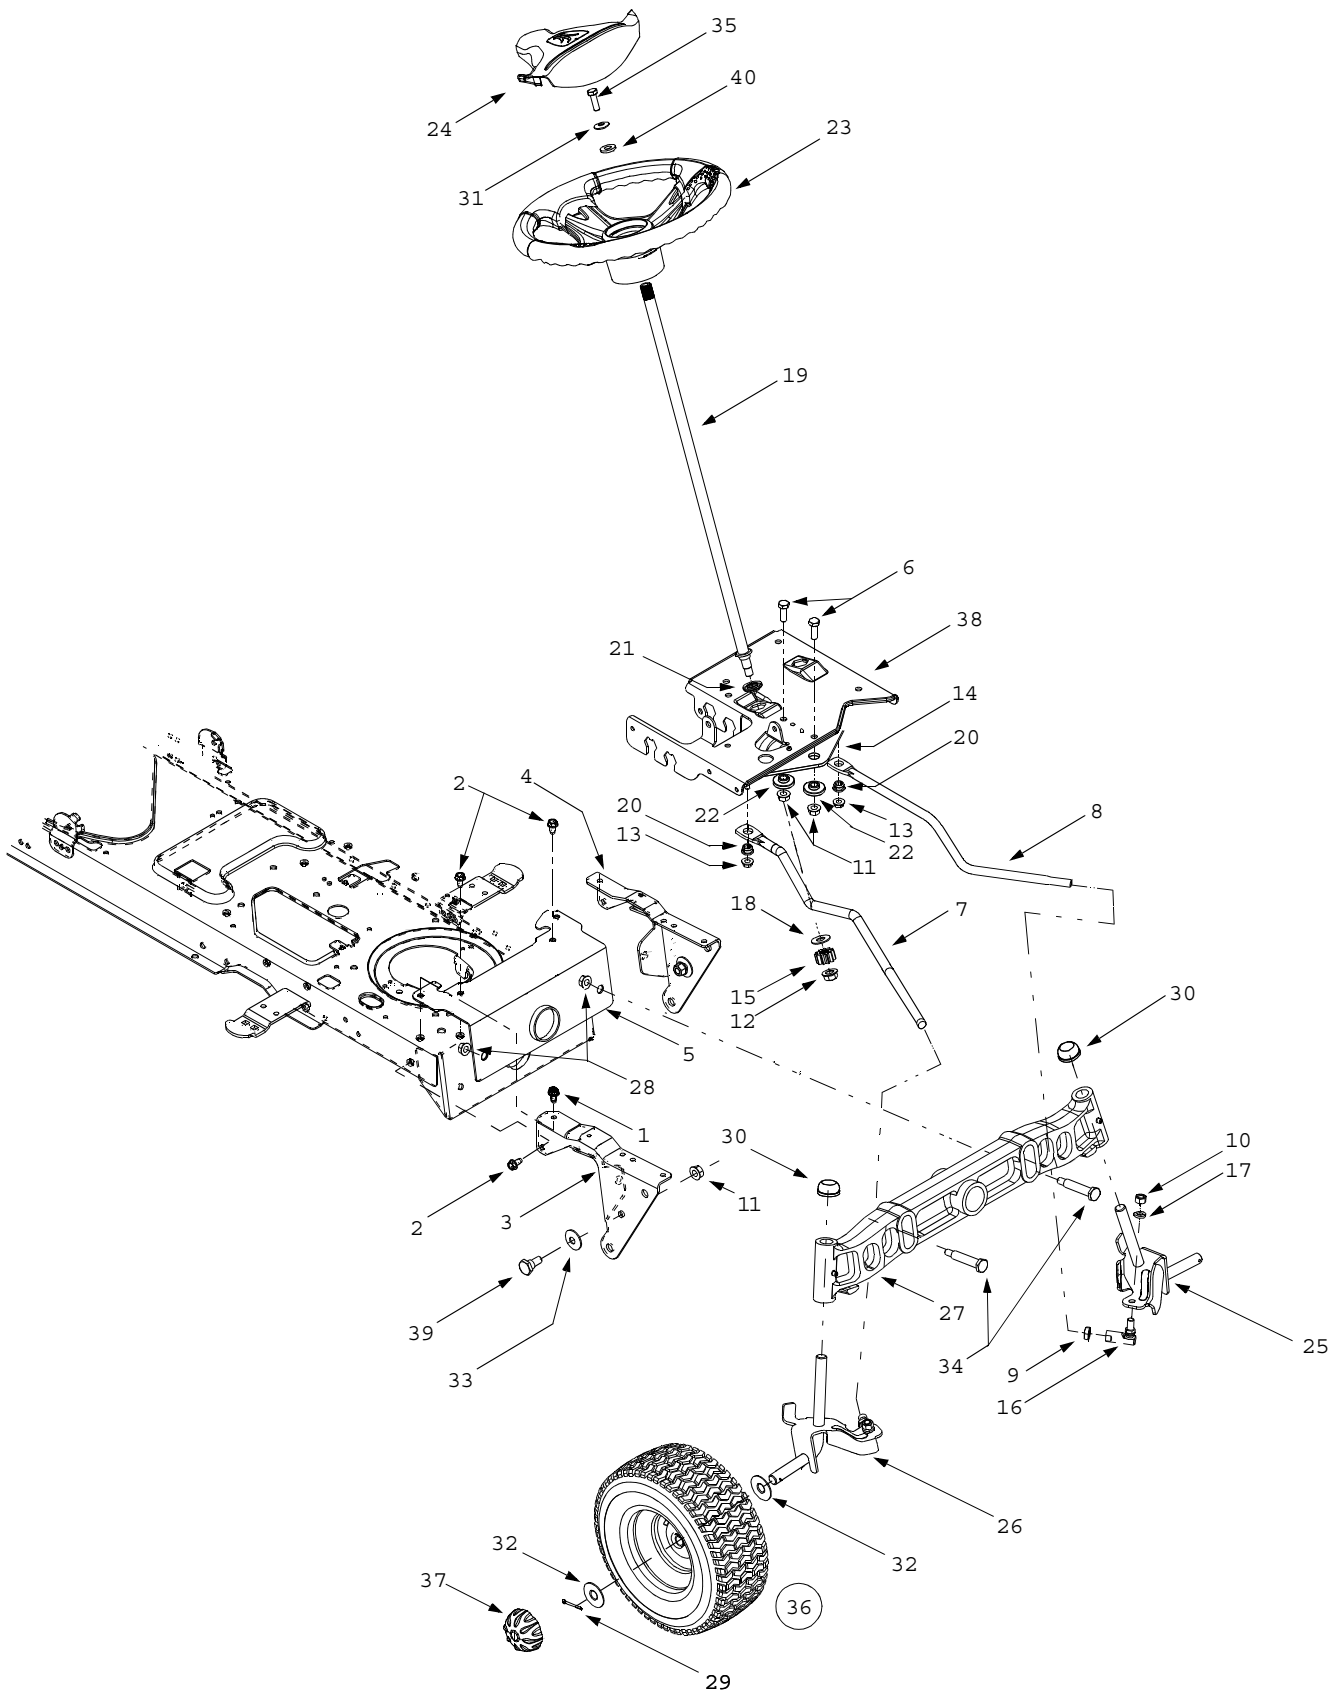

Models LTX-1842 & LTX-2146

REF. NO.	PART NO.	DESCRIPTION
1	710-1260A	Selftapping Screw, 5/16-18 x .75
2	710-0604A	Selftapping Screw, 16-18 x .625
3	783-0726B	RH PivotSupportBracket
4	783-0727A	LH PivotSupportBracket
5	783-0728	PivotBarBracket
6	710-0514	Hex Cap Screw, 3/8-16 x 1 (Grade 5)
7	711-1408	RH Drag Link
8	711-1409A	LH Drag Link
9	712-0240	Jam Nut, 7/16-20 (Grade 2)
10	712-0241	Hex Nut, 3/8-24 (Grade 2)
11	712-0431	Flange Lock Nut, 3/8-16
12	712-0459	Flange Lock Nut, 7/16-20
13	712-3004A	Flange Lock Nut, 5/16-18
14	717-1550D	Steering Gear, 11/90 Ratio
15	717-1554	Steering Pinion Gear
16	723-0448A	BallJoint, 7/16-20
17	736-0169	Lock Washer, 3/8
18	736-3084	Flat Washer, 51 x 1.12 x .06
19	738-1001A	Steering Shaft, .625 OD x 24.4
20	741-0475	Plastic Bushing, 38 ID
21	741-0656	Hex Flange Bearing, 5/8
22	738-0372B	Shoulder Spacer, 38 ID
23	631-04008	Steering Wheel, Soft Grip, Three Spoke
24	731-04066	Steering Wheel Cover
25	638-0019A	LH Axle Assembly, .625 Dia. (Model LTX-1842)
	638-0021	LH Axle Assembly, .625 / .750 Dia. (Model LTX-2146)
26	638-0020A	RH Axle Assembly, .625 Dia. (Model LTX-1842)
	638-0022	RH Axle Assembly, .625 / .750 Dia. (Model LTX-2146)
27	719-0399B	Cast Iron Pivot Bar w/ Fittings, .625 (Model LTX-1842)
	719-0525B	Cast Iron Pivot Bar w/ Fittings, .75 (Model LTX-2146)
28	712-0431	Flange Lock Nut, 3/8-16
29	714-0162	Cotter Pin
30	726-0214	Push Cap, .625 (Model LTX-1842)
	726-0341	Push Cap, .750 (Model LTX-2146)
31	736-0242	Bell Washer, 34 x .872
32	736-0285	Flat Washer, .635 x 1.589 x .06
33	736-0331	Bell Washer, .39 x 1.13 x .062
34	738-1011	Shoulder Screw, 5 x 2.2, 3/8-16
35	710-0643	Hex Bolt, 5/16-18 X 1
36	634-0105A	Wheel Assembly Complete, 15 x 6 x 6
-	634-0172	Rim Only
-	734-0255	Air Valve (Not Shown)
-	734-1731	Tire Only, Square Shoulder
-	741-0487A	Flange Bearing (Not Shown)
-	741-0706	Flange Bearing w/ Fitting (Not Shown)
37	734-2290A	Hub Cap
38	783-0653F	Steering Support Bracket
39	738-0143	Shoulder Screw, 3/8-16
40	736-3004	Flat Washer, 406 x .875 x .105

Models LTX-1842 & LTX-2146

This technical diagram illustrates the assembly of a machine chassis and engine. The chassis is shown in an exploded view, revealing the internal frame, suspension, and drive components. The engine, located at the front, is shown with its various parts, including the cylinder, crankshaft, and cooling system. The diagram includes numerous numbered callouts (1-82) pointing to specific components, such as bolts, nuts, washers, and structural parts. A warning box in the upper right corner emphasizes the importance of using factory-approved parts, particularly V-belts, for safe operation. The overall layout is a detailed exploded view showing the relationship between various parts of the machine.

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Models LTX-1842 & LTX-2146


This diagram illustrates the assembly of a machine chassis, showing the relationship between various components. The components are numbered 1 through 82, indicating the order of assembly. The diagram includes the main frame, engine, transmission, drive shafts, axles, wheels, and various fasteners. A warning box is present in the upper right corner.

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Models LTX-1842 & LTX-2146

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	783-1015	Shift Lever Support	46	754-0468	Upper Drive Belt
2	17840	Transaxle Mounting Bracket	47	756-0981A	Flat Idler, 2.75 OD
3	618-0551A	Single-speed Transmission Assembly	48	783-1016B	Speed Control Rod Bracket
4	631-0009A	Shifter Knob	49	783-0667B	Transmission Torque Bracket
5	647-0045	Shift Lever	50	783-0669	Idler Bracket
6	656-0048	Variable-speed Pulley Assembly	51	736-0430	Flat Washer, 350 x 1.59 x .062
7	656-0051A	Transmission Pulley, 8.5 x 5-36	52	647-0031	Brake Control Assembly
8	683-0251	Double-Idler Bracket	53	647-0032	Speed Control Assembly
9	710-0176	Hex Cap Screw, 5/16-18 x 2.75	54	683-0266	Drive Pedal Assembly
10	710-0227	Self-tapping Screw, #8-18 x .5	55	714-0470	Cotter Pin, 1/8 x 1.25
11	710-0347	Hex Cap Screw, 3/8-16 x 1.75	56	711-0736	Female, 1/4-20
12	736-0272	Flat Washer, .51 x 1.0 x .060	57	711-1363	Pin, 3/8-16 x 2.43
13	710-0604A	Self-tapping Screw, 5/16-18 x .625	58	714-0104	Cotter Pin
14	710-0642	Self-tapping Screw, 1/4-20 x .75	59	732-0437	Compression Spring, .34 OD x 1.0
15	710-3011	Hex Cap Screw, 3/8-16 x 2.25	60	732-0955	Extension Spring, .50 OD x 1.41
16	711-0677	Female, 5/16-18	61	735-0662	Drive Pedal Pad
17	712-0241	Hex Nut, 3/8-24	62	735-3049	Brake Pedal Pad
18	712-0378	Hex Nut, 7/16-20	63	736-0142	Flat Washer, 281 x .5 x .063
19	712-0431	Flange Lock Nut, 3/8-16	64	736-0187	Flat Washer, .64 x 1.24 x .06
20	712-3017	Hex Nut, 3/8-16	65	736-0204	Flat Washer, .344 x .062 x .03
21	712-3004A	Flange Lock Nut, 5/16-18	66	738-0155	Shoulder Screw, .437 x 1.62
22	712-3008	Jam Nut, 3/8-16	67	738-0507B	Shoulder Screw, .5 x .434
23	714-0111	Cotter Pin	68	741-0225	Hex Flange Bearing
24	714-0209	Internal Cotter Pin	69	741-3065A	Split Hex Flange Bearing
25	723-3018	Ball Joint	70	747-1137	Cruise Control Rod
26	725-1644	Short Spring Switch	71	747-1138	Brake Lock Control Rod
27	726-0320	Insulator Nut Plate	72	748-0413	Cruise Latch
28	732-0384	Extension Spring, .62 Dia. x 6.12	73	736-0275	Flat Washer, .344 x .688 x .065
29	732-0525	Compression Spring Clip	74	783-0653F	Steering Support Bracket
30	732-0716	Extension Spring, .59 OD x 4	75	783-0732	Drive Lockout Bracket
31	732-0963	Extension Spring, .50 Dia. x 6.37 (hooks to flange, 783-0650, in frame)	76	783-0773	Brake Pedal
32	736-0105	Bell Washer, .401 x .87 x .063	77	710-1260A	Self-tapping Screw, 5/16-18 x .75
33	736-0140	Flat Washer, .385 x .62 x .063	78	683-0304C	Lower Frame Assembly
34	736-0169	Lock Washer, 3/8	79	783-1031A	Hitch Plate
35	736-3008	Flat Washer, .344 x .750 x .120	80	736-0242	Bell Washer, .34 x .872
36	736-0407	Bell Washer, .45 x 1.0 x .602	81	710-0627	Hex Cap Screw, 5/16-24 x .75
37	736-3010	Flat Washer, .407 x .812 x .135	82	634-0104	Wheel Assembly Complete
38	738-0322	Shoulder Screw, .625 x .217		634-0070	Rin Assembly Only
39	747-1122	Brake Rod		734-0255	Air Valve (Not Shown)
40	747-1123A	Belt Guard		734-1730	Tire Only, 20 x 8 x 8, Square Shoulder
41	747-1127	Idler Adjustment Rod, 3/8	83	734-2290A	Deluxe Hub Cap (Ref. 51 Required)
42	747-0047A	Shift Rod	84	710-0809	Self-tapping Screw, 1/4-20 x 1.25
43	711-0736	Adjustment Female, 1/4-20 x 1.0	85	750-0566A	Spacer
44	738-0372A	Shoulder Spacer, .38 ID	86	710-0650	Self-tapping Screw, 5/16-18 x .875
45	754-0467	Lower Drive Belt	87	710-1611B	Self-tapping Screw, 5/16-18 x .75

Models LTX-1842 & LTX-2146

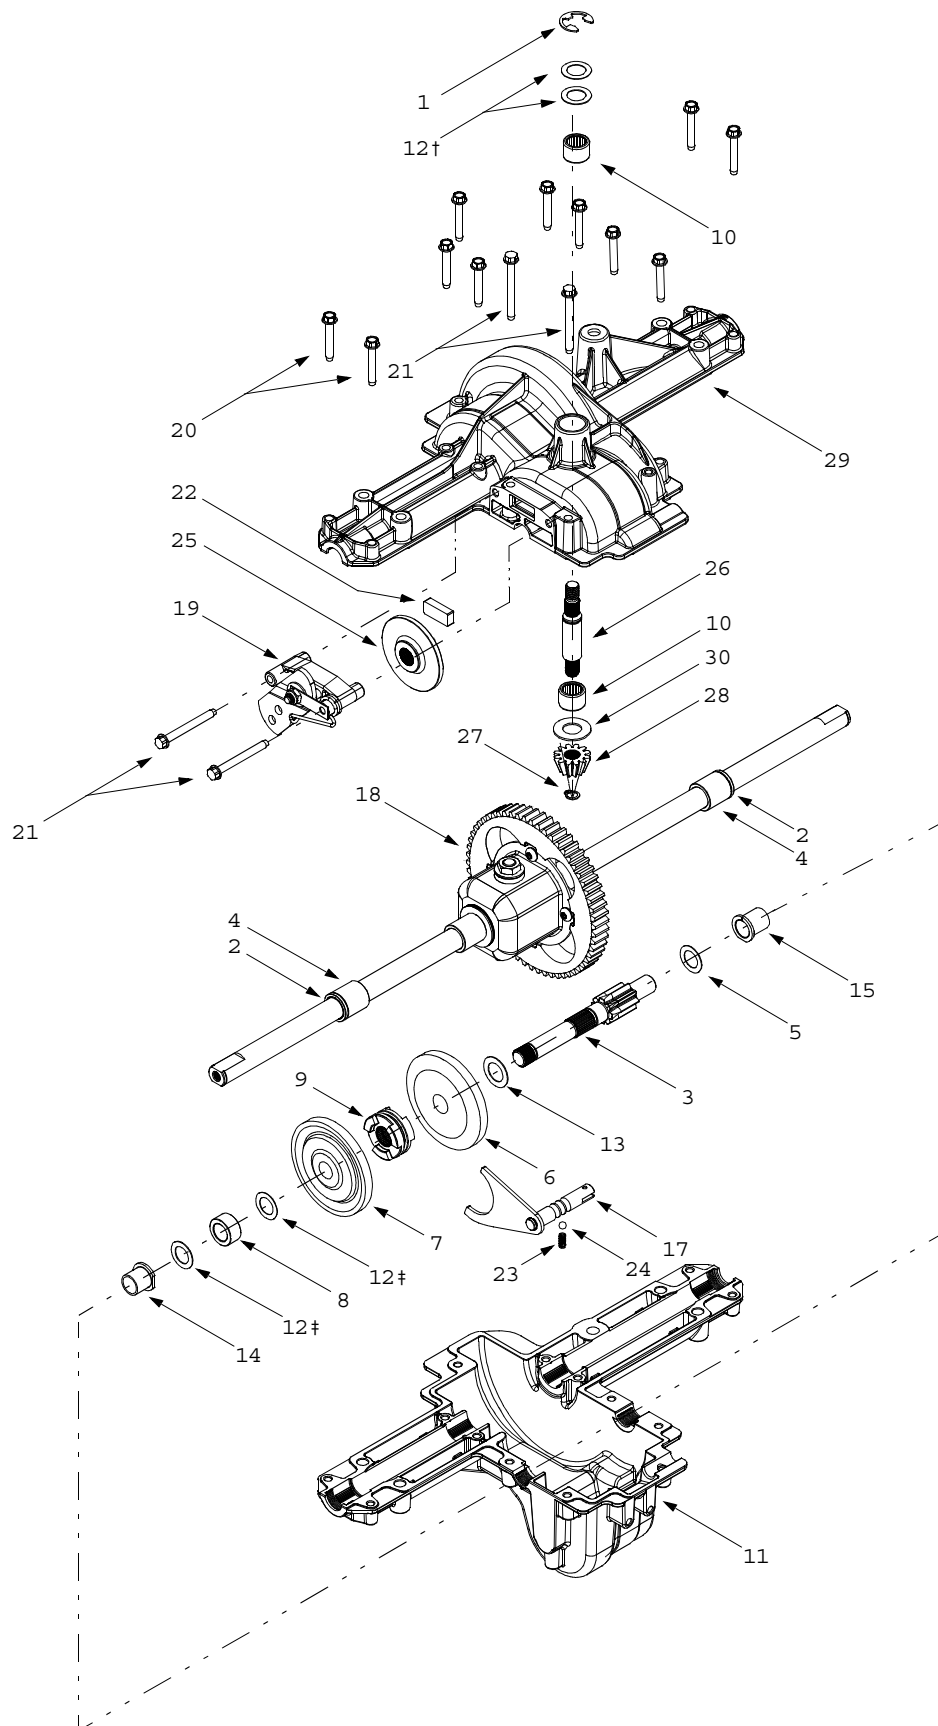


Models LTX-1842 & LTX-2146

REF. NO.	PART NO.	DESCRIPTION
1	716-0231	E-ring, .75
2	721-0338	Seal, .75 x 1.0 x .125
3	711-1431	Drive Shaft
4	741-0340	Sleeve Bearing, .75 x 1.0 x 1.0
5	736-0495	Thrust Washer, 1.0 x .632 x .0
6	717-1362	42-tooth Bevel Gear
7	717-1363	42-tooth Bevel Gear
8	750-1234	Spacer, .633 x 1.0 x .513
9	718-0228	Clutch Collar
10	741-0335	Needle Bearing, .625 x .813 x .495
11	719-0394	Lower Housing
12	736-0336	Flat Washer, 5/8 x 1.0 x .030
	736-0337	Flat Washer, 5/8 x 1.0 x .040
	736-0349	Flat Washer, 5/8 x 1.0 x .020
13	736-0519	Flat Washer, .70 x 1.125 x .031
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
16	750-1238	Spacer, .635 x 1.0 x .27
17	611-0133	Detent Shaft Assembly
18	618-0424	Differential Assembly
19	661-0006	Brake Assembly
20	710-1325	Self-tapping Screw, 1/4-20 x 1.625
21	710-1206	Self-tapping Screw, 1/4-20 x 2.375
22	717-0678	Brake Pad
23	732-0863	Compression Spring
24	741-0862	Detent Ball
25	761-0202	Brake Disc
26	711-1430	Input Shaft
27	716-0108	Retaining Ring, .437
28	717-1464	14-tooth Bevel Pinion
29	719-0580	Upper Housing
30	736-0335	Thrust Washer, .635 x 1.25 x .042

†Use applicable flatwasher in this application allowing .036/.018 in. end-play.

‡Use applicable flatwasher in this application allowing .010/.005 in. end-play.

Models LTX-1842 & LTX-2146

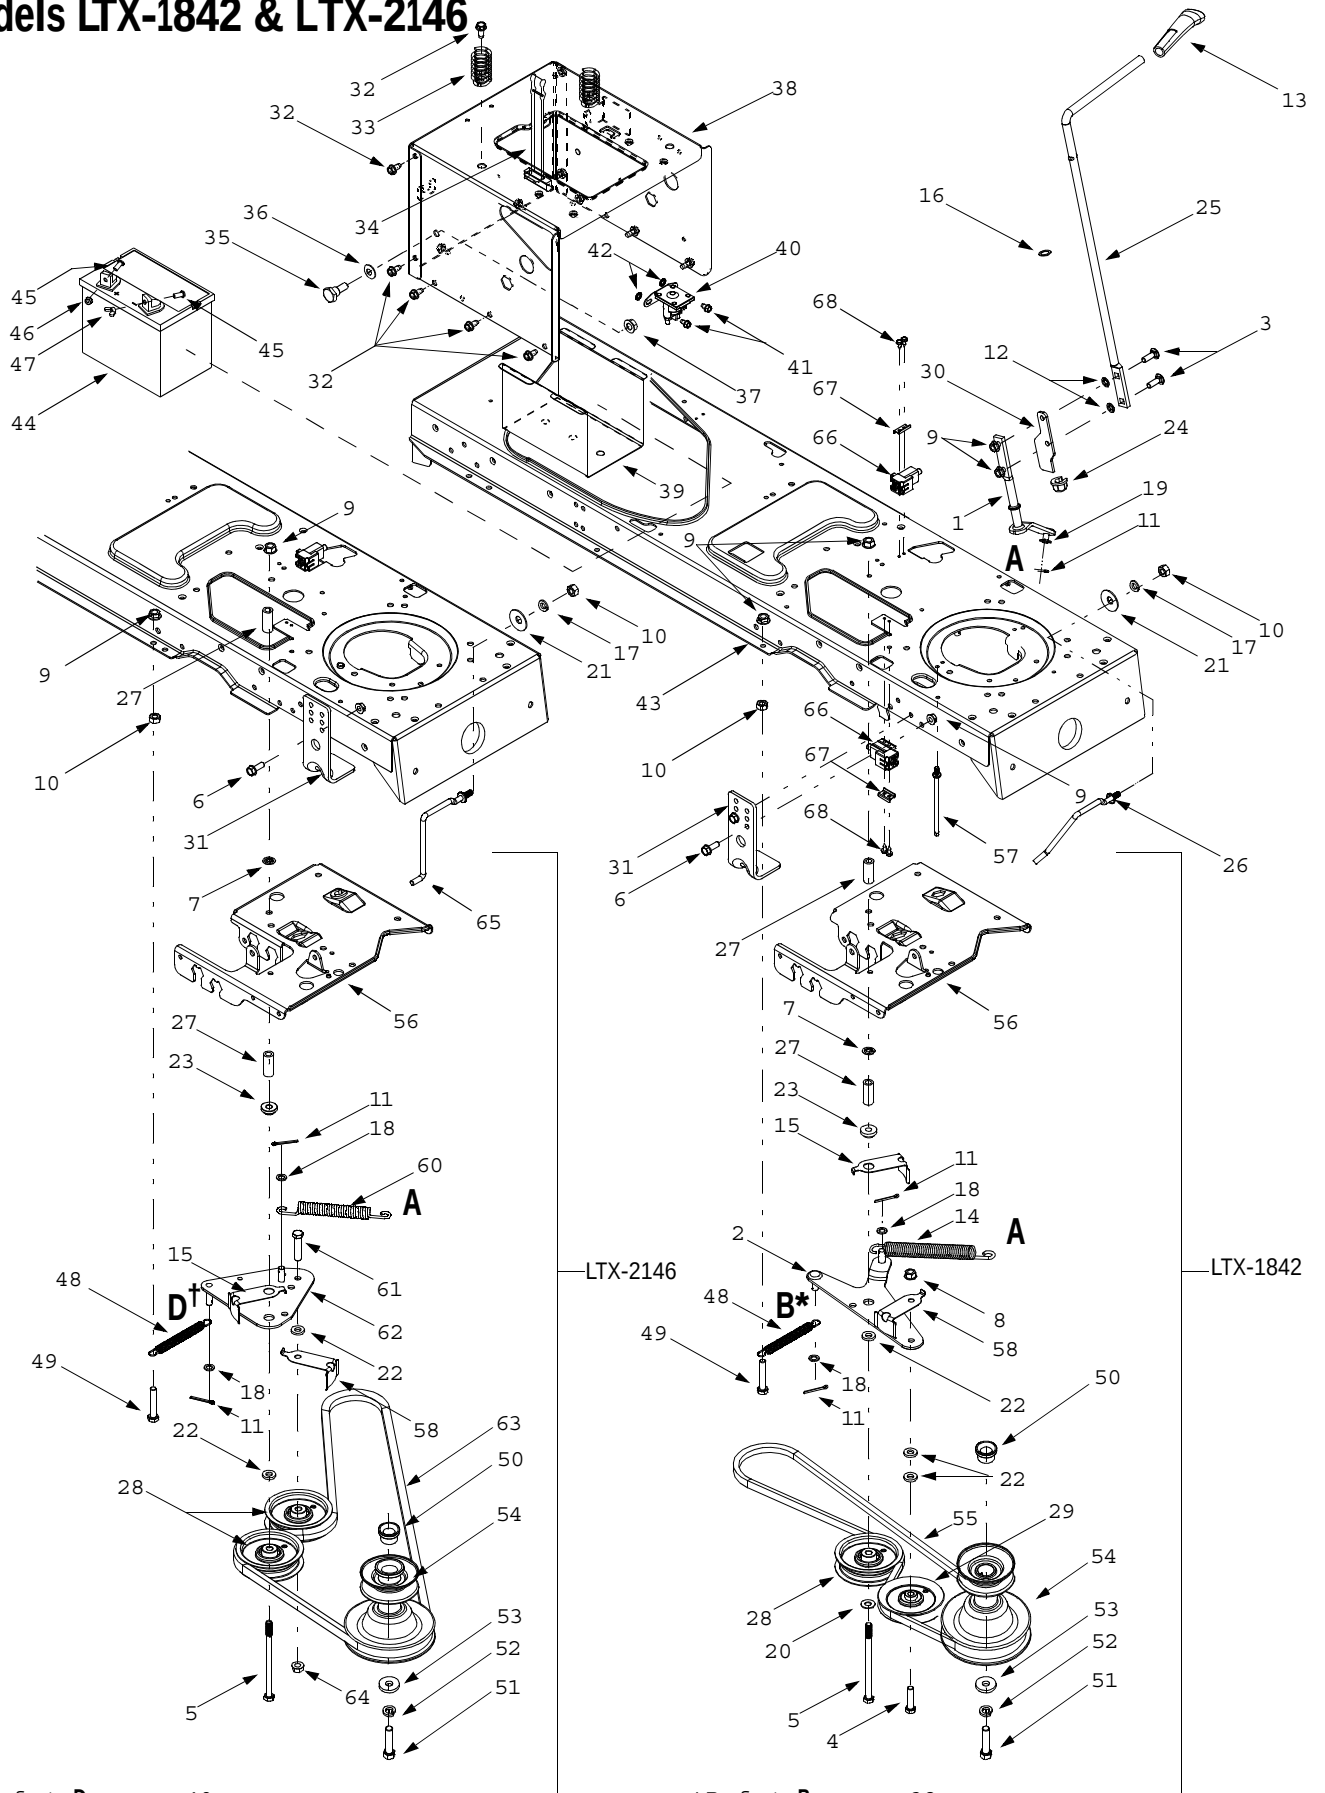


† Refer to **D** on page 40.

* Refer to **B** on page 38.

Models LTX-1842 & LTX-2146

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	647-0064	PTO Engage Lever Assembly	35	738-1020	Shoulder Screw, .625 x .5, 7/16-20
2	683-0450	PTO Engage Plate Assembly	36	736-0407	Bell Washer, .45 x 1.0 x .062
3	710-0276	Carriage Screw, 5/16-18 x 1.00	37	712-0459	Flange Lock Nut, 7/16-20
4	710-0520	Hex Cap Screw, 3/8-16 x 1.5	38	783-1031A	Hi-Ch Plate
5	710-0831	Hex Cap Screw, 3/8-16 x 5.5	39	783-0349	Battery Tray
6	710-1238	Hex Head Washer Screw, 5/16-18 x .875	40	725-1426	Solenoid, 12-Volt, 100 Amp
7	712-0229	Push Nut, 3/8	41	710-0599	Self-Tapping Screw, 1/4-20 x .5
8	712-0431	Flange Lock Nut, 3/8-16	42	736-0222	Lock Washer, 1/4
9	712-3004A	Flange Lock Nut, 5/16-18	43	683-0304C	Lower Frame Assembly
10	712-3010	Hex Nut, 5/16-18	44	725-1706	12-volt Battery, 270 CCA
11	714-0470	Cotter Pin, 1/8 x 1.25	45	710-0751	Hex Cap Screw, 1/4-20 x .62
12	726-0201	Speed Nut, 3/125	46	712-0271	Hex Semi Nut, 1/4-20
13	731-2111A	PTO Knob	47	712-3044	Wing Nut, 1/4-20
14	732-1170	Extension Spring, .75 x 6.75	48	732-1165	Extension Spring, .50 x 5.0
15	732-0991A	Belt Guard	49	710-3180	Hex Cap Screw, 5/16-18 x 1.75
16	736-0108	Flat Washer, 510 x .750 x .033	50	750-0956	Spacer Cup
17	736-0119	Lock Washer, 5/16	51	710-3029	Hex Head Cap Screw, 7/16-20 x 1.25
18	736-0140	Flat Washer, 385 x .62 x .063	52	736-0171	Lock Washer, 7/16
19	736-0275	Flat Washer, 5/16	53	736-0322	Flat Washer, 450 x 1.25
20	736-0300	Flat Washer, 406 x .875 x .059	54	756-0982B	Engine Pulley, 3.56 O.D. x 5.56
21	736-0331	Bell Washer, 39 x 1.13 x .062	55	754-0497	PTO Belt (Model LTX-1842)
22	736-3010	Flat Washer, 407 x .812 x .135	56	783-0653F	Steering Support Bracket
23	738-0372B	Shoulder Spacer, 380	57	711-1044	Keeper Pin, 5/16 x 4.75
24	741-0708	Hex Split Flange Bearing, 5	58	732-1013	Belt Guard
25	747-1112D	PTO Engagement Handle	59	710-3025	Hex Cap Screw, 5/16-18 x .625
26	747-1286A	Belt Keeper Rod	60	732-0944	Extension Spring, .75 x 6.75
27	748-0415B	Spacer, 3/8 x 1.54	61	710-0347	Hex Cap Screw, 3/8-16 x 1.75
28	756-0627B	Idler Pulley, 3.5	62	683-0302	PTO Engagement Plate Assembly
29	756-1208	Idler Pulley, 4.0	63	754-0486A	PTO Belt (Model LTX-2146)
30	783-0744A	Engagement Stop	64	712-0431	Flange Lock Nut, 3/8-16
31	783-0891B	Deck Stop	65	747-1243	Belt Keeper Rod
32	710-0604A	Self-Tapping Screw, 5/16-18 x .625	66	725-1657A	Switch
33	732-04035	Compression Spring, 1.28 x 3.125	67	17962	Switch Plate
34	723-0444	Battery Strap	68	710-0224	Screw, #10-16 x .5


Model LTX-1842

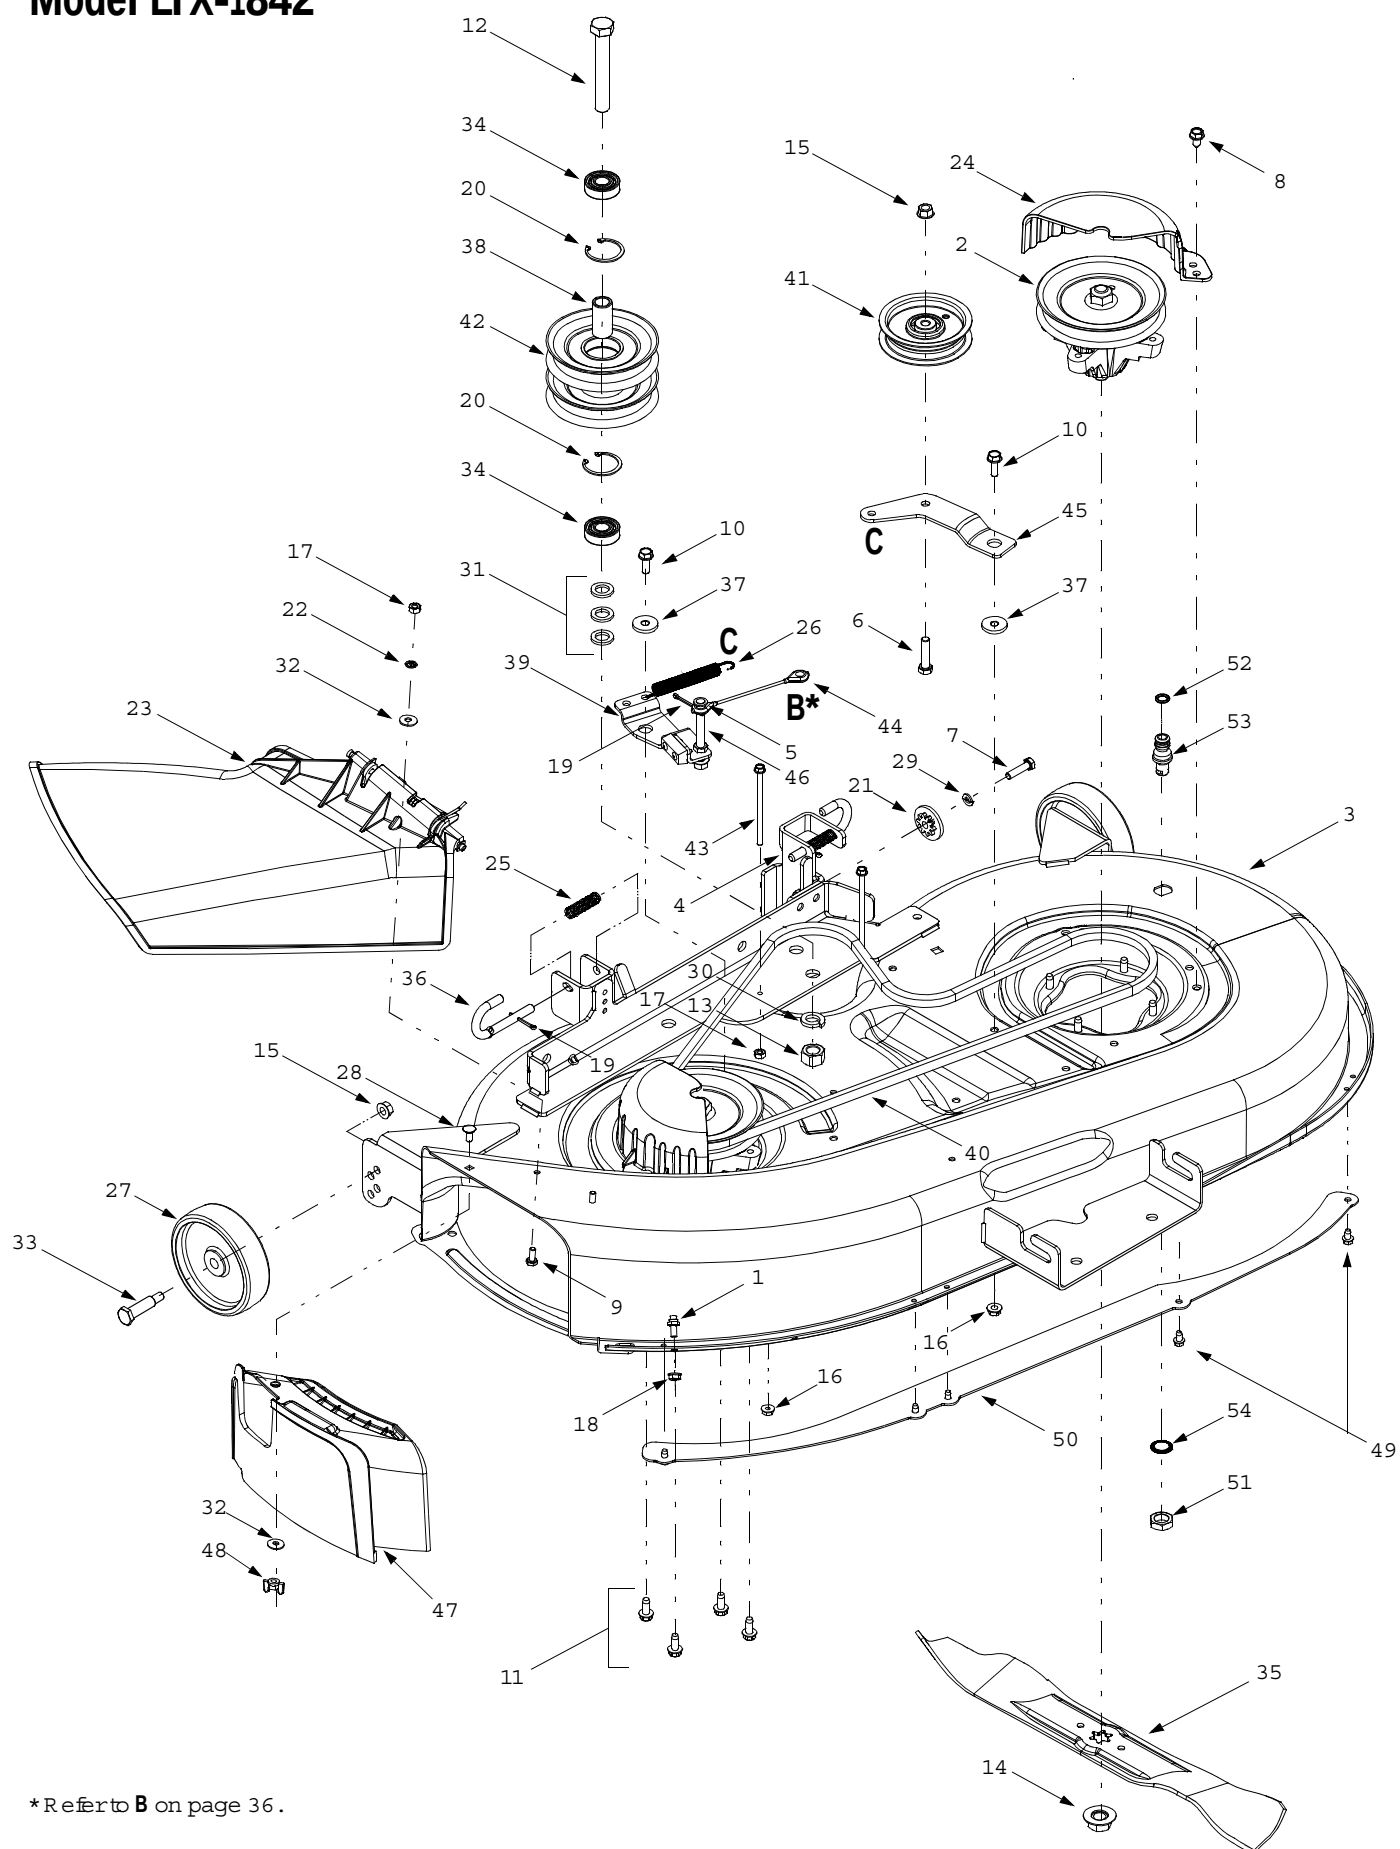

*Refer to **B** on page 36.

REF. NO.	PART NO.	DESCRIPTION
1	711-04069	Grass Catcher Pin, 1/4-20
2	618-0574	Spindle Assembly, 5.75 Dia. w/Fitting
	756-0980	Pulley Only
3	683-04051	42-inch Deck Shell
4	683-0254	Deck Adjustment Bracket w/Weld Nut
5	736-0140	Flat Washer, .385 x .62 x .063
6	710-0520	Hex Cap Screw, 1/4-20 x 1.5
7	710-0528	Hex Cap Screw, 5/16-18 x 1.25
8	710-0726	Self-tapping Screw, 5/16-12 x .75
9	710-0751	Hex Cap Screw, 1/4-20 x .62
10	710-1238	Hex Head Washer Screw, 5/16-18 x .875
11	710-0650	Self-tapping Screw, 5/16-18 x .875
12	710-3151	Hex Cap Screw, 5/8-18 x .875
13	712-0337	Hex Nut, 5/8-18
14	712-0417A	Hex Flange Nut, 5/8-18
15	712-0431	Flange Lock Nut, 3/8-16
16	712-3004A	Flange Lock Nut, 5/16-18
17	712-3006	Hex Nut, 1/4-20
18	712-3027	Hex Flange Lock Nut, 1/4-20
19	714-0470	Cotter Pin, 1/8 x 1.25
20	716-3020	Internal Snap Ring
21	717-1553B	Deck Adjustment Gear
22	726-0233	Push Nut, .25 x .5
23	731-1032B	Side Discharge Chute Assembly
24	731-2486	Belt Cover
25	732-0306	Compression Spring, .406 x .531 x 1.75
26	732-0470A	Extension Spring, .50 x 4.74
27	734-0973	Deck Wheel, 5 x 1.38
28	710-0134	Carriage Screw, 1/4-20 x .5
29	736-0119	Lock Washer, 5/16
30	736-0158	Lock Washer, 5/8
31	736-0162	Flat Washer, .64 x 1.0 x .12
32	736-0270	Bell Washer, .265 x .75 x .062
33	738-0373	Shoulder Screw, .498 x 1.53
34	741-0524	Bearing, .625 x 1.574 x .470
35	742-0616A	Three-in-one Blade, Star Center, 21.23"
36	747-1116	Deck Release Pin
37	748-0331	Shoulder Spacer, .625 x .324
38	750-0932A	Spacer, .635 x .88 x 1.72
39	683-0440	Deck Brake Assembly
40	754-0498	Deck Belt
41	756-0627B	Idler Pulley, 3.5
42	756-1202	Double Pulley, 5.0
43	710-1830	Self-tapping Screw, 1/4-20 x 4.0
44	746-0970	Brake Cable, 5.05
45	783-1291	Idler Bracket
46	711-1534	Pin, 3/8-16, 3/8 x 3.27
47	731-2363	Mulch Plug
48	712-3087	Wing Nut
49	710-0599	Self-tapping Screw, 1/4-20 x .5
50	783-1146A	Deck Skirt
51	712-0641	Hex Nut, M-16 x 1.5
52	721-0417	O-Ring
53	737-04003	Water Nozzle
54	736-0760	Lock Washer, 17 x 23.8 x 1.95

Model LTX-2146

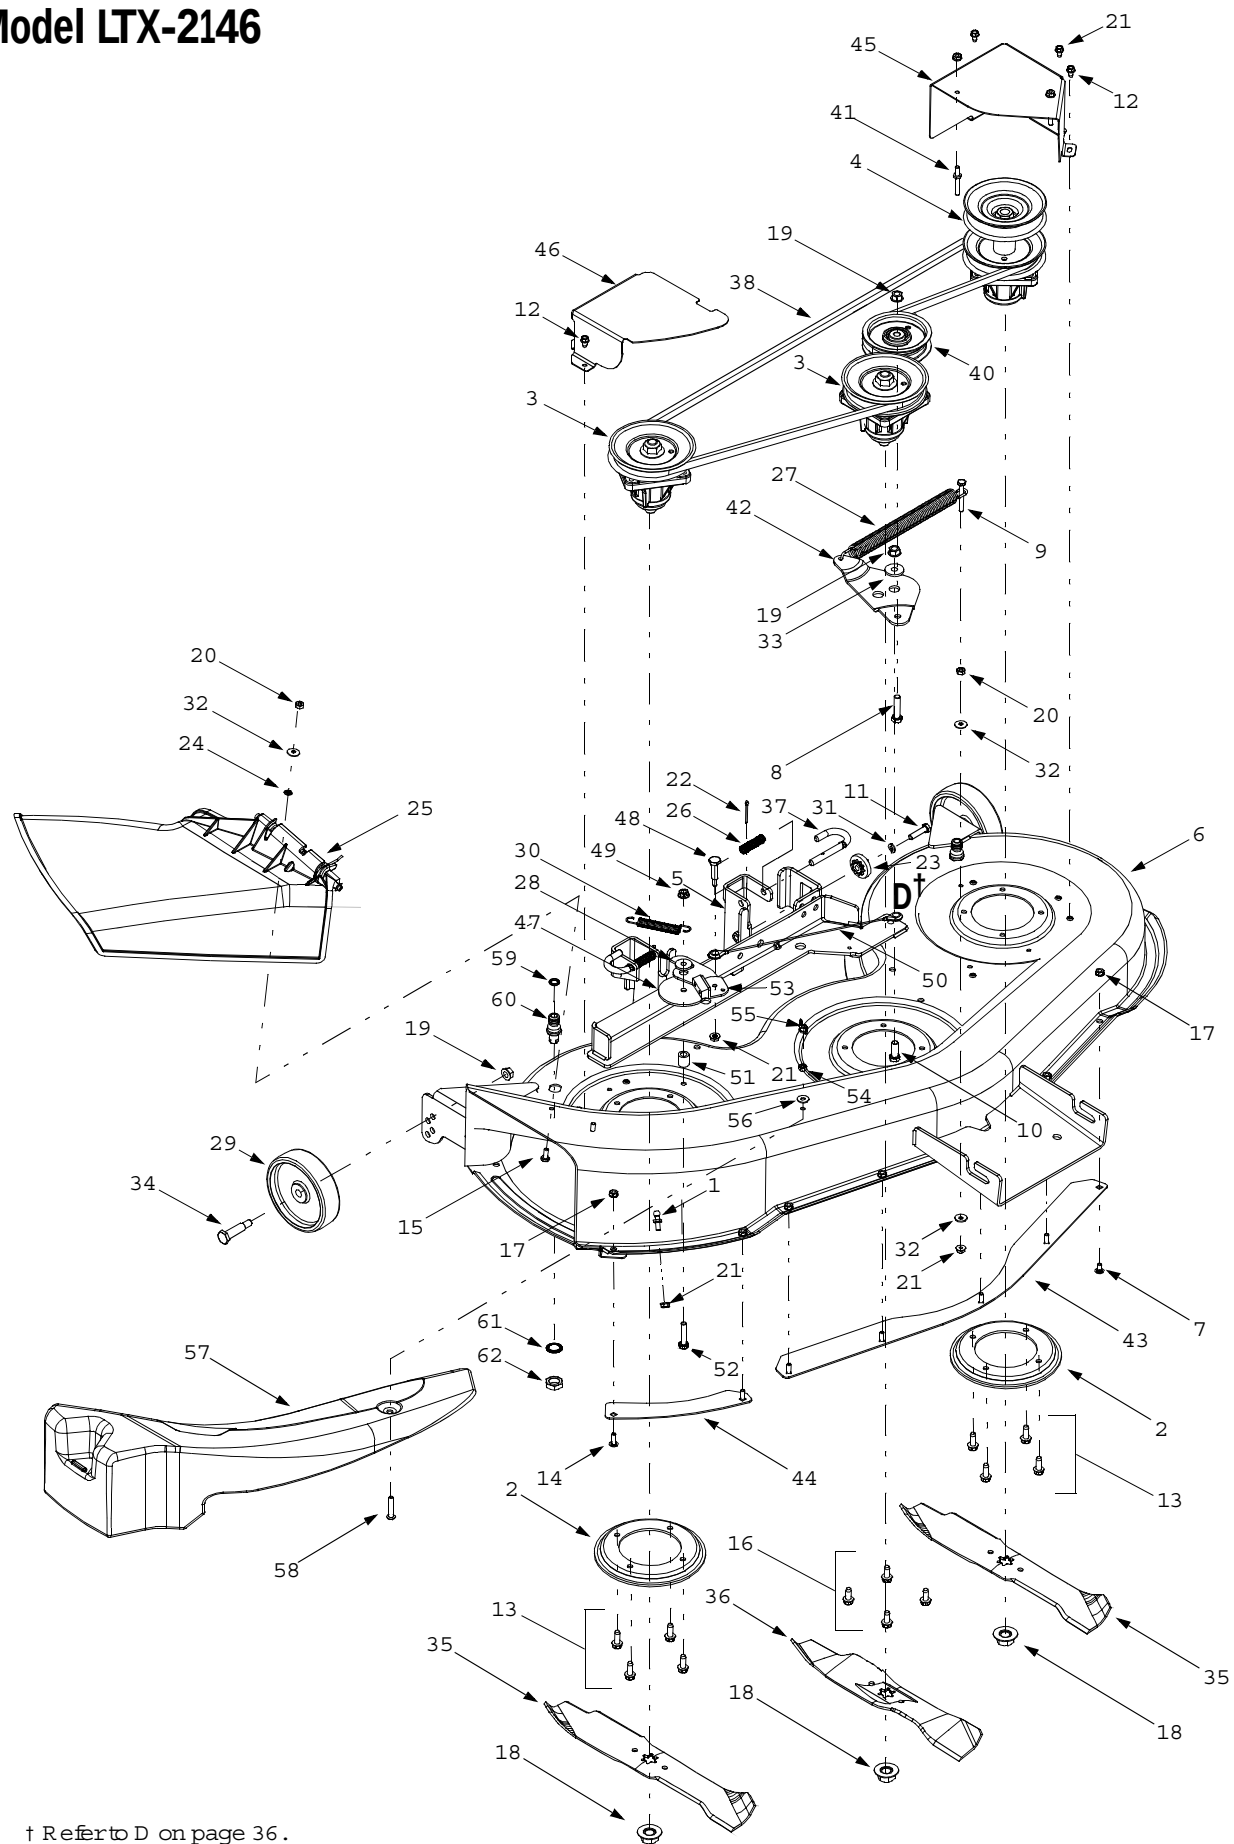


† Refer to D on page 36.

Model LTX-2146

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	711-04069	Retainer Hook	31	736-0119	Lock Washer, 5/16
2	17982	Spindle Reinforcement Plate	32	736-0270	Bell Washer, 265 x .75 x .062
3	618-0430A	Spindle Assembly, 5.0 Dia.	33	738-0347	Shoulder Spacer, .625 x 1.16
	756-1187	Pulley Only	34	738-0373	Shoulder Screw
4	618-0595	Double Pulley Spindle Assembly	35	742-0611	Three-in-one Blade, Star Center, 16.28"
	756-1214	Double Pulley Only	36	742-0612	Three-in-one Blade, Star Center, 14.88"
5	683-0254	Deck Adjustment Bracket Assembly	37	747-1116	Deck Release Pin
6	683-04052	46-inch Deck Shell	38	754-0349	Deck Belt, Poly
7	710-0167	Carriage Screw, 1/4-20 x .50	39	738-3056	Shoulder Screw, 1/2-2.5
8	710-0344	Hex Cap Screw, 3/8-16 x 1.5	40	756-0627B	Idler Pulley, 3.5
9	710-0501	Hex Cap Screw, 1/4-20 x 2.0	41	711-0993	Belt Guard Pin
10	710-0514	Hex Cap Screw, 3/8-16 x 1.0	42	783-0139A	Idler Bracket
11	710-0528	Hex Cap Screw, 5/8-18 x 1.25	43	783-0141	Center Deck Skirt
12	710-0599	Self-tapping Screw, 1/4-20 x .5	44	783-0142	RH Deck Skirt
13	710-0650	Self-tapping Screw, 5/16-18 x .875	45	783-1348	LH Belt Cover
14	710-0703	Hex Screw, 1/4-20 x .75	46	17258C	RH Belt Cover
15	710-0751	Hex Cap Screw, 1/4-20 x .62	47	736-0416	Flat Washer, 320 x 3.0 x .125
16	710-1260A	Self-tapping Screw, 5/16-18 x .75	48	738-0572	Shoulder Screw, .374 x 1.16
17	712-0271	Hex Hex Nut, 1/4-20	49	712-3004A	Hex Nut, 5/16-18
18	712-0417A	Hex Flange Nut, 5/8-18	50	746-1107	Bracket Cable, 12"
19	712-0431	Flange Lock Nut, 3/8-16	51	750-0807	Spacer, 385 x .625 x .70
20	712-3006	Hex Nut, 1/4-20	52	710-0805	Hex Cap Screw, 5/16-18 x 1.5
21	712-3027	Hex Flange Lock Nut, 1/4-20	53	17116	Deck Brake Assembly
22	714-0470	Cotter Pin, 1/8 x 1.25	54	712-3006	Hex Nut, 1/4-20
23	717-1553A	Deck Adjustment Gear	55	712-3087	Wing Nut, 1/4-20
24	726-0233	Push Nut, .25 x .5	56	736-0173	Flat Washer, 28 x .74 x .063
25	731-1032B	Side Discharge Chute Assembly	57	731-1636	Muck Plug
26	732-0306	Compression Spring, 406 x .531 x 1.75	58	710-0578	Screw, 1/4-20 x 1.5
27	732-0594A	Extension Spring, .91 x 7.3	59	721-0417	O-Ring
28	748-0324	Shoulder Spacer	60	737-04003	Water Nozzle
29	734-0973	Deck Wheel, 5 x 1.38	61	736-0760	Lock Washer, 17 x 23.8 x 1.95
30	732-0429A	Extension Spring, .5 x 3.97	62	712-0641	Hex Nut, M-16 x 1.5

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Models LTX-1842 & LTX-2146

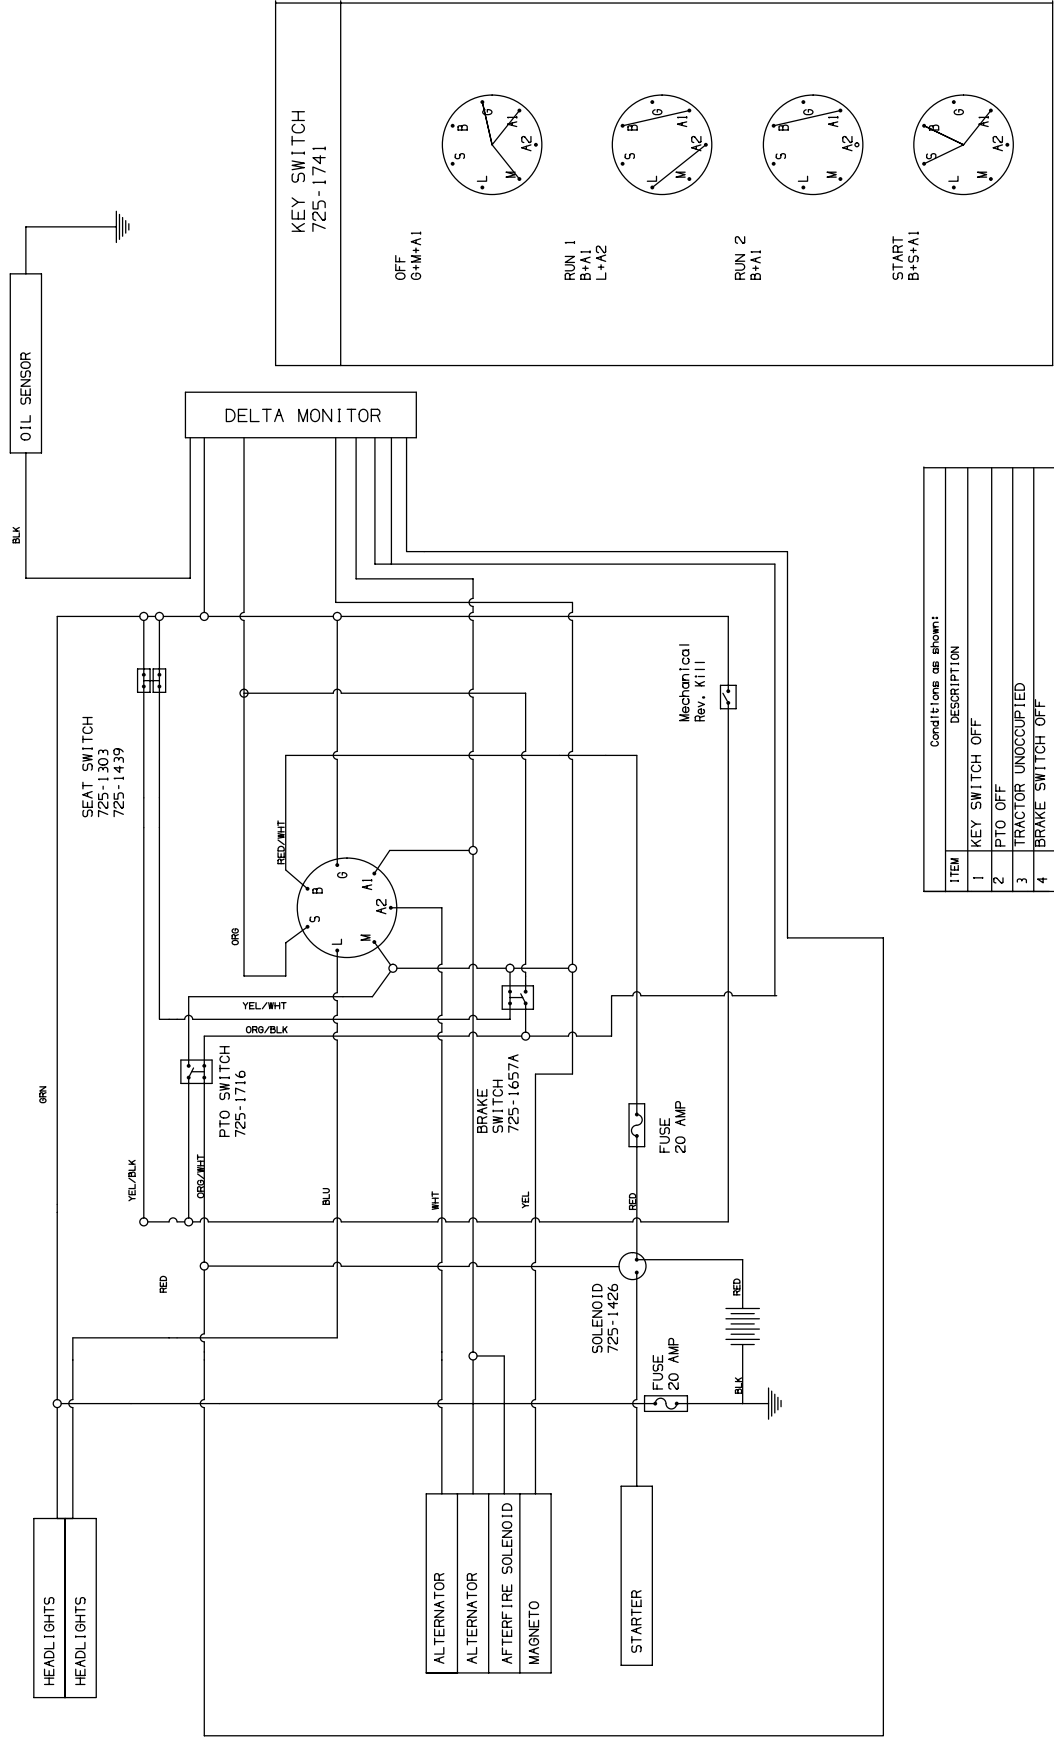

Models LTX-1842 & LTX-2146

