



SECTION 12: ILLUSTRATED PARTS LIST

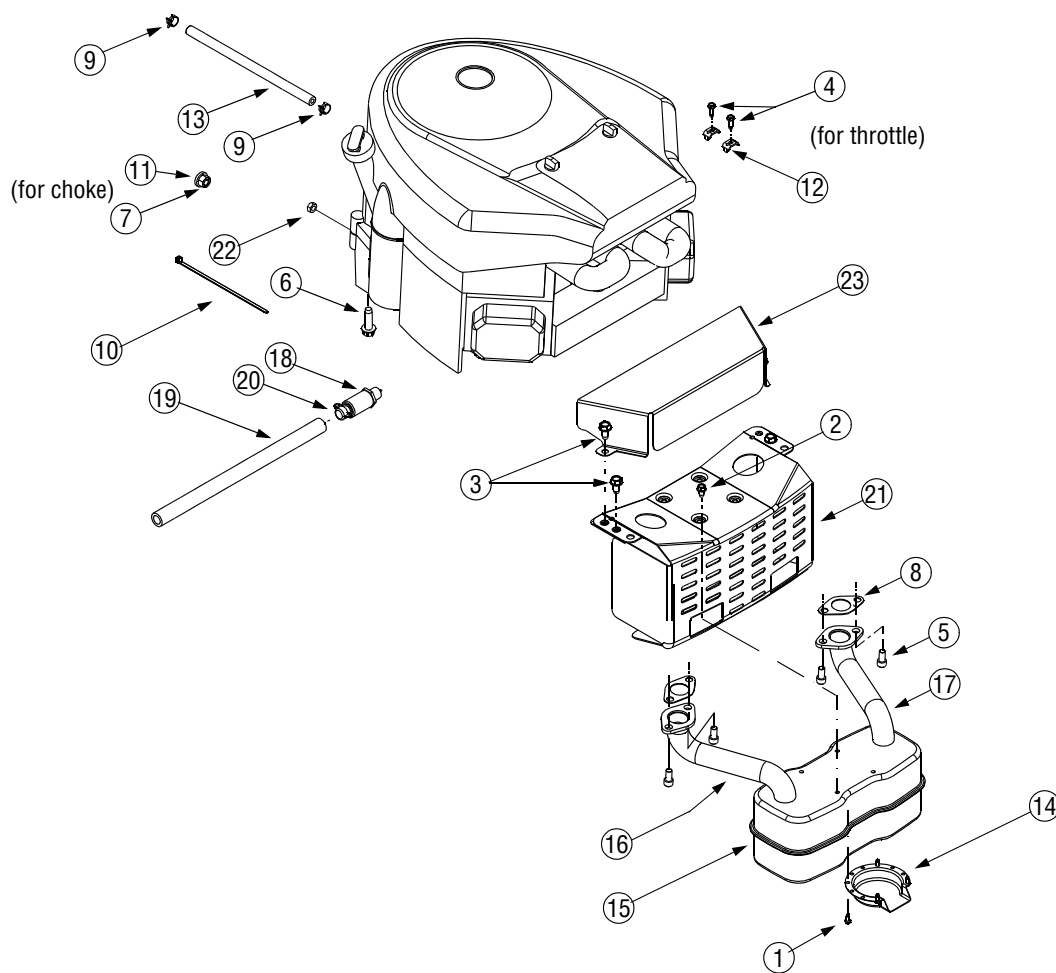

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Screw, #8-18 x.50	13	751-0535	Fuel Line Hose
2	710-0599	Screw, 1/4-20 x.50	14	751-0564A	Muffler Deflector
3	710-0726	Screw, 5/16-18 x.750	15	751-0616A	Muffler, Twin Inlet
4	710-1237	Screw, #10-32 x.625	16	751-0650B	RH Exhaust Pipe
5	710-1314A	Socket Cap Screw, 5/16-18 x.625	17	751-0651B	LH Exhaust Pipe
6	710-1315	Self-tapping Screw, 3/8-16 x 1.25	18	751-3140	Oil Drain Valve
7	712-3005	Flange Lock Nut, 3/8-16	19	751-3141	Oil Drain Hose
8	721-0460	Exhaust Gasket	20	751-3142	Oil Drain Cap
9	726-0205	Hose Clamp	21	783-0615D	Muffler Bracket
10	725-0157	Cable Tie	22	712-0271	Sems Nut, 1/4-20
11	736-0300	Lock Washer,.406 x.875 x.059	23	783-0625C	Heat Shield
12	751B221535	Casing Clamp			

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.


Model 601

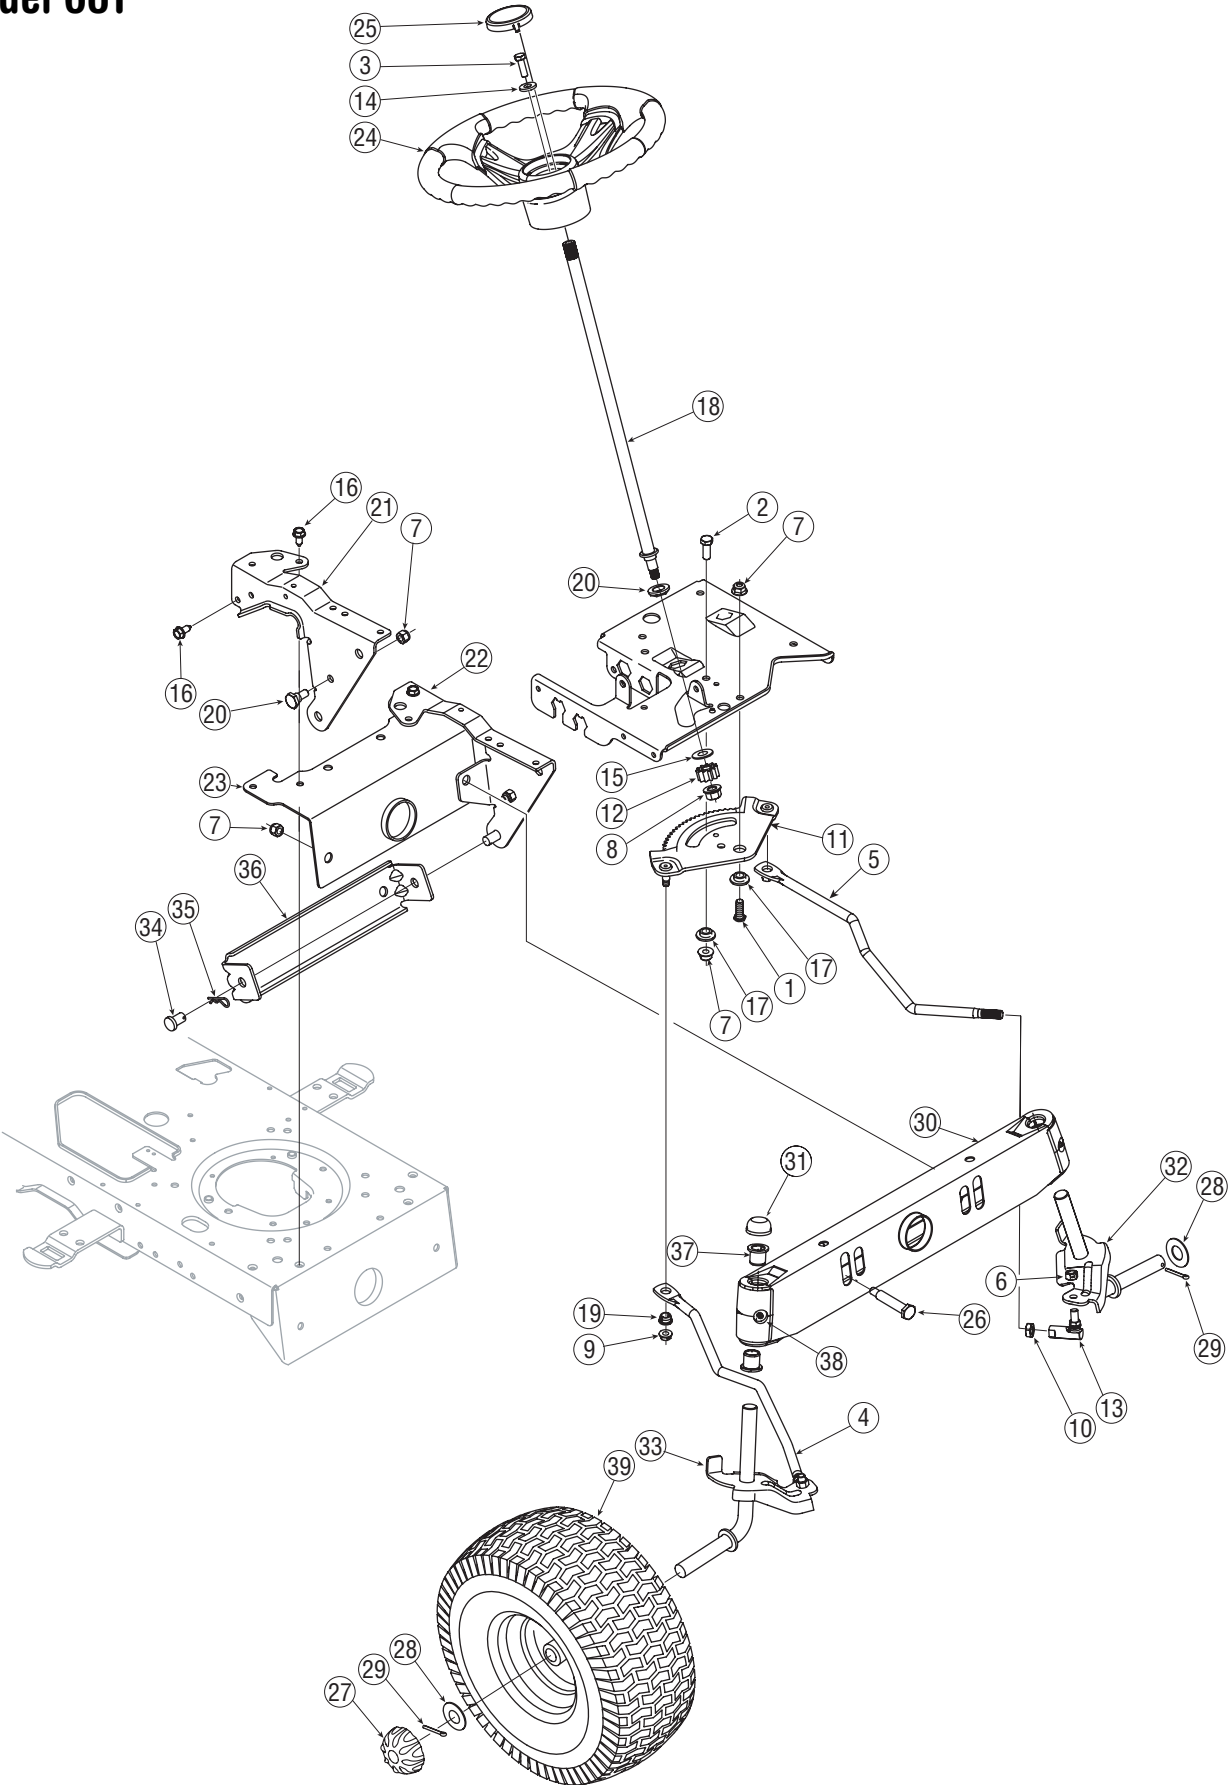

Model 601

REF. NO.	PART NO.	DESCRIPTION
1	710-04095	Hex Screw, 3/8-16, 1.00, Gr5
2	710-0514	Hex Screw, 3/8-16, 1.00, Gr5
3	710-0643	Hex Screw, 5/16-18, 1.00, Gr5
4	711-1408	Link, Drag, RH
5	711-1409A	Link, Drag, LH
6	712-0214	Nut, Hex Lock, 3/8-24
7	712-04065	Nut, Flange Lock, 3/8-16, Grf, Nylon
8	712-0459	Nut, Flange Lock, 7/16-20
9	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
10	712-0240	Nut, Jam, 7/16-20, Gr2
11	717-1550E	Gear, Steering, 11/90 Ratio
12	717-1554	Gear, Pinion, Steering
13	723-0448A	Ball Joint, 7/16-20, Lock
14	736-3004	Washer, Flat,.406 x.875 x.105
15	736-3084	Washer, Flat,.51 x 1.12 x.06
16	710-0726	Screw, 5/16-12, 0.750
17	738-04154	Spacer, Shoulder,.38 x 1.00 x.31
18	738-1001A	Shaft, Steering,.625 OD x 24.25 Lg
19	741-0475	Plastic Bushing.380 ID
20	738-0143	Screw, Shoulder,.498 x.340, 3/8-16
21	783-0726D	Pivot Bracket, Support RH
22	783-0727C	Pivot Bracket, Support LH
23	783-0728	Pivot Bracket, Bar
24	631-04028	Steering Wheel
25	731-04040	Steering Wheel Cap
26	738-1011A	Shoulder Screw,.5 x 2.2, 3/8-16
27	734-2290A	Deluxe Hub Cap
28	736-0316	Flat Washer,.78 x 1.589 x.06
29	714-04039	Cotter Pin, 5/32 x 1.25
30	683-0128B	Pivot Bar
31	726-0341	Push Cap
32	638-04003	LH Axle Assembly,.750
33	638-04004	RH Axle Assembly,.750
34	711-0332	Pin, Clevis,.50 x.78
35	714-04023	Cotter Pin, Internal,.080 x 1.5625
36	783-0720A	Adjustment Bracket, Front
37	741-0660A	Flange Bearing,.760 x.941 x 1.0
38	731-1291A	Pivot Bar Endcap
39	634-04086	Wheel Assembly Complete, 15 x 6
	734-1731	Tire Only, 15 x 6 x 6
	634-04081	Rim Only w/ Valve Stem

Model 601

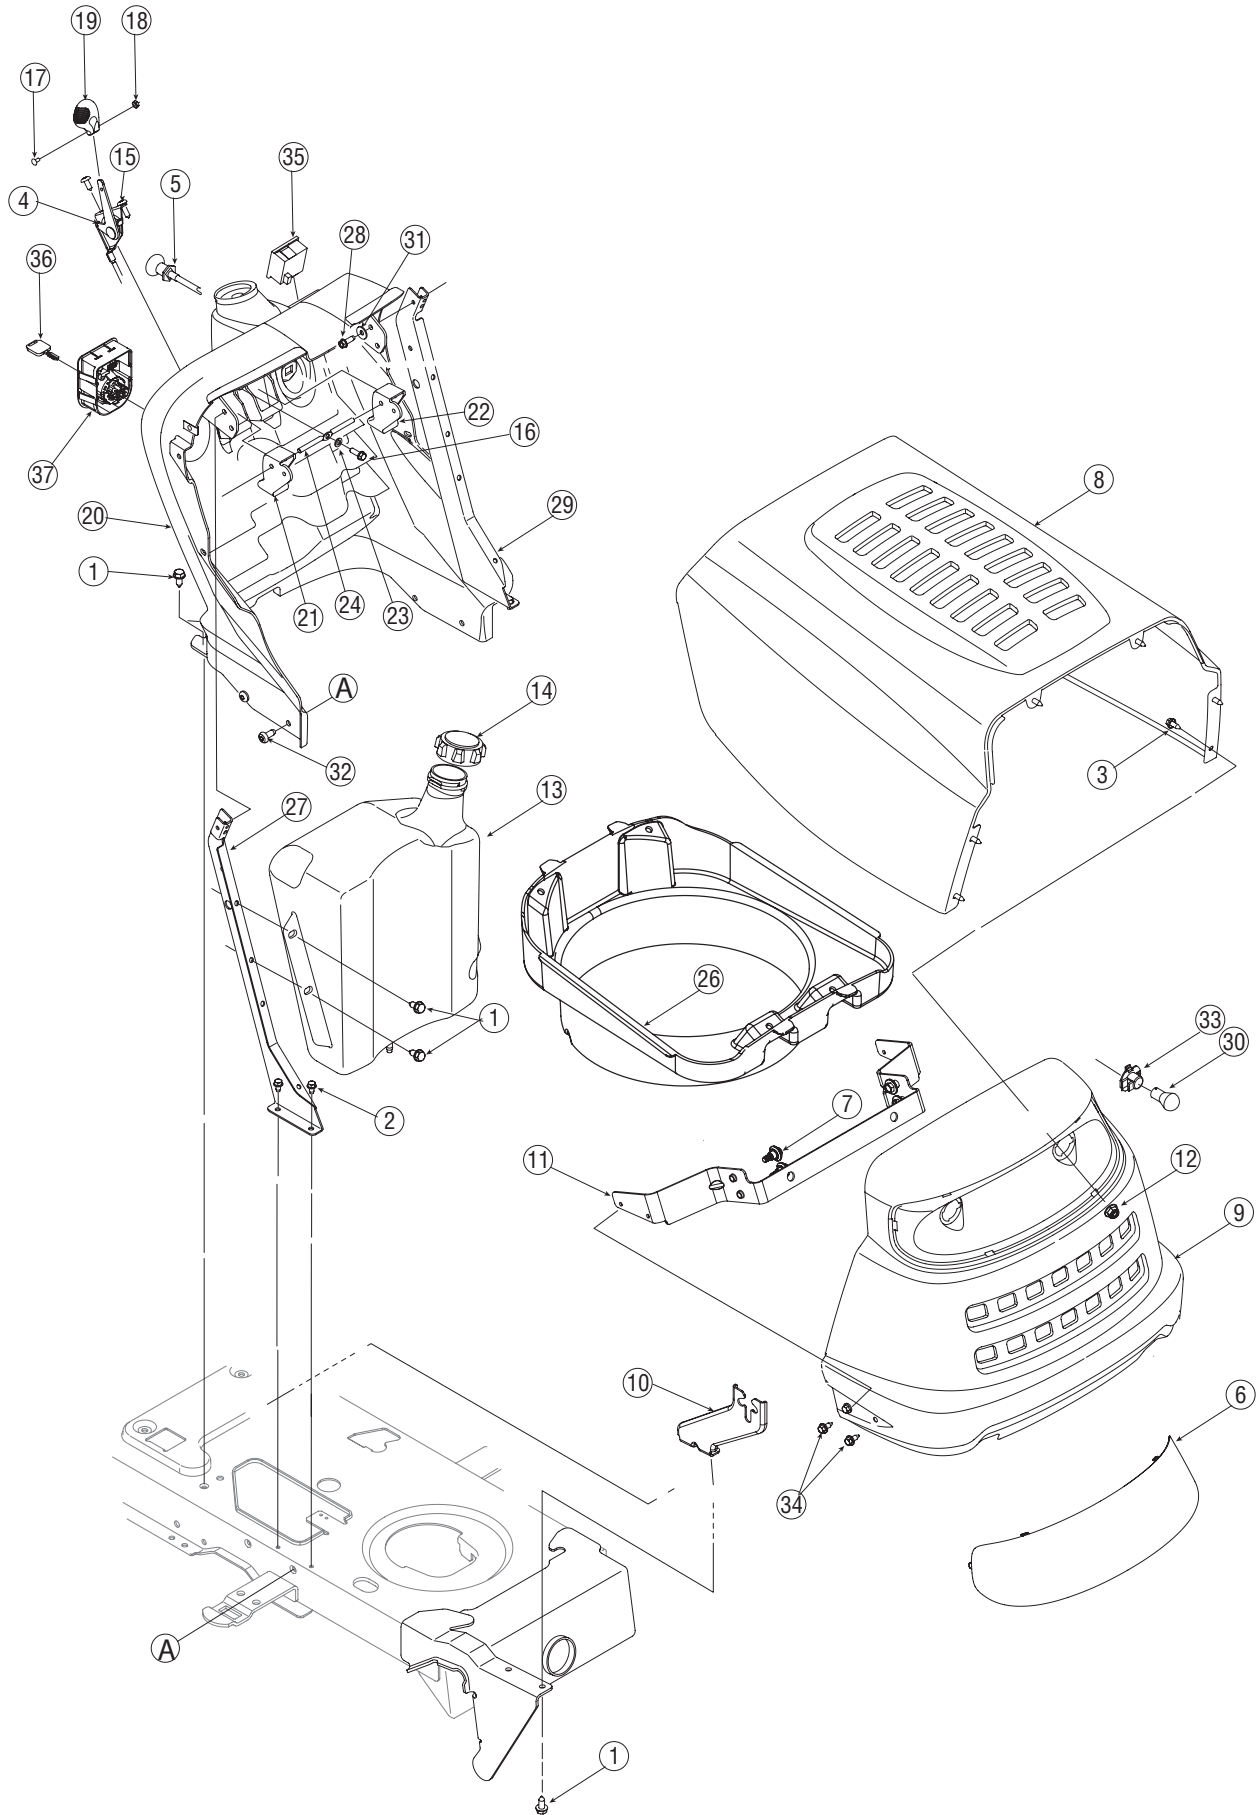


Model 601

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	710-0726	Screw, 5/16-12 x.750	21.	731-04215	Cruise Control Button
2.	710-0599	Self-tapping Screw, 1/4-20 x.5	22.	731-04217	Parking Brake Button
3.	710-0751	Hex Cap Screw, 1/4-20 x.62	23.	736-0142	Flat Washer, 9/32 x 1/2 x 1/16
4.	746-1086	Throttle Control/ Cable	24.	747-1196	Brake/Cruise Pivot Rod
5.	746-1085A	Choke Knob/Cable	25.	629-04083†	Headlight Wire Harness
6.	731-04949	Headlight Lens	26.	731-05165	Hood Plenum
7.	738-04091	Shoulder Screw,.43 x.29	27.	783-04285B	RH Dash Support Plate
8.	783-04551	Hood, 1 Style	28.	710-0642	Self-tapping Screw, 1/4-20 x.75
9.	783-04552	Grill, 1 Style	29.	783-04323B	LH Dash Support Plate
10.	783-04578	Pivot Bracket - RH	30.	725-0963	Lamp
	783-04577	Pivot Bracket - LH	31.	736-0270	Bell Washer,.265 x.75 x.062
11.	783-04621	Grill Pivot Bracket	32.	710-1611B	Screw, 5/16-18 x.75
12.	712-04064	Flange Lock Nut, 1/4-20	33.	725-1649	Headlight Socket
13.	751-0658E	Fuel Tank, Three Gallon	34.	710-1652	Hex Index Screw, 1/4-20 x.625
14.	751-0603	Fuel Cap	35.	725-04156	Systems Ind. Monitor w/ Ammeter
15.	710-1017	Screw, 1/4-14 x.625	36.	725-1745	Ignition Key w/ plastic cover
16.	710-0895	Self-tapping Screw, 1/4-15 x.75		725-1744	Ignition Key w/o plastic cover
17.	710-3217	Truss Phillips Screw, #8-32 x.375	37.	725-04227	Ignition Switch
18.	712-0142	Hex Nut, #8-32	—	629-04144†	Jumper Harness
19.	731-1857	Throttle Control Knob	—	629-04103†	Wire Harness
20.	731-05001	Dash Panel			

† Not Shown


Model 601

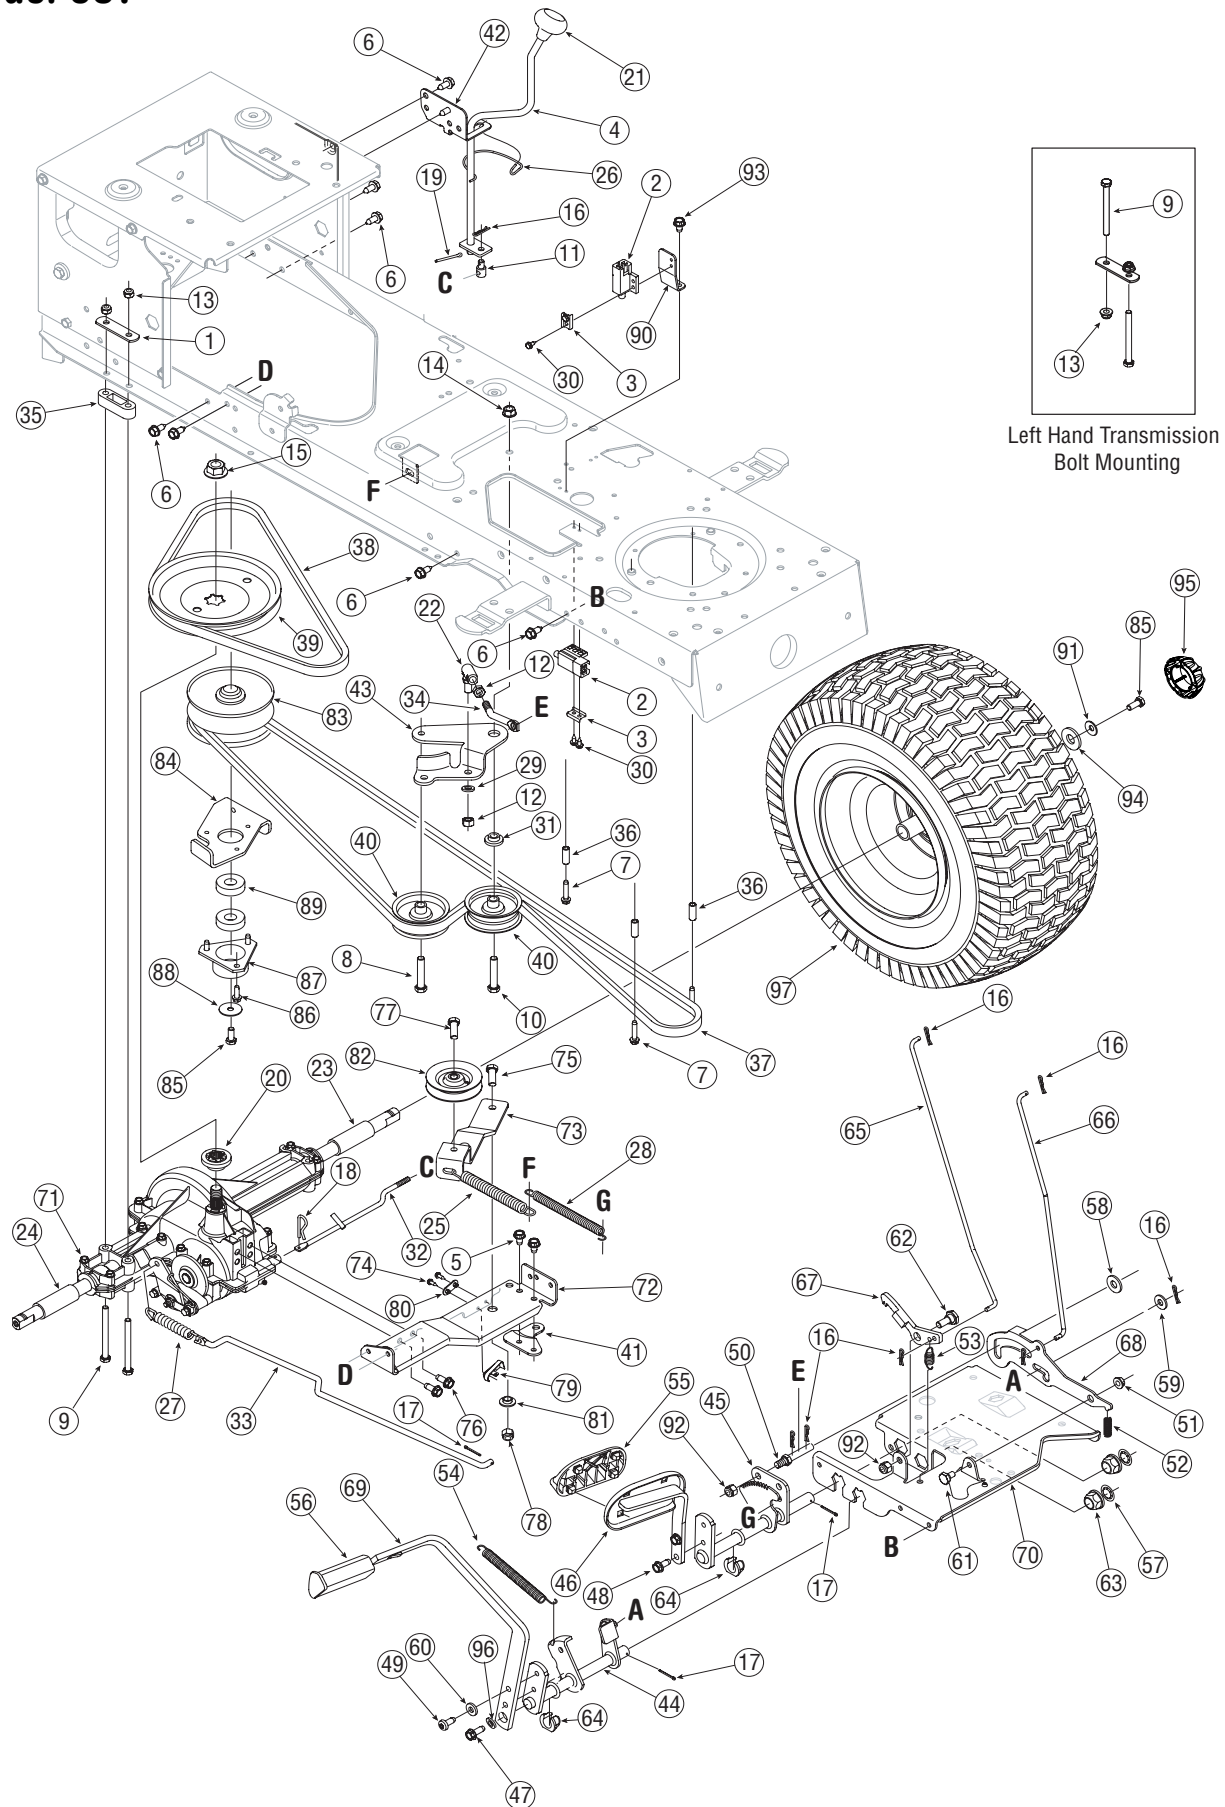

Model 601

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17840	Mounting Bracket, Transaxle	51	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
2	725-04039	Switch, Interlock	52	732-0335	Spring, Compression,.405 x 1.17
3	17962	Plate, Switch	53	732-0955	Spring, Extension,.50 OD x 1.41
4	647-04020	Lever Assembly, Shift	54	732-0963	Spring, Extension,.50 OD x 6.37
5	710-0607	Screw, 5/16-18, 0.500	55	735-0662	Pad
6	710-0726	Screw, 5/16-12, 0.750	56	735-3049	Pad, Brake
7	710-0809	Screw, 1/4-20, 1.250	57	736-0187	Washer, Flat,.64 x 1.24 x.06, Ht
8	710-1007	Screw, Sems, 3/8-16, 1.500	58	736-0262	Washer, Flat,.385 x.870 x.092
9	710-1266	Screw, 5/16-18, 3.50, Gr5	59	736-0300	Washer, Flat,.406 x.875 x.059
10	710-3144	Screw, 3/8-16, 2.00, Gr5	60	736-3008	Washer, Flat,.344 x.750 x.120
11	711-0736	Adjustment Ferrule 1/4-20 x 1.	61	738-0155	Screw, Shoulder.437 Dia x.162
12	712-0241	Nut, Hex, 3/8-24, Gr5	62	738-0380	Screw, Shoulder,.50 x.27 Lg, 3/8-16
13	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon	63	741-0225	Bearing, Hex Flange
14	712-0431	Nut, Flange Lock, 3/8-16, GrF, Nylon	64	741-3065B	Split Bearing, Hex Flange
15	712-0700	Nut, Flange, 9/16-18, Gr2	65	747-04093	Rod, Brake Lock
16	714-0104	Pin, Cotter,.072 Dia. x 1.13	66	747-04096	Rod, Cruise Control
17	714-0111	Pin, Cotter, 3/32, 1.0	67	748-04039B	Latch, Cruise Control
18	714-0209	Cotter Pin, Internal,.125 Dia.	68	683-04186	Bracket, Lockout
19	714-0470	Pin, Cotter, 1/8 x 1.25	69	783-0773A	Ped, Brake
20	718-0758A	Pulley Hub, 5/8 Spline	70	783-04612	Bracket, Steering Support
21	720-04028	Knob, Shift	71	618-04034	Transmission, Single Speed
22	723-3018	Ball Joint	72	683-04055A	Bracket Assembly, Torque
23	731-04602	Sleeve,.758 x.821 x 3.3125	73	683-04130	Bracket, Idler
24	731-04604	Sleeve,.758 x.821 x 2.4375	74	710-0227	Screw, #8-18 x.50
25	732-0384	Spring, Extension,.62 Dia x 6.12	75	710-0514	Screw, 3/8-16, 1.00
26	732-0525	Spring Clip, Shifter	76	710-0604A	Screw, 5/16-18,.625
27	732-0716	Spring, Extension,.59 OD x 4.00	77	710-1315	Screw, 3/8-16, 1.250
28	732-0963	Spring, Extension,.50 Dia x 6.37	78	712-0130	Nut, Lock, 3/8-16, Nylon
29	736-0169	Washer, Lock, 3/8	79	725-1644	Switch Spring, Short
30	710-0224	Screw, #10-16,.50	80	726-0320	Plate, Insulator
31	738-0372B	Spacer, Shoulder, 1.00 x.38 x.38	81	750-04294	Spacer, Shoulder
32	747-04146	Rod, Shift	82	756-0116A	Pulley, V-Type, 3.06
33	747-04164	Rod, Brake	83	656-04015	Pulley Assembly, Variable Speed
34	747-1127	Idler Rod, Adjustable, 3/8	84	683-04129	Bracket, Pulley
35	748-0334	Spacer,.68	85	710-0627	Screw, 5/16-24,.750
36	750-0566A	Spacer,.260 x.372 x 1.030	86	710-0642	Screw, 1/4-20,.750
37	754-0467	Belt, V-Type	87	718-04012	Cup, Bearing
38	754-0468	Belt, V-Type	88	736-0362	Washer, Flat
39	756-04002	Pulley, V-Type, 7.25 Dia.	89	741-0600	Ball Bearing
40	756-0981B	Idler Pulley, Flat 2.75 OD	90	783-04707	Switch Bracket, Parking Brake
41	783-04283	Bracket, Shift	91	736-0242	Washer, Bell,.340 x.872 x.060
42	783-04360	Bracket, Shift, F-N-R	92	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon
43	783-04442	Idler Bracket, Center Double	93	710-0599	Screw, 1/4-20 x.500
44	647-0031B	Control Assembly, Brake	94	736-0430	Flat Washer,.350 x 1.59 x.062
45	647-0032A	Control Assembly, Speed	95	731-2290A	Hub Cap
46	683-0266	Pedal Assembly	96	736-0119	Lock Washer, 5/16
47	710-0650	Screw, 5/16-18, 0.875	97	634-0104	Whl Ass'y Comp., 20 x 8 x 8
48	710-1260A	Screw, 5/16-18, 0.750		734-1730	Tire Only 20 x 8 x 8
49	710-1611B	Screw, 5/16-18, 0.750		734-0603A	Rim Only w/ Valve Stem
50	711-04159B	Pin, 3/8-16 x 2.68			


Model 601

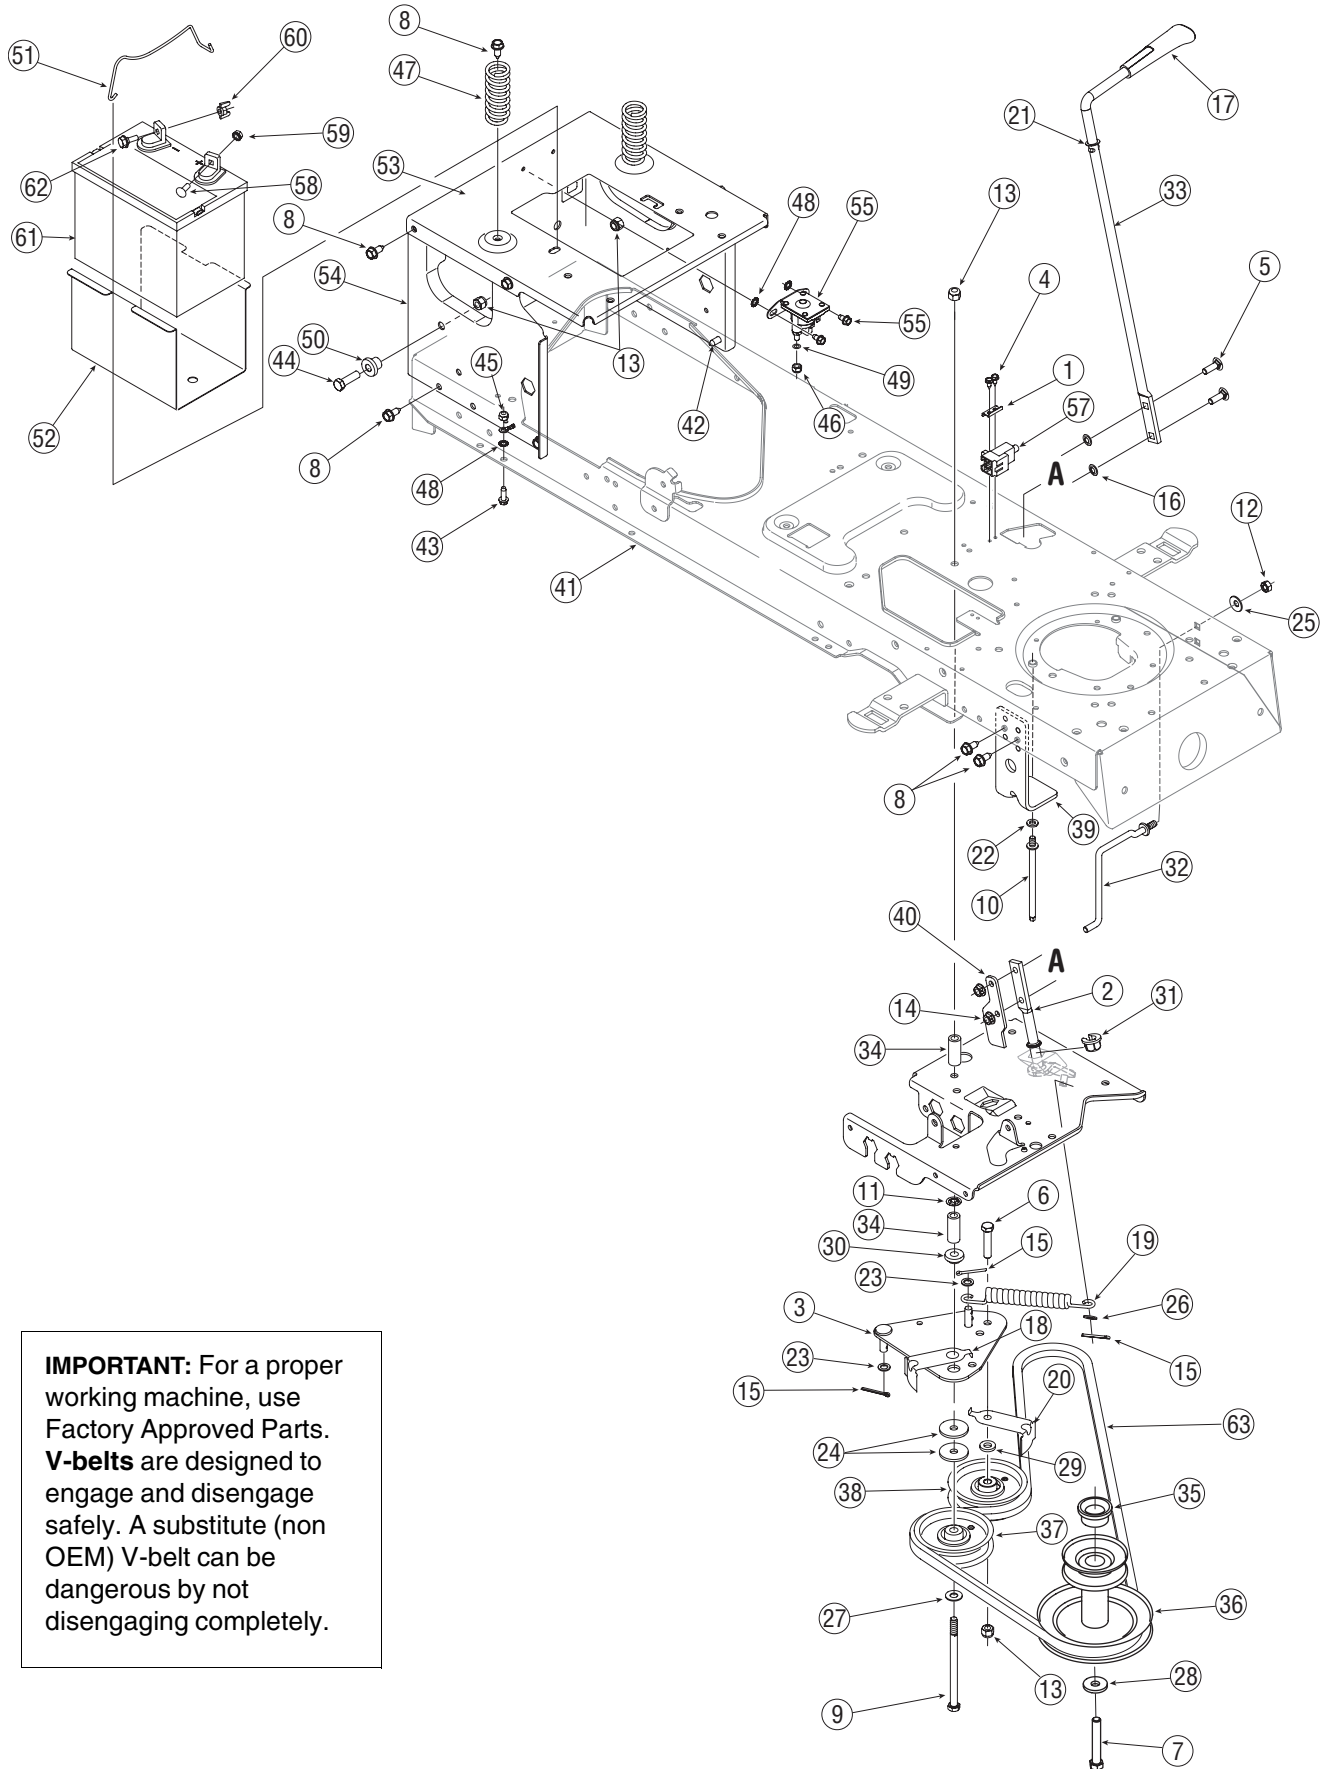

Model 601

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17962	Plate, Switch	33	747-1112D	Engagement Handle, Deck
2	647-0064	Lever Assembly, Engagement	34	748-0415B	Spacer,.385 ID x.635 OD x 1.54
3	683-0302	Plate Assembly, Engagement	35	750-0956	Spacer, 1.010 x 1.400 x.825
4	710-0224	Screw, #10-16, 0.500	36	756-04142	Pulley, Engine, 3.39 x 6.12 Diameter
5	710-0276	Screw, Carriage, 5/16-18, 1.00	37	756-0487	Pulley, Idler, V-type 5/8 x 4.0 Diameter
6	710-0347	Screw, 3/8-16, 1.75, Gr5	38	756-0627D	Pulley, Idler, 3.50 Diameter
7	710-04377	Screw, 7/16-20, 2.75, Gr5	39	783-04467	Stop Bracket, Deck-Up
8	710-0726	Screw, 5/16-12, 0.750	40	783-0744A	Stop Bracket, Engagement
9	710-0831	Screw, 3/8-16, 5.50, Gr5	41	683-04173	Frame Assembly, Lower
10	711-1044	Pin, Belt Guard, 5/16 x 4.75	42	710-0607	Screw, 5/16-18, 0.500
11	712-0229	Nut, Push, 3/8	43	710-0642	Screw, 1/4-20, 0.750
12	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon	44	710-3005	Screw, 3/8-16, 1.25, Gr5
13	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon	45	712-04064	Nut, Flange Lock, 1/4-20, GrF, Nylon
14	712-3004A	Nut, Flange Lock, 5/16-18, Gr5	46	712-3006	Nut, Hex, 1/4-20, Gr5
15	714-0470	Pin, Cotter, 1/8 x 1.25	47	732-04035	Spring, Compression, 1.28 OD x 3.125
16	726-0201	Nut, Speed,.3125 ID	48	736-0222	Washer, Lock, 1/4, External
17	731-2111A	Knob, PTO	49	736-0329	Washer, Lock, 1/4
18	732-04245A	Belt Guard	50	738-04058	Spacer, Shoulder,.38 x 1.0 x.70
19	732-0944	Spring, Extension,.75 OD x 6.75	51	747-04121A	Hold Rod, Battery
20	732-1013	Belt Guard	52	783-0349	Battery Tray
21	736-0108	Washer, Flat,.510 x.750 x.033	53	783-04329A	Seat Bracket, Frame
22	736-0119	Washer, Lock, 5/16	54	783-04375A	Frame, Upper
23	736-0140	Washer, Flat,.385 x.62 x.063	55	710-0599	Screw, 1/4-20, 0.50
24	736-0227	Washer, Flat,.390 x 1.500 x.134	56	725-1426A	Solenoid, 12V, 100 Amp
25	736-0242	Washer, Bell,.340 x.872 x.060	57	725-04039	Switch, Interlock
26	736-0275	Washer, Flat,.344 x.688 x.065	58	710-0703	Screw, Carriage, 1/4-20,.75, Gr5
27	736-0300	Washer, Flat,.406 x.875 x.059	59	712-0271	Nut, Sems, 1/4-20
28	736-0322	Washer, Flat,.450 x1.250 x.164	60	712-3087	Nut, Wing, 1/4-20
29	736-3010	Washer, Flat,.407 x.812 x.135	61	725-1750A	Battery, 235 CCA
30	738-0372B	Spacer, Shldr, 1.00 x.38 x.38	62	738-1132	Screw, Shoulder,.250 x.150, 1/4-20
31	741-0708	Bearing, Flange, Hex Split.500 ID	63	754-04064	V-Belt, PTO
32	747-04355	Keeper Rod, Belt			

Model 601

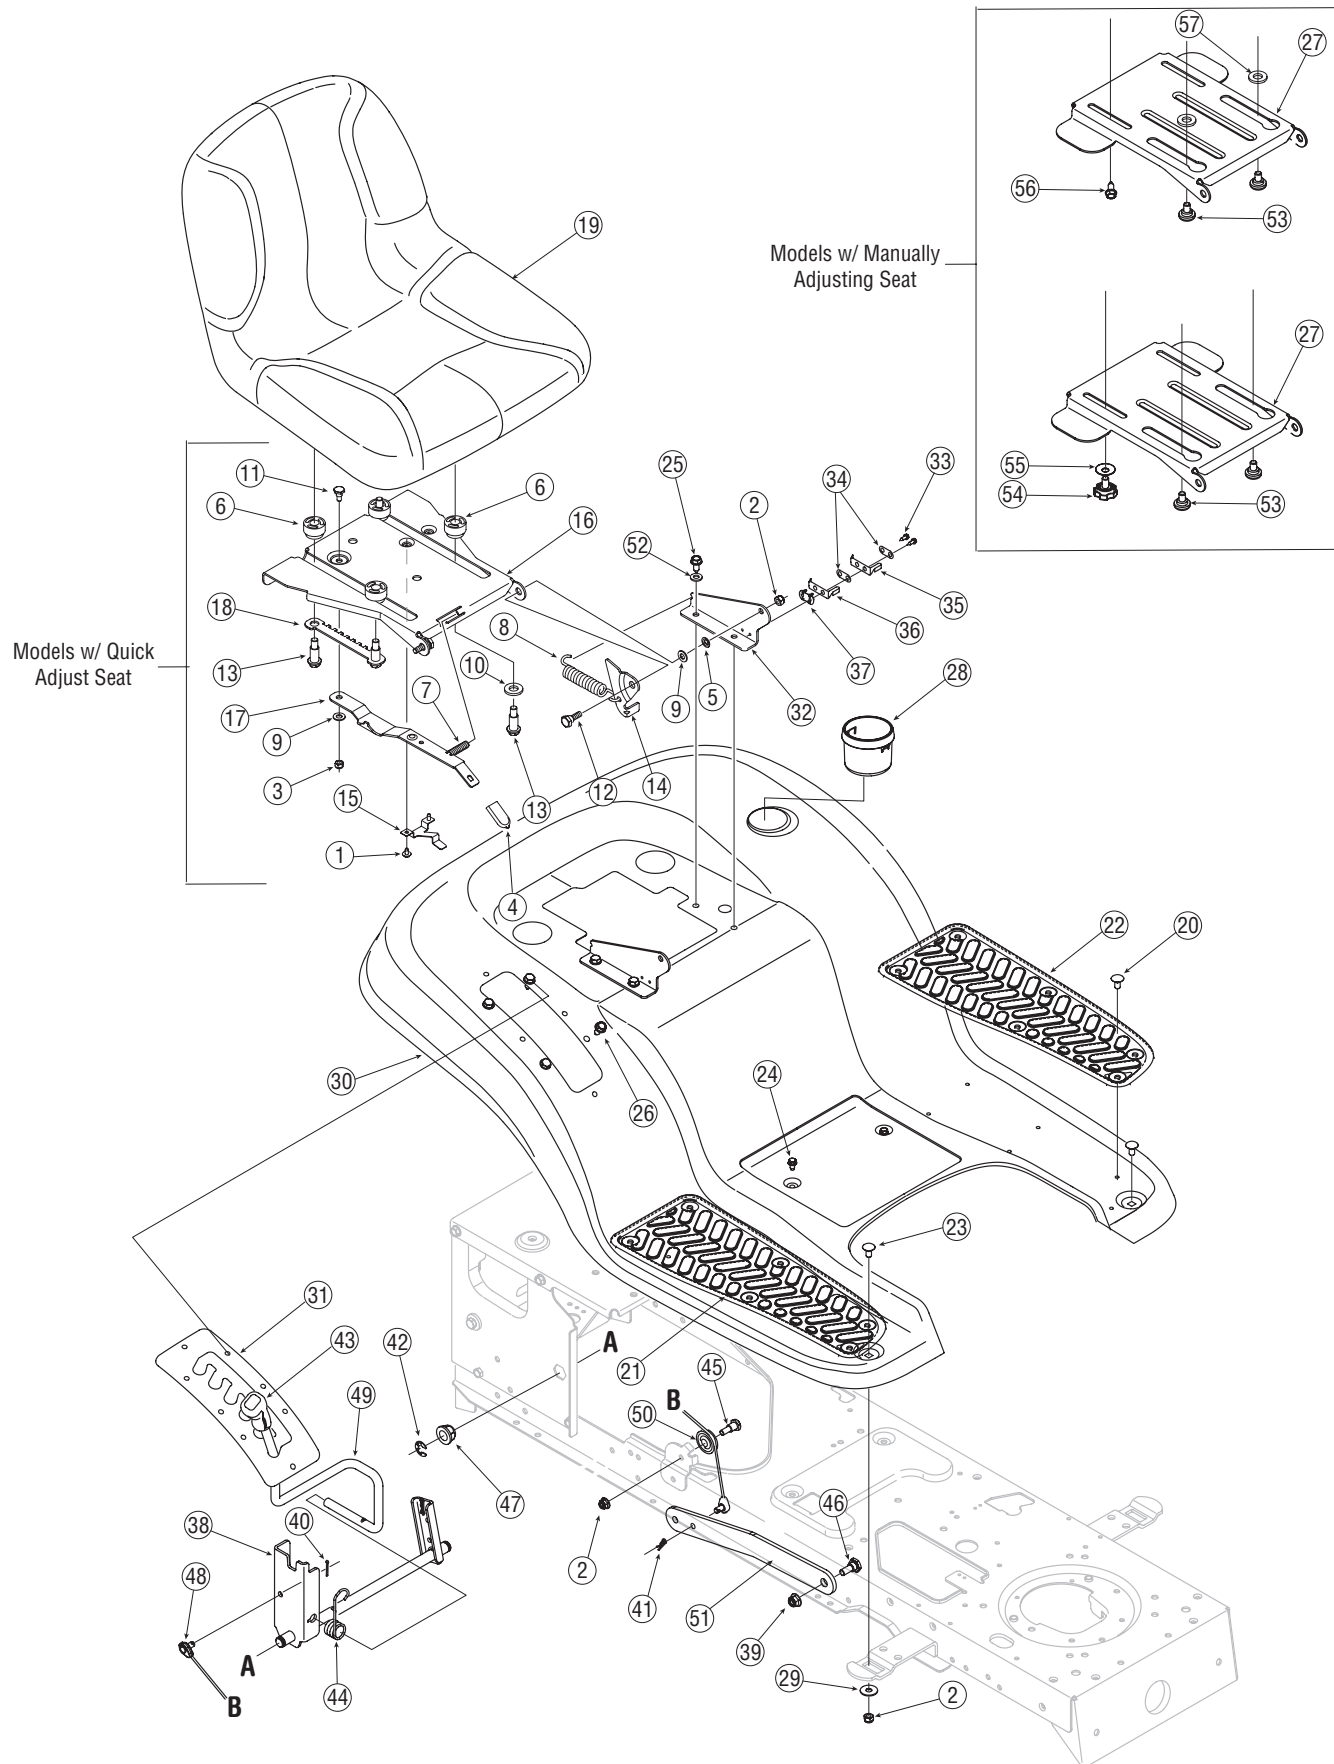


Model 601

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	710-1268	Screw, #10-16 x.375	30	783-04314A	Fender
2	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon	31	783-1010A	Plate, Deck Lift
3	712-3027	Nut, Flange Lock, 1/4-20	32	783-1489A	Mounting Bracket, Seat
4	720-0309A	Seat Adjuster Grip	33	710-0227	Screw, #8-18 x.50
5	726-0201	Nut, Speed,.3125 ID	34	726-0279	Plate, Insulator
6	731-04074	Spacer	35	725-1303	Spring Switch, Outer
7	732-0499	Compression Spring,.41 x 1.5	36	725-1439	Spring Switch, Inner
8	732-1184	Spring, Extension,.84 Dia. x 4.6	37	726-0278	Plate, Insulator Boss
9	736-0275	Wash, Flat,.344 x.688 x.065	38	683-04079	Shaft Assembly, Lift
10	736-3019	Wash, Flat,.531x 1.062 x.134	39	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon
11	738-0137A	Screw, Shoulder,.340 x.285, 1/4-20	40	714-0104	Pin, Cotter,.072 Dia. x 1.13
12	738-0296	Screw, Shoulder,.437 x.268, 5/16-18	41	714-0111	Pin, Cotter, 3/32, 1.0
13	738-0966	Screw, Shoulder,.50 x.925, 3/8-16	42	716-0106A	Ring, E Type,.625 Dia.
14	683-04193	Seat Bracket, Lift	43	720-0311	Grip, Handle, 1/2
15	783-0611	Seat Stop	44	732-0874	Spring, Torsion
16	783-0738B	Seat Pivot Bracket	45	738-0138A	Screw, 5/16-18 x.620 Gr2
17	783-0739A	Seat Adjustment Lever	46	738-0380	Screw, Shld,.50 x.27, 3/8-16
18	783-0753	Seat Adjustment Selector	47	741-0225	Bearing, Hex Flange
19	757-04003	High Back Seat	48	746-0968	Cable, Lift, 16.16
20	726-3046	Ratchet Clip	49	747-04155	Handle, Lift
21	735-0672	RH Foot Pad, Rubber	50	756-1154	Pulley, Roller
22	735-0673	LH Foot Pad, Rubber	51	783-0678A	Arm, Lift
23	710-0451	Bolt, Carriage, 5/16-18,.750, Gr1	52	736-0607	Lock Washer, 5/16
24	710-0599	Screw, 1/4-20, 0.500	53	738-04012	Shoulder Screw
25	710-0726	Screw, 5/16-12, 0.750	54	720-04009	Knob, 3/8-16
26	710-1611B	Screw, 5/16-18 x.750	55	736-0101	Flat Washer,.406 x 1.00 x.030
27	783-04081A	Seat Pivot Bracket, Manually Adjusted	56	710-0870	Hex Head Washer Screw, 3/8-16 x.625
28	731-04591A	Cup Holder	57	736-0335	Thrust Washer,.635 x 1.26 x.06
29	736-3078	Washer, Flat,.344 x 1.0 x.063			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model 601

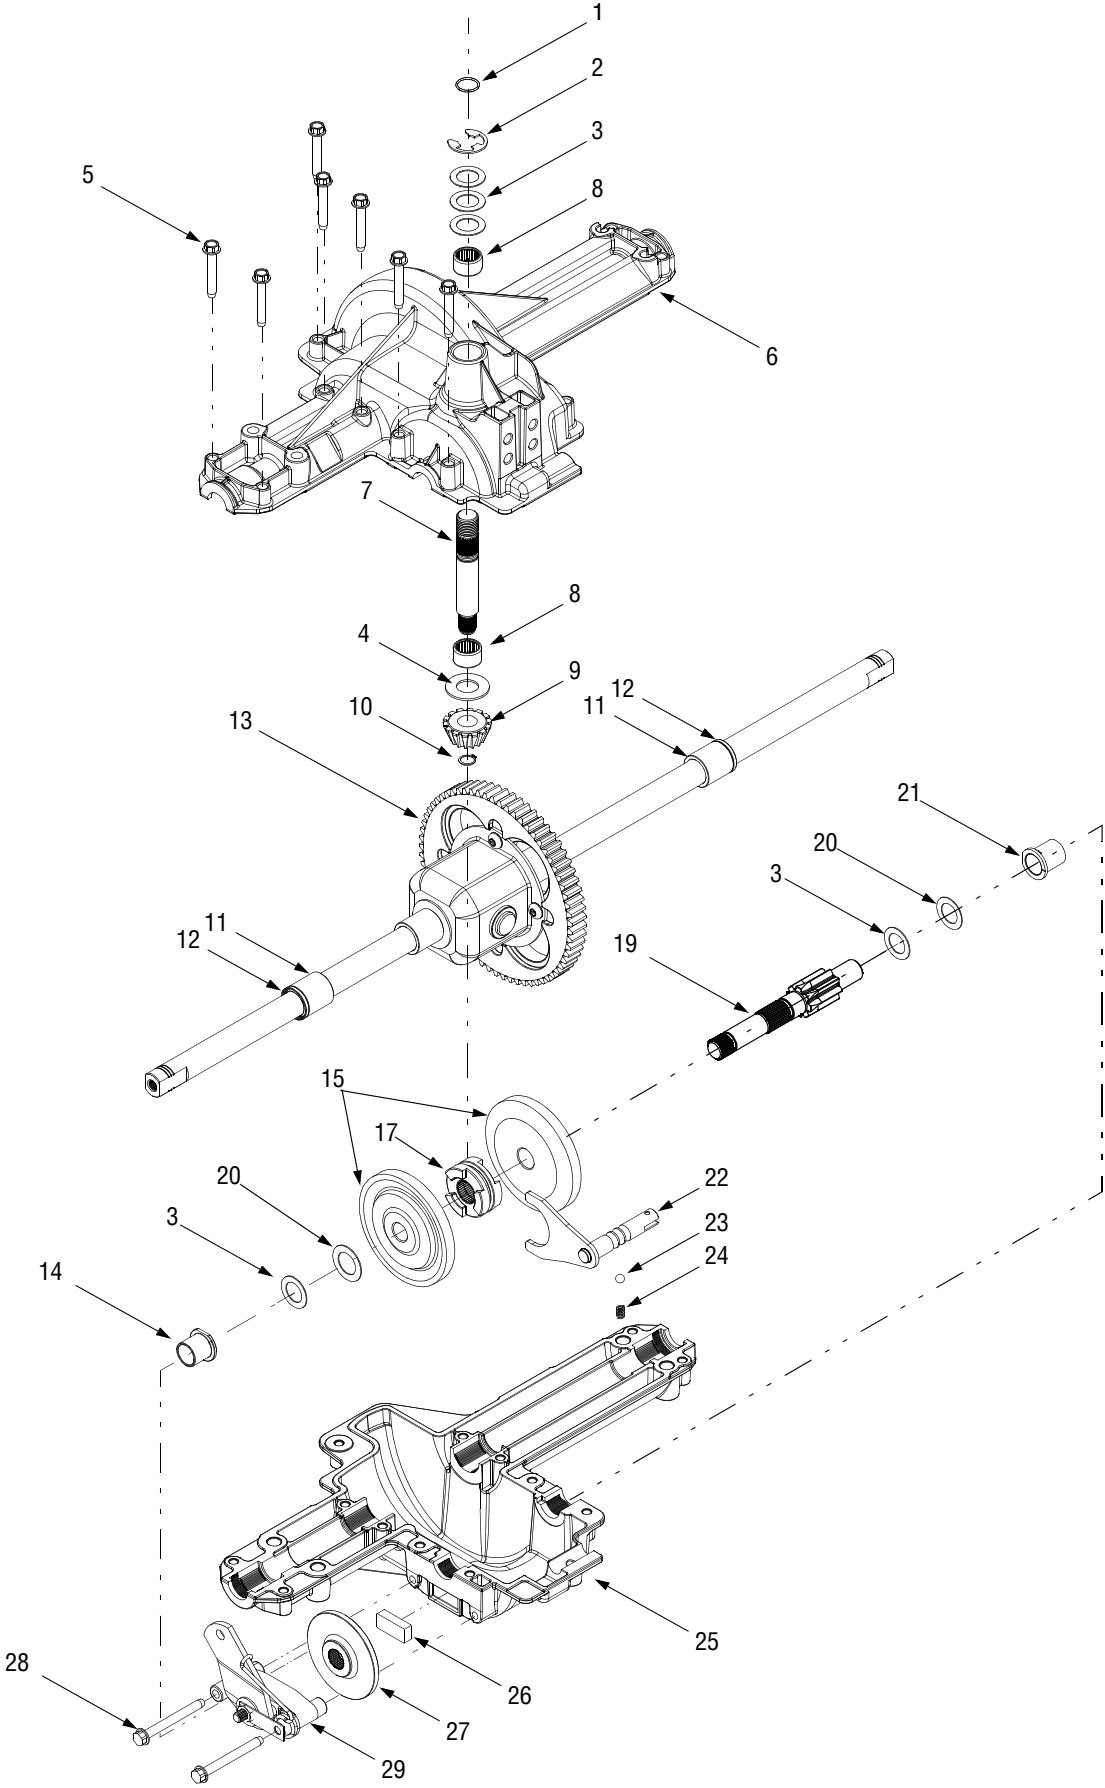


Model 601

REF. NO.	PART NO.	DESCRIPTION
1	732-0614	Ring, Wire
2	716-0231	Ring, E Type,.750
3	736-0336*	Flat Washer, 5/8 x 1.0 x.030
	736-0337*	Flat Washer, 5/8 x 1.0 x.040
	736-0349*	Flat Washer, 5/8 x 1.0 x.020
4	736-0335	Washer, Thrust.635 x 1.26 x.06
5	710-1325	Self-tapping Screw, 1/4-20 x 1.625
6	719-04017	Upper Housing
7	711-1109	Input Shaft
8	741-0335	Needle Bearing,.625 x.813 x.495
9	717-1464	14-tooth Bevel Pinion
10	716-0108	Retaining Ring,.437
11	741-0340	Sleeve Bearing,.75 x 1.0 x 1.0
12	721-0338	Seal,.75 x 1.0 x.125
13	618-04041	Differential Assembly
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	717-04056	42-tooth Bevel Gear
17	718-04045	Clutch Collar
19	711-04134	Drive Shaft
20	736-0495*	Thrust Washer, 1.0 x.632 x.0
	736-0494*	Flat Washer,.632 x 1.00 x.035
21	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
22	611-0011	Detent Shaft Assembly
23	741-0862	Detent Ball
24	732-0863	Compression Spring
25	719-04018	Lower Housing
26	717-0678	Brake Puck
27	761-0202	Brake Disc
28	710-1206	Self-tapping Screw, 1/4-20 x 2.375
29	661-0001	Brake Assembly
—	737-0148	Grease (19 oz.)

*Use applicable washers (ref. no.'s 3 or 20) in this application allowing .0150/.0020 in. end-play.

NOTE: If rebuilding the upper housing, include two ounces (2 oz.) of Unirex[®] N3 grease (Part No. 737-0289) in the input shaft cavity.

Model 601

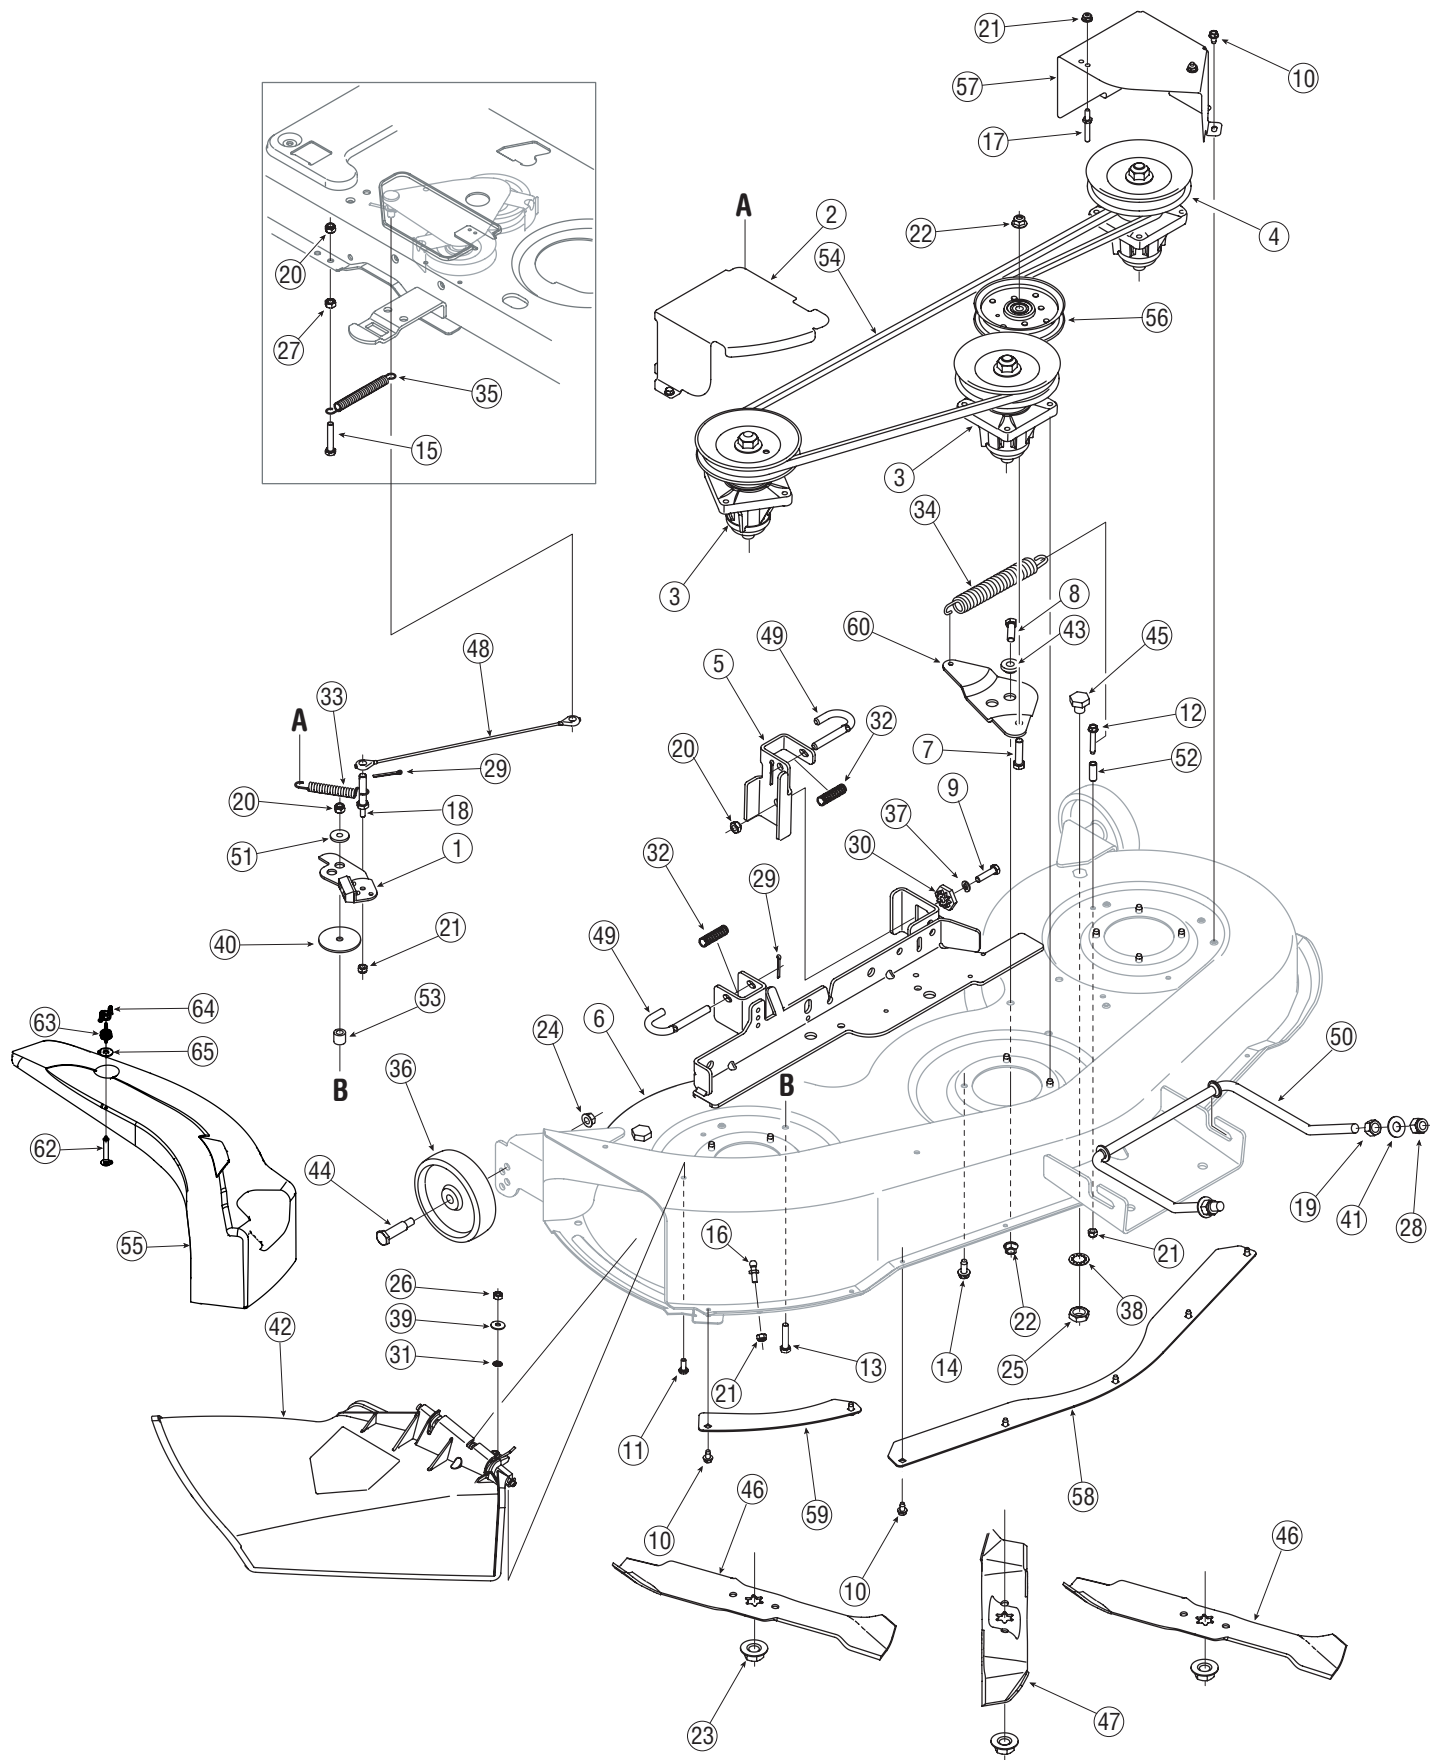

Model 601

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17116	Brake Assembly, Deck	34	732-0594A	Spring, Extension,.91 Dia x 7.33
2	17258D	RH Belt Cover, Deck 46"	35	732-04197	Spring, Extension,.68 OD x 5.00 Lg
3	618-0240A	Spindle Assembly, 5.00 Dia.	36	734-0973	Wheel, Deck 5.0 x 1.38
4	618-04134B	Spindle Ass'y, Double Pulley	37	736-0119	Washer, Lock, 5/16
5	683-0254B	Hanger Bracket Assembly	38	736-0225	Washer, Lock, 5/8
6	683-04104A	Deck Weldment	39	736-0270	Washer, Bell,.265 x.75 x.062
7	710-0344	Screw, 3/8-16, 1.50, Gr5	40	736-0418A	Washer, Flat,.34 x 2.25 x.10
8	710-0514	Screw, 3/8-16, 1.00, Gr5	41	736-3084	Washer, Flat,.51 x 1.12 x.06
9	710-0528	Screw, 5/16-18, 1.25, Gr5	42	731-1032B	Chute Assembly
10	710-0599	Screw, 1/4-20, 0.500	43	738-0347	Spacer, Shoulder,.625 ID x.169
11	710-3015	Screw, 1/4-20 x.75, Gr5	44	738-0373	Spacer, Shoulder,.498 x 1.53, 3/8-16
12	710-0778	Screw, 1/4-20, 1.500	45	738-04146	Plug, Screw, M16 x 1.5
13	710-0805	Screw, 5/16-18, 1.50, Gr5	46	742-0611A	Blade, 16.28", Star 3-in-One
14	710-1260A	Screw, Ld, 5/16-18, 0.750	47	742-0612A	Blade, 14.88", Star 3-in-One
15	710-3180	Screw, 5/16-18, 1.75, Gr5	48	746-1107	Cable, 12.00"
16	711-04069	Pin, Grass catcher, 1/4-20	49	747-1116	Rod, Deck Release
17	711-0993	Belt Guard Pin 1/4 Dia x 1.43	50	747-1130B	Rod, Deck
18	711-1554	Pin, 1/4-20, 3/8 x 2.0	51	748-0234	Shoulder Spacer
19	712-0206	Nut, Hex, 1/2-13, Gr5	52	750-0566A	Spacer,.260 x.372 x 1.030
20	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon	53	750-1320	Spacer,.375 x.63 x.595
21	712-04064	Nut, Flange Lock, 1/4-20, GrF, Nylon	54	754-0349	Belt, V-Type, Poly
22	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon	55	731-1636†	Mulch Plug
23	712-0417A	Nut, Flange, 5/8-18	56	756-04129	Pulley, Idler, 4.25" Dia.
24	712-0431	Nut, Flange Lock, 3/8-16, GrF	57	783-1348B	Belt Cover, LH
25	712-0641	Nut, Hex, M16-1.5	58	783-0141	Deck Skirt, Center
26	712-3006	Nut, Hex, 1/4-20, Gr5	59	783-0142	Deck Skirt, RH
27	712-3010	Nut, Hex, 5/16-18, Gr5	60	783-04641	Bracket, Idler
28	712-3083	Nut, Hex Lock, 1/2-13, Gr8, Nylon	61	783-1025	Stop, Chute
29	714-0470	Pin, Cot, 1/8 x 1.25	62	710-0578†	Screw, 1/4-20 x 1.500
30	717-04074	Adjustment Gear, Deck	63	712-3006†	Hex Nut, 1/4-20
31	726-0233	Nut, Push,.25 ID x.50 OD	64	712-3087†	Wing Nut, 1/4-20
32	732-0306A	Spring, Compression,.531 OD x 1.75	65	736-0173†	Flat Washer,.28 x.74 x.063
33	732-0429A	Spring, Extension,.50 Dia x 3.97			

† If Equipped

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.