

ILLUSTRATED PARTS MANUAL

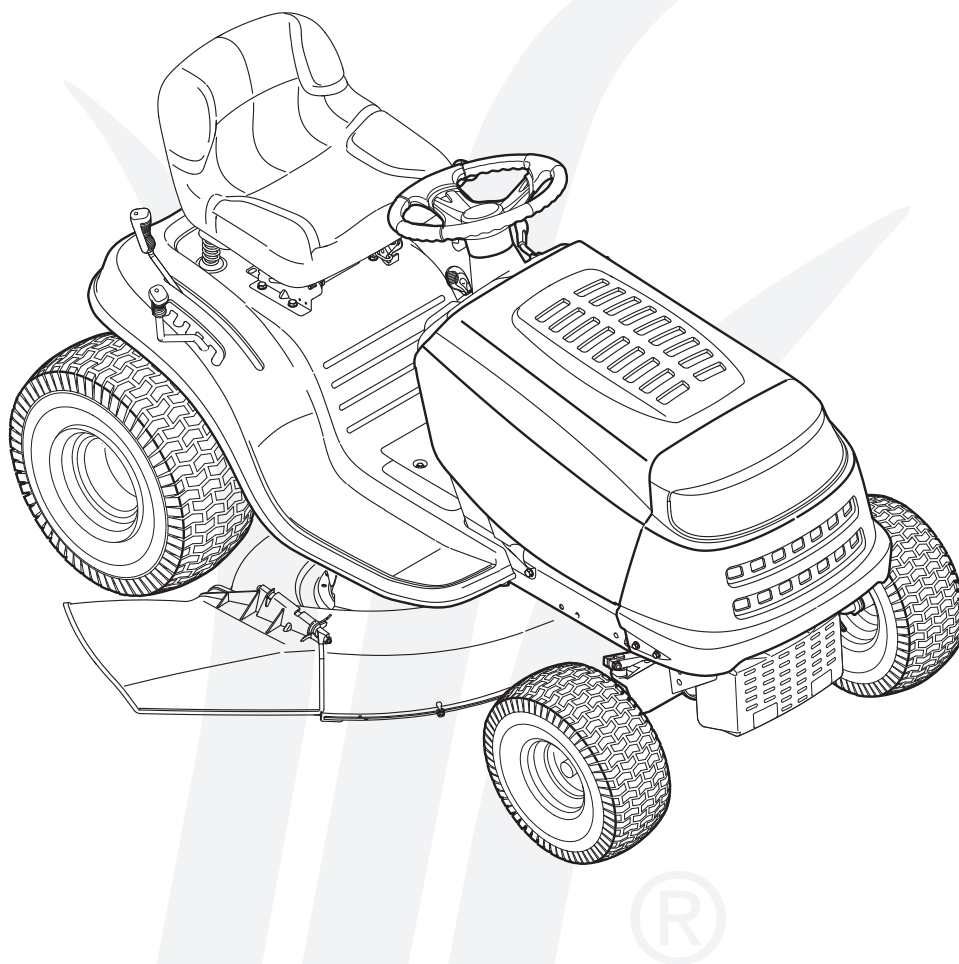


Transmatic Lawn Tractor — Models 760-779

IMPORTANT

READ SAFETY RULES AND INSTRUCTIONS CAREFULLY BEFORE OPERATION

Warning: This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator. In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester for the muffler is available through your nearest engine authorized service dealer or contact the service department, P.O. Box 361131 Cleveland, Ohio 44136-0019.

Models 761 & 771

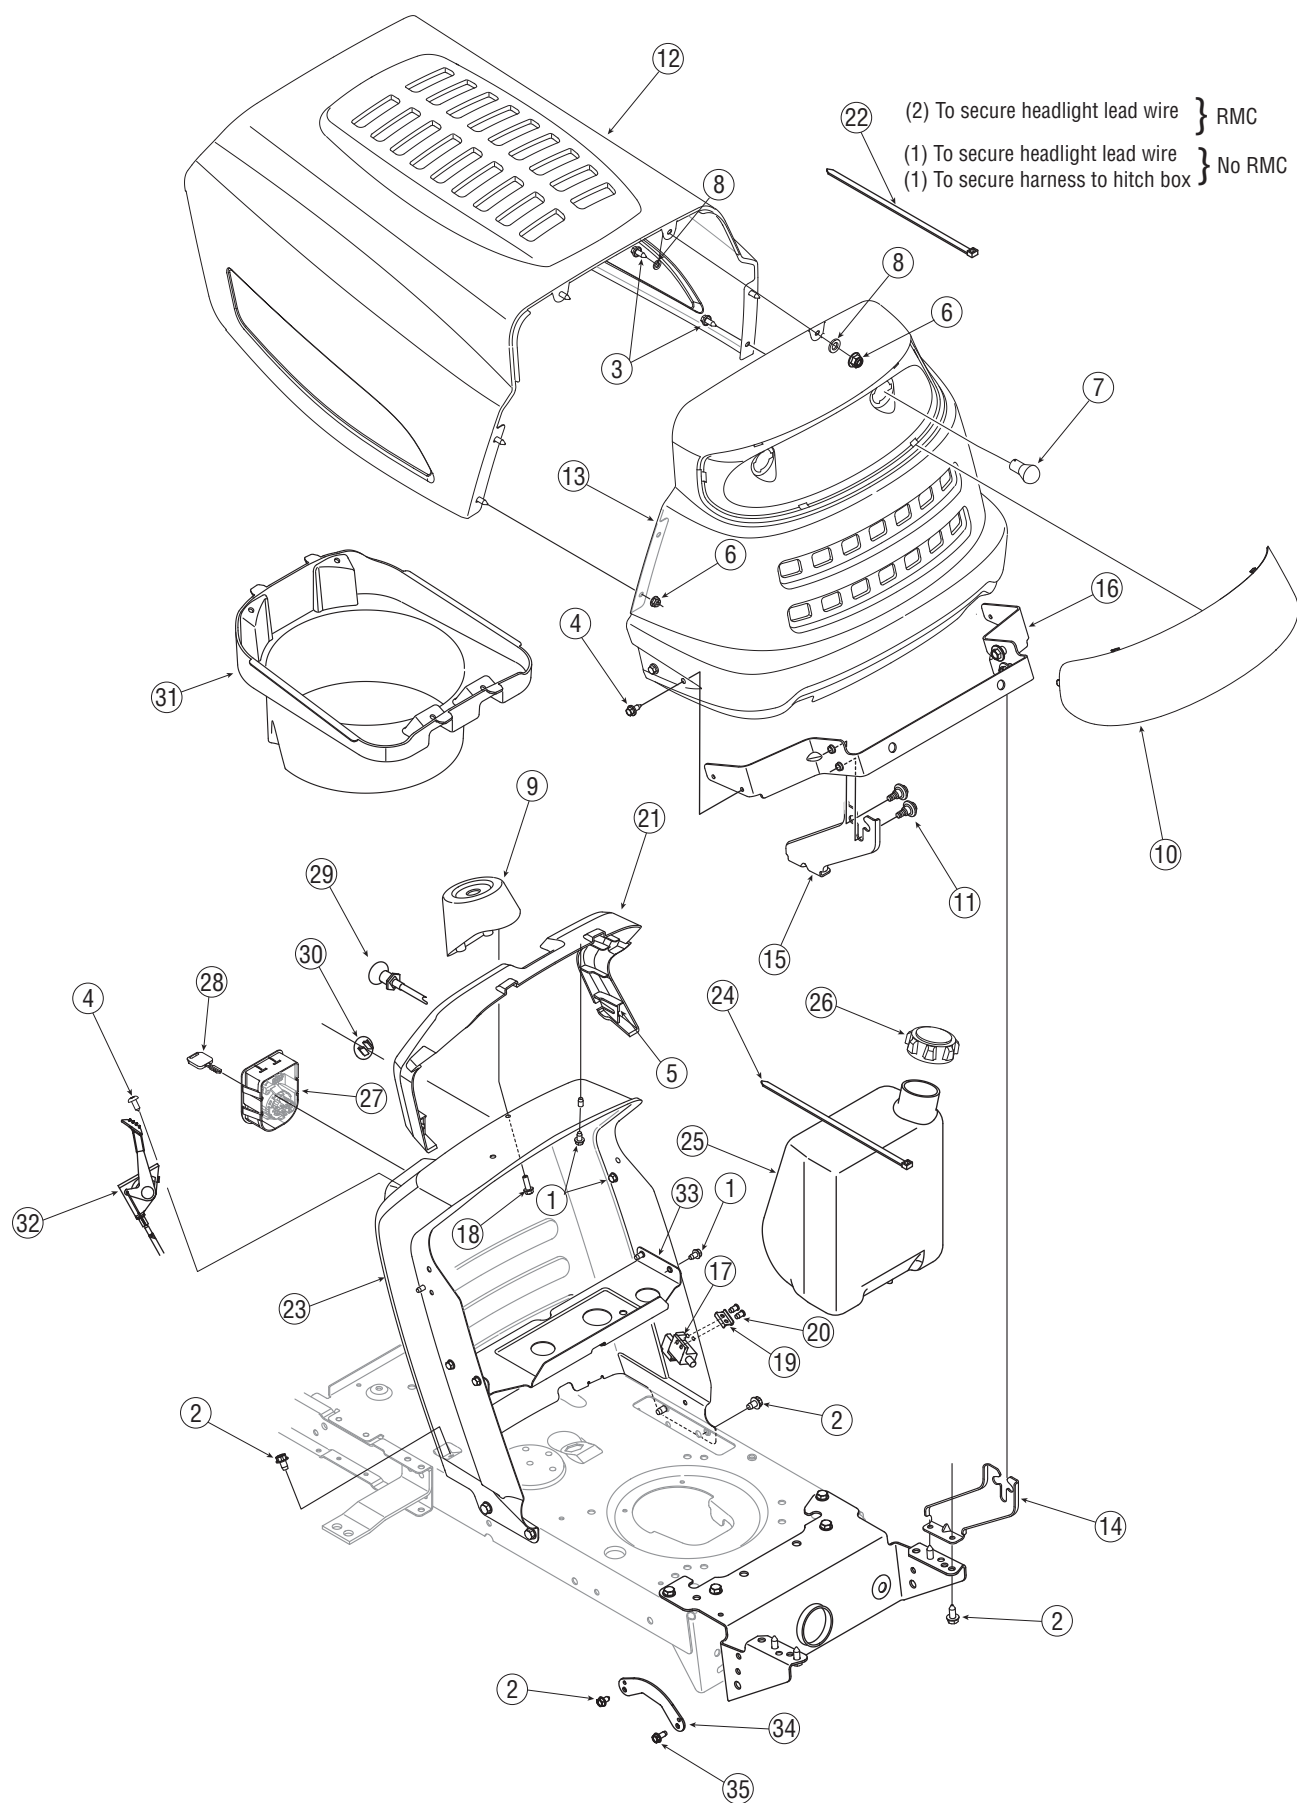

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-0599	Screw, 1/4-20, 0.500	23	783-04892	Dash Assembly (RMC*)
2	710-0604A	Screw, 5/16-18, 0.625		783-04873	Dash Assembly (No RMC)
3	710-0751	Screw, 1/4-20, .620, Gr5	24	726-0230	Cable Tie, 34.75
4	710-04483	Screw, 1/4-20, .500	25	751-0555B	Fuel Tank, 1.5 gal.
5	712-0185	Nut, 1/4-20, Speed U-type	26	751-0603	Fuel Tank Cap
6	712-04064	Nut, Flange Lock, 1/4-20, Gr5	27	725-04227A	Module, Ignition Switch (RMC)
7	725-0963	Headlamp, 12V		725-1741	Ignition, Switch (No RMC)
8	736-0176	Washer, Flat, .265 x .938 x .120	28	725-1744	Key
9	731-04945	Support, Steering	29	746-1085A	Choke Control, 37.5"
10	731-04949	Lens	30	731-05265	Plug
11	738-04091	Screw, Shoulder, .43 x.29, 5/16-18	31	731-05147A	Plenum (Single Cylinder Engine)
12	783-04551	Hood		731-05165	Plenum (Twin Cylinder Engine)
13	783-04552	Grille	32	746-04258	Throttle/Choke Control, 25"
14	783-04577	Pivot Bracket, LH			(Single Cylinder Engine)
15	783-04578	Pivot Bracket, RH		746-1086	Throttle Control, 39" (Twin
16	783-04621	Pivot Bracket, Grille			Cylinder Engine)
17	725-04039†	Switch	33	783-04584	Gas Tank Support Bracket
18	710-0895	Screw, 1/4-15, 0.750	—	629-04151A	Wire Harness (RMC)
19	17962†	Switch Plate	—	725-04361	Wire Harness (No RMC)
20	728-04021†	Pop Rivet	34	783-05027	Front Pivot Support Bracket
21	731-04947	Collar, Dash	35	710-1260A	Screw, 5/16-18 x .750
22	725-0157	Cable Tie			

* Reverse Caution Mode

† Models equipped with Reverse Caution Mode

10


Illustrated Parts List



To order replacement
parts, call the Customer
Service Line at
1-800-800-7310,
or visit
www.mtdproducts.com.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model 762 & 772

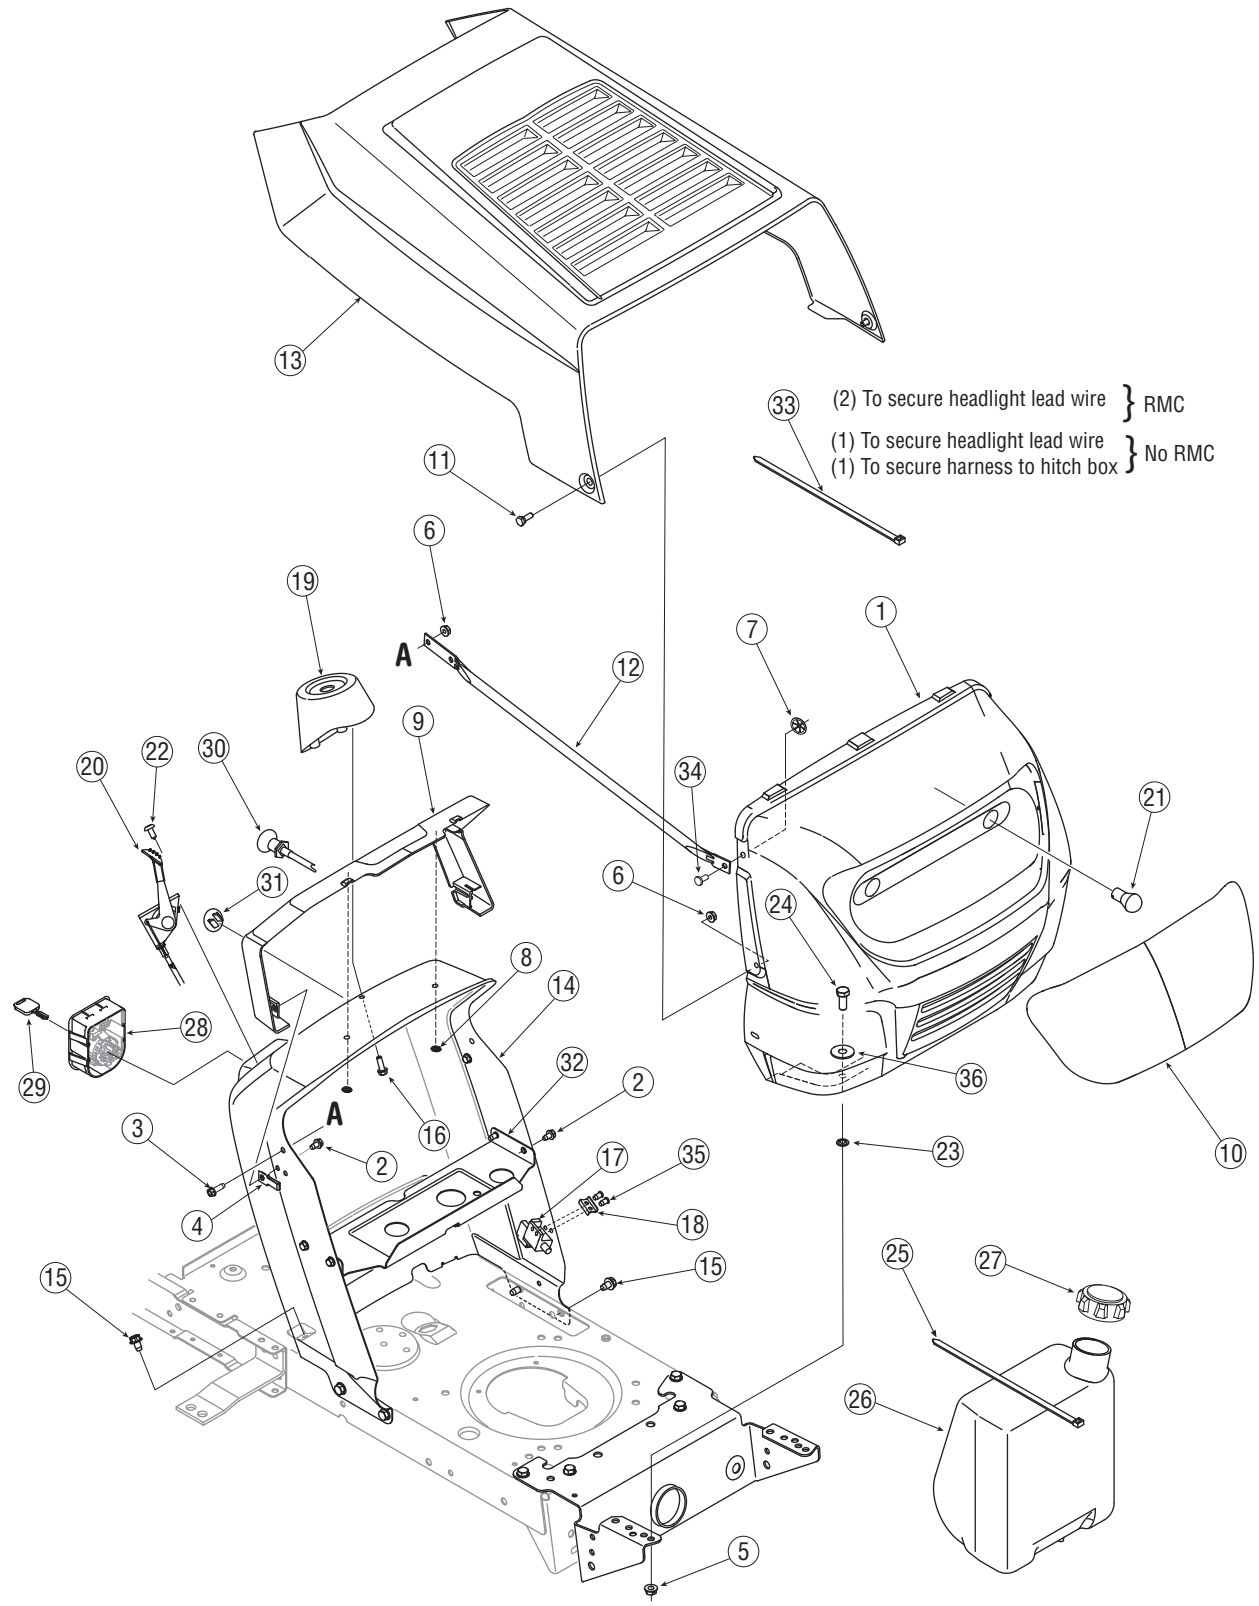

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	783-04979	Grille		746-1086	Throttle Control, 39" (Twin Cylinder Engine)
2	710-0599	Screw, 1/4-20, 0.500			
3	710-0642	Screw, 1/4-20, 0.750	21	725-0963	Headlamp, 12V
4	712-0185	Nut, 1/4-20, Speed U-type	22	710-04483	Screw, 1/4-14, .500
5	712-04063	Nut, Flange Lock, 5/16-18, GrF	23	726-0201	Speed Nut, .3125
6	712-04064	Nut, Flange Lock, 1/4-20, GrF	24	710-3008	Screw, 5/16-18, .750
7	726-04012	Nut, Push-on, .25 Dia	25	726-0230	Cable Tie, 34.75
8	726-0233	Push Nut, .25ID x .50OD	26	751-0555B	Fuel Tank, 1.5 gal.
9	731-05012	Collar, Dash, 0-Style	27	751-0603	Fuel Tank Cap
10	731-1503A	Lens	28	725-04227A	Module, Ignition Switch (RMC)
11	738-0952A	Screw, Shldr, .375 x .125, 1/4-20		725-1741	Module, Ignition Switch (No RMC)
12	749-04220	Support Rod, Grill	29	725-1744	Key
13	783-04608	Hood	30	746-1085A	Choke Control, 37.5"
14	783-04892	Dash Assembly (RMC*)	31	731-05265	Choke Plug
	783-04873	Dash Assembly (No RMC)	32	783-04584	Gas Tank Support Bracket
15	710-0604A	Screw, 5/16-18, 0.625	33	725-0157	Cable Tie
16	710-0895	Screw, 1/4-15, 0.750	34	728-0162	Rivet, Flat Head 1/4"
17	725-04039†	Switch	35	728-04021†	Pop Rivet
18	17962†	Switch Plate	36	736-3078	Flat Washer, .344 x 1.00 x .063
19	731-04945	Support, Steering	—	629-04151A	Wire Harness (RMC)
20	746-04258	Throttle/Choke Control, 25" (Single Cylinder Engine)	—	725-04361	Wire Harness (No RMC)

* Reverse Caution Mode

† Models equipped with Reverse Caution Mode


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

10

Illustrated Parts List



To order replacement parts, call the Customer Service Line at 1-800-800-7310, or visit www.mtdproducts.com.

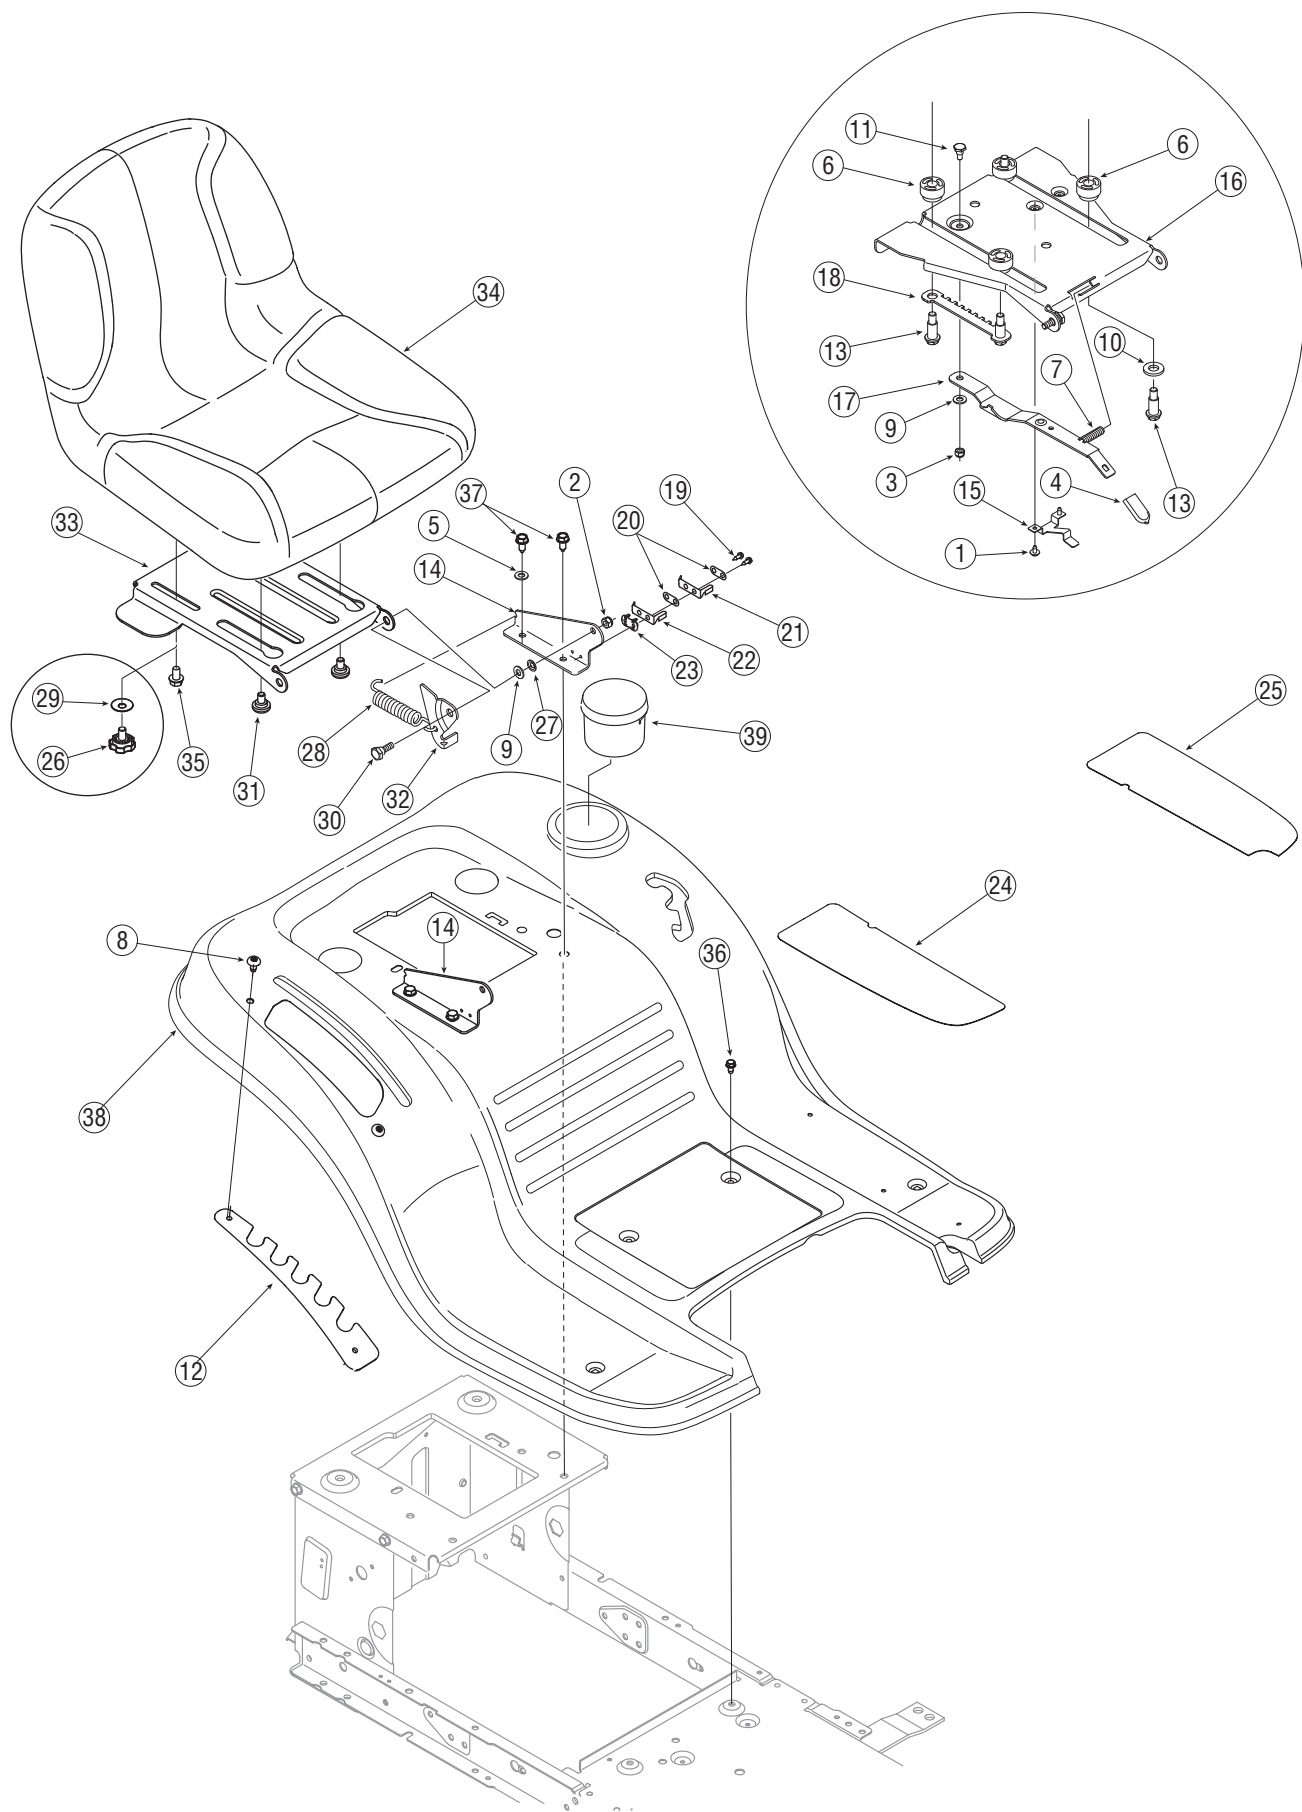

Ref. No.	Part No.	Description
1	710-1268	Screw, #10-16, .375
2	712-04063	Nut, Flange Lock, 5/16-18, GrF
3	712-3027	Nut, Flange Lock, 1/4-20
4	720-0309A	Seat Adjuster Grip
5	736-0607	Lock Washer, 5/16
6	731-04074	Spacer
7	732-0499	Compression Spring, .41 x 1.5
8	710-04483	Screw, 1/4-20 x .500
9	736-0275	Wash, Flat, .344 x .688 x .065
10	736-3019	Wash, Flat, .531x 1.062 x.134
11	738-0137A	Screw, Shlder, .340 x .285,1/4-20
12	783-04843	Lift Adjustment Bracket
13	738-0966	Screw, Shlder, .50 x .925, 3/8-16
14	783-1489B	Mounting Bracket, Seat
15	783-0611	Seat Stop
16	783-0738B	Seat Pivot Bracket
17	783-0739A	Seat Adjustment Lever
18	783-0753	Seat Adjustment Selector
19	710-0227	Screw, #8-18 x .50
20	726-0279	Plate, Insulator
21	725-1303	Spring Switch, Outer
22	725-1439	Spring Switch, Inner
23	726-0278	Plate, Insulator Boss
24	723-04025	Foot Pad, Abrasive, RH
25	723-04026	Foot Pad, Abrasive, LH
26	720-04009	Knob, 3/8-16, .625
27	726-0201	Nut, Speed, .3125 Id
28	732-1184	Spring, Exten., .84 Dia x 4.6 Lg.
29	736-0101	Washer, Flat, .406 x 1.00 x .030
30	738-0296	Scr., Shlder, .437 x .268, 5/16-18
31	738-04012A	Screw, Shlder, .625 x .175, 3/8-16
32	783-0209D	Lift Bracket, Seat
33	783-04081A	Pivot Bracket, Seat
34	757-04021A	Seat, Low, Black
	757-04020A	Seat, Medium, Black
	757-04038	Seat, Low, Yellow
35	710-04482	Screw, 3/8-16, .875
36	710-0599	Screw, 1/4-20, 0.500
37	710-0604A	Screw, 5/16-18, 0.625
38	783-04587A	Fender
39	731-04591A	Cup Holder


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

10

Illustrated Parts List



To order replacement
parts, call the Customer
Service Line at
1-800-800-7310,
or visit
www.mtdproducts.com.

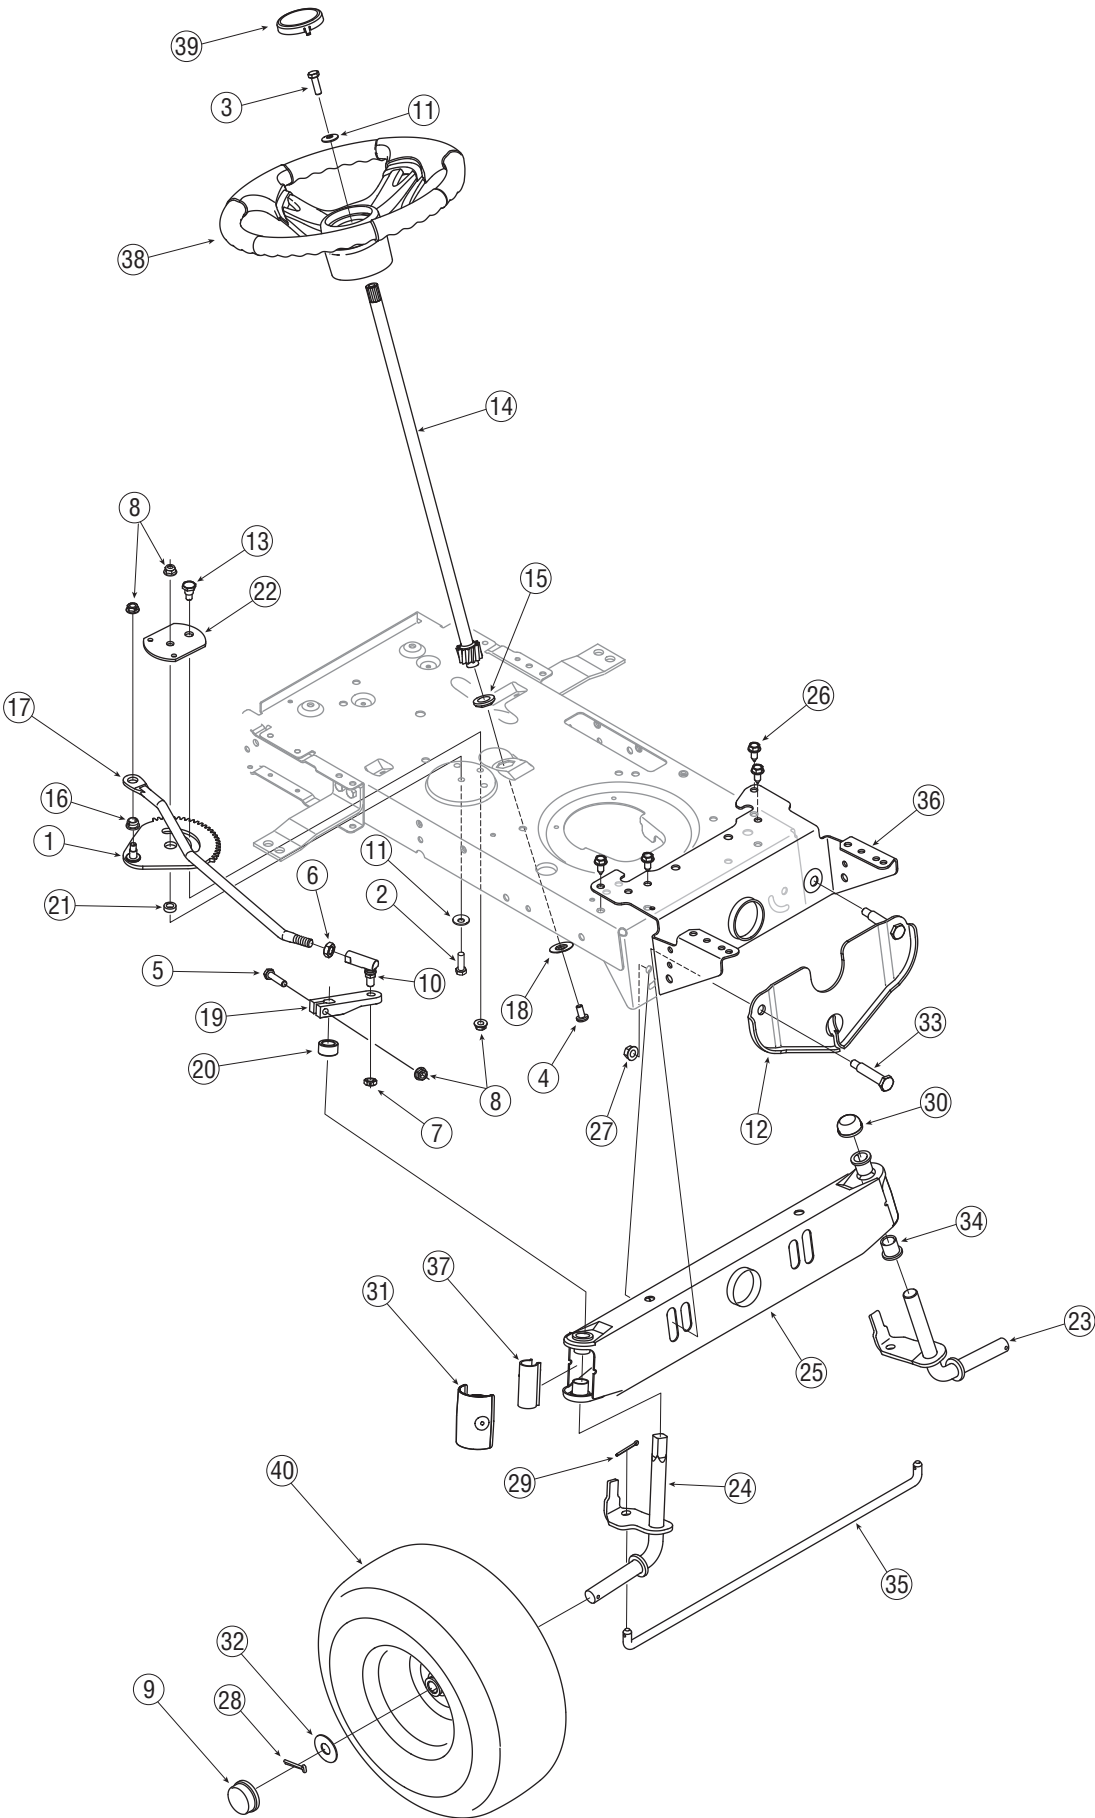

Ref. No.	Part No.	Description
1	617-04024	Gear Assembly, Steering
2	710-0376	Screw, 5/16-18, 1.00, Gr5
3	710-0643	Screw, 5/16-18, 1.00, Gr5, Lock
4	710-1309	Screw, Mach, 5/16-18, 0.750
5	710-3180	Screw, 5/16-18, 1.75, Gr5
6	712-0240	Nut, Jam, 7/16-20, Gr2
7	712-0262	Nut, Jam Lock, 3/8-24, Gr2
8	712-04063	Nut, Flange Lock, 5/16-18, Grf
9	731-0484A	Hub Cap
10	723-0448A	Ball Joint, 7/16-20, Lock
11	736-0242	Washer, Bell, .340 x .872 x .060
12	783-04568	Front Hanger Bracket, Deck
13	738-04141	Scr., Shlder, .435 x .3485, 5/16-18
14	738-0919	Steering Shaft, 5/8 Spline x 21.86
15	741-04124	Bearing, Flange, Hex 5/8
16	741-0475	Plastic Bushing .380 ID
17	747-04298	Drag Link, Steering
18	748-0389	Cap, 1.25 x .16
19	748-04065	Steering, Block
20	748-04068	Spacer, .710 ID x .125 OD x .56
21	750-04418	Spacer, .322 ID x .625 OD x .21
22	783-04644	Stabilizer Plate, Gear Segment
23	638-04007	Axle Assembly, LH
24	638-04008	Axle Assembly, RH
25	683-0128B	Pivot Bar

Ref. No.	Part No.	Description
26	710-0726	Screw, 5/16-12, 0.750
27	712-04065	Nut, Flange Lock, 3/8-16, GrF
28	714-04039	Pin, Cotter, 5/32, 1.25
29	714-0470	Pin, Cotter, 1/8 x 1.25
30	726-0341	Push Cap, 3/4
31	731-04057A	End Cap, Pivot Bar (Standard)
	731-1291A	End Cap, Pivot Bar (w/ Fitting)
32	736-0316	Washer, Flat, .78 x 1.59 x .060
33	738-04128	Scr., Shlder, .500 x 2.380, 3/8-16
34	741-0660A	Bearing, Flange, .760 x .941 x 1.0
35	747-04299A	Tie Rod
36	783-04601B	Bracket, Pivot
37	731-04057A	Axle End Cap, Standard
38	631-04028	Steering Wheel, Standard Grip
	631-04008	Steering Wheel, Soft Grip
39	731-04039	Cap, Steering Wheel (no logo)
	731-04040	Cap, Steering Wheel (sprig logo)
	731-04681	Cap, Steering Wheel (tine logo)
40	634-04229	Wheel Ass'y, Round Shoulder
	734-0864	Tire Only, 15 x 6 x 6, Round Shld.
	634-04086	Wheel Ass'y, Square Shoulder
	734-1731	Tire Only, 15 x 6 x 6, Square Shld.
	634-04081	Rim Assembly (Incl. bearings and valve stem)

10


Illustrated Parts List



To order replacement parts, call the Customer Service Line at 1-800-800-7310, or visit www.mtdproducts.com.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 760-779

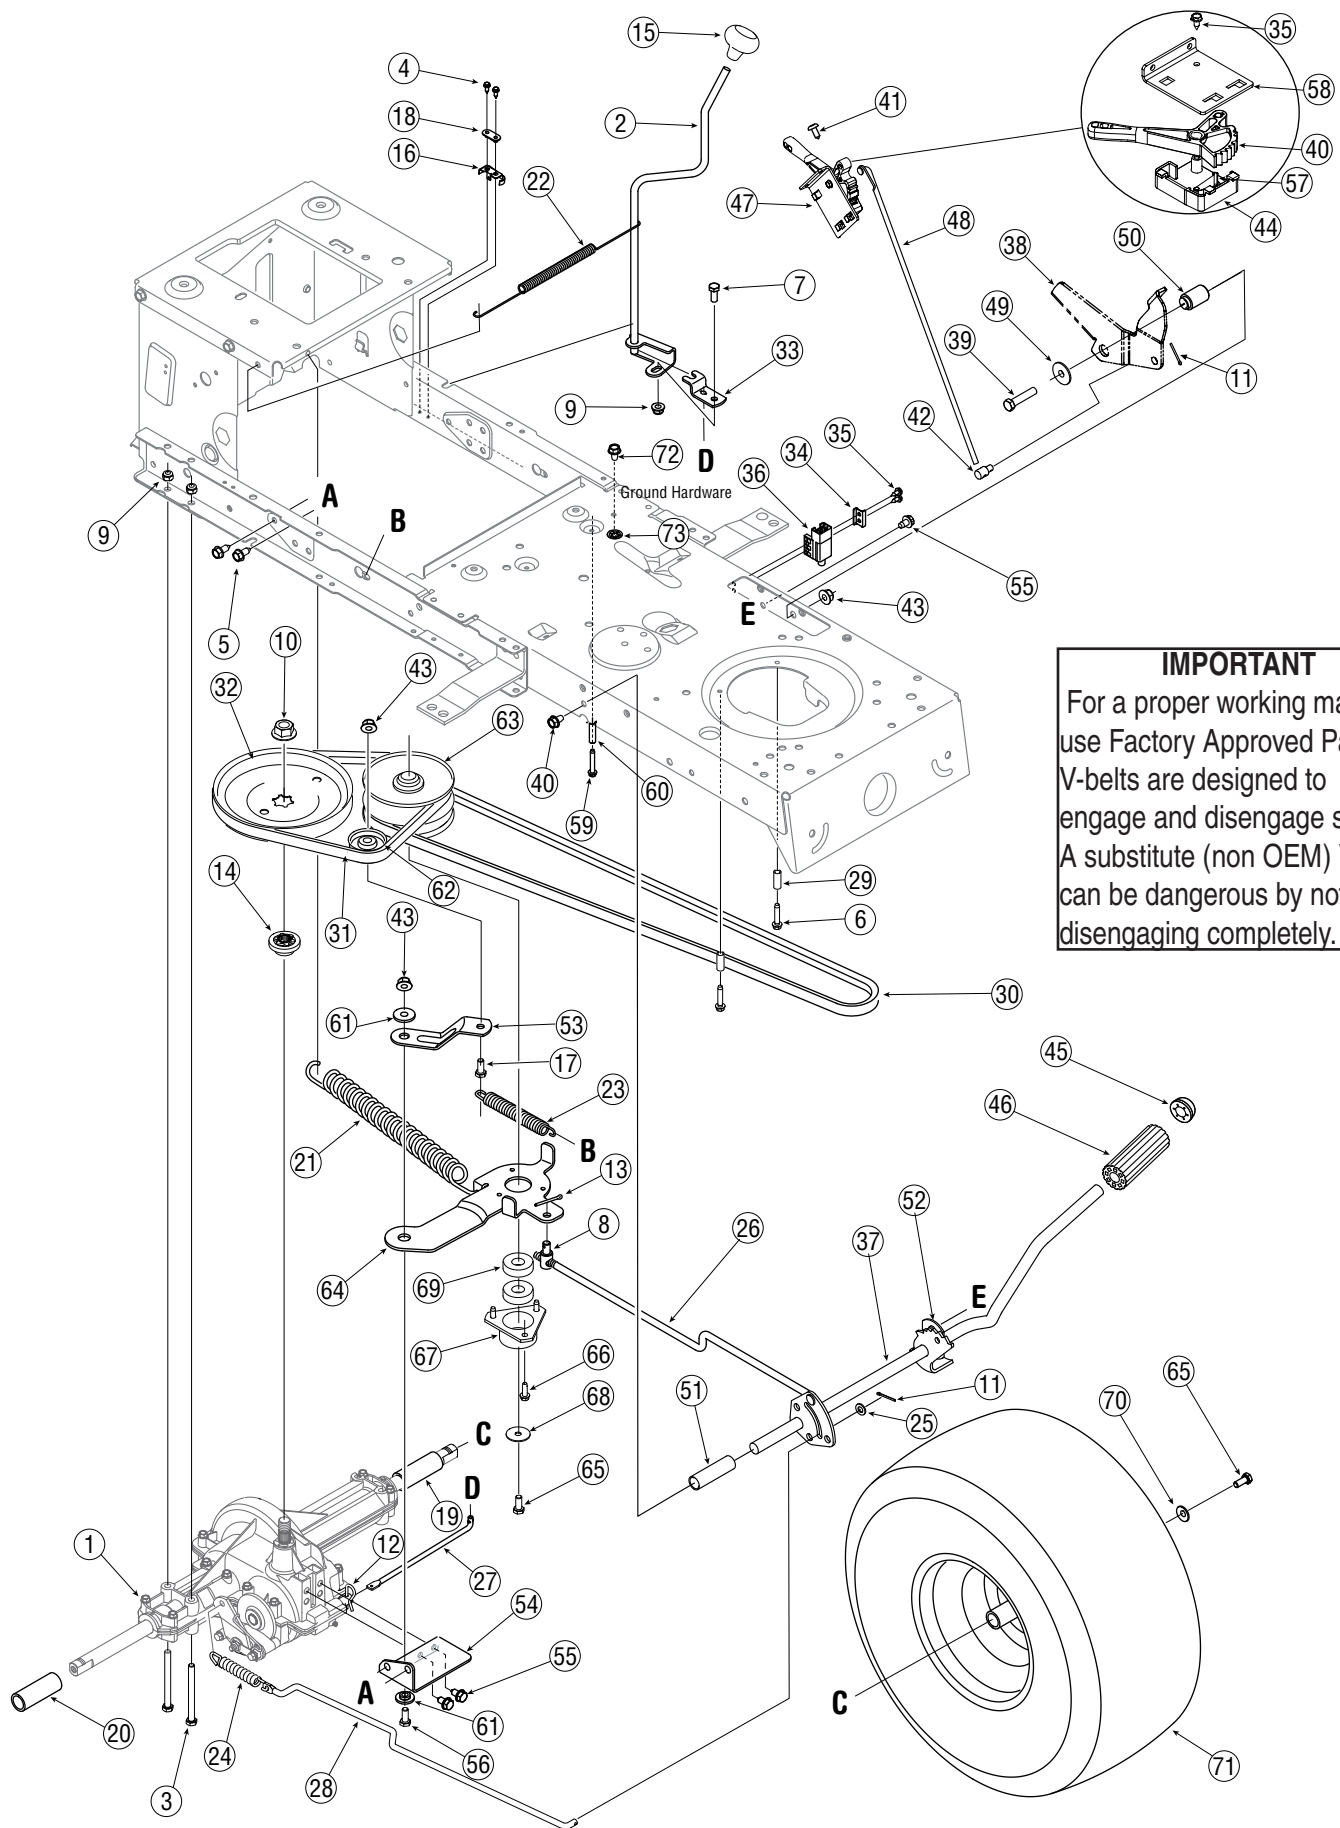

Ref. No.	Part No.	Description
1	618-04034	Transmission Assembly
2	647-04035	Lever Assembly, Shift
3	710-0176	Screw, 5/16-18, 2.75, Gr5
4	710-0227	Screw, #8-18, 0.500
5	710-0726	Screw, 5/16-12, 0.750
6	710-0809	Screw, 1/4-20, 1.250
7	710-3008	Screw, 5/16-18, .75, Gr5
8	711-04075A	Ferrule, 3/8-24 x .375 Dia.
9	712-04063	Nut, Flange Lock, 5/16-18, GrF
10	712-0700	Nut, Flange, 9/16-18, Gr2
11	714-0111	Pin, Cotter, 3/32, 1.0
12	714-0209	Cotter Pin, Internal .125 Dia
13	714-0470	Pin, Cotter, 1/8 x 1.25
14	718-0758A	Hub, Pulley, 5/8 Spline
15	720-04028	Knob, Shift
16	725-1644	Spring Switch, Short
17	710-0520	Screw, 3/8-16 x 1.50
18	726-0320	Plate, Insulator Nut
19	731-04602	Sleeve, .758 x .821 x 3.3125
20	731-04604	Sleeve, .758 x .821 x 2.4375
21	732-04076A	Spring, Extension, 1.15 OD x 7.90
22	732-04237	Spring, Extension, .50 OD x 12.0
23	732-04306	Spring, Extension, .80 OD x 3.28
24	732-0716C	Spring, Extension, .59 OD x 4.00
25	736-0264	Washer, Flat, .330 x .630 x .0635
26	747-04265	Control Rod, Variable Speed
27	747-04277	Rod, Shift
28	747-04287	Rod, Brake
29	750-0566A	Spacer, .260 x .372 x 1.030
30	754-04001A	Belt
31	754-0241A	Belt
32	756-04002	Pulley, V-Type, 7.25 Dia
33	783-04595	Shift Bracket, Adjustable
34	17962	Plate, Switch
35	710-0224	Screw, #10-16, 0.500
36	725-04039	Switch, Interlock
37	647-04034C	Pedal Assembly, Drive
38	783-04862	Latch Bracket (RMC*)
	783-04903	Latch Bracket (No RMC)
39	710-1008	Screw, 3/8-16, 1.875, Gr5
40	731-05392	6 Speed Shift Lever
	731-05362	7 Speed Shift Lever

Ref. No.	Part No.	Description
41	710-04483	Screw, 1/4-20, 0.500
42	711-0736	Adjustment Ferrule 1/4-20
43	712-04065	Nut, Flange Lock, 3/8-16, GrF
44	731-05361	Control Cover
45	726-0214	Push Cap, 5/8
46	735-0239	Pad, Foot, 4.0
47	683-04225	Shift Cont. Assembly, 6-Speed
	683-04216	Shift Cont. Assembly, 7-Speed
48	747-04430	Control Rod, Speed Selector
49	736-0247	Washer, Flat, .406 x 1.25 x .157
50	750-04465	Spacer, Flange, .390 x .671 x 1.095
51	750-0802	Spacer, .640 ID x .76 OD x 2.63
52	783-04536	Support Bracket, Pedal
53	683-04207	Bracket, Idler
54	683-04176A	Torque Bracket, Transmission
55	710-0604A	Screw, 5/16-18, 0.625
56	710-3005	Screw, 3/8-16, 1.25, Gr5
57	732-0627	Shift Lever Spring
58	783-04830	Control Bracket
59	710-1325	Screw, 1/4-20 x 1.625
60	750-04456	Spacer, .260 x .372 x 1.420
61	738-0347	Spacer, Shoulder, .625 ID x .169
62	756-04213	Pulley, Flat Idler
63	656-04015	Pulley Ass'y, Variable Speed
64	683-04206	Bracket Ass'y, Variable Speed
65	710-0627	Screw, 5/16-24, .750, Gr5
66	710-1652	Screw, 1/4-20, 0.625
67	718-04012	Cup, Bearing
68	736-0362	Washer, Flat, .330 x 1.25 x .06
69	741-0600	Bearing, Ball, 17 x 40 x 12
70	736-0242	Bell Washer, .34 x .872 x .060
71	734-1675	Wheel Ass'y, Round Shoulder
	734-1596	Tire Only, 20 x 8 x 8, Round Shld.
	634-0070	Rim Assembly (Inc. bearings, valve stem)
	634-0104	Wheel Ass'y, Square Shoulder
	734-1730	Tire Only, 20 x 8 x 8, Square Shld
	734-0603A	Rim Assembly (Inc. bearings, valve stem)
72	710-0599	Screw, 1/4-20 x .500
73	736-0222	Lock Washer, 1/4

* Reverse Caution Mode


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

10

Illustrated Parts List



To order replacement parts, call the Customer Service Line at
1-800-800-7310,
or visit
www.mtdproducts.com

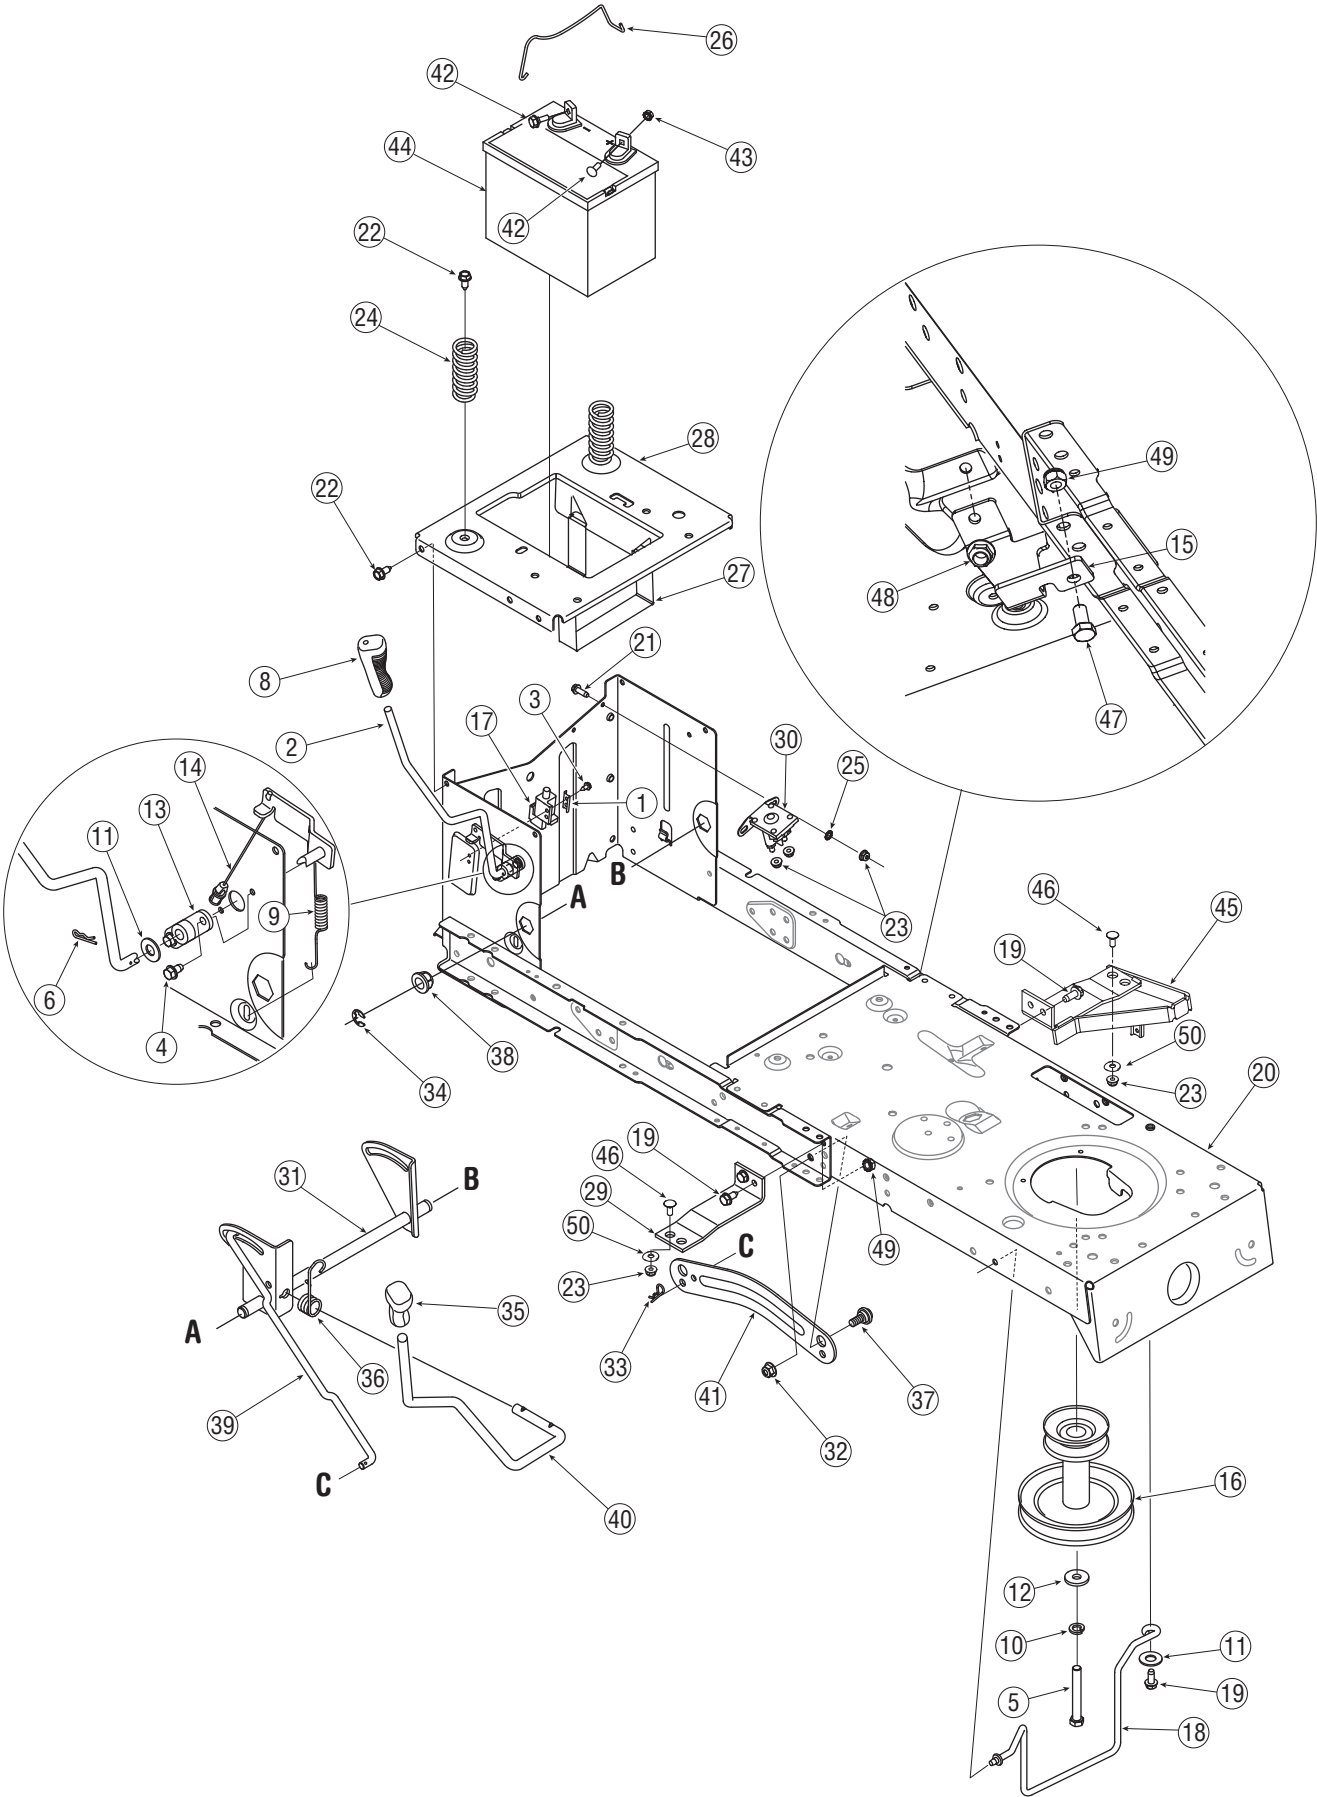

Ref. No.	Part No.	Description
1	17962	Plate, Switch
2	647-04040	Handle Asswmbly, PTO
3	710-0224	Screw, #10-16, 0.500
4	710-0599	Screw, 1/4-20, 0.500
5	710-3157	Screw, 7/16-20, 3.25, Gr5
6	714-0104	Pin, Cotter, .072 Dia. x 1.13
7	714-0145	Pin, Click, .092 x 1.64
8	720-04049	Grip, Handle, 3/8
9	732-04276	Spring, Extension
10	736-0171	Washer, Lock, 7/16
11	736-0300	Washer, Flat, .406 x .875 x .059
12	736-0322	Washer, Flat, .450 x 1.250 x .164
13	741-04119	Bearing, PTO
14	746-04173A	Cable, Deck Engagement
15	783-04753	Frame Support Bracket
16	756-04196	Engine Pulley, 3.39 x 6.12 Dia.
17	725-04039	Switch, Interlock
18	747-04332A	Rod, Belt Keeper (38-inch Deck)
	747-04307	Rod, Belt Keeper (42-inch Deck)
19	710-1260A	Screw, 5/16-18, .750
20	683-04163A	Frame Assembly
21	710-0642	Screw, 1/4-20, 0.750
22	710-0604A	Screw, 5/16-18, 0.625
23	712-04064	Nut, Flange Lock, 1/4-20, GrF
24	732-04035	Spring, Compr. , 1.28 OD x 3.125
25	736-0222	Washer, Lock, 1/4
26	747-04385	Hold Down Rod, Battery

Ref. No.	Part No.	Description
27	783-04869	Bracket, Battery
28	783-04548A	Seat Bracket, Frame
29	783-04637	Bracket, Runing Board
30	725-1426A	Solenoid
31	683-04155	Shaft Assembly, Lift
32	712-04065	Nut, Flange Lock, 3/8-16, GrF
33	714-04043	Pin, Cotter, .080 x 1.5625 Internal
34	716-0106A	Ring, E-Type, .625 Dia.
35	720-0311	Grip, Handle, 1/2
36	732-04225	Spring, Torsion
37	738-04130	Screw, Shldr. , .625 x .175, 3/8-16
38	741-0225	Bearing, Hex Flange
39	747-04393	Rod, Lift
40	747-04282	Deck Handle, Lift
41	783-04494	Lift Arm, Deck - RH
	783-04711	Lift Arm, Deck - LH
42	710-0703	Screw, Carriage, 1/4-20, .75, Gr5
43	712-0271	Nut, Sems, 1/4-20
44	725-1737A	Battery, 190 CCA
	725-1704A	Battery, 125 CCA
45	683-04195	Support Bracket Assembly
46	710-0134	Carriage Screw, 1/4-20 x .62
47	710-3025	Screw, 5/16-18 x .625
48	712-04063	Flange Lock Nut, 5/16-18
49	712-0429	Hex Lock Nut, 5/16-18
50	736-0173	Flat Washer, .28 x .74 x .063


10

Illustrated Parts List



To order replacement
parts, call the Customer
Service Line at
1-800-800-7310,
or visit
www.mtdproducts.com.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

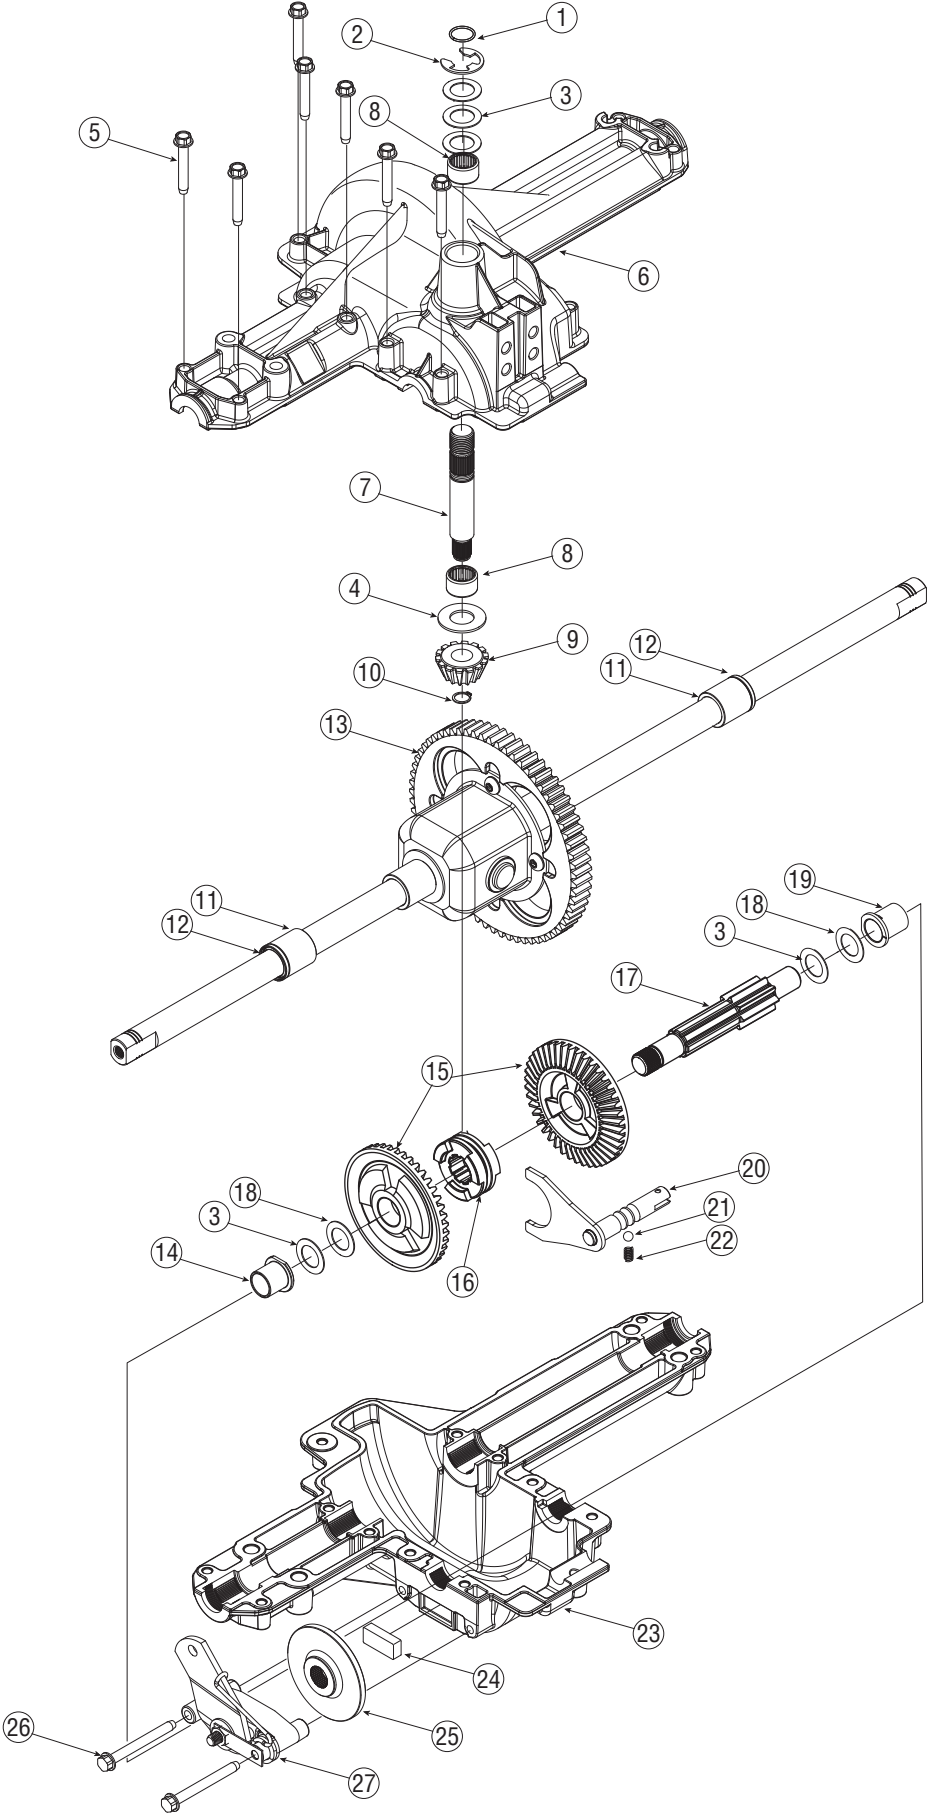

10

Illustrated Parts List




To order replacement
parts, call the Customer
Service Line at
1-800-800-7310,
or visit
www.mtdproducts.com.

Ref. No.	Part No.	Description
1	732-0614	Ring, Wire
2	716-0231	Ring, E Type,.750
3	736-0336*	Flat Washer, 5/8 x 1.0 x.030
	736-0337*	Flat Washer, 5/8 x 1.0 x.040
	736-0349*	Flat Washer, 5/8 x 1.0 x.020
4	736-0335	Washer, Thrust.635 x 1.26 x.06
5	710-1325	Self-tapping Screw, 1/4-20 x 1.625
6	719-04017	Upper Housing
7	711-1109	Input Shaft
8	741-0335	Needle Bearing,.625 x.813 x.495
9	717-1464	14-tooth Bevel Pinion
10	716-0108	Retaining Ring,.437
11	741-0340	Sleeve Bearing,.75 x1.0 x 1.0
12	721-0338	Seal,.75 x 1.0 x.125
13	618-04041	Differential Assembly
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	717-04056	42-tooth Bevel Gear
16	718-04045	Clutch Collar
17	711-04134	Drive Shaft
18	736-0495*	Thrust Washer, 1.0 x.632 x.0
	736-0494*	Flat Washer,.632 x 1.00 x.035
19	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
20	611-0011	Detent Shaft Assembly
21	741-0862	Detent Ball
22	732-0863	Compression Spring
23	719-04018	Lower Housing
24	717-0678	Brake Puck
25	761-0202	Brake Disc
26	710-1206	Self-tapping Screw, 1/4-20 x 2.375
27	661-0001	Brake Assembly
—	737-0148	Grease (19 oz.)

* Use applicable flat washer (ref. #'s 3 or 18) in this application allowing .0150/.0020 in. end-play

NOTE: If rebuilding the upper housing, include two ounces (2 oz.) of Unirex® N3 grease (Part No. 737-0289) in the input shaft cavity.

Models 760-779 (38" Deck)

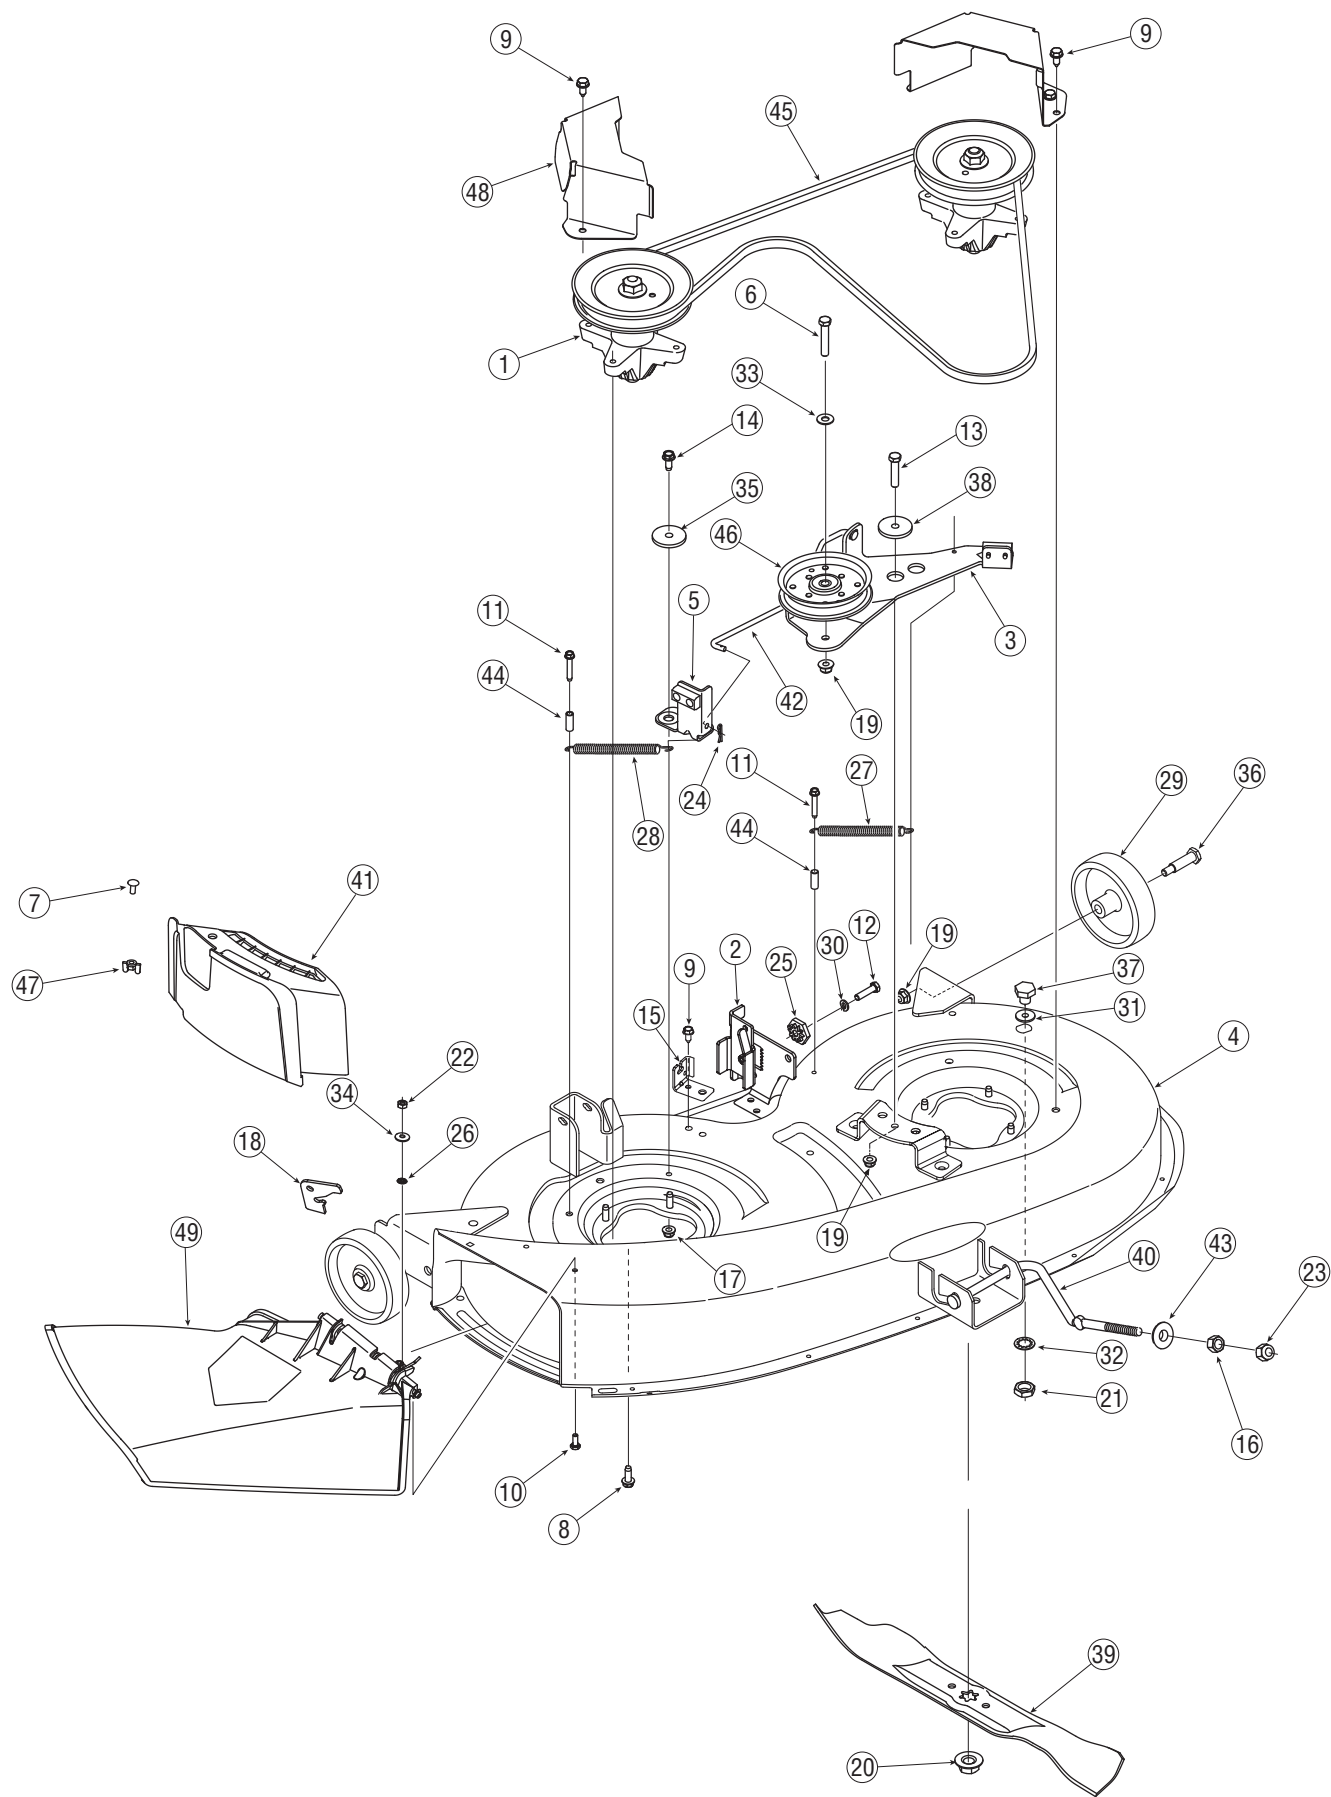

Ref. No.	Part No.	Description
1	618-04197	Spindle Assembly, Pul, 5.75" Dia
2	683-04428	Brkt. Assembly, Deck, Hanger LH
3	683-04138	Brake Assembly, Deck
4	683-04166A	Deck Shell, 38" (w/o Wheel Brkt)
	683-04161	Deck Shell, 38" (w/ Wheel Brkt)
5	683-04167	Brake Assembly, Deck
6	710-0347	Screw, 3/8-16, 1.75, Gr5
7	710-0134†	Carriage Screw, , 1/4-20 x .62
8	710-0650	Screw, 5/16-18, 0.875
9	710-0726	Screw, 5/16-12, 0.750
10	710-3015	Screw, 1/4-20, .75, Gr5
11	710-0778	Screw, 1/4-20, 1.500
12	710-0528	Screw, 5/16-18, 1.250
13	710-3005	Screw, 3/8-16, 1.25, Gr5
14	710-3008	Screw, 5/16-18, .75, Gr5
15	783-04740	Deck Engagement Cable Bracket
16	712-0206	Nut, Hex, 1/2-13, Gr5
17	712-04063	Nut, Flange Lock, 5/16-18, GrF
18	783-1025	Chute Stop
19	712-04065	Nut, Flange Lock, 3/8-16, GrF
20	712-0417A	Nut, Flange, 5/8-18
21	712-0641	Nut, Hex, M16-1.5
22	712-3006	Nut, Hex, 1/4-20, Gr5
23	712-3083	Nut, Hex Lock, 1/2-13, Gr8, Nylon
24	714-0104	Pin, Cot, .072 Dia. x 1.13 Lg

Ref. No.	Part No.	Description
25	717-04074	Gear, Deck Adjustment
26	726-0233	Nut, Push, .25 ID x .50 OD
27	732-04280A	Spring, Exten. , .75 Dia. x 6.375
28	732-04287	Spring, Exten. , .50 Dia. x 6.375
29	734-0973†	Wheel, Deck 5.0 x 1.38
30	736-0119	Washer, Lock, 5/16
31	736-0187	Washer, Flat, .64 x 1.24 x .06
32	736-0225	Washer, Lock, 5/8, Internal Tooth
33	736-0267	Washer, Flat, .385 x .87 x .06
34	736-0270	Washer, Bell, .265 x .75 x .062
35	738-04166	Spacer, Shoulder, .5000 x .1475
36	738-0373†	Screw, Shldr, .498 x 1.53, 3/8-16
37	738-04146	Plug, Screw, M16 x 1.5
38	738-04162A	Spacer, Shoulder, .8840 x .190
39	742-0610A	Blade, 19.38", Star 3-in-1
40	747-04322	Deck Rod, Front Adjustable
41	731-2363†	Mulch Plug
42	747-04381	Control Rod, Brake
43	748-04069	Pivot Cup, Deck Lift
44	750-0566A	Spacer, .260 x .372 x 1.030
45	754-04062	Belt, V-Type
46	756-04129	Idler Pulley, 4.25" Dia.
47	712-3087†	Wing Nut, 1/4-20
48	783-04602	Cover, Belt, 5.66 Dia.
49	731-1032B	Chute Assembly, Discharge

† If Equipped

IMPORTANT

For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


10

Illustrated Parts List



To order replacement parts, call the Customer Service Line at 1-800-800-7310, or visit www.mtdproducts.com.

Models 760-779 (42" Deck)

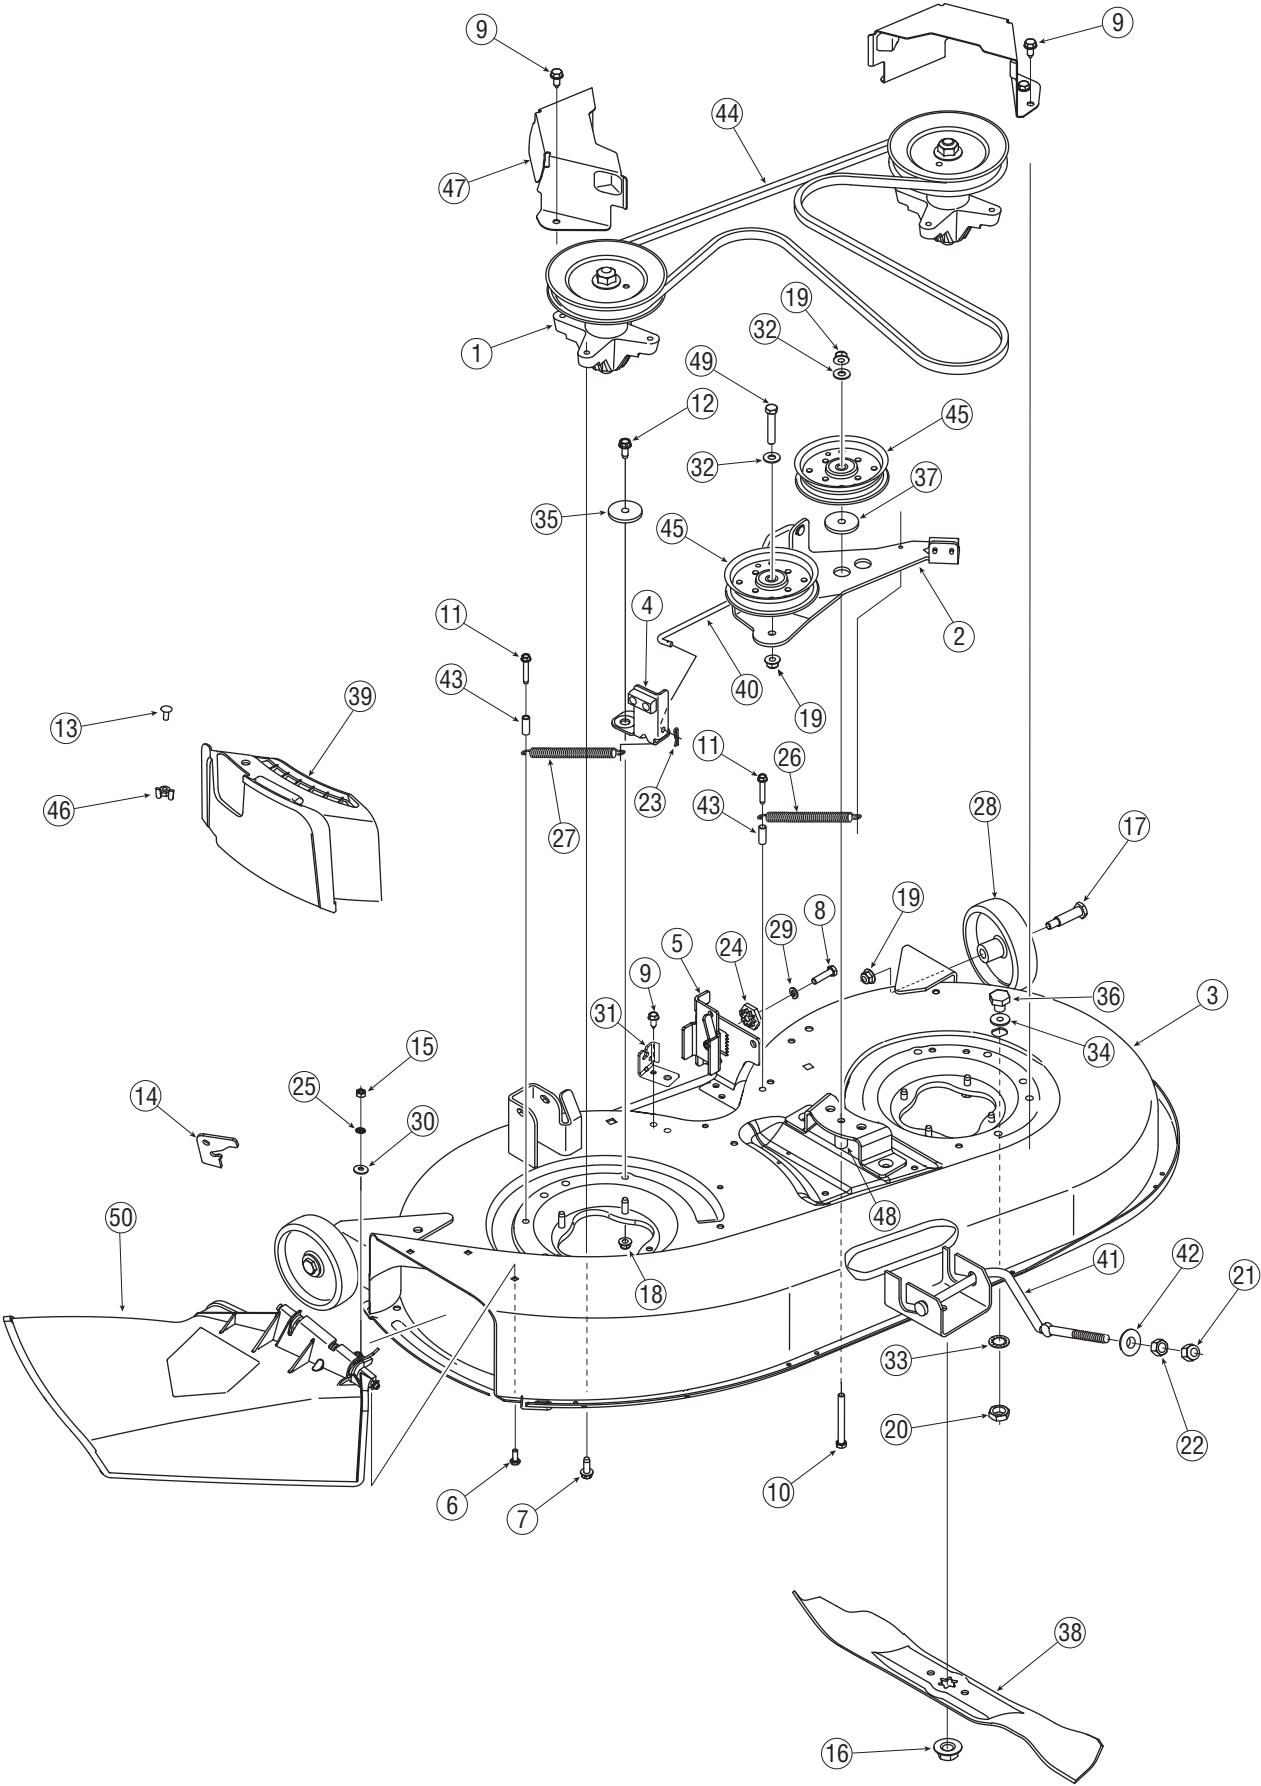

Ref. No.	Part No.	Description
1	618-0624	Spindle Assembly, Pul, 6.23" Dia
2	683-04138A	Brake Assembly, Deck
3	683-04165A	Deck Shell, 42" (w/o Wheel Brkt)
	683-04162A	Deck Shell, 42" (w/ Wheel Brkts.)
4	683-04167	Brake Assembly, Deck
5	683-04228	Brkt. Ass'y, Deck, Hanger LH
6	710-3015	Screw, 1/4-20, .75, Gr5
7	710-1260A	Screw, 5/16-18, 0.750
8	710-0528	Screw, 5/16-18, 1.250
9	710-0604A	Screw, 5/16-18, 0.625
10	710-3085	Screw, 3/8-16, 3.50, Gr5
11	710-0778	Screw, 1/4-20, 1.500
12	710-3008	Screw, 5/16-18, .75, Gr5
13	710-0134†	Carriage Screw, , 1/4-20 x .62
14	783-1025	Chute Stop
15	712-3006	Nut, Hex, 1/4-20, Gr5
16	712-0417A	Nut, Flange, 5/8-18
17	738-0373	Screw, Shldr, .498 x 1.53, 3/8-16
18	712-04063	Nut, Flange Lock, 5/16-18, GrF
19	712-04065	Nut, Flange Lock, 3/8-16, GrF
20	712-0641	Nut, Hex, M16-1.5
21	712-3083	Nut, Hex Lock, 1/2-13, Gr8
22	712-0206	Nut, Hex, 1/2-13, Gr5
23	714-0104	Pin, Cot, .072 Dia. x 1.13 Lg
24	717-04074	Gear, Deck Adjustment
25	726-0233	Nut, Push, .25 ID x .50 OD

Ref. No.	Part No.	Description
26	732-04280A	Spring, Exten. , .75 Dia. x 6.375
27	732-04287	Spring, Exten. , .50 Dia. x 6.375
28	734-0973†	Wheel, Deck 5.0 x 1.38
29	736-0119	Washer, Lock, 5/16
30	736-0270	Washer, Bell, .265 x .75 x .062
31	783-04740	Deck Engagement Cable Bracket
32	736-0267	Washer, Flat, .385 x .87 x .06
33	736-0225	Washer, Lock, 5/8, Internal Tooth
34	736-0187	Washer, Flat, .64 x 1.24 x .06
35	738-04166	Spacer, Shoulder, .5000 x .1475
36	738-04146	Plug, Screw, M16 x 1.5
37	738-04162A	Spacer, Shoulder, .8840 x .190
38	742-0616A	Blade, 21.23", Star 3-in-1
39	731-2363†	Mulch Plug
40	747-04379A	Control Rod, Brake
41	747-04269A	Deck Rod, Front Adjustable
42	748-04069	Pivot Cup, Deck Lift
43	750-0566A	Spacer, .260 x .372 x 1.030
44	754-04060B	Belt, V-Type
45	756-04129	Idler Pulley, 4.25" Dia.
46	712-3087†	Wing Nut, 1/4-20
47	783-04327A	Cover, Belt, 6.00 Dia.
48	750-04446	Spacr, 3/8 ID x .68 OD x 1.46 Lg.
49	710-0347	Screw, 3/8-16 x 1.75
50	731-1032B	Chute Assembly, Discharge

† If Equipped

IMPORTANT

For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.










10

Illustrated Parts List



To order replacement parts, call the Customer Service Line at 1-800-800-7310, or visit www.mtdproducts.com.

Models 760-779

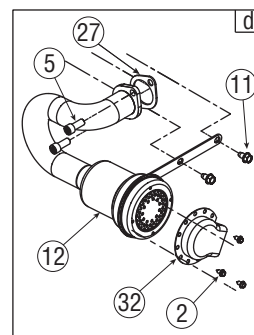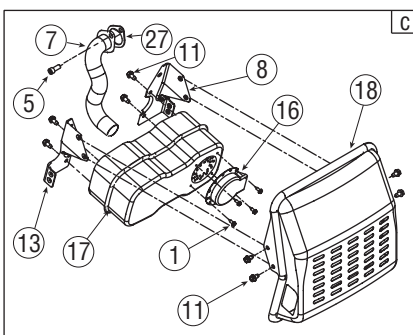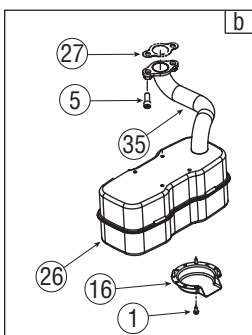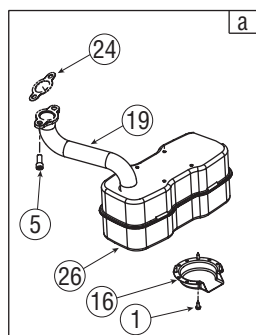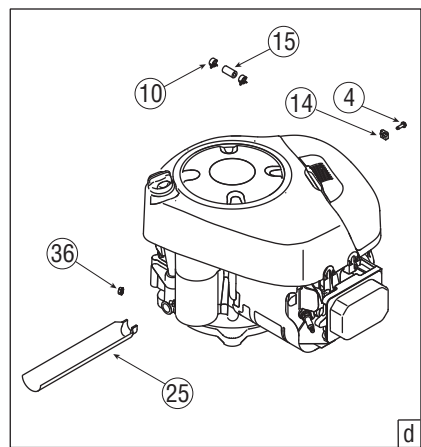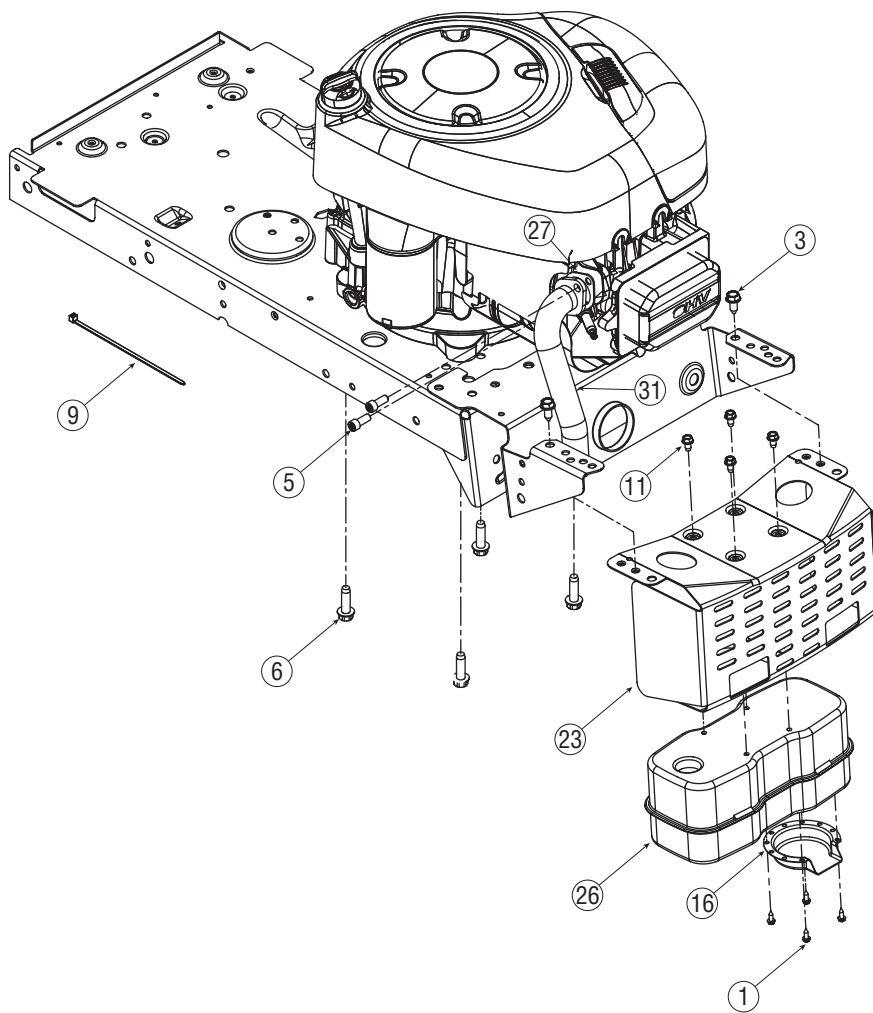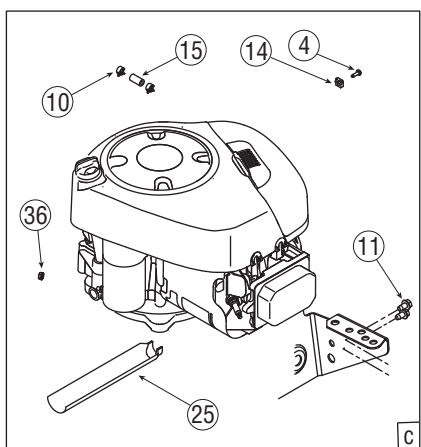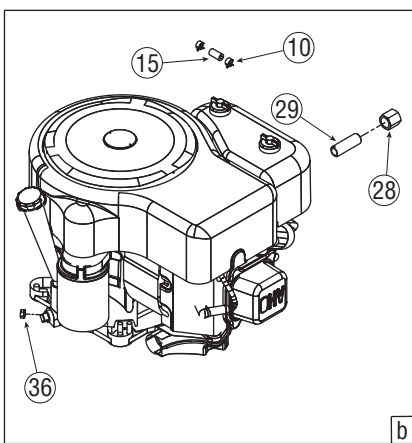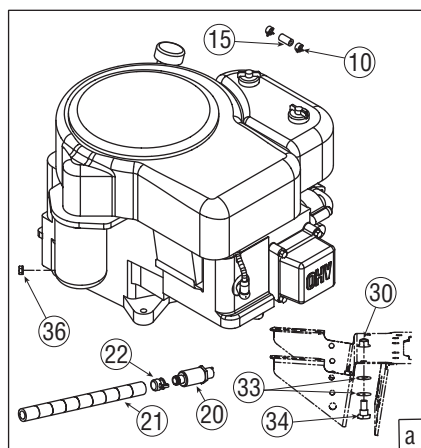

Ref. No.	Part No.	Description
1	710-0227	Screw, #8-18 x .50
2	710-1502	Screw, #8-18 x .375
3	710-0726	Self-tapping Screw, 5/16-12, .75
4	710-1237	Screw, #10-32, .625
5	710-1314A	Socket Cap Screw, 5/16-18, .625
6	710-1315	Self-tapping Screw, 3/8-16, 1.25
7	751-10013	Exhaust Pipe
8	783-04573	LH Muffler Bracket
9	725-0157	Cable Tie, 7.4"
10	726-0205	Hose Clamp, .490
11	710-0599	Screw, 1/4-20, 0.500
12	751-9986A	Muffler, Bug
13	783-04574	RH Muffler Bracket
14	751B221535	Casing Clamp
15	751-10349	Fuel Line Hose
16	751-0564B	Muffler Deflector
17	751-10162	Muffler, Single Inlet
18	783-04576	Muffler Shield

Ref. No.	Part No.	Description
19	751-0620A	Exhaust Pipe
20	751-3140	Oil Drain Valve
21	751-3141	Oil Drain Hose
22	751-3142	Oil Drain Cap
23	783-0615D	Muffler Heat Shield
24	721-0348	Exhaust Gasket
25	731-1682A	Oil Drain Sleeve
26	751-0617B	Muffler, Single Inlet
27	721-0208	Exhaust Gasket
28	737-0143	Oil Drain Cap, 3/8-18
29	737-0199	Oil Drain Pipe, 3/8-16, 2.0
30	712-04065	Flange Lock Nut, 3/8-16
31	751-0619A	Exhaust Pipe
32	751B222261	Muffler Deflector
33	736-0300	Flat Washer, .406 x .875 x .059
34	738-0143	Shldr Screw, .498 x .340 x 3/8-16
35	751-0622A	Exhaust Pipe
36	712-0271	Hex Sems Nut, 1/4-20

- (a) Tractor models with Tecumseh Single-cylinder Engine (16 HP - 18 HP)
- (b) Tractor models with Tecumseh Single-cylinder Engine (12 HP - 15 HP)
- (c) Tractor models with Briggs and Stratton OHV Single-cylinder Engine
- (d) Tractor models with Briggs and Stratton OHV Single-cylinder Engine (canister muffler)

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

10

Illustrated Parts List



To order replacement
parts, call the Customer
Service Line at
1-800-800-7310,
or visit
www.mtdproducts.com.

NOTES:

*Use this page to make
notes and write down
important information.*



NOTES:

Use this page to make notes and write down important information.



