


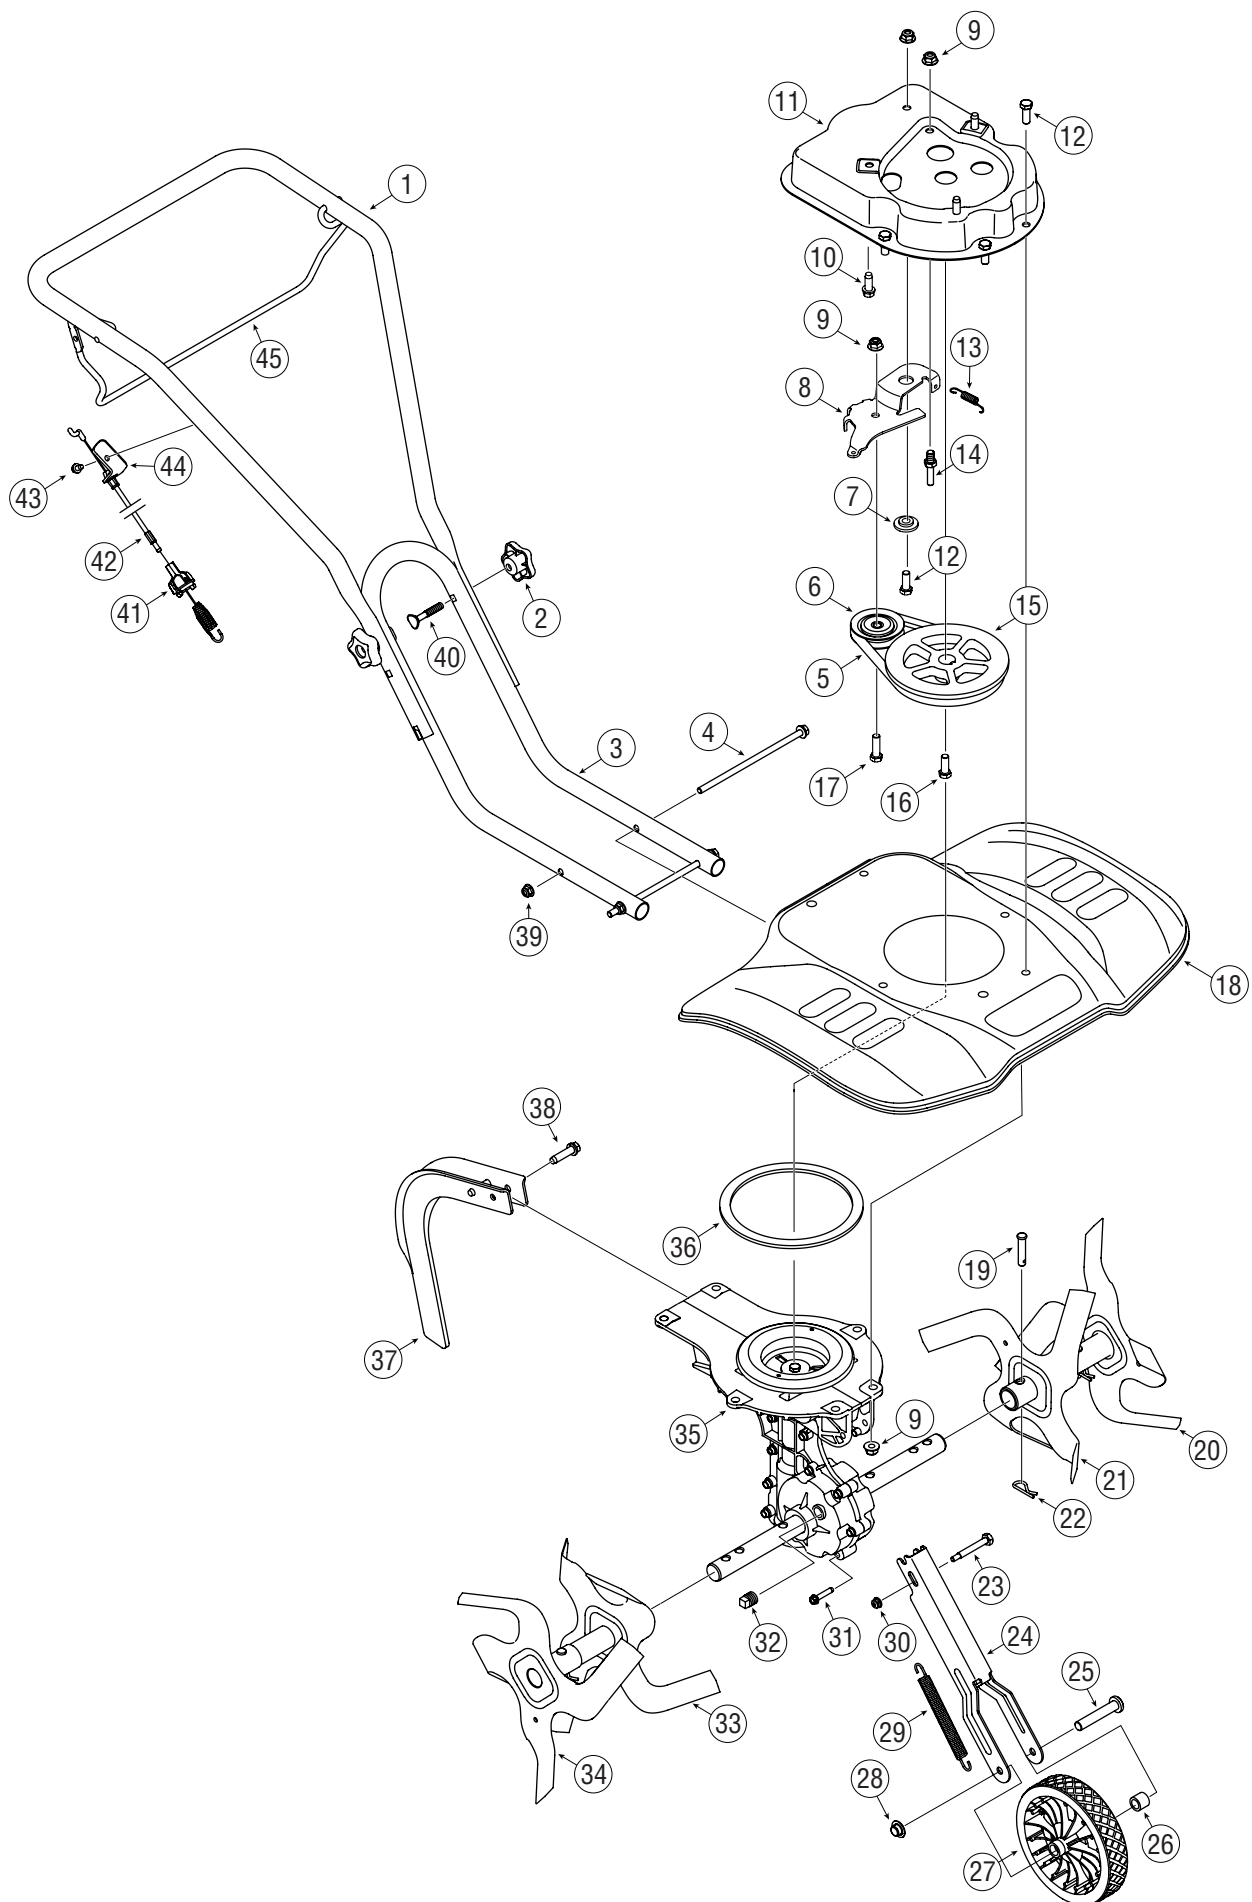

1	749-04282	Upper Handle
2	720-04072	Star Handle Knob
3	749-04281	Lower Handle
4	710-04398	Flange Screw: 5/16-18:7.5:GR5
5	754-04061	Belt
6	756-04163	Idler Pulley
7	748-04125	Shoulder Spacer
8	786-04309	Idler Bracket
9	712-04065	Flange Lock Nut: 3/8-16
10	710-0654A	TT Screw: 3/8-16:1.00
11	786-04303	Belt Cover
12	710-0514	HH Cap Screw: 3/8-16:1.00
13	732-0418	Extension Spring
14	738-04139	Stud: 33 x 1.5: 3/8-16
15	756-04217	Flywheel Pulley
16	710-0591	HH Cap Screw: 3/8-24:1.00
17	710-3005	HH Cap Screw: 3/8-16:1.25
18	786-04256	Tine Shield 61 cm
19	711-0415	Clevis Pin
20	642-0005	Outer Tine Assembly LH
21	642-0003	Inner Tine Assembly LH
22	714-0149B	Internal Cotter Pin
23	738-04172	Shoulder Screw: .31x2:1/4-20

24	786-04299	Front Wheel Bracket
25	711-04511	Axle Shaft
26	750-04578	Spacer
27	734-04063	Wheel 7x1.5 Star-Diam
28	726-0299	Push Cap
29	732-0384	Extension Spring
30	712-04064	Flange Lock Nut: 1/4-20
31	710-0809	TT Screw: 1/4-20:1.25
32	GW-9727	Pipe Plug: 3/8 NPT
33	642-0002	Inner Tine Assembly RH
34	642-0004	Outer Tine Assembly RH
35	618-04276A	Case Assembly
36	721-04157	Gasket
37	686-04072	Depth Stake Assembly
38	710-1007	TT Screw: 3/8-16:1.50
39	712-04063	Flange Lock Nut: 5/16-18
40	710-1174	Carriage Bolt
41	731-05385	Clutch Cable Fitting
42	746-04247	Clutch Cable
43	710-0599	TT Screw: 1/4-20:.50
44	786-04307	Cable Mount Bracket
45	747-04508	Clutch Bail