


357cc 483-SU Engine

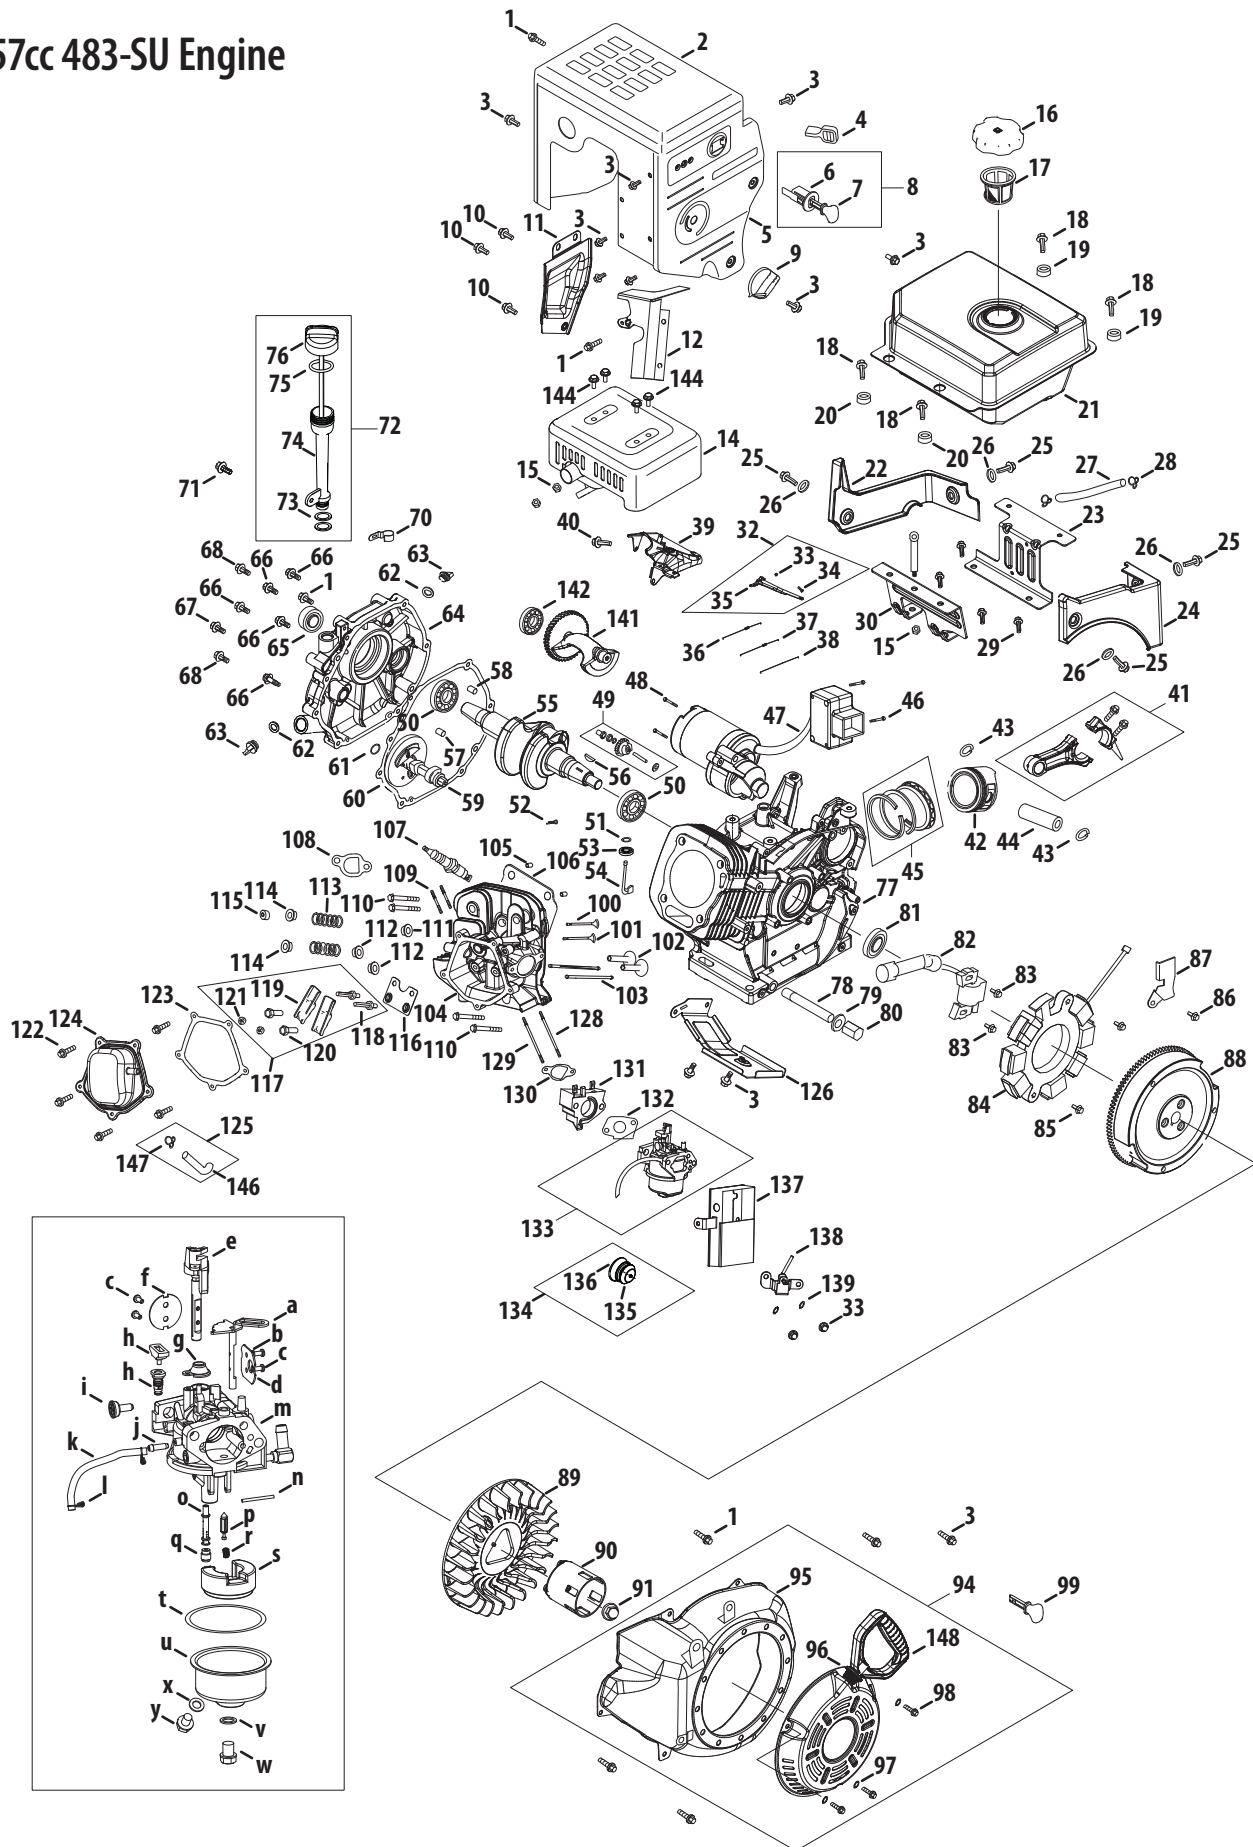

Ref.	Part Number	Description
1	710-11012	Bolt, M6 x 16
2	951-11339	Muffler Shield
3	710-04915	Bolt, M6 x 12
4	951-10757	Throttle Control Knob
5	951-11595	Control Panel
7	731-05632	Key
8	951-10637	Key Switch Ass'y
9	951-11302	Choke Knob
10	710-04914	Bolt, Flange, M6 x 10
11	951-11181	Muffler Baffle
12	951-11321	Carb Isolator Bracket
14	951-11338	Muffler Ass'y
15	712-04219	Nut, M8 - 1.25
16	951-10649	Fuel Cap Ass'y
17	951-11933	Fuel Level Indicator
18	710-04970	Flange Bolt, M8 x 20
19	750-05312	Bushing, Gas Tank
20	750-05313	Bushing, Gas Tank
21	951-11201	Fuel Tank Ass'y
22	951-11319	Fuel Tank Shroud
23	951-11318	Rear Mounting Bracket Ass'y
24	951-11351	Engine Shroud
25	951-11012	Bolt, M6 x 16
26	736-04452	Bush - Washer
28	951-11731	Fuel Line Clamp
29	710-04921	Bolt, M8 x 14
30	951-11182	Fuel Tank Mounting Bracket
33	712-04212	Nut, M6
34	710-04908	Governor Arm Bolt
35	951-11307	Governor Arm
36	951-11306	Governor Spring
37	951-11203	Throttle Linkage Spring
38	951-11309	Throttle Linkage
39	951-11311	Primer Bracket
40	710-04916	Bolt, Flange, M6 x 14
41	951-11951	Connecting Rod Ass'y
42	951-11952	Piston
43	951-11953	Piston Pin Snap Ring
44	951-11954	Piston Pin

Ref.	Part Number	Description
45	951-11955	Piston Ring Set
46	710-04965	Bolt, M4 x 55
47	951-11196	Startup Electromotor
48	710-04967	Bolt, M8 x 55
49	951-11956	Governor Gear/Shaft Ass'y
50	951-11957	Radial Ball Bearing
51	736-04453	Washer
52	714-04077	Cotter Pin
53	951-11958	Governor Seal
54	951-11365	Governor Arm Shaft
56	951-10307	Woodruff Key
57	715-04102	Dowel Pin, 9 x 12
58	715-04092	Dowel Pin, 7 x 14
59	951-11959	Camshaft Ass'y
60	951-11376	Crankcase Cover Gasket
61	736-04476	Washer
62	951-11960	O-Ring
65	951-11375	Oil Seal
66	710-04971	Bolt, M8 x 38
67	710-04972	Bolt, M8 x 45
68	710-05052	Bolt, M8 x 35
70	951-11320	Dipstick Clamp
71	710-04966	Bolt, M6 x 8
73	951-11903	Oil Fill Tube O-Ring
75	951-11904	Dipstick O-Ring
78	951-11350	Oil Drain Pipe Ass'y
79	736-04440	Oil Drain Washer
80	710-04906	Oil Drain Plug
81	951-11499	Oil Seal
82	951-11305	Ignition Coil Ass'y
83	710-04920	Ignition Coil Bolt
84	951-11961	Coil Assy. Charge
85	710-04969	Bolt, M6 x 30
86	710-04966	Bolt, M6 x 8
87	951-11186	Alternator Wire Clamp Bracket
88	951-11312	Flywheel
89	951-11313	Fan, Cooling
90	951-11314	Starter Cup
91	712-04220	Nut, Special, M16 x 1.5

357cc 483-SU Engine

Ref.	Part Number	Description
95	951-11211	Blower Housing
96	951-11310	Recoil Starter
97	736-04455	Gasket
98	710-04974	Bolt, M6 x 10
99	731-05632	Key
102	951-11962	Tappet
103	951-11335	Push Rod (2X)
105	715-04097	Dowel Pin, 12 x 20
106	951-11963	Gasket, Cylinder Head
107	951-10292	Spark Plug/F6rtc
108	951-11212	Exhaust Pipe Gasket
109	710-04964	Stud, M8 x 48.5
110	710-05053	Bolt, M10 x 1.25 x 87
111	751-11964	Intake Valve Seal
116	951-11965	Push Rod Guide
117	951-11981	Rocker Arm Ass'y
118	710-04962	Bolt, Pivot
119	951-11966	Rocker Arm
120	751-11123	Adjusting Nut, Valve
121	751-11124	Nut, Pivot Locking
122	710-05054	Valve Cover Bolt
123	951-11967	Valve Cover Gasket
124	951-11220	Valve Cover
126	951-11317	Cylinder Baffle
128	710-05055	Stud, M6 x 8 x 98
129	710-05056	Stud, M6 x 8 x 118
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
132	951-11223	Carburetor Gasket
133	951-11303A	Carburetor Ass'y
134	951-10639A	Primer Ass'y
135	951-11824	Primer Bulb
137	951-11304	Heater Box
138	951-11192	Choke Control
139	736-04477	Lock Washer
141	951-11968	Camshaft Gear Ass'y
142	951-11969	Bearing
144	710-05051	Bolt
146	951-11221	Breather Hose

Ref.	Part Number	Description
147	726-04101	Clamp
148	731-05696	Starter Handle
k	751-11991	Primer Hose
t	951-11970	Bowl Gasket
v	951-11348	Main Bowl Bolt Gasket
w	710-04945	Fuel Bowl Mounting Bolt
x	951-11349	Fuel Drain Plug Gasket
y	710-04903	Fuel Drain Plug
—	951-10651	Fuel Tank Nipple (Not Shown)
—	952Z483-SU-10	Replacement Engine
—	951-11207	Muffler Stud Ass'y
109	710-04964	Muffler Stud
—	951-11329A	Cylinder Head Ass'y
100	—	Exhaust Valve
101	—	Intake Valve
104	—	Cylinder Head
106	951-11963	Gasket, Cylinder Head
108	951-11212	Exhaust Pipe Gasket
109	710-04964	Stud, M8 x 48.5
110	710-05053	Bolt, M10 x 1.25 x 87
111	751-11964	Intake Valve Seal
112	—	Intake Valve Seal
113	—	Valve Spring
114	—	Valve Spring Retainers - Exhaust
115	—	Exhaust Valve Adjuster
116	951-11965	Push Rod Guide
118	710-04962	Bolt, Pivot
119	951-11966	Rocker Arm
120	751-11123	Adjusting Nut, Valve
121	751-11124	Nut, Pivot Locking
123	951-11967	Valve Cover Gasket
128	710-05055	Stud, M6 x 8 x 98
129	710-05056	Stud, M6 x 8 x 118
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
—	951-10641	Oil Drain Ass'y
78	951-11350	Oil Drain Pipe Ass'y
79	736-04440	Oil Drain Washer
80	710-04906	Oil Drain Plug

Ref.	Part Number	Description
—	951-11328A	Short Block Ass'y
41	951-11951	Connecting Rod Ass'y
42	951-11952	Piston
43	951-11953	Piston Pin Snap Ring
44	951-11954	Piston Pin
45	951-11955	Piston Ring Set
49	951-11956	Governor Gear/Shaft Ass'y
50	951-11957	Radial Ball Bearing
51	736-04453	Washer
52	714-04077	Cotter Pin
53	951-11958	Governor Seal
54	951-11365	Governor Arm Shaft
55	—	Crankshaft Ass'y
56	951-10307	Woodruff Key
57	715-04102	Dowel Pin, 9 x 12
58	715-04092	Dowel Pin, 7 x 14
59	951-11959	Camshaft Ass'y
60	951-11376	Crankcase Cover Gasket
61	736-04476	Washer
63	—	Oil Drain Plug Ass'y
64	—	Crankcase Cover
65	951-11375	Oil Seal
66	710-04971	Bolt, M8 x 38
67	710-04972	Bolt, M8 x 45
68	710-05052	Bolt, M8 x 35
77	—	Crankcase Complete
78	951-11350	Oil Drain Pipe Ass'y
79	736-04440	Oil Drain Washer
81	951-11499	Oil Seal
102	951-11962	Tappet
105	715-04097	Dowel Pin, 12 x 20
106	951-11963	Gasket, Cylinder Head
108	951-11212	Exhaust Pipe Gasket
110	710-05053	Bolt, M10 x 1.25 x 87
123	951-11967	Valve Cover Gasket
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
141	951-11968	Camshaft Gear Ass'y
142	951-11969	Bearing

Ref.	Part Number	Description
—	951-11330A	Gasket Kit - Complete
53	951-11958	Governor Seal
60	951-11376	Crankcase Cover Gasket
65	951-11375	Oil Seal
79	736-04440	Oil Drain Washer
81	951-11499	Oil Seal
106	951-11963	Gasket, Cylinder Head
108	951-11212	Exhaust Pipe Gasket
123	951-11967	Valve Cover Gasket
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
132	951-11223	Carburetor Gasket
—	951-11333	Valve Cover Kit
123	951-11967	Valve Cover Gasket
124	951-11220	Valve Cover
—	951-11331	Gasket Kit - External
79	736-04440	Oil Drain Washer
108	951-11212	Exhaust Pipe Gasket
123	951-11967	Valve Cover Gasket
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
132	951-11223	Carburetor Gasket
—	951-11337	Valve Kit
100	—	Exhaust Valve
101	—	Intake Valve
—	951-11345	Oil Filler Plug Ass'y
62	951-11960	O-Ring
63	—	Oil Drain Plug Ass'y
—	751-11971	Dipstick Ass'y
75	951-11904	Dipstick O-Ring
76	—	Dipstick / Cap
—	951-11336	Fuel Line Kit
27	—	Fuel Line
28	951-11731	Fuel Line Clamp
—	951-11334	Cylinder Head Kit
106	951-11963	Gasket, Cylinder Head
110	710-05053	Bolt, M10 x 1.25 x 87
111	751-11964	Intake Valve Seal
123	951-11967	Valve Cover Gasket

357cc 483-SU Engine

Ref.	Part Number	Description
—	951-11342	Crankshaft Kit
50	951-11957	Radial Ball Bearing
55	—	Crankshaft Ass'y
56	951-10307	Woodruff Key
65	951-11375	Oil Seal
81	951-11499	Oil Seal
—	951-11332	Carburetor Kit - Major
g	—	Throttle Pressure Lock Plate
n	—	Float Pin
o	—	Main Nozzle
p	—	Needle Valve
q	—	Main Jet
r	—	Needle Valve Spring
s	—	Float
t	951-11970	Bowl Gasket
v	951-11348	Main Bowl Bolt Gasket
x	951-11349	Fuel Drain Plug Gasket
—	951-11340	Crankcase Cover Kit
50	951-11957	Radial Ball Bearing
60	951-11376	Crankcase Cover Gasket
61	736-04476	Washer
64	—	Crankcase Cover
65	951-11375	Oil Seal
66	710-04971	Bolt, M8 x 38
67	710-04972	Bolt, M8 x 45
68	710-05052	Bolt, M8 x 35
—	751-11341A	Crankcase Kit
50	951-11957	Radial Ball Bearing
53	951-11958	Governor Seal
77	—	Crankcase
81	951-11499	Oil Seal
—	951-11972	Oil Fill Tube Assembly
73	951-11903	Oil Fill Tube O-Ring
74	—	Oil Fill Tube