 
 


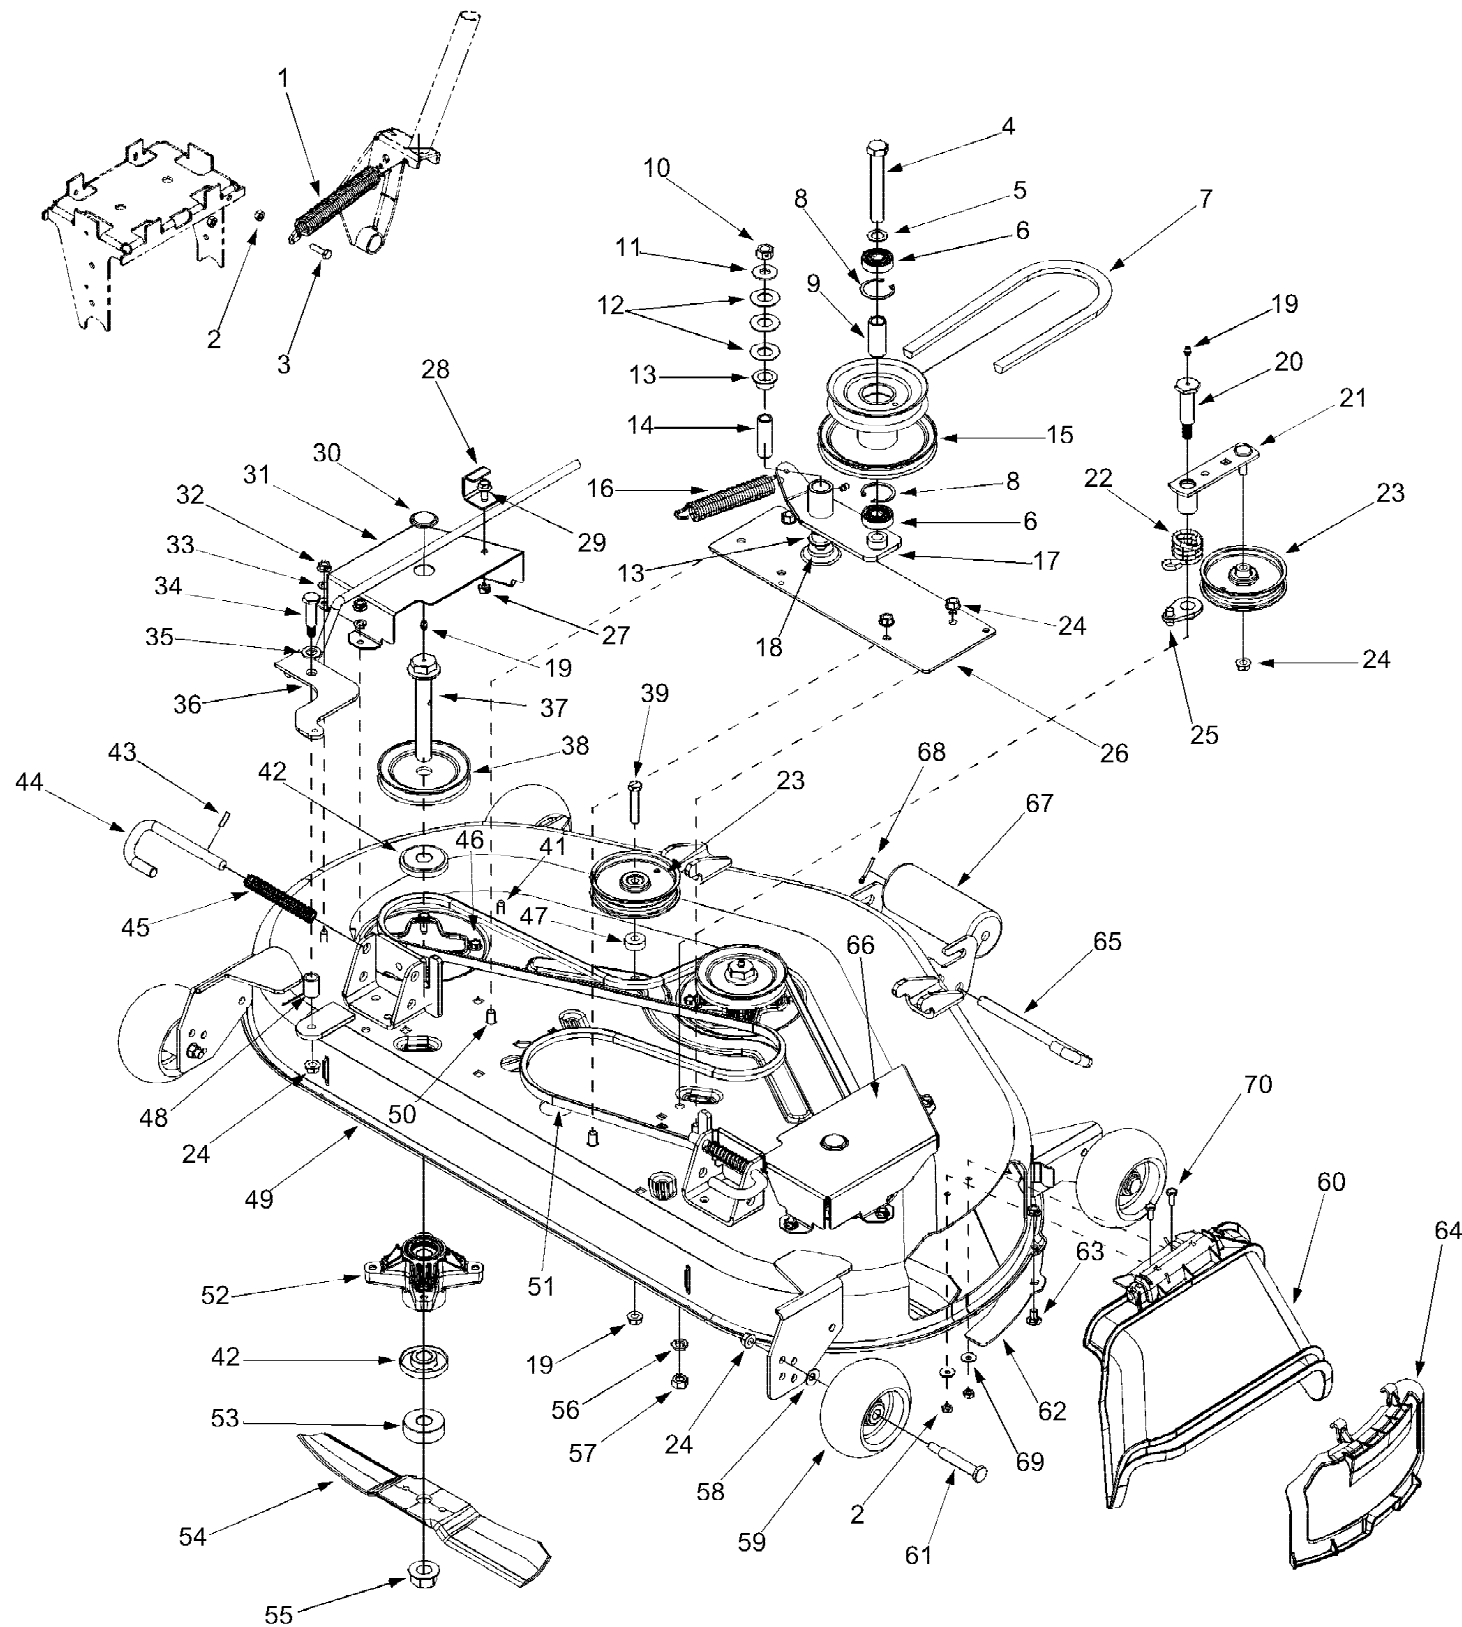


Ref #	Part Number	Qty	Description
1	732-0556		Extension Spring .94 OD x 7.57
2	712-3006		Hex Nut 1/4-20
3	710-0597		Hex Cap Screw 1/4-20 x 1.0
4	710-3151		Hex Cap Screw 5/8-18 x 4.25
5	736-0290		Flat Washer 5/8 ID x 1.0 OD
6	741-0524		Bearing .625 ID x 1.574 OD
7	754-3091		Belt
8	716-3020		Snap Ring
9	750-3164		Spacer .635 ID x 2.0
10	712-0239		Hex Lock Nut 1/2-20
11	736-0179		Flat Washer 1/2 x 1.25
12	736-0188		Flat Washer .76 ID x 1.49 OD
13	741-0338		Flange Bearing 3/4 ID x .52
14	750-0656		Spacer .50 OD x .75 ID
15	756-3108		Pulley
16	732-0850		Extension Spring 1.0 OD x 6.140
17	603-0743		Idler Assembly
18	736-0100		Flat Washer .531 ID x 1.25 OD
19	737-3000		Grease Fitting
20	738-3172		Shoulder Screw
21	603-0741		Idler Arm Assembly
22	732-3067		Torsion Spring
23	756-3005		Flat Pulley
24	712-0431		Flange Lock Nut 3/8-16
25	748-3100		Retainer Spring
26	603-0763		Deck Mounting Plate Assembly
27	712-3004A		Flange Lock Nut 5/16-18
28	703-2559		Stop Bracket
29	710-3008		Hex Cap Screw 5/16-18 x .75
30	726-3045		Button Plug
31	703-3742		Belt Cover LH
32	712-3010		Hex Nut 5/16-18
33	736-0119		Lock Washer 5/16
34	738-0213		Shoulder Screw .498 x 1.445
35	736-0192		Flat Washer .531 x .93
36	603-0766		Handle Assembly
37	710-1693		Spindle Bolt 3/4-16 x 5.215
38	756-3089		Pulley
39	710-3144		Hex Cap Screw 3/8-16 x 2.0
41	710-1611		Screw 5/16-18 x .750
42	748-3065		Spindle Spacer
43	715-3003		Pin
44	747-3013		Support Pin
45	732-0802		Compression Spring .63 OD x 6.3
46	710-1260A		Hex Washer Screw 5/16-18 x .750
47	750-3119		Spacer .406 ID x 1.0 OD
48	750-0150		Spacer .550 ID x .750 OD
49	603-0734		Deck Assembly
50	710-3178		Carriage Bolt 3/8-16 x .75
51	754-3039		Belt
52	618-3129		Spindle Assembly
53	748-3020		Blade Spacer
54	742-3036		Blade


Ref #	Part Number	Qty	Description
55	712-3078		Hex Flange Nut 3/4-16
56	736-0171		Lock Washer 7/16
57	712-3019		Hex Nut 7/16-14
58	736-0105		Bell Washer .401 ID x .870 OD
59	703-1890		Deck Wheel
60	631-0094		Chute Assembly
61	738-3056		Shoulder Screw 1/2 x 2.5
62	703-3359		Skirt Baffle
63	710-0260		Carriage Bolt 5/16-18 x .62
64	731-3316		Mulching Plug
65	711-3314		Roller Pin
66	703-3743		Belt Cover RH
67	731-3005		Front Roller
68	714-0115		Pin
69	736-0270		Bell Washer .265 ID x .75 OD
70	710-0751		Hex Cap Screw 1/4-20 x .620

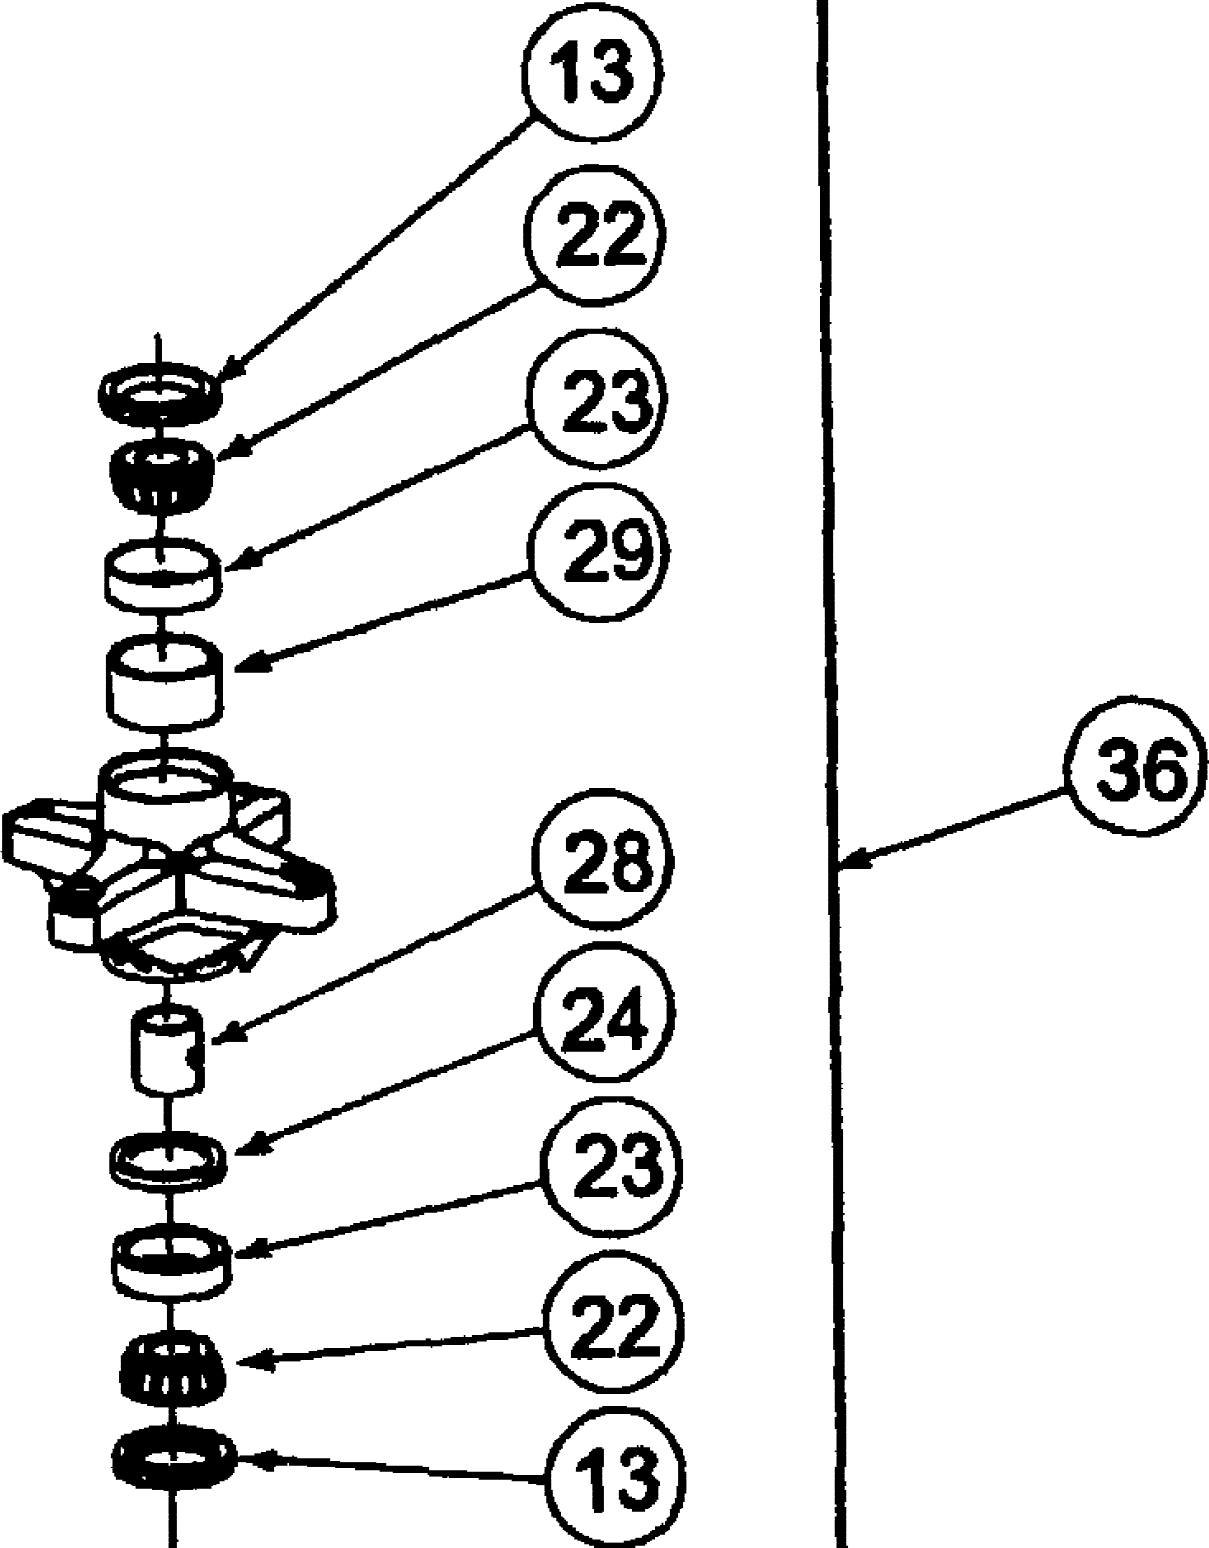


Ref #	Part Number	Qty	Description
13	721-3018	4	Seal, Oil, 1.25 x 1.874 x .25
22	741-3028	4	Cone, Bearing
23	741-3029	4	Cup, Bearing
24	741-3031	2	Spacer, Bearing
28	750-3190	2	Spacer, Bearing, .780 x .963 x .7777
29	750-3191	2	Spacer, Bearing, 1.615 x 1.86 x .8427
36	918-3129	2	Spindle Assy

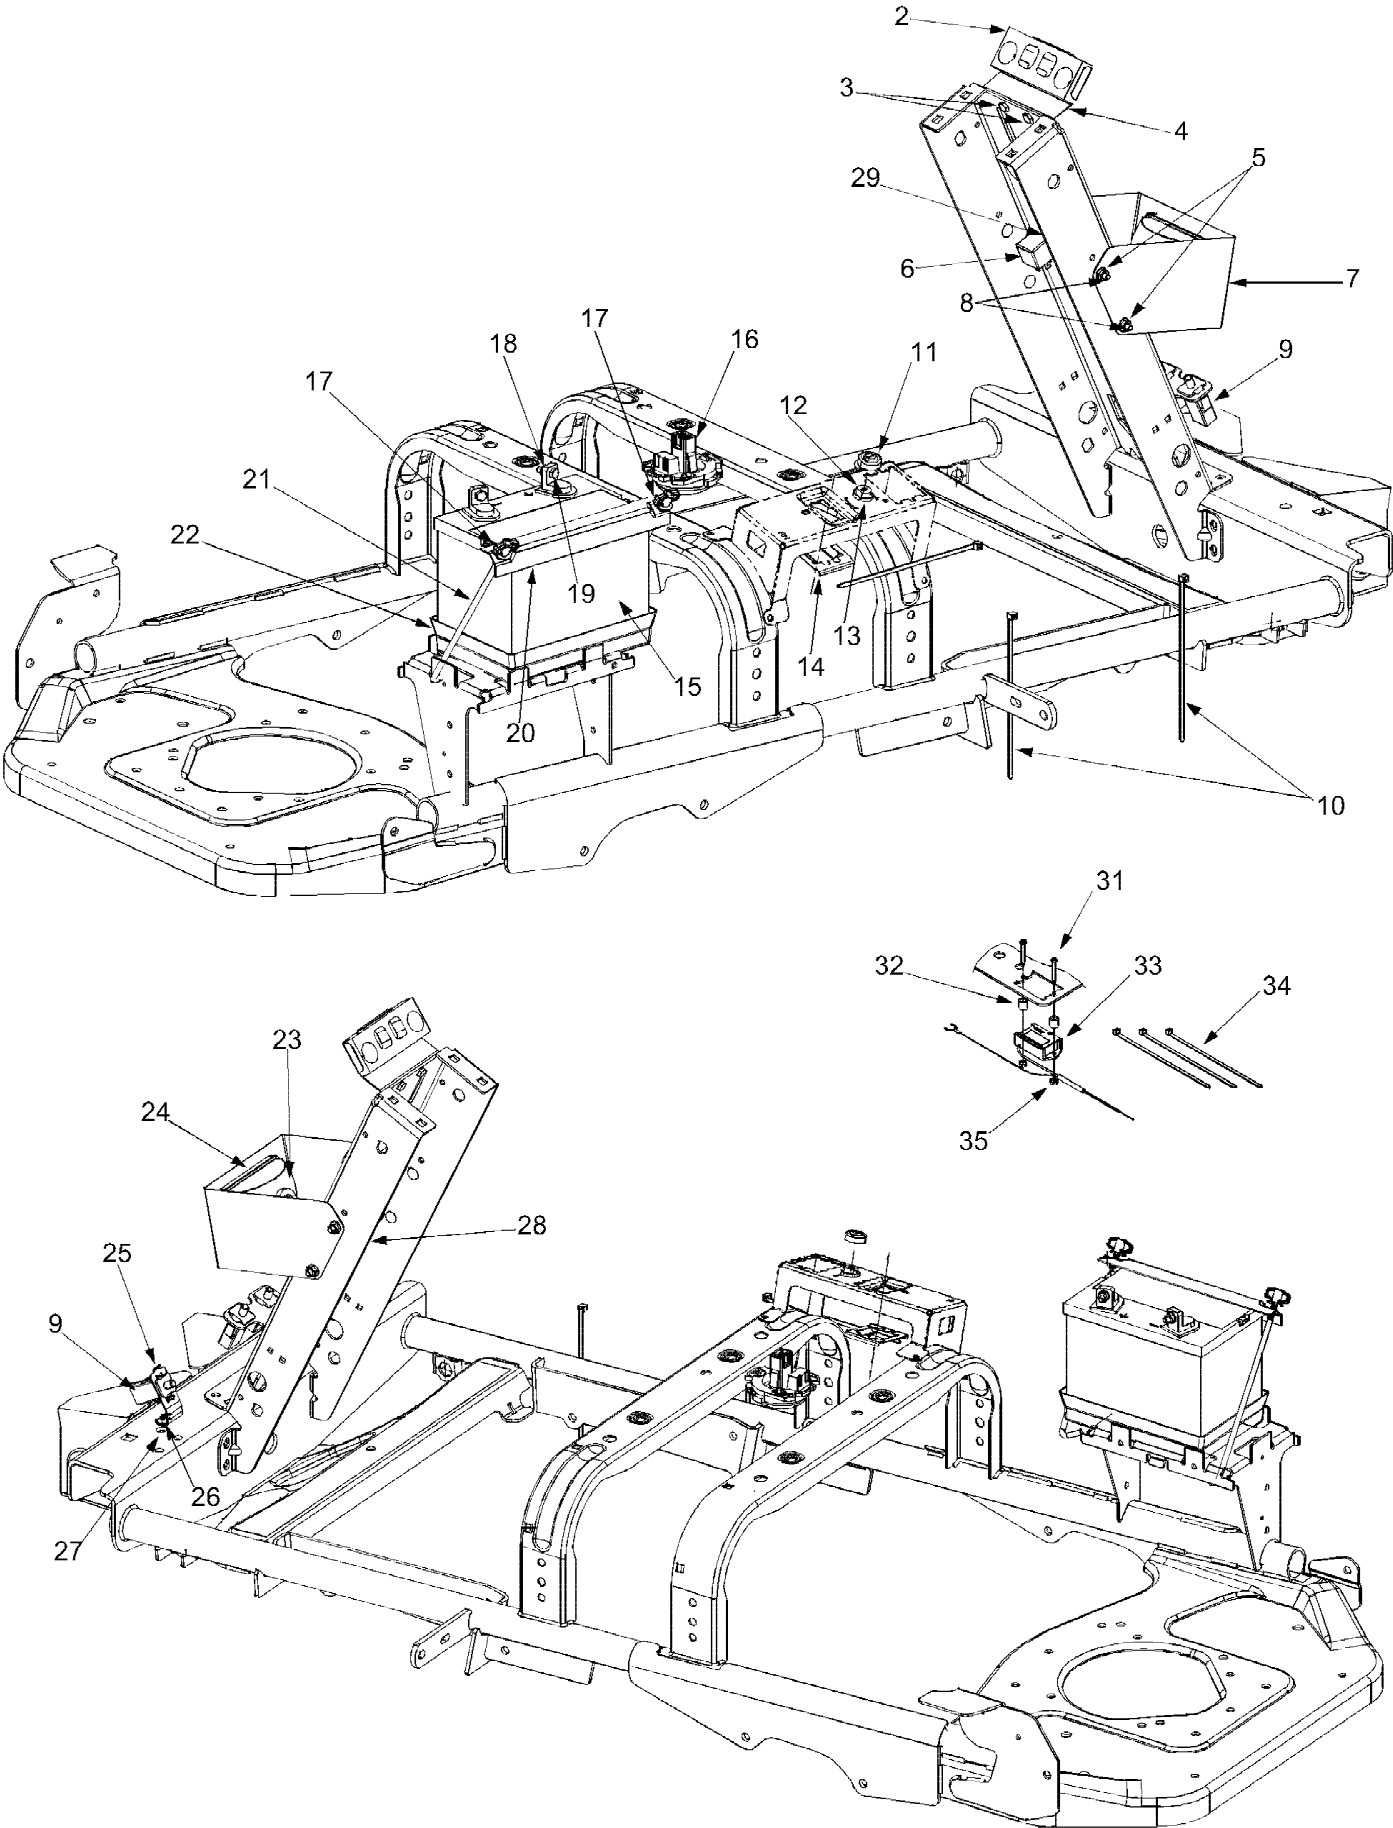 


Ref #	Part Number	Qty	Description
1	629-3070		Wire Harness, Main Not Shown
2	723-0455		Foam Protector, Indicator Light
3	710-3013		Hex Cap Screw 1/4-20 x .50
4	703-2809		Bracket, Indicator Bulb Mtg.
5	712-3027		Nut, Hex Flange Lock, 1/4-20
6	725-1718		Relay
7	703-2836		Bracket, Headlight Mtg.
8	710-0134		Carriage Screw 1/4-20 x .62
9	725-3164A		Switch, Plunger Safety
10	725-0157		Cable Tie
11	725-1347		Cap, Ignition Switch
12	725-1346		Nut, Ignition Switch, 5/8-32
13	725-1717		Switch, Ignition
14	783-0462		Bracket, PTO Switch Retainer
15	725-1722		Battery
16	725-3254		Switch, Seat
17	712-0397		Nut, Nylon Wing, 1/4-20
18	712-0271		Nut, Hex Sems, 1/4-20
19	710-3015		Screw, Hex Cap, 1/4-20 x .75 GR5
20	703-3149A		Strip, Battery Retainer
21	747-3347		Rod, Battery Retainer
22	731-3233		Tray, Battery
23	725-3250		Headlight Assembly
	759-3864		Bulb, Headlight - Only
24	731-3184		Bezel, Headlight
25	732-0816		Spring, Switch Mounting
26	710-0425		Screw, Machine, #10-24 x 5/8
27	712-0161		Nut, Hex Insert Lock, #10-24
28	725-3251		Voltage Sensor
29	726-0349		Ratchet Retainer
30	725-3191A		Switch, Plunger Safety
31	710-3143		Machine Screw #10-24
32	750-0539		Spacer .315 ID x .50 OD
33	725-3159		Hour Meter
34	725-0157		Cable Tie
35	712-0161		Lock Nut #10-24

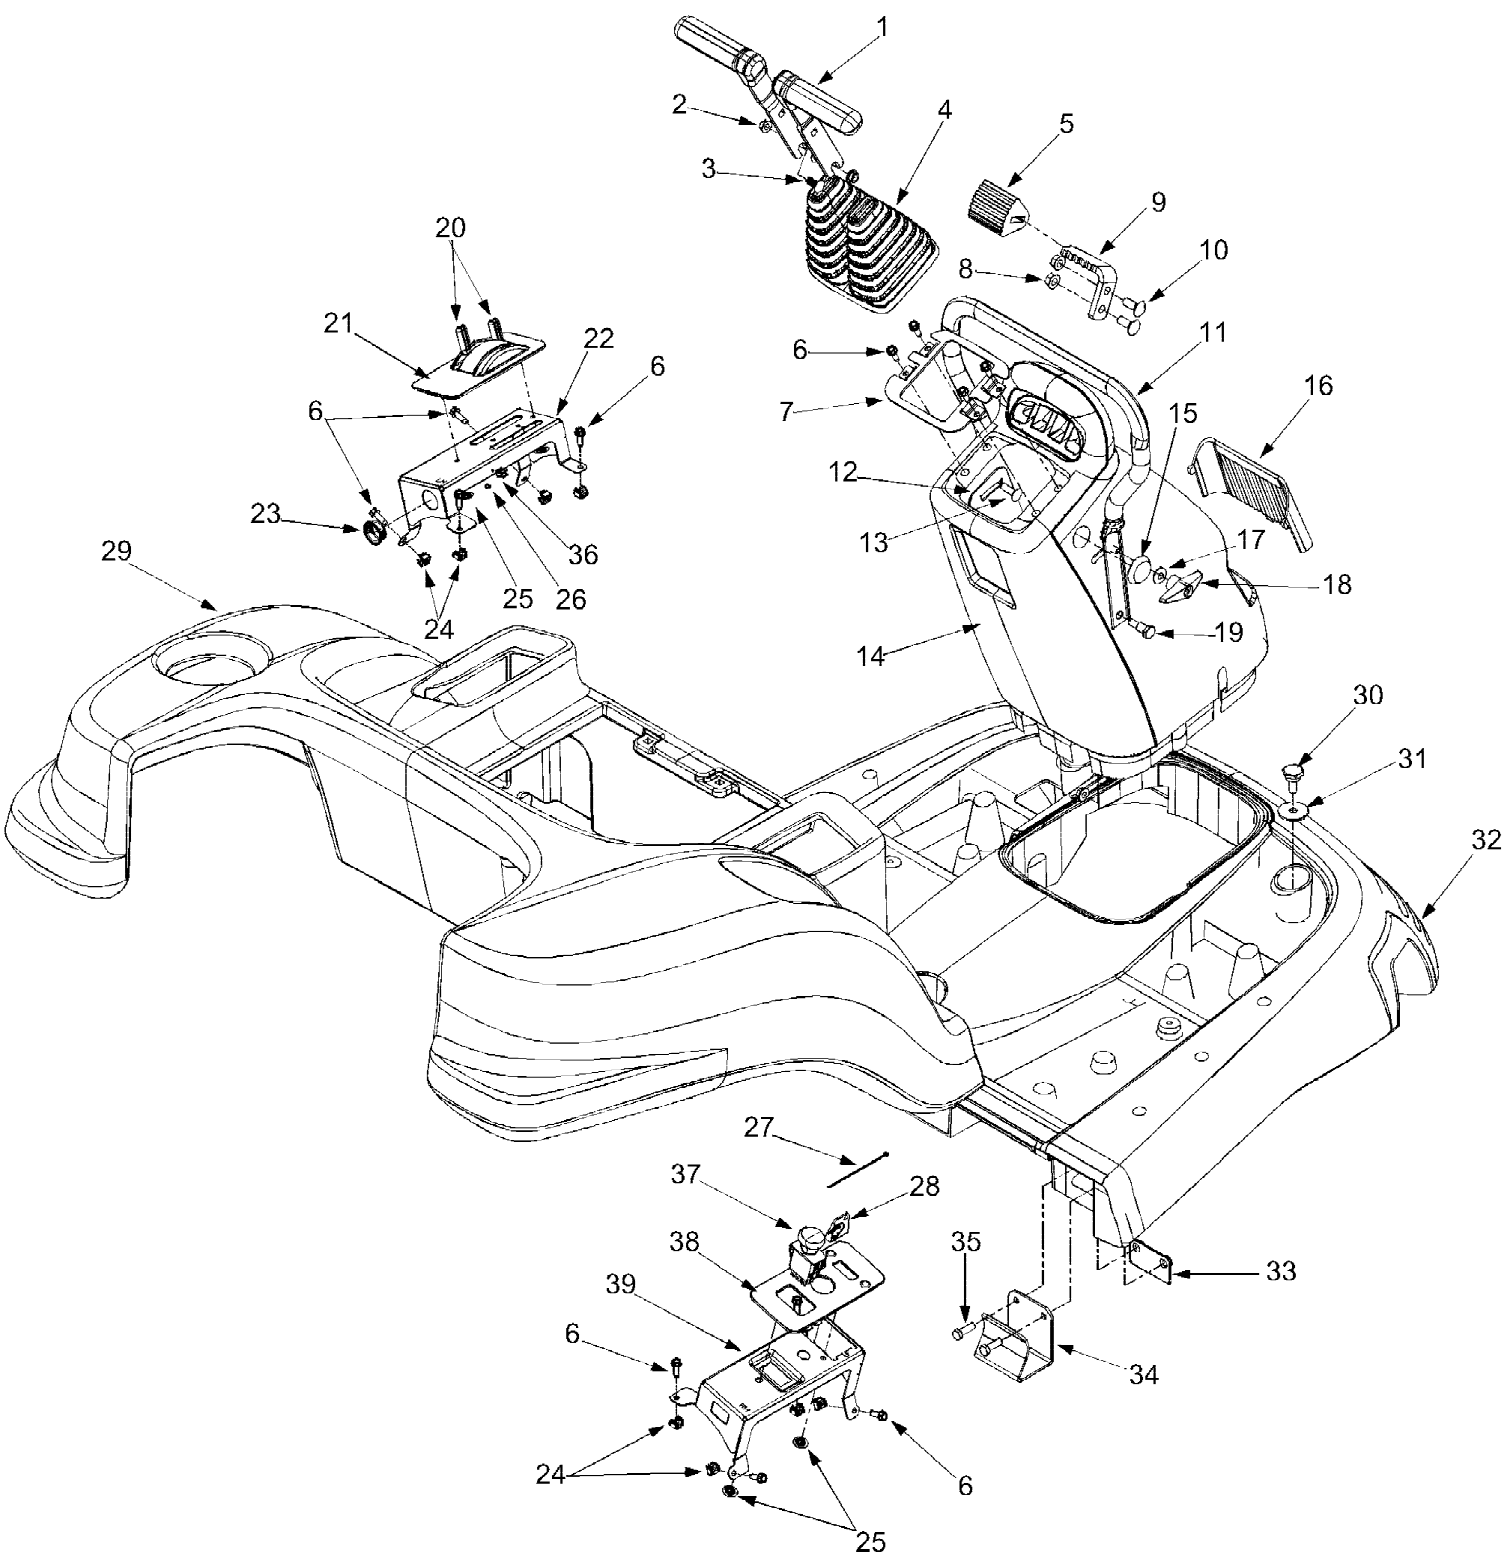 


Ref #	Part Number	Qty	Description
1	731-3263		Control Handle
2	712-3004A		Flange Lock Nut 5/16-18
3	710-0451		Carriage Bolt 5/16-18
4	731-3185		Bellow
5	735-0251		Foot Pad
6	710-0642		Hex Washer Screw 1/4-20 x .75
7	703-2648		Bellow Retainer Bracket
8	712-0431		Flange Lock Nut 3/8-16
9	703-2807B		Foot Pad Mounting Bracket
10	710-3168		Carriage Bolt 3/8-16
11	749-3081		Cruise Control Tube
12	703-3288		Control Tube Mounting Bracket
13	710-0276		Carriage Screw 5/16-18 x 1.0
14	731-3283		Console
15	726-0289		Plug
16	731-3128A		Lens
17	736-0242		Bell Washer .340 ID x .872 OD
18	720-0241		Wing Nut Knob
19	738-0754		Shoulder Screw
20	720-0302		Knob
21	731-3195B		LH Control Panel Cover
22	703-2703		LH Control Panel
23	723-3042		Snap Bushing
24	712-0453		Retainer Nut 1/4-20
25	726-3047		Push Nut
26	728-0117		Pop Rivet
27	726-0197		Cable Tie
28	725-1341B		Key
29	731-3309		Rear Body
30	738-3163A		Shoulder Screw 3/8-16
31	736-3039		Flat Washer .406 ID x 1.5 OD
32	731-3318		Floor Body
33	603-0578		Body Plate Assembly
34	703-3474		Body Clip
35	710-0376		Hex Cap Screw 5/16-18 x 1.0
36	732-0830		Spring Clip
37	725-1716		Electric PTO Switch
38	731-3196		RH Control Panel Cover
39	703-3583		RH Control Panel

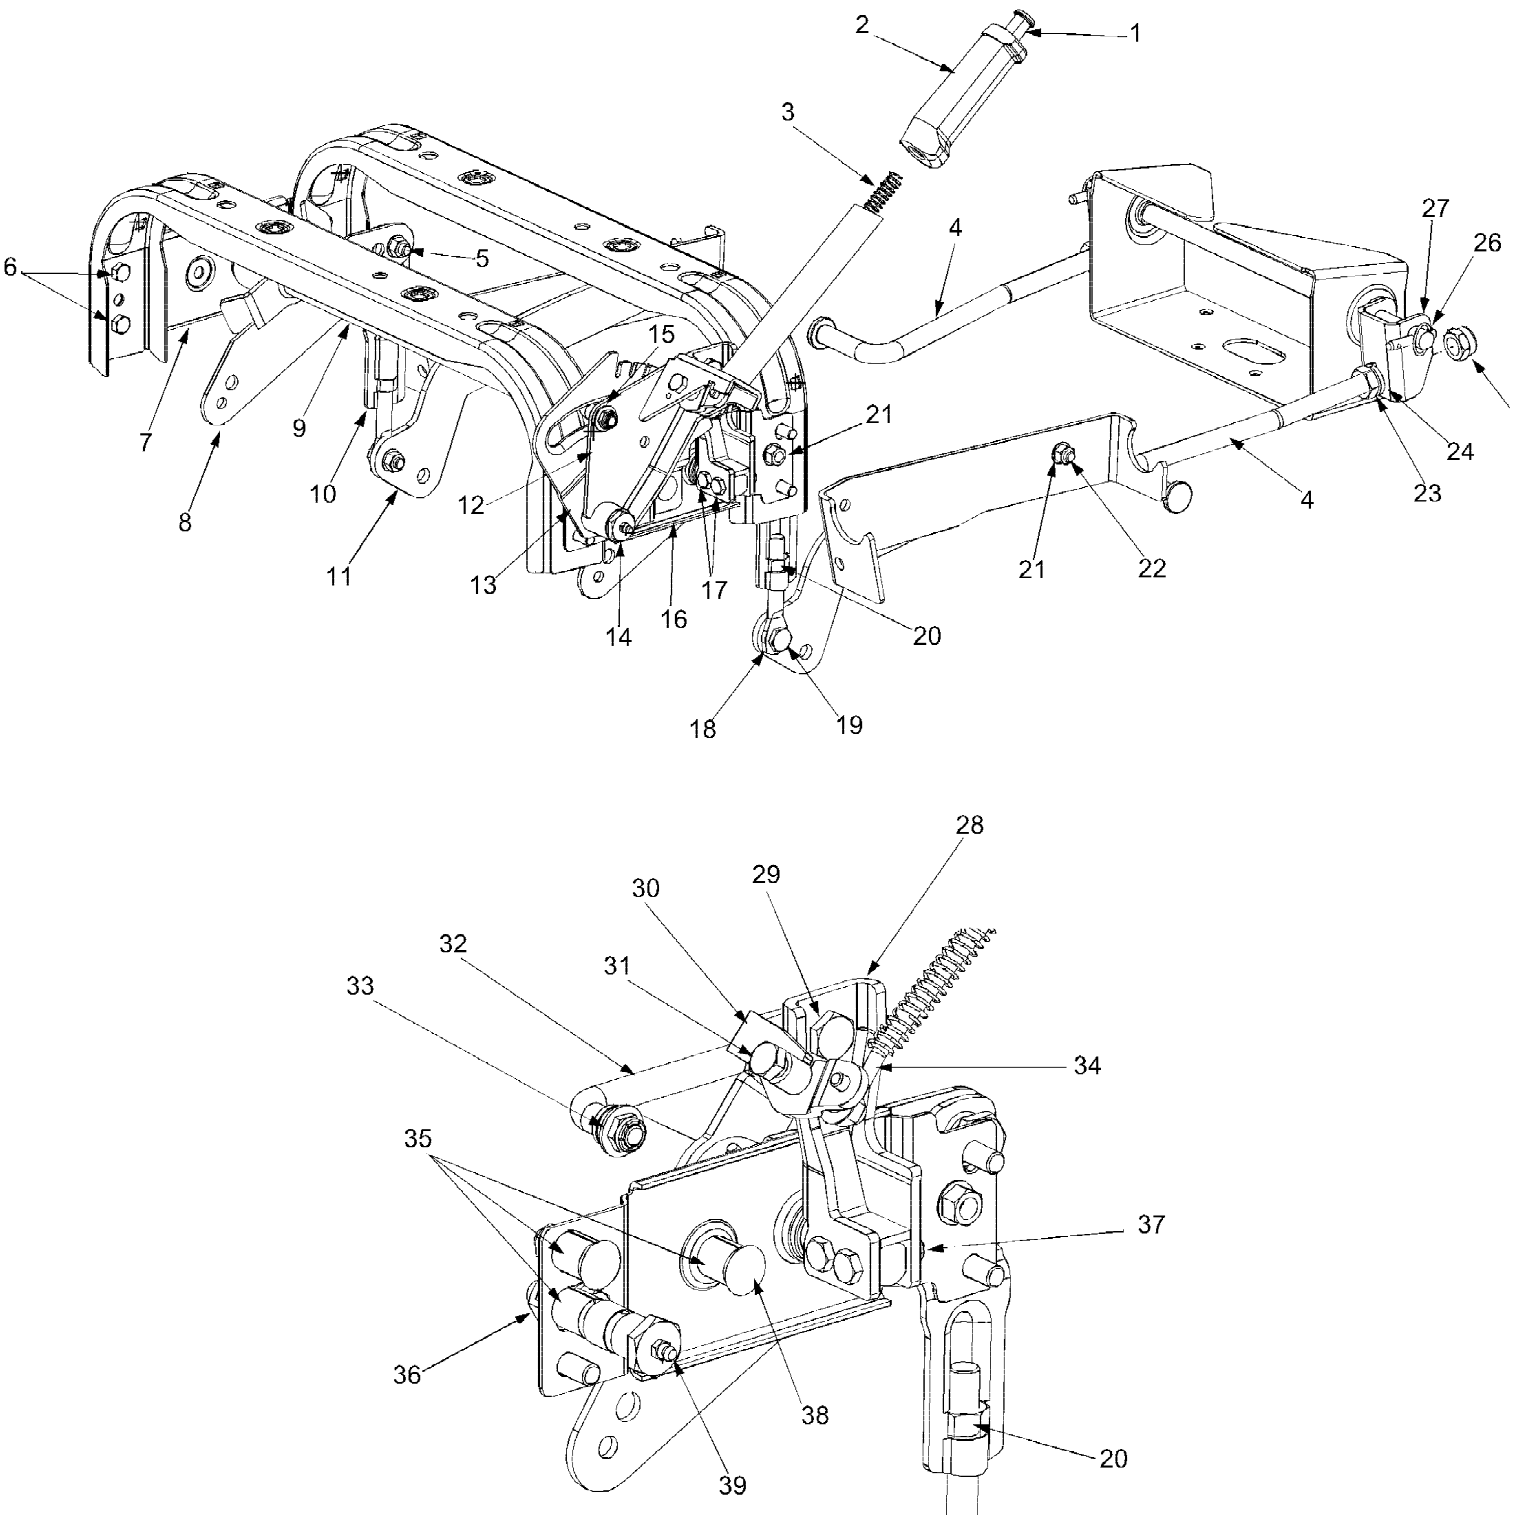 


Ref #	Part Number	Qty	Description
1	711-0642A		Handle Button
2	731-3158		Handle Deck Lift Grip
3	732-3097		Compression Spring
4	747-3405		Front Lift Rod
5	738-0507B		Shoulder Screw .500 Dia x .434
6	710-0216		Hex Cap Screw 3/8-16 x .75
7	603-0422		Shaft Mounting Bracket - LH
8	603-0370		Pivot Link Bearing Ass'y
9	603-0313		Lift Shaft Ass'y
10	703-2621		Adjustable Deck Lift Link
11	703-2780		Lift Parallel Link
12	603-0327		Handle Bearing Ass'y
13	703-2772		Deck Height Adjustable Plate
14	738-3150		Lift Handle Shoulder Screw
15	712-3020		Top Lock Jam Nut 3/8-16
16	603-0423		Shaft Mounting Bracket - RH
17	710-3083		Hex Cap Screw 5/16-18 x 1.375
18	711-0773		Eye Bolt Adjustable Link
19	738-0380		Shoulder Screw 3/8-16
20	712-0206		Hex Nut 1/2-13
21	712-0431		Flange Lock Nut 3/8-16
22	738-3151		Shoulder Screw 3/8-16 .56 x .27
23	712-3015		Jam Nut 5/8-11
24	736-0158		Lock Washer 5/8
25	712-3016		Lock Hex Nut 5/8-11
26	711-3266		Clevis Pin
27	703-3407		Front Lift Bracket
28	603-0401		Lift Arm Ass'y
29	738-0183		Shoulder Screw 3/8-16 .50 x .21
30	603-0257		Fork Lift Ass'y
31	710-3011		Hex Cap Screw 3/8-16 x 2.25
32	747-3276		Lift Link Rod
33	736-0300		Flat Washer .406 x .875
34	747-3267		Handle Arm
35	750-3200		Spacer .448 ID x .688 OD
36	712-0290		Lock Nut 7/16-14
37	712-3009		Hex Center L-Nut 5/16-18
38	710-0431		Hex Screw 3/8-16 x 1.50
39	737-0280		Grease Fitting
40	747-3406		Front Mounting Rod Bracket

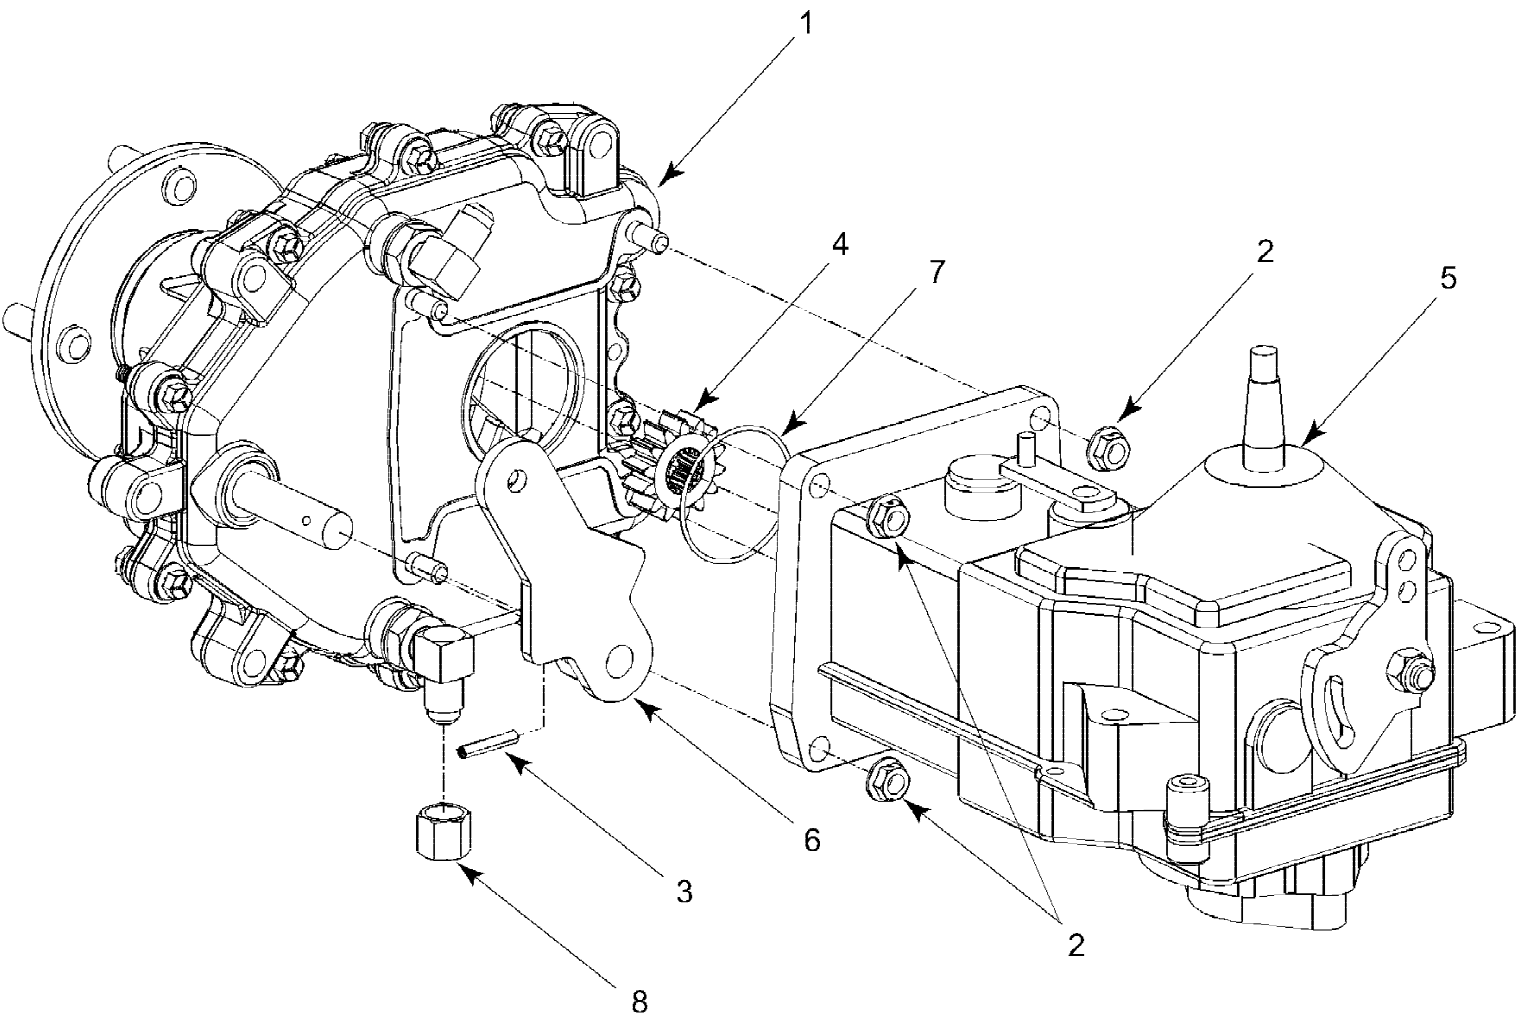 

Ref #	Part Number	Qty	Description
1	618-3110A		Drive Ass'y Complete
2	712-3004A		Hex Flange Lock Nut 5/16-18
3	715-0136		Spiral Pin 3/16 x 1.25
4	717-3396		Spur Gear 14T
5	717-3455		Hydro Transmission
6	718-3053		Parking Brake Lever
7	721-0343		O-Ring 2.0 Dia.
8	727-3125		Cap Nut 3/8

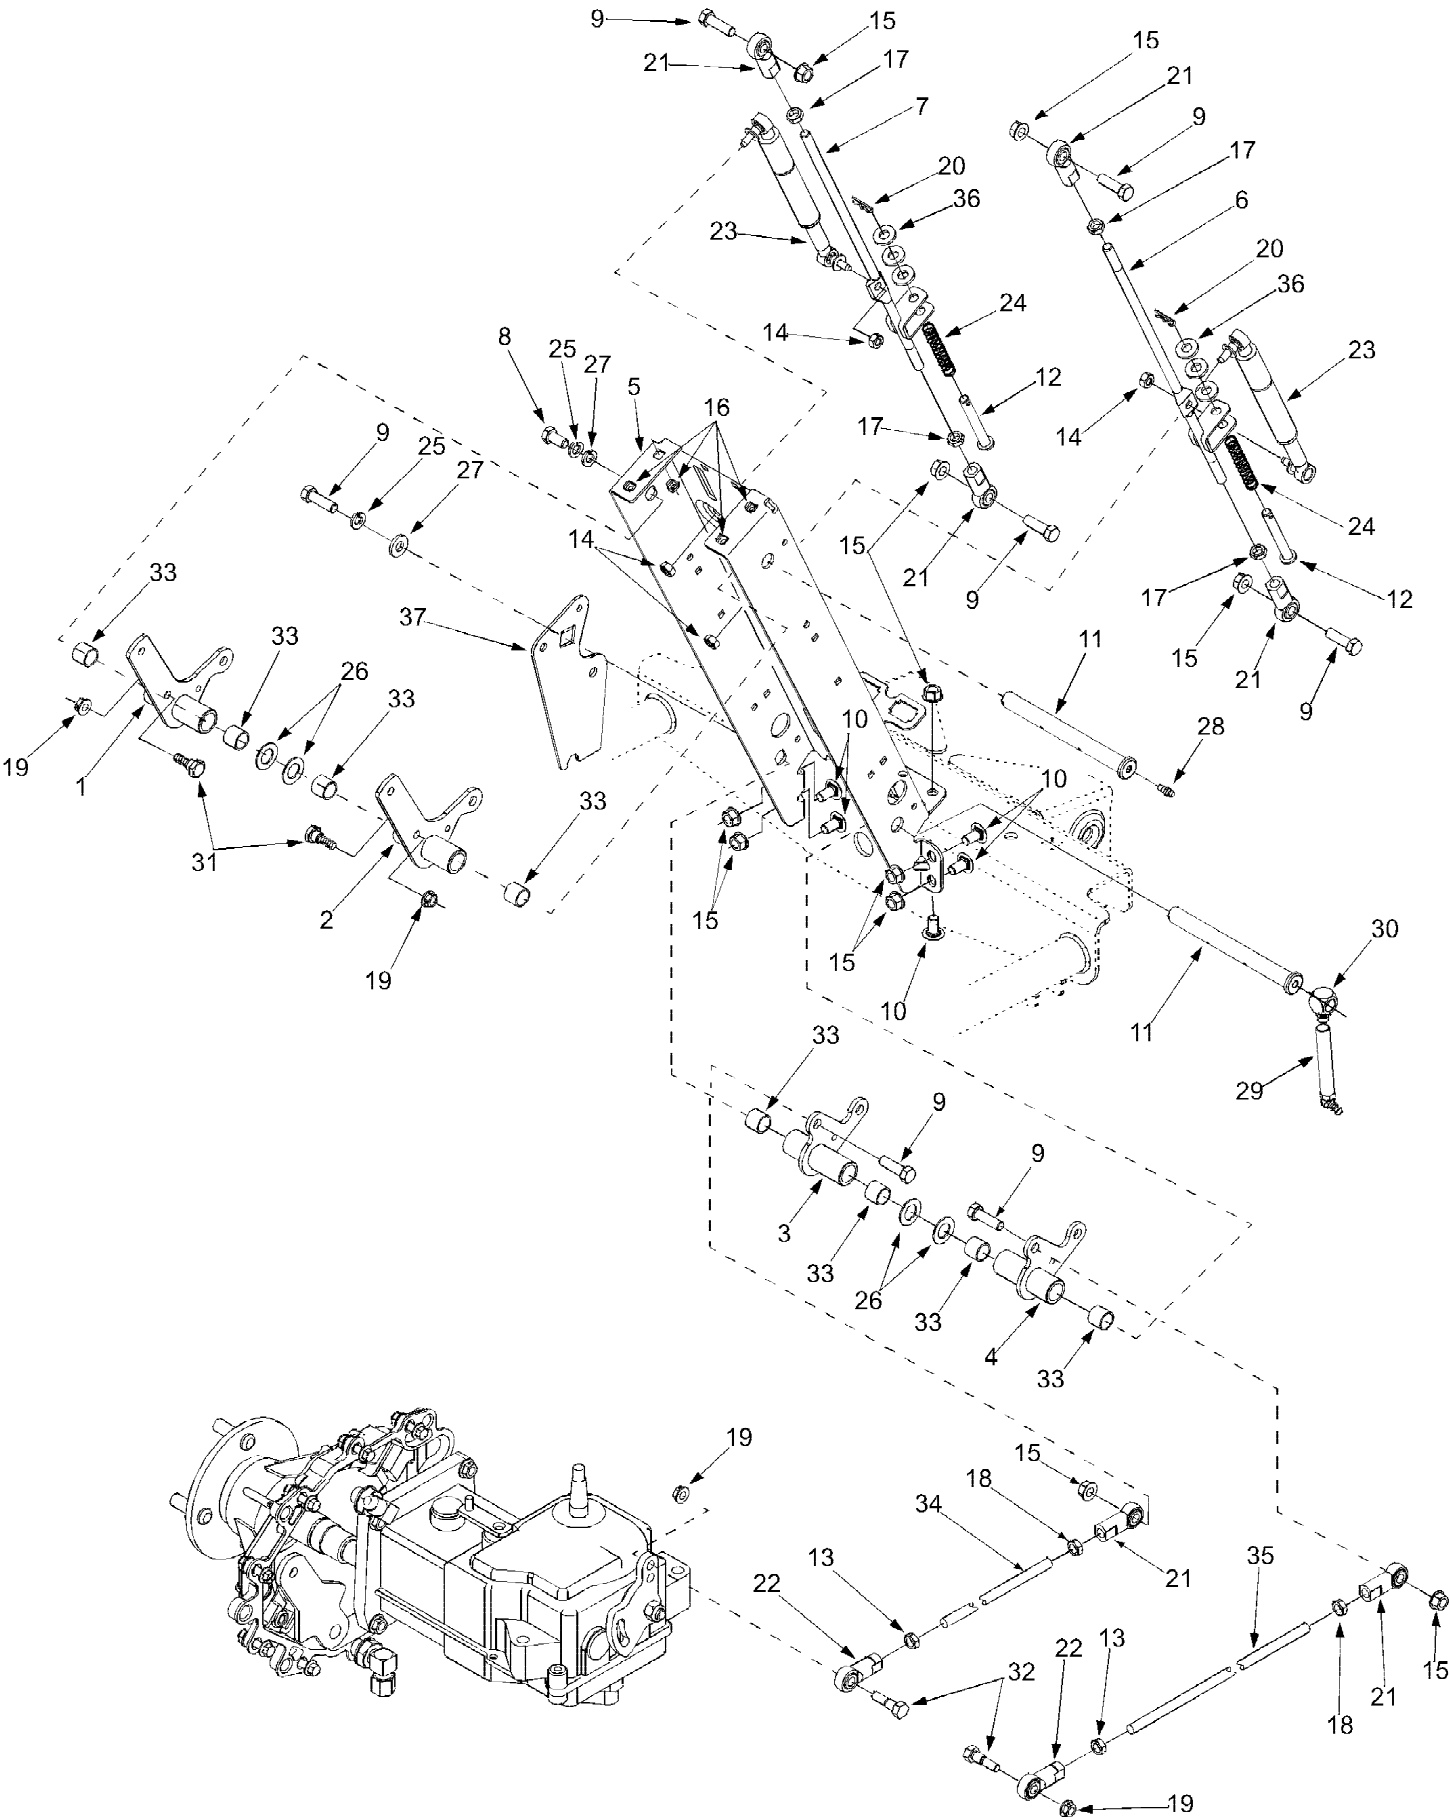 


Ref #	Part Number	Qty	Description
1	603-0340		Bellcrank Ass'y Upper LH
2	603-0341		Bellcrank Ass'y Upper RH
3	603-0342		Bellcrank Ass'y Lower LH
4	603-0343		Bellcrank Ass'y Lower RH
5	603-0647		Support Ass'y Tower
6	603-0410		Rod Ass'y Control RH
7	603-0411		Rod Ass'y Control LH
8	710-0216		Hex Cap Screw 3/8-16 x .75
9	710-3005		Hex Cap Screw 3/8-16 x 1.25
10	710-3178		Carriage Bolt 3/8-16 x .75
11	711-1111		Control Shaft
12	711-1124		Pin
13	712-0312		Hex Jam Nut LH 3/8-24
14	712-0365		Hex Center Lock Nut
15	712-0431		Hex Flange Lock Nut 3/8-16
16	712-0453		Retainer 1/4-20
17	712-0711		Hex Jam Nut 3/8-24
18	712-3001		Hex Jam Nut 3/8-24
19	712-3004A		Hex Flange Lock Nut 5/16-18
20	714-0104		Cotter Pin
21	723-0420		Spherical Rod End RH 3/8-24
22	723-0421		Spherical Rod End LH 3/8-24
23	727-3113		Damper Cylinder
24	732-3084		Spring Compression
25	736-0169		Lock Washer 3/8
26	736-0539		Thrust Washer .625 ID x 1.12 OD
27	736-3004		Flat Washer .406 ID x .875 OD
28	737-0280		Grease Fitting
29	737-3072		Grease Fitting w/Tube
30	737-3073		Adapter 1/4-20
31	738-0296		Shoulder Bolt .437 Dia. x .268
32	738-3153		Shoulder Bolt
33	741-3063		Sleeve Bearing
34	747-3281		Control Rod LH 31-5/8
35	747-3282		Control Rod RH 35-3/8
36	736-0300		Flat Washer .406 ID x .87 OD
37	703-3405		Support Plate

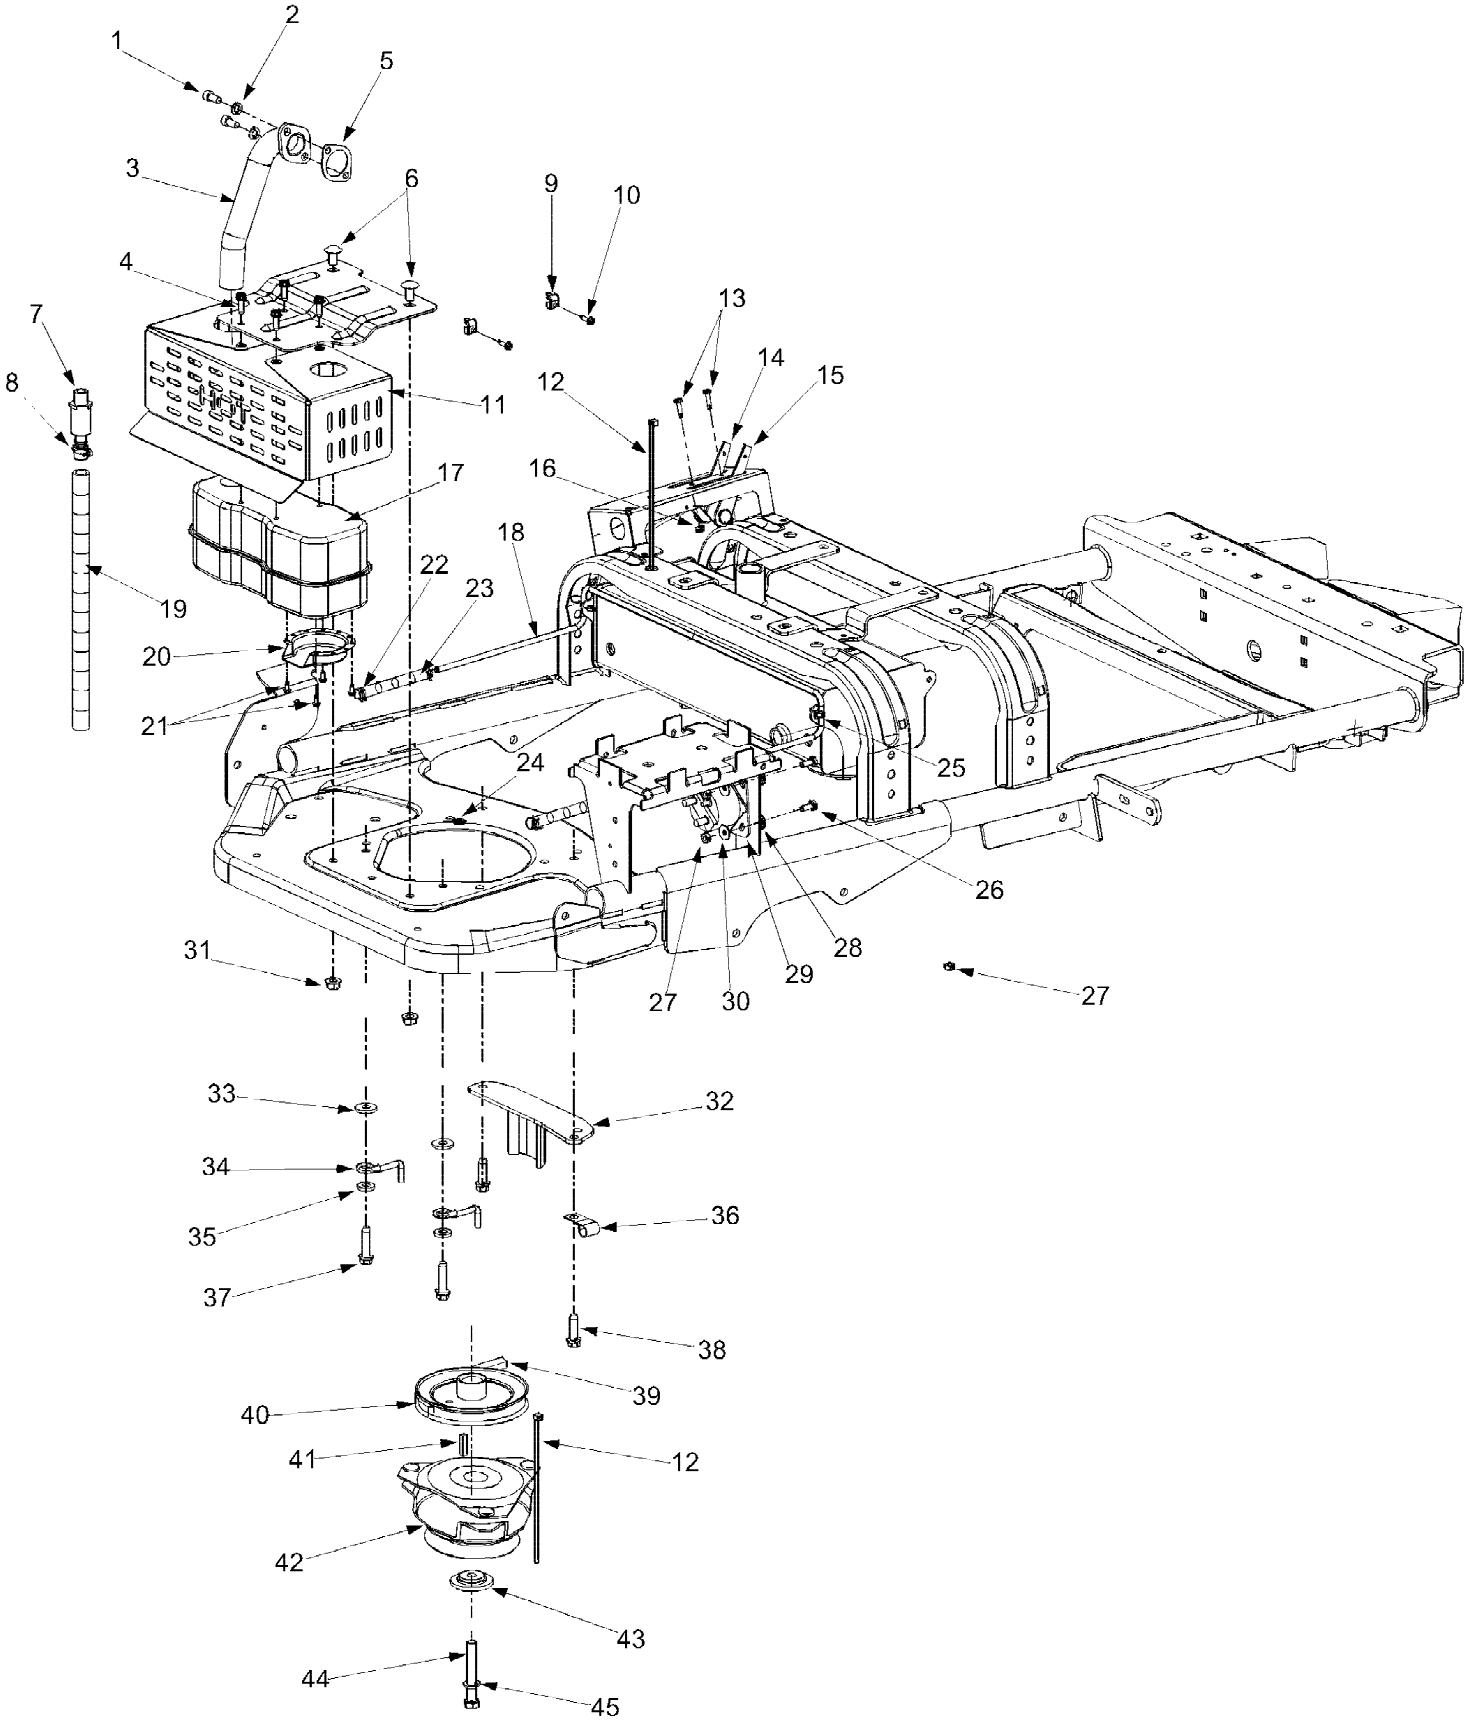 


Engine Accessories, PTO, Muffler


Ref #	Part Number	Qty	Description
1	710-1314		Cap Screw 5/16-18
2	736-0119		Lock Washer 5/16
3	751-0619		Exhaust Pipe
4	710-0642		Hex Washer Screw 1/4-20 x .75
5	721-0208		Exhaust Gasket
6	710-3178		Carriage Bolt 3/8-16 x .75
7	751-3140		Oil Drain
8	751-3142		Oil Drain Cap
9	751B213146		Throttle Clamp
10	710-1237		Hex Washer Screw #10-32 x .625
11	703-3004		Muffler Bracket
12	725-0157		Cable Tie
13	710-3009		Screw #10-24 x .75
14	746-3074		Throttle Cable Control 32"
15	746-3073		Choke Cable Control 32.25"
16	712-0161		Hex Lock Nut #10 - 24
17	751-0617		Muffler
18	749-3048		Fuel Line
19	751-3141		Oil Drain Hose
20	751-0564		Muffler Deflector
21	710-0148		Hex Washer Screw #8-32 x .375
22	726-0205		Hose Clamp
23	751-0535		Fuel Line Hose
24	736-0607		Lock Washer 5/16
25	725-1711		Retainer Clip
26	710-0751		Hex Cap Screw 1/4-20 x .620
27	712-0291		Hex Lock Nut 1/4-20
28	736-3006		Lock Washer 1/4 ID x 3/4 OD
29	725-3001		Solenoid
30	736-0270		Bell Washer .265 ID x .75 OD
31	712-0431		Flange Lock Nut 3/8-16
32	603-0317		Clutch Retainer Ass'y
33	736-0258		Flat Washer .385 ID x 1.0 OD
34	747-3362		Rear Belt Retainer Rod
35	736-3010		Flat Washer .407 ID x .812 OD
36	726-3008		Heat Shield Cable Clip
37	710-1007		Hex Washer Screw 3/8-16 x 1.5
38	710-0502A		Hex Washer Screw 3/8-16 x 1.25
39	754-3100		V-Belt
40	756-3060		Pulley
41	714-0128		Key
42	717-3467		Electric Clutch
43	750-3106		Spacer Clutch
44	710-0510		Hex Cap Screw 7/16-20 x 3.0
45	736-0171		Lock Washer 7/16
	629-3038A		Engine Harness Assembly (Not Shown)

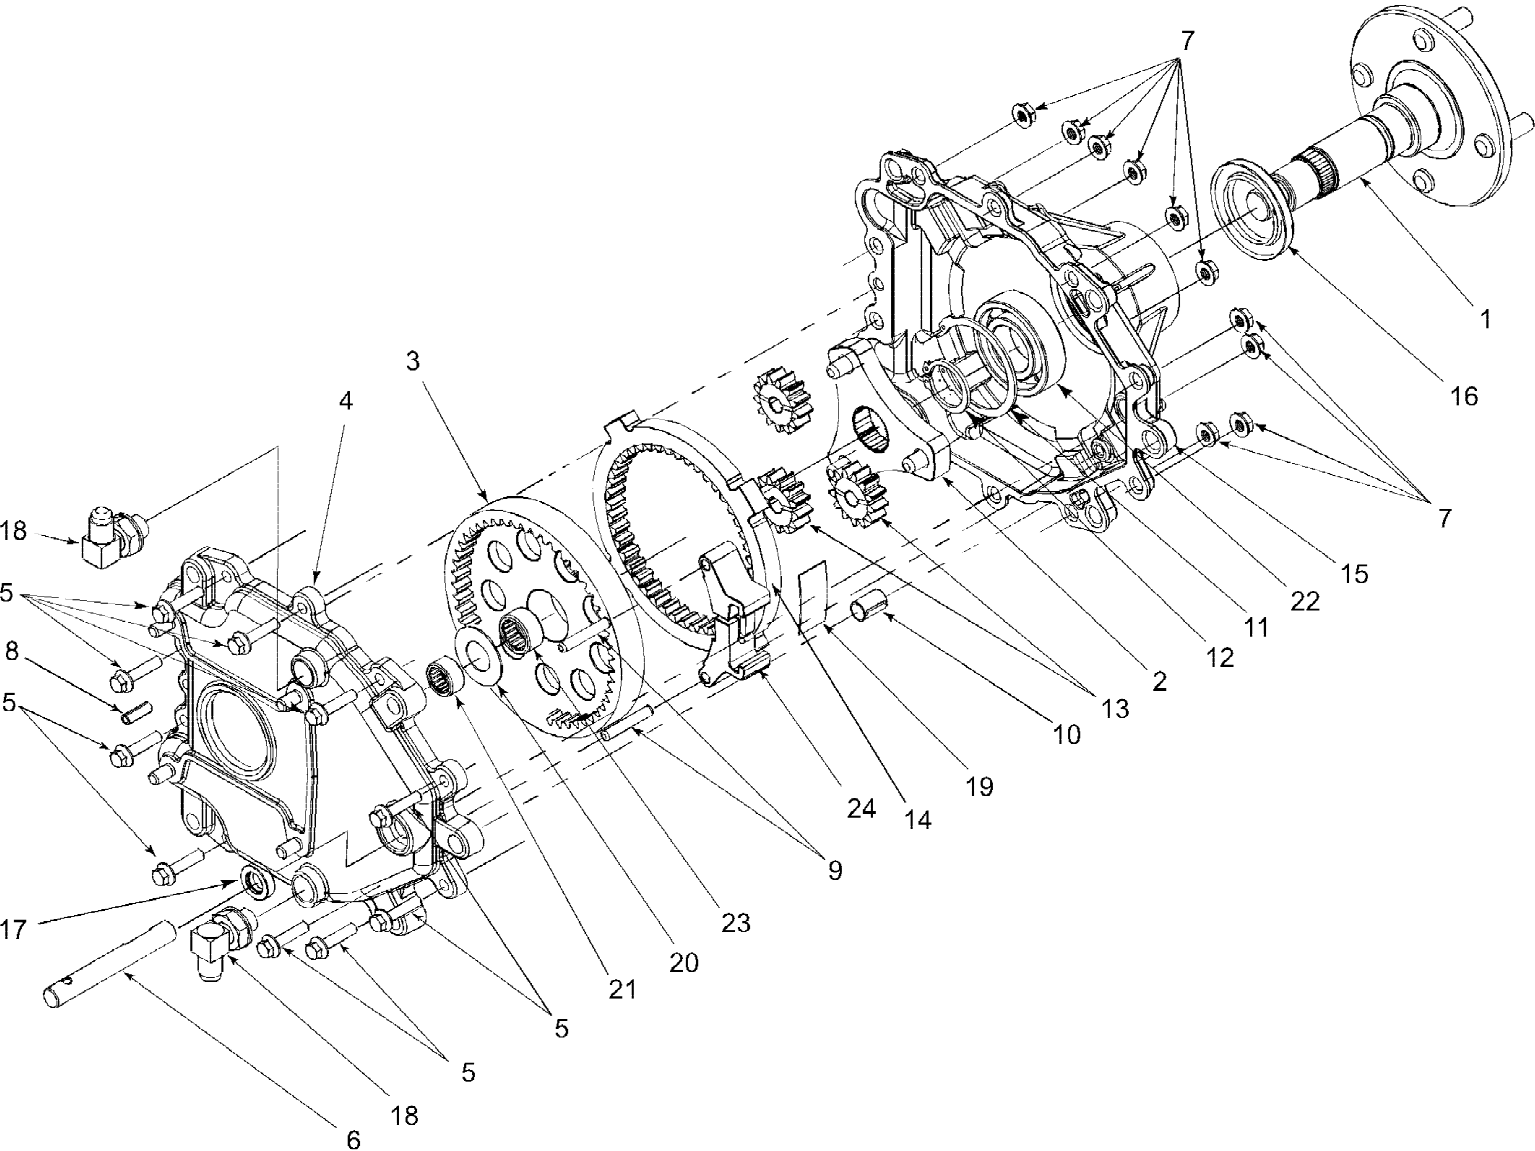 




Ref #	Part Number	Qty	Description
	618-3110A		Drive Ass'y Complete
1	611-3012		Axle Assembly
	710-0852		Ribbed Neck Stud
2	618-3106		Carrier Assembly, Output
3	618-3107		Gear Assembly, 51T Internal & 20T
4	618-3109		Housing Ass'y
5	710-1342		Hex Washer Screw 1/4-20 x 1-1/8
6	711-1048		Brake Shaft
7	712-3027		Hex Flange Lock Nut 1/4-20
8	715-0156		Roll Pin
9	715-0219		Dowel Pin
10	715-3045		Bushing
11	716-3015		Inverted Retaining Ring
12	716-3018		Snap Ring
13	717-3395		Spur Gear 13T
14	717-3397		Ring Gear 46T
15	719-3114		Axle Outer Housing
16	721-0381		Oil Seal
17	721-0393		Oil Seal
18	727-3124		Elbow Fitting
19	732-0752		Brake Shoe Spring
20	736-0351		Shim Washer .76 x 1.5 x .030
	736-0492		Shim Washer .76 x 1.5 x .010
	736-0493		Shim Washer .76 x 1.5 x .020
21	741-0665		Needle Bearing
22	741-3033A		Ball Bearing
23	741-3080		Needle Bearing
24	761-3049		Shoe Brake

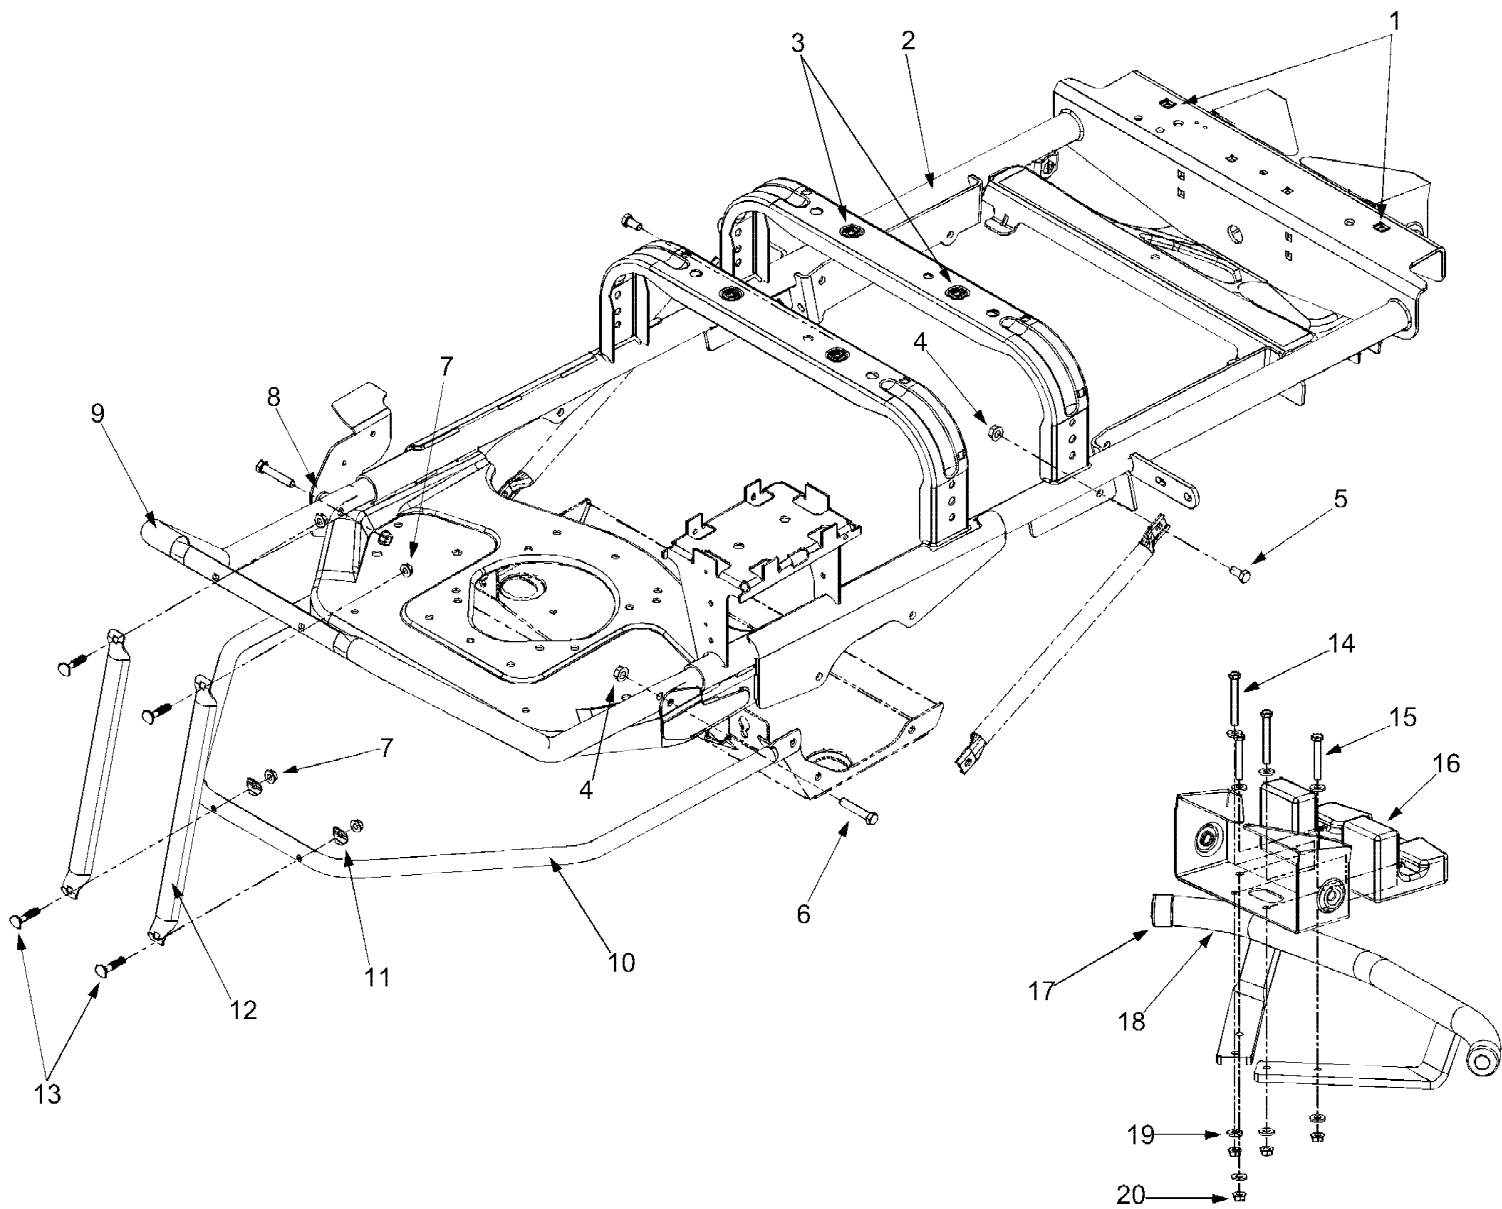 


Ref #	Part Number	Qty	Description
1	712-0251		Retainer Nut 3/8-16
2	603-0720B		Frame Assembly
3	712-0455		Retainer Nut 3/8-16
4	712-0431		Flange Lock Nut 3/8-16
5	710-0216		Hex Cap Screw 3/8-16 x .75
6	710-3144		Hex Cap Screw 3/8-16 x 2.0
7	712-3004A		Flange Lock Nut 5/16-18
8	736-0258		Flat Washer .385 x 1.0 x .135
9	749-3087		Upper Bumper Tube
10	749-3089		Lower Bumper Tube
11	736-0451		Washer .320 ID x .93 OD
12	703-3504		Bumper Bracket
13	710-1250		Carriage Bolt 5/16 x 1.5
14	710-0521		Hex Cap Screw 3/8-16 x 3.0
15	710-0859		Hex Cap Screw 3/8 - 16 x 2.5
16	719-3130		Counter Weight
17	726-0298		End Cap
18	603-0620A		Bumper Ass'y
19	736-3004		Flat Washer .406 ID x .875 OD
20	712-0431		Flange Lock Nut 3/8-16

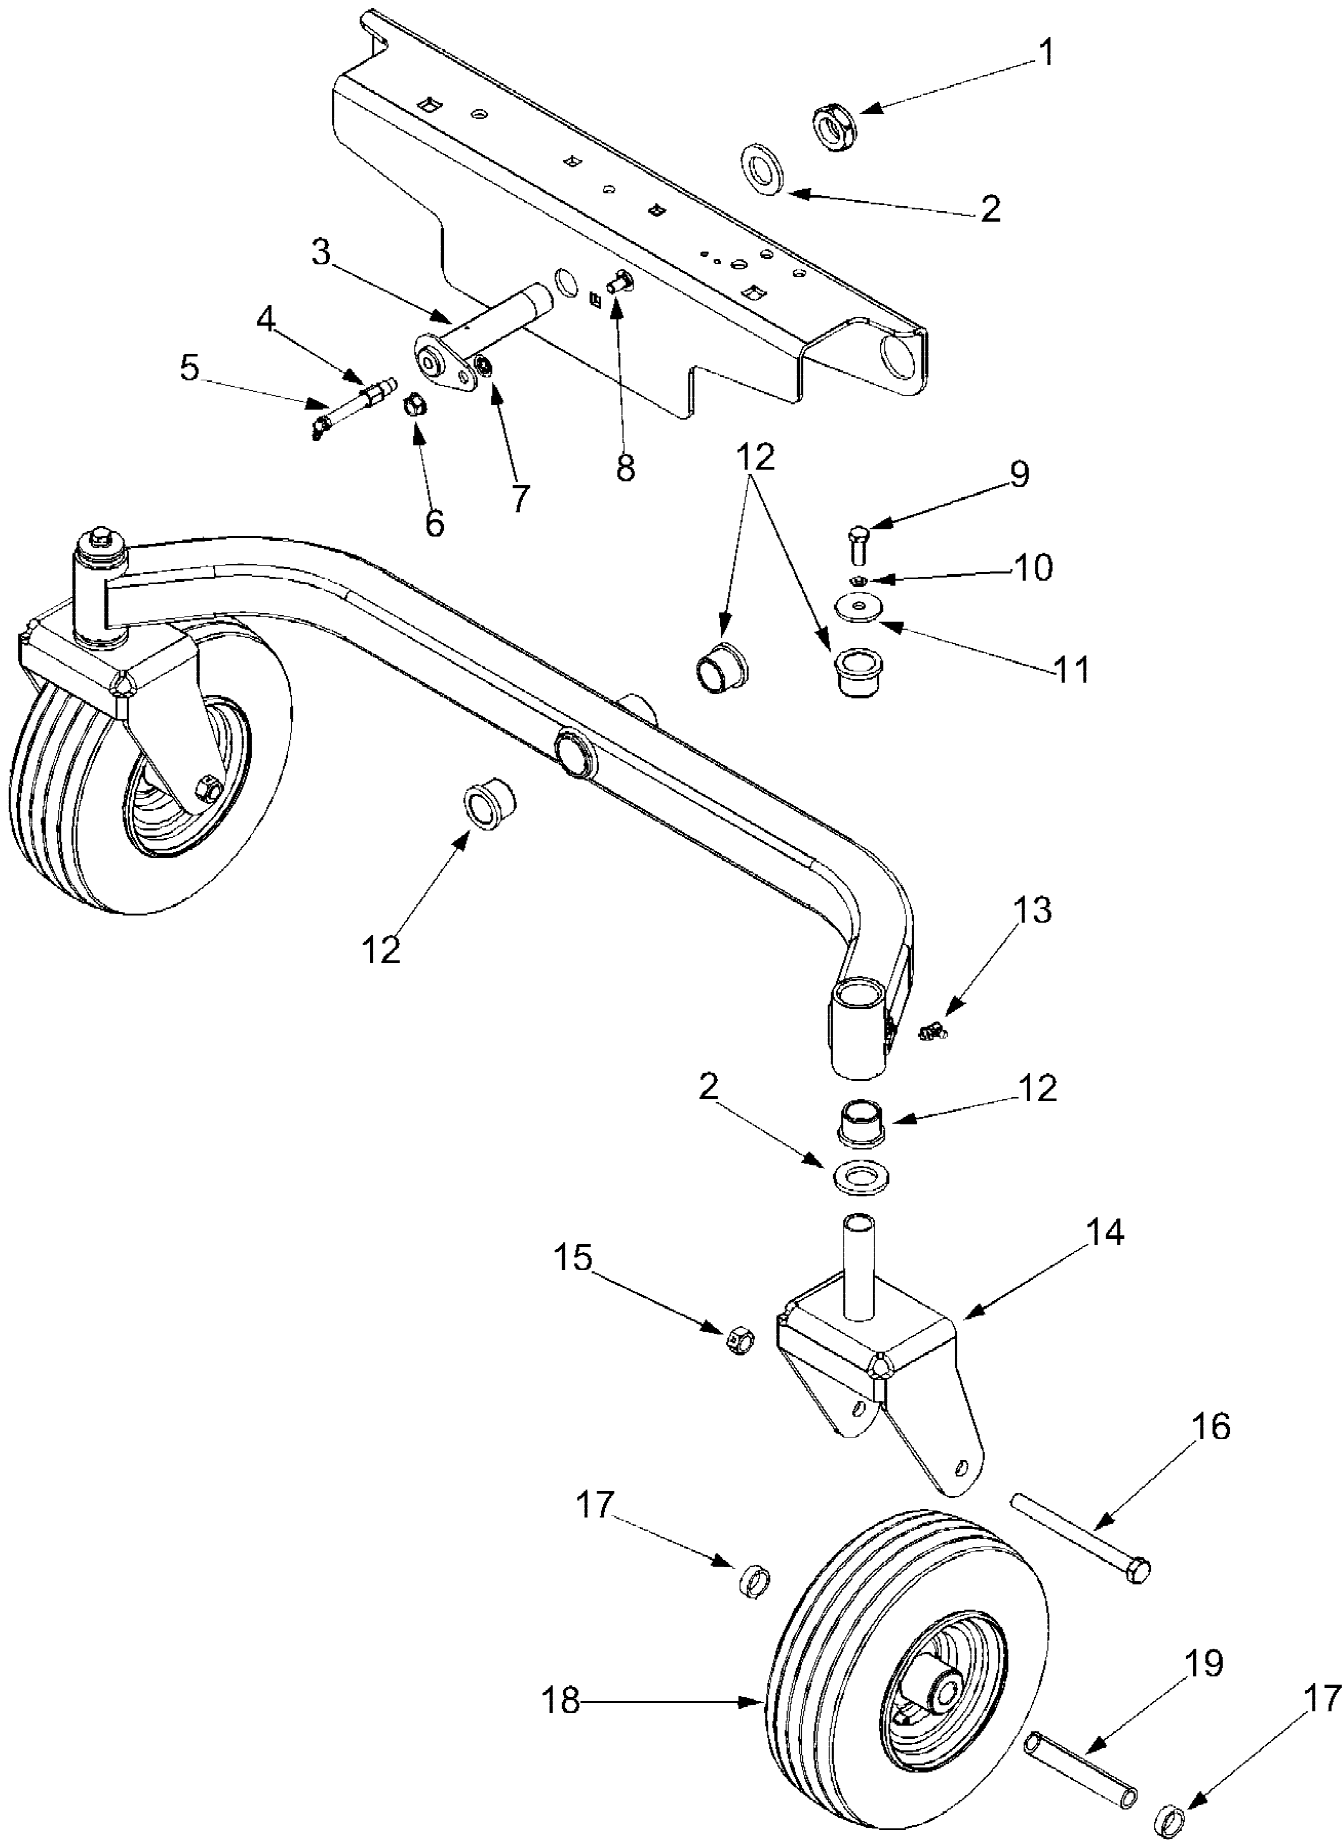 

Ref #	Part Number	Qty	Description
1	712-3075		Hex Lock Nut, 1.0-14
2	736-0274		Flat Washer
3	603-0389A		Pin Ass'y, Pivot
4	737-3090		Adapter, 1/8 NPTF x 1/8 NPTF
5	737-3072		Grease Fitting, 65° w/Extension
6	712-0431		Hex Flange Lock Nut, 3/8-16
7	712-0229		Push Nut, 3/8 ID
8	710-3178		Carriage Bolt, 3/8-16 x .75
9	710-0514		Hex Cap Screw, 3/8-16 x 1.0
10	736-0169		Lock Washer 3/8
11	736-0227		Flat Washer 3/8 x 1.5
12	731-0374		Flange Bearing 1.0 ID
13	737-0280		Grease Fitting
14	603-0363		Castor Wheel Bracket
15	712-0239		Hex Center Lock Nut 1/2-20
16	710-0506		Hex Cap Screw, 1/2-20 x 5.5
17	750-0456		Spacer, .79 ID x .347 Lg
18	634-3164		Wheel Comp 11.0 x 4.0 x 5.0
19	750-3197A		Wheel Spacer
20	603-0382		Front Axle Ass'y

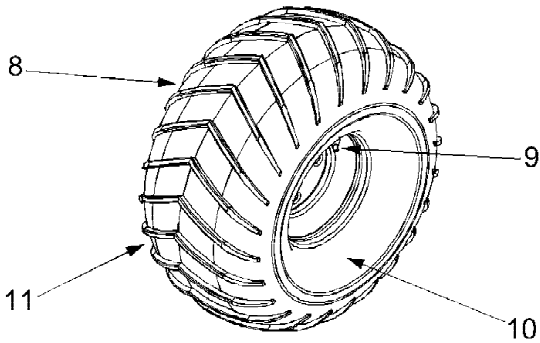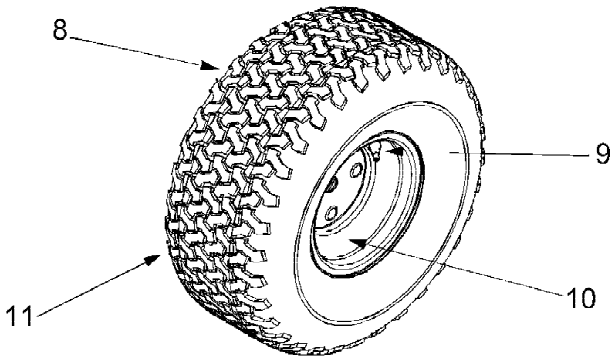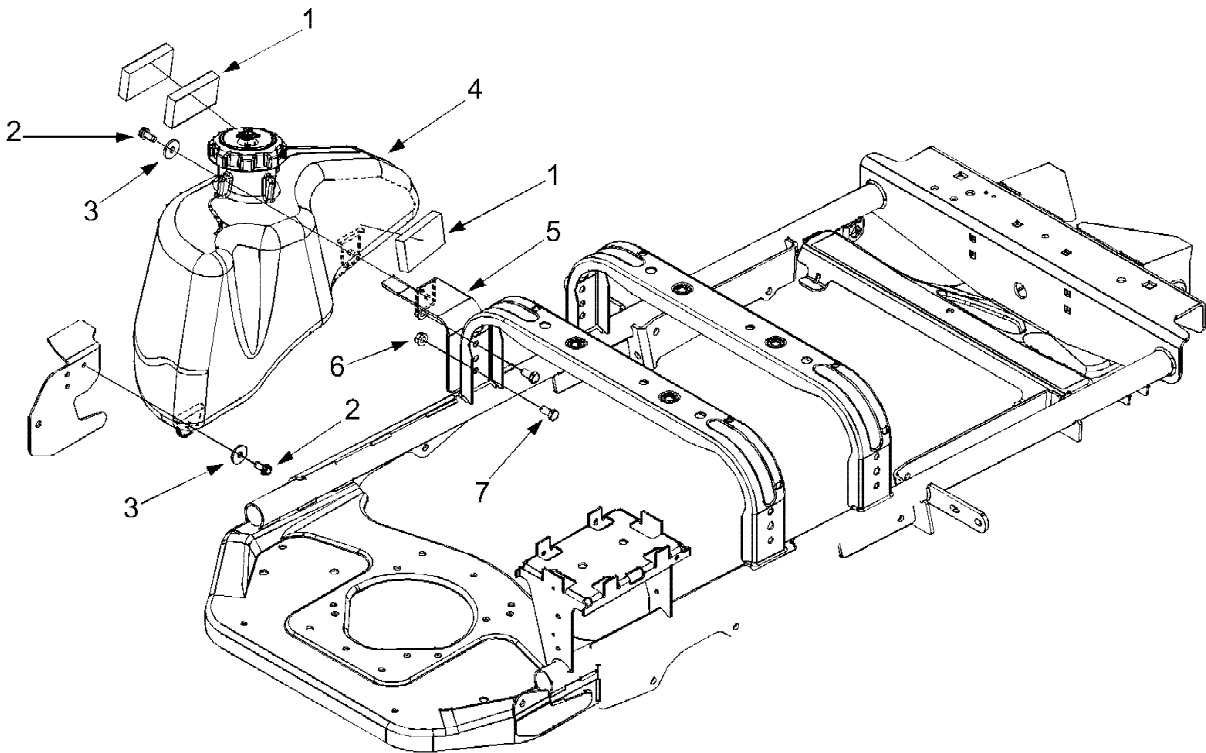   


Ref #	Part Number	Qty	Description
1	722-0265		Foam 2.04 x 3.50 x .62
2	710-1260A		Hex Washer Screw 5/16-18 x .75
3	736-0231		Flat Washer .344 ID x 1.125 OD
4	651-3004		Tank Assembly 4.0 Gallon
5	703-3490		Fuel Tank Mounting Bracket
6	712-0431		Flange Lock Nut 3/8-16
7	710-0216		Hex Cap Screw 3/8-16 x .75
8	734-1596		Tire 20 x 8 - 8 (ZT-1850)
	734-3163		Tire 22 x 11-8 (ZT-2150 & ZT-2250)
9	634-3005		Rim Ass'y 8 x 6.19 (ZT-1850)
	634-3030		Rim Ass'y 8 x 6.19 (ZT-2150 & ZT-2250)
10	734-0255		Tubeless Air Valve
11	634-3050		Wheel Comp 20 x 8-8 (ZT-1850)
	634-3051		Wheel Comp 22 x 11-8 RH (ZT-2150 & ZT-2250)
	634-3052		Wheel Comp 22 x 11-8 LH (ZT-2150 & ZT-2250)

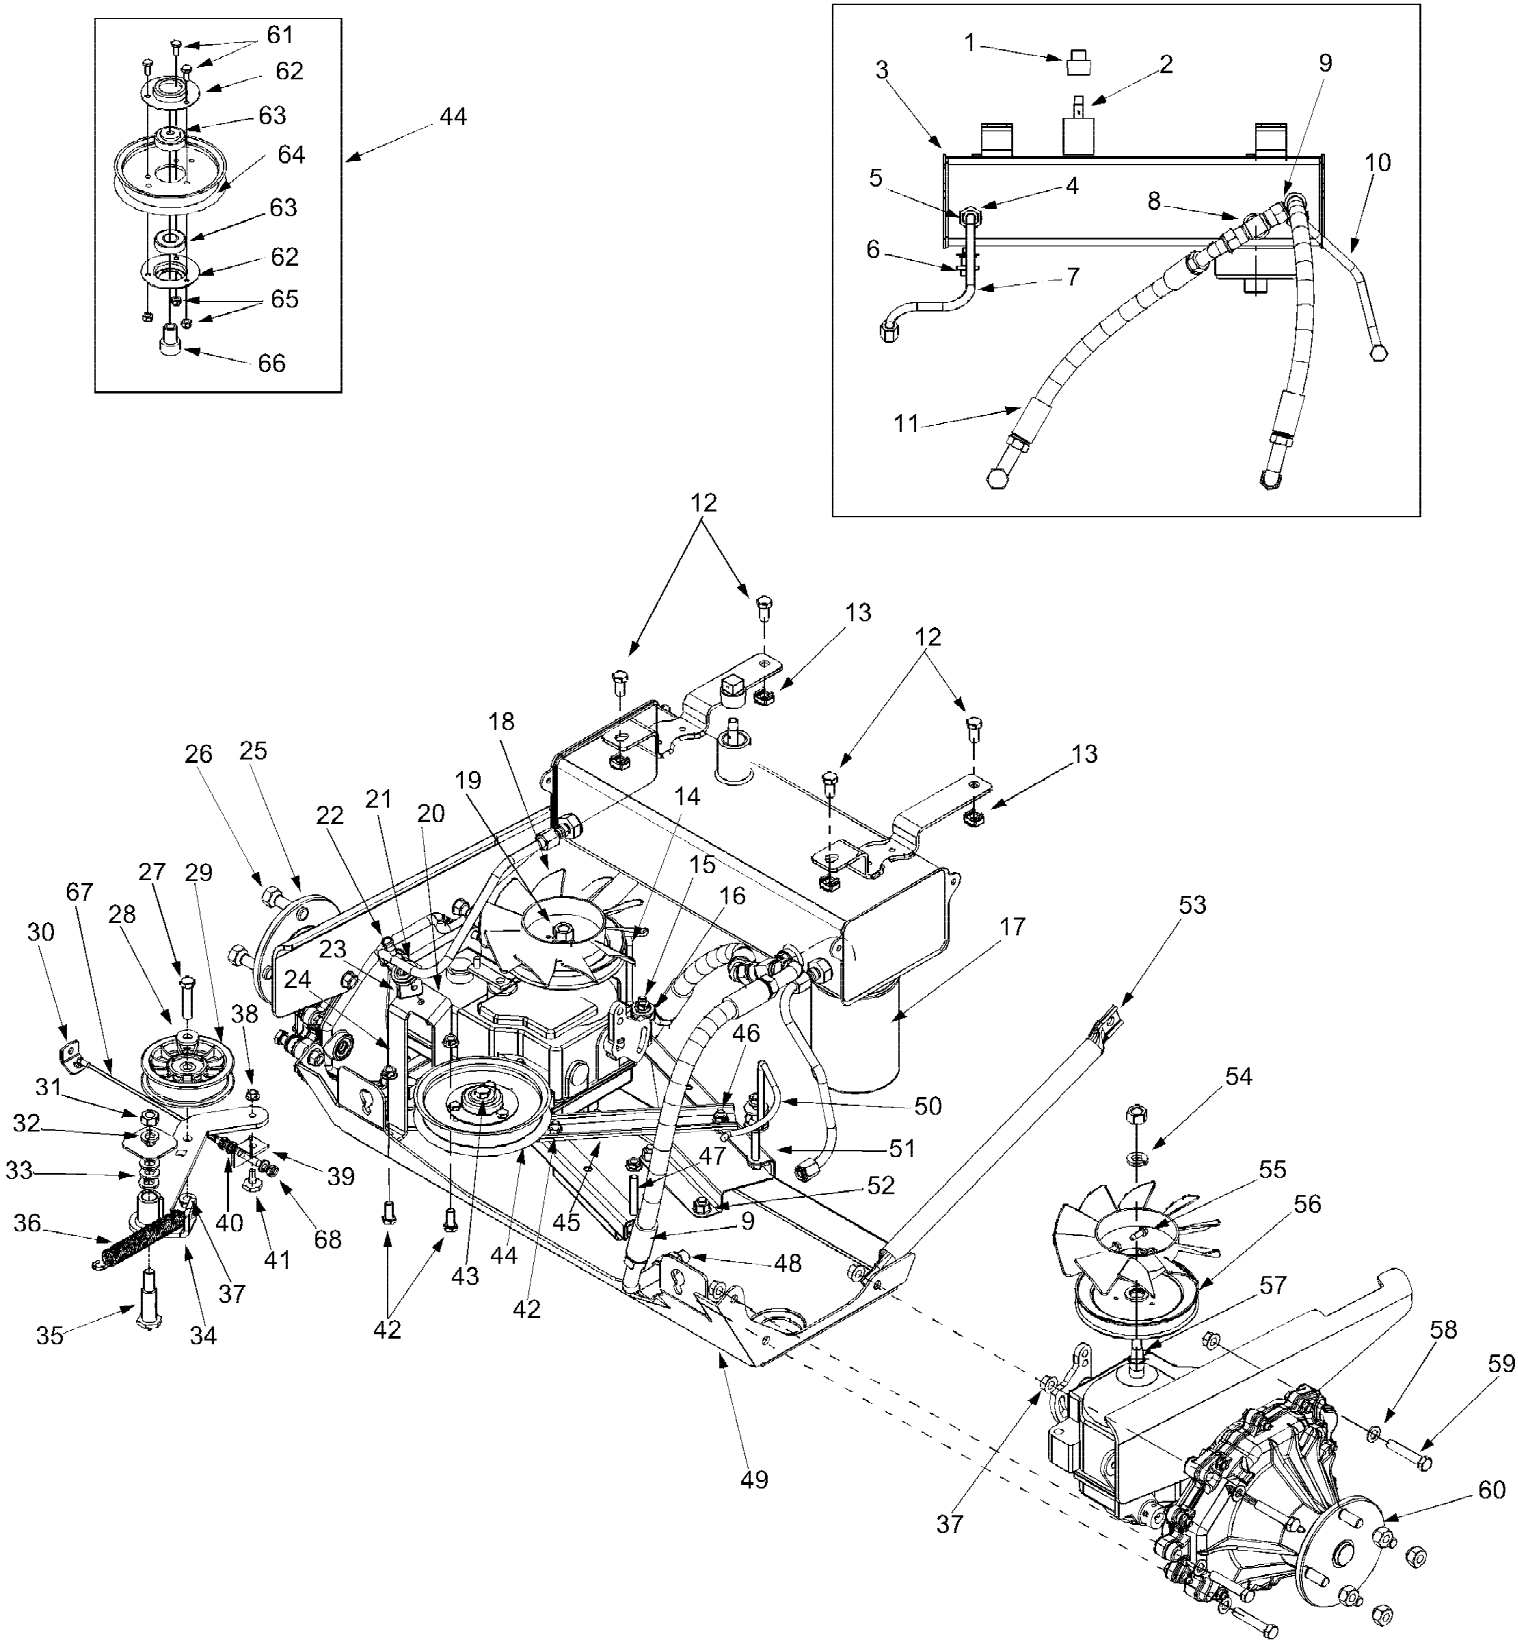 


Ref #	Part Number	Qty	Description
1	737-3069		Pipe Plug
2	737-3070A		Pipe Dipstick
3	603-0639		Hydraulic Tank Assembly
4	727-3116		Connection Fitting
5	721-0223		Seal
6	738-0940		Drain Plug
7	727-3120		Inlet Tube LH
8	727-3155		Tee Fitting
9	727-3154		Outlet Hose RH
10	727-3121		Inlet Tube RH
11	727-3153		Outlet Hose LH
12	710-0216		Hex Cap Screw 3/8-16 x .75
13	712-0455		Retainer Nut 3/8-16
14	747-3360		Belt Retainer Rod RH
15	710-0378		Hex Cap Screw 5/16-18 x 2.5
16	736-3089		Flat Washer 5/16
17	723-3071		Filter Element
18	731-1449A		Fan Blade
19	712-0333		Hex Nut 1/2-20
20	703-3168		Mounting Pulley Bracket
21	756-0625		Roller Cable
22	738-0924		Hex Shoulder Screw 1/4-28 x .375
23	703-3169		Retainer Cable Bracket
24	712-0117		Lock Nut 1/4-28
25	618-3165		Complete Transmission Assembly LH
26	712-3050		Lug Nut
27	710-0347		Hex Cap Screw 3/8-16 x 1.75
28	736-0258		Flat Washer .385 ID x 1.0 OD
29	756-0627B		Flat Idler Pulley 3.5 OD
30	703-3174		Mounting Bracket Cable
31	712-3019		Hex Nut 7/16-14
32	736-0171		Lock Washer 7/16
33	736-3015		Flat Washer .469 ID x .875 OD
34	603-0377A		Idler Arm Assembly
35	603-0102		Shoulder Screw
36	732-0478		Extension Spring 6.12 Lg
37	712-0431		Flange Lock Nut 3/8-16
38	712-3027		Lock Nut 1/4-20
39	703-3380		Declutching Cable Bracket
40	736-0119		Lock Washer 5/16
41	738-0704		Shoulder Screw
42	710-3008		Hex Cap Screw 5/16-18 x .75
43	710-3011		Hex Cap Screw 3/8-16 x 2.25 Models ZT-2150 & ZT-2250 Only
44	603-0362		Idler Pulley Assembly 5.0" Models ZT-2150 & ZT-2250 Only
45	703-2888		Idler Bracket
46	712-3004A		Flange Lock Nut 5/16-18
47	710-3103		Hex Cap Screw 5/16-18 x 2.0
48	727-3100		Connection Fitting 1/2 x 3/8
49	603-0358B		Skid Plate Assembly
50	747-3361		Belt Rod LH

Ref #	Part Number	Qty	Description
51	603-0450		Support Pump Assembly
52	710-3178		Carriage Bolt 3/8-16 x .75
53	749-3040		Frame Strut
54	736-0921		Lock Washer 1/2
55	710-1189		Hex Washer Screw #12-24 x .625
56	756-0974		Transmission Pulley
57	732-0729		Wire Ring
58	736-0185		Flat Washer
59	710-3144		Hex Cap Screw 3/8-16 x 2.0
60	618-3164		Complete Transmission Assembly RH
61	710-0751		Hex Cap Screw 1/4-20 x .62
62	703-2907		Bearing Cup
63	741-0600		Ball Bearing
64	756-3085		Idler Pulley 5.0"
65	712-0324		Hex Lock Nut 1/4-20
66	750-3176		Idler Spacer
67	746-3083		Declutching Cable
68	712-3007		Jam Nut 5/16-18

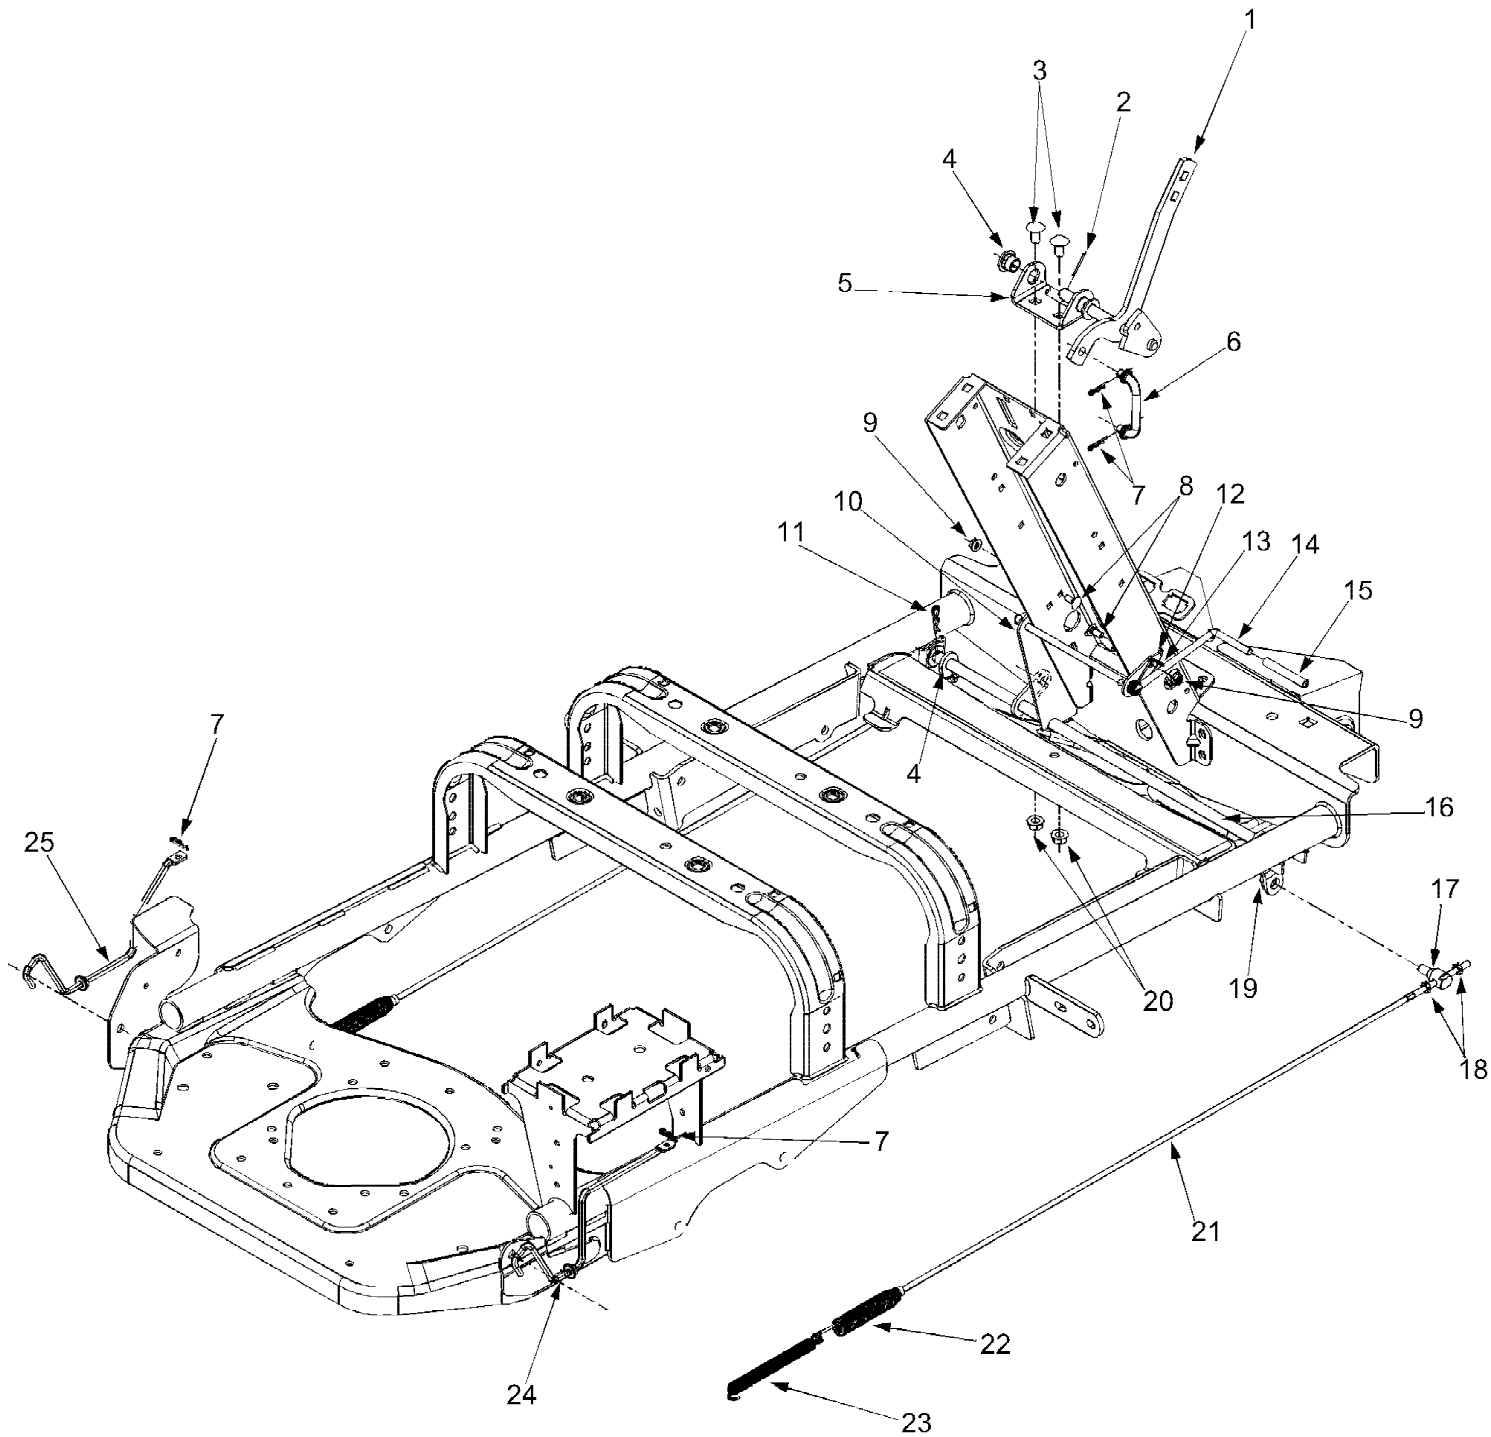 


Ref #	Part Number	Qty	Description
1	603-0649		Parking Brake Shift Ass'y
2	714-3004		Cotter Pin
3	710-3178		Carriage Bolt 3/8-16 x .75
4	741-0324		Hex Flange Bearing .506 ID x .590
5	703-3400		Brake Mounting Bracket
6	747-3404		Connecting Brake Rod
7	714-0104		Cotter Pin
8	710-0134		Carriage Screw 1/4-20 x .62
9	712-3027		Hex Flange Lock Nut 1/4-20
10	703-3405		Support Plate
11	714-0101		Cotter Pin
12	703-2857		Retaining Rod Bracket
13	732-0827		Torsion Spring 5/16
14	747-3397		Parking Brake Retaining Rod
15	735-0664		Parking Brake Pad
16	603-0683		Brake Rod Ass'y
17	711-3357		Ferrule
18	712-0314		Jam Nut 1/4-28
19	736-0258		Flat Washer .385 ID x 1.0 OD
20	712-0431		Flange Lock Nut 3/8-16
21	747-3266A		Bracket Rod
22	732-0463		Extension Spring
23	732-0800		Extension Spring
24	747-3284		Release Pump Rod RH
25	747-3363		Release Pump Rod LH

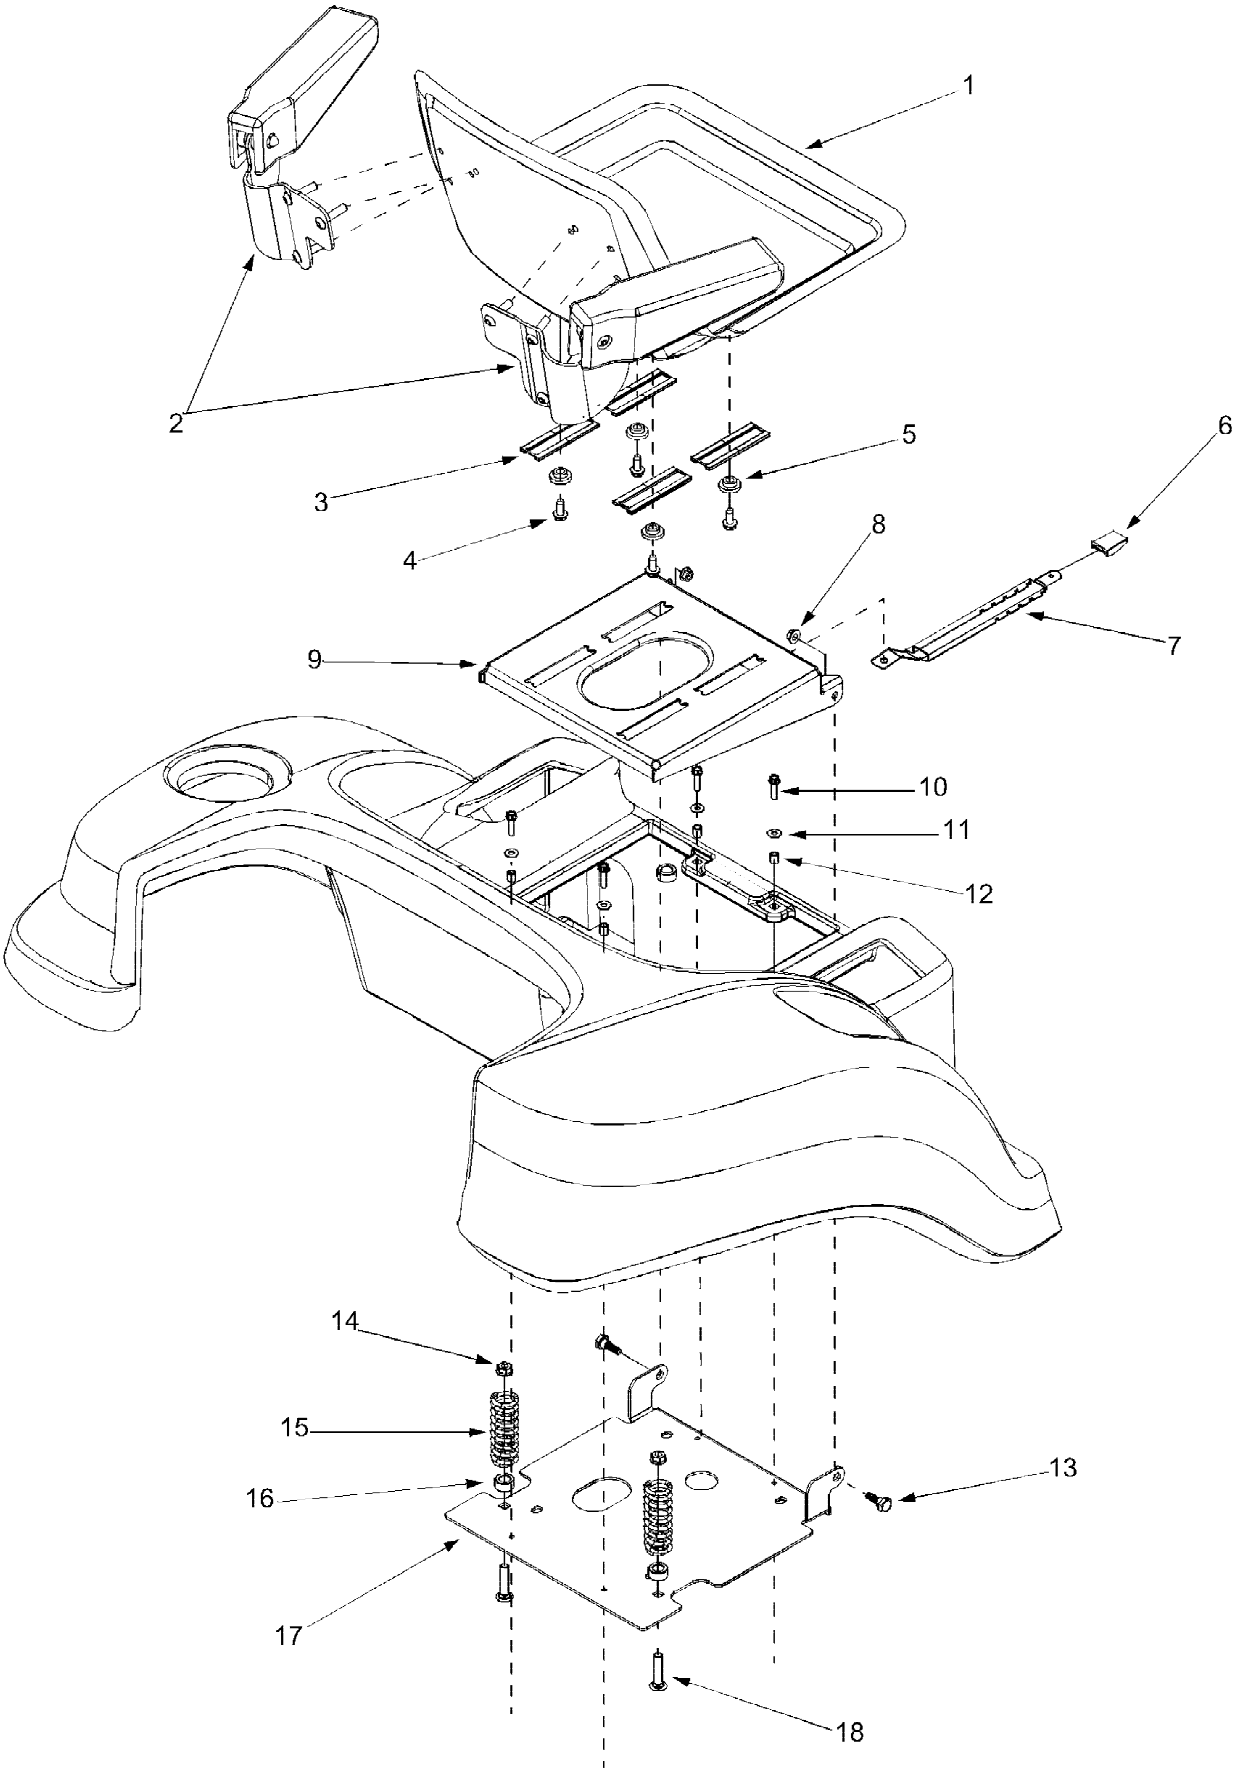 

Ref #	Part Number	Qty	Description
1	757-0375B		Seat Ass'y
2	757-3009		Seat Arm Ass'y (If Equipped)
3	731-3154		Seat Slide
4	710-1260A		Hex Washer Screw 5/16-18 x .750
5	738-0372		Shoulder Spacer
6	720-0190		Height Adjuster Knob
7	732-3098		Spring Index
8	712-3004A		Flange Lock Nut 5/16-18
9	603-0294		Seat Base Bracket Ass'y
10	710-0788		Hex Washer Screw 1/4-20 x 1.0
11	736-0463		Flat Washer .25 x .630
12	750-3276		Spacer
13	738-0296		Shoulder Screw
14	712-3005		Flange Lock Nut 3/8-16
15	732-3080		Compression Spring
16	750-0664		Spacer
17	603-0730		Seat Plate Ass'y
18	710-0560		Hex Carriage Screw 3/8-16 x 1.75

 629-3070

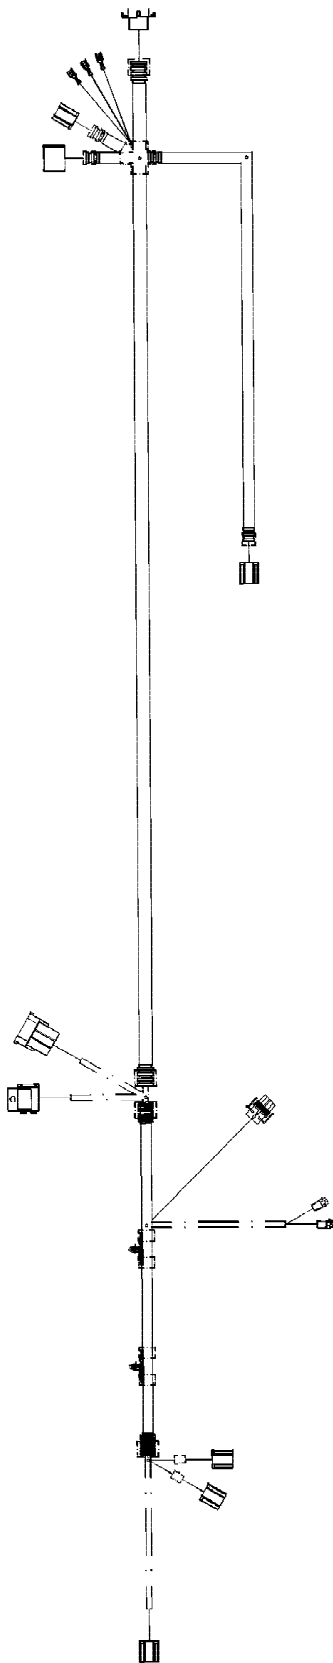

Ref #	Part Number	Qty	Description
629-3070	629-3070		HARNESS-MAIN WIRE