


# Illustrated Parts List

## Hydrostatic Lawn Tractor

Models 617

618

619

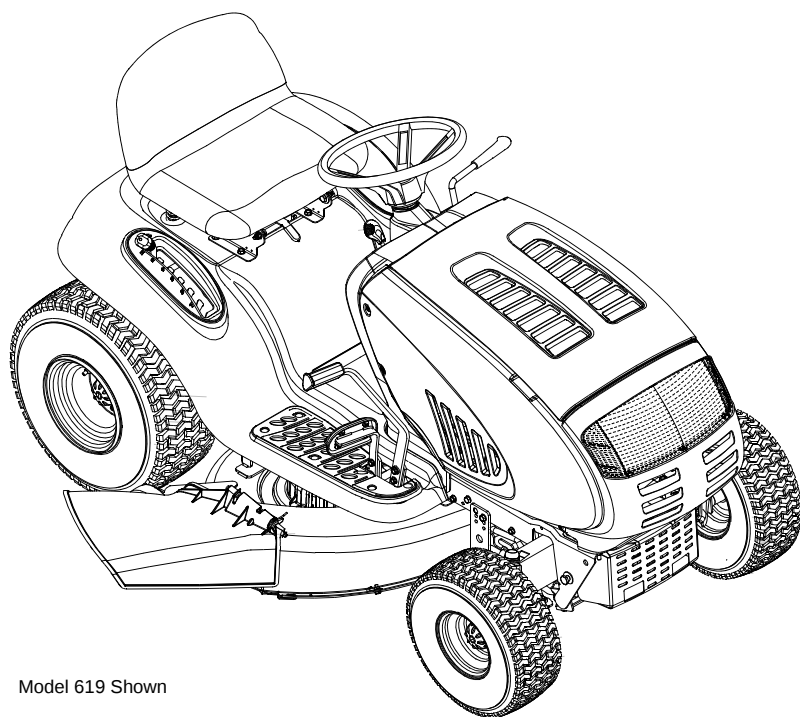

Model 619 Shown

### **IMPORTANT: READ SAFETY RULES AND INSTRUCTIONS CAREFULLY**


**Warning:** This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator. In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester for the muffler is available through your nearest engine authorized service dealer or contact the service department, P.O. Box 361131 Cleveland, Ohio 44136-0019.

**MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019**

FORM NO. 770-10317C  
(12/2002)

PRINTED IN U.S.A.

## SECTION 12: MODELS 617, 618 & 619 PARTS LIST

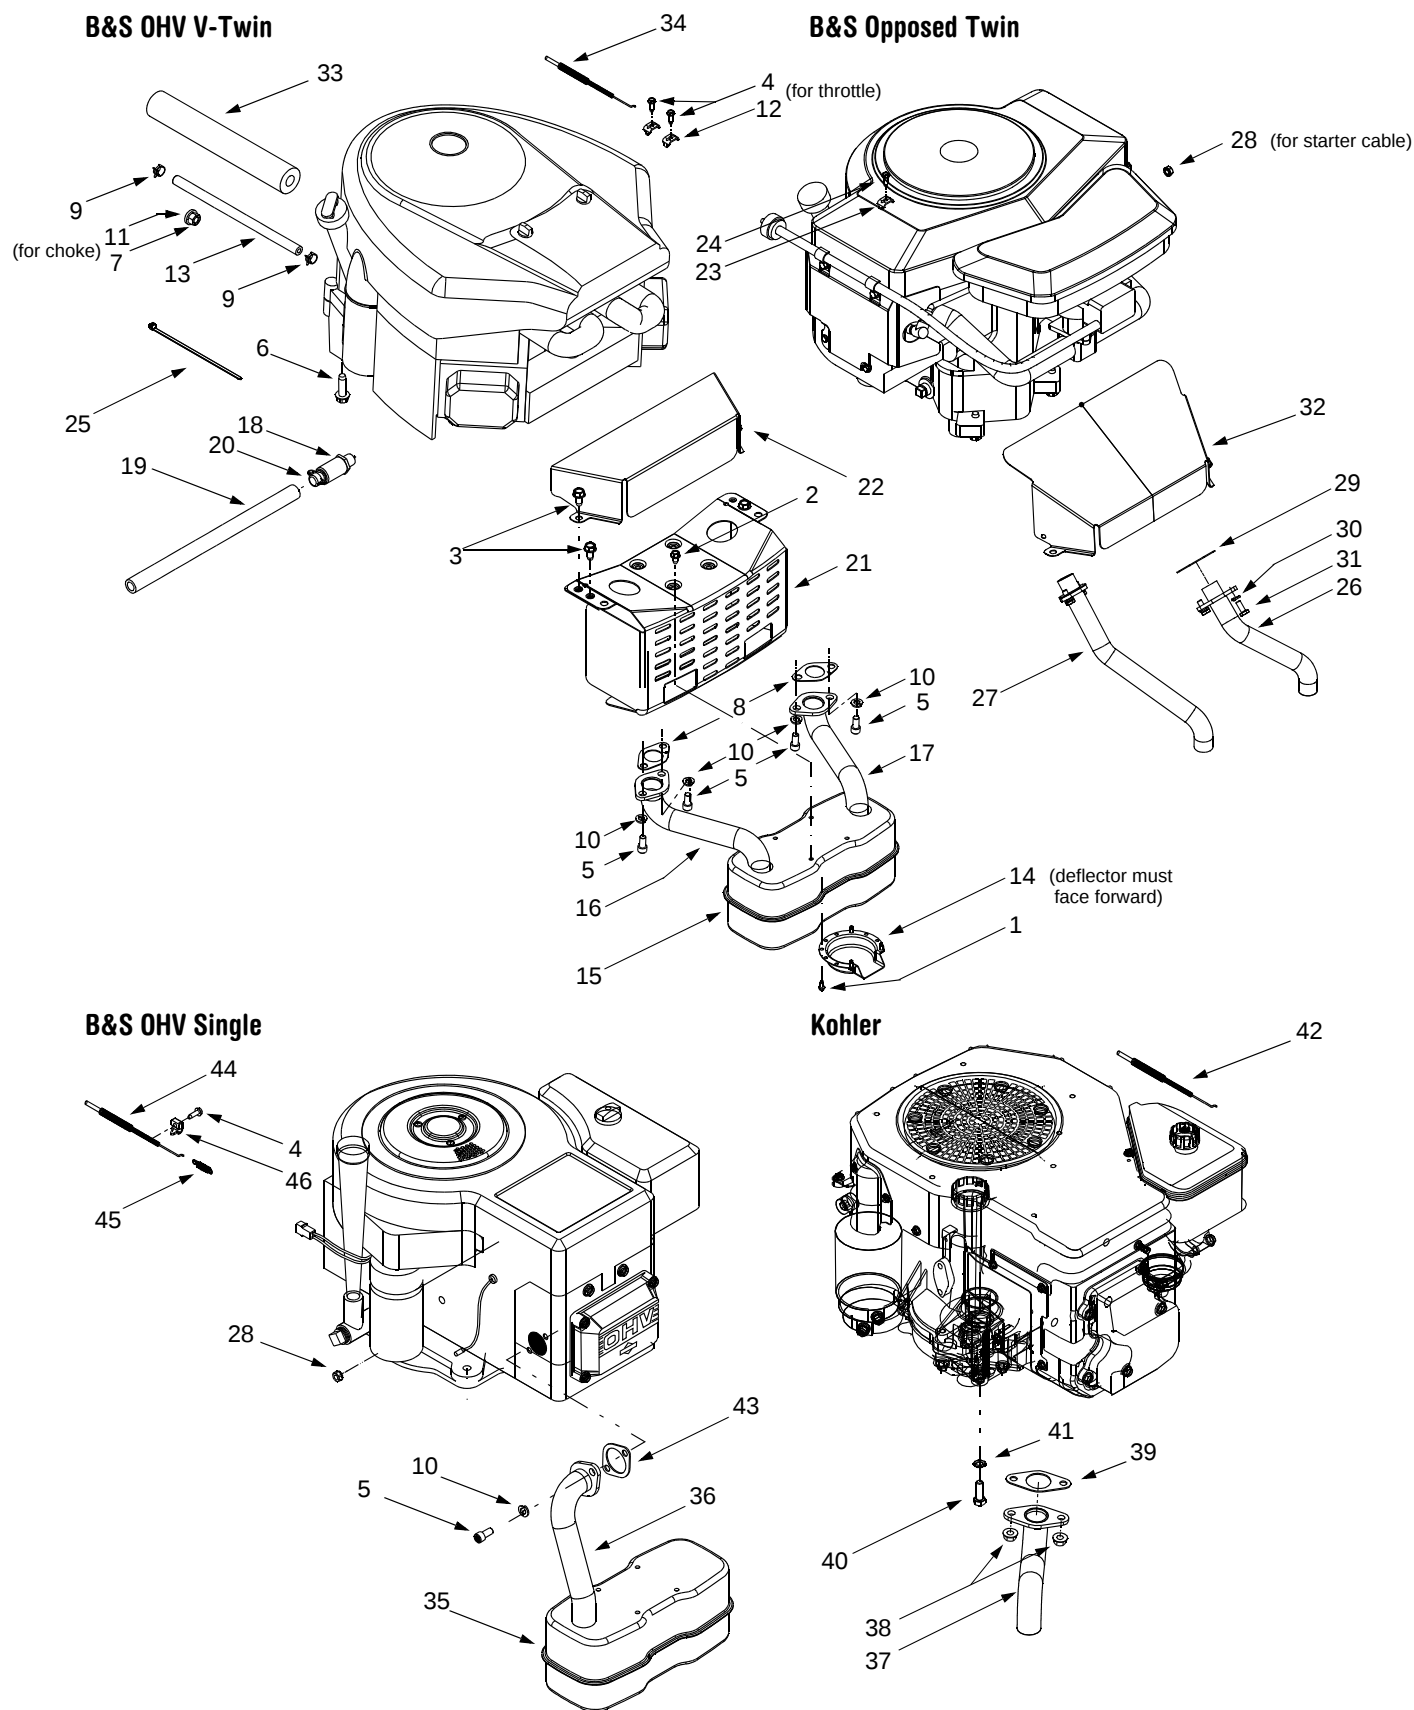


## Models 617, 618 & 619

| REF.<br>NO. | PART<br>NO. | DESCRIPTION                                          |
|-------------|-------------|------------------------------------------------------|
| 1           | 710-0227    | Self-tapping Screw, #8-18 x.50                       |
| 2           | 710-0599    | Self-tapping Screw, 1/4-20 x.50                      |
| 3           | 710-0726    | Self-tapping Screw, 5/16-18 x.625                    |
| 4           | 710-1237    | Screw, #10-32 x.625 (B&S OHV V-Twin)                 |
| 5           | 710-1314A   | Socket Cap Screw, 5/16-18 x.625                      |
| 6           | 710-1315    | Self-tapping Screw, 3/8-16 x 1.25                    |
| 7           | 712-3017    | Hex Nut, 3/8-16                                      |
| 8           | 721-0460    | Exhaust Gasket (B&S OHV V-Twin)                      |
| 9           | 726-0205    | Hose Clamp                                           |
| 10          | 736-0119    | Lock Washer, 5/16                                    |
| 11          | 736-0300    | Lock Washer, .406 x.875 x.059                        |
| 12          | 751B221535  | Casing Clamp (B&S OHV V-Twin)                        |
| 13          | 751-0535    | Fuel Line Hose                                       |
| 14          | 751-0564    | Muffler Deflector                                    |
| 15          | 751-0616    | Muffler, Twin Inlet (B&S Opposed Twin & OHV V-Twin)  |
| 16          | 751-0650    | RH Exhaust Pipe (B&S OHV V-Twin)                     |
| 17          | 751-0651    | LH Exhaust Pipe (B&S OHV V-Twin)                     |
| 18          | 751-3140    | Oil Drain Valve                                      |
| 19          | 751-3141    | Oil Drain Hose                                       |
| 20          | 751-3142    | Oil Drain Cap                                        |
| 21          | 783-0615B   | Muffler Heat Shield                                  |
| 22          | 783-0625C   | Engine Heat Shield (B&S OHV V-Twin)                  |
| 23          | 726-0272    | Clamp, 9/16 (B&S Opposed Twin)                       |
| 24          | 712-0779A   | Screw, #10-16 x.5 (B&S Opposed Twin)                 |
| 25          | 725-0157    | Cable Tie                                            |
| 26          | 751-0623    | LH Exhaust Pipe (B&S Opposed Twin)                   |
| 27          | 751-0624    | RH Exhaust Pipe (B&S Opposed Twin)                   |
| 28          | 712-0271    | Hex Sems Nut, 1/4-20 (B&S Opposed Twin & OHV Single) |
| 29          | 721-0346    | Exhaust Gasket (B&S Opposed Twin)                    |
| 30          | 736-0329    | Lock Washer, 1/4 (B&S Opposed Twin)                  |
| 31          | 710-3015    | Hex Screw, 1/4-20 x.750 (B&S Opposed Twin)           |
| 32          | 783-0357B   | Heat Shield (B&S Opposed Twin)                       |
| 33          | 722-0263    | Foam, .625 x 1.5 x 10 (fits over fuel line)          |
| 34          | 746-1086    | Throttle Cable (B&S Opposed Twin & OHV V-Twin)       |
| 35          | 751-0617    | Muffler, Single Inlet (B&S OHV Single & Kohler)      |
| 36          | 751-0619    | Exhaust Pipe (B&S OHV Single)                        |
| 37          | 751-0621    | Exhaust Pipe (Kohler)                                |
| 38          | 712-3086    | Flange Nut, 8mm (Kohler)                             |
| 39          | 721-0375    | Exhaust Gasket (Kohler)                              |
| 40          | 710-3206A   | Hex Cap Screw, 8mm (Kohler)                          |
| 41          | 736-0607    | External Lock Washer (Kohler)                        |
| 42          | 746-1087    | Throttle Cable (Kohler)                              |
| 43          | 721-0208    | Exhaust Gasket (B&S OHV Single)                      |
| 44          | 746-1084    | Throttle Cable (B&S OHV Single)                      |
| 45          | 732-0966    | Extension Spring, .275 x 1.25 (B&S OHV Single)       |
| 46          | 751B213146  | Casing Clamp (B&S OHV Single)                        |

**NOTE:** Engine accessory parts are applicable to all 617, 618 & 619 model tractors except where otherwise noted.

# Models 617 & 618

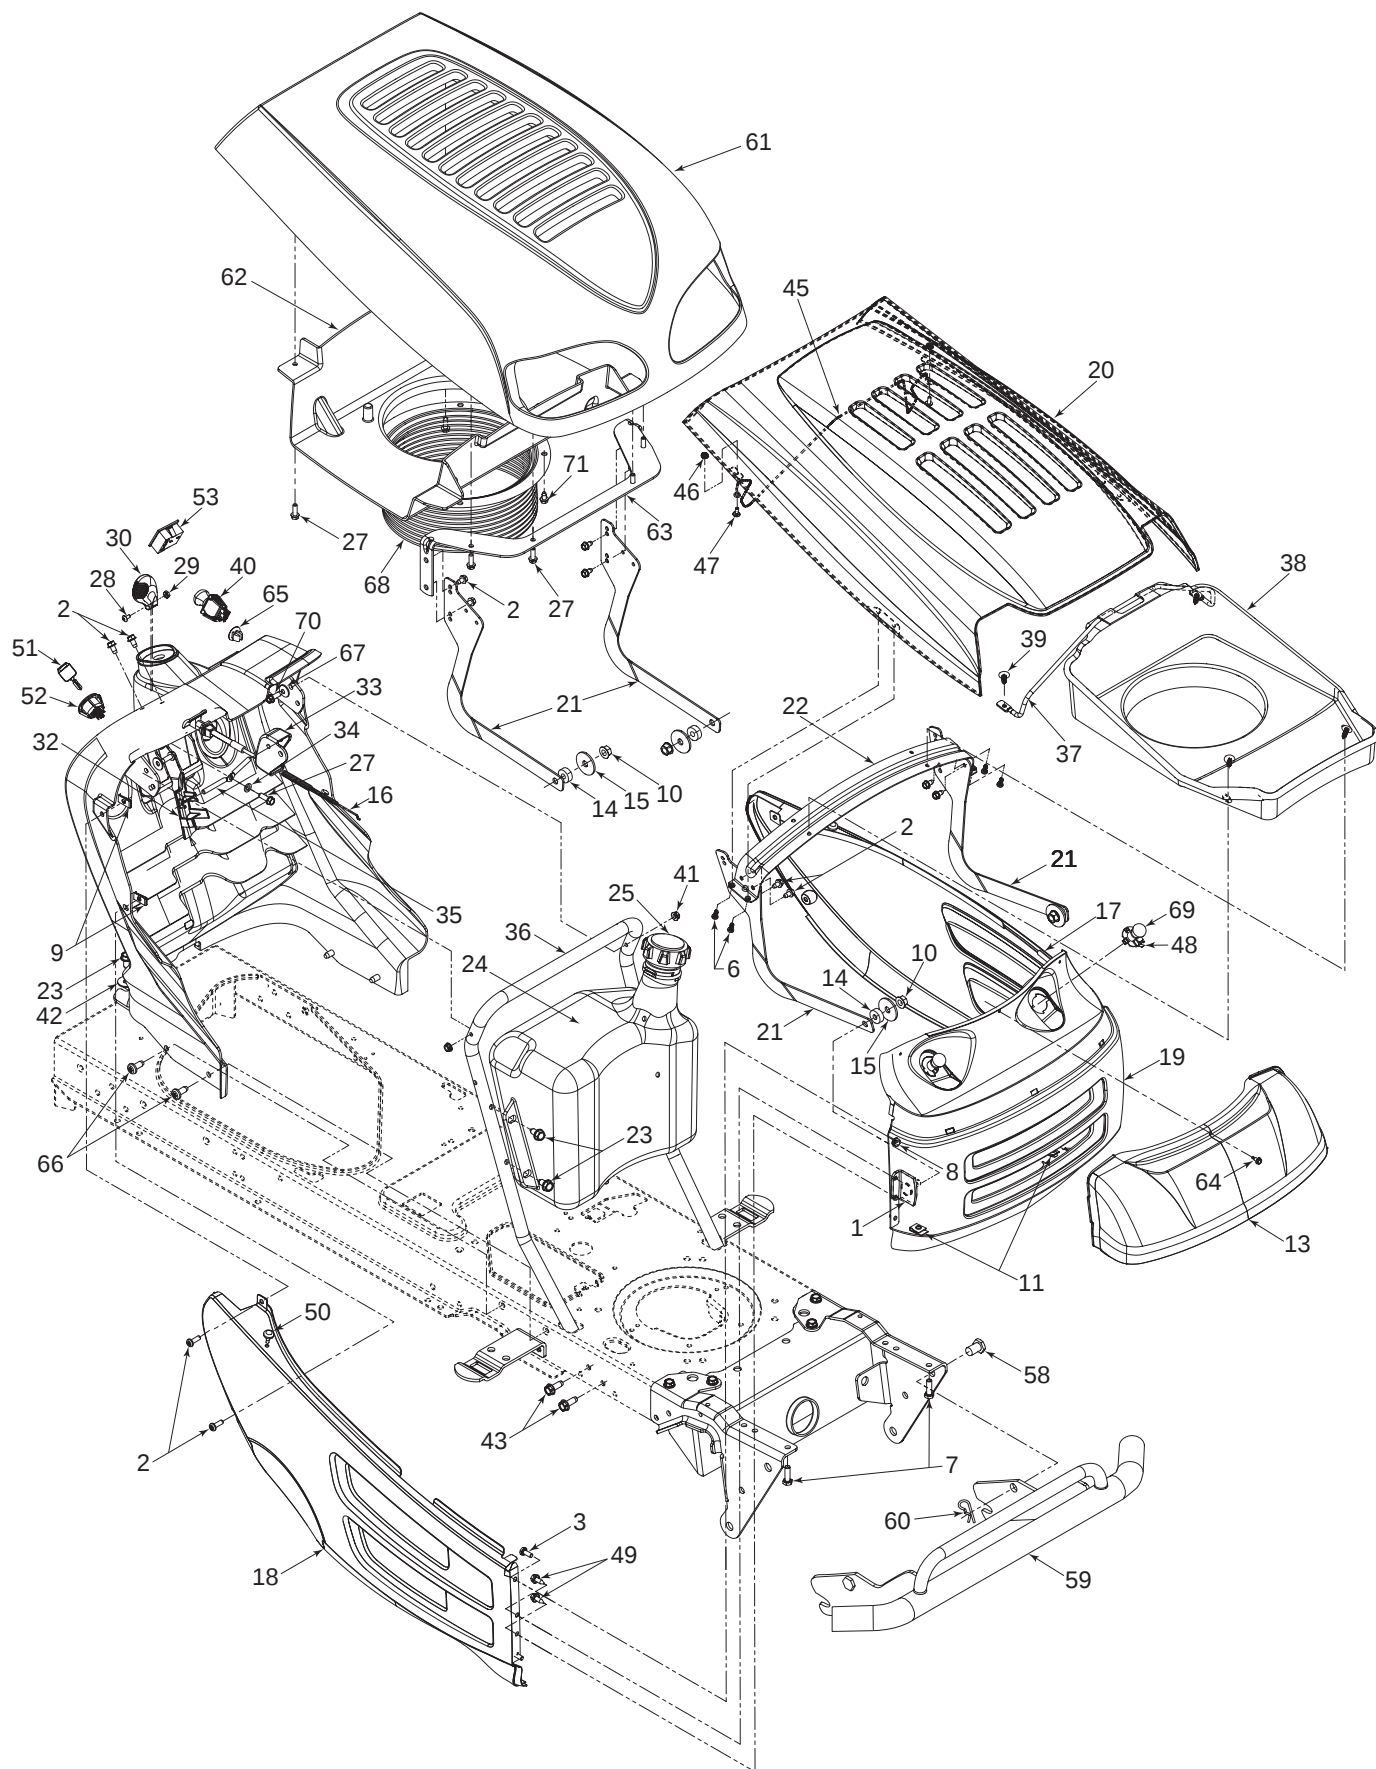


## Models 617 & 618

| REF. NO. | PART NO.  | DESCRIPTION                              | REF. NO. | PART NO.   | DESCRIPTION                             |
|----------|-----------|------------------------------------------|----------|------------|-----------------------------------------|
| 1        | 683-0195  | Bracket Assembly (8-style)               |          | N/A        | Hood Plenum                             |
| 2        | 710-0599  | Self-tapping Screw, 1/4-20 x.5           |          |            | (Models with B&S OHV Single or Kohler)  |
| 3        | 710-0751  | Hex Cap Screw, 1/4-20 x.62               | 39       | 726-3046   | Ratchet Clip                            |
| 4        | 710-0924  | Phillips Pan Screw, 1/4-20 x.75          | 40       | 725-1752†  | Electric PTO Switch                     |
| 6        | 710-0351  | Screw, #10-16 x.5                        | 41       | 712-3027   | Hex Flange Lock Nut, 1/4-20             |
| 7        | 710-0376  | Hex Cap Screw, 5/16-18 x 1.0             | 42       | 736-3078   | Flat Washer,.349 x 1.0 x.063            |
| 8        | 712-0271  | Hex Sems Nut, 1/4-20                     | 43       | 710-0650   | Screw, 5/16-18 x.875 (Grade 5)          |
| 9        | 712-0292  | U-type Speed Nut, 1/4-20                 | 45       | 747-1215A  | Hood Latch                              |
| 10       | 712-0431  | Flange Lock Nut, 3/8-16                  | 46       | 712-0272   | Hex Sems Nut, #10-32                    |
| 11       | 726-0211  | U-nut, 5/16-18                           | 47       | 710-0473   | Machine Screw, #10-24                   |
| 13       | 731-1854A | Headlight Lens (8-style)                 | 48       | 725-1649   | Headlight Socket                        |
| 14       | 735-0126  | Rubber Washer,.87 x.33                   | 49       | 710-0896   | Hex Index Washer Screw, 1/4-14 x.0625   |
| 15       | 736-3039  | Flat Washer,.406 x 1.5 x 11GA            | 50       | 735-0199A  | Rubber Bumper                           |
| 16       | 746-1085  | Choke Knob/Cable                         | 51       | 725-1745   | Ignition Key w/ plastic cover           |
|          |           | (Models with any B&S Twin)               |          | 725-1744   | Ignition Key w/o plastic cover          |
|          | 746-1088  | Choke Knob/Cable                         | 52       | 725-1741   | Ignition Switch                         |
|          |           | (Models with Kohler)                     | 53       | 725-1976   | Systems Indicator Monitor w/ Hour Meter |
| 17       | 783-0475B | LH Side Panel (8-style)                  |          | 725-1758   | Systems Indicator Monitor w/ Ammeter    |
| 18       | 783-0476C | RH Side Panel (8-style)                  | 58       | 711-0332†  | Clevis Pin,.50 x.78                     |
| 19       | 783-0477A | Grill (8-style)                          | 59       | 768-0010A† | Bumper Assembly                         |
| 20       | 783-0478A | Hood (8-style)                           | 60       | 714-0145†  | Internal Cotter Pin                     |
| 21       | 783-1495  | Hood Hinge Bracket                       | 61       | 731-2300   | Hood, Red (7-Style)                     |
| 22       | 783-0553A | Hood Support Bracket                     |          | 731-2301   | Hood, Green (7-Style)                   |
| 23       | 710-0726  | Self-tapping Screw, 5/16-18 x.625        |          | 731-2302   | Hood, Black (7-Style)                   |
| 24       | 751-0658D | Fuel Tank, Three Gallon                  |          | 731-2303   | Hood, Charcoal Grey (7-Style)           |
|          | 751-0659C | Fuel Tank, Two Gallon (Shown)            | 62       | 731-2306   | Hood Plenum                             |
| 25       | 751-0603  | Fuel Cap (Fits Either Tank)              | 63       | 783-1034   | Hood Bracket (7-Style)                  |
| 26       | 710-0809  | Self-tapping Screw, 1/4-20 x 1.25        | 64       | 710-0456   | Hex Screw, #10 x.50                     |
| 27       | 710-0895  | Self-tapping Screw, 1/4-15 x.75          | —        | 629-0469B  | Headlight Wire Harness                  |
| 28       | 710-3217  | Truss Phillips Screw, #8-32 x.375        | —        | 629-1067   | Tractor Wire Harness                    |
| 29       | 712-0142  | Hex Nut, #8-32                           |          |            | (Models with Hour Meter & Electric PTO) |
| 30       | 731-1857  | Throttle Control Knob                    | —        | 629-1068   | Tractor Wire Harness (Kohler)           |
| 31       | 731-2225C | Dash Panel (Models w/ Electric PTO)      |          |            | (Models with Hour Meter & Electric PTO) |
|          | 731-2122C | Dash Panel (Models w/ Manual PTO)        | —        | 629-1071   | Tractor Wire Harness                    |
| 32       | 731-04215 | Cruise Control Lever                     |          |            | (Models with Hour Meter & Manual PTO)   |
|          | 731-2228  | Cruise Cover (Models w/o Cruise Control) | —        | 629-04051  | Tractor Wire Harness                    |
| 33       | 731-04217 | Parking Brake Lever                      |          |            | (Models with Ammeter & Manual PTO)      |
| 34       | 736-0142  | Flat Washer, 9/32 x 1/2 x 1/16           | 65       | 731-1999   | Choke Plug                              |
| 35       | 747-1196  | Brake/Cruise Pivot Rod                   | 66       | 710-1611B  | Screw, 5/16-18 x.75                     |
| 36       | 749-1087C | Dash Support Tube                        | 67       | 736-0270   | Bell Washer,.265 x.75 x.062             |
| 37       | 747-1184  | Hood Plenum Support Rod                  | 68       | 731-2232   | Intake Bellow (Intek Single & kohler)   |
| 38       | 731-2247A | Hood Plenum                              | 69       | 725-0963   | Lamp                                    |
|          |           | (Models with B&S OHV V-Twin)             | 70       | 710-0642   | Self-tapping Screw, 1/4-20 x.75         |
|          | 731-2248A | Hood Plenum                              | 71       | 710-0599   | Self-tapping Screw, 1/4-20 x.50         |
|          |           | (Models with B&S Opposed Twin)           |          |            |                                         |

†If Equipped

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Model 619

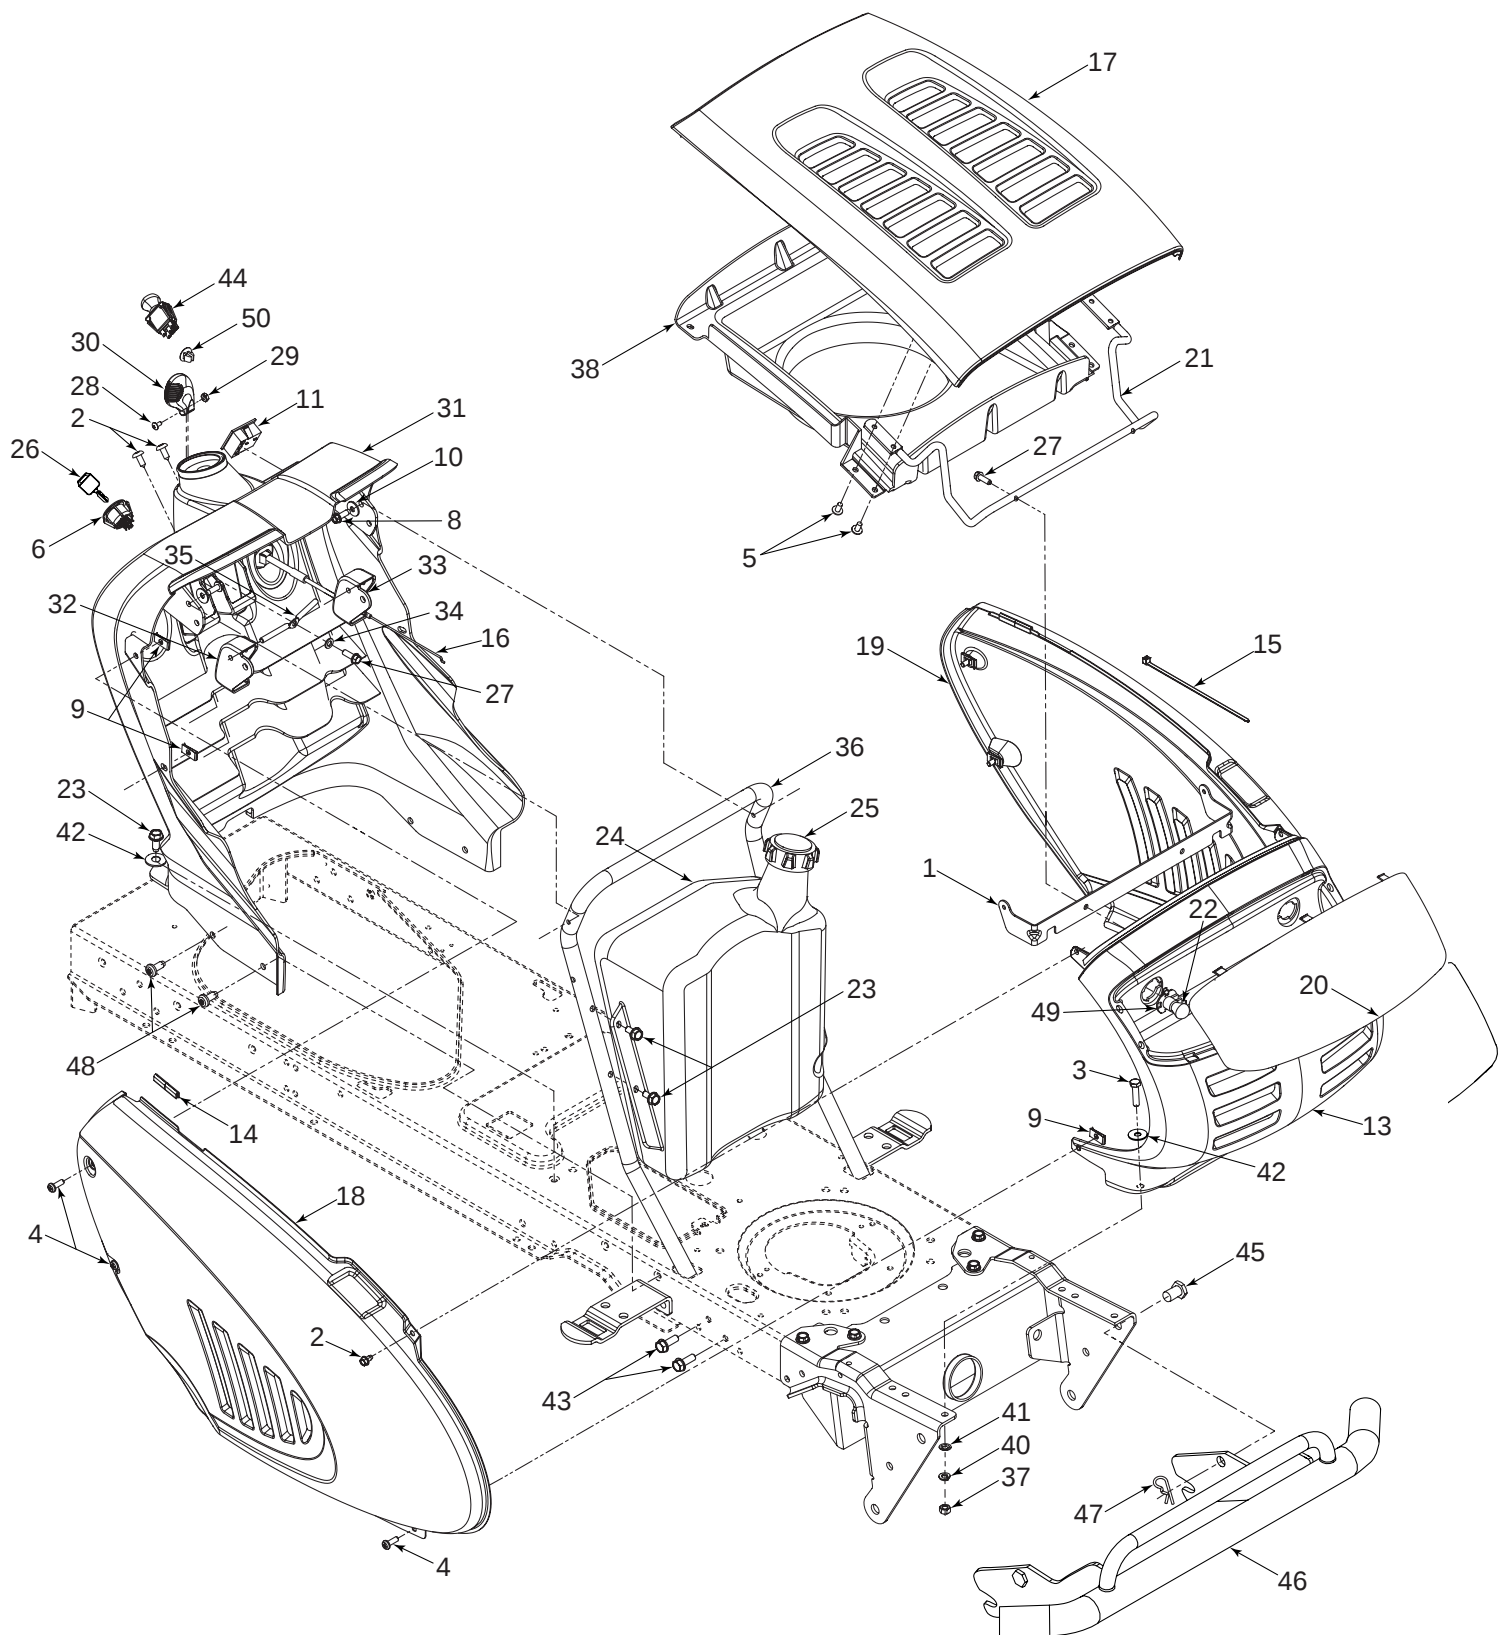

## Model 619

| REF. NO. | PART NO.  | DESCRIPTION                             | REF. NO. | PART NO.   | DESCRIPTION                             |
|----------|-----------|-----------------------------------------|----------|------------|-----------------------------------------|
| 1        | 783-1346  | Grill Support Bracket (9-style)         | 32       | 731-04215  | Cruise Control Lever                    |
| 2        | 710-0599  | Self-tapping Screw, 1/4-20 x.5          | 33       | 731-04217  | Parking Brake Lever                     |
| 3        | 710-0528  | Hex Cap Screw, 5/16-18 x 1.25           | 34       | 736-0142   | Flat Washer, 9/32 x 1/2 x 1/16          |
| 4        | 710-0924  | Phillips Pan Screw, 1/4-20 x.75         | 35       | 747-1196   | Brake/Cruise Pivot Rod                  |
| 5        | 710-1017  | Truss Phillips Screw, 1/4-20 x.625      | 36       | 749-1087C  | Dash Support Tube                       |
| 6        | 725-1741  | Ignition Switch                         | 37       | 712-3010   | Hex Nut, 5/16-18                        |
| 8        | 710-0642  | Self-tapping Screw, 1/4-20 x.75         | 38       | 731-2269A  | Hood Plenum (Models with Kohler)        |
| 9        | 712-0292  | U-type Speed Nut, 1/4-20                |          | 731-2270A  | Hood Plenum                             |
| 10       | 736-0270  | Bell Washer,.265 x.75 x.062             |          |            | (Models with B&S OHV V-Twin)            |
| 11       | 725-04036 | Systems Indicator Monitor w/ Hour Meter |          | 731-2271   | Hood Plenum                             |
|          | 725-1758  | Systems Indicator Monitor w/ Ammeter    |          |            | (Models with B&S Opposed Twin)          |
| 13       | 731-2119A | Grille (9-style)                        |          | N/A        | Hood Plenum                             |
| 14       | 731-0511  | Trim Strip, 4                           |          |            | (Models with B&S OHV Single)            |
| 15       | 725-0157  | Cable Tie, 3/16 x.05 x 7.4              | 39       | 726-3046   | Ratchet Clip                            |
| 16       | 746-1085  | Choke Knob/Cable                        | 40       | 736-0119   | Lock Washer, 5/16                       |
|          |           | (Models with any B&S Twin)              | 41       | 726-0201   | Speed Nut,.3125                         |
|          | 746-1088  | Choke Knob/Cable (Models with Kohler)   | 42       | 736-3078   | Flat Washer,.349 x 1.0 x.063            |
| 17       | 783-0783  | Hood (9-style)                          | 43       | 710-0650   | Screw, 5/16-18 x.88 (Grade 5)           |
| 18       | 783-0784  | RH Side Panel (9-style)                 | 44       | 725-1752†  | Electric PTO Switch                     |
| 19       | 783-0785  | LH Side Panel (9-style)                 | 45       | 711-0332†  | Clevis Pin,.50 x.78                     |
| 20       | 731-2118A | Headlight Lens (9-style)                | 46       | 768-0010A† | Bumper Assembly                         |
| 21       | 747-2138  | Hood Hinge Rod                          | 47       | 714-0145†  | Internal Cotter Pin                     |
| 22       | 725-0963  | Lamp                                    | 48       | 710-1611B  | Screw, 5/16-18 x.75                     |
| 23       | 710-0726  | Self-tapping Screw, 5/16-18 x.625       | 49       | 725-1649   | Socket                                  |
| 24       | 751-0658D | Fuel Tank, Three Gallon (Shown)         | 50       | 731-1999   | Choke Plug                              |
|          | 751-0659C | Fuel Tank, Two Gallon                   | —        | 629-0469B  | Headlight Wire Harness                  |
| 25       | 751-0603  | Fuel Cap                                | —        | 629-1067   | Tractor Wire Harness                    |
| 26       | 725-1745  | Ignition Key w/ plastic cover           |          |            | (Models with Hour Meter & Electric PTO) |
|          | 725-1744  | Ignition Key w/o plastic cover          | —        | 629-1068   | Tractor Wire Harness (Kohler)           |
| 27       | 710-0895  | Self-tapping Screw, 1/4-15 x.75         |          |            | (Models with Hour Meter & Electric PTO) |
| 28       | 710-3217  | Truss Phillips Screw, #8-32 x.375       | —        | 629-1071   | Tractor Wire Harness                    |
| 29       | 712-0142  | Hex Nut, #8-32                          |          |            | (Models with Hour Meter & Manual PTO)   |
| 30       | 731-1857  | Throttle Control Knob                   | —        | 629-04051  | Tractor Wire Harness                    |
| 31       | 731-2225C | Dash Panel (Models w/ Electric PTO)     |          |            | (Models with Ammeter & Manual PTO)      |
|          | 731-2122C | Dash Panel (Models w/ Manual PTO)       |          |            |                                         |


†If Equipped

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Models 617, 618 & 619

Models w/ Quick-adjust Seat

Models w/ Manually  
Adjusting Seat

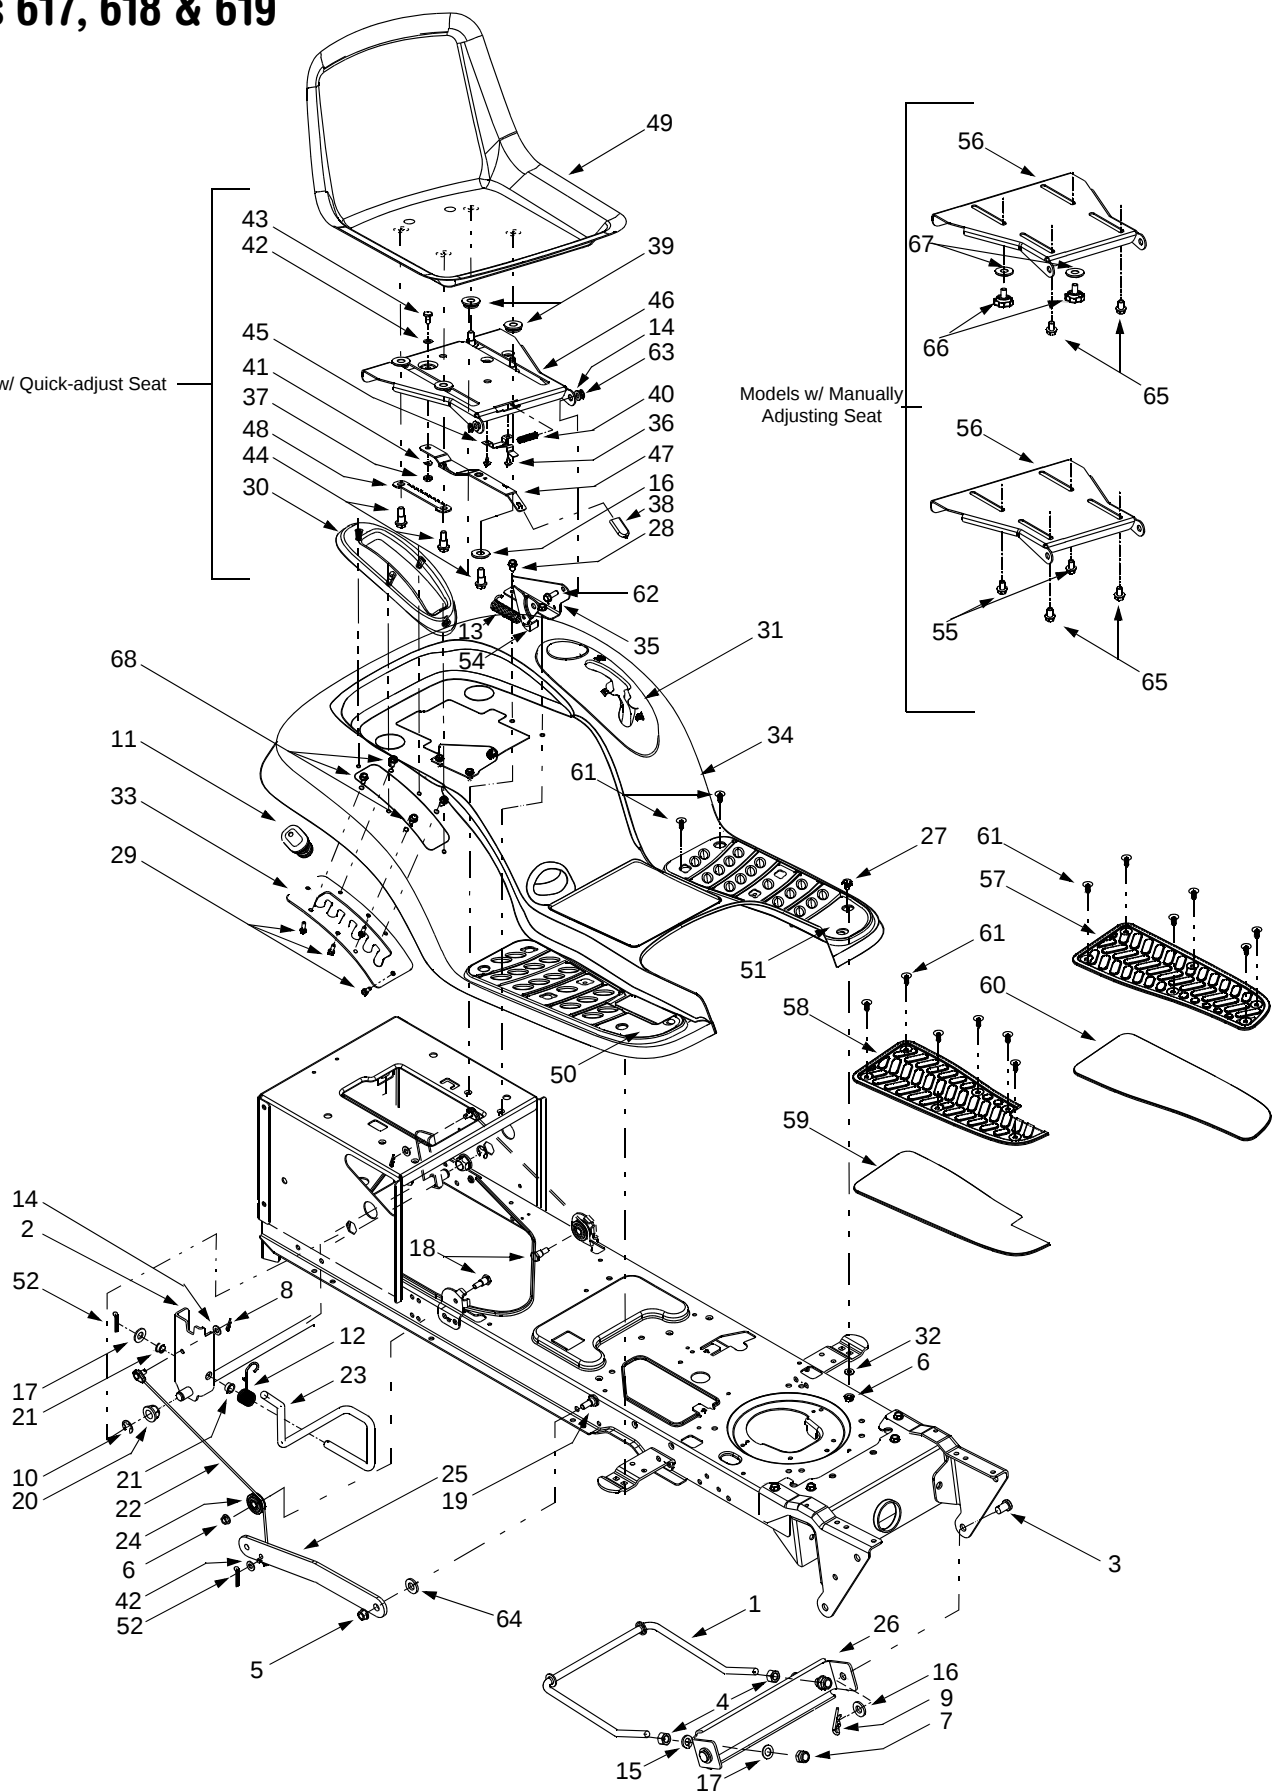

## Models 617, 618 & 619


| REF. NO. | PART NO.  | DESCRIPTION                       | REF. NO. | PART NO.  | DESCRIPTION                           |
|----------|-----------|-----------------------------------|----------|-----------|---------------------------------------|
| 1        | 747-1130B | Deck Stabilizer Rod               | 35       | 783-1489  | Seat Mounting Bracket                 |
| 2        | 683-0197B | Lift Shaft Assembly               | 36       | 710-1268  | Screw, #10-16 x.375                   |
| 3        | 711-0332  | Clevis Pin,.5 x.78                | 37       | 712-3027  | Hex Flange Lock Nut, 1/4-20           |
| 4        | 712-0206  | Hex Nut, 1/2-13                   | 38       | 720-0309A | Seat Adjuster Grip                    |
| 5        | 712-0431  | Flange Lock Nut, 3/8-16           | 39       | 731-04074 | Spacer                                |
| 6        | 712-3004A | Flange Lock Nut, 5/16-18          | 40       | 732-0499  | Compression Spring,.41 x 1.5          |
| 7        | 712-3083  | Hex Nut, 1/2-13                   | 41       | 736-0175  | Spring Washer,.265 x.562 x.025        |
| 8        | 714-0104  | Internal Cotter Pin               | 42       | 736-0204  | Flat Washer,.344 x.62 x.03            |
| 9        | 714-0145  | Internal Cotter Pin               | 43       | 738-0137A | Shoulder Screw,.340 x.285,1/4-20      |
| 10       | 716-0106  | E-ring                            | 44       | 738-0966  | Shoulder Screw,.50 x.50, 3/8-16       |
| 11       | 720-0311  | Handle Grip                       | 45       | 783-0611  | Seat Stop                             |
| 12       | 732-0874  | Torsion Spring                    | 46       | 783-0738  | Seat Pivot Bracket                    |
| 13       | 732-1184  | Extension Spring,.84 x 4.6        | 47       | 783-0739  | Seat Adjustment Lever                 |
| 14       | 736-0275  | Flat Washer, 5/16                 | 48       | 783-0753  | Seat Adjustment Selector              |
| 15       | 736-0921  | Lock Washer, 1/2                  | 49       | 757-04003 | High Back Seat, Black                 |
| 16       | 736-3019  | Flat Washer,.31 x 1.062 x.134     |          | 757-04002 | High Back Seat w/ Drain Holes, Black  |
| 17       | 736-3084  | Flat Washer,.51 x 1.12 x.06       |          | 757-04001 | Medium Back Seat, Black               |
| 18       | 738-0138A | Hex Cap Screw, 5/16-18 x.62       | 50       | 735-0656  | RH Foot Pad, Rubber (4-Style Fender)  |
| 19       | 738-0143  | Shoulder Screw, 3/8-16            | 51       | 735-0657  | LH Foot Pad, Rubber (4-Style Fender)  |
| 20       | 741-0225  | Hex Flange Bearing                | 52       | 714-0111  | Cotter Pin                            |
| 21       | 741-0715  | Snap Flange Bearing               | 54       | 783-0209A | Seat Lift Bracket                     |
| 22       | 746-0968  | Lift Cable, 16.16 (42" Decks)     | 55       | 710-0870  | Hex Head Washer Screw, 3/8-16 x.625   |
|          | 746-1144  | Lift Cable, 15.62 (46" Decks)     | 56       | 783-04081 | Seat Pivot Bracket, Manually Adjusted |
| 23       | 747-1111A | Lift Handle                       | 57       | 735-0672  | RH Foot Pad, Rubber (7-Style Fender)  |
| 24       | 756-1154  | Roller Pulley                     | 58       | 735-0673  | LH Foot Pad, Rubber (7-Style Fender)  |
| 25       | 783-0678A | Arm Lift                          | 59       | 723-0484  | RH Foot Pad, Grit (7-Style Fender)    |
| 26       | 783-0720A | Deck Stabilizer Bracket           | 60       | 735-0483  | LH Foot Pad, Grit (7-Style Fender)    |
| 27       | 710-0260A | Carriage Bolt, 5/16 x.62          | 61       | 726-3046  | Ratchet Clip                          |
| 28       | 710-0604A | Self-tapping Screw, 5/16-18 x.625 | 62       | 738-0296  | Shoulder Screw,.437 x.286             |
| 29       | 710-0895  | Self-tapping Screw, 1/4-15 x.75   | 63       | 726-0201  | Speed Nut,.3125                       |
| 30       | 731-1990  | Lift Lever Cover                  | 64       | 736-0160  | Flat Washer,.531 x.93                 |
| 31       | 731-2104B | Shift Lever Cover w/ Cup Holder   | 65       | 738-04012 | Shoulder Spacer                       |
| 32       | 736-3078  | Flat Washer,.349 x 1.0 x.063      | 66       | 720-04009 | Knob, 3/8-16                          |
| 33       | 783-1010  | Deck Lift Plate                   | 67       | 736-0331  | Cupped Washer,.39 x 1.12              |
| 34       | 783-1279  | Fender, 4-Style† (Shown)          | 68       | 710-1611B | Self-tapping Screw, 5/16-18 x.75      |
|          | 783-0840A | Fender, 7-Style‡                  |          |           |                                       |

†Models equipped with a 4-style fender can accept the shift lever cover w/ cup holder.

‡Models equipped with a 7-style fender cannot accept the shift lever cover w/ cup holder.

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 617, 618 & 619

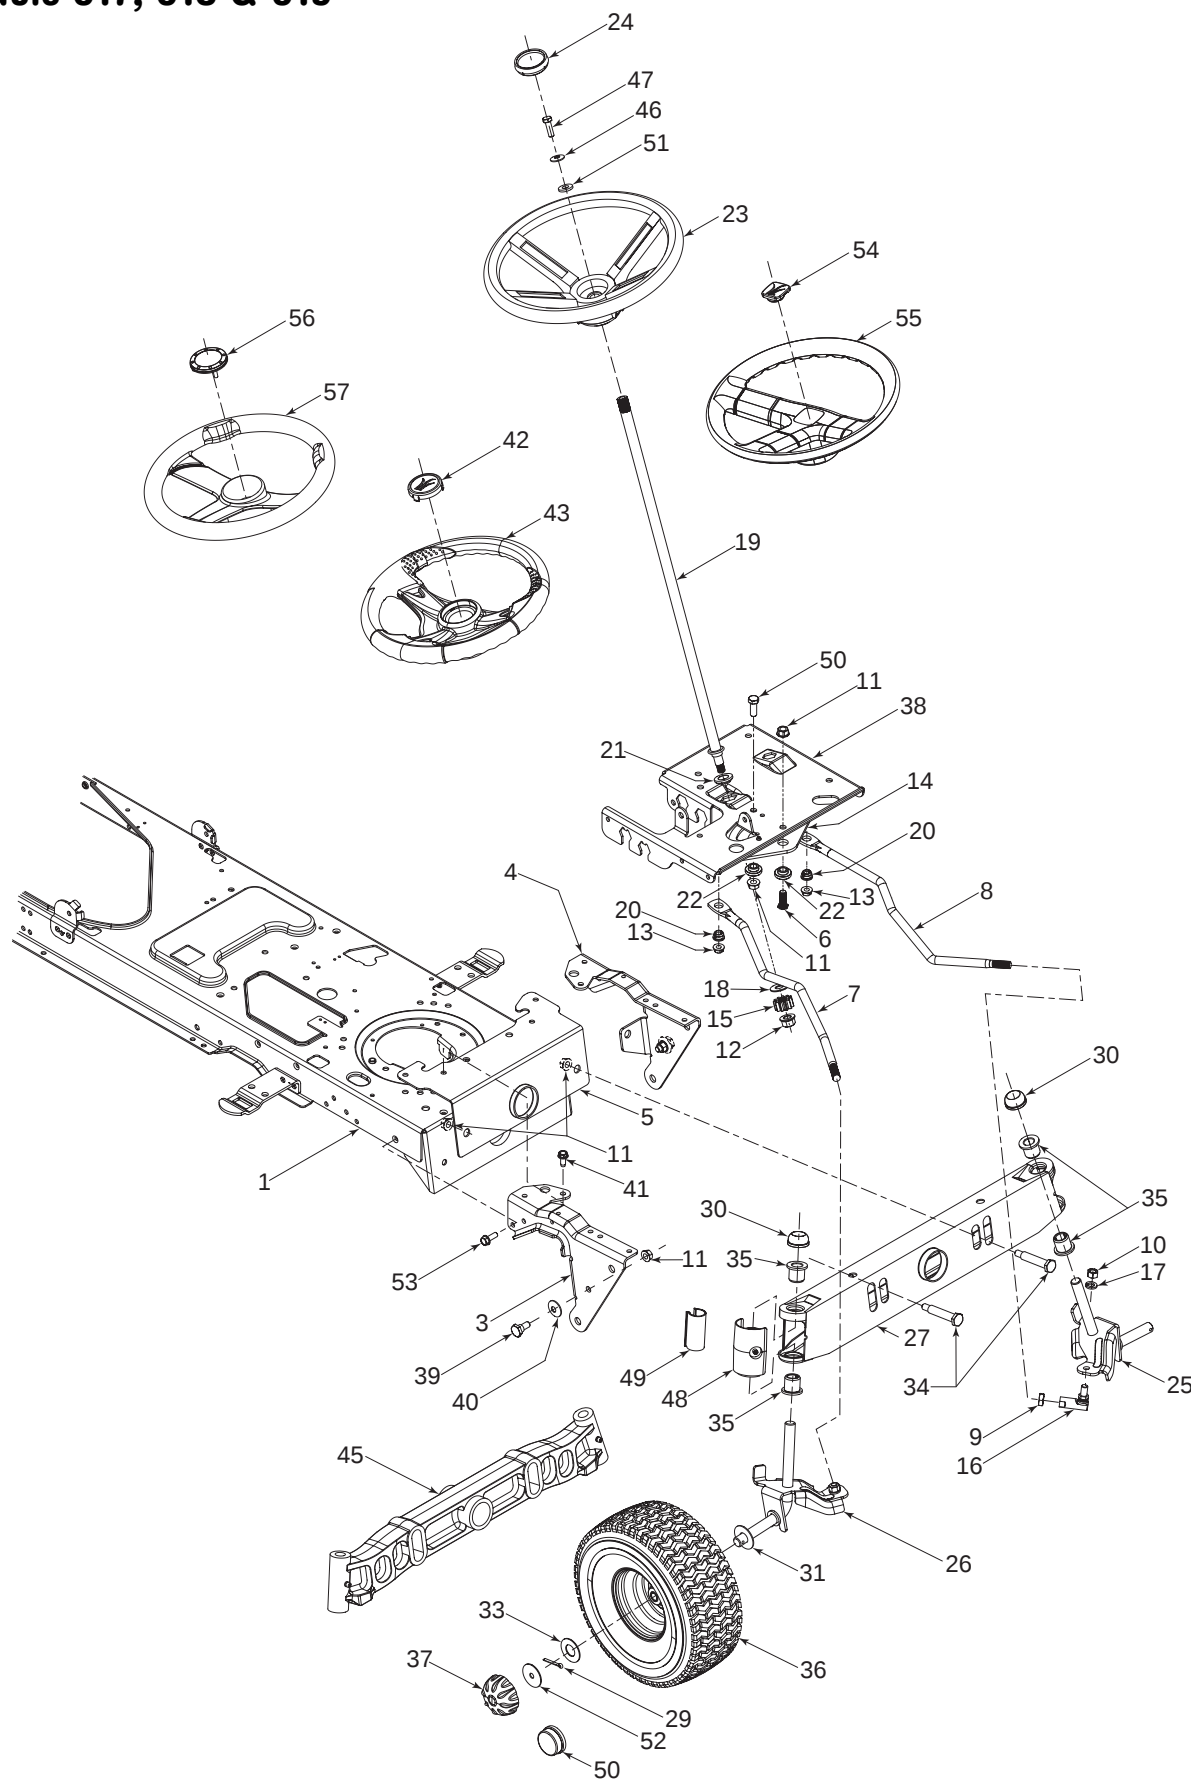


## Models 617, 618 & 619

| REF. NO. | PART NO.  | DESCRIPTION                              | REF. NO. | PART NO.   | DESCRIPTION                            |
|----------|-----------|------------------------------------------|----------|------------|----------------------------------------|
| 1        | 683-0304C | Lower Frame Assembly                     | 36       | 634-0105A  | Wheel Assembly, 15 x 6 x 6             |
| 2        | 710-1238  | Self-tapping Screw, 16-18 x.625          |          | 634-0115   | Square Shoulder, w/Plastic Flange Brg. |
| 3        | 783-0726B | RH Pivot Support Bracket                 |          |            | Wheel Assembly, 15 x 6 x 6             |
| 4        | 783-0727A | LH Pivot Support Bracket                 |          |            | Square Shoulder, w/Flange Ball Brg.    |
| 5        | 783-0728  | Pivot Bar Bracket                        |          | 634-0056A  | Wheel Assembly, 15 x 6 x 6             |
| 6        | 710-04095 | Hex Cap Screw, 3/8-16 x 1.0 (Grade 5)    |          |            | Round Shoulder                         |
| 7        | 711-1408  | RH Drag Link                             |          | 634-0172   | Rim Assembly Only (Plastic Brg.)       |
| 8        | 711-1409A | LH Drag Link                             |          | 634-0051   | Rim Assembly Only (Ball Brg.)          |
| 9        | 712-0240  | Jam Nut, 7/16-20 (Grade 2)               |          | 734-0255   | Air Valve (Not Shown)                  |
| 10       | 712-0241  | Hex Nut, 3/8-24 (Grade 2)                |          | 734-1731   | Tire Only, Square Shoulder             |
| 11       | 712-0431  | Flange Lock Nut, 3/8-16                  |          | 734-0864   | Tire Only, Round Shoulder              |
| 12       | 712-0459  | Flange Lock Nut, 7/16-20                 | 37       | 734-2290A  | Deluxe Hub Cap (Ref. 33 Required)      |
| 13       | 712-3004A | Flange Lock Nut, 5/16-18                 | 38       | 783-0653F  | Steering Support Bracket               |
| 14       | 717-1550D | Steering Gear, 11/90 Ratio               | 39       | 738-0143   | Shoulder Screw, 3/8-16                 |
| 15       | 717-1554  | Steering Pinion Gear                     | 40       | 736-0331   | Bell Washer, .39 x 1.13 x.062          |
| 16       | 723-0448A | Ball Joint, 7/16-20                      | 41       | 710-1260A  | Self-tapping Screw, 5/16-18 x.75       |
| 17       | 736-0169  | Lock Washer, 3/8                         | 42       | 731-04040  | Steering Wheel Cap w/ Sprig            |
| 18       | 736-3084  | Flat Washer, .51 x 1.12 x.06             |          | 731-04039  | Steering Wheel Cap w/o Sprig           |
| 19       | 738-1001A | Steering Shaft, .625 OD x 24.4           | 43       | 631-04008  | Steering Wheel, Soft Grip              |
| 20       | 741-0475  | Plastic Bushing, .38 ID                  |          | 631-04028  | Steering Wheel                         |
| 21       | 741-0656  | Hex Flange Bearing, 5/8                  | 44       | 731-0484A  | Standard Hub Cap                       |
| 22       | 738-0372B | Shoulder Spacer, .38 ID                  |          |            | (Ref. 33 Not Necessary)                |
| 23       | 631-0027  | Standard Steering Wheel, 13.25           | 45       | 719-0399B† | Cast Iron Pivot Bar - 42" Deck         |
| 24       | 731-0220  | Steering Wheel Cap, Round                |          | 719-0525B† | Cast Iron Pivot Bar - 46" Deck         |
| 25       | 638-0019A | LH Axle Assy., .625 Dia. - 42" Deck      | 46       | 736-0242   | Bell Washer, .34 x.872                 |
|          | 638-0021  | LH Axle Assy., .625/.750 Dia. - 46" Deck | 47       | 710-0643   | Hex Bolt, 5/16-18 X 1                  |
| 26       | 638-0020A | RH Axle Assy., .625 Dia. - 42" Deck      | 48       | 731-1291A  | Pivot Bar End Cap w/ Fitting           |
|          | 638-0022  | RH Axle Assy., .625/.750 Dia. - 46" Deck | 49       | 731-1649   | Pivot Bar End Cap w/o Fitting          |
| 27       | 683-0128A | Steel Pivot Bar                          | 50       | 710-0514   | Hex Screw, 3/8-16 x 1.0                |
| 29       | 714-0162  | Cotter Pin                               | 51       | 736-3004   | Flat Washer, .406 x.875 x.105          |
| 30       | 726-0214  | Push Cap, .625 - 42" Deck                | 52       | 736-0430   | Flat Washer, .35 x 1.59 x.062          |
|          | 726-0341  | Push Cap, .75 - 46" Deck                 | 53       | 710-1238   | Screw, Hex Washer, 5/16-18 x.87        |
| 31       | 736-0162  | Flat Washer, .64 x 1.0 x.12              | 54       | 731-1459A  | Steering Wheel Cap                     |
| 33       | 736-0285  | Flat Washer, .635 x 1.589 x.06           | 55       | 731-1687   | Steering Wheel                         |
| 34       | 738-1011  | Shoulder Screw, .5 x 2.2, 3/8-16         | 56       | 731-2625   | Steering Wheel Cap                     |
| 35       | 741-0659  | Flange Brg., .632 ID x.937 OD - 42" Deck | 57       | 731-2624   | Steering Wheel, Soft Grip              |
|          | 741-0660  | Flange Brg., .76 ID x.937 OD - 46" Deck  |          |            |                                        |

†If Equipped

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Models 617, 618 & 619

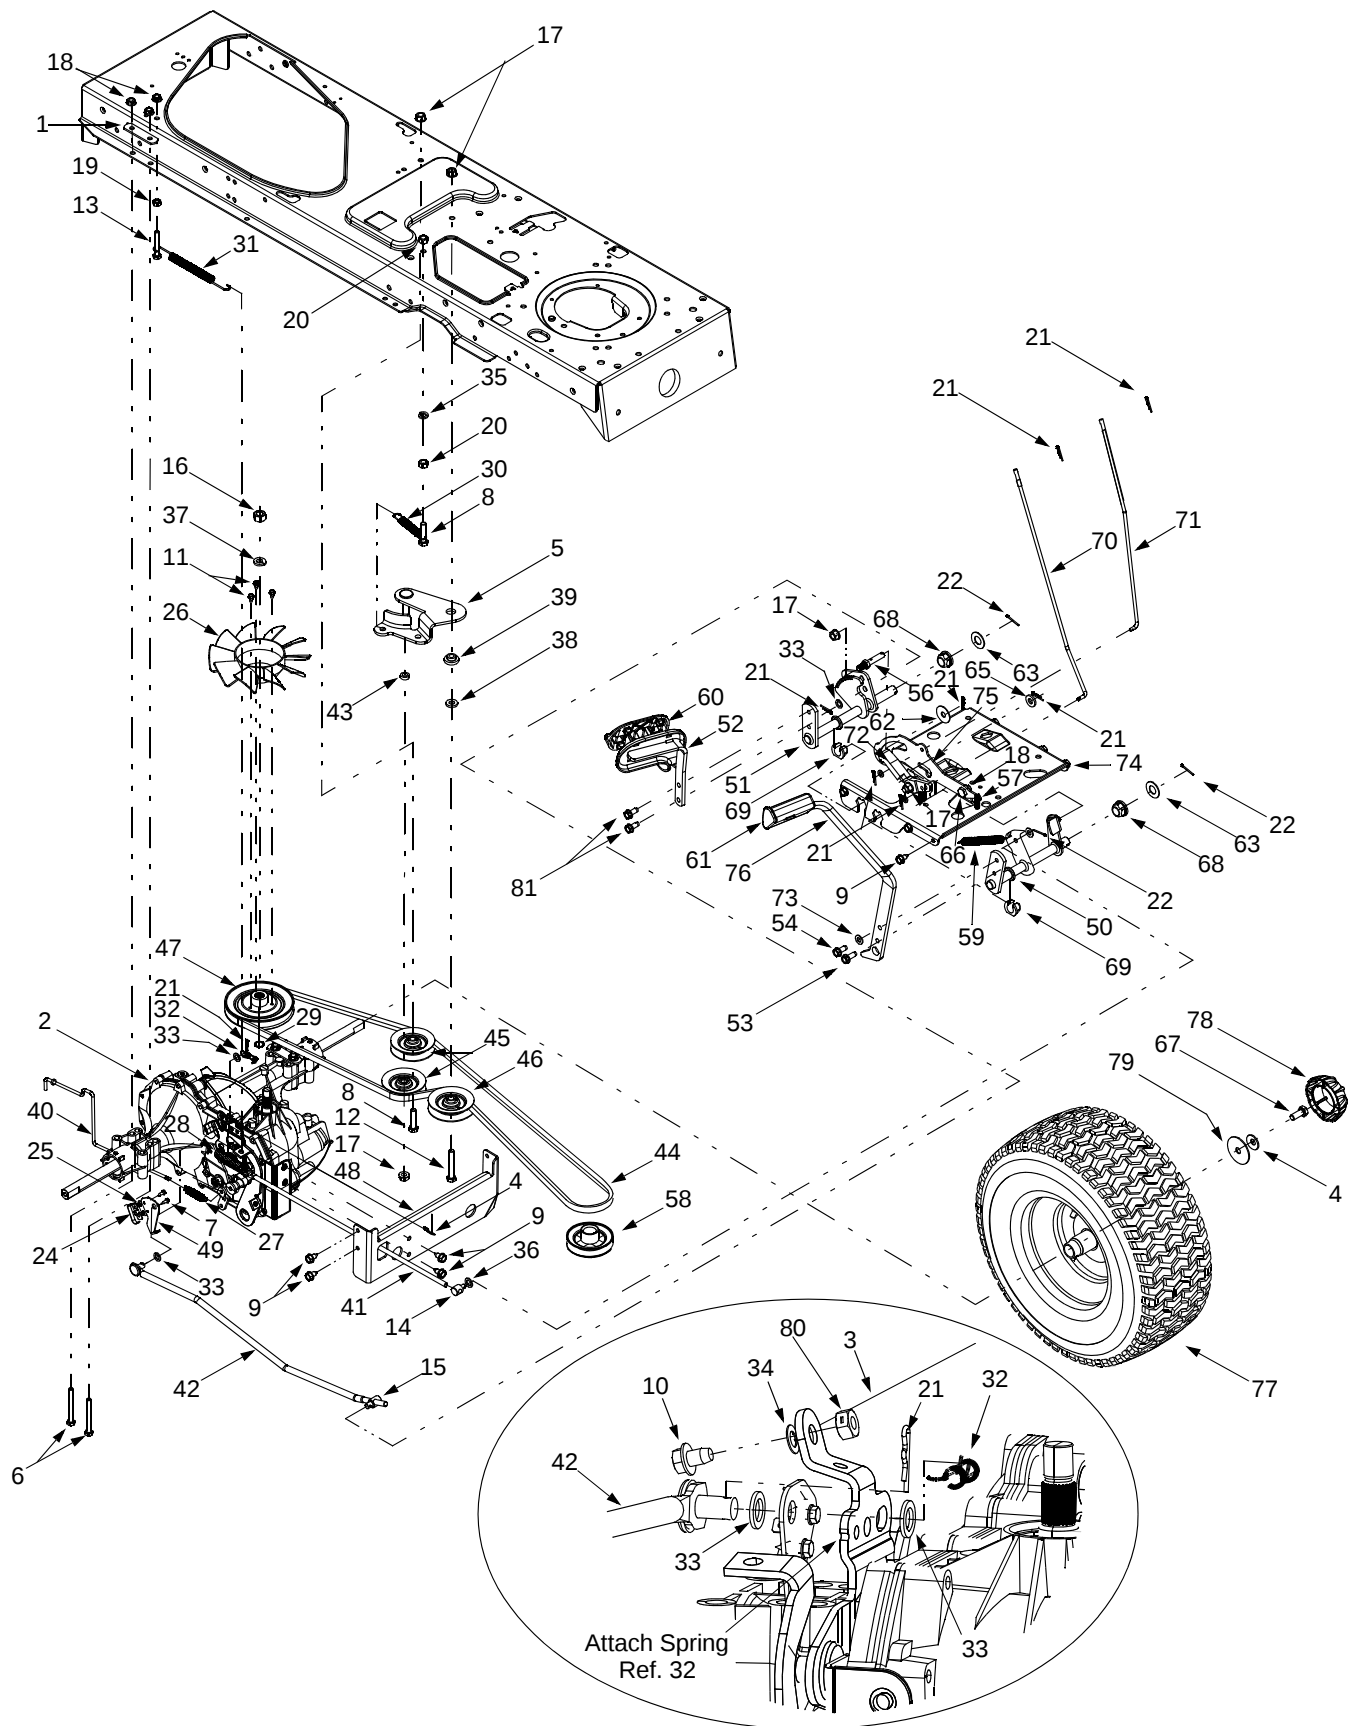

## Models 617, 618 & 619


| REF. NO. | PART NO.  | DESCRIPTION                           | REF. NO. | PART NO.   | DESCRIPTION                             |
|----------|-----------|---------------------------------------|----------|------------|-----------------------------------------|
| 1        | 17840     | Transaxle Mounting Bracket            | 45       | 756-0116   | V-idler Pulley, 3.06                    |
| 2        | 618-0319  | Hydrostatic Transmission              | 46       | 756-0981A  | Flat Idler Pulley, 2.75                 |
| 3        | 629-0949A | Reverse Wire Harness Adapter & Ground | 47       | 756-1166   | Input Pulley, 5.0                       |
| 4        | 736-0242  | Bell Washer,.34 x.872                 | 48       | 783-0810   | Transmission Torque Bracket             |
| 5        | 683-0251  | Double Idler Bracket Assembly         | 49       | 783-1019   | Switch Actuator Bracket                 |
| 6        | 710-0176  | Hex Cap Screw, 5/16-18 x 2.75         | 50       | 647-0031B  | Brake Control Assembly                  |
| 7        | 710-0227  | Screw, #8-18 x.5                      | 51       | 647-0049   | Drive Control Assembly                  |
| 8        | 710-0344  | Hex Cap Screw, 3/8-16 x 1.5           | 52       | 683-0267C  | Hydro Pedal Assembly                    |
| 9        | 710-0726  | Self-tapping Screw, 5/16-18 x.625     | 53       | 710-0650   | Self-tapping Screw, 5/16-18 x.875       |
| 10       | 710-0599  | Self-tapping Screw, 1/4-20 x.375      | 54       | 710-1611B  | Self-tapping Screw, 5/16-18 x.75        |
| 11       | 710-3007  | Screw, #12-24 x.375                   | 56       | 711-1363   | Pin, 3/8-16 x 2.43                      |
| 12       | 710-3011  | Hex Cap Screw, 3/8-16 x 2.25          | 57       | 732-0335   | Compression Spring,.405 OD x 1.17       |
| 13       | 710-3103  | Hex Cap Screw, 5/16-18 x 2.0          | 58       | 756-0983B  | Engine Pulley                           |
| 14       | 711-0677  | Ferrule, 5/16-18                      | 59       | 732-0963   | Extension Spring,.50 OD x 6.37          |
| 15       | 711-0832  | Ferrule, 3/8-24                       | 60       | 735-0662   | Drive Pedal Pad                         |
| 16       | 712-0333  | Hex Nut, 1/2-20                       | 61       | 735-3049   | Brake Pedal Pad                         |
| 17       | 712-0431  | Flange Lock Nut, 3/8-16               | 62       | 736-0133   | Flat Washer,.411 x 1.25 x 1.0           |
| 18       | 712-3004A | Flange Lock Nut, 5/16-18              | 63       | 736-0187   | Flat Washer,.64 x 1.24 x.06             |
| 19       | 712-3010  | Hex Nut, 5/16-18                      | 65       | 736-3004   | Flat Washer,.406 x.875 x.105            |
| 20       | 712-3017  | Hex Nut, 3/8-16                       | 66       | 738-0155   | Shoulder Screw,.437 x 1.62              |
| 21       | 714-0104  | Internal Cotter Pin                   | 67       | 710-0627   | Hex Cap Screw, 5/16-24 x.75             |
| 22       | 714-0111  | Cotter Pin                            | 68       | 741-0225   | Hex Flange Bearing                      |
| 24       | 725-1644  | Short Spring Switch                   | 69       | 741-3065B  | Split Hex Flange Bearing                |
| 25       | 726-0320  | Insulator Nut Plate                   | 70       | 747-04096† | Cruise Control Rod                      |
| 26       | 731-1449A | 10-inch Fan                           | 71       | 747-04093† | Brake Lock Control Rod                  |
| 27       | 732-0209  | Extension Spring,.48 x 2.03           | 72       | 748-0413†  | Cruise Latch                            |
| 28       | 732-0716  | Extension Spring,.59 x 4.0            | 73       | 736-3008   | Flat Washer,.344 x.750 x.120            |
| 29       | 732-0729  | Wire Ring                             | 74       | 783-0653F  | Steering Support Bracket                |
| 30       | 732-0429A | Extension Spring,.5 x 3.97            | 75       | 783-0663C  | Drive Lockout Bracket                   |
| 31       | 732-0994  | Extension Spring,.5 x 7.0             | 76       | 783-0773A  | Brake Pedal                             |
| 32       | 732-3118  | Extension Spring, 3/8 x 1.44          | 77       | 634-0177   | Wheel Assembly Complete                 |
| 33       | 736-0140  | Flat Washer,.385 x.62 x.063           |          |            | 20 x 10 x 8 Square Shoulder             |
| 34       | 736-0142  | Flat Washer,.281 x.50 x.063           |          | 634-0104   | Wheel Assembly Complete                 |
| 35       | 736-0169  | Lock Washer, 3/8                      |          |            | 20 x 8 x 8 Square Shoulder              |
| 36       | 736-0275  | Flat Washer,.344 x.688 x.065          |          | 634-0070   | Rim Assembly Only                       |
| 37       | 736-0921  | Lock Washer, 1/2                      |          | 734-0255   | Air Valve (Not Shown)                   |
| 38       | 736-3010  | Flat Washer,.407 x.812 x.135          |          | 734-1873   | Tire Only, 20 x 10 x 8, Square Shoulder |
| 39       | 738-0372B | Shoulder Spacer,.38                   |          | 734-1730   | Tire Only, 20 x 8 x 8, Square Shoulder  |
| 40       | 747-1149  | Hydrostatic Bypass Rod                | 78       | 734-2290A  | Deluxe Hub Cap (Ref. 79 Required)       |
| 41       | 747-1150  | Hydrostatic Brake Rod                 | 79       | 736-0430   | Flat Washer,.350 x 1.59 x.062           |
| 42       | 747-1151  | Hydrostatic Control Rod               | 80       | 712-0291   | Hex Lock Nut, 1/4-20                    |
| 43       | 750-0535  | Spacer,.376 x.625 x.22                | 81       | 710-1260A  | Screw, 5/16-18 x.750                    |
| 44       | 754-0349  | Drive Belt                            |          |            |                                         |

†If Equipped

**IMPORTANT:** For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Models 617, 618 & 619 (w/ Electric PTO)

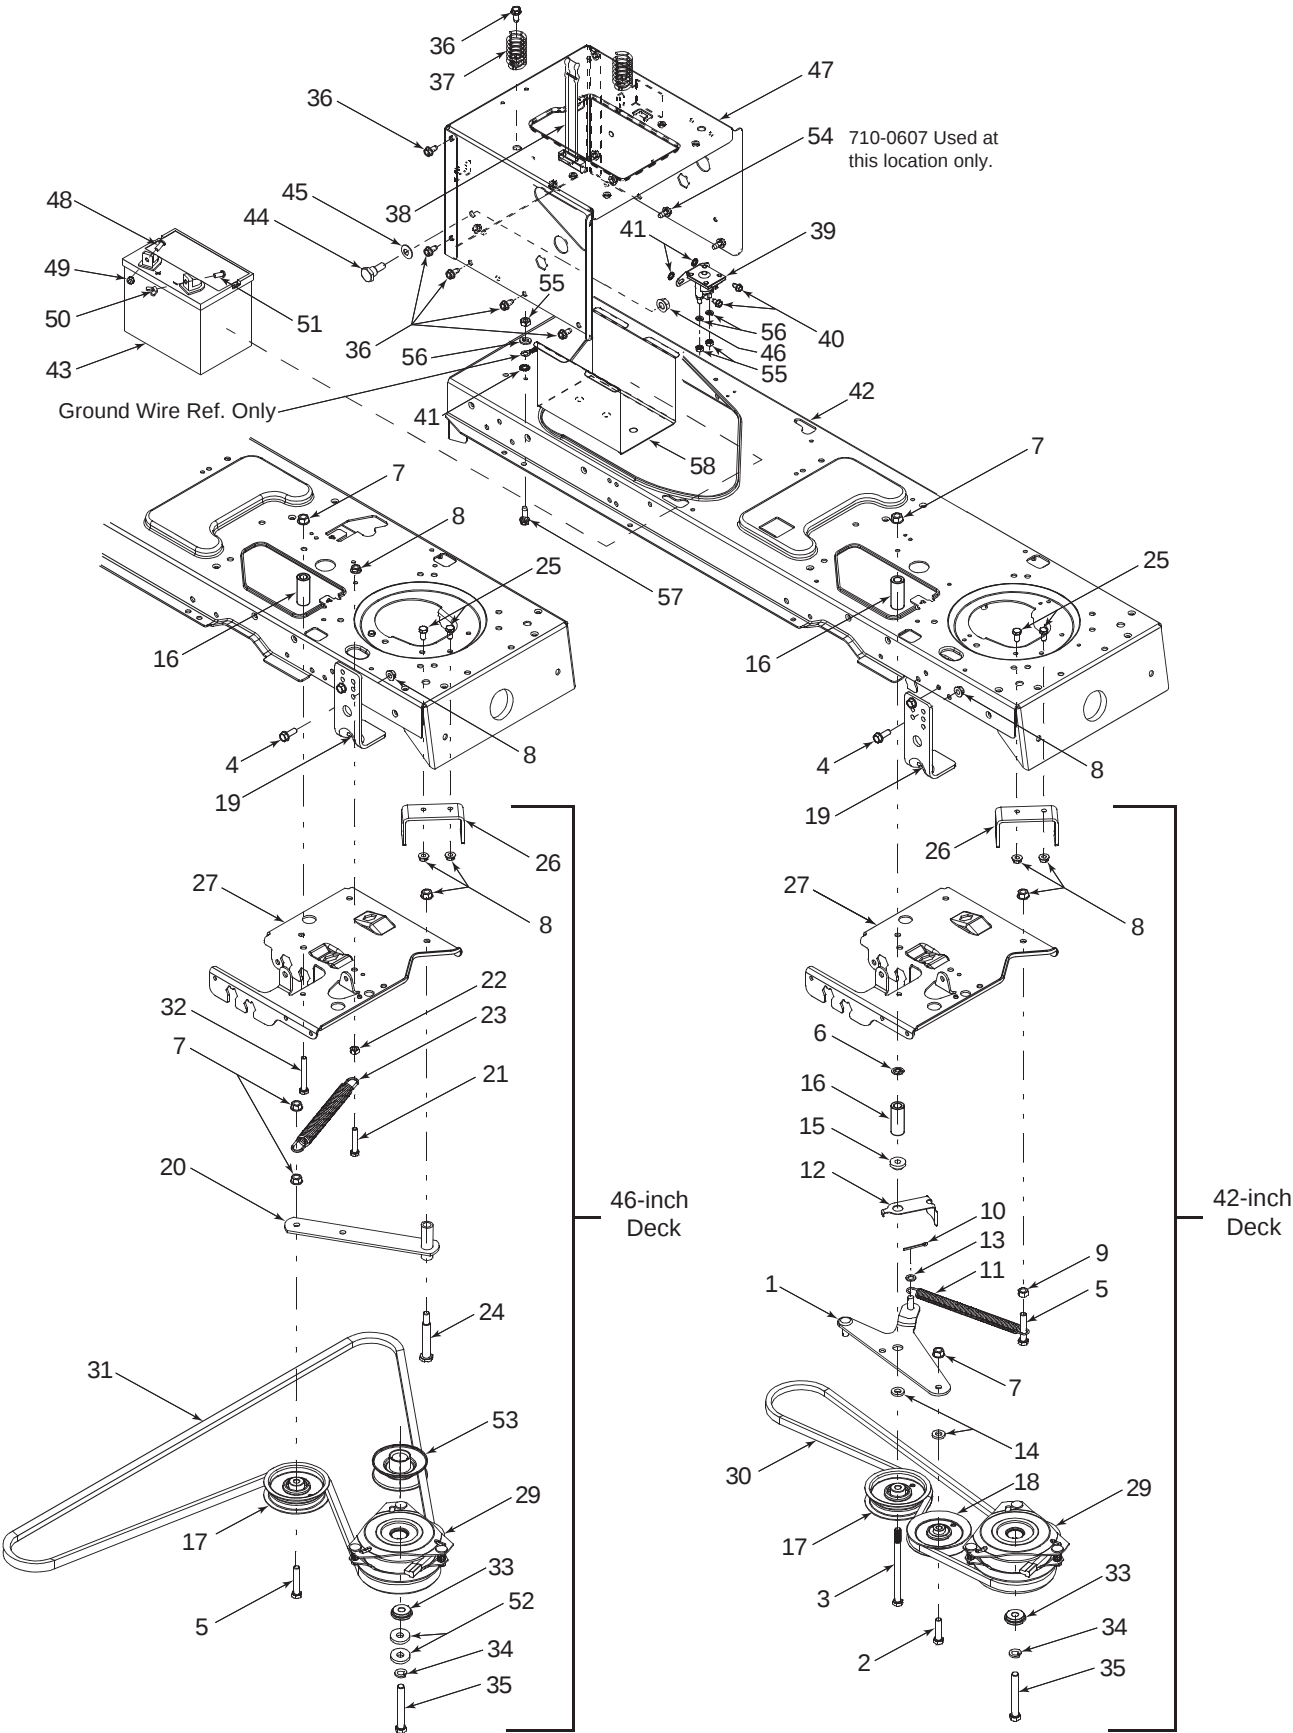


## Models 617, 618 & 619

| REF. NO. | PART NO.  | DESCRIPTION                           | REF. NO. | PART NO.  | DESCRIPTION                             |
|----------|-----------|---------------------------------------|----------|-----------|-----------------------------------------|
| 1        | 683-0450  | Engagement Plate Assembly             | 31       | 754-0474  | PTO Belt (Models w/ 46-inch deck)       |
| 2        | 710-0520  | Hex Cap Screw, 3/8-16 x 1.5           | 32       | 710-0859  | Hex Cap Screw, 3/8-16 x 2.5             |
| 3        | 710-0831  | Hex Cap Screw, 3/8-16 x 5.5           | 33       | 738-0785  | Shoulder Spacer, 1.38 x.445 x.36        |
| 4        | 710-1238  | Hex Head Washer Screw, 5/16-18 x.875  | 34       | 736-0171  | Lock Washer, 7/16                       |
| 5        | 710-3144  | Hex Cap Screw, 3/8-16 x 2.0           | 35       | 710-3157  | Hex Cap Screw, 7/16-20 x 3.25 (Grade 5) |
| 6        | 712-0229  | Push Nut, 3/8                         | 36       | 710-0604A | Self Tapping Screw, 5/16-18 x.625       |
| 7        | 712-0431  | Flange Lock Nut, 3/8-16               | 37       | 732-04035 | Compression Spring, 1.28 x 3.125        |
| 8        | 712-3004A | Flange Lock Nut, 5/16-18              | 38       | 723-0444  | Battery Strap                           |
| 9        | 712-3017  | Hex Nut, 3/8-16                       | 39       | 725-1426  | Solenoid, 12-Volt, 100 Amp              |
| 10       | 714-0470  | Cotter Pin, 1/8 x 1.25                | 40       | 710-0599  | Self Tapping Screw, 1/4-20 x.5          |
| 11       | 732-0384  | Extension Spring,.62 x 6.12           | 41       | 736-0222  | Lock Washer, 1/4                        |
| 12       | 732-0991A | Belt Guard                            | 42       | 683-0304C | Lower Frame Assembly                    |
| 13       | 736-0140  | Flat Washer,.385 x.62 x.063           | 43       | 725-1706  | 12-volt Battery, 270 CCA                |
| 14       | 736-3010  | Flat Washer,.407 x.812 x.135          | 44       | 738-1020  | Shoulder Screw,.625 x.5, 7/16-20        |
| 15       | 738-0372A | Shoulder Spacer,.380                  | 45       | 736-0407  | Bell Washer,.45 x 1.0 x.062             |
| 16       | 748-0415B | Spacer, 3/8 x 1.54                    | 46       | 712-0459  | Flange Lock Nut, 7/16-20                |
| 17       | 756-0627B | Idler Pulley, 3.5                     | 47       | 783-1031A | Hitch Plate                             |
| 18       | 756-1208  | Idler Pulley, 4.0                     | 48       | 710-0703  | Hex Cap Screw, 1/4-20 x.75              |
| 19       | 783-0891B | Deck Stop                             | 49       | 712-0271  | Hex Sems Nut, 1/4-20                    |
| 20       | 683-0297  | Idler Bracket Assembly                | 50       | 712-3087  | Wing Nut, 1/4-20                        |
| 21       | 710-3180  | Hex Cap Screw, 5/16-18 x 1.75         | 51       | 738-1132  | Shoulder Screw, 1/4-20,.25 x.15         |
| 22       | 712-3010  | Hex Nut, 5/16-18                      | 52       | 736-0322  | Flat Washer,.4375 x 1.25 x.180          |
| 23       | 732-0978  | Extension Spring,.62 x 5.62           | 53       | 756-0639A | Engine Pulley                           |
| 24       | 738-3056  | Shoulder Screw, 1/2 x 2.5             | 54       | 710-0607  | Self-tapping Screw, 5/16-18 x.5         |
| 25       | 710-3025  | Hex Cap Screw, 5/16-18 x.625          | 55       | 712-3006  | Hex Nut, 1/4-20                         |
| 26       | 783-1003  | Electric Clutch Anti-rotation Bracket | 56       | 736-0329  | Lock Washer, 1/4                        |
| 27       | 783-0653F | Steering Support Bracket              | 57       | 710-0642  | Self-tapping Screw, 1/4-20 x.75         |
| 29       | 717-1708  | Electric PTO Clutch                   | 58       | 783-0349  | Battery Tray                            |
| 30       | 754-0497  | PTO Belt (Models w/ 42-inch deck)     |          |           |                                         |

**IMPORTANT:** For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Models 617, 618 & 619 (w/ Manual PTO)

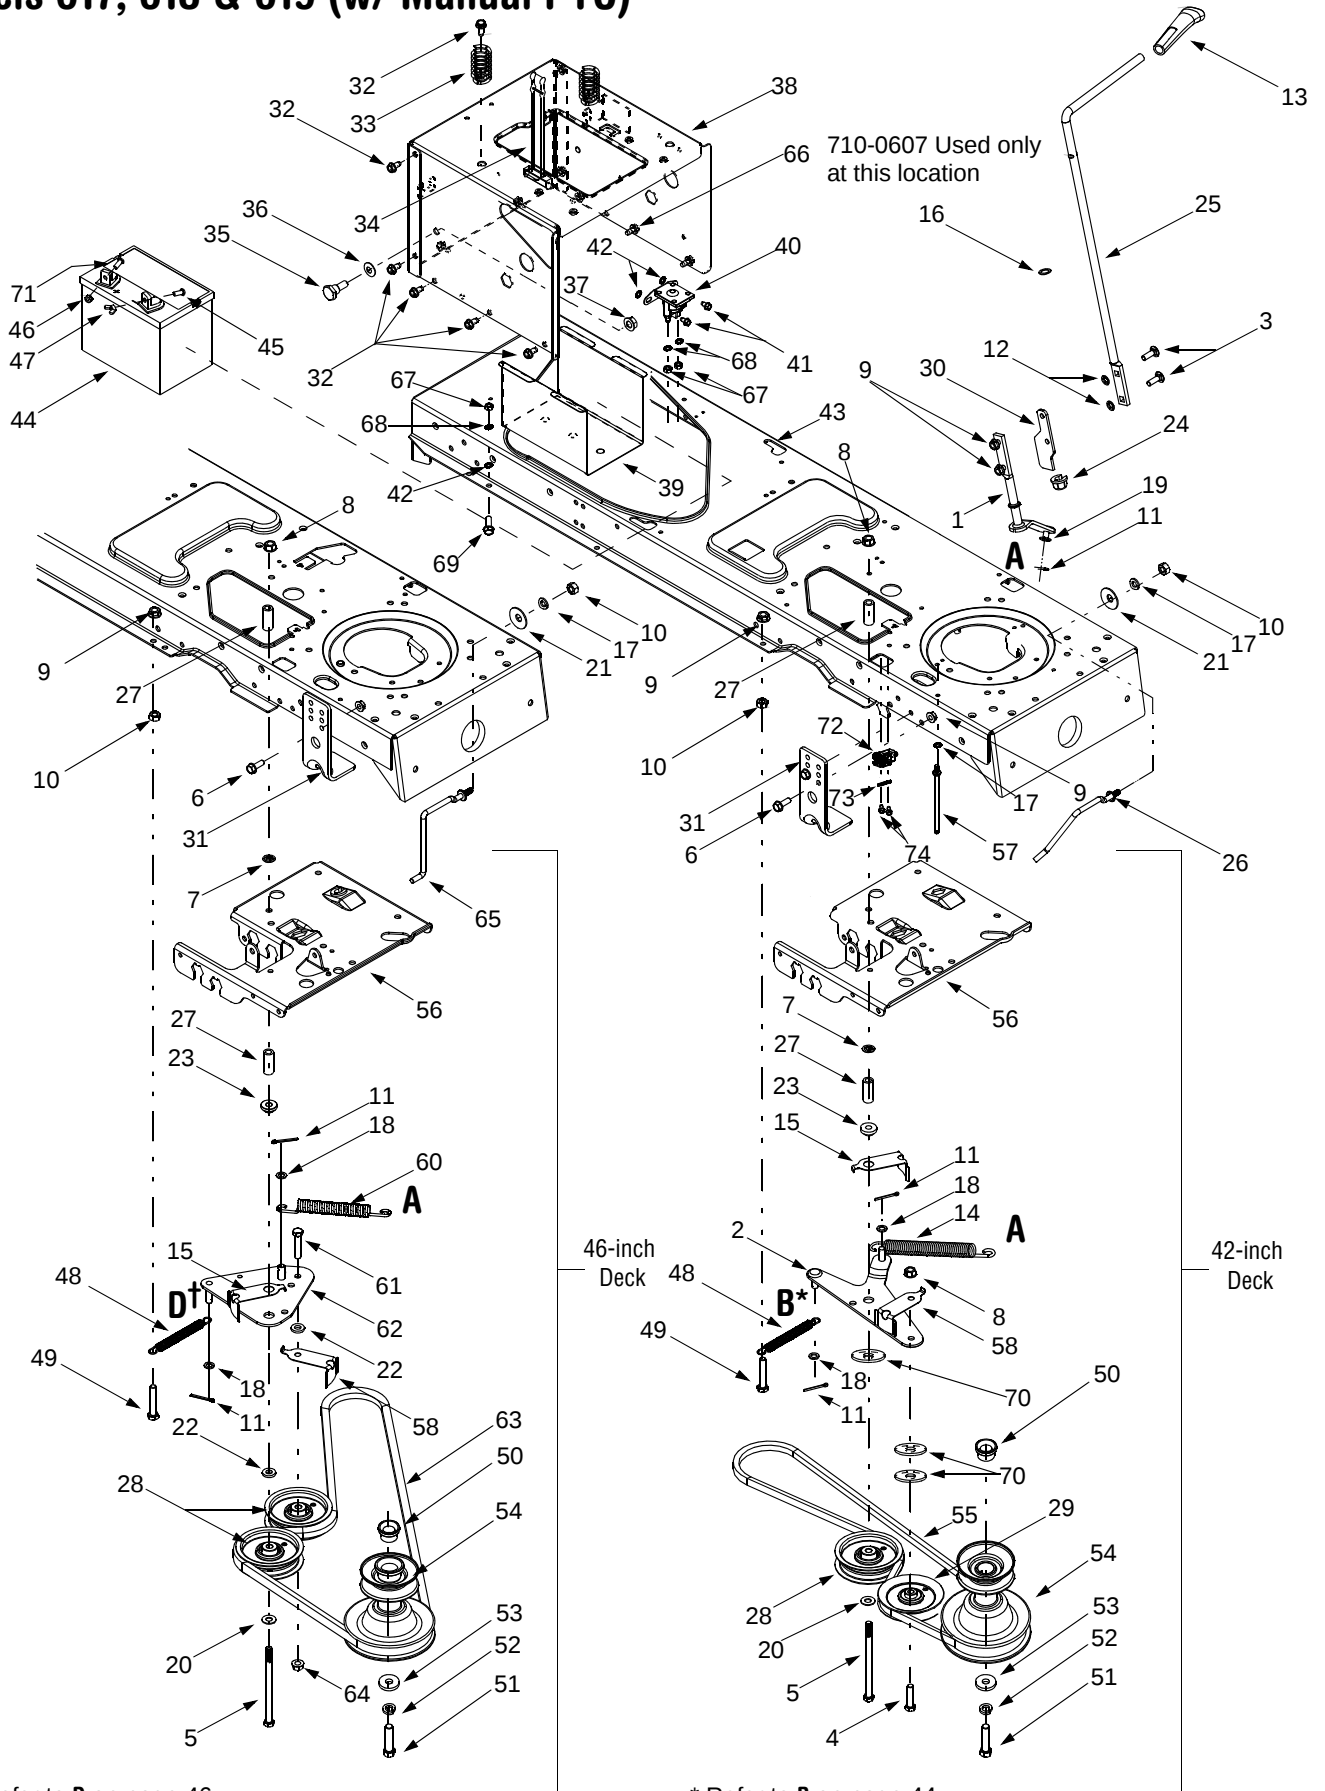

## Models 617, 618 & 619


| REF. NO. | PART NO.  | DESCRIPTION                          | REF. NO. | PART NO.  | DESCRIPTION                        |
|----------|-----------|--------------------------------------|----------|-----------|------------------------------------|
| 1        | 647-0064  | PTO Engage Lever Assembly            | 38       | 783-1031A | Hitch Plate                        |
| 2        | 683-0450  | PTO Engage Plate Assembly            | 39       | 783-0349  | Battery Tray                       |
| 3        | 710-0276  | Carriage Screw, 5/16-18 x 1.00       | 40       | 725-1426  | Solenoid, 12-Volt, 100 Amp         |
| 4        | 710-0520  | Hex Cap Screw, 3/8-16 x 1.5          | 41       | 710-0599  | Self Tapping Screw, 1/4-20 x.5     |
| 5        | 710-0831  | Hex Cap Screw, 3/8-16 x 5.5          | 42       | 736-0222  | Lock Washer, 1/4                   |
| 6        | 710-1238  | Hex Head Washer Screw, 5/16-18 x.875 | 43       | 683-0304C | Lower Frame Assembly               |
| 7        | 712-0229  | Push Nut, 3/8                        | 44       | 725-1706  | 12-volt Battery, 270 CCA           |
| 8        | 712-0431  | Flange Lock Nut, 3/8-16              | 45       | 738-1132  | Hex Cap Screw, 1/4-20              |
| 9        | 712-3004A | Flange Lock Nut, 5/16-18             | 46       | 712-0271  | Hex Sems Nut, 1/4-20               |
| 10       | 712-3010  | Hex Nut, 5/16-18                     | 47       | 712-3087  | Wing Nut, 1/4-20                   |
| 11       | 714-0470  | Cotter Pin, 1/8 x 1.25               | 48       | 732-1165  | Extension Spring,.50 x 5.0         |
| 12       | 726-0201  | Speed Nut,.3125                      | 49       | 710-3180  | Hex Cap Screw, 5/16-18 x 1.75      |
| 13       | 731-2111A | PTO Knob                             | 50       | 750-0956  | Spacer Cup                         |
| 14       | 732-1170  | Extension Spring,.75 x 6.75          | 51       | 710-3029  | Hex Head Cap Screw, 7/16-20 x 1.25 |
| 15       | 732-0991A | Belt Guard                           | 52       | 736-0171  | Lock Washer, 7/16                  |
| 16       | 736-0108  | Flat Washer,.510 x.750 x.033         | 53       | 736-0322  | Flat Washer,.450 x 1.25            |
| 17       | 736-0119  | Lock Washer, 5/16                    | 54       | 756-0983B | Engine Pulley, 3.56 OD x 5.56      |
| 18       | 736-0140  | Flat Washer, .385 x .62 x .063       | 55       | 754-0497  | PTO Belt (Models w/ 42-inch deck)  |
| 19       | 736-0275  | Flat Washer, 5/16                    | 56       | 783-0653F | Steering Support Bracket           |
| 20       | 736-0300  | Flat Washer,.406 x.875 x.059         | 57       | 711-1044  | Keeper Pin, 5/16 x 4.75            |
| 21       | 736-0242  | Bell Washer,.345 x.88 x.060          | 58       | 732-1013  | Belt Guard                         |
| 22       | 736-3010  | Flat Washer,.407 x.812 x.135         | 59       | 710-3025  | Hex Cap Screw, 5/16-18 x.625       |
| 23       | 738-0372B | Shoulder Spacer,.380                 | 60       | 732-0944  | Extension Spring,.75 x 6.75        |
| 24       | 741-0708  | Hex Split Flange Bearing,.5          | 61       | 710-0347  | Hex Cap Screw, 3/8-16 x 1.75       |
| 25       | 747-1112D | PTO Engagement Handle                | 62       | 683-0302  | PTO Engagement Plate Assembly      |
| 26       | 747-1286A | Belt Keeper Rod                      | 63       | 754-0486A | PTO Belt (Models w/ 46-inch deck)  |
| 27       | 748-0415B | Spacer, 3/8 x 1.54                   | 64       | 712-0431  | Flange Lock Nut, 3/8-16            |
| 28       | 756-0627B | Idler Pulley, 3.5                    | 65       | 747-1243  | Belt Keeper Rod                    |
| 29       | 756-1208  | Idler Pulley, 4.0                    | 66       | 710-0607  | Self-tapping Screw, 5/16-18 x.5    |
| 30       | 783-0744A | Engagement Stop                      | 67       | 712-3006  | Hex Nut, 1/4-20                    |
| 31       | 783-0891B | Deck Stop                            | 68       | 736-0329  | Lock Washer, 1/4                   |
| 32       | 710-0604A | Self Tapping Screw, 5/16-18 x.625    | 69       | 710-0642  | Self-tapping Screw, 1/4-20 x.75    |
| 33       | 732-04035 | Compression Spring, 1.28 x 3.5       | 70       | 736-3039  | Flat Washer,.406 x 1.5 x 11 gauge  |
| 34       | 723-0444  | Battery Strap                        | 71       | 710-0703  | Carriage Bolt, 1/4-20 x.75         |
| 35       | 738-1020  | Shoulder Screw,.625 x.5, 7/16-20     | 72       | 725-04039 | Safety Interlock Switch            |
| 36       | 736-0407  | Bell Washer,.45 x 1.0 x.062          | 73       | 17962     | Switch Plate                       |
| 37       | 712-0459  | Flange Lock Nut, 7/16-20             | 74       | 710-0224  | Screw, #10 x.5                     |

**IMPORTANT:** For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Models 617, 618 & 619

## 42" Deck

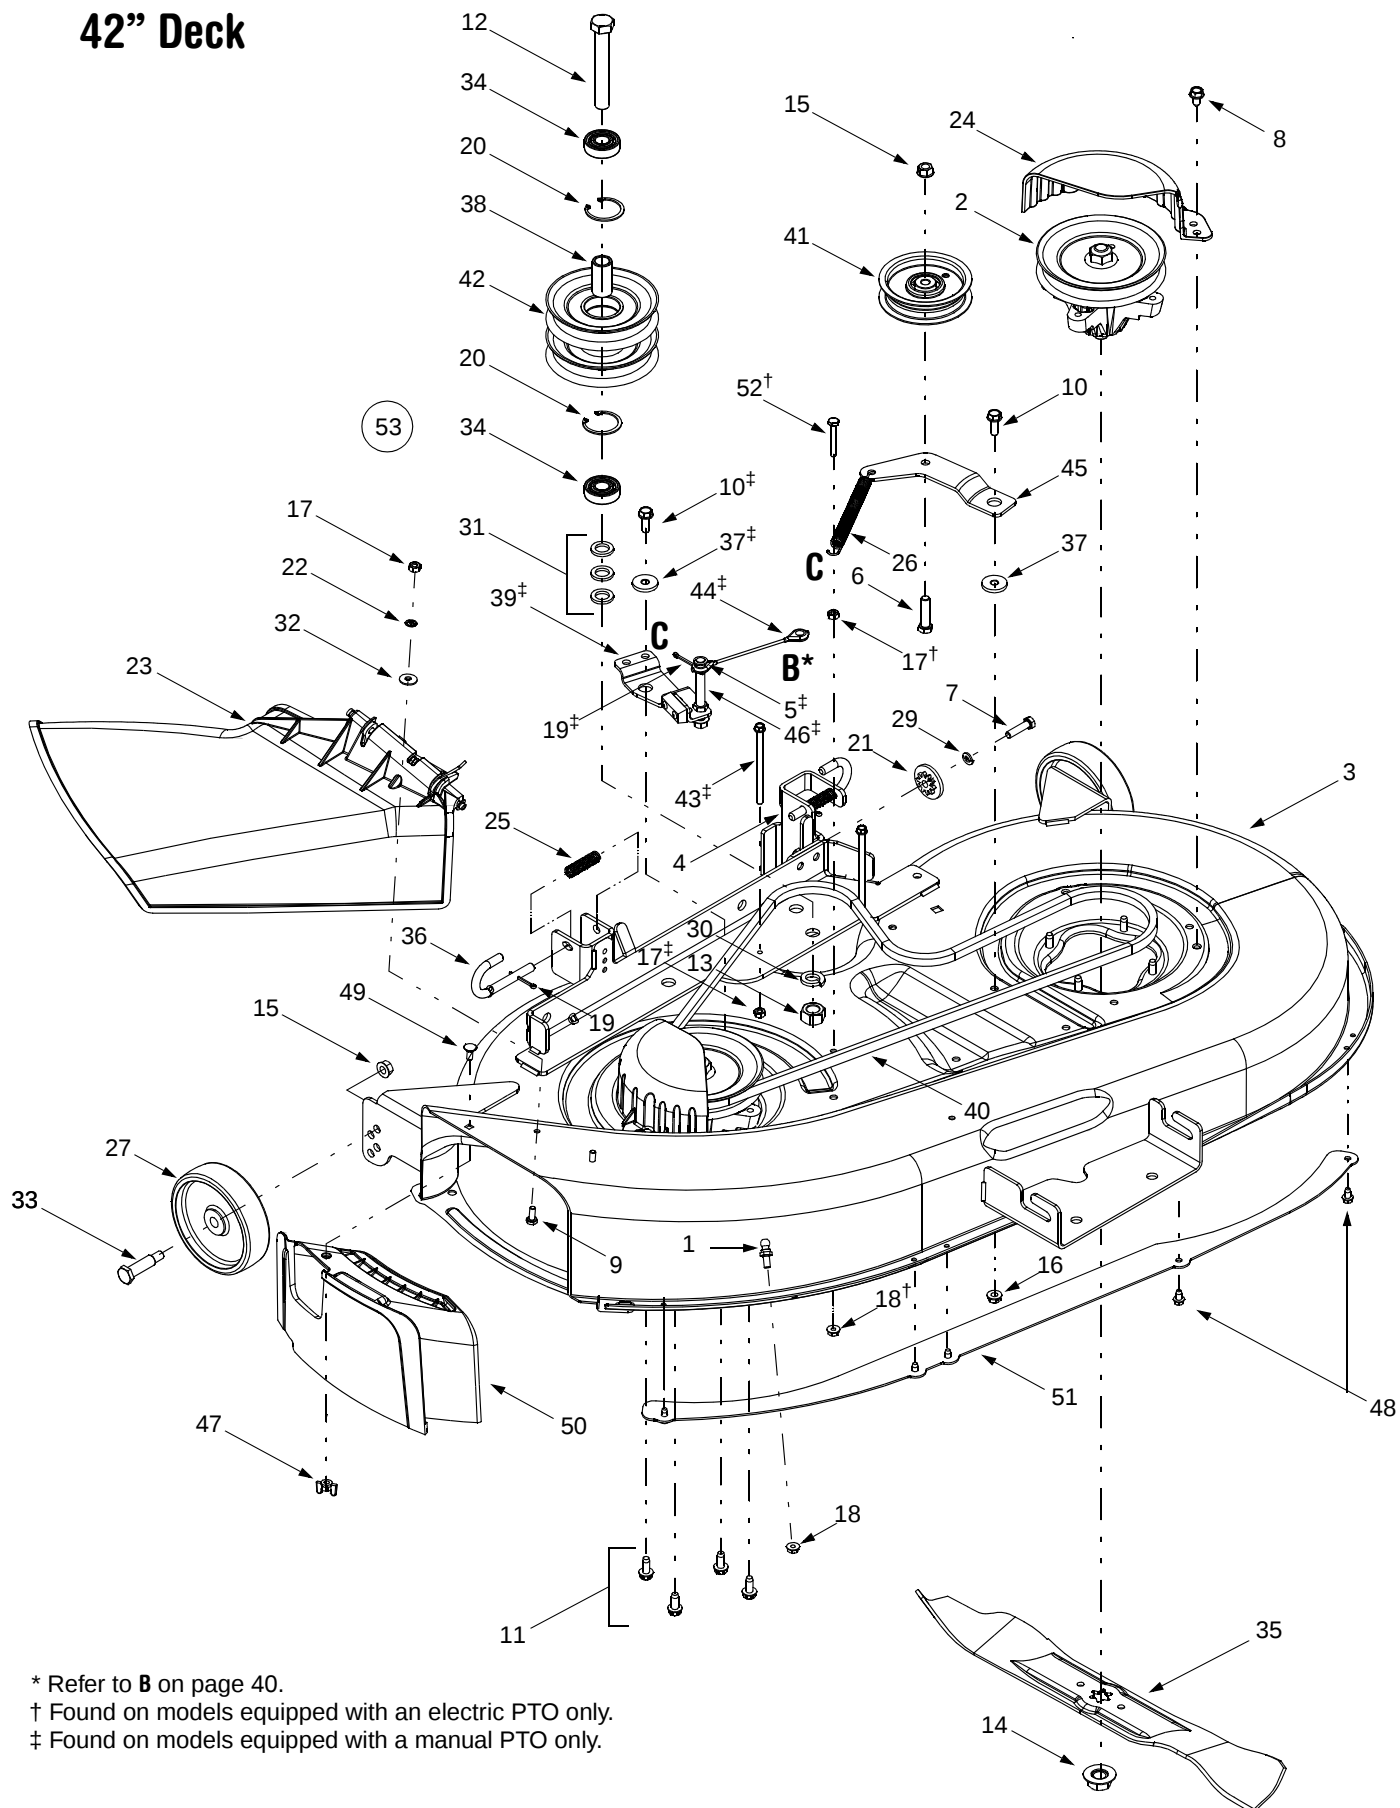

\* Refer to **B** on page 40.

† Found on models equipped with an electric PTO only.

‡ Found on models equipped with a manual PTO only.



## Models 617, 618 & 619

| REF. NO. | PART NO.  | DESCRIPTION                            | REF. NO. | PART NO.  | DESCRIPTION                                          |
|----------|-----------|----------------------------------------|----------|-----------|------------------------------------------------------|
| 1        | 711-04069 | Grass Catcher Pin                      | 29       | 736-0119  | Lock Washer, 5/16                                    |
| 2        | 618-0565  | Spindle Assembly, 5.75 Dia.            | 30       | 736-0158  | Lock Washer, 5/8                                     |
|          | 756-0980  | Pulley Only                            | 31       | 736-0162  | Flat Washer, .64 x 1.0 x .12                         |
| 3        | 683-0198F | 42-inch Deck Shell                     | 32       | 736-0270  | Bell Washer, .265 x .75 x .062                       |
| 4        | 683-0254  | Deck Adjustment Bracket w/ Weld Nut    | 33       | 738-0373  | Shoulder Screw, .498 x 1.53                          |
| 5        | 736-0140  | Flat Washer, .385 x .62 x .063         | 34       | 741-0524  | Bearing, .625 x 1.574 x .470                         |
| 6        | 710-0520  | Hex Cap Screw, 1/4-20 x 1.5            | 35       | 742-0616A | Three-in-one Blade, Star Center, 21.23"              |
| 7        | 710-0528  | Hex Cap Screw, 5/16-18 x 1.25          | 36       | 747-1116  | Deck Release Pin                                     |
| 8        | 710-0726  | Self-tapping Screw, 5/16-18 x .75      | 37       | 748-0331  | Shoulder Spacer, .625 x .324                         |
| 9        | 710-0751  | Hex Cap Screw, 1/4-20 x .62            | 38       | 750-0932A | Spacer, .635 x .88 x 1.72                            |
| 10       | 710-1238  | Hex Head Washer Screw, 5/16-18 x .875  | 39       | 683-0440  | Deck Brake Assembly                                  |
| 11       | 710-0650  | Self-tapping Screw, 5/16-18 x .75      | 40       | 754-0498  | Deck Belt                                            |
| 12       | 710-3151  | Hex Cap Screw, 5/8-18 x .875           | 41       | 756-0627B | Idler Pulley, 3.5                                    |
| 13       | 712-0337  | Hex Nut, 5/8-18                        | 42       | 756-1202  | Double Pulley, 5.0                                   |
| 14       | 712-0417A | Hex Flange Nut, 5/8-18                 | 43       | 710-1830  | Self-tapping Screw, 1/4-20 x 4.0                     |
| 15       | 712-0431  | Flange Lock Nut, 3/8-16                | 44       | 746-0970  | Brake Cable, 5.05                                    |
| 16       | 712-3004A | Flange Lock Nut, 5/16-18               | 45       | 783-1291  | Idler Bracket                                        |
| 17       | 712-3006  | Hex Nut, 1/4-20                        | 46       | 711-1534  | Pin, 3/8-16, 3/8 x 3.27                              |
| 18       | 712-3027  | Hex Flange Lock Nut, 1/4-20            | 47       | 712-3087  | Wing Nut, 1/4-20                                     |
| 19       | 714-0470  | Cotter Pin, 1/8 x 1.25                 | 48       | 710-0599  | Self-tapping Screw, 1/4-20 x .5                      |
| 20       | 716-3020  | Internal Snap Ring                     | 49       | 710-0134  | Carriage Screw, 1/4-20 x .62                         |
| 21       | 717-1553B | Deck Adjustment Gear                   | 50       | 731-2363  | Mulch Plug                                           |
| 22       | 726-0233  | Push Nut, .25 x .5                     | 51       | 783-1146A | Deck Skirt                                           |
| 23       | 731-1032B | Side Discharge Chute Assembly          | 52       | 710-0136  | Hex Cap Screw, 1/4-20 x 1.75                         |
| 24       | 731-2486A | Belt Cover                             | 53       | 753-0894  | Deck Assembly Complete, Manual PTO (w/o Mulch Kit)   |
| 25       | 732-0306  | Compression Spring, .406 x .531 x 1.75 |          | 753-0896  | Deck Assembly Complete, Electric PTO (w/o Mulch Kit) |
| 26       | 732-0470A | Extension Spring, .50 x 4.74           |          |           |                                                      |
| 27       | 734-0973  | Deck Wheel, 5 x 1.38                   |          |           |                                                      |

**IMPORTANT:** For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Models 617, 618 & 619 46" Deck

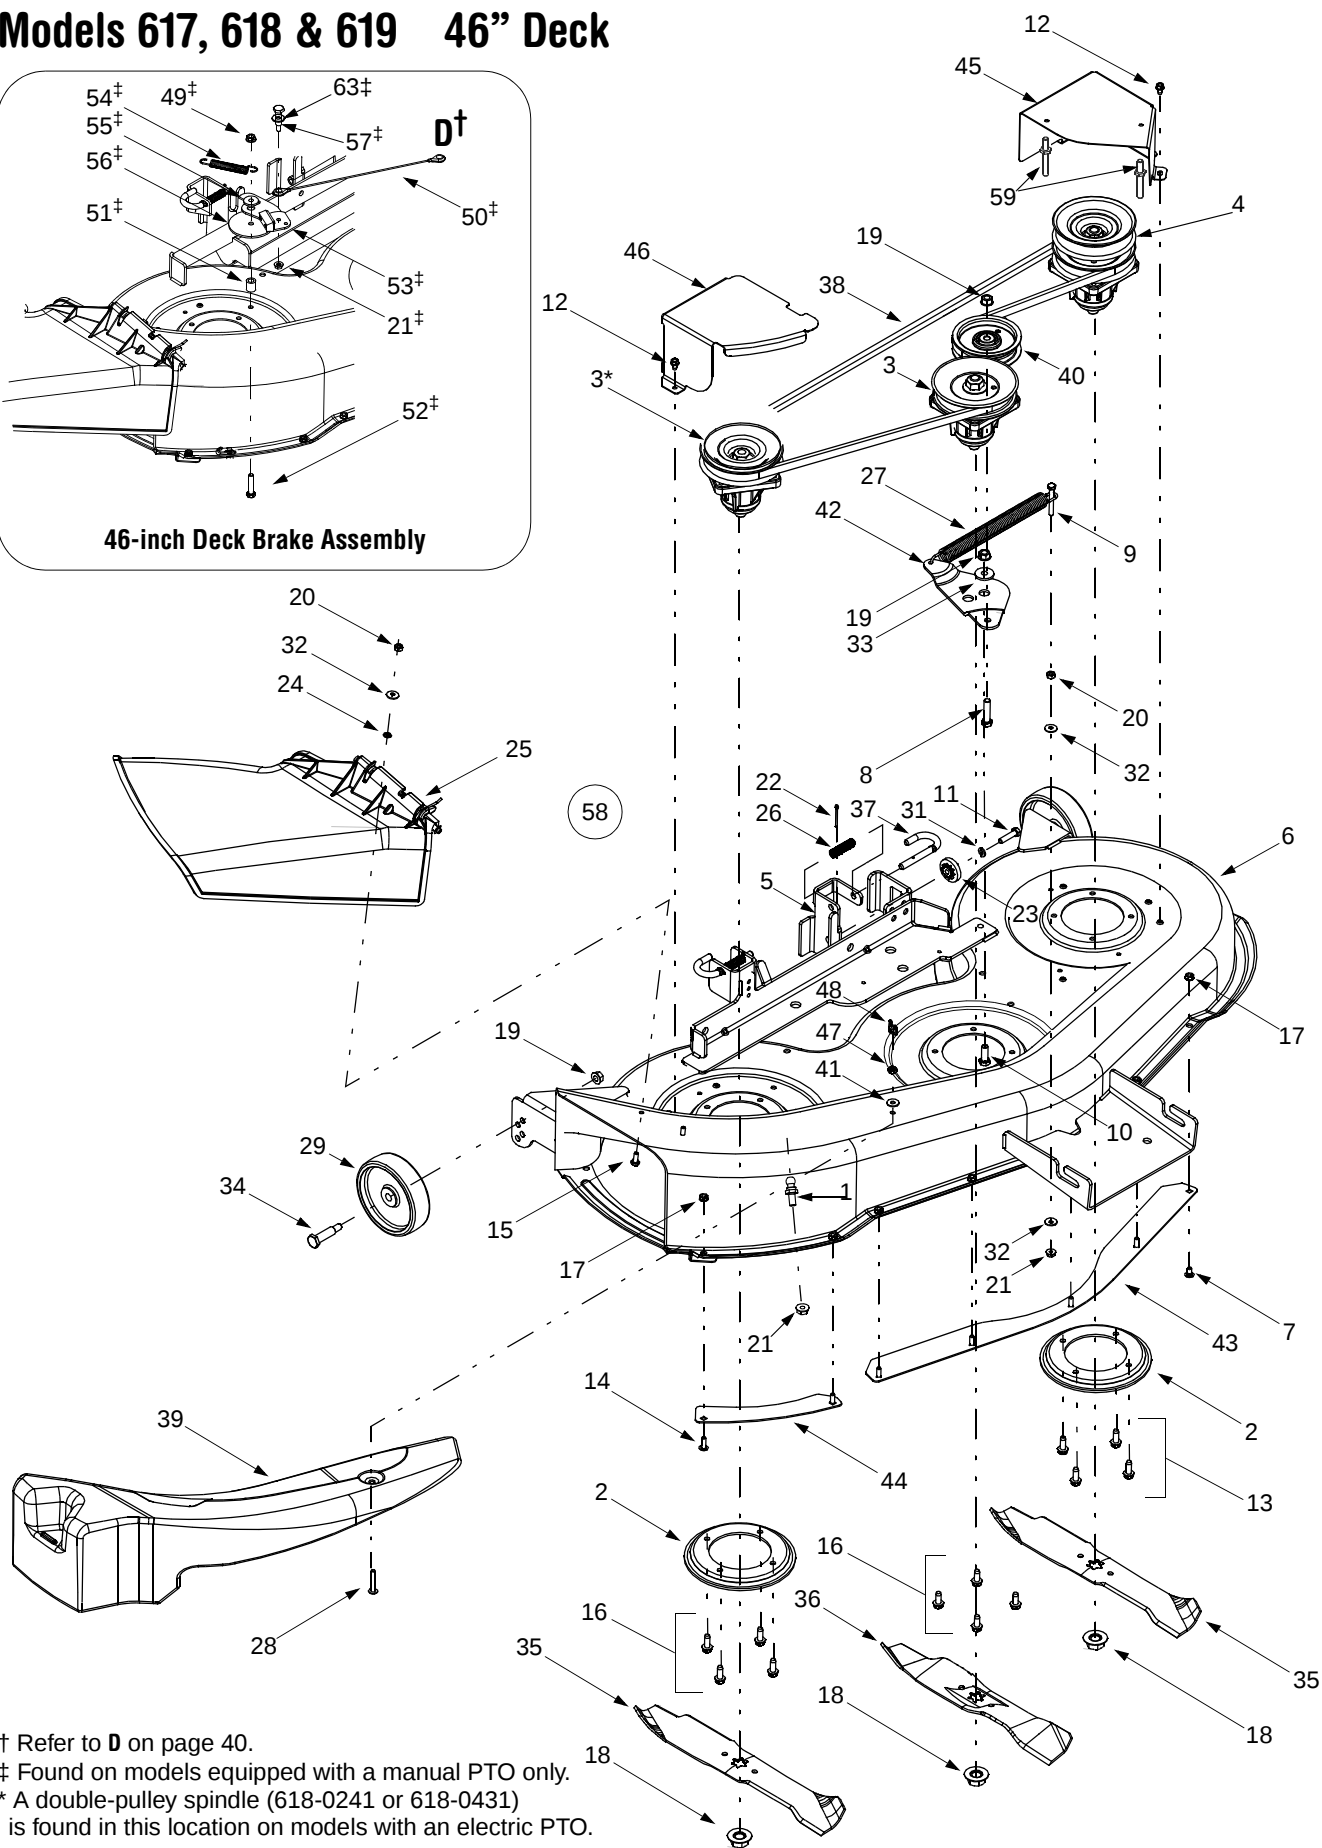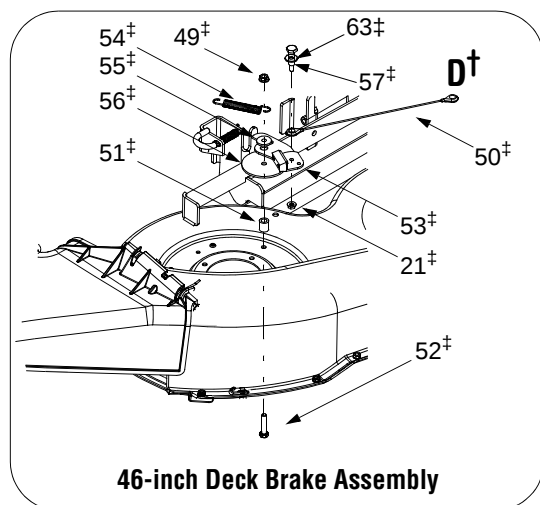

† Refer to **D** on page 40.

‡ Found on models equipped with a manual PTO only.

\* A double-pulley spindle (618-0241 or 618-0431) is found in this location on models with an electric PTO.

## Models 617, 618 & 619

| REF. NO. | PART NO.  | DESCRIPTION                                          | REF. NO. | PART NO.  | DESCRIPTION                                          |
|----------|-----------|------------------------------------------------------|----------|-----------|------------------------------------------------------|
| 1        | 711-04069 | Grass Catcher Pin                                    | 29       | 734-0973  | Deck Wheel, 5 x 1.38                                 |
| 2        | 17982     | Spindle Reinforcement Plate                          | 31       | 736-0119  | Lock Washer, 5/16                                    |
| 3        | 618-0240A | Spindle Assembly, 5.0 Dia.                           | 32       | 736-0270  | Bell Washer,.265 x .75 x .062                        |
|          | 618-0430A | Spindle Assembly, 5.0 Dia. w/ Fitting                | 33       | 738-0347  | Shoulder Spacer,.625 x 1.16                          |
|          | 756-1187  | Pulley Only                                          | 34       | 738-0373  | Shoulder Screw                                       |
| 4        | 618-0594  | Double Pulley Spindle Assembly                       | 35       | 742-0611  | Three-in-one Blade, Star Center, 16.28"              |
|          | 618-0596  | Double Pulley Spindle Ass'y w/ Fitting               | 36       | 742-0612  | Three-in-one Blade, Star Center, 14.88"              |
|          | 618-0241  | Double Pulley Spindle Ass'y -Electric PTO            | 37       | 747-1116  | Deck Release Pin                                     |
|          | 618-0431  | Double Pulley Spindle Ass'y w/Fitting - Electric PTO | 38       | 754-0349  | Deck Belt, Poly                                      |
|          | 756-0603  | Pulley Only                                          | 39       | 731-1636† | Mulch Plug                                           |
| 5        | 683-0254  | Deck Adjustment Bracket w/ Weld Nut                  | 40       | 756-0627B | Idler Pulley, 3.5                                    |
| 6        | 683-0265C | 46-inch Deck Shell                                   | 41       | 736-0173† | Flat Washer,.28 x .74 x .063                         |
| 7        | 710-0167  | Carriage Screw, 1/4-20 x.50                          | 42       | 783-0139A | Idler Bracket                                        |
| 8        | 710-0344  | Hex Cap Screw, 3/8-16 x 1.5                          | 43       | 783-0141  | Center Deck Skirt                                    |
| 9        | 710-0501  | Hex Cap Screw, 1/4-20 x 2.0                          | 44       | 783-0142  | RH Deck Skirt                                        |
| 10       | 710-0514  | Hex Cap Screw, 3/8-16 x 1.0                          | 45       | 783-1348  | LH Belt Cover                                        |
| 11       | 710-0528  | Hex Cap Screw, 5/8-18 x 1.25                         | 46       | 783-0805A | RH Belt Cover                                        |
| 12       | 710-0599  | Self-tapping Screw,1/4-20 x.5                        |          | 17258C    | RH Belt Cover (Manual PTO)                           |
| 13       | 710-0650  | Self-tapping Screw,15/16-18 x.875                    | 47       | 712-3006† | Hex Nut, 1/4-20                                      |
| 14       | 710-0703  | Hex Screw, 1/4-20 x.75                               | 48       | 712-3087† | Wing Nut, 1/4-20                                     |
| 15       | 710-0751  | Hex Cap Screw, 1/4-20 x.62                           | 49       | 712-3004A | Hex Nut, 5/16-18                                     |
| 16       | 710-1260A | Self-tapping Screw, 5/16-18 x.75                     | 50       | 746-1107  | Bracket Cable, 12"                                   |
| 17       | 712-0271  | Hex Sems Nut, 1/4-20                                 | 51       | 750-1320  | Spacer,.385 x .625 x .70                             |
| 18       | 712-0417A | Hex Flange Nut, 5/8-18                               | 52       | 710-0805  | Hex Cap Screw, 5/16-18 x 1.5                         |
| 19       | 712-0431  | Flange Lock Nut, 3/8-16                              | 53       | 17116     | Deck Brake Assembly                                  |
| 20       | 712-3006  | Hex Nut, 1/4-20                                      | 54       | 732-0429A | Extension Spring,.5 x 3.97                           |
| 21       | 712-3027  | Hex Flange Lock Nut, 1/4-20                          | 55       | 748-0324  | Shoulder Spacer                                      |
| 22       | 714-0470  | Cotter Pin, 1/8 x 1.25                               | 56       | 736-0418A | Flat Washer,.34 x 2.25 x .1                          |
| 23       | 717-1553B | Deck Adjustment Gear                                 | 57       | 711-1554  | Pin, 1/4-20                                          |
| 24       | 726-0233  | Push Nut.25 x.5                                      | 58       | 753-0872  | Deck Assembly Complete, Manual PTO (w/o Mulch Kit)   |
| 25       | 731-1032B | Side Discharge Chute Assembly                        |          | 753-0874  | Deck Assembly Complete, Electric PTO (w/o Mulch Kit) |
| 26       | 732-0306  | Compression Spring,.406 x .531 x 1.75                | 59       | 711-0993  | Belt Guard Pin                                       |
| 27       | 732-0594A | Extension Spring,.91 x 7.3                           | 63       | 736-0140  | Flat Washer,.385 x .62 x .06                         |
| 28       | 710-0578† | Screw, 1/4-20 x 1.5                                  |          |           |                                                      |

†If Equipped

**IMPORTANT:** For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.