


Models 617, 618 & 619

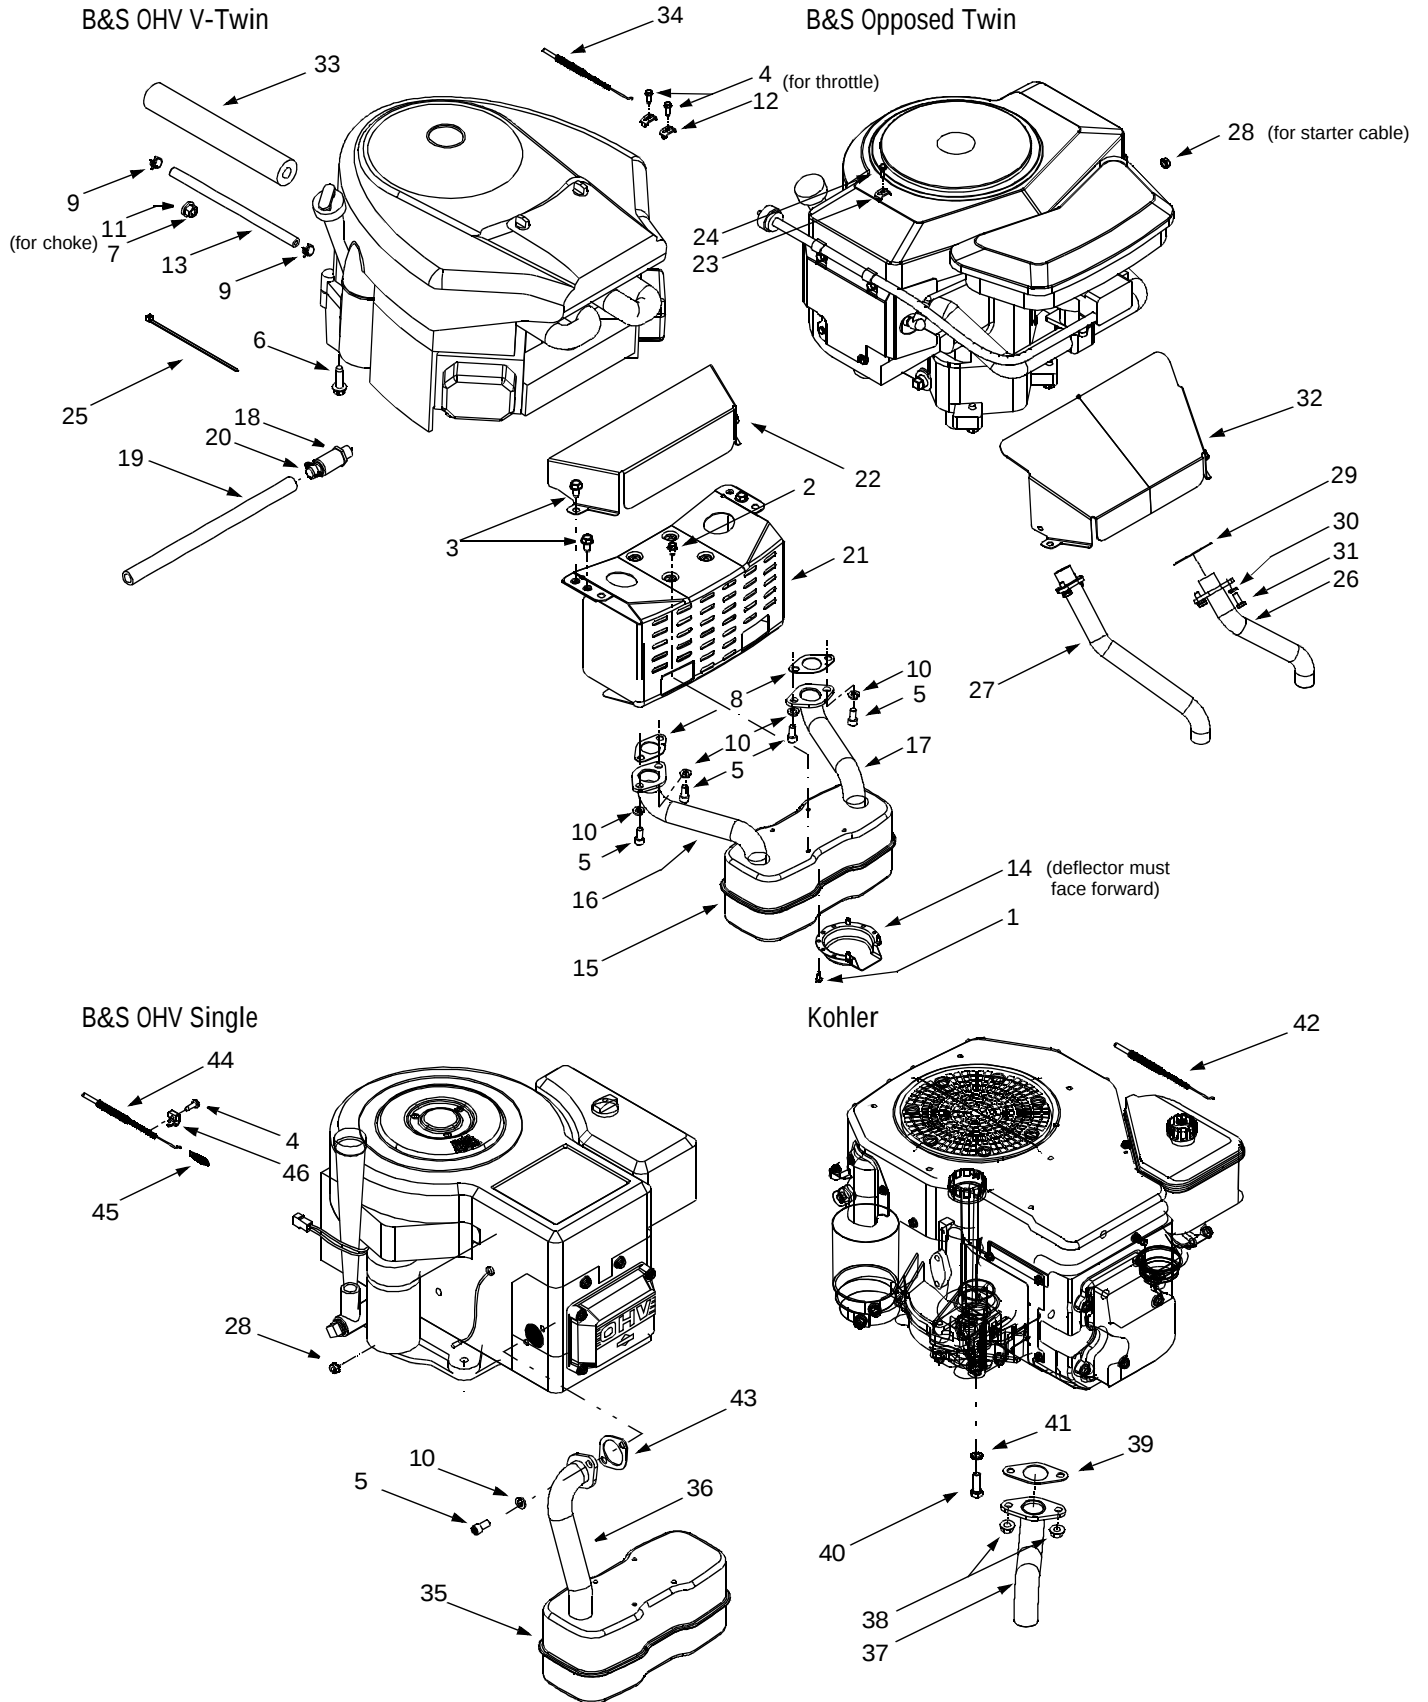


Models 617, 618 & 619

REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Self-tapping Screw, #8-18 x .50
2	710-0599	Self-tapping Screw, 1/4-20 x .50
3	710-0604A	Self-tapping Screw, 5/16-18 x .625
4	710-1237	Screw, #10-32 x .625 (B&S OHV V-Twin)
5	710-1314A	Socket Cap Screw, 5/16-18 x .625
6	710-1315	Self-tapping Screw, 3/8-16 x 1.25
7	712-3017	Hex Nut, 3/8-16
8	721-0460	Exhaust Gasket (B&S OHV V-Twin)
9	726-0205	Hose Clamp
10	736-0119	Lock Washer, 5/16
11	736-0300	Lock Washer, .406 x .875 x .059
12	751B221535	Casing Clamp (B&S OHV V-Twin)
13	751-0535	Fuel Line Hose
14	751-0564	Muffler Deflector
15	751-0616	Muffler, Twin Inlet (B&S Opposed Twin & OHV V-Twin)
16	751-0650	RH Exhaust Pipe (B&S OHV V-Twin)
17	751-0651	LH Exhaust Pipe (B&S OHV V-Twin)
18	751-3140	Oil Drain Valve
19	751-3141	Oil Drain Hose
20	751-3142	Oil Drain Cap
21	783-0615B	Muffler Heat Shield
22	783-0625C	Engine Heat Shield (B&S OHV V-Twin)
23	726-0272	Clamp, 9/16 (B&S Opposed Twin)
24	712-0779A	Screw, #10-16 x .5 (B&S Opposed Twin)
25	725-0157	Cable Tie
26	751-0623	LH Exhaust Pipe (B&S Opposed Twin)
27	751-0624	RH Exhaust Pipe (B&S Opposed Twin)
28	712-0271	Hex Sems Nut, 1/4-20 (B&S Opposed Twin & OHV Single)
29	721-0346	Exhaust Gasket (B&S Opposed Twin)
30	736-0329	Lock Washer, 1/4 (B&S Opposed Twin)
31	710-3015	Hex Screw, 1/4-20 x .750 (B&S Opposed Twin)
32	783-0357B	Heat Shield (B&S Opposed Twin)
33	722-0263	Foam, .625 x 1.5 x 10 (fits over fuel line)
34	746-1086	Throttle Cable (B&S Opposed Twin & OHV V-Twin)
35	751-0617	Muffler, Single Inlet (B&S OHV Single & Kohler)
36	751-0619	Exhaust Pipe (B&S OHV Single)
37	751-0621	Exhaust Pipe (Kohler)
38	712-3086	Flange Nut, 8mm (Kohler)
39	721-0375	Exhaust Gasket (Kohler)
40	710-3206A	Hex Cap Screw, 8mm (Kohler)
41	736-0607	External Lock Washer (Kohler)
42	746-1087	Throttle Cable (Kohler)
43	721-0208	Exhaust Gasket (B&S OHV Single)
44	746-1084	Throttle Cable (B&S OHV Single)
45	732-0966	Extension Spring, .275 x 1.25 (B&S OHV Single)
46	751B213146	Casing Clamp (B&S OHV Single)

NOTE: Engine accessory parts are applicable to all 617, 618 & 619 model tractors except where otherwise noted.

Models 617 & 618

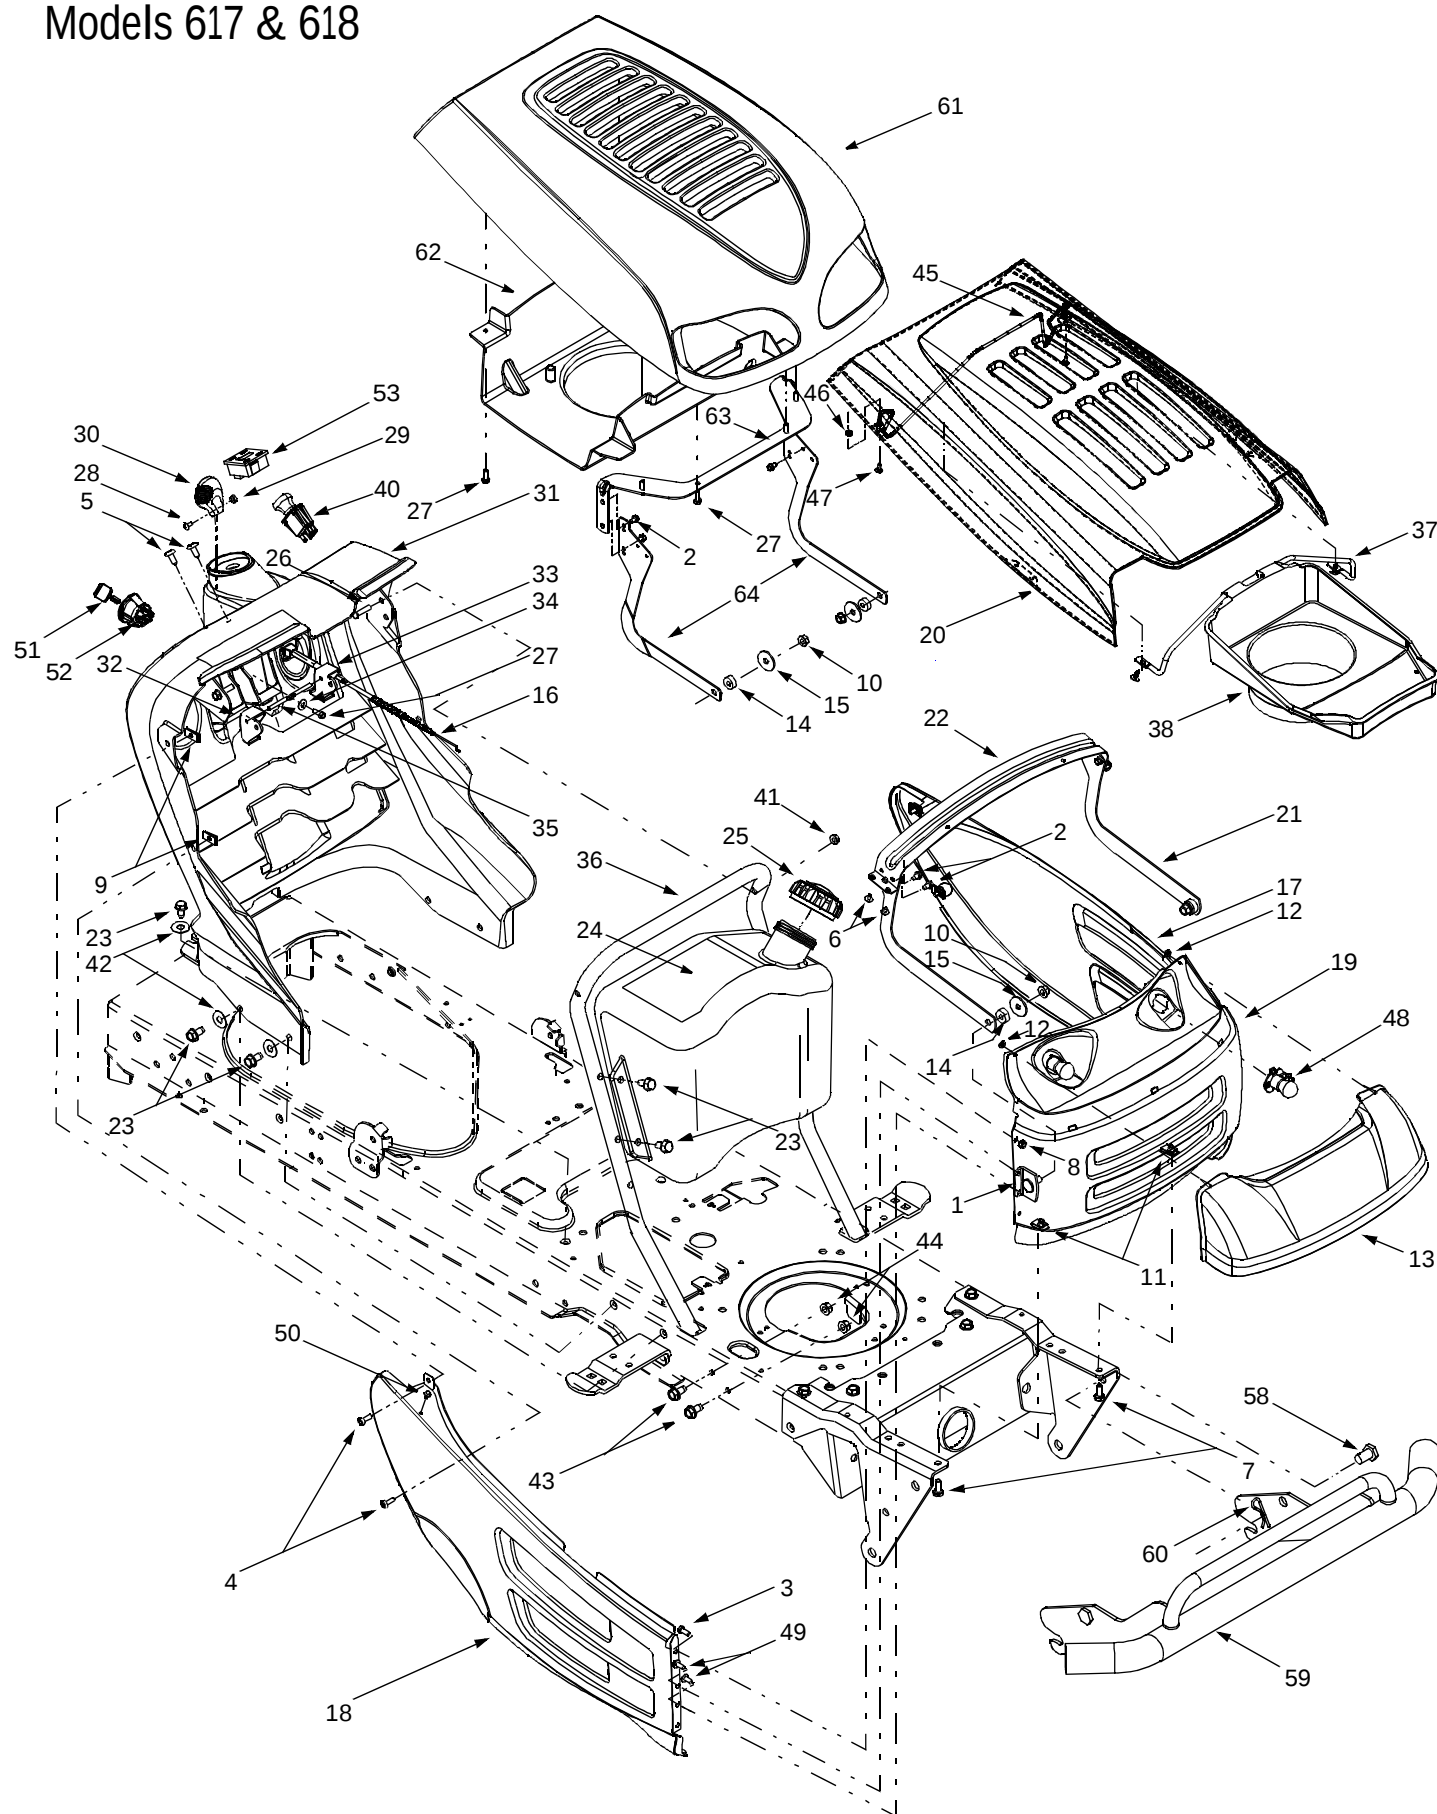


Models 617 & 618

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	683-0195	Bracket Assembly (8-style)	38	731-2247A	Hood Plenum (Models with B&S OHV V-Twin)
2	710-0599	Self-tapping Screw, 1/4-20 x .5		731-2248	Hood Plenum (Models with B&S Opposed Twin)
3	710-0751	Hex Cap Screw, 1/4-20 x .62		N/A	Hood Plenum (Models with B&S OHV Single or Kohler)
4	710-0924	Phillips Pan Screw, 1/4-20 x .75	39	726-3046	Ratchet Clip
5	710-1017	Truss Phillips Screw, 1/4-20 x .625	40	725-1752	Electric PTO Switch
6	710-1268	Screw, #10-16 x .375	41	712-3027	Hex Flange Lock Nut, 1/4-20
7	710-0376	Hex Cap Screw, 5/16-18 x 1.0	42	736-3078	Flat Washer, .349 x 1.0 x .063
8	712-0271	Hex Sems Nut, 1/4-20	43	710-1238	Screw, 5/16-18 x .875 (Grade 5)
9	712-0292	U-type Speed Nut, 1/4-20	44	712-3004A	Hex Nut, 5/16-18
10	712-0431	Flange Lock Nut, 3/8-16	45	747-1215A	Hood Latch
11	726-0211	U-nut, 5/16-18	46	712-0272	Hex Sems Nut, #10-32
12	726-0293	Retainer Nut, 3/8	47	710-0473	Machine Screw, #10-24
13	731-1854A	Headlight Lens (8-style)	48	625-0051	Headlight Assembly
14	735-0126	Rubber Washer, .87 x .33	49	710-0896	Hex Index Washer Screw, 1/4-14 x .0625
15	736-3036	Flat Washer, .406 x 1.5 x 11GA	50	735-0199A	Rubber Bumper
16	746-1085	Choke Knob/Cable (Models with any B&S Twin)	51	725-1745	Ignition Key w/ plastic cover
	746-1088	Choke Knob/Cable (Models with Kohler)		725-1744	Ignition Key w/o plastic cover
17	783-0475A	LH Side Panel (8-style)	52	725-1741	Ignition Switch
18	783-0476B	RH Side Panel (8-style)	53	725-1976	Systems Indicator Monitor w/ Hour Meter
19	783-0477A	Grill (8-style)		725-1758	Systems Indicator Monitor w/ Ammeter
20	783-0478A	Hood (8-style)	58	711-0332	Clevis Pin, .50 x .78
21	783-1309	Hood Hinge Bracket	59	768-0010	Bumper Assembly
22	783-0553A	Hood Support Bracket	60	714-0145	Internal Cotter Pin
23	710-0604A	Self-tapping Screw, 5/16-18 x .625	61	731-2300	Hood, Red (7-Style)
24	751-0658B	Fuel Tank, Three Gallon		731-2301	Hood, Green (7-Style)
	751-0659A	Fuel Tank, Two Gallon (Shown)		731-2302	Hood, Black (7-Style)
25	751-0603	Fuel Cap (Fits Either Tank)		731-2303	Hood, Charcoal Grey (7-Style)
26	710-0809	Self-tapping Screw, 1/4-20 x 1.25	62	731-2306	Hood Plenum
27	710-0895	Self-tapping Screw, 1/4-15 x .75	63	783-1034	Hood Bracket (7-Style)
28	710-3217	Truss Phillips Screw, #8-32 x .375	64	783-1495	Hood Side Bracket (7-Style)
29	712-0142	Hex Nut, #8-32	—	629-0309	Headlight Wire Harness
30	731-1857	Throttle Control Knob	—	629-1067	Tractor Wire Harness (Models with Hour Meter & Electric PTO)
31	731-2225C	Dash Panel (Models w/ Electric PTO)		629-1068	Tractor Wire Harness (Kohler) (Models with Hour Meter & Electric PTO)
	731-2122C	Dash Panel (Models w/ Manual PTO)	—	629-1071	Tractor Wire Harness (Models with Hour Meter & Manual PTO)
32	731-2226	Cruise Control Button	—	629-1072	Tractor Wire Harness (Models with Ammeter & Manual PTO)
	731-2228	Cruise Cover (Models w/o Cruise Control)			
33	731-2227	Parking Brake Button			
34	736-0142	Flat Washer, 9/32 x 1/2 x 1/16			
35	747-1196	Brake/Cruise Pivot Rod			
36	749-1087A	Dash Support Tube			
37	747-1184	Hood Plenum Support Rod			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model 619

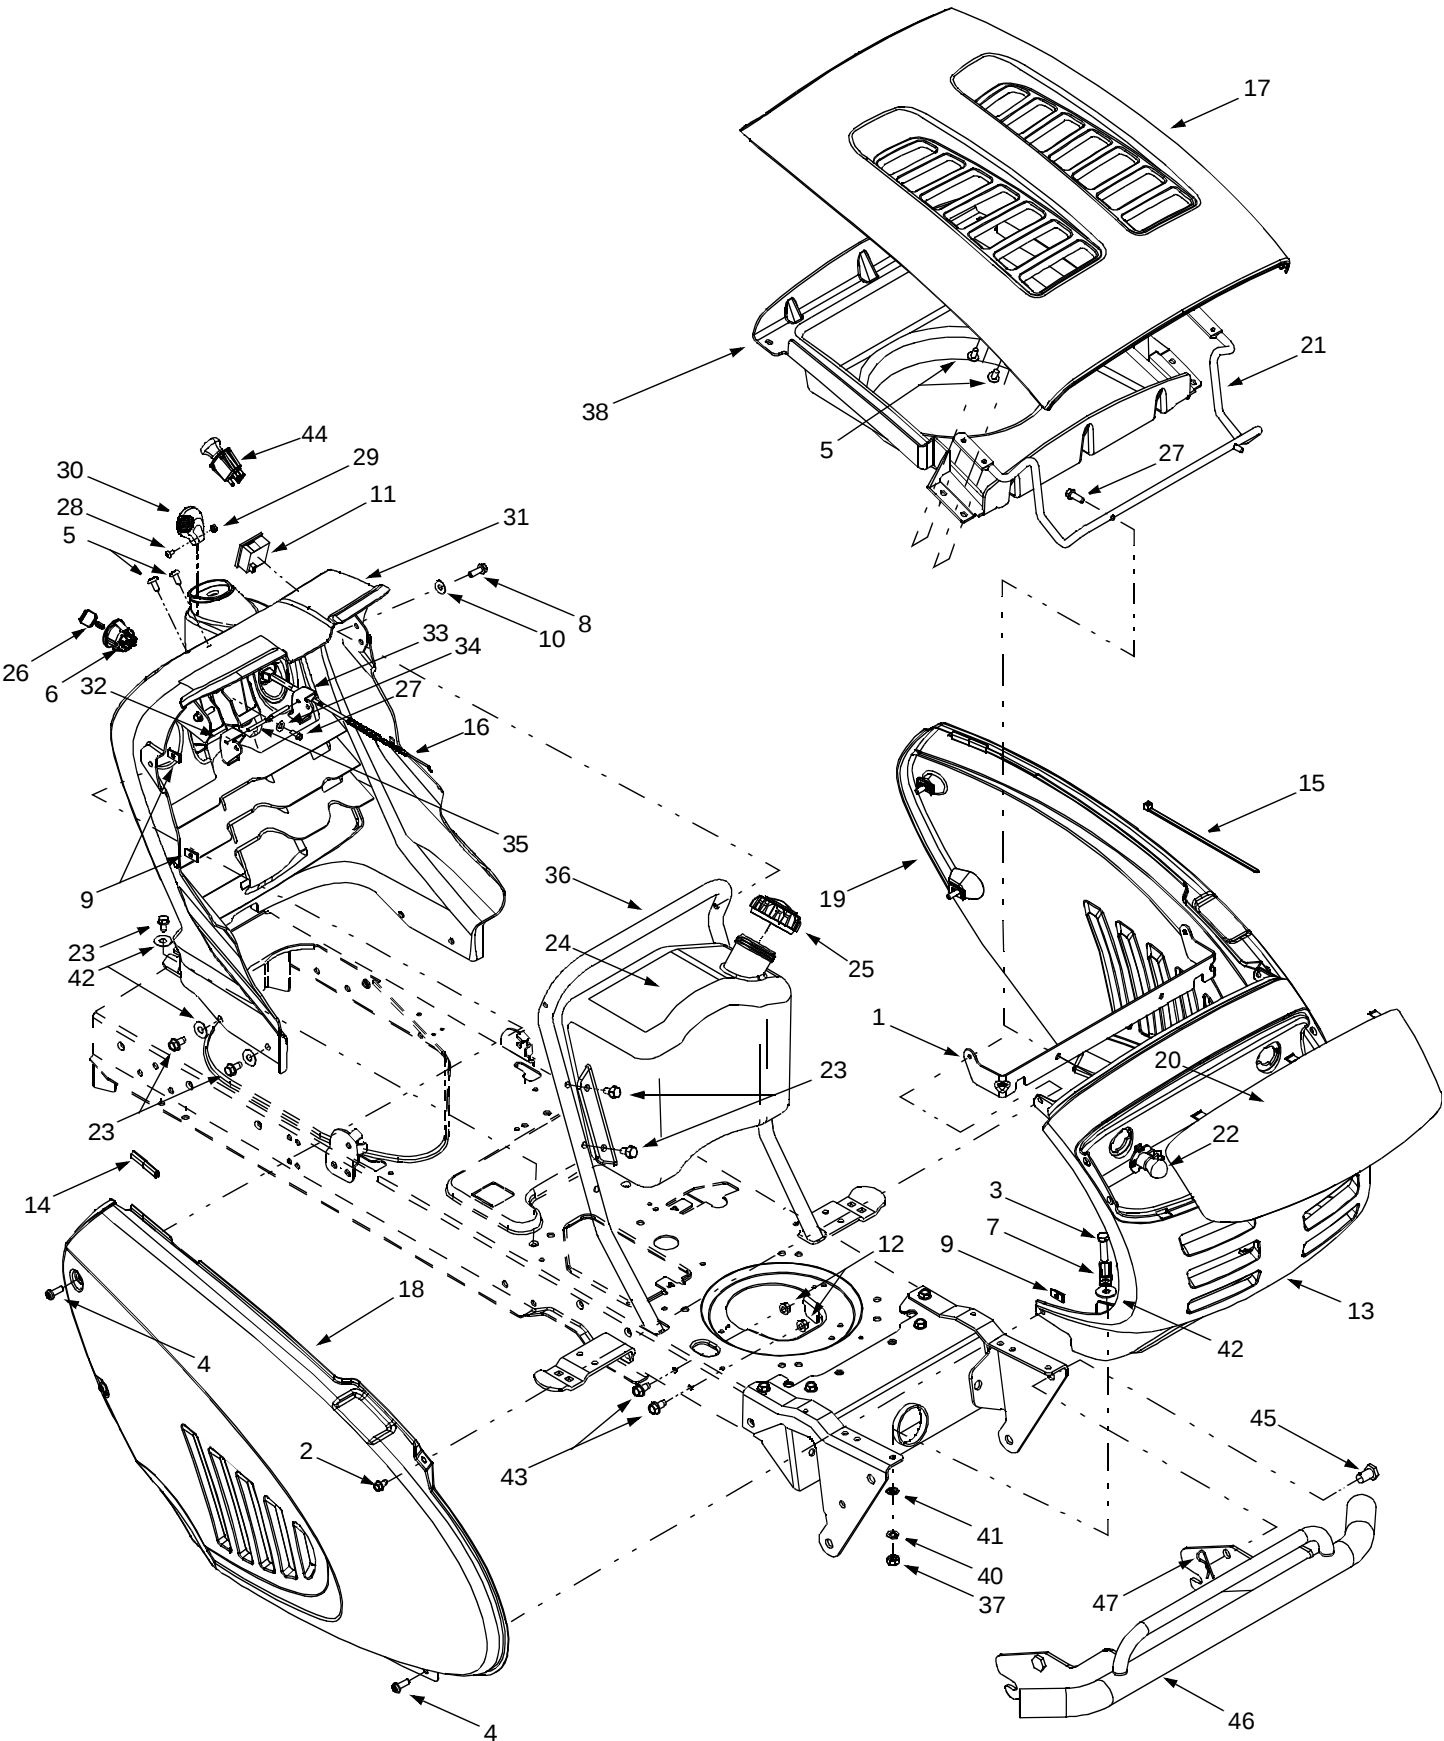


Model 619

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	783-1346	Grill Support Bracket (9-style)	30	731-1857	Throttle Control Knob
2	710-0599	Self-tapping Screw, 1/4-20 x .5	31	731-2225C	Dash Panel (Models w/ Electric PTO)
3	710-0528	Hex Cap Screw, 5/16-18 x 1.25		731-2122C	Dash Panel (Models w/ Manual PTO)
4	710-0924	Phillips Pan Screw, 1/4-20 x .75	32	731-2226	Cruise Control Button
5	710-1017	Truss Phillips Screw, 1/4-20 x .625	33	731-2227	Parking Brake Button
6	725-1741	Ignition Switch	34	736-0142	Flat Washer, 9/32 x 1/2 x 1/16
7	726-0272	Clamp, 9/16	35	747-1196	Brake/Cruise Pivot Rod
8	710-0642	Self-tapping Screw, 1/4-20 x .75	36	749-1087A	Dash Support Tube
9	712-0292	U-type Speed Nut, 1/4-20	37	712-3010	Hex Nut, 5/16-18
10	736-0270	Bell Washer, .265 x .75 x .062	38	731-2269	Hood Plenum (Models with Kohler)
11	725-1976	Systems Indicator Monitor w/ Hour Meter		731-2270	Hood Plenum
	725-1758	Systems Indicator Monitor w/ Ammeter			(Models with B&S OHV V-Twin)
12	712-3004A	Hex Nut, 5/16-18		731-2271	Hood Plenum
13	731-2119A	Grille (9-style)			(Models with B&S Opposed Twin)
14	731-0511	Trim Strip, 4		N/A	Hood Plenum
15	725-0175	Cable Tie, 3/16 x .05 x 7.4			(Models with B&S OHV Single)
16	746-1085	Choke Knob/Cable	39	726-3046	Ratchet Clip
		(Models with any B&S Twin)	40	736-0119	Lock Washer, 5/16
	746-1088	Choke Knob/Cable (Models with Kohler)	41	726-0201	Speed Nut, .3125
17	783-0783	Hood (9-style)	42	736-3078	Flat Washer, .349 x 1.0 x .063
18	783-0784	RH Side Panel (9-style)	43	710-1238	Screw, 5/16-18 x .875 (Grade 5)
19	783-0785	LH Side Panel (9-style)	44	725-1752	Electric PTO Switch
20	731-2118A	Headlight Lens (9-style)	45	711-0332	Clevis Pin, .50 x .78
21	747-1162	Hood Hinge Rod	46	768-0010	Bumper Assembly
22	625-0051	Headlight Assembly	47	714-0145	Internal Cotter Pin
23	710-0604A	Self-tapping Screw, 5/16-18 x .625	—	629-0309	Headlight Wire Harness
24	751-0658B	Fuel Tank, Three Gallon	—	629-1067	Tractor Wire Harness
	751-0659A	Fuel Tank, Two Gallon (Shown)			(Models with Hour Meter & Electric PTO)
25	751-0603	Fuel Cap	—	629-1068	Tractor Wire Harness (Kohler)
26	725-1745	Ignition Key w/ plastic cover			(Models with Hour Meter & Electric PTO)
	725-1744	Ignition Key w/o plastic cover	—	629-1071	Tractor Wire Harness
27	710-0895	Self-tapping Screw, 1/4-15 x .75			(Models with Hour Meter & Manual PTO)
28	710-3217	Truss Phillips Screw, #8-32 x .375	—	629-1072	Tractor Wire Harness
29	712-0142	Hex Nut, #8-32			(Models with Ammeter & Manual PTO)

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 617, 618 & 619

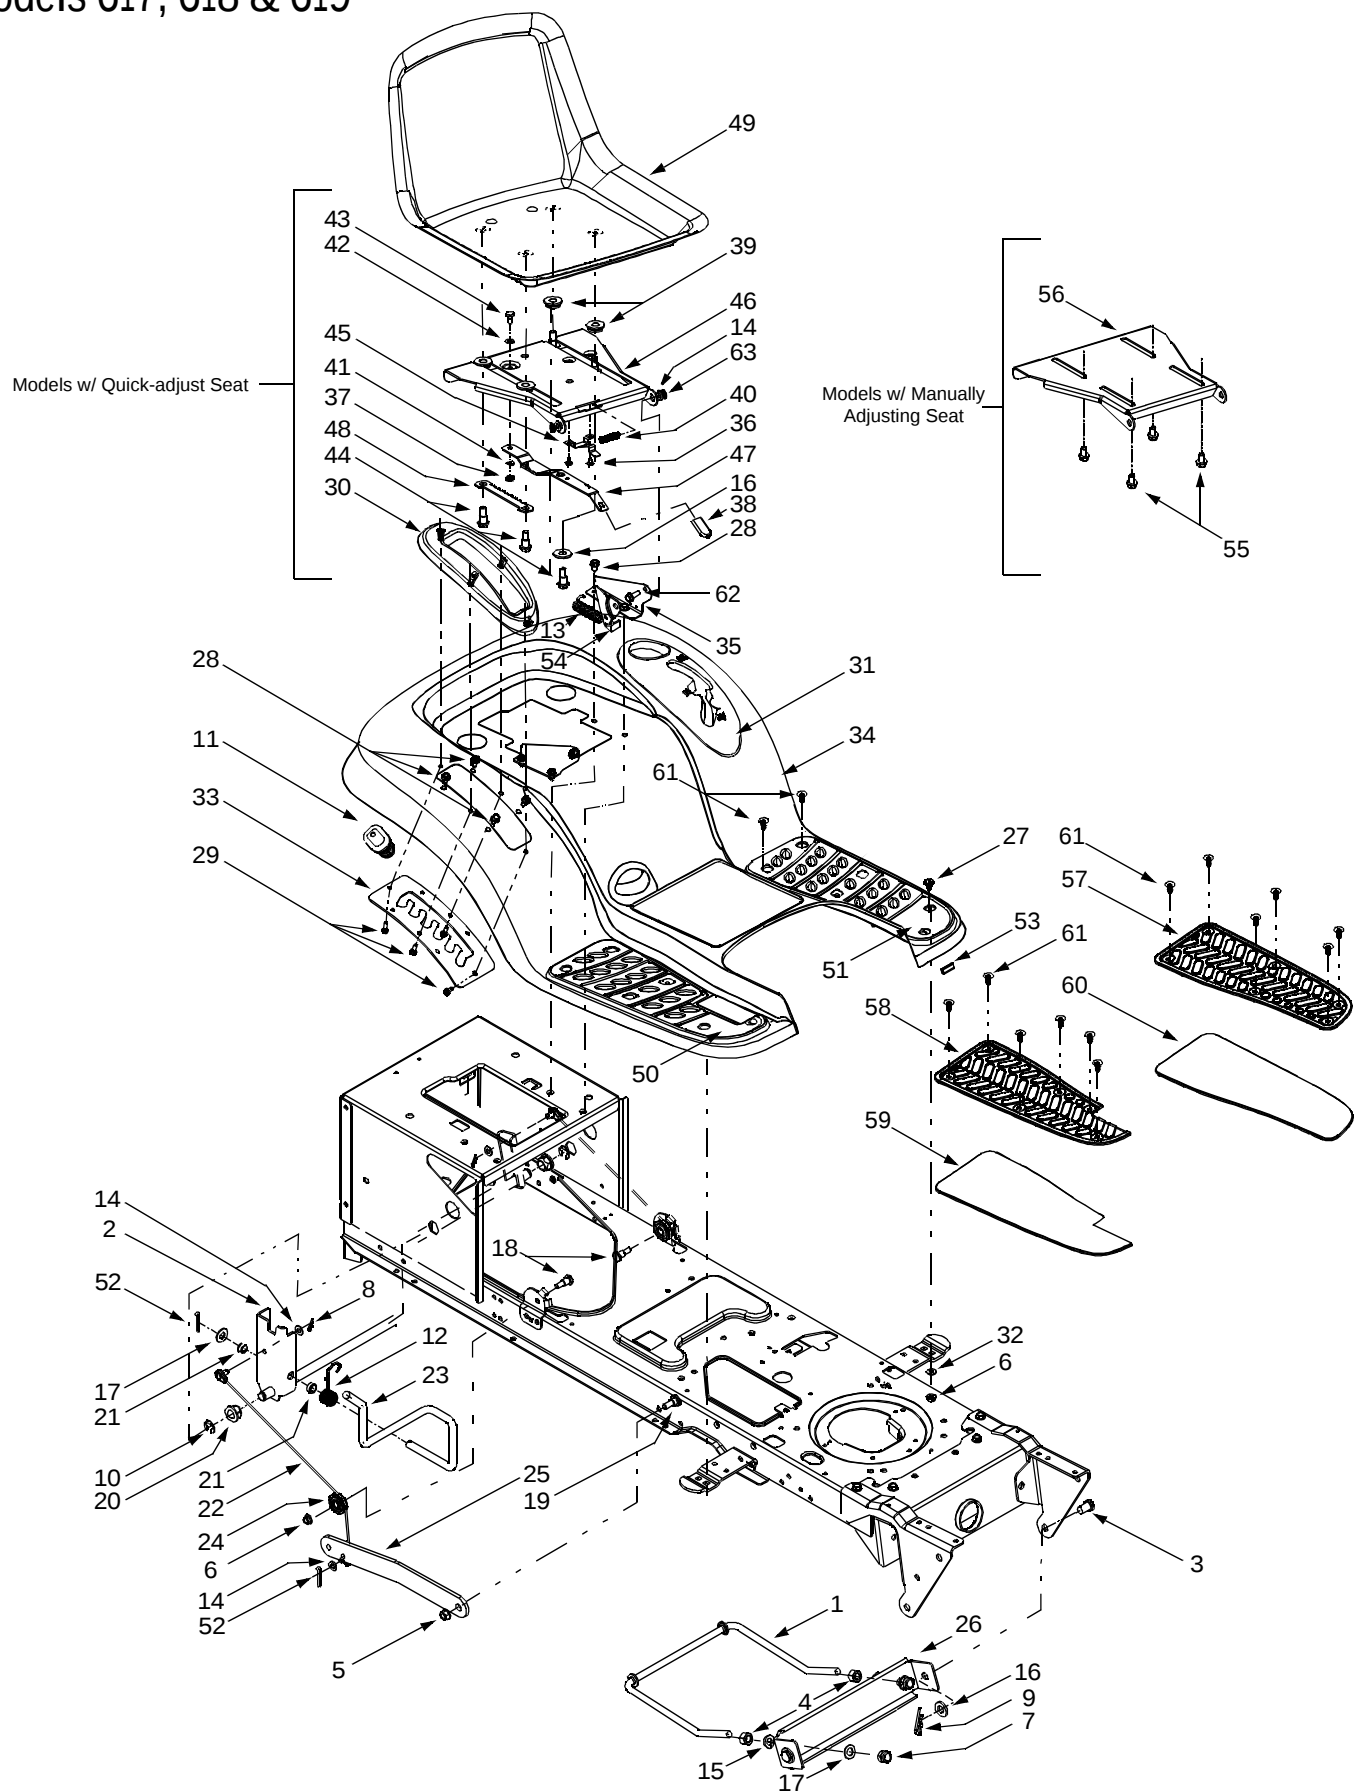

Models 617, 618 & 619


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	747-1130B	Deck Stabilizer Rod	34	783-1279	Fender, 4-Style† (Shown)
2	683-0197B	Lift Shaft Assembly		783-0839B	Fender, 7-Style‡
3	711-0332	Clevis Pin, .5 x .78	35	783-1489	Seat Mounting Bracket
4	712-0206	Hex Nut, 1/2-13	36	710-1268	Screw, #10-16 x .375
5	712-0431	Flange Lock Nut, 3/8-16	37	712-3027	Hex Flange Lock Nut, 1/4-20
6	712-3004A	Flange Lock Nut, 5/16-18	38	720-0309A	Seat Adjuster Grip
7	712-3083	Hex Nut, 1/2-13	39	731-1989	Spacer
8	714-0104	Internal Cotter Pin	40	732-0499	Compression Spring, .41 x 1.5
9	714-0145	Internal Cotter Pin	41	736-0175	Spring Washer, .265 x .562 x .025
10	716-0106	E-ring	42	736-0204	Flat Washer, .344 x .62 x .03
11	720-0311	Handle Grip	43	738-0137A	Shoulder Screw, .340 x .285, 1/4-20
12	732-0874	Torsion Spring	44	738-1007	Shoulder Screw, .50 x .50, 3/8-16
13	732-1184	Extension Spring, .84 x 4.6	45	783-0611	Seat Stop
14	736-0275	Flat Washer, 5/16	46	783-0738	Seat Pivot Bracket
15	736-0921	Lock Washer, 1/2	47	783-0739	Seat Adjustment Lever
16	736-3019	Flat Washer, .31 x 1.062 x .134	48	783-0753	Seat Adjustment Selector
17	736-3084	Flat Washer, .51 x 1.12 x .06	49	757-0348A	High Back Seat, Black
18	738-0138A	Hex Cap Screw, 5/16-18 x .62		757-0350	High Back Seat w/ Drain Holes, Black
19	738-0143	Shoulder Screw, 3/8-16		757-0360A	Medium Back Seat, Black
20	741-0225	Hex Flange Bearing	50	735-0656	RH Foot Pad, Rubber (4-Style Fender)
21	741-0715	Snap Flange Bearing	51	735-0657	LH Foot Pad, Rubber (4-Style Fender)
22	746-0968	Lift Cable, 16.16	52	714-0111	Cotter Pin
23	747-1111A	Lift Handle	53	731-0511	Trim Strip
24	756-1154	Roller Pulley	54	783-0209A	Seat Lift Bracket
25	783-0678A	Arm Lift	55	710-0870	Hex Head Washer Screw, 3/8-16 x .625
26	783-0720A	Deck Stabilizer Bracket	56	783-0740	Seat Pivot Bracket, Manually Adjusted
27	710-0260A	Carriage Bolt, 5/16 x .62	57	735-0672	RH Foot Pad, Rubber (7-Style Fender)
28	710-0604A	Self-tapping Screw, 5/16-18 x .625	58	735-0673	LH Foot Pad, Rubber (7-Style Fender)
29	710-0895	Self-tapping Screw, 1/4-15 x .75	59	723-0484	RH Foot Pad, Grit (7-Style Fender)
30	731-1990	Lift Lever Cover	60	735-0483	LH Foot Pad, Grit (7-Style Fender)
31	731-2104A	Shift Lever Cover w/ Cup Holder	61	726-3046	Ratchet Clip
32	736-3078	Flat Washer, .349 x 1.0 x .063	62	738-0296	Shoulder Screw, .437 x .286
33	783-0677	Lift Adjustment Bracket	63	726-0201	Speed Nut, .3125

†Models equipped with a 4-style fender can accept the shift lever cover w/ cup holder.

‡Models equipped with a 7-style fender cannot accept the shift lever cover w/ cup holder.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 617, 618 & 619 Series

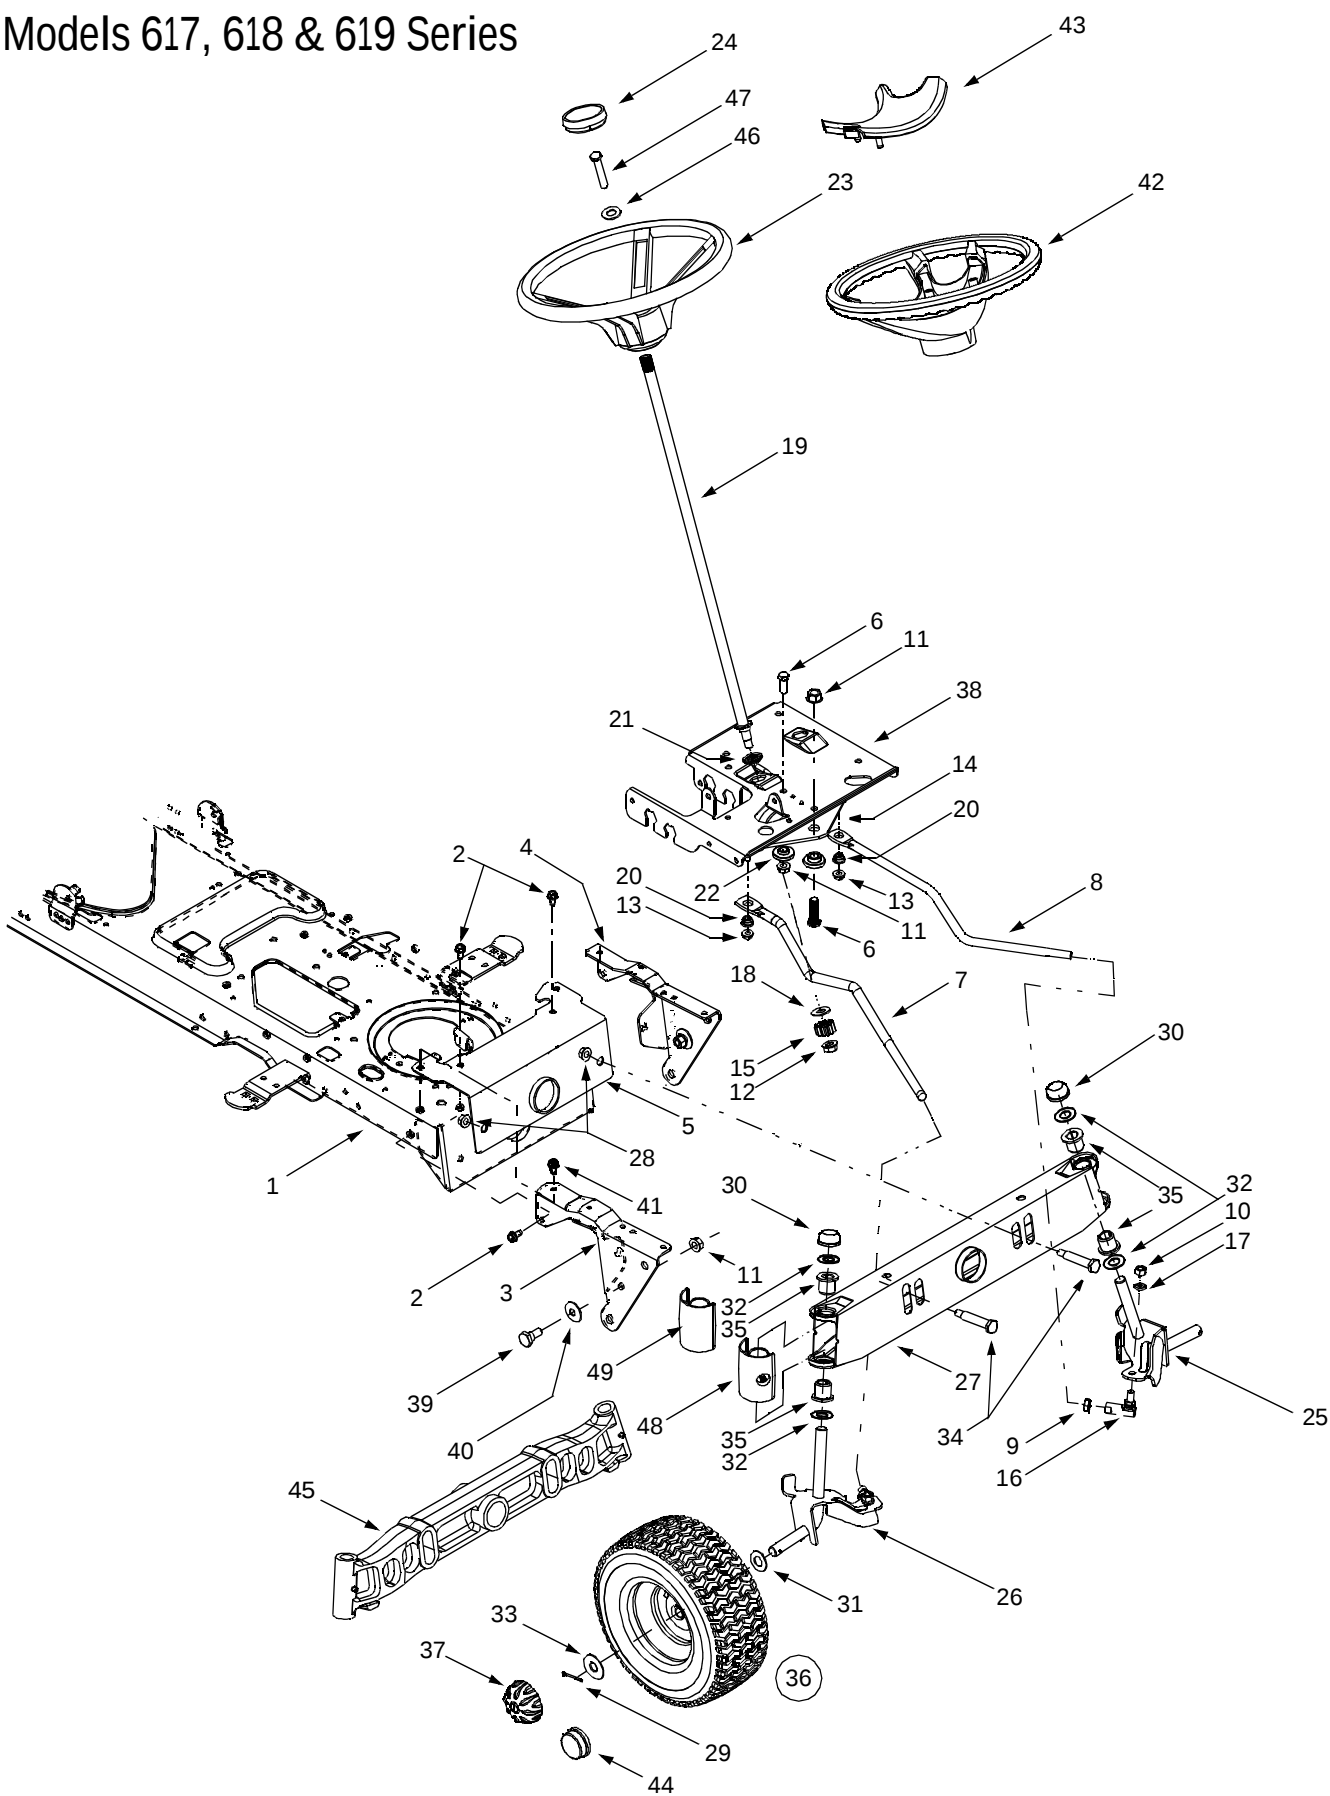

Models 617, 618 & 619


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
2	710-0604A	Self-tapping Screw, 16-18 x .625	31	736-0162	Flat Washer, .64 x 1.0 x .12
3	783-0726A	RH Pivot Support Bracket	32	736-0187	Flat Washer, .64 x 1.24 x .06†
4	783-0727	LH Pivot Support Bracket		736-0316	Flat Washer, .78 x 1.589 x .06‡
5	783-0728	Pivot Bar Bracket	33	736-0285	Flat Washer, .635 x 1.589 x .06
6	710-0723	Hex Cap Screw, 3/8-16 x 1.25 (Grade 5)	34	738-1011	Shoulder Screw, .5 x 2.2, 3/8-16
7	711-1408	RH Drag Link	35	741-0659	Flange Bearing, .632 ID x .937 OD†
8	711-1655	LH Drag Link		741-0660	Flange Bearing, .76 ID x .937 OD‡
9	712-0240	Jam Nut, 7/16-20 (Grade 2)	36	634-0105A	Wheel Assembly, 15 x 6 x 6
10	712-0241	Hex Nut, 3/8-24 (Grade 2)			Square Shoulder
11	712-0431	Flange Lock Nut, 3/8-16		634-0056A	Wheel Assembly, 15 x 6 x 6
12	712-0459	Flange Lock Nut, 7/16-20			Round Shoulder
13	712-3004A	Flange Lock Nut, 5/16-18		634-0172	Rim Assembly Only
14	717-1550D	Steering Gear, 11/90 Ratio		734-0255	Air Valve (Not Shown)
15	717-1554	Steering Pinion Gear		734-1731	Tire Only, Square Shoulder
16	723-0448A	Ball Joint, 7/16-20		734-0864	Tire Only, Round Shoulder
17	736-0169	Lock Washer, 3/8	37	734-2290	Deluxe Hub Cap (Ref. 33 Required)
18	736-3084	Flat Washer, .51 x 1.12 x .06	38	783-0653E	Steering Support Bracket
19	738-1001A	Steering Shaft, .625 OD x 24.4	39	738-0143	Shoulder Screw, 3/8-16
20	741-0475	Plastic Bushing, .38 ID	40	736-0331	Bell Washer, .39 x 1.13 x .062
21	741-0656	Hex Flange Bearing, 5/8	41	710-1260A	Self-tapping Screw, 5/16-18 x .75
22	738-0372B	Shoulder Spacer, .38 ID	42	731-1869	Deluxe Steering Wheel
23	631-0027	Standard Steering Wheel, 13.25	43	731-1904	Steering Wheel Cap, w/ Icon
24	731-0220	Steering Wheel Cap, Round	44	731-0484A	Standard Hub Cap
25	638-0019	LH Axle Assembly, .625 Diameter†			(Ref. 33 Not Necessary)
	638-0021	LH Axle Assembly, .625/.750 Diameter‡	45	719-0399B	Cast Iron Pivot Bar†
26	638-0020	RH Axle Assembly, .625 Diameter†		719-0525B	Cast Iron Pivot Bar‡
	638-0022	RH Axle Assembly, .625/.750 Diameter‡	46	736-0242	Bell Washer, .34 x .872
27	683-0128A	Steel Pivot Bar	47	710-0643	Hex Bolt, 5/16-18 X 1
28	712-0431	Flange Lock Nut, 3/8-16	48	731-1291A	Pivot Bar End Cap w/ Fitting
29	714-0470	Cotter Pin	49	731-1649	Pivot Bar End Cap w/o Fitting
30	726-0214	Push Cap, .625			

†Models equipped with a 42-inch deck.

‡Models equipped with a 46-inch deck.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 617, 618 and 619

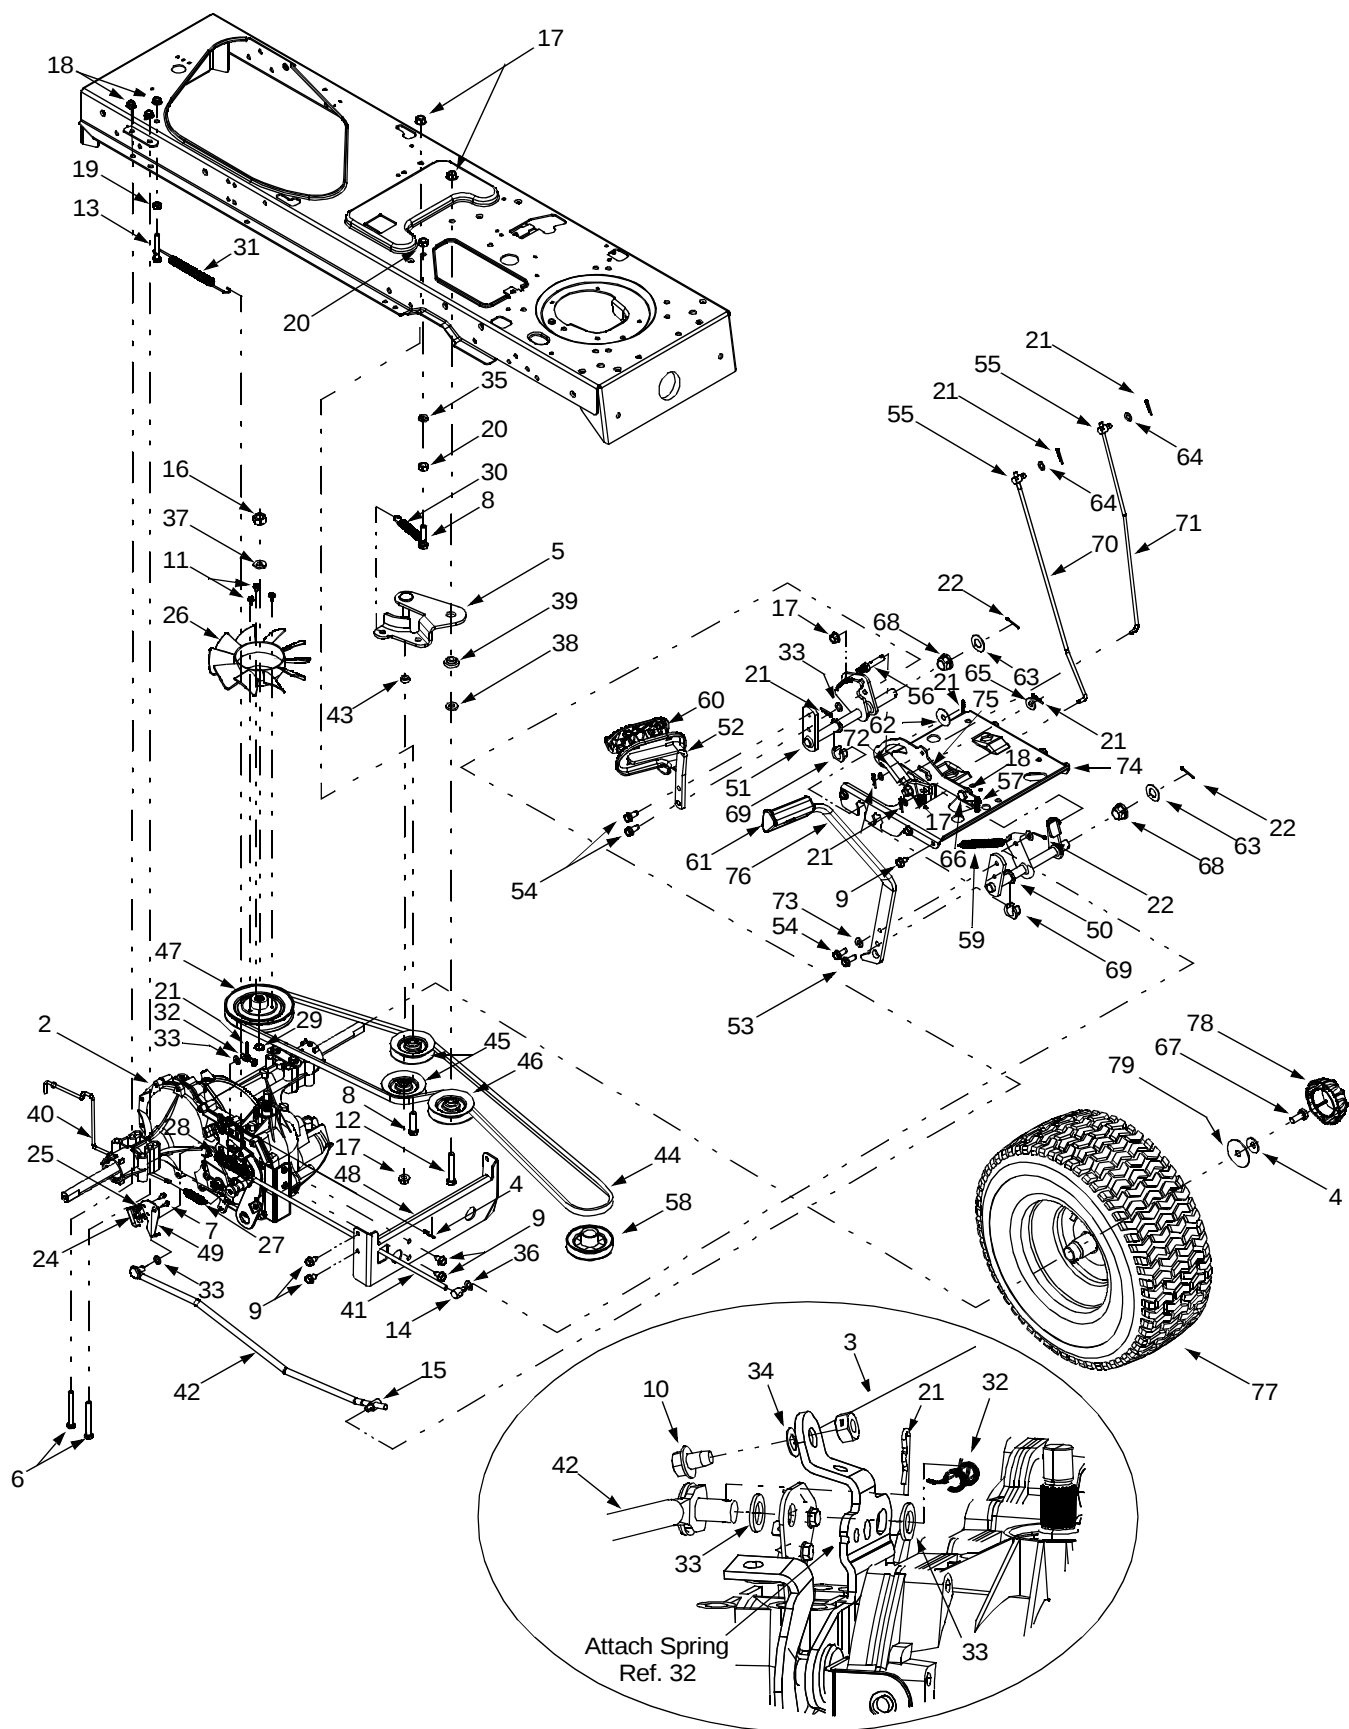


Models 617, 618 & 619

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17840	Transaxle Mounting Bracket	46	756-0981A	Flat Idler Pulley, 2.75
2	618-0319	Hydrostatic Transmission	47	756-1166	Input Pulley, 5.0
3	629-0949A	Reverse Wire Harness Adapter & Ground	48	783-0810	Transmission Torque Bracket
4	736-0242	Bell Washer, .34 x .872	49	783-1019	Switch Actuator Bracket
5	683-0251	Double Idler Bracket Assembly	50	647-0031	Brake Control Assembly
6	710-0176	Hex Cap Screw, 5/16-18 x 2.75	51	647-0049	Drive Control Assembly
7	710-0227	Screw, #8-18 x .5	52	683-0267C	Hydro Pedal Assembly
8	710-0344	Hex Cap Screw, 3/8-16 x 1.5	53	710-0650	Self-tapping Screw, 5/16-18 x .875
9	710-0604A	Self-tapping Screw, 5/16-18 x .625	54	710-1260A	Self-tapping Screw, 5/16-18 x .75
10	710-0653	Self-tapping Screw, 1/4-20 x .375	55	711-0736	Ferrule, 1/4-20
11	710-3007	Screw, #12-24 x .375	56	711-1363	Pin, 3/8-16 x 2.43
12	710-3011	Hex Cap Screw, 3/8-16 x 2.25	57	732-0335	Compression Spring, .405 OD x 1.17
13	710-3103	Hex Cap Screw, 5/16-18 x 2.0	58	756-0978A	Engine Pulley
14	711-0677	Ferrule, 5/16-18	59	732-0963	Extension Spring, .50 OD x 6.37
15	711-0832	Ferrule, 3/8-24	60	735-0662	Drive Pedal Pad
16	712-0333	Hex Nut, 1/2-20	61	735-3049	Brake Pedal Pad
17	712-0431	Flange Lock Nut, 3/8-16	62	736-0133	Flat Washer, .411 x 1.25 x 1.0
18	712-3004A	Flange Lock Nut, 5/16-18	63	736-0187	Flat Washer, .64 x 1.24 x .06
19	712-3010	Hex Nut, 5/16-18	64	736-0204	Flat Washer, .344 x .062 x .03
20	712-3017	Hex Nut, 3/8-16	65	736-3004	Flat Washer, .406 x .875 x .105
21	714-0104	Internal Cotter Pin	66	738-0155	Shoulder Screw, .437 x 1.62
22	714-0111	Cotter Pin	67	710-0627	Hex Cap Screw, 5/16-24 x .75
23	725-0157	Cable Tie	68	741-0225	Hex Flange Bearing
24	725-1644	Short Spring Switch	69	741-3065B	Split Hex Flange Bearing
25	726-0320	Insulator Nut Plate	70	747-1137	Cruise Control Rod
26	731-1449A	10-inch Fan	71	747-1138	Brake Lock Control Rod
27	732-0209	Extension Spring, .48 x 2.03	72	748-0413	Cruise Latch
28	732-0716	Extension Spring, .59 x 4.0	73	736-3008	Flat Washer, .344 x .750 x .120
29	732-0729	Wire Ring	74	783-0653E	Steering Support Bracket
30	732-0429A	Extension Spring, .5 x 3.97	75	783-0663C	Drive Lockout Bracket
31	732-0994	Extension Spring, .5 x 7.0	76	783-0773	Brake Pedal
32	732-3118	Extension Spring, 3/8 x 1.44	77	634-0177	Wheel Assembly Complete
33	736-0140	Flat Washer, .385 x .62 x .063			20 x 10 x 8 Square Shoulder
34	736-0142	Flat Washer, .281 x .50 x .063		634-0104	Wheel Assembly Complete
35	736-0169	Lock Washer, 3/8			20 x 8 x 8 Square Shoulder
36	736-0275	Flat Washer, .344 x .688 x .065		734-1675	Wheel Assembly Complete
37	736-0921	Lock Washer, 1/2			20 x 8 x 8 Round Shoulder
38	736-3010	Flat Washer, .407 x .812 x .135		634-0070	Rim Assembly Only
39	738-0372B	Shoulder Spacer, .38		734-0255	Air Valve (Not Shown)
40	747-1149	Hydrostatic Bypass Rod		734-1873	Tire Only, 20 x 10 x 8, Square Shoulder
41	747-1150	Hydrostatic Brake Rod		734-1730	Tire Only, 20 x 8 x 8, Square Shoulder
42	747-1151	Hydrostatic Control Rod		734-1596	Tire Only, 20 x 8 x 8, Round Shoulder
43	750-0535	Spacer, .376 x .625 x .22	78	734-2290A	Deluxe Hub Cap (Ref. 79 Required)
44	754-0349	Drive Belt	79	736-0430	Flat Washer, .350 x 1.59 x .062
45	756-0116	V-idler Pulley, 3.06			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Models 617, 618 & 619 (w/ Electric PTO)

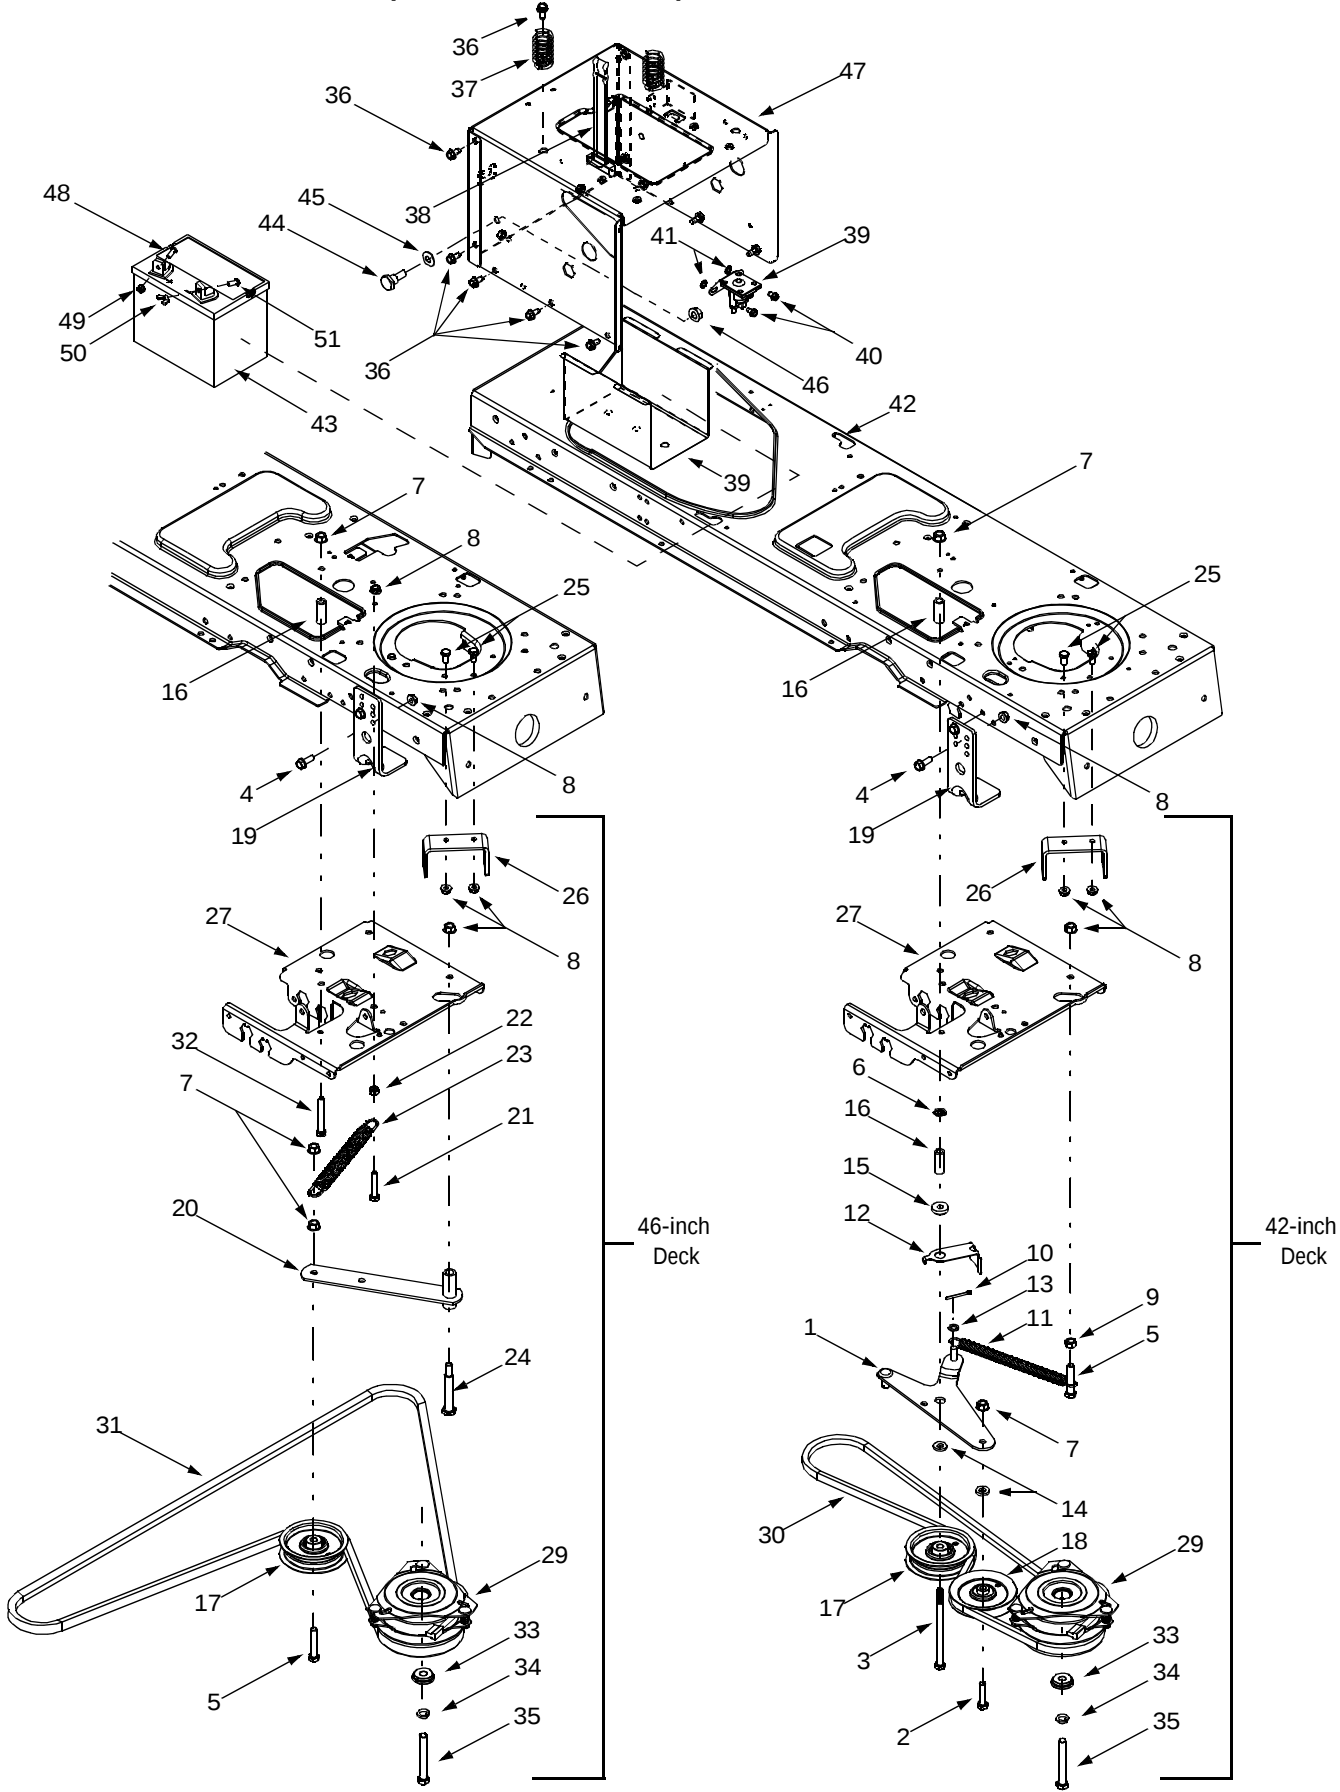

Models 617, 618 & 619

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	683-0450	Engagement Plate Assembly	27	783-0653D	Steering Support Bracket
2	710-0520	Hex Cap Screw, 3/8-16 x 1.5	28	683-0314	Frame Assembly
3	710-0831	Hex Cap Screw, 3/8-16 x 5.5	29	717-1708	Electric PTO Clutch
4	710-1238	Hex Head Washer Screw, 5/16-18 x .875	30	754-0497	PTO Belt (Models w/ 42-inch deck)
5	710-3144	Hex Cap Screw, 3/8-16 x 2.0	31	754-0474	PTO Belt (Models w/ 46-inch deck)
6	712-0229	Push Nut, 3/8	32	710-0859	Hex Cap Screw, 3/8-16 x 2.5
7	712-0431	Flange Lock Nut, 3/8-16	33	738-0785	Shoulder Spacer, 1.38 x .445 x .36
8	712-3004A	Flange Lock Nut, 5/16-18	34	736-0171	Lock Washer, 7/16
9	712-3017	Hex Nut, 3/8-16	35	710-3157	Hex Cap Screw, 7/16-20 x 3.25 (Grade 5)
10	714-0470	Cotter Pin, 1/8 x 1.25	36	710-0604A	Self Tapping Screw, 5/16-18 x .625
11	732-0384	Extension Spring, .62 x 6.12	37	732-3080	Compression Spring, 1.28 x 3.5
12	732-0991A	Belt Guard	38	723-0444	Battery Strap
13	736-0140	Flat Washer, .385 x .62 x .063	39	725-1426	Solenoid, 12-Volt, 100 Amp
14	736-3010	Flat Washer, .407 x .812 x .135	40	710-0599	Self Tapping Screw, 1/4-20 x .5
15	738-0372A	Shoulder Spacer, .380	41	736-0222	Lock Washer, 1/4
16	748-0415A	Spacer, 3/8 x 1.54	42	683-0304	Lower Frame Assembly
17	756-0627B	Idler Pulley, 3.5	43	725-1706	12-volt Battery, 270 CCA
18	756-1208	Idler Pulley, 4.0	44	738-1020	Shoulder Screw, .625 x .5, 7/16-20
19	783-0891B	Deck Stop	45	736-0407	Bell Washer, .45 x 1.0 x .062
20	683-0297	Idler Bracket Assembly	46	712-0459	Flange Lock Nut, 7/16-20
21	710-3180	Hex Cap Screw, 5/16-18 x 1.75	47	783-1031A	Hitch Plate
22	712-3010	Hex Nut, 5/16-18	48	710-0703	Hex Cap Screw, 1/4-20 x .75
23	732-0978	Extension Spring, .62 x 5.62	49	712-0271	Hex Sems Nut, 1/4-20
24	738-3056	Shoulder Screw, 1/2 x 2.5	50	712-3087	Wing Nut, 1/4-20
25	710-3025	Hex Cap Screw, 5/16-18 x .625	51	738-1132	Shoulder Screw, 1/4-20, .25 x .15
26	783-1003	Electric Clutch Anti-rotation Bracket			

Models 617, 618 & 619 (w/ Manual PTO)

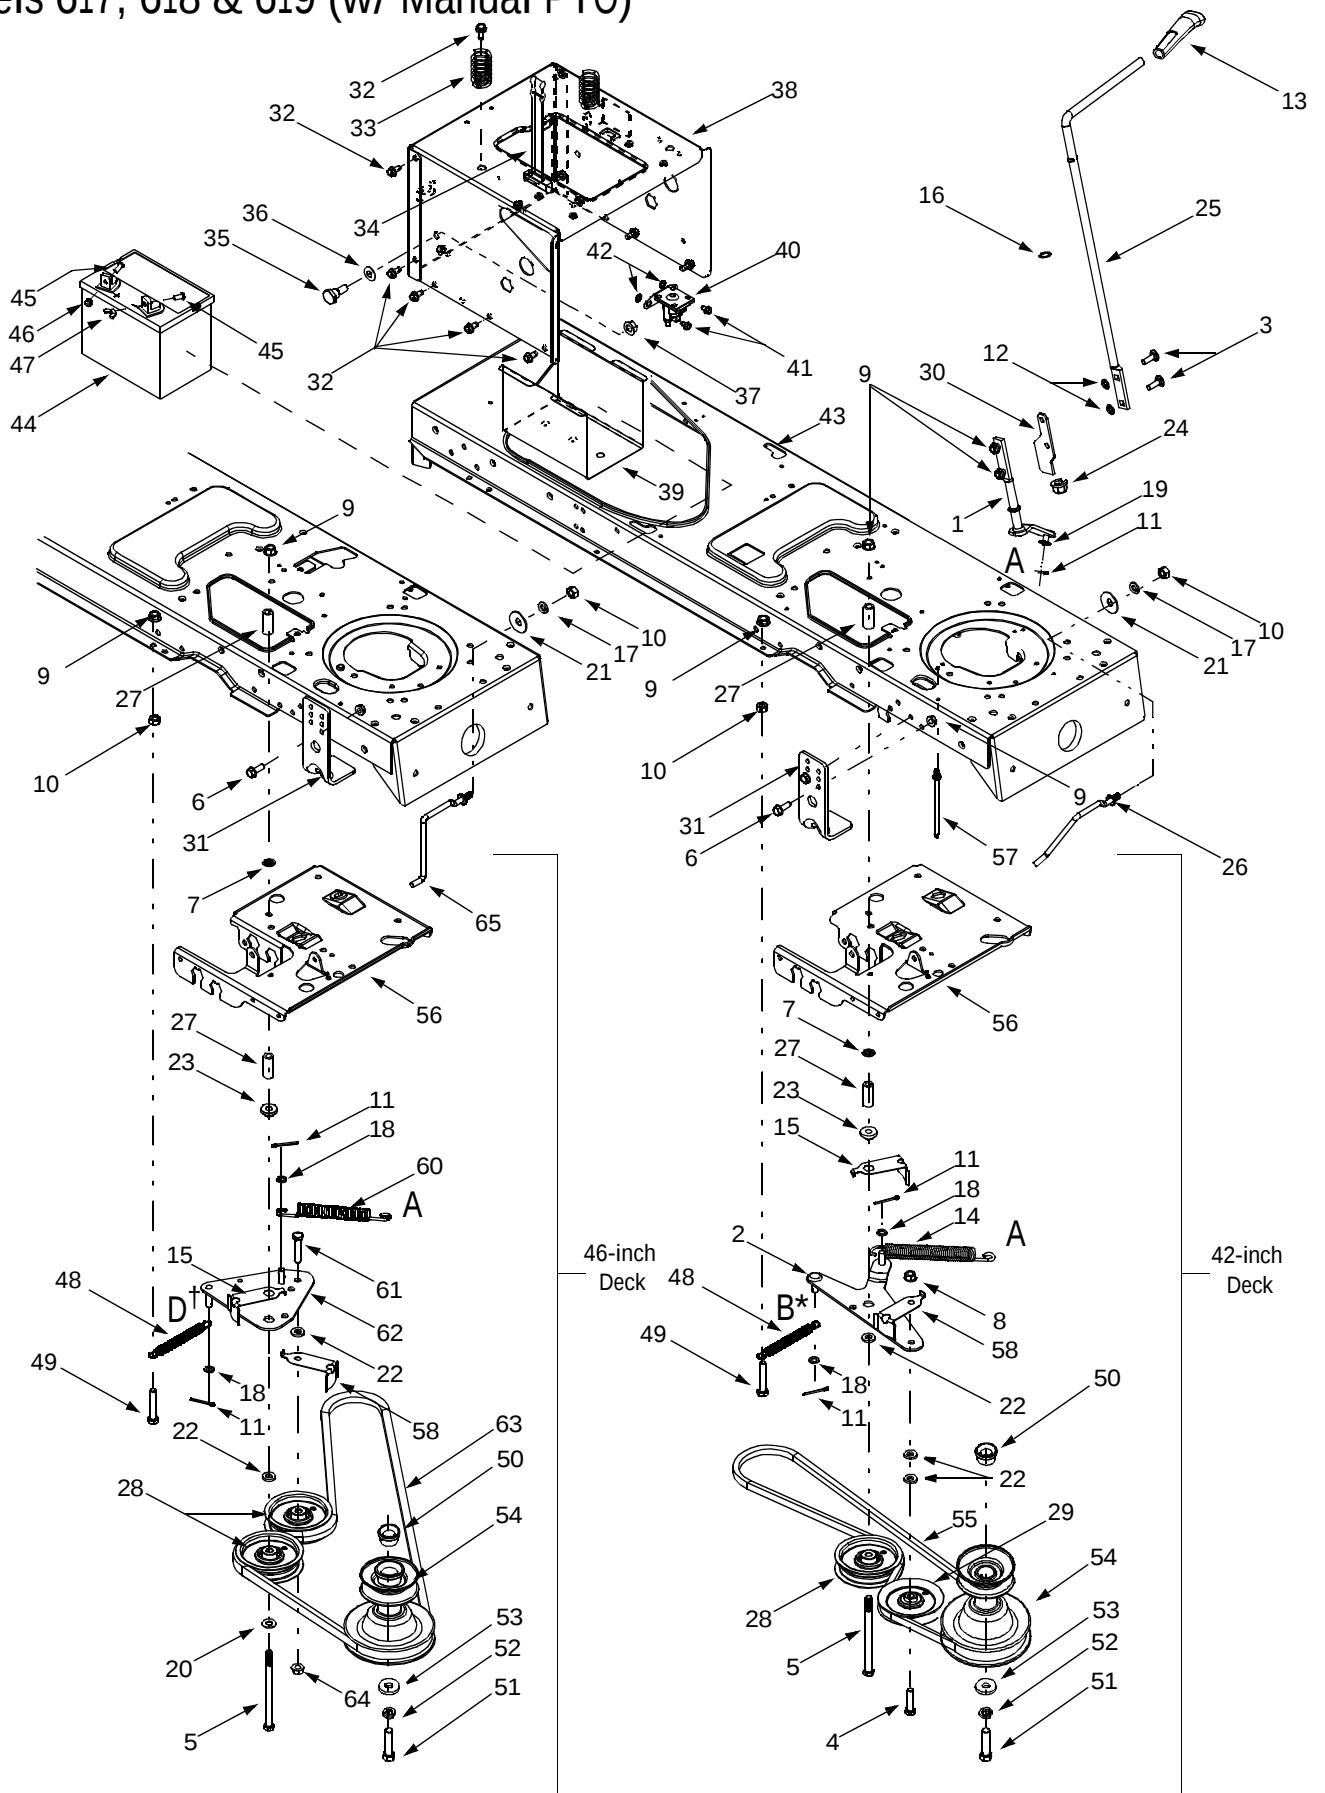


Models 617, 618 & 619

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	647-0064	PTO Engage Lever Assembly	34	723-0444	Battery Strap
2	683-0450	PTO Engage Plate Assembly	35	738-1020	Shoulder Screw, .625 x .5, 7/16-20
3	710-0276	Carriage Screw, 5/16-18 x 1.00	36	736-0407	Bell Washer, .45 x 1.0 x .062
4	710-0520	Hex Cap Screw, 3/8-16 x 1.5	37	712-0459	Flange Lock Nut, 7/16-20
5	710-0831	Hex Cap Screw, 3/8-16 x 5.5	38	783-1031A	Hitch Plate
6	710-1238	Hex Head Washer Screw, 5/16-18 x .875	39	783-0349	Battery Tray
7	712-0229	Push Nut, 3/8	40	725-1426	Solenoid, 12-Volt, 100 Amp
8	712-0431	Flange Lock Nut, 3/8-16	41	710-0599	Self Tapping Screw, 1/4-20 x .5
9	712-3004A	Flange Lock Nut, 5/16-18	42	736-0222	Lock Washer, 1/4
10	712-3010	Hex Nut, 5/16-18	43	683-0304	Lower Frame Assembly
11	714-0470	Cotter Pin, 1/8 x 1.25	44	725-1706	12-volt Battery, 270 CCA
12	726-0201	Speed Nut, .3125	45	710-0751	Hex Cap Screw, 1/4-20 x .62
13	731-2111A	PTO Knob	46	712-0271	Hex Sems Nut, 1/4-20
14	732-1170	Extension Spring, .75 x 6.75	47	712-3044	Wing Nut, 1/4-20
15	732-0991A	Belt Guard	48	732-1165	Extension Spring, .50 x 5.0
16	736-0108	Flat Washer, .510 x .750 x .033	49	710-3180	Hex Cap Screw, 5/16-18 x 1.75
17	736-0119	Lock Washer, 5/16	50	750-0596	Spacer Cup
18	736-0140	Flat Washer, .385 x .62 x .063	51	710-3029	Hex Head Cap Screw, 7/16-20 x 1.25
19	736-0275	Flat Washer, 5/16	52	736-0171	Lock Washer, 7/16
20	736-0300	Flat Washer, .406 x .875 x .059	53	736-0322	Flat Washer, .450 x 1.25
21	736-0331	Bell Washer, .39 x 1.13 x .062	54	756-0982B	Engine Pulley, 3.56 OD x 5.56
22	736-3010	Flat Washer, .407 x .812 x .135	55	754-0497	PTO Belt (Models w/ 42-inch deck)
23	738-0372A	Shoulder Spacer, .380	56	783-0653D	Steering Support Bracket
24	741-0708	Hex Split Flange Bearing, .5	57	711-1044	Keeper Pin, 5/16 x 4.75
25	747-1112D	PTO Engagement Handle	58	732-1013	Belt Guard
26	747-1286	Belt Keeper Rod	59	710-3025	Hex Cap Screw, 5/16-18 x .625
27	748-0415B	Spacer, 3/8 x 1.54	60	732-0944	Extension Spring, .75 x 6.75
28	756-0627B	Idler Pulley, 3.5	61	710-0347	Hex Cap Screw, 3/8-16 x 1.75
29	756-1208	Idler Pulley, 4.0	62	683-0302	PTO Engagement Plate Assembly
30	783-0744A	Engagement Stop	63	754-0486A	PTO Belt (Models w/ 46-inch deck)
31	783-0891B	Deck Stop	64	712-0431	Flange Lock Nut, 3/8-16
32	710-0604A	Self Tapping Screw, 5/16-18 x .625	65	747-1243	Belt Keeper Rod
33	732-3080	Compression Spring, 1.28 x 3.5			

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 617, 618 & 619

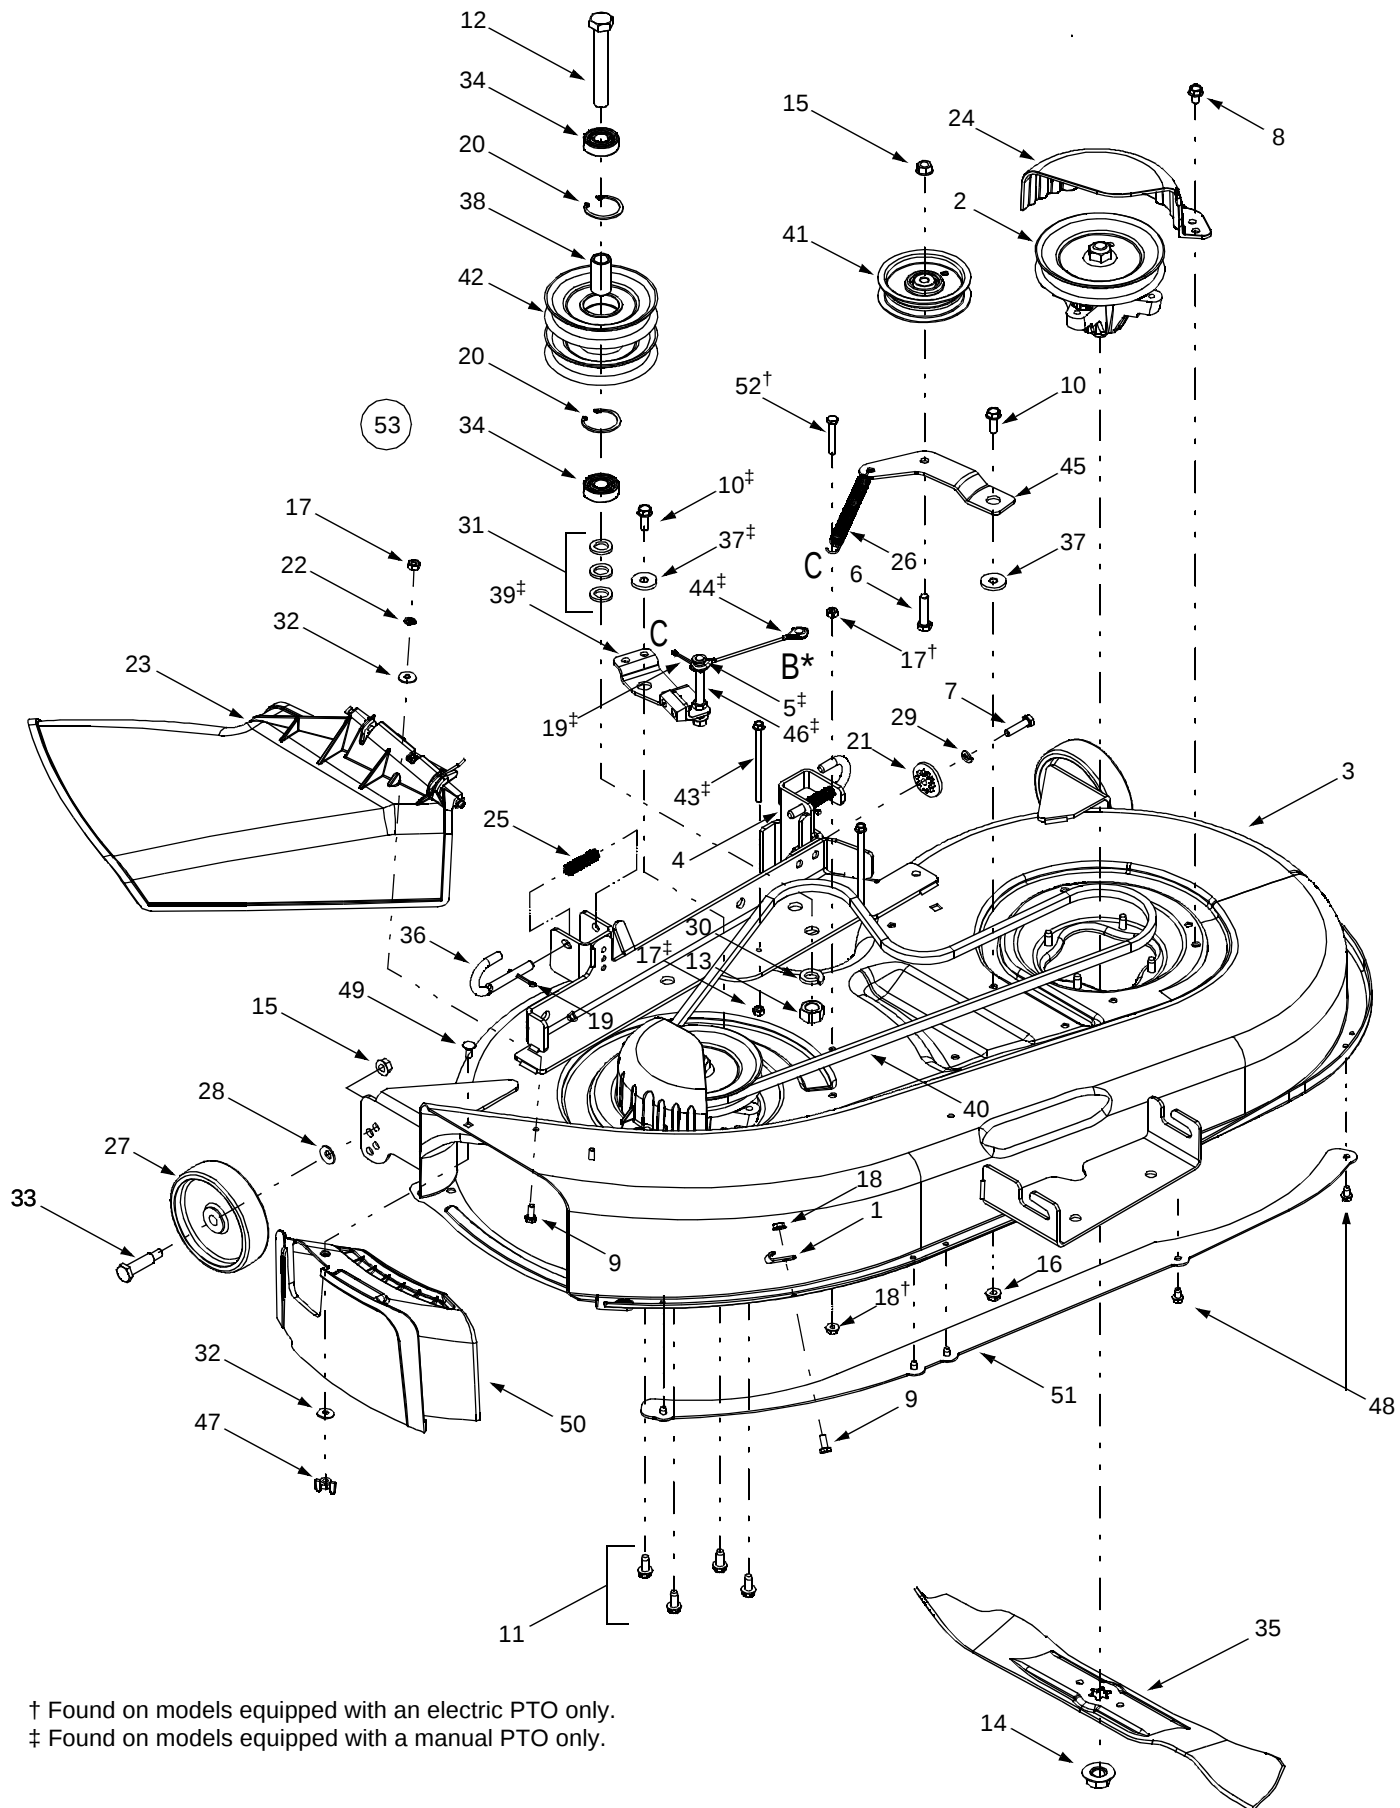



Models 617, 618 & 619

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	16606	Retainer Hook	29	736-0119	Lock Washer, 5/16
2	618-0565	Spindle Assembly, 5.75 Dia.	30	736-0158	Lock Washer, 5/8
	756-0980	Pulley Only	31	736-0162	Flat Washer, .64 x 1.0 x .12
3	683-0198D	42-inch Deck Shell	32	736-0270	Bell Washer, .265 x .75 x .062
4	683-0254	Deck Adjustment Bracket w/ Weld Nut	33	738-0373	Shoulder Screw, .498 x 1.53
5	736-0140	Flat Washer, .385 x .62 x .063	34	741-0524	Bearing, .625 x 1.574 x .470
6	710-0520	Hex Cap Screw, 1/4-20 x 1.5	35	742-0616	Three-in-one Blade, Star Center, 21.23"
7	710-0528	Hex Cap Screw, 5/16-18 x 1.25	36	747-1116	Deck Release Pin
8	710-0604A	Self-tapping Screw, 5/16-18 x .625	37	748-0331	Shoulder Spacer, .625 x .324
9	710-0751	Hex Cap Screw, 1/4-20 x .62	38	750-0932A	Spacer, .635 x .88 x 1.72
10	710-1238	Hex Head Washer Screw, 5/16-18 x .875	39	683-0440	Deck Brake Assembly
11	710-1260A	Self-tapping Screw, 5/16-18 x .75	40	754-0498	Deck Belt
12	710-3151	Hex Cap Screw, 5/8-18 x .875	41	756-0627B	Idler Pulley, 3.5
13	712-0337	Hex Nut, 5/8-18	42	756-1202	Double Pulley, 5.0
14	712-0417A	Hex Flange Nut, 5/8-18	43	710-1830	Self-tapping Screw, 1/4-20 x 4.0
15	712-0431	Flange Lock Nut, 3/8-16	44	746-0970	Brake Cable, 5.05
16	712-3004A	Flange Lock Nut, 5/16-18	45	783-1291	Idler Bracket
17	712-3006	Hex Nut, 1/4-20	46	711-1534	Pin, 3/8-16, 3/8 x 3.27
18	712-3027	Hex Flange Lock Nut, 1/4-20	47	712-3087	Wing Nut, 1/4-20
19	714-0470	Cotter Pin, 1/8 x 1.25	48	710-0599	Self-tapping Screw, 1/4-20 x .5
20	716-3020	Internal Snap Ring	49	710-0134	Carriage Screw, , 1/4-20 x .62
21	717-1553A	Deck Adjustment Gear	50	731-2363	Mulch Plug
22	726-0233	Push Nut, .25 x .5	51	783-1146A	Deck Skirt
23	731-1032B	Side Discharge Chute Assembly	52	710-0136	Hex Cap Screw, 1/4-20 x 1.75
24	731-2486	Belt Cover	53	753-0894	Deck Assembly Complete, Manual PTO (w/o Mulch Kit)
25	732-0306	Compression Spring, .406 x .531 x 1.75		753-0896	Deck Assembly Complete, Electric PTO (w/o Mulch Kit)
26	732-0470A	Extension Spring, .50 x 4.74			
27	734-0973	Deck Wheel, 5 x 1.38			
28	736-0105	Bell Washer, .401 x .87 x .063			

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. *NOT all parts listed above and pictured on the previous page are standard equipment.*

Models 617, 618 & 619

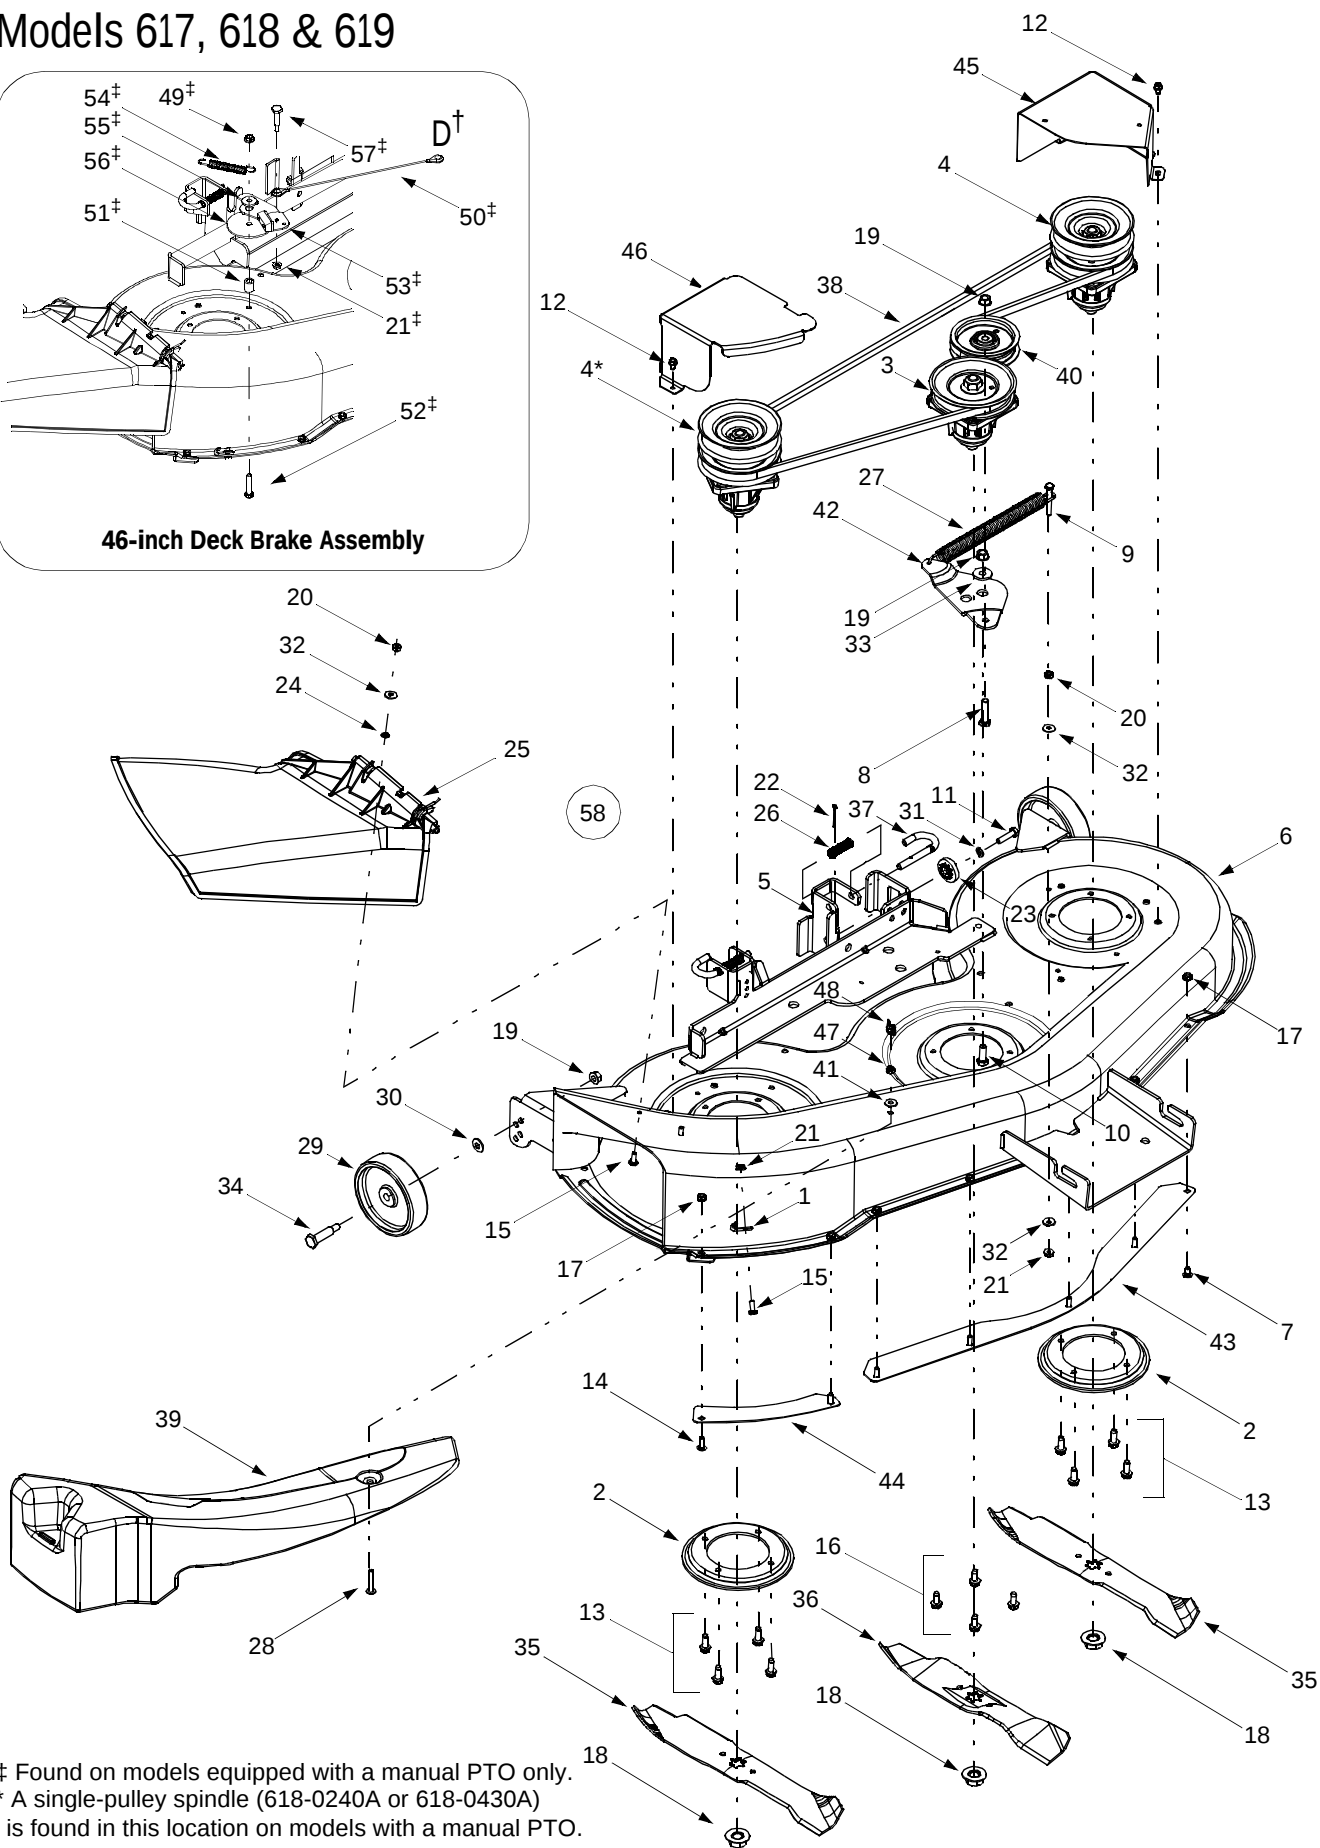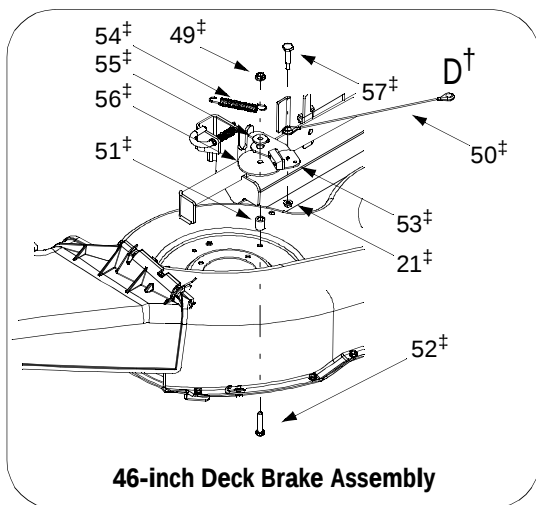

‡ Found on models equipped with a manual PTO only.

* A single-pulley spindle (618-0240A or 618-0430A) is found in this location on models with a manual PTO.

Models 617, 618 & 619

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	16606	Retainer Hook	30	736-0105	Bell Washer, .401 x .87 x .063
2	17982	Spindle Reinforcement Plate	31	736-0119	Lock Washer, 5/16
3	618-0240A	Spindle Assembly, 5.0 Dia.	32	736-0270	Bell Washer, .265 x .75 x .062
	618-0430A	Spindle Assembly, 5.0 Dia. w/ Fitting	33	738-0347	Shoulder Spacer, .625 x 1.16
	756-1187	Pulley Only	34	738-0373	Shoulder Screw
4	618-0241	Double Pulley Spindle Assembly	35	742-0611	Three-in-one Blade, Star Center, 16.28"
	618-0431	Double Pulley Spindle Ass'y w/ Fitting	36	742-0612	Three-in-one Blade, Star Center, 14.88"
	756-0603	Pulley Only	37	747-1116	Deck Release Pin
5	683-0254	Deck Adjustment Bracket w/ Weld Nut	38	754-0349	Deck Belt, Poly
6	683-0265C	46-inch Deck Shell	39	731-1636	Mulch Plug
7	710-0167	Carriage Screw, 1/4-20 x .50	40	756-0627B	Idler Pulley, 3.5
8	710-0344	Hex Cap Screw, 3/8-16 x 1.5	41	736-0173	Flat Washer, .28 x .74 x .063
9	710-0501	Hex Cap Screw, 1/4-20 x 2.0	42	783-0139A	Idler Bracket
10	710-0514	Hex Cap Screw, 3/8-16 x 1.0	43	783-0141	Center Deck Skirt
11	710-0528	Hex Cap Screw, 5/8-18 x 1.25	44	783-0142	RH Deck Skirt
12	710-0599	Self-tapping Screw, 1/4-20 x .5	45	783-0747	LH Belt Cover
13	710-0650	Self-tapping Screw, 15/16-18 x .875	46	783-0805A	RH Belt Cover
14	710-0703	Hex Screw, 1/4-20 x .75	47	712-3006	Hex Nut, 1/4-20
15	710-0751	Hex Cap Screw, 1/4-20 x .62	48	712-3087	Wing Nut, 1/4-20
16	710-1260A	Self-tapping Screw, 5/16-18 x .75	49	712-3004A	Hex Nut, 5/16-18
17	712-0271	Hex Sems Nut, 1/4-20	50	746-1107	Bracket Cable, 12"
18	712-0417A	Hex Flange Nut, 5/8-18	51	750-0807	Spacer, .385 x .625 x .70
19	712-0431	Flange Lock Nut, 3/8-16	52	710-0805	Hex Cap Screw, 5/16-18 x 1.5
20	712-3006	Hex Nut, 1/4-20	53	17116	Deck Brake Assembly
21	712-3027	Hex Flange Lock Nut, 1/4-20	54	732-0429A	Extension Spring, .5 x 3.97
22	714-0470	Cotter Pin, 1/8 x 1.25	55	748-0324	Shoulder Spacer
23	717-1553A	Deck Adjustment Gear	56	736-0416	Flat Washer, .320 x 3.0 x .125
24	726-0233	Push Nut, .25 x .5	57	738-0572	Shoulder Screw, .374 x 1.16
25	731-1032B	Side Discharge Chute Assembly	58	753-0872	Deck Assembly Complete, Manual PTO (w/o Mulch Kit)
26	732-0306	Compression Spring, .406 x .531 x 1.75		753-0874	Deck Assembly Complete, Electric PTO (w/o Mulch Kit)
27	732-0594A	Extension Spring, .91 x 7.3			
28	710-0578	Screw, 1/4-20 x 1.5			
29	734-0973	Deck Wheel, 5 x 1.38			

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.