


SECTION 13: MODEL 624 PARTS LIST

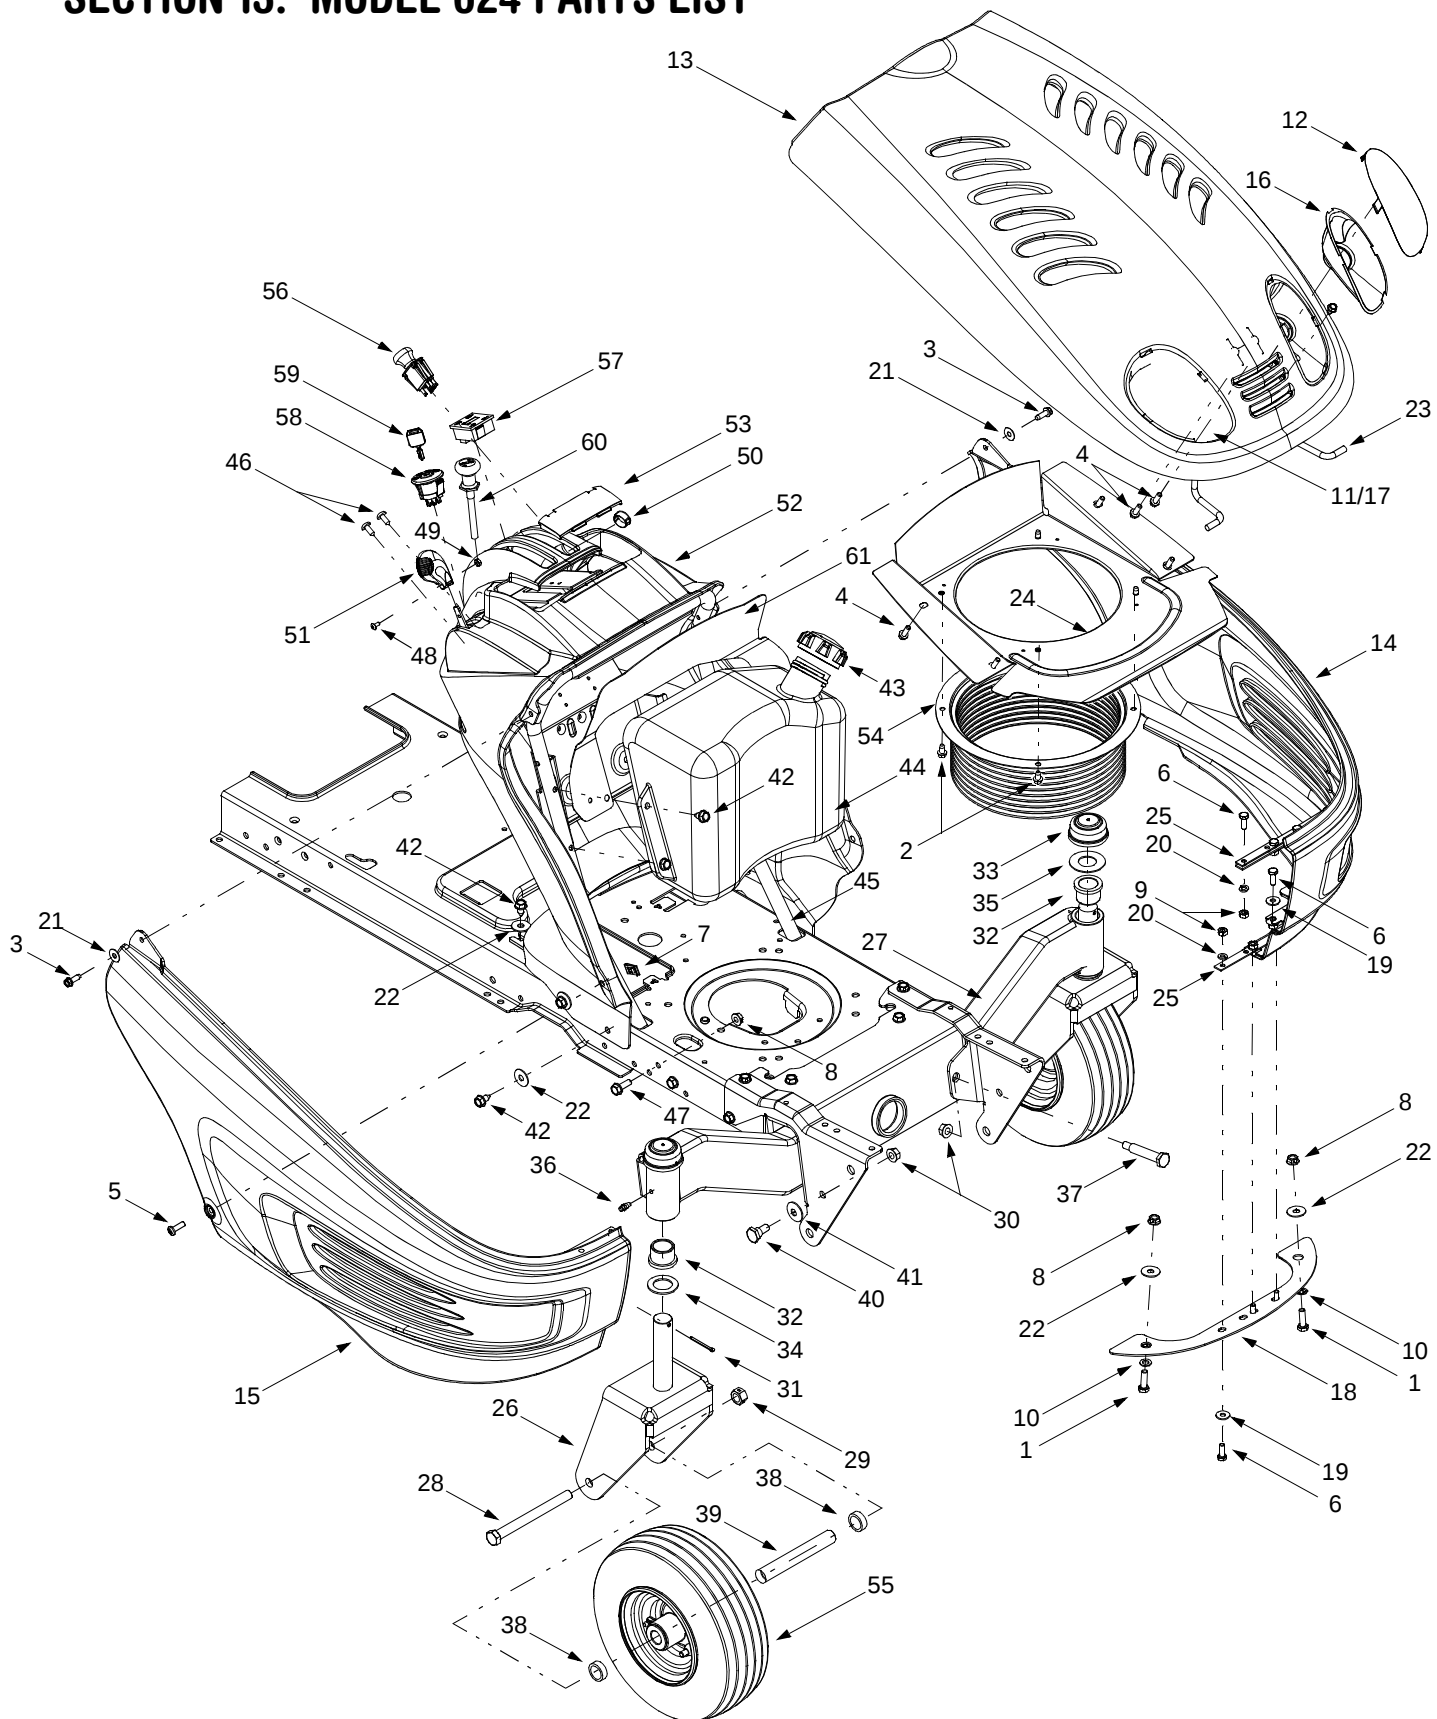

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	710-0376	Hex Cap Screw, 5/16-18 x 1.0	33	731-0556	Plastic Cap
2	710-0599	Self-tapping Screw, 1/4-20 x .5	34	736-0277	Flat Washer, 1.031 x 1.620 x .095
3	710-0642	Self-tapping Screw, 1/4-20 x .75	35	736-0345	Flat Washer, 1.010 x 2.0 x .065
4	710-0895	Self-tapping Screw, 1/4-15 x .75	36	737-0280	Grease Fitting, 1/4-28
5	710-0924	Pan Phillips Screw, 1/4-20 x .75	37	738-1011	Shoulder Screw, .50 x 2.23, 3/8-16
6	710-3015	Hex Cap Screw, 1/4-20 x .75	38	750-0456	Spacer, .790 x .347
7	712-0292	U-type Speed Nut, 1/4-20	39	750-3197A	Wheel Spacer
8	712-3004A	Flange Lock Nut, 5/16-18	40	738-0143	Shoulder Screw, 3/8-16
9	712-3006	Hex Nut, 1/4-20	41	736-0331	Bell Washer, .39 x 1.13 x .062
10	726-0201	Speed Nut	42	710-0604A	Self-tapping Screw, 16-18 x .625
11	731-1978	RH Head Light Lens	43	751-0603	Fuel Tank Cap (fits both fuel tanks)
12	731-1979	LH Head Light Lens	44	751-0659A	Fuel Tank, Two-gallon (shown)
13	731-1980A	Hood, 4-style (Yellow)		751-0658B	Fuel Tank, Three-gallon (not shown)
14	731-1981A	LH Side Panel, 4-style (Yellow)	45	683-0316	Dash Support Assembly
15	731-1982A	RH Side Panel, 4-style (Yellow)	46	710-1017	Torx Self-tapping Screw, 1/4-14 x .625
16	731-1995	LH Head Light Reflector	47	710-1238	Hex Head Washer Screw, 5/16-18 x .875
17	731-1996	RH Head Light Reflector	48	710-3217	Torx Screw, #8-32 x .375
18	731-2272	Heat Shield	49	712-0142	Hex Nut, 8-32
19	736-0173	Flat Washer, .28 x .74 x .063	50	720-0425	Cap Plug, .812
20	736-0329	Lock Washer, 1/4	51	731-1857	Throttle Control Lever
21	736-0342	Flat Washer, .283 x .75 x .030	52	731-2321	Dash Panel
22	736-3078	Flat Washer, .349 x 1.0 x .063	53	731-2483	Dash Cap
23	747-1132A	Hood Support Rod	54	731-2232	Intake Bellow (Intek Single)
24	783-0808A	Heat Shield, 4-style		731-2234	Intake Bellow (Intek Twin)
25	783-1000A	Grille Support Bracket	55	634-3169	Wheel Assembly, 11 x 4 x 5 (Yellow Rim)
26	683-0425	Castor Assembly	56	725-1716	Electric PTO Switch
27	683-0453	Pivot Bar Axle Assembly	57	725-1976	Systems Indicator Monitor/Hour Meter
28	710-0506	Hex Cap Screw, 1/2-20 x 5.5	58	725-1741	Ignition Switch
29	712-0239	Hex Lock Nut, 1/2-20	59	725-1745	Ignition Key w/ Plastic Cover
30	712-0431	Flange Lock Nut, 3/8-16	60	746-1134	Choke Control/Cable (if so equipped)
31	714-3001	Cotter Pin, .125 x 1.5	61	783-1350	Heat Shield
32	731-0374	Flange Bearing			


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674


Powder Black: 0637

Model 624

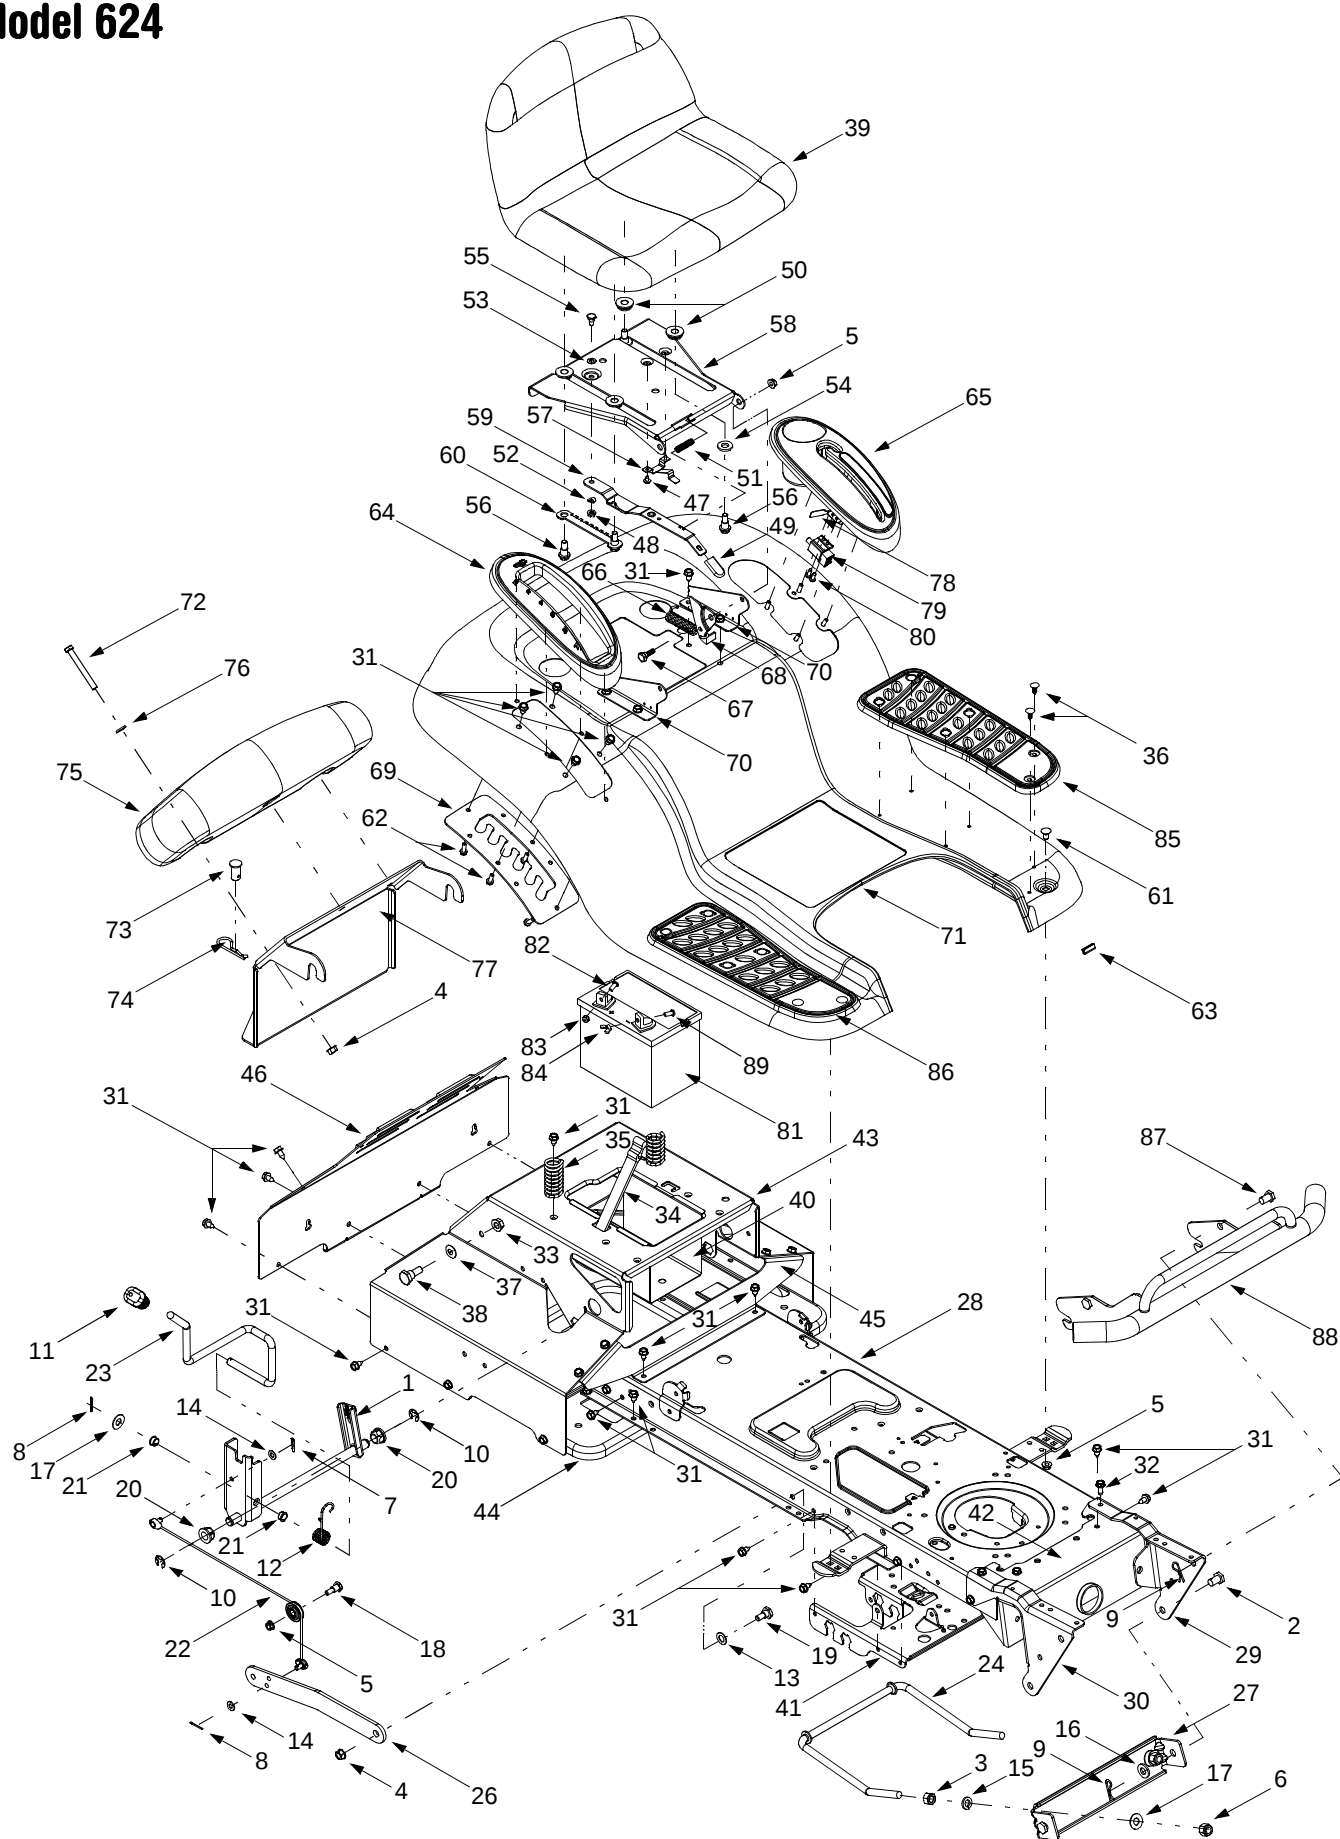

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	683-0197	Lift Shaft Assembly	46	783-1047	Rear Access Plate
2	711-0332	Clevis Pin, .5 x .78	47	710-1268	Screw, #10-16 x .375
3	712-0206	Hex Nut, 1/2-13	48	712-3027	Hex Flange Lock Nut, 1/4-20
4	712-0431	Flange Lock Nut, 3/8-16	49	720-0309A	Seat Adjuster Grip
5	712-3004A	Flange Lock Nut, 5/16-18	50	731-1989	Spacer
6	712-3083	Hex Nut, 1/2-13	51	732-0499	Compression Spring, .41 x 1.5
7	714-0104	Internal Cotter Pin	52	736-0175	Spring Washer, .265 x .562 x .025
8	714-0111	Cotter Pin, 3/32 x 1.0	53	736-0204	Flat Washer, .344 x .62 x .03
9	714-0145	Internal Cotter Pin	54	736-3019	Flat Washer, .31 x 1.062 x .134
10	716-0106	E-ring	55	738-0137A	Shoulder Screw, .340 x .285, 1/4-20
11	720-0311	Handle Grip	56	738-1007	Shoulder Screw, .50 x .50, 3/8-16
12	732-0874	Torsion Spring	57	783-0611	Seat Stop
13	736-0160	Flat Washer, .53 x .93 x .050	58	783-0738	Seat Pivot Bracket
14	736-0275	Flat Washer, .344 x .688 x .065	59	783-0739	Seat Adjustment Lever
15	736-0921	Lock Washer, 1/2	60	783-0753	Seat Adjustment Selector
16	736-3019	Flat Washer, .31 x 1.062 x .134	61	710-0260A	Carriage Screw, 5/16-18 x .62
17	736-3084	Flat Washer, .51 x 1.12 x .06	62	710-0895	Self-tapping Screw, 1/4-15 x .75
18	738-0138A	Hex Cap Screw, 5/16-18 x .62	63	731-0511	Trim Strip
19	738-0143	Shoulder Screw, 3/8-16	64	731-1990	Lift Lever Cover
20	741-0225	Hex Flange Bearing	65	731-2319	Parking Brake Lever Cover w/ Cup Holder
21	741-0715	Snap Flange Bearing	66	732-1027	Extension Spring, .750 x 3.8
22	746-0968	Lift Cable, 16.16	67	738-0296	Shoulder Screw, .437 x .286
23	747-1111	Lift Handle	68	783-0209	Seat Lift Bracket
24	747-1130A	Deck Stabilizer Rod	69	783-0677	Lift Adjuster Bracker
25	756-1154	Roller Pulley	70	783-0715A	Seat Mounting Bracket
26	783-0678A	Lift Arm	71	783-1349	Revolution™ Fender
27	783-0720A	Deck Stabilizer Bracket	72	710-3130	Hex Cap Screw, 3/8-16 x 3.25 (Grade 8)
28	683-0314	Frame Assembly	73	711-0309A	Clevis Pin, .62 Diameter
29	683-0589	LH Pivot Support Bracket Assembly	74	714-0117	Internal Cotter Pin, .148 x 3.0
30	683-0590	RH Pivot Support Bracket Assembly	75	731-2341	Rear Bumper Weight
31	710-0604A	Self-tapping Screw, 16-18 x .625	76	736-3010	Flat Washer, .407 x .812 x .135
32	710-1260A	Self-tapping Screw, 5/16-18 x .75	77	783-1275	Bumper Support Bracket
33	712-0459	Flange Lock Nut, 7/16-20	78	725-1774	Spring Switch
34	723-0444	Battery Strap	79	725-3223	Plunger Switch (Parking Brake)
35	732-3080	Compression Spring, 1.28 x 3.5	80	710-1823	Pan Phillips Screw, #12-16 x .625
36	726-3046	Ratchet Clip, .25	81	725-1706	Battery, 270 CCA
37	736-0407	Bell Washer, .45 x 1.0 x .062	82	710-0703	Hex Cap Screw, 1/4-20 x .75
38	738-1020	Shoulder Screw, .625 x .50, 7/16-20	83	712-0271	Hex Sems Nut, 1/4-20
39	757-0372	Seat, Yellow	84	712-3087	Wing Nut, 1/4-20
40	783-0349	Battery Tray	85	735-0657	LH Foot Pad
41	783-0653D	Steering Support Bracket	86	735-0678	RH Foot Pad
42	783-0728	Pivot Bar Bracket	87	711-0332	Clevis Pin, .50 x .78
43	783-1044	Upper Frame	88	768-0010	Bumper Assembly
44	783-1045	Transmission Bracket	89	738-1132	Shoulder Screw, 1/4-20, .25 x .15
45	783-1046	Support Bracket			

Model 624

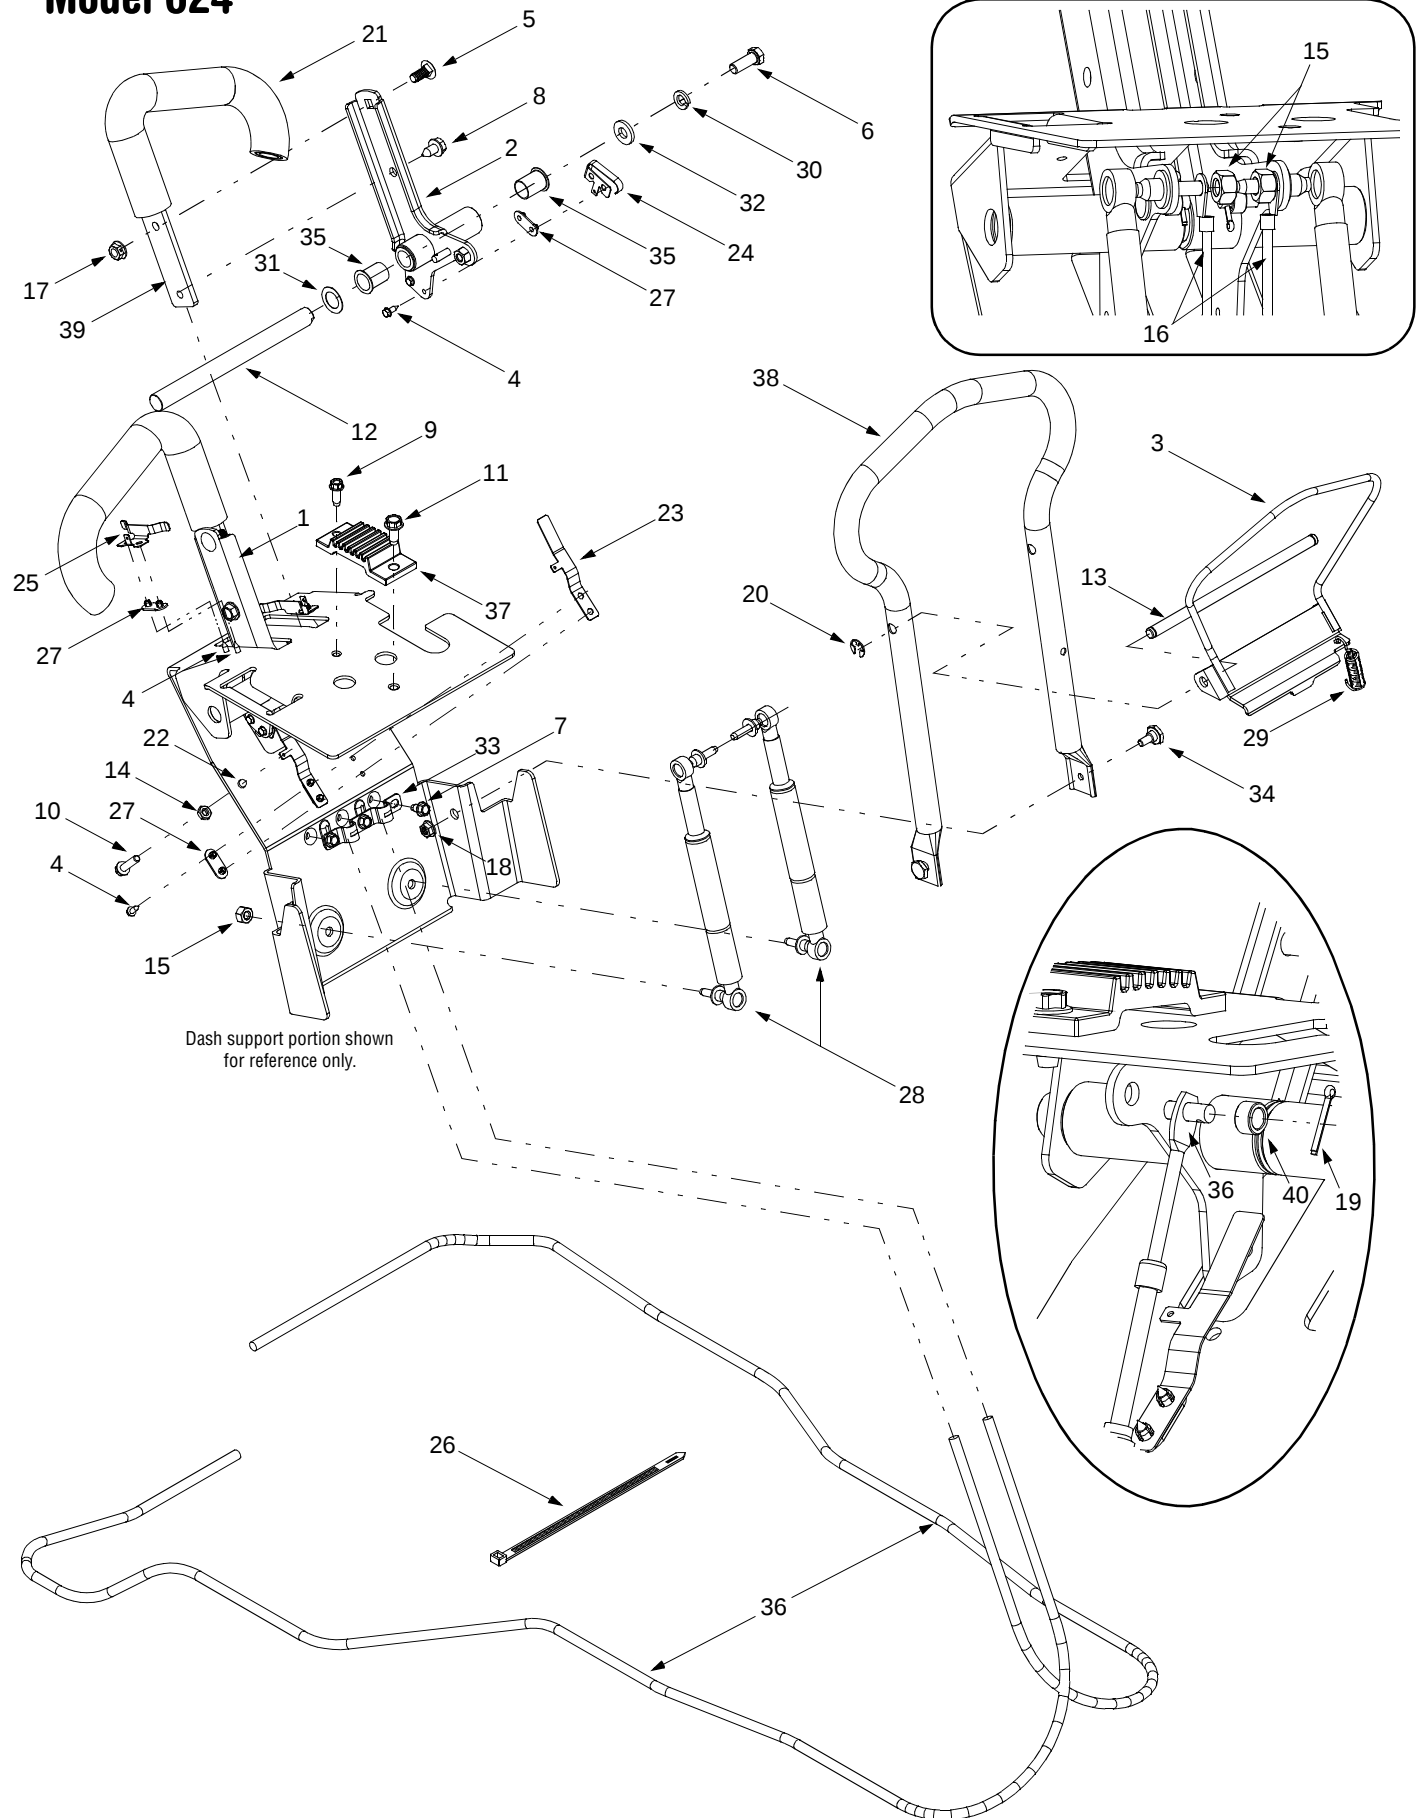

REF. NO.	PART NO.	DESCRIPTION
1	683-0317	RH Handle Bracket Assembly
2	683-0318	LH Handle Bracket Assembly
3	683-0320	Bail Assembly
4	710-0227	Self-tapping Screw, #8-18 x .5
5	710-0451	Carriage Screw, 5/16-18 x .75
6	710-0514	Hex Cap Screw, 3/8-16 x 1.0
7	710-0599	Self-tapping Screw, 1/4-20 x .5
8	710-0604A	Self-tapping Screw, 16-18 x .625
9	710-0642	Self-tapping Screw, 1/4-20 x .75
10	710-0788	Self-tapping Screw, 1/4-20 x 1.0
11	710-1260A	Self-tapping Screw, 5/16-18 x .75
12	711-1509	Control Shaft
13	711-1535	Rod, .375 x 8.0
14	712-0298	Jam Nut, 1/4-20
15	712-0365	Center Lock Hex Nut, M8
16	629-1083	Ground Jumper Wire Assembly
17	712-3004A	Flange Lock Nut, 5/16-18
18	712-3027	Hex Flange Lock Nut, 1/4-20
19	714-0507	Cotter Pin, 3/32 x .75
20	716-0125	E-Ring, .375
21	720-0278A	Foam Grip
22	720-0322	Dipped Cap, .187
23	725-1760	Spring Switch
24	725-1773	Short Spring Switch
25	725-1980	Lever Spring Switch
26	726-0209	Cable Tie
27	726-0320	Insulator Nut Plate
28	727-3113	Damper Cylinder
29	732-0568	Extension Spring, .50 x 2.54
30	736-0169	Lock Washer, 3/8
31	736-0349	Flat Washer, .63 x 1.0 x .020
32	736-3004	Flat Washer, .406 x .875 x .105
33	783-1265	Clamp Cable Bracket
34	738-0255	Shoulder Screw, .375 x .181
35	741-0591	Flange Bearing, .630 x .693
36	746-1121	Control Cable, 77.5
37	748-0438	Index Plate
38	749-1236	Hand Rest Tube
39	749-1237	Control Handle
40	750-1298	Spacer, .280 x .437 x .250


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674



Powder Black: 0637

Model 624

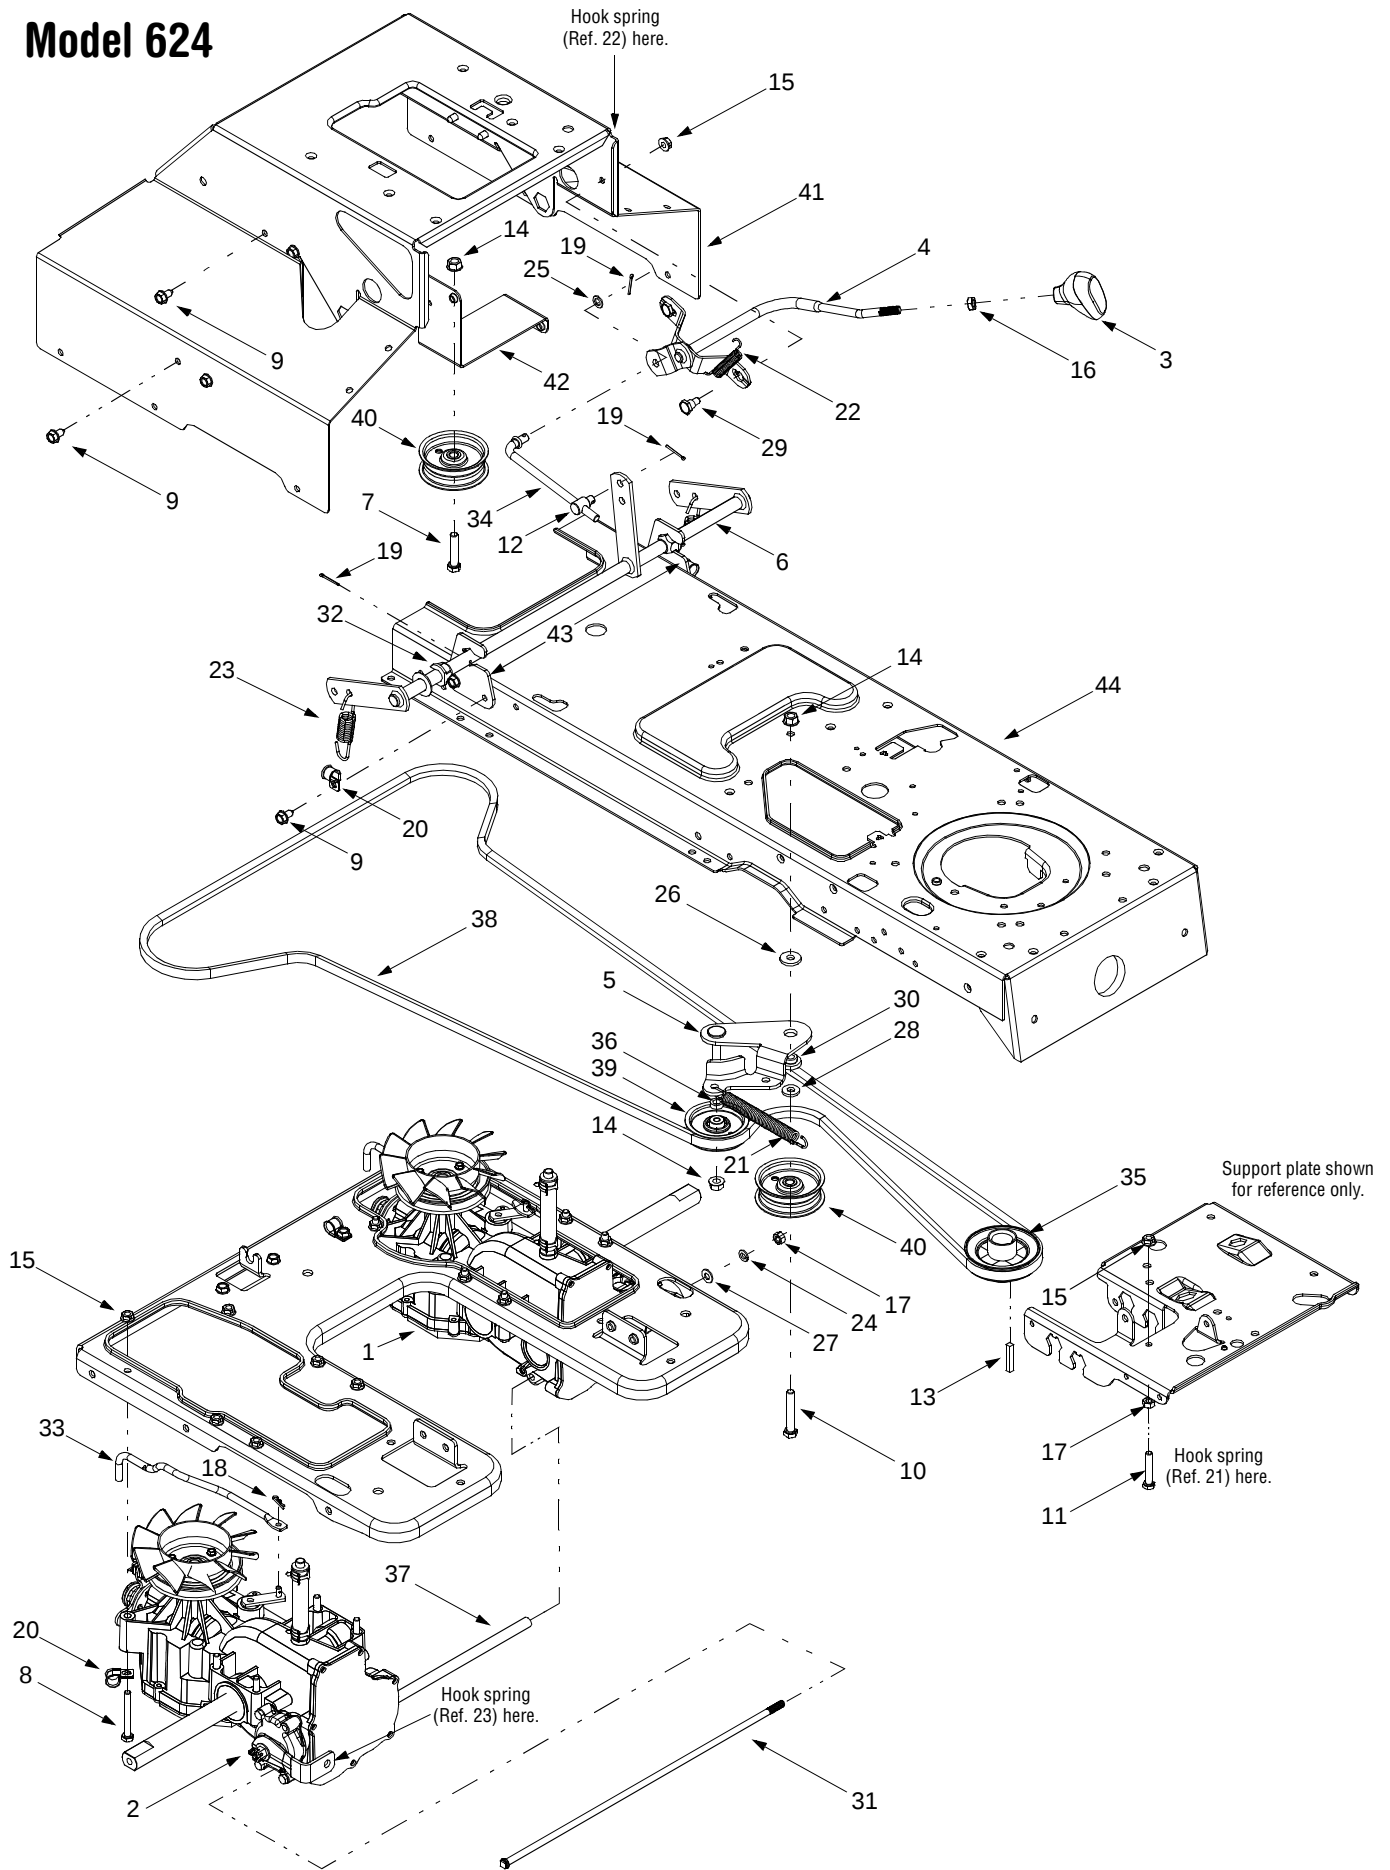

REF. NO.	PART NO.	DESCRIPTION
1	618-0437	LH IZT Transmission
2	618-0438	RH IZT Transmission
3	631-0009A	Knob
4	647-0051	Brake Lever Assembly
5	683-0251	Double-idler Bracket
6	683-0452A	Brake Bracket Assembly
7	710-0347	Hex Cap Screw, 3/8-16 x 1.75
8	710-0378	Hex Cap Screw, 5/16-18 x 2.5
9	710-0604A	Self-tapping Screw, 5/16-18 x .625
10	710-3011	Hex Cap Screw, 3/8-16 x 2.25
11	710-3180	Hex Cap Screw, 5/16-18 x 1.75
12	711-0832	Ferrule, 3/8-24 x .375
13	714-0118	Square Key, 1/4 x 1.5
14	712-0431	Flange Lock Nut, 3/8-16
15	712-3004A	Flange Lock Nut, 5/16-18
16	712-3008	Jam Nut, 3/8-16
17	712-3010	Hex Nut, 5/16-18
18	714-0104	Internal Cotter Pin, .072 x 1.12†
19	714-0111	Cotter Pin, 3/32 x 1.0
20	726-0272	Clamp, 9/16
21	732-0384	Extension Spring, .62 x 6.12
22	732-0433	Extension Spring, .5 x 2.75
23	732-1154A	Disc Brake Spring
24	736-0119	Lock Washer, 5/16
25	736-0140	Flat Washer, .385 x .62 x .063
26	736-0258	Flat Washer, .385 x 1.0 x .135
27	736-0275	Flat Washer, .344 x .688 x .065
28	736-3010	Flat Washer, .407 x .812 x .135
29	738-0141	Shoulder Screw, .435 x .350, 5/16-18
30	738-0372	Shoulder Spacer, .380
31	738-1155	Rod, .312 x 18.437
32	741-3065A	Split Hex Flange Bearing, .628
33	747-1222	Hydro Bypass Rod
34	747-1263A	Brake Link Rod
35	756-0978A	Engine Pulley
36	750-0535	Spacer, .376 x .625 x .220
37	750-1286	Spacer, .334 x .50 x 14.88
38	754-0491	Drive Belt, Poly
39	756-0116	V-Idler Pulley, 3.06
40	756-0981A	Flat Idler, 2.75
41	783-1044	Upper Frame
42	783-1145	Idler Support Bracket
43	783-1305	Brake Pivot Support Bracket
44	683-0314	Lower Frame

Model 624

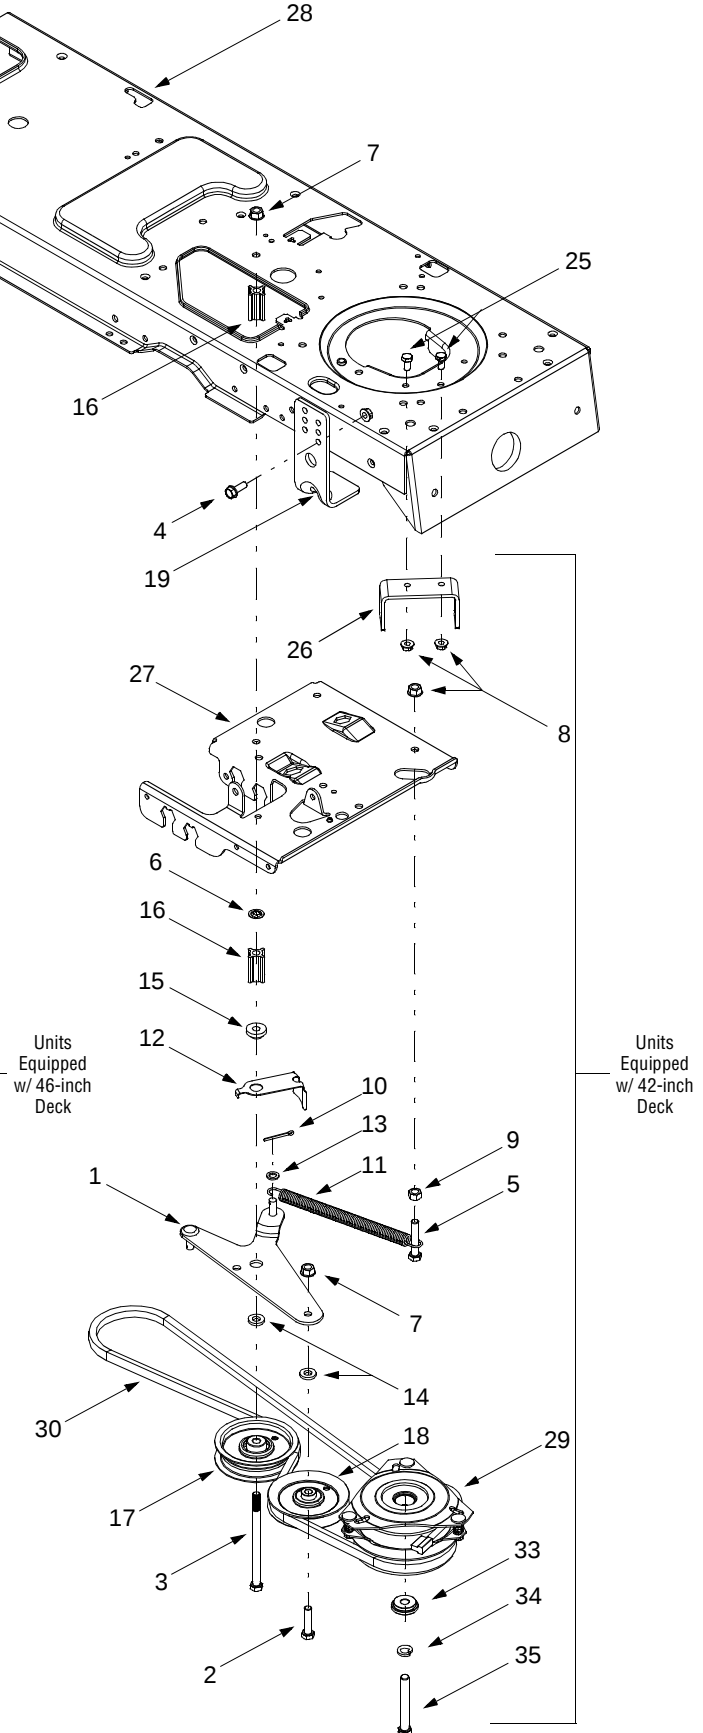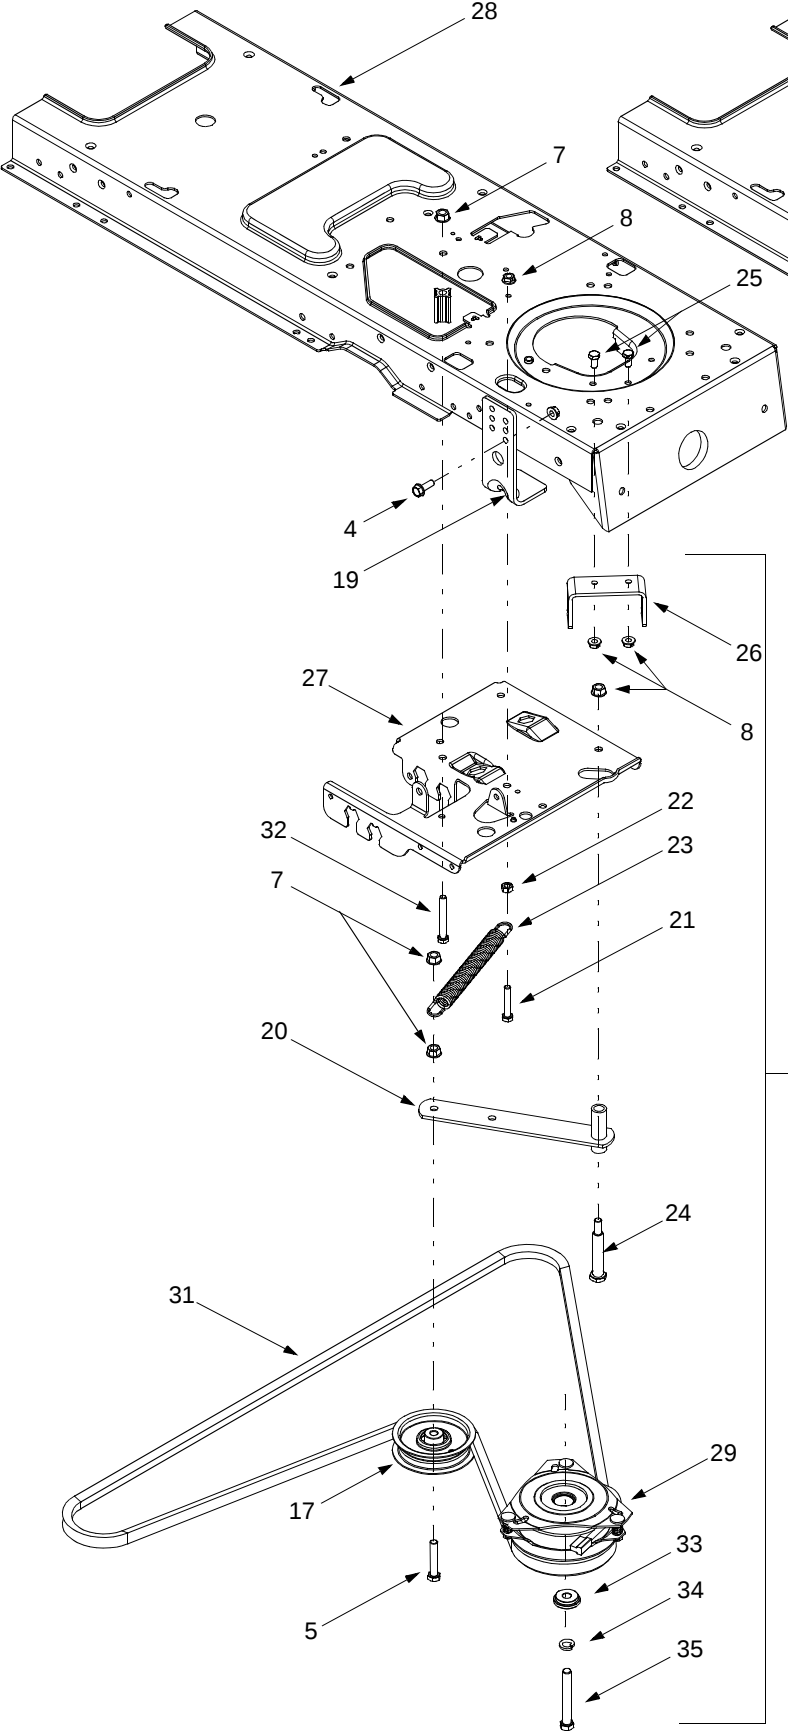

REF. NO.	PART NO.	DESCRIPTION
1	683-0450	Engagement Plate Assembly
2	710-0520	Hex Cap Screw, 3/8-16 x 1.5
3	710-0831	Hex Cap Screw, 3/8-16 x 5.5
4	710-1238	Hex Head Washer Screw, 5/16-18 x .875
5	710-3144	Hex Cap Screw, 3/8-16 x 2.0
6	712-0229	Push Nut, 3/8
7	712-0431	Flange Lock Nut, 3/8-16
8	712-3004A	Flange Lock Nut, 5/16-18
9	712-3017	Hex Nut, 3/8-16
10	714-0470	Cotter Pin, 1/8 x 1.25
11	732-0384	Extension Spring, .62 x 6.12
12	732-0991A	Belt Guard
13	736-0140	Flat Washer, .385 x .62 x .063
14	736-3010	Flat Washer, .407 x .812 x .135
15	738-0372	Shoulder Spacer, .380
16	748-0415A	Spacer, 3/8 x 1.54
17	756-0627B	Idler Pulley, 3.5
18	756-1208	Idler Pulley, 4.0
19	783-0891B	Deck Stop
20	683-0297	Idler Bracket Assembly
21	710-3180	Hex Cap Screw, 5/16-18 x 1.75
22	712-3010	Hex Nut, 5/16-18
23	732-0978	Extension Spring, .62 x 5.62
24	738-3056	Shoulder Screw, 1/2 x 2.5
25	710-3025	Hex Cap Screw, 5/16-18 x .625
26	783-1003	Electric Clutch Anti-rotation Bracket
27	783-0653D	Steering Support Bracket
28	683-0314	Frame Assembly
29	717-1708	Electric PTO Clutch
30	754-0497	PTO Belt (42-inch Decks)
31	754-0474	PTO Belt (46-inch Decks)
32	710-0859	Hex Cap Screw, 3/8-16 x 2.5
33	738-0785	Shoulder Spacer, 1.38 x .445 x .36
34	736-0171	Lock Washer, 7/16
35	710-3157	Hex Cap Screw, 7/16-20 x 3.25 (Grade 5)


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674


Powder Black: 0637

Model 624G

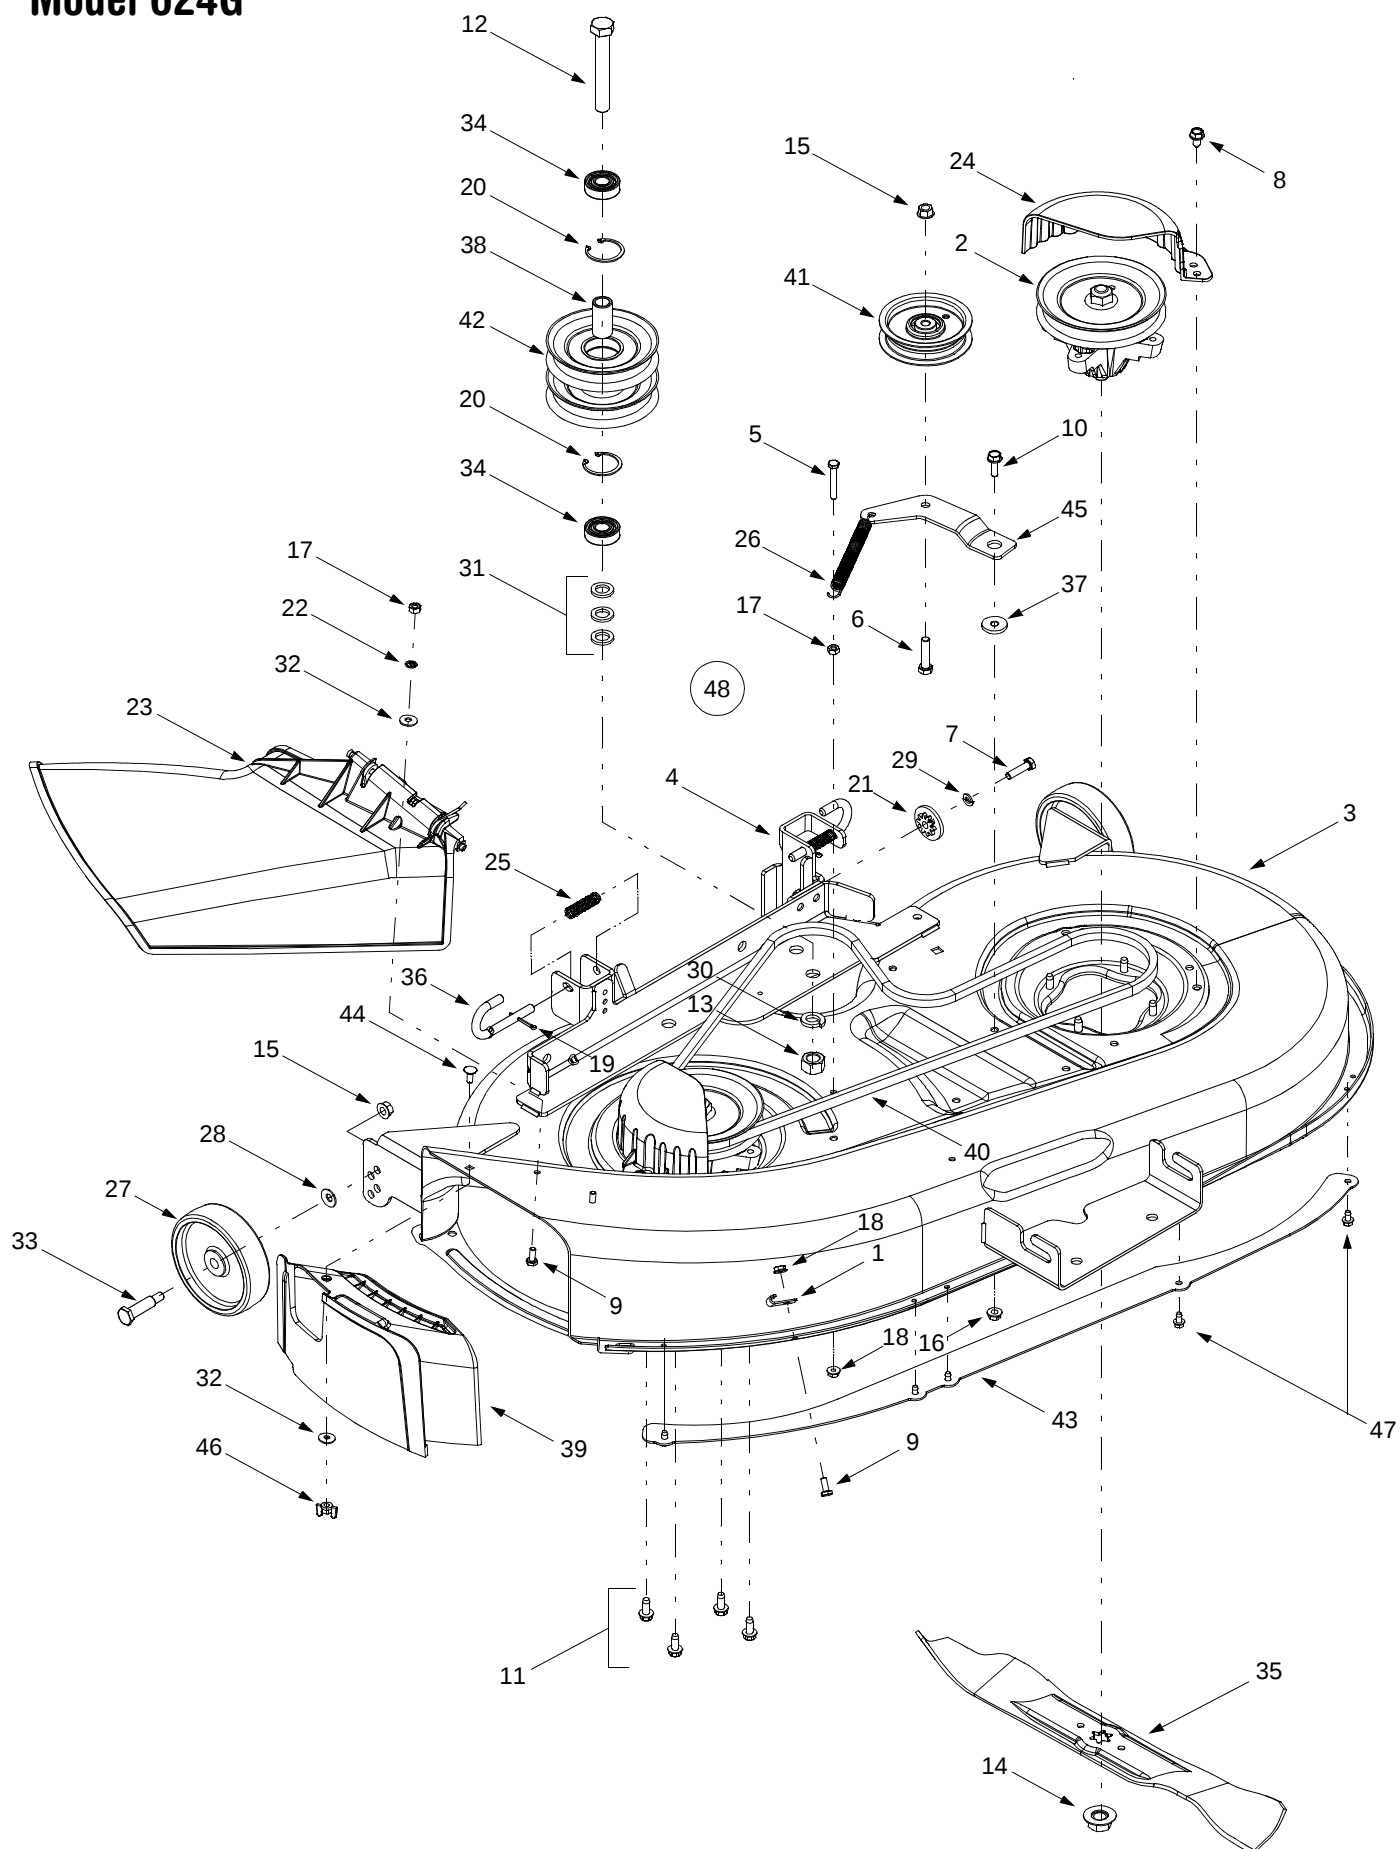

REF. NO.	PART NO.	DESCRIPTION
1	16606	Retainer Hook
2	618-0565	Spindle Assembly, 5.75 Dia.
	756-0980	Pulley Only
3	683-0198D	42-inch Deck Shell
4	683-0254	Deck Adjustment Bracket w/ Weld Nut
5	710-0136	Hex Cap Screw, 1/4-20 x 1.75
6	710-0520	Hex Cap Screw, 1/4-20 x 1.5
7	710-0528	Hex Cap Screw, 5/16-18 x 1.25
8	710-0604A	Self-tapping Screw, 5/16-18 x .625
9	710-0751	Hex Cap Screw, 1/4-20 x .62
10	710-1238	Hex Head Washer Screw, 5/16-18 x .875
11	710-1260A	Self-tapping Screw, 5/16-18 x .75
12	710-3151	Hex Cap Screw, 5/8-18 x .875
13	712-0337	Hex Nut, 5/8-18
14	712-0417A	Hex Flange Nut, 5/8-18
15	712-0431	Flange Lock Nut, 3/8-16
16	712-3004A	Flange Lock Nut, 5/16-18
17	712-3006	Hex Nut, 1/4-20
18	712-3027	Hex Flange Lock Nut, 1/4-20
19	714-0470	Cotter Pin, 1/8 x 1.25
20	716-3020	Internal Snap Ring
21	717-1553A	Deck Adjustment Gear
22	726-0233	Push Nut, .25 x .5
23	731-1032B	Side Discharge Chute Assembly
24	731-2486	Belt Cover
25	732-0306	Compression Spring, .406 x .531 x 1.75
26	732-0470A	Extension Spring, .50 x 4.74
27	734-0973	Deck Wheel, 5 x 1.38
28	736-0105	Bell Washer, .401 x .87 x .063
29	736-0119	Lock Washer, 5/16
30	736-0158	Lock Washer, 5/8
31	736-0162	Flat Washer, .64 x 1.0 x .12
32	736-0270	Bell Washer, .265 x .75 x .062
33	738-0373	Shoulder Screw, .498 x 1.53
34	741-0524	Bearing, .625 x 1.574 x .470
35	742-0616	Three-in-one Blade, Star Center, 21.23"
36	747-1116	Deck Release Pin
37	748-0331	Shoulder Spacer, .625 x .324
38	750-0932A	Spacer, .635 x .88 x 1.72
39	731-2363	Mulch Plug
40	754-0498	Deck Belt
41	756-0627B	Idler Pulley, 3.5
42	756-1202	Double Pulley, 5.0
43	783-1146A	Deck Skirt
44	710-0134	Carriage Screw, , 1/4-20 x .62
45	783-1291	Idler Bracket
46	712-3087	Wing Nut, 1/4-20
47	710-0599	Self-tapping Screw, 1/4-20 x .5
48	753-0896	42-inch Deck Assembly Complete (w/o Mulch Kit)

Model 624H

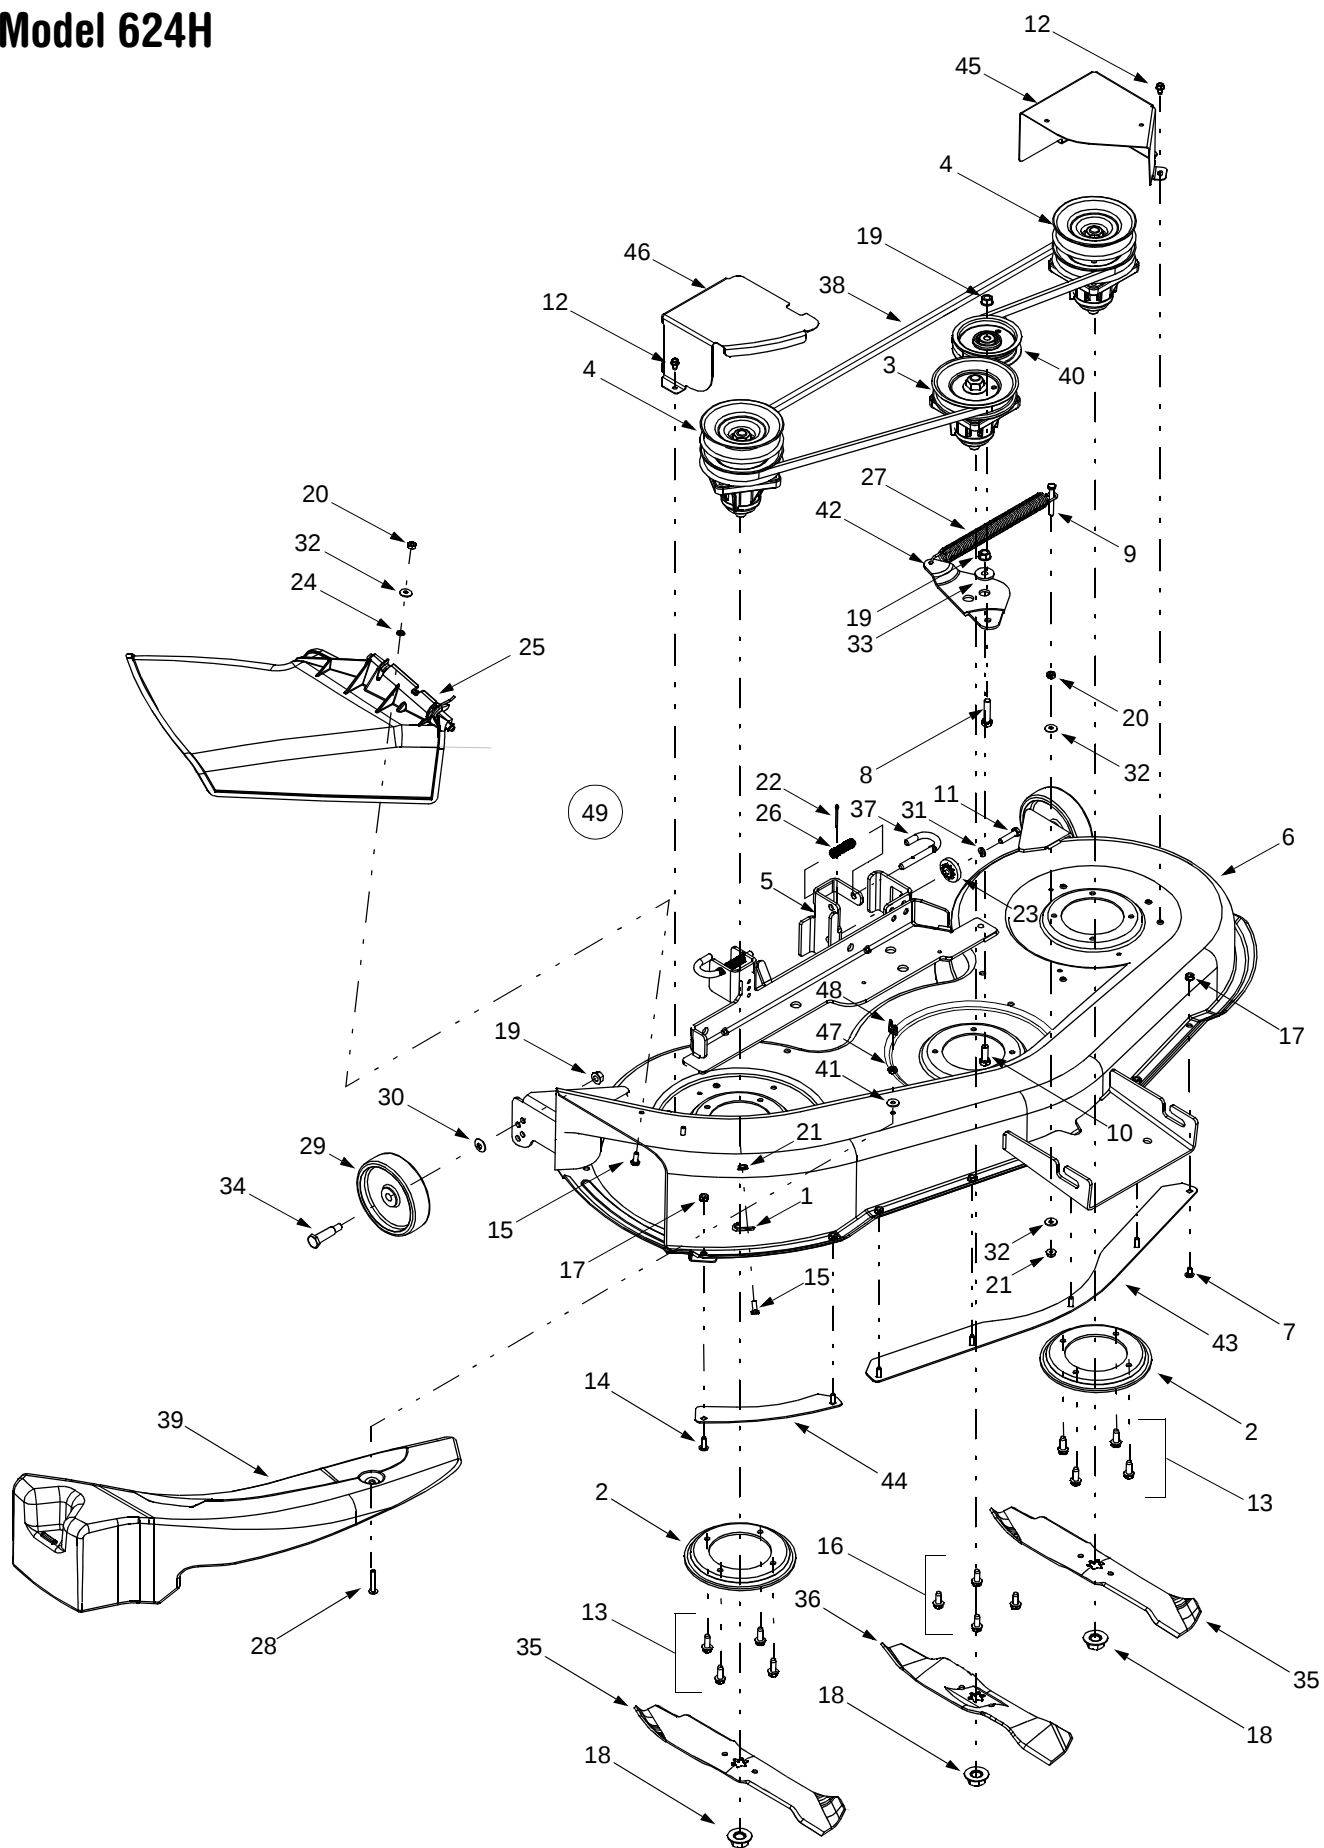


Model 624H


REF. NO.	PART NO.	DESCRIPTION
1	16606	Retainer Hook
2	17982	Spindle Reinforcement Plate
3	618-0240A	Spindle Assembly, 5.0 Dia.
	756-1187	Pulley Only
4	618-0241	Double Pulley Spindle Assembly
	756-0603	Pulley Only
5	683-0254	Deck Adjustment Bracket w/ Weld Nut
6	683-0265C	46-inch Deck Shell
7	710-0167	Carriage Screw, 1/4-20 x .50
8	710-0344	Hex Cap Screw, 3/8-16 x 1.5
9	710-0501	Hex Cap Screw, 1/4-20 x 2.0
10	710-0514	Hex Cap Screw, 3/8-16 x 1.0
11	710-0528	Hex Cap Screw, 5/8-18 x 1.25
12	710-0599	Self-tapping Screw, 1/4-20 x .5
13	710-0650	Self-tapping Screw, 15/16-18 x .875
14	710-0703	Hex Screw, 1/4-20 x .75
15	710-0751	Hex Cap Screw, 1/4-20 x .62
16	710-1260A	Self-tapping Screw, 5/16-18 x .75
17	712-0271	Hex Sems Nut, 1/4-20
18	712-0417A	Hex Flange Nut, 5/8-18
19	712-0431	Flange Lock Nut, 3/8-16
20	712-3006	Hex Nut, 1/4-20
21	712-3027	Hex Flange Lock Nut, 1/4-20
22	714-0470	Cotter Pin, 1/8 x 1.25
23	717-1553A	Deck Adjustment Gear
24	726-0233	Push Nut. .25 x .5
25	731-1032B	Side Discharge Chute Assembly
26	732-0306	Compression Spring, .406 x .531 x 1.75
27	732-0594A	Extension Spring, .91 x 7.3
28	710-0578	Screw, 1/4-20 x 1.5
29	734-0973	Deck Wheel, 5 x 1.38
30	736-0105	Bell Washer, .401 x .87 x .063
31	736-0119	Lock Washer, 5/16
32	736-0270	Bell Washer, .265 x .75 x .062
33	738-0347	Shoulder Spacer, .625 x 1.16
34	738-0373	Shoulder Screw
35	742-0611	Three-in-one Blade, Star Center, 16.28"
36	742-0612	Three-in-one Blade, Star Center, 14.88"
37	747-1116	Deck Release Pin
38	754-0349	Deck Belt, Poly
39	731-1636	Mulch Plug
40	756-0627B	Idler Pulley, 3.5
41	736-0173	Flat Washer, .28 x .74 x .063
42	783-0139A	Idler Bracket
43	783-0141	Center Deck Skirt
44	783-0142	RH Deck Skirt
45	783-0747	LH Belt Cover
46	783-0805A	RH Belt Cover
47	712-3006	Hex Nut, 1/4-20
48	712-3087	Wing Nut, 1/4-20
49	753-0874	46-inch Deck Assembly Complete (w/o Mulch Kit)

Model 624

Briggs & Stratton Intek Twin

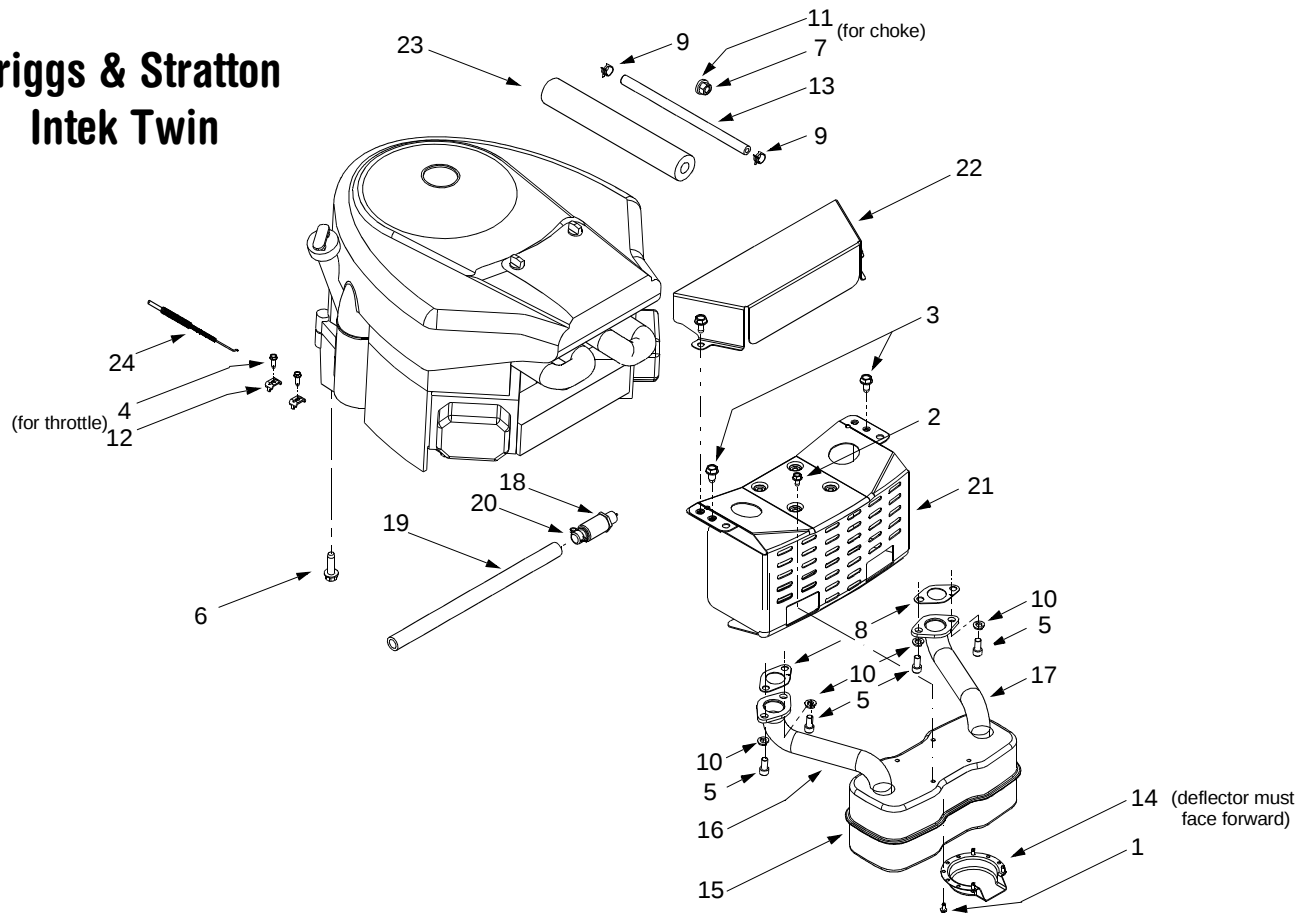

Briggs & Stratton Intek Single

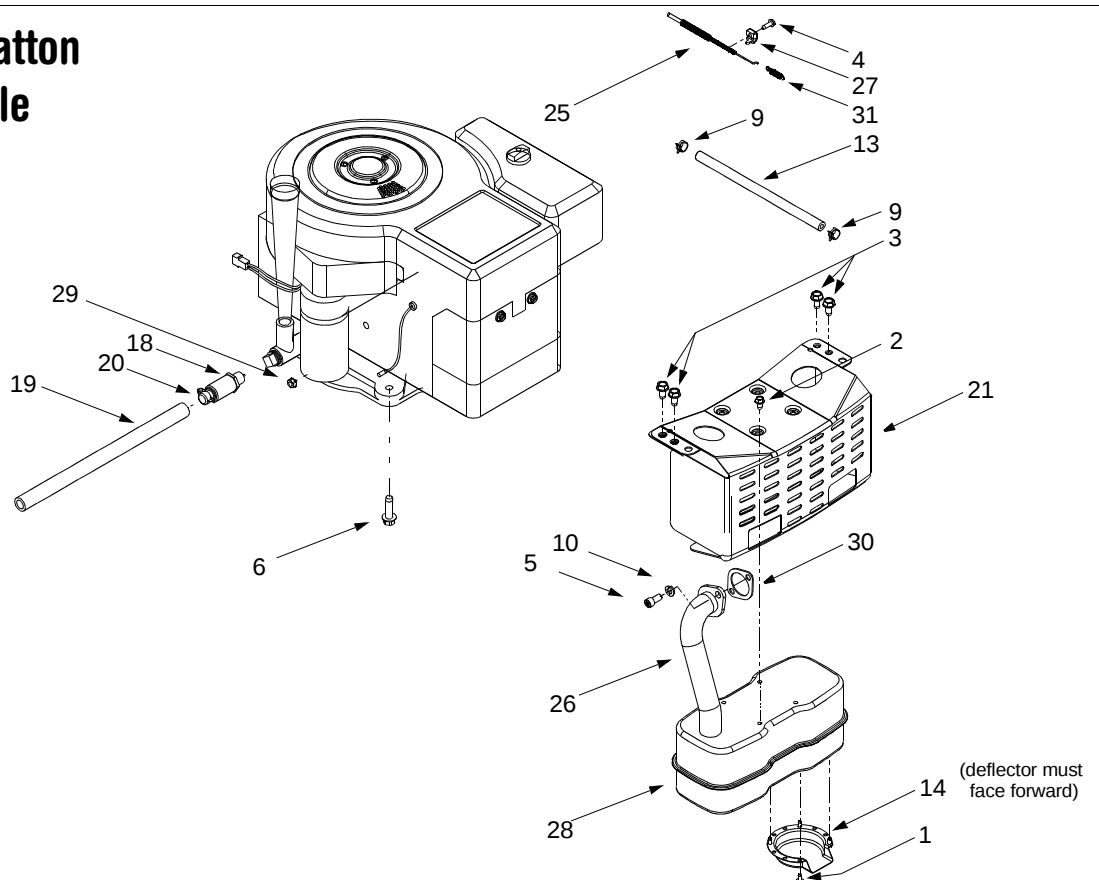

Model 624

REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Self-tapping Screw, #8-18 x .5
2	710-0599	Self-tapping Screw, 1/4-20 x .5
3	710-0604A	Self-tapping Screw, 5/16-18 x .625
4	710-1237	Screw, #10-32 x .625
5	710-1314	Socket Cap Screw, 5/16-18 x .625
6	710-1315	Self-tapping Screw, 3/8-16 x 1.25
7	712-3017	Hex Nut, 3/8-16
8	721-0460	Exhaust Gasket (Intek Twin)
9	726-0205	Hose Clamp
10	736-0119	Lock Washer, 5/16
11	736-0300	Flat Washer, .406 x .875 x .059
12	751B221535	Casing Clamp
13	751-0535	Fuel Line Hose
14	751-0564	Muffler Deflector
15	751-0616	Muffler, Twin Inlet
16	751-0650	RH Exhaust Pipe (Intek Twin)
17	751-0651	LH Exhaust Pipe (Intek Twin)
18	751-3140	Oil Drain Valve
19	751-3141	Oil Drain Hose
20	751-3142	Oil Drain Cap
21	783-0615	Muffler Heat Shield
22	783-0625B	Engine Heat Shield
23	722-0263	Foam (fits over fuel line)
24	746-1086	Throttle Cable (Intek Twin)
25	746-1084	Throttle/Choke Cable (Intek Single)
26	751-0619	Exhaust Pipe (Intek Single)
27	751B213146	Casing Clamp
28	751-0617	Muffler, Single Inlet
29	712-0271	Hex Sems Nut, 1/4-20 (for starter cable)
30	721-0208	Exhaust Gasket (Intek Single)
31	732-0966	Extension Spring, .275 x 1.25


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674

Powder Black: 0637


Model 624

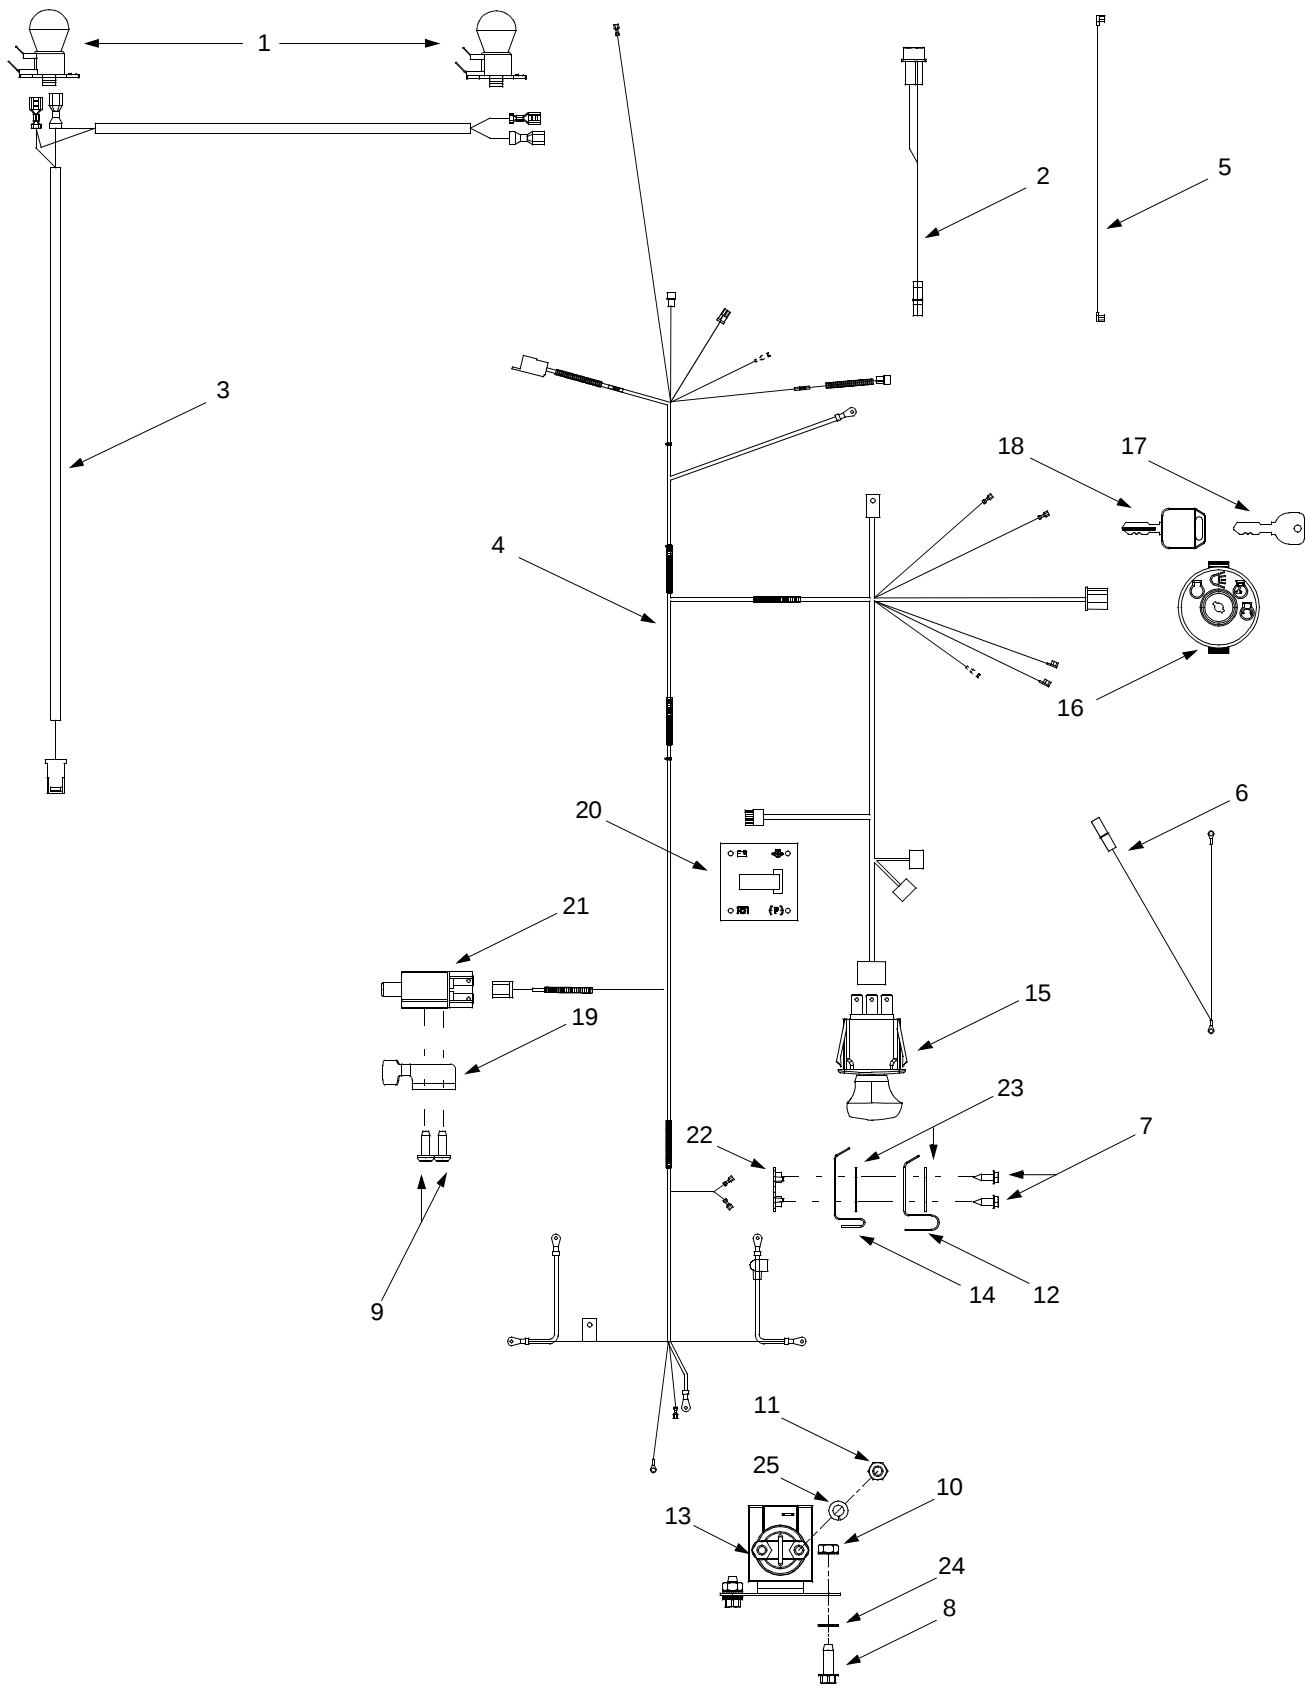

Model 624

REF. NO.	PART NO.	DESCRIPTION
1	625-0051	Bulb/Socket Headlight Assembly
2	629-0126	Wire Harness, Afterfire Solenoid, #18 x 5
3	629-0469A	Wire Harness, Headlight
4	629-1055	Wire Harness, Main
5	629-1077	Wire Assembly, Reverse Jumper
6	629-1083	Wire Assembly, Ground Jumper
7	710-0227	Self-tapping Screw, #8-18 x .5
8	710-0642	Self-tapping Screw, 1/4-20 x .75
9	710-1823	Pan Phillips Screw, #12-16 x .625
10	712-0271	Hex Sems Nut, 1/4-20
11	712-3006	Hex Nut, 1/4-20
12	725-1303	Outer Seat Spring Switch
13	725-1426	12V Solenoid, 100 Amp
14	725-1439	Inner Seat Spring Switch
15	725-1716	Electric PTO Switch
16	725-1741	Ignition Swicth
17	725-1744	Ignition Key
18	725-1745	Ignition Key w/ Plastic Cover
19	725-1774	Parking Brake Switch Spring
20	725-1976	Systems Indicator Monitor, Hour Meter
21	725-3223	Plunger Switch (Parking Brake)
22	726-0278	Insultaor Boss Plate
23	726-0279	Insulator Plate
24	736-0222	External Lock Washer, 1/4
25	736-0329	Lock Washer, 1/4

Model 624

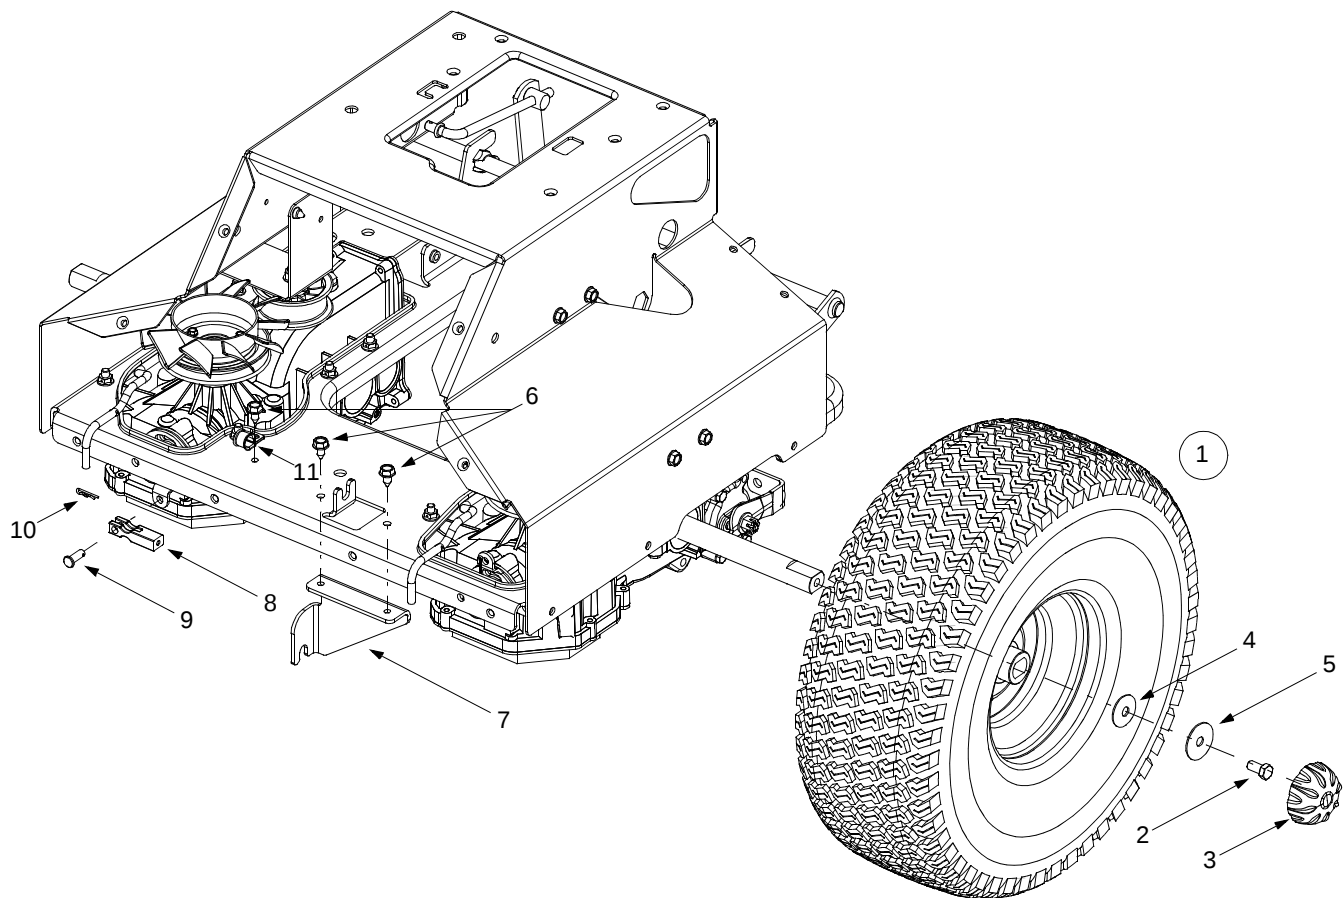

REF. NO.	PART NO.	DESCRIPTION
1	634-0210	Wheel Assembly Complete, 20 x 7
	634-0209	Rim Only
	734-0255	Air Valve
	734-2018	Tire Only, 20.4 x 7.0 x 8.0 Turf Master
2	710-0180	Hex Cap Screw, 3/8-24 x .75
3	731-2290A	Hub Cap
4	736-0356	Bell Washer, .391 x 1.38 x .062
5	736-0372	Flat Washer, .410 x 1.59 x .062
6	710-0604A	Self-tapping Screw, 16-18 x .625
7	783-1069	Cable Bracket
8	748-0452	Control Yoke
9	711-1601	Clevis Pin, .3125 x .81
10	714-0104	Internal Cotter Pin, 5/16
11	726-0272	Clamp, 9/16