
SECTION 9: ACCESSORIES & KITS

The following accessories and kits are available for **single-stage, two-cycle snow throwers**. See the retailer from which you purchased your snow thrower, an authorized *MTD* Service Dealer or phone (800) 800-7310 for information regarding price and availability.

MODEL	DESCRIPTION
OEM-390-697	Electric Start Kit (fits models with a two-cycle <i>Tecumseh</i> 3 HP or 3.5 HP engine)
OEM-390-996	Electric Start Kit (fits models with a two-cycle <i>Tecumseh</i> 4.5 HP – 5.5 HP engine)
OEM-737-0325	<i>MTD</i> two-cycle snow thrower oil (contains six 2.6 oz. bottles)
753-0451	Shave Plate (includes replacement shave plate and hardware)
753-04472	Rubber Auger Kit, Snow Thrower Single Stage

This technical drawing is an exploded view of a motorized vehicle, likely a small utility vehicle or a specialized motorcycle. The diagram illustrates the assembly of various components, including the chassis, engine, body panels, and wheels. Key parts are labeled with numbers 1 through 81. The chassis (1) is the central structural frame. The engine (79) is mounted on the chassis. The body panels (39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81) are shown in their relative positions. The wheels (16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81) are shown with their respective axles and bearings. The diagram also shows various fasteners, bolts, and nuts used in the assembly.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	684-04027A	Auger Assembly Complete, 21"	44	725-0201	Key
2	684-04025	Auger Weldment Assembly, 21"	45	725-2018	Key Switch
3	710-0896	Self-tapping Screw, 1/4-14 x 0.625"	46	731-1133C	Plastic Cap, 1.75 Dia x .72
4	735-04032	Rubber Spiral	47	7510009636	Recoil Handle (Mitten Grip)
5	735-04033	Rubber Paddle	48	736-0225	Lock Washer Internal, .625 x 1.058
6	684-04028	Auger Housing Assembly 21"	49	7512B1476	Primer Button
7	710-0134	Carriage Bolt, 1/4-20 x .62"	50	710-0627	Hex Screw, 5/16-24 x .75 Gr. 5
8	710-1003	Screw, #10-16 x .625	51	710-0805*	Hex Screw, 5/16-18 x 1.50 Gr. 5
9	710-3008	Screw, 5/16-18 x .75		710-3025**	Hex Screw, 5/16-18 x .625 Gr. 5
10	710-0653	Self-tapping Screw, 1/4-20 x .375	52	726-0205	Hose Clamp
11	710-0597	Hex Screw, 1/4-20 x 1.00 Gr. 5	53	736-0242	Cupped Washer, .340 x .872 x .060
12	710-1005	Hex Cap Screw, 1/4-14 x .50"	54	747-04150	Gas Tank Wire Support
13	710-0433	Hex Cap Screw, 1/4-20 x .625"	55	750-0589*	Spacer, .325 ID x .625 OD x .88
14	712-04064	Hex Flange Lock Nut, 1/4-20	56	750-0716*	Spacer
15	736-0176	Flat Washer, .265 x .938 x .120	57	751-0535-17	Fuel Line
16	726-0299	Push Cap, 1/2"	58	751-10049	Fuel Cap
17	731-1033	Shave Plate, 2.66 x 19.88	59	751-10023	Fuel Tank, 2 Quart
18	732-0357A	Extension Spring, .33 OD x 1.12	60	754-0367*	V-Belt, 3/8
19	736-0176	Flat Washer, .265 x .938 x .120		754-0101A**	V-Belt, 1/2
20	736-0326	Flat Washer, .510 x 1.00 x .125	61	756-0416B	Pulley Half, .625 ID x 2.25 OD
22	741-0919	Ball Bearing	62	756-0550*	Pulley, 3/8 x 1/2-20 x 6.0
23	741-0600	Ball Bearing, 17 x 40 x 12		756-0475**	Pulley, 1/2 x 1/2-20 x 6.0
24	746-04091	Clutch Cable	63	790-00048	Mounting Bracket Support
25	748-0234	Shoulder Spacer	64	7519630	Recoil Handle
26	749-04114	Lower Handle	65	712-3004A	Hex Flange Lock Nut 5/16-18 Gr. 5
27	750-04230	Flange Spacer	66	723-0345	Primer Tube
28	790-00062	Belt Keeper	67	7511824110	Choke Lever Knob
29	784-5174	Bearing Cup	68	710-04187	Hex Screw, 1/4-15 x .50
30	790-00039	Idler Bracket w/ Brake	69	736-0362	Flat Washer, .320 x 1.25
31	790-00045	Belt Cover	70	736-0400	Flat Washer, .194 x .62 x .063
32	710-0487	Carriage Bolt, 5/16-18 x 2.0	71	629-0236	Extension Cord, 2-Prong
33	720-0284	Handle Knob Assembly, 5/16-18	72	736-0159	Flat Washer, .349 x .879 x .063
34	725-0157	Cable Tie	73	710-04071	Carriage Screw, 5/16-18 x 1.0
35	736-0451	Saddle Washer, .320 ID x .93	74	710-0451	Carriage Bolt, 5/16-18 x .075
36	747-04165	Bail	75	732-04111	Chute Adjustment Spring
37	749-1092A	Upper Handle	76	720-0284	Handle Knob Assembly, 5/16-18
38	734-04070	Wheel-3 spoke, 7 x 1.61	77	731-04127	Lower Chute 5" Dia
39	684-04043*	Shroud Assembly	78	731-04353	Lower Chute Ring
	684-04044**	Shroud Assembly	79	731-04886	Chute Adapter, 5" Dia
40	710-1882	Hex Flange Screw 5/16-18 x 1.50 Gr. 5	80	731-04388	Chute Handle
41	710-1003	Hex Cap Screw, #10-16 x .625"	81	731-04426	Upper Chute w/ Export Label
42	712-0252	Hex Nut, 5/8-32 x .12	82	736-0119	Lock Washer, 5/16
43	712-04063	Hex Flange Lock Nut, 5/16-18, Gr. 5			

* Model 240 only

** Model 250/S250, 250/S250 & 230/S230

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Snow thrower features/components vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.