



Ref. No.	Part No.	Description
1	710-1268	Screw, #10-16 x .375
2	712-04063	Nut, Flange Lock, 5/16-18, GrF
3	712-3027	Nut, Flange Lock, 1/4-20
4	720-0309A	Seat Adjuster Grip
5	726-0201	Nut, Speed, .3125 ID
6	731-04074	Spacer
7	732-0499	Compression Spring, .41 x 1.5
8	732-1184	Spring, Extension, .84 Dia. x 4.6
9	736-0275	Wash, Flat, .344 x .688 x .065
10	736-3019	Wash, Flat, .531x 1.062 x.134
11	738-0137A	Screw, Shoulder, .340 x .285
12	738-0296	Screw, Shoulder, .437 x .268
13	738-0966A	Screw, Shoulder, .50 x .925
14	783-0209D	Seat Bracket, Lift
15	783-0611	Seat Stop
16	783-0738C	Seat Pivot Bracket
17	783-0739A	Seat Adjustment Lever
18	783-0753	Seat Adjustment Selector
19	757-04014A	Medium Back Seat, Black
20	726-3046	Ratchet Clip
21	735-0656	RH Foot Pad, Rubber
22	735-0657	LH Foot Pad, Rubber
23	710-0451	Bolt, Carriage, 5/16-18, .750, Gr1
24	710-0599	Screw, 1/4-20, 0.500
25	710-0726	Screw, 5/16-12, 0.750
26	710-0895	Screw, 1/4-15, 0.750
27	731-1990	Cover, Lift Lever


Ref. No.	Part No.	Description
28	731-2104C	Cover, w/ Cup Holder
29	736-3078	Washer, Flat, .344 x 1.0 x .063
30	783-04333A	Fender
31	783-0677B	Adjustment Bracket, Lift
32	783-1489A	Mounting Bracket, Seat
33	710-0227	Screw, #8-18 x .50
34	726-0279	Plate, Insulator
35	725-1303	Spring Switch, Outer
36	725-1439	Spring Switch, Inner
37	726-0278	Plate, Insulator Boss
38	683-04079	Shaft Assembly, Lift
39	712-04065	Nut, Flange Lock, 3/8-16, GrF
40	714-0104	Pin, Cotter, .072 Dia. x 1.13
41	714-0111	Pin, Cotter, 3/32, 1.0
42	716-0106A	Ring, E Type, .625 Dia.
43	720-0311	Grip, Handle, 1/2
44	732-0874	Spring, Torsion
45	738-0138a	Screw, 5/16-18 x .620 Gr2
46	738-0380	Screw, Shoulder, .50 x .27
47	741-0225	Bearing, Hex Flange
48	746-0968	Cable, Lift, 16.16
49	747-04155	Handle, Lift
50	756-1154	Pulley, Roller
51	783-0678A	Arm, Lift
52	710-0604A	Screw, 5/16-18 x .625
53	736-0607	Lock Washer, 5/16

10

Illustrated Parts List

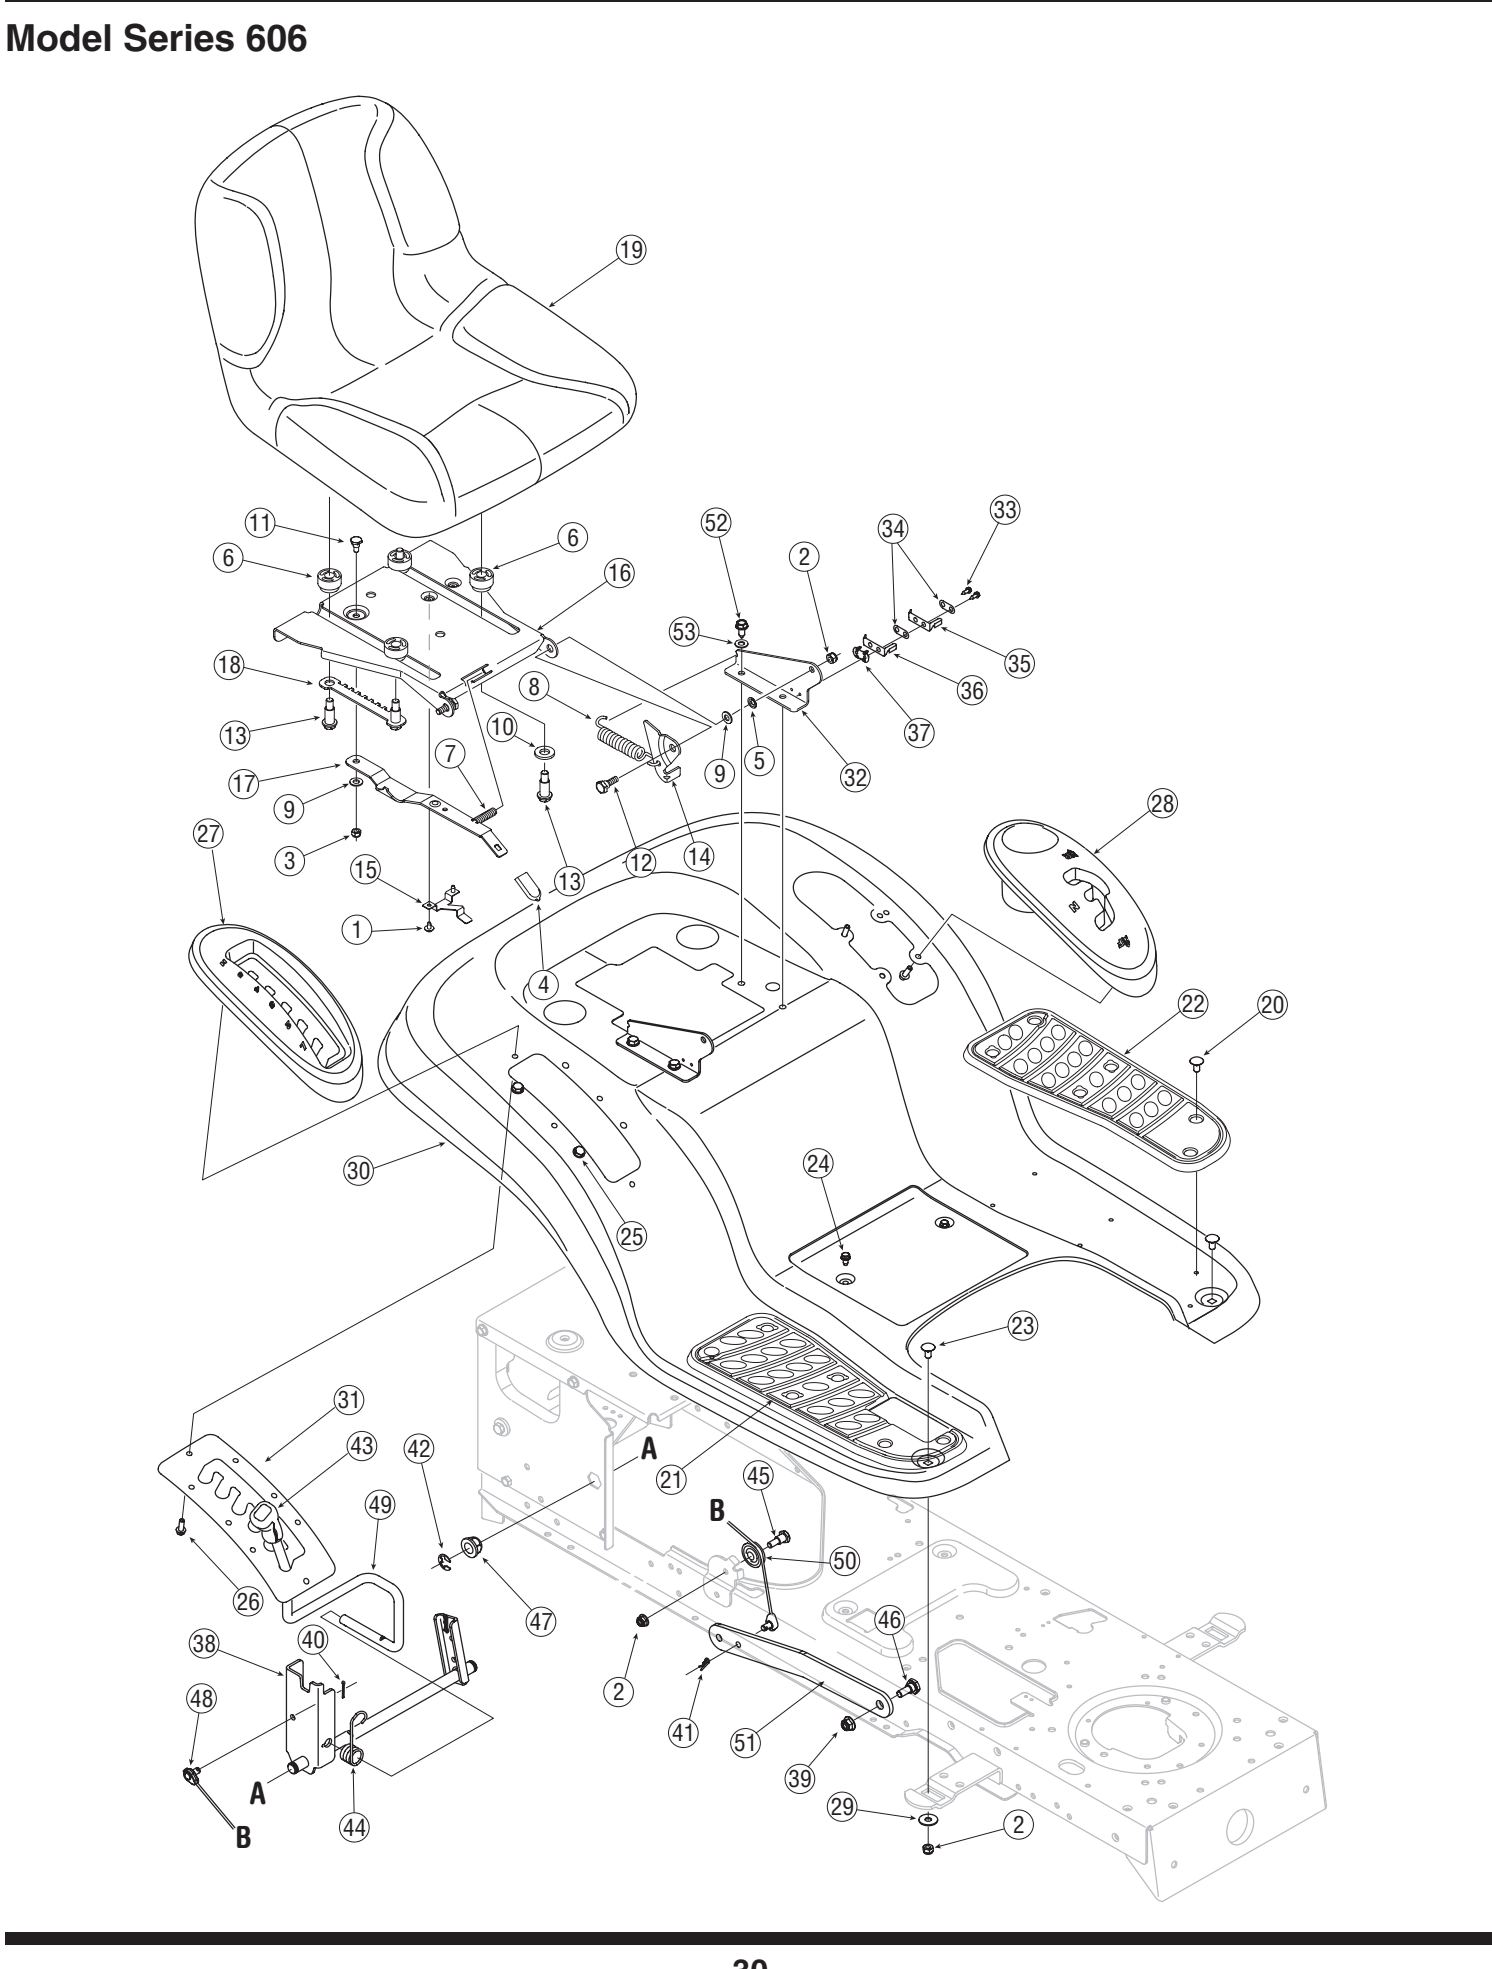

Model Series 606

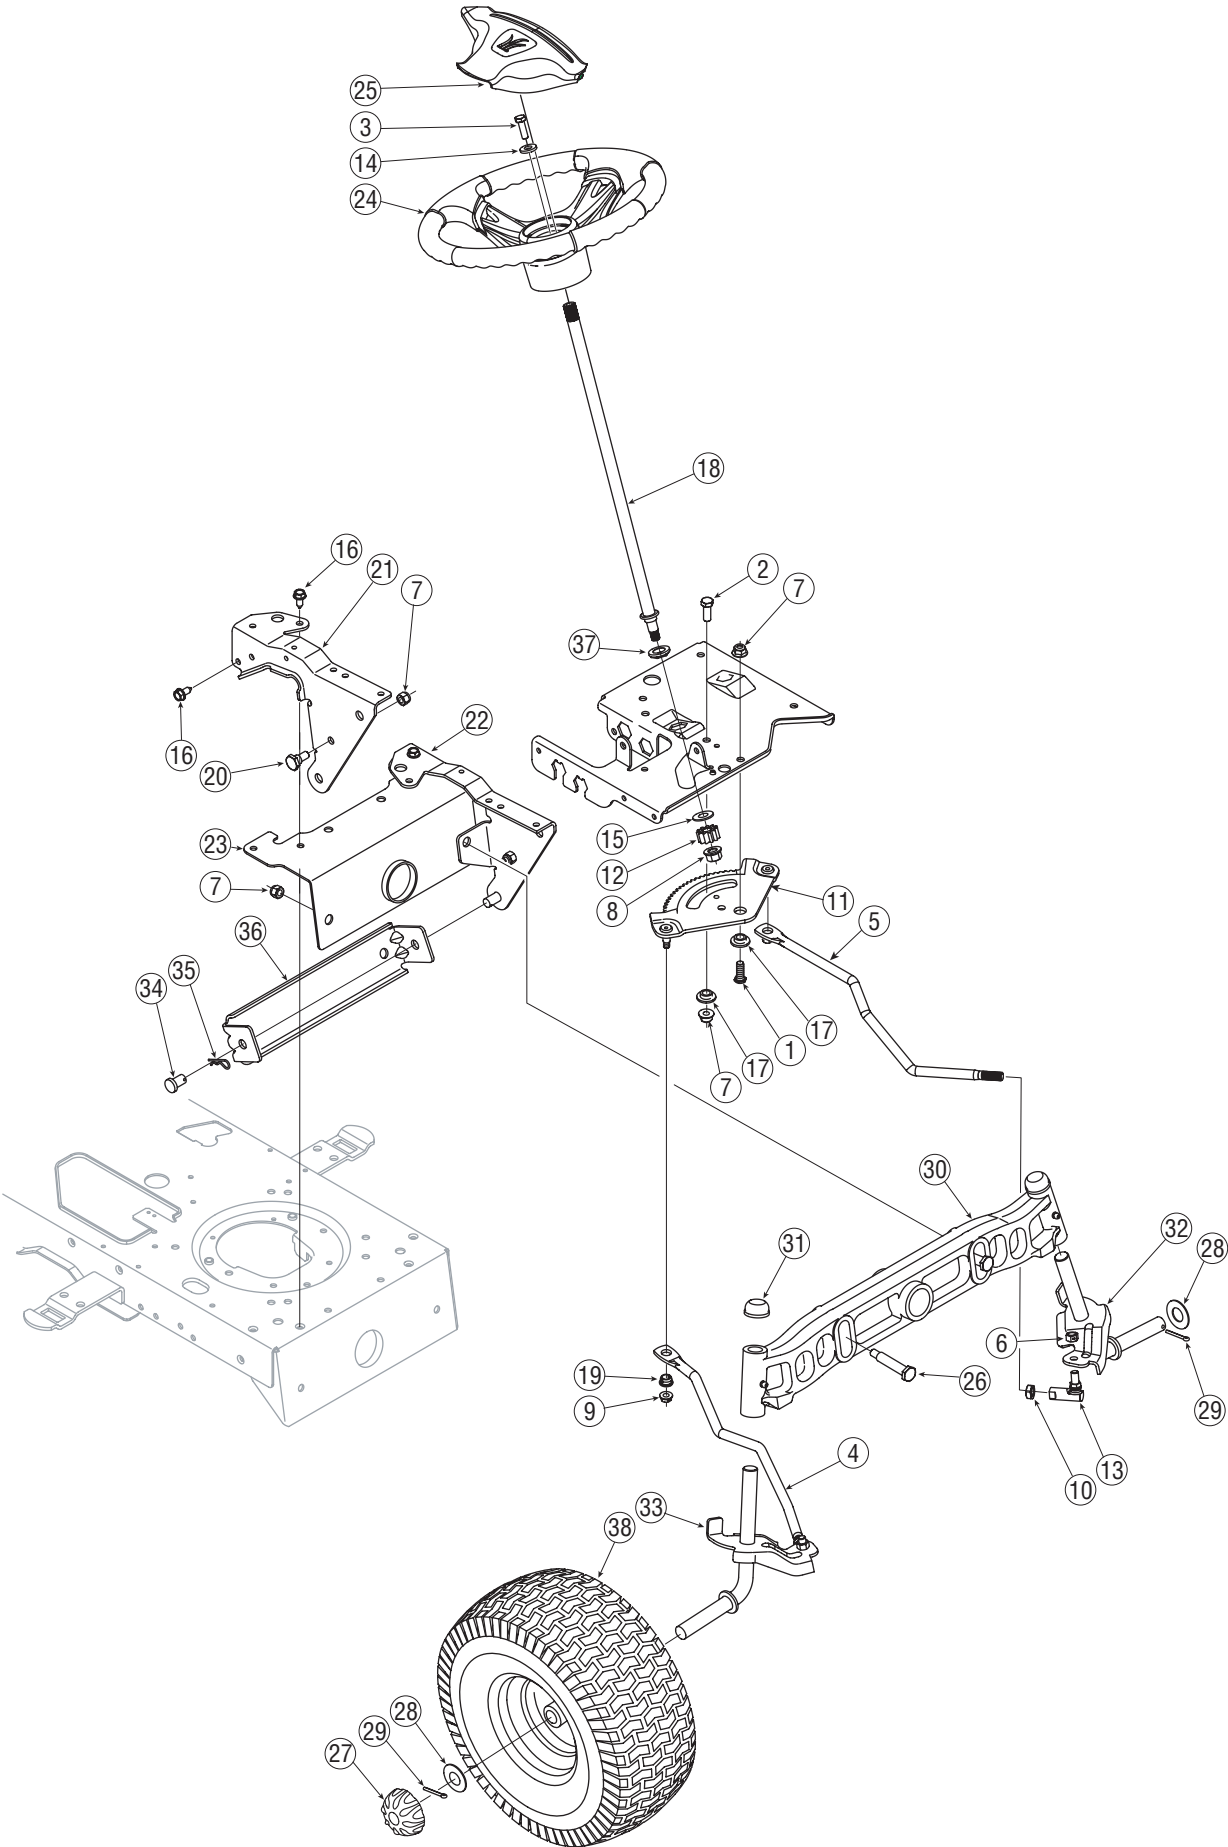


10

Illustrated Parts List



Ref. No.	Part No.	Description
1	710-04095	Hex Screw, 3/8-16, 1.00, Gr5
2	710-0514	Hex Screw, 3/8-16, 1.00, Gr5
3	710-0643	Hex Screw, 5/16-18, 1.00, Gr5
4	711-1408	Link, Drag, RH
5	711-1409A	Link, Drag, LH
6	712-0214	Nut, Hex Lock, 3/8-24
7	712-04065	Nut, Flange Lock, 3/8-16, Grf
8	712-0459	Nut, Flange Lock, 7/16-20
9	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
10	712-0240	Nut, Jam, 7/16-20, Gr2
11	717-1550E	Gear, Steering, 11/90 Ratio
12	717-1554	Gear, Pinion, Steering
13	723-0448A	Ball Joint, 7/16-20, Lock
14	736-3004	Washer, Flat, .406 x .875 x .105
15	736-3084	Washer, Flat, .51 x 1.12 x .06
16	710-1260A	Screw, 5/16-18, 0.750
17	738-04154	Spacer, Shoulder, .38 x 1.00 x .31
18	738-1001A	Shaft, Steering, .625 OD x 24.25
19	741-0475	Plastic Bushing .380 ID
20	738-0143	Screw, Shoulder, .498 x .340
21	783-0726E	Pivot Bracket, Support RH
22	783-0727D	Pivot Bracket, Support LH
23	783-0728	Pivot Bracket, Bar
24	631-04008	Steering Wheel, 13.25
25	731-04065	Steering Wheel Cover
26	738-1011A	Shoulder Screw, .5 x 2.2, 3/8-16
27	734-2290A	Deluxe Hub Cap
28	736-0316	Flat Washer, .78 x 1.589 x .06
29	714-04039	Cotter Pin, 5/32 x 1.25
30	719-04105	Cast Iron Pivot Bar
31	726-0341	Push Cap
32	638-04003	LH Axle Assembly, .750
33	638-04004	RH Axle Assembly, .750
34	711-0332	Pin, Clevis, .50 x .78
35	714-04023	Cotter Pin, Internal, .080 x 1.5625
36	783-0720A	Adjustment Bracket, Front
37	741-0656A	Hex Flange Bearing
38	634-04087	Wheel Assembly Complete, 15 x 6
	734-04040	Tire Only 15 x 6 x 6
	634-04081	Rim Only w/ Valve Stem

Model Series 606

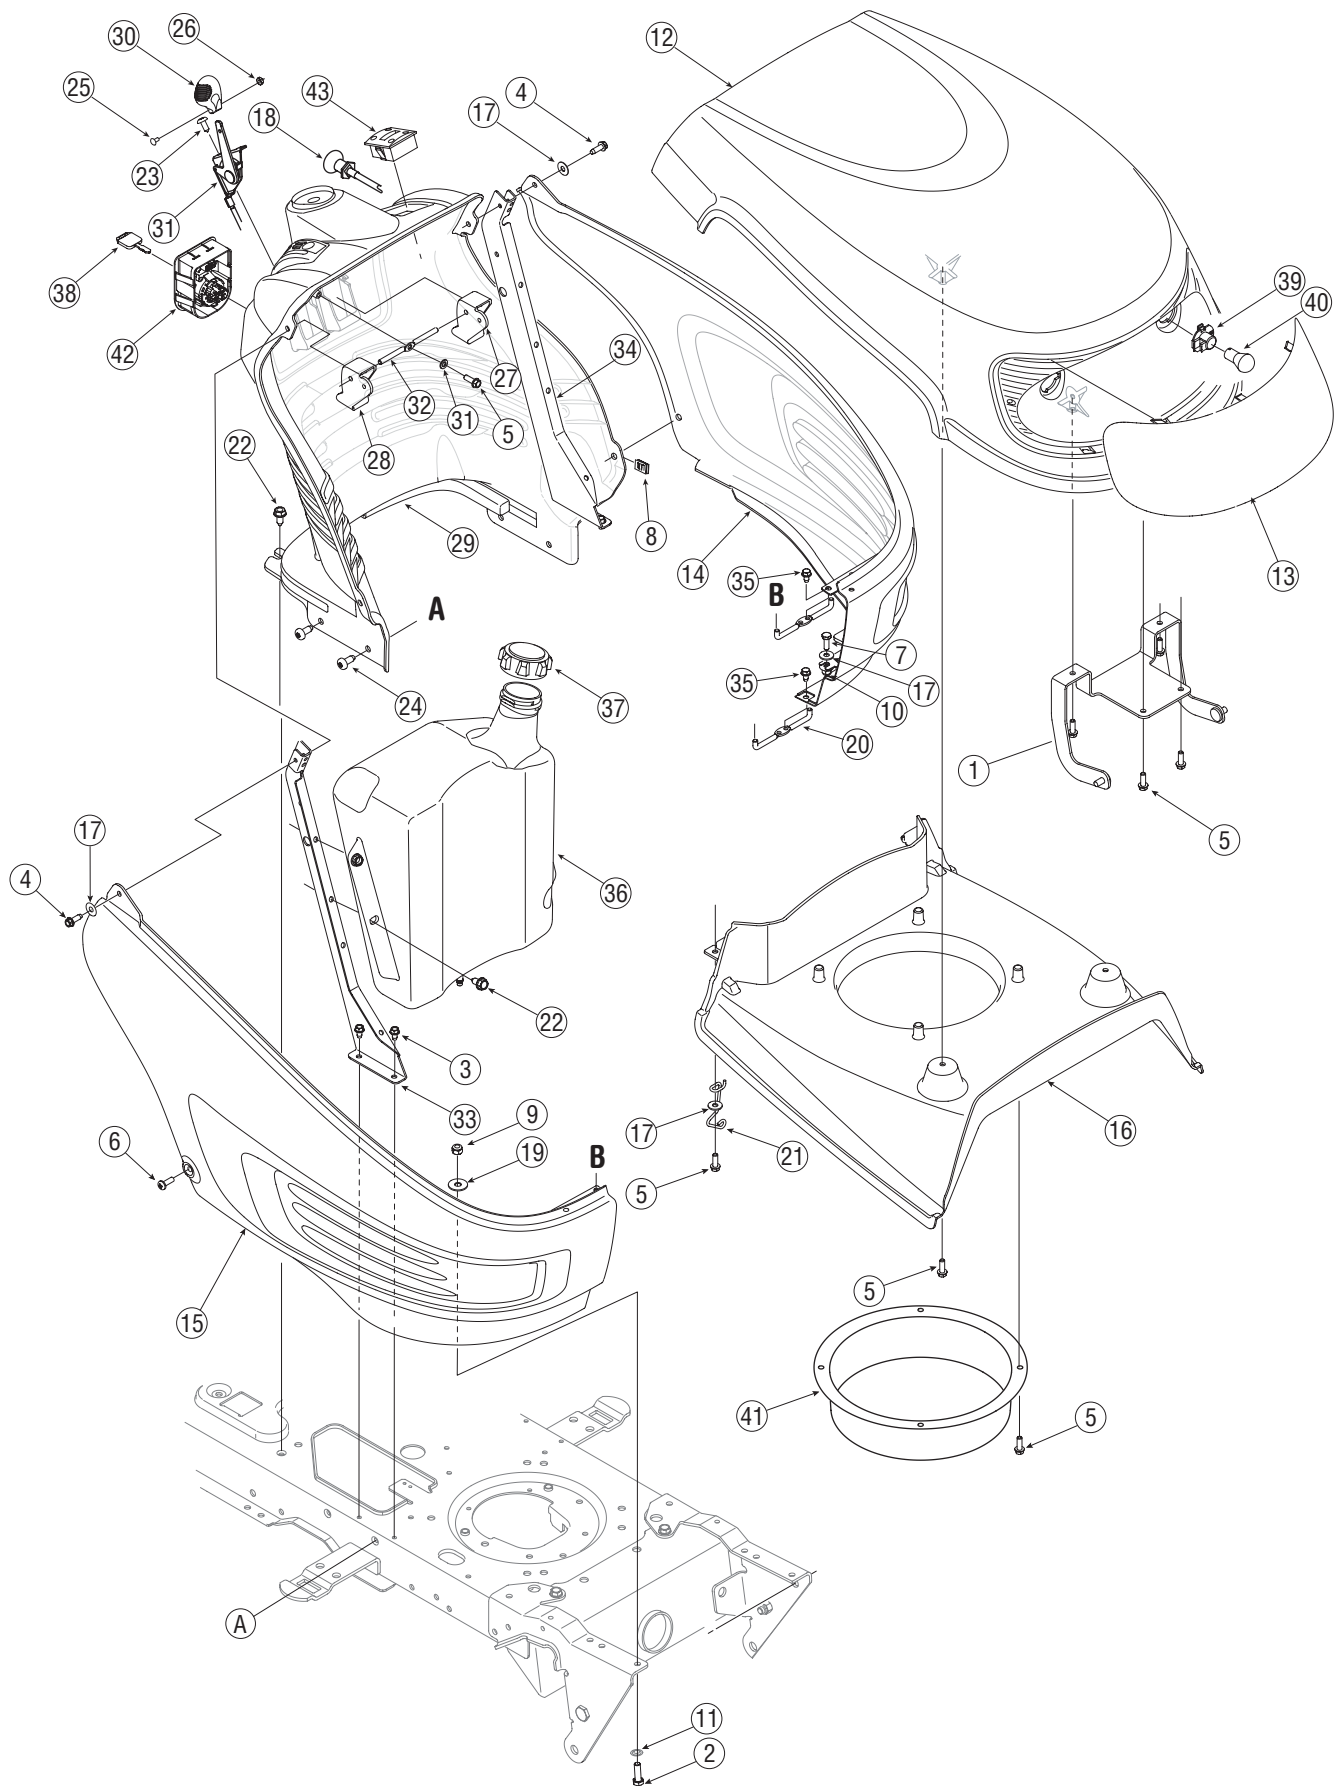

Ref. No.	Part No.	Description
1	683-0305	Bracket Assembly, Hood
2	710-0376	Hex Screw, 5/16-18, 1.00, Gr5
3	710-0599	Screw, 1/4-20, 0.500
4	710-0642	Screw, 1/4-20, 0.750
5	710-0895	Screw, 1/4-15, 0.750
6	710-0924	Screw, Machine, 1/4-20, 0.750
7	710-3015	Hex Screw, 1/4-20, .75, Gr5
8	712-0292	Nut, Clip, 1/4-20
9	712-04063	Nut, Flange Lock, 5/16-18, Grf
10	712-04064	Nut, Flange Lock, 1/4-20, Grf
11	726-0201	Nut, Speed, .3125 ID
12	731-2283A	Hood
13	731-2286A	Lens
14	731-2307B	Side Panel, LH
15	731-2308B	Side Panel, RH
16	731-2284	Plenum
17	736-0173	Washer, Flat, .28 x .74 x .063
18	746-1085A	Choke Knob w/ Cable, 37.5"
19	736-3078	Washer, Flat, .344 x 1.0 x .063
20	747-04301	Support, Side Panel
21	747-2127	Rod, Hood Latch
22	710-0726	Screw, 5/16-12, 0.750
23	710-1017	Screw, 1/4-14, 0.625


Ref. No.	Part No.	Description
24	710-1611B	Screw, 5/16-18, 0.750
25	710-3217	Screw, Machine, #8-32, 0.375
26	712-0142	Nut, Hex, #8-32
27	731-04213	Brake Lever
28	731-04214	Cruise Control Lever
29	731-05002	Dash Panel
30	731-1857	Control Knob
31	746-1100	Throttle Cable
32	747-1155	Rod, Brake / Cruise Pivot
33	783-04908	Support Plate, Dash, RH
34	783-04909	Support Plate, Dash, LH
35	710-1652	Screw, 1/4-20 x .625
36	751-0658E	Fuel Tank, 3 Gal.
37	751-0603	Fuel Cap
38	725-1744	Key, Ignition
	725-1745	Key w/ Plastic Cover, Ignition
39	725-1649	Socket, Lamp
40	725-0963	Miniature Lamp, 12V
41	731-2234A	Bellow
42	725-04227	Ignition Switch Module
43	725-04036B	Systm. Ind. Monitor w/ Hr. Meter
—	629-04083	Headlight Wire Harness
—	725-04339	Tractor Wire Harness

10

Illustrated Parts List



Model Series 606

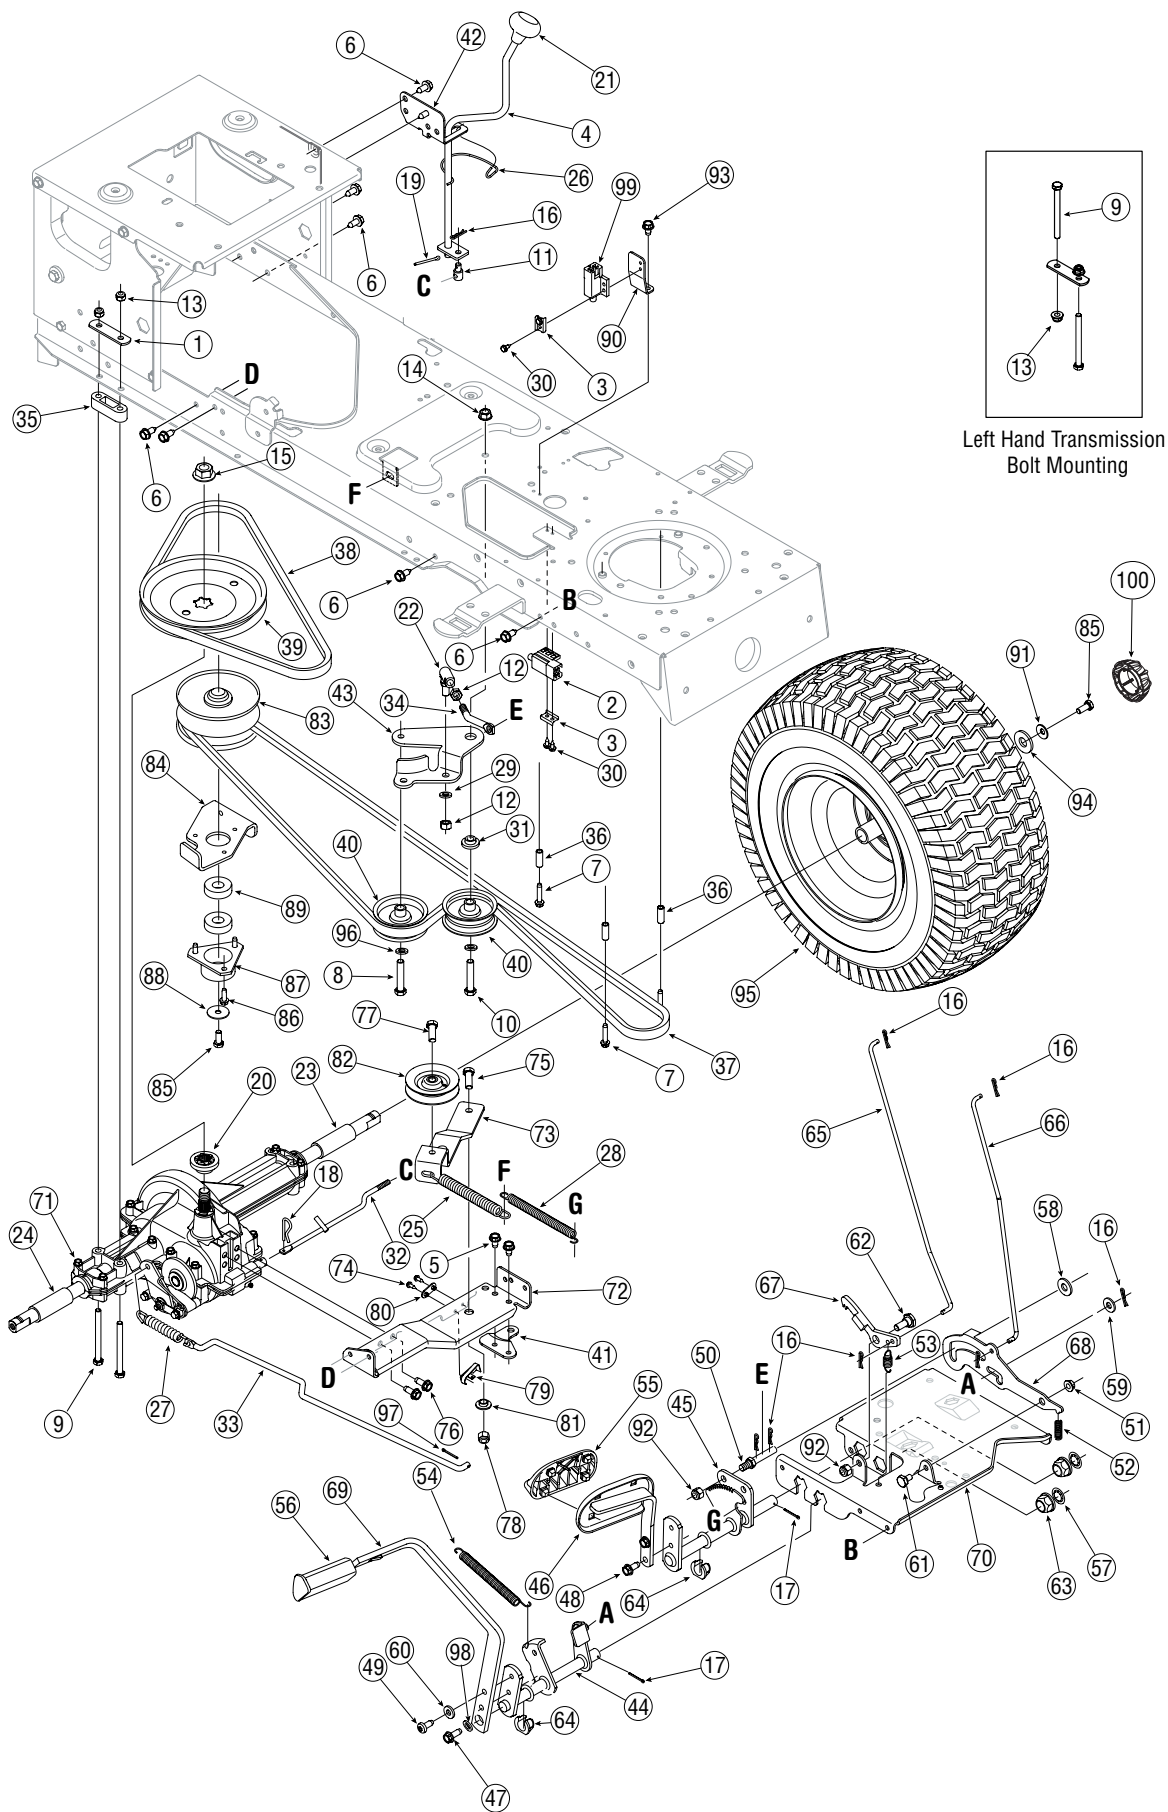

Ref. No.	Part No.	Description
1	17840	Mounting Bracket, Transaxle
2	725-04039	Switch, Interlock
3	17962	Plate, Switch
4	647-04020	Lever Assembly, Shift
5	710-0607	Screw, 5/16-18, 0.500
6	710-0726	Screw, 5/16-12, 0.750
7	710-0809	Screw, 1/4-20, 1.250
8	710-1007	Screw, Sems, 3/8-16, 1.500
9	710-1266	Screw, 5/16-18, 3.50, Gr5
10	710-3144	Screw, 3/8-16, 2.00, Gr5
11	711-0736	Adjustment Ferrule 1/4-20 x 1.
12	712-0241	Nut, Hex, 3/8-24, Gr5
13	712-04063	Nut, Flange Lock, 5/16-18, GrF
14	712-0431	Nut, Flange Lock, 3/8-16, GrF
15	712-0700	Nut, Flange, 9/16-18, Gr2
16	714-0104	Pin, Cotter,.072 Dia. x 1.13
17	714-0111	Pin, Cotter, 3/32, 1.0
18	714-0209	Cotter Pin, Internal,.125 Dia.
19	714-0470	Pin, Cotter, 1/8 x 1.25
20	718-0758A	Pulley Hub, 5/8 Spline
21	720-04028	Knob, Shift
22	723-3018	Ball Joint
23	731-04602	Sleeve,.758 x.821 x 3.3125
24	731-04604	Sleeve,.758 x.821 x 2.4375
25	732-0384	Spring, Extension,.62 Dia x 6.12
26	732-0525	Spring Clip, Shifter
27	732-0716	Spring, Extension,.59 OD x 4.00
28	732-0963	Spring, Extension,.50 Dia x 6.37
29	736-0169	Washer, Lock, 3/8
30	710-0224	Screw, #10-16,.50
31	738-0372B	Spacer, Shoulder, 1.00 x.38 x.38
32	747-04146A	Rod, Shift
33	747-04164	Rod, Brake
34	747-1127	Idler Rod, Adjustable, 3/8
35	748-0334	Spacer,.68
36	750-0566A	Spacer,.260 x.372 x 1.030
37	754-0467	Belt, V-Type
38	754-0468	Belt, V-Type
39	756-04002	Pulley, V-Type, 7.25 Dia.
40	756-04224	Idler Pulley, Flat 2.75 OD
41	783-04283	Bracket, Shift

Ref. No.	Part No.	Description
42	783-04360	Bracket, Shift, F-N-R
43	783-04442	Idler Bracket, Center Double
44	647-0031B	Control Assembly, Brake
45	647-0032A	Control Assembly, Speed
46	683-0266	Pedal Assembly
47	710-0650	Screw, 5/16-18, 0.875
48	710-1260A	Screw, 5/16-18, 0.750
49	710-1611B	Screw, 5/16-18, 0.750
50	711-04159B	Pin, 3/8-16 x 2.68
51	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
52	732-0335	Spring, Compression,.405 x 1.17
53	732-0955	Spring, Extension,.50 OD x 1.41
54	732-0963	Spring, Extension,.50 OD x 6.37
55	735-0662	Pad
56	735-3049	Pad, Brake
57	736-0187	Washer, Flat,.64 x 1.24 x.06, Ht
58	736-0262	Washer, Flat,.385 x.870 x.092
59	736-0300	Washer, Flat,.406 x.875 x.059
60	736-3008	Washer, Flat,.344 x.750 x.120
61	738-0155	Screw, Shoulder.437 Dia x.162
62	738-0380	Screw, Shoulder,.50 x.27 Lg,
63	741-0225	Bearing, Hex Flange
64	741-3065B	Split Bearing, Hex Flange
65	747-04093	Rod, Brake Lock
66	747-04096	Rod, Cruise Control
67	748-04039B	Latch, Cruise Control
68	783-0732A	Bracket, Lockout
69	783-0773A	Ped, Brake
70	783-04612	Bracket, Steering Support
71	618-04034	Transmission, Single Speed
72	683-04055A	Bracket Assembly, Torque
73	683-04130	Bracket, Idler
74	710-0227	Screw, #8-18 x.50
75	710-0514	Screw, 3/8-16, 1.00
76	710-0604A	Screw, 5/16-18,.625
77	710-1315	Screw, 3/8-16, 1.250
78	712-0130	Nut, Lock, 3/8-16, Nylon
79	725-1644	Switch Spring, Short
80	726-0320	Plate, Insulator
81	750-04294	Spacer, Shoulder
82	756-04209	Pulley, V-Type, 3.06

Continued on next page

10

Illustrated Parts List



10

Illustrated Parts List




Model Series 606

Ref. No.	Part No.	Description
83	656-04015	Pulley Ass'y, Variable Speed
84	683-04129	Bracket, Pulley
85	710-0627	Screw, 5/16-24,.750
86	710-1652	Screw, 1/4-20,.625
87	718-04012	Cup, Bearing
88	736-0362	Washer, Flat
89	741-0600	Ball Bearing
90	783-04722	Switch Bracket, Parking Brake
91	736-0242	Washer, Bell,.340 x.872 x.060
92	712-04065	Nut, Flange Lock, 3/8-16, GrF
93	710-0599	Screw, 1/4-20 x.500
94	736-0430	Flat Washer,.350 x 1.59 x.062
95	634-0177	Wheel Assy Comp, 20 x 10 x 8
	734-1873	Tire Only 20 x 10 x 8
	634-0070	Rim Only w/ Valve Stem
96	736-3010	Flat Washer, .407 x .812 x .135
97	714-0507	Pin, Cotter, 3/32 x .750
98	736-0119	Lock Washer, 5/16
99	725-3167	Switch
100	731-2290A	Hub Cap

10


Illustrated Parts List

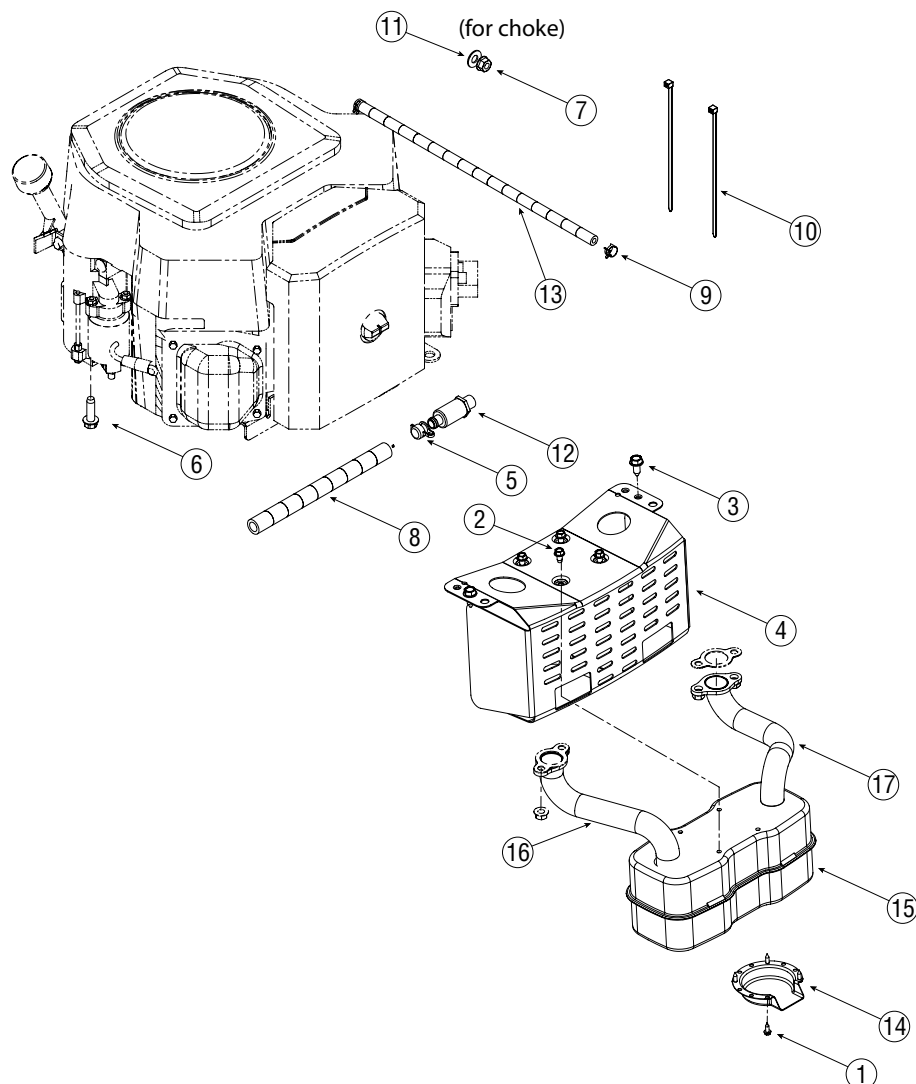

Ref. No.	Part No.	Description
1	710-0227	AB Screw #8-18 x 0.5
2	710-0599	TT Screw 1/4-20 x 0.5
3	710-0726	AB Screw 5/16-12 x 0.5
4	783-0615D	Muffler Bracket
5	751-3142	Oil Drain Cap
6	710-1315	TT Screw 3/8-16 x 1.25
7	712-3005	Flange Lock Nut, 3/8-16
8	751-3141	Oil Drain Extension Hose
9	726-0205	Hose Clamp

Ref. No.	Part No.	Description
10	725-0157	Cable Tie
11	736-0300	Lock Washer, .406 x .875 x .059
12	751-3140	Oil Drain Valve
13	751-10349	Fuel Line Hose
14	751-0564A	Muffler Deflector
15	751-0805A	Muffler
16	751-0645A	Exhaust Pipe - RH
17	751-0644B	Exhaust Pipe - LH

Model Series 606

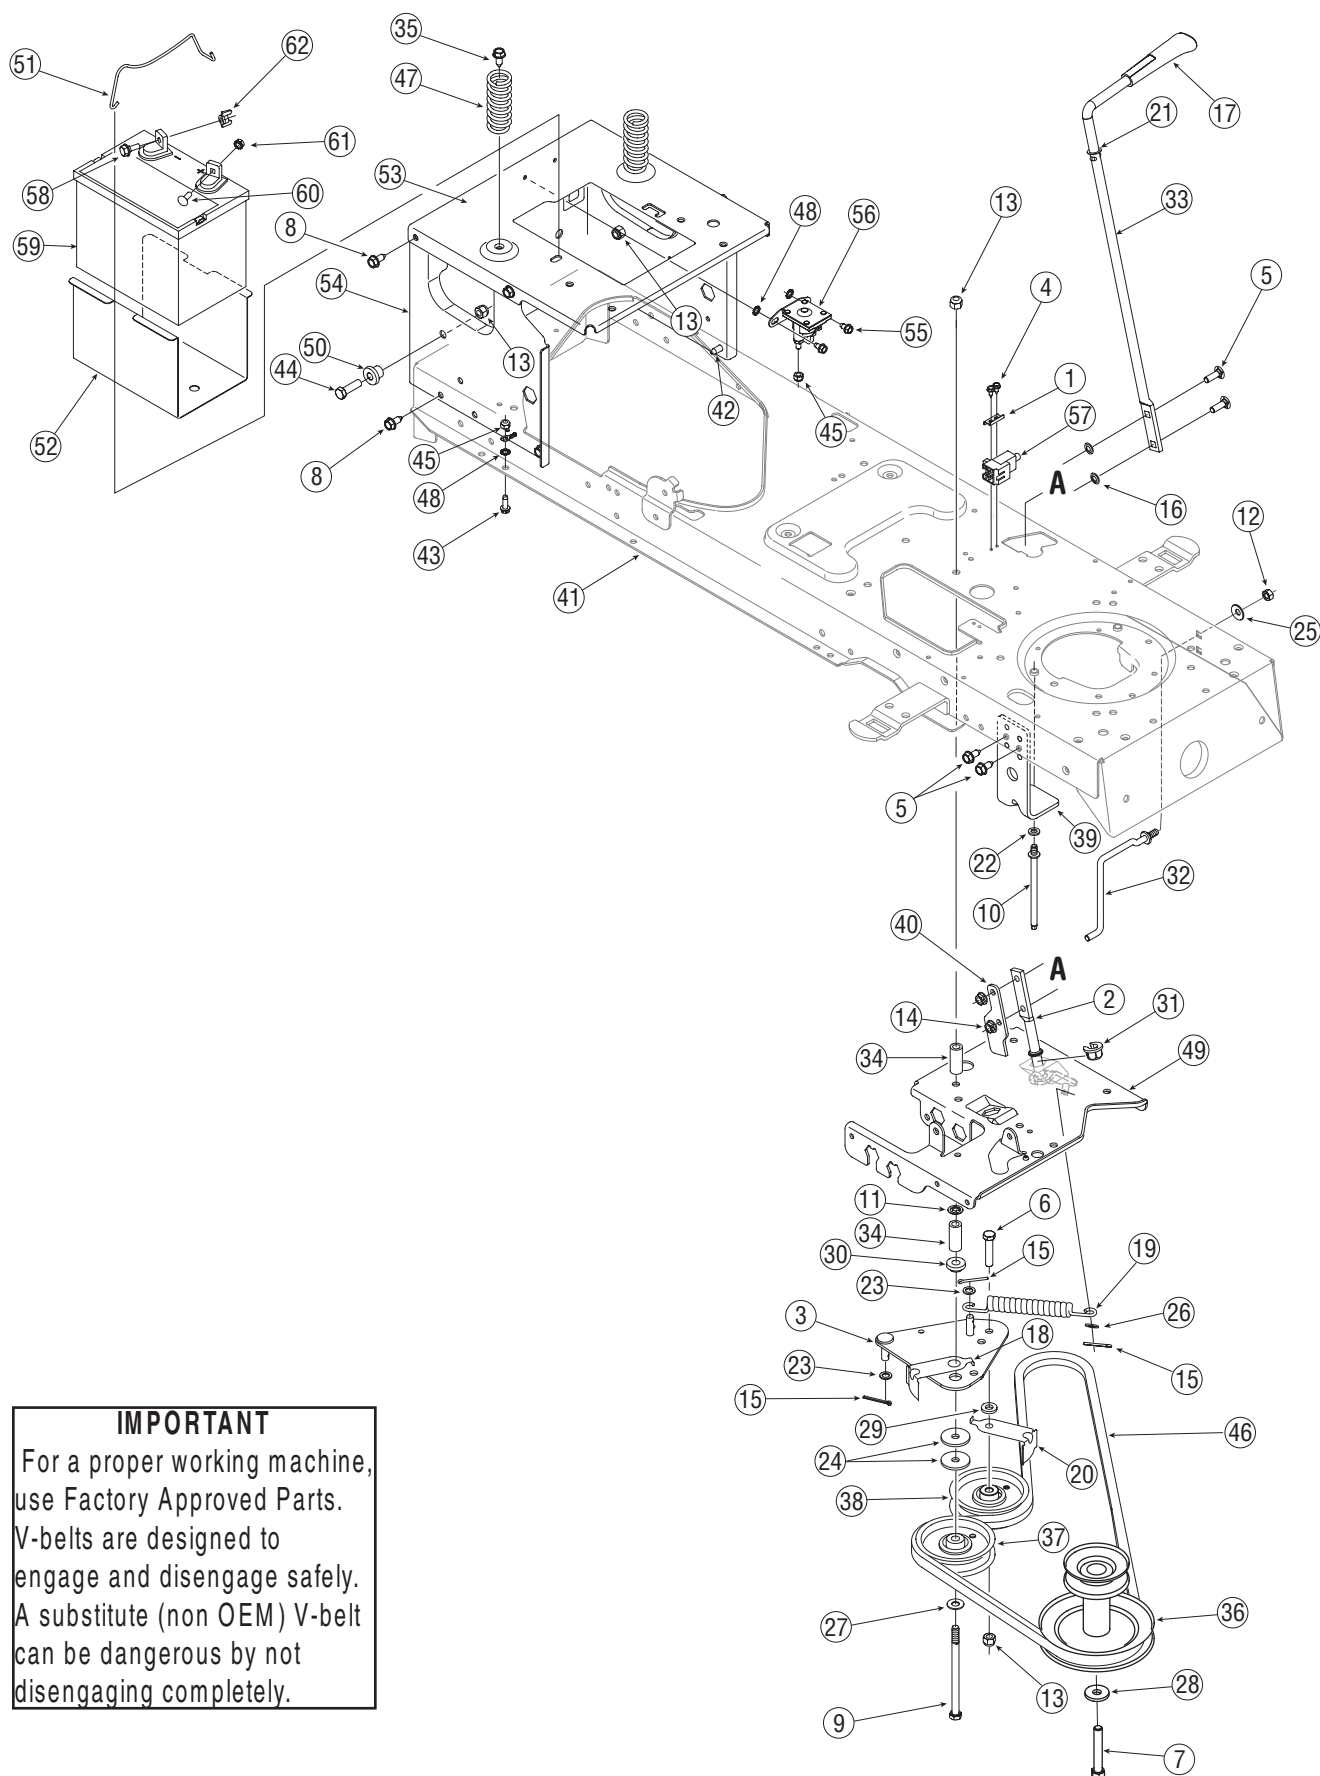


Ref. No.	Part No.	Description
1	17962	Plate, Switch
2	647-0064	Lever Assembly, Engagement
3	683-0302	Plate Assembly, Engagement
4	710-0224	Screw, #10-16, 0.500
5	710-0276	Screw, Carriage, 5/16-18, 1.00
6	710-0347	Screw, 3/8-16, 1.75, Gr5
7	710-04377	Screw, 7/16-20, 2.75, Gr5
8	710-0726	Screw, 5/16-12, 0.750
9	710-0831	Screw, 3/8-16, 5.50, Gr5
10	711-1044A	Pin, Belt Guard, 5/16 x 4.75
11	712-0229	Nut, Push, 3/8
12	712-04063	Nut, Flange Lock, 5/16-18, GrF
13	712-04065	Nut, Flange Lock, 3/8-16, GrF
14	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
15	714-0470	Pin, Cotter, 1/8 x 1.25
16	726-0201	Nut, Speed, .3125 ID
17	731-2111A	Knob, PTO
18	732-04245A	Belt Guard
19	732-0944	Spring, Extension, .75 OD x 6.75
20	732-1013	Belt Guard
21	736-0108	Washer, Flat, .510 x .750 x .033
22	736-0119	Washer, Lock, 5/16
23	736-0140	Washer, Flat, .385 x .62 x .063
24	736-0227	Washer, Flat, .390 x 1.500 x .134
25	736-0242	Washer, Bell, .340 x .872 x .060
26	736-0275	Washer, Flat, .344 x .688 x .065
27	736-0300	Washer, Flat, .406 x .875 x .059
28	736-0322	Washer, Flat, .450 x 1.250 x .164
29	736-3010	Washer, Flat, .407 x .812 x .135
30	738-0372B	Spacer, Shldr, 1.00 x .38 x .38
31	741-0708	Bearing, Flange, Hex Split .500 ID

Ref. No.	Part No.	Description
32	747-04355	Keeper Rod, Belt
33	747-04470	Engagement Handle, Deck
34	748-0415B	Spacer, .385 ID x .635 OD x 1.54
35	710-1260A	Screw, 5/16-18 x .750
36	756-04207	Pulley, Engine, 3.39 x 6.12 Dia.
37	756-0487	Pulley, Idler, V-type 5/8 x 4.0 Dia.
38	756-0627D	Pulley, Idler, 3.50 Diameter
39	783-04467	Stop Bracket, Deck-Up
40	783-0744A	Stop Bracket, Engagement
41	683-04173	Frame Assembly, Lower
42	710-0607	Screw, 5/16-18, 0.500
43	710-0642	Screw, 1/4-20, 0.750
44	710-3005	Screw, 3/8-16, 1.25, Gr5
45	712-04064	Nut, Flange Lock, 1/4-20, GrF
46	754-04064	V-Belt, PTO
47	732-04035	Spring, Compr., 1.28 OD x 3.125
48	736-0222	Washer, Lock, 1/4, External
49	783-04612	Support Bracket, Steering
50	738-04058	Spacer, Shoulder, .38 x 1.0 x .70
51	747-04121A	Hold Rod, Battery
52	783-0349	Battery Tray
53	783-04329A	Seat Bracket, Frame
54	783-04809	Frame, Upper
55	710-0599	Screw, 1/4-20, 0.50
56	725-1426A	Solenoid, 12V, 100 Amp
57	725-04039	Switch, Interlock
58	738-1132	Screw, Shoulder, .250 x .150
59	725-1750A	Battery, 235 CCA
60	710-0703	Screw, Carriage, 1/4-20, .75, Gr5
61	712-0271	Nut, Sems, 1/4-20
62	712-3087	Nut, Wing, 1/4-20

10

Illustrated Parts List



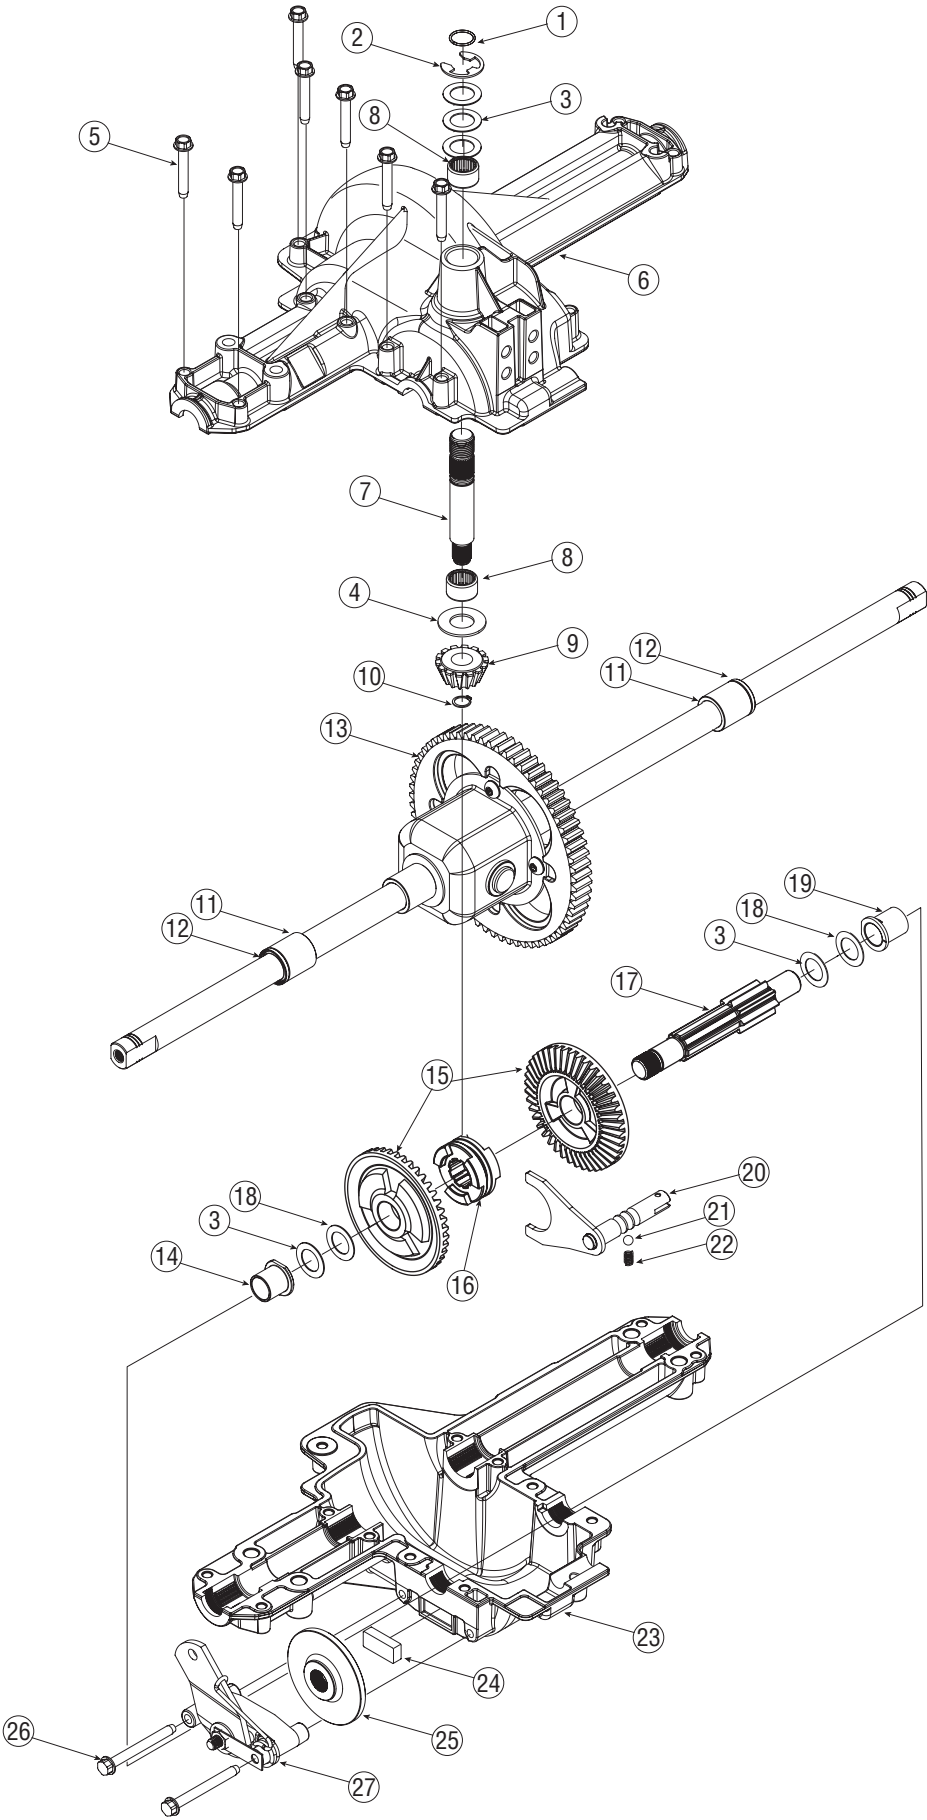

10

Illustrated Parts List




Ref. No.	Part No.	Description
1	732-0614	Ring, Wire
2	716-0231	Ring, E Type, .750
3	736-0336*	Flat Washer, 5/8 x 1.0 x .030
	736-0337*	Flat Washer, 5/8 x 1.0 x .040
	736-0349*	Flat Washer, 5/8 x 1.0 x .020
4	736-0335	Washer, Thrust. 635 x 1.26 x .06
5	710-1325	Self-tapping Screw, 1/4-20 x 1.625
6	719-04017	Upper Housing
7	711-1109	Input Shaft
8	741-0335	Needle Bearing, .625 x .813 x .495
9	717-1464	14-tooth Bevel Pinion
10	716-0108	Retaining Ring, .437
11	741-0340	Sleeve Bearing, .75 x 1.0 x 1.0
12	721-0338	Seal, .75 x 1.0 x .125
13	618-04041	Differential Assembly
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	717-04056	42-tooth Bevel Gear
16	718-04045	Clutch Collar
17	711-04134	Drive Shaft
18	736-0495*	Thrust Washer, 1.0 x .632 x .0
	736-0494*	Flat Washer, .632 x 1.00 x .035
19	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
20	611-0011	Detent Shaft Assembly
21	741-0862	Detent Ball
22	732-0863	Compression Spring
23	719-04018	Lower Housing
24	717-0678	Brake Puck
25	761-0202	Brake Disc
26	710-1206	Self-tapping Screw, 1/4-20 x 2.375
27	661-0001	Brake Assembly
—	737-0148	Grease (19 oz.)

* Use applicable flat washer (ref. #'s 3 or 18) in this application allowing .0150/.0020 in. end-play

NOTE: If rebuilding the upper housing, include two ounces (2 oz.) of Unirex® N3 grease (Part No. 737-0289) in the input shaft cavity.

Model Series 606

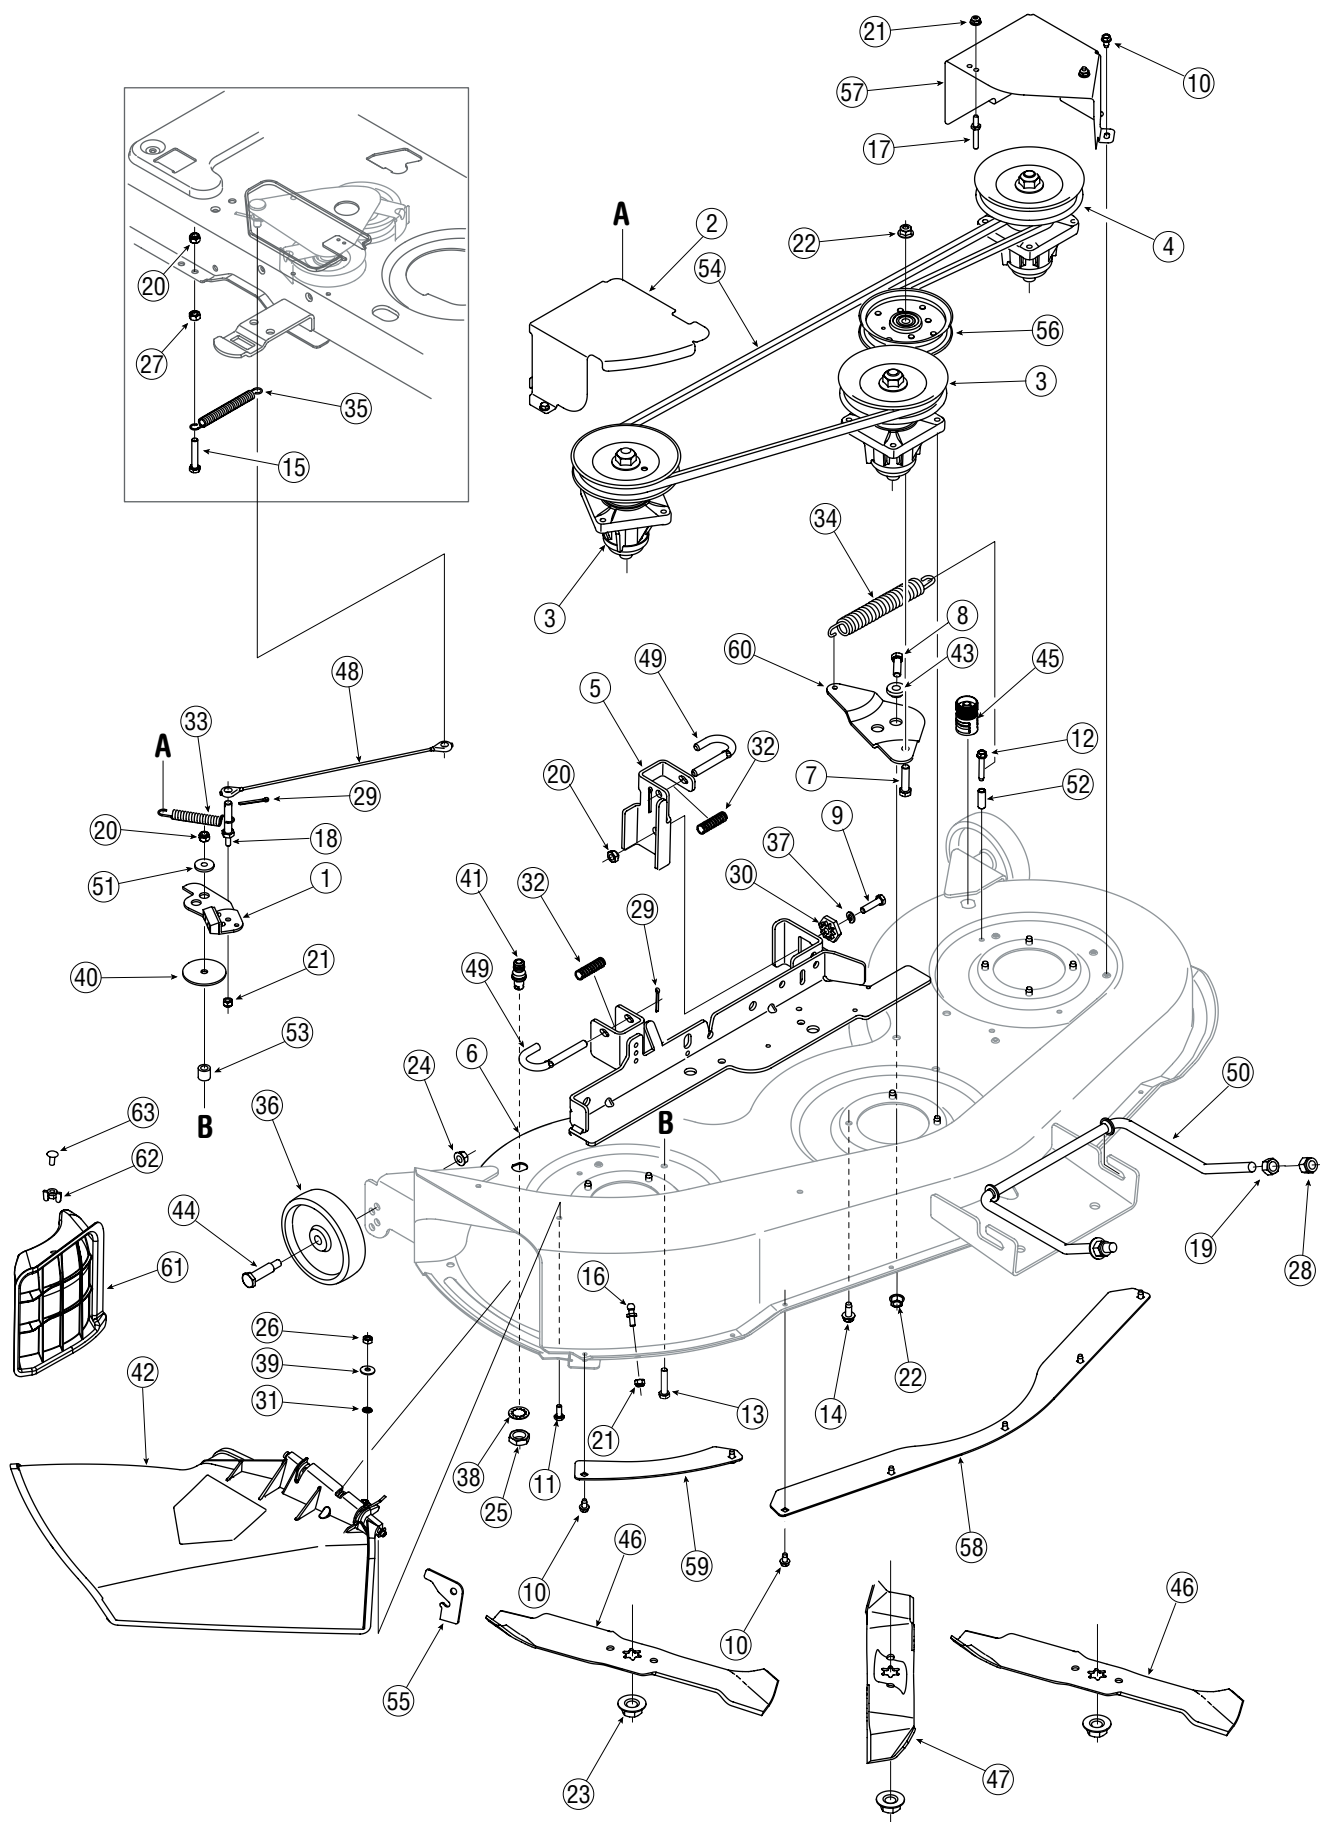

Ref. No.	Part No.	Description
1	17116	Brake Assembly, Deck
2	17258D	RH Belt Cover, Deck 46"
3	618-0240A	Spindle Assembly, 5.00 Dia.
4	618-04134B	Spindle Ass'y, Double Pulley
5	683-0254B	Hanger Bracket Assembly
6	683-04104A	Deck Weldment
7	710-0520	Screw, 3/8-16, 1.50, Gr5
8	710-0514	Screw, 3/8-16, 1.00, Gr5
9	710-0528	Screw, 5/16-18, 1.25, Gr5
10	710-0599	Screw, 1/4-20, 0.500
11	710-3015	Screw, 1/4-20, .75, Gr5
12	710-0778	Screw, 1/4-20, 1.500
13	710-0805	Screw, 5/16-18, 1.50, Gr5
14	710-1260A	Screw, Ld, 5/16-18, 0.750
15	710-3180	Screw, 5/16-18, 1.75, Gr5
16	711-04069	Pin, Grasscatcher, 1/4-20
17	711-0993	Belt Guard Pin 1/4 Dia x 1.43
18	711-1554	Pin, 1/4-20, 3/8 x 2.0
19	712-0206	Nut, Hex, 1/2-13, Gr5
20	712-04063	Nut, Flange Lock, 5/16-18, GrF
21	712-04064	Nut, Flange Lock, 1/4-20, GrF
22	712-04065	Nut, Flange Lock, 3/8-16, GrF
23	712-0417A	Nut, Flange, 5/8-18
24	712-0431	Nut, Flange Lock, 3/8-16, GrF
25	712-0641	Nut, Hex, M16-1.5
26	712-3006	Nut, Hex, 1/4-20, Gr5
27	712-3010	Nut, Hex, 5/16-18, Gr5
28	712-3083	Nut, Hex Lock, 1/2-13, Gr8, Nylon
29	714-0470	Pin, Cot, 1/8 x 1.25
30	717-04074	Adjustment Gear, Deck
31	726-0233	Nut, Push, .25 ID x .50 OD
32	732-0306A	Sprg, Compress, .531 OD x 1.75

Ref. No.	Part No.	Description
33	732-0429A	Spring, Extension, .50 Dia x 3.97
34	732-0594A	Spring, Extension, .91 Dia x 7.33
35	732-04197	Spring, Extension, .68 Dia x 5.0
36	734-0973	Wheel, Deck 5.0 x 1.38
37	736-0119	Washer, Lock, 5/16
38	736-0760	Washer, Lock
39	736-0270	Washer, Bell, .265 x.75 x .062
40	736-0418A	Washer, Flat, .34 x 2.25 x.10
41	737-04003C	Water Deck Nozzle
42	731-1032B	Chute Assembly
43	738-0347	Spacer, Shoulder, .625 ID x .169
44	738-0373	Spacer, Shoulder, .498 x 1.53
45	721-04041	Water Nozzle Adapter
46	742-0611A	Blade, 16.28", Star 3-in-One
47	742-0612A	Blade, 14.88", Star 3-in-One
48	746-1107	Cable, 12.00"
49	747-1116	Rod, Deck Release
50	747-1130B	Rod, Deck
51	748-0234	Shoulder Spacer
52	750-0566A	Spacer, .260 x .372 x 1.030
53	750-1320	Spacer, .375 x .63 x .595
54	754-0349	Belt, V-Type, Poly
55	783-1025	Stop Chute
56	756-04129	Pulley, Idler, 4.25" Dia.
57	783-1348B	Belt Cover, LH
58	783-0141	Deck Skirt, Center
59	783-0142	Deck Skirt, RH
60	783-04641	Bracket, Idler
61	731-05264	Mulch Plug
62	712-3087	Wing Nut
63	710-0134	Carriage Screw, 1/4-20 x .62

IMPORTANT

For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

10

Illustrated Parts List

