

Operator's Manual

4-Cycle Gas Professional Trimmer

TBP6160

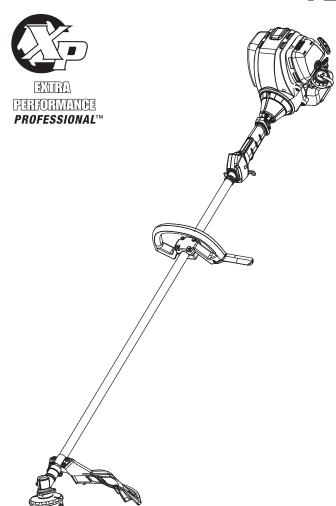


TABLE OF CONTENTS

Service Information
Rules for Safe Operation
Know Your Unit
Assembly Instructions
Oil and Fuel Information4
Starting/Stopping Instructions
Operating Instructions
Maintenance & Repair Instructions
Cleaning and Storage
Troubleshooting Chart
Specifications
Warranty Information
Parts List



In an effort to reduce the impact on the forests, and reduce carbon and greenhouse gas emissions, MTD is using less paper by reducing the text size of this manual.

SAVE THESE INSTRUCTIONS

For service call **1-800-828-5500**, or **1-800-668-1238** in Canada to obtain a list of authorized service dealers near you. For more details about your unit, visit our website at **www.troybilt.com**.

 
If you have difficulty assembling this product or have any questions regarding the controls, operation or maintenance of this unit, please call the Customer Support Department.

DO NOT RETURN THE UNIT TO THE RETAILER. PROOF OF PURCHASE WILL BE REQUIRED FOR WARRANTY SERVICE.

THIS PRODUCT IS COVERED BY ONE OR MORE U.S. PATENTS. OTHER PATENTS PENDING.

Service on this unit both within and after the warranty period should be performed only by an authorized and approved service dealer.

Before beginning, locate the unit's model plate. It lists the model and serial numbers of your unit. Refer to the sample plate below and copy the information for future reference.



Copy the model and parent part number here:

Copy the serial number here:

SPARK ARRESTOR NOTE

NOTE: For users on U.S. Forest Land and in the states of California, Maine, Oregon and Washington. All U.S. Forest Land and the state of California (Public Resources Codes 4442 and 4443), Oregon and Washington require, by law that certain internal combustion engines operated on forest brush and/or grass-covered areas be equipped with a spark arrestor, maintained in effective working order, or the engine be constructed, equipped and maintained for the prevention of fire. Check with your state or local authorities for regulations pertaining to these requirements. Failure to follow these requirements could subject you to liability or a fine. This unit is factory equipped with a spark arrestor. If it requires replacement, ask your LOCAL SERVICE DEALER to install the Accessory Part #753-05810 Muffler Assembly.

CALIFORNIA PROPOSITION 65




All information, illustrations, and specifications in this manual are based on the latest product information available at the time of printing. We reserve the right to make changes at any time without notice.

Copyright© 2008 MTD SOUTHWEST INC, All Rights Reserved.


PART NO. 769-03958 (4/08)

REPLACEMENT PARTS - MODEL TBP6160 - 4-CYCLE GAS TRIMMER

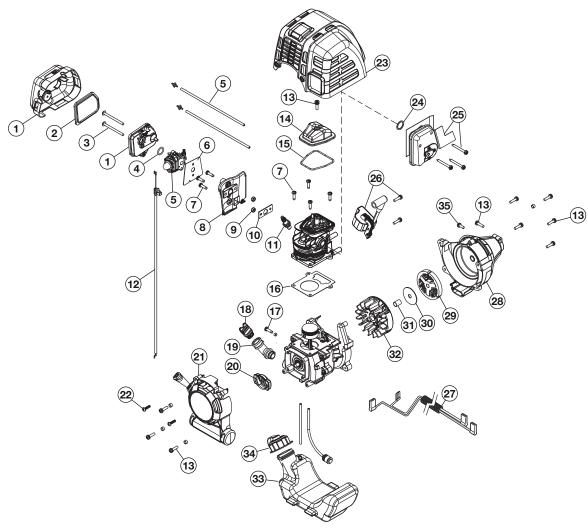

ltom	Dort No	Description	ltom	Dort No	Description
<u>Item</u>	Part No.	Description	<u>Item</u>	Part No.	<u>Description</u>
1	753-05800	Aircleaner Assembly (includes 2 & 3)	18	753-05400	Oil Plug Assembly
2	753-05802	Air Filter	19	753-05806	Oil fill Tube Assembly (includes 17)
3	753-05253	Screw	20	753-05635	Pawl Assembly
4	791-181751	Carburetor O-Ring	21	753-05808	Rear Starter Cover Assembly
5	753-05845	Carburetor Assembly w/ Fuel Lines	22	753-04595	Screw
6	753-05803	Carburetor Gasket	23	753-05809	Starter Housing
7	791-181003	Screw	24	753-05670	Muffler Gasket
8	753-05804	Insulator	25	753-05810	Muffler Assembly
9	753-05248	Nut	26	753-05410	Module Assembly
10	753-05673	Insulator Gasket	27	753-05264	Lead Wires
11	753-05784	Spark Plug	28	753-05811	Clutch Cover Assembly
12	753-05266	Throttle Cable	29	753-05812	Clutch
13	753-05805	Screw	30	753-05813	Clutch Washer
14	753-05671	Valve Cover	31	753-05814	Spacer
15	753-05672	Valve O-Ring	32	753-05815	Flywheel
16	753-05681	Cylinder Gasket	33	753-05816	Fuel Tank (includes 34)
17	753-05377	Screw	34	753-05289	Fuel Cap
			35	753-05619	Anti-Rotation Screw
			*	753-05817	Short Block Assembly

- REPLACEMENT PARTS - MODEL TBP6160 **4-CYCLE GAS TRIMMER**

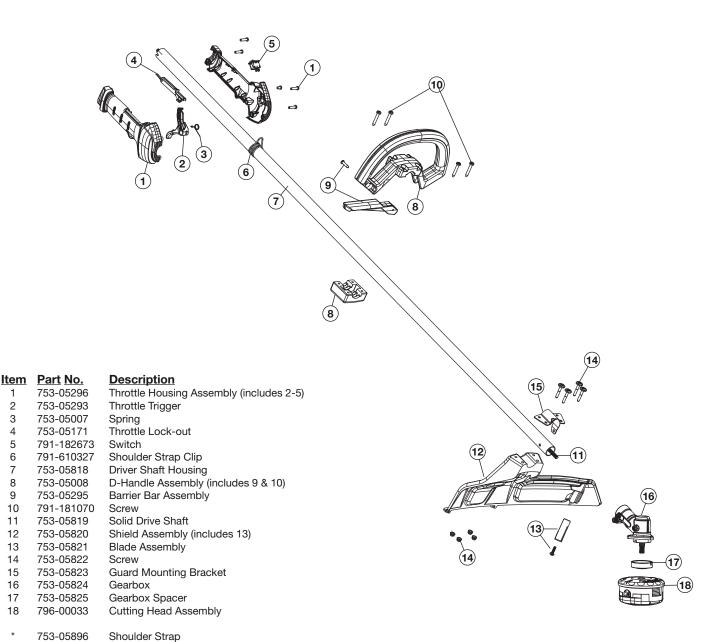

Items Not Shown