


Hood, Grille, Dash & Bumper

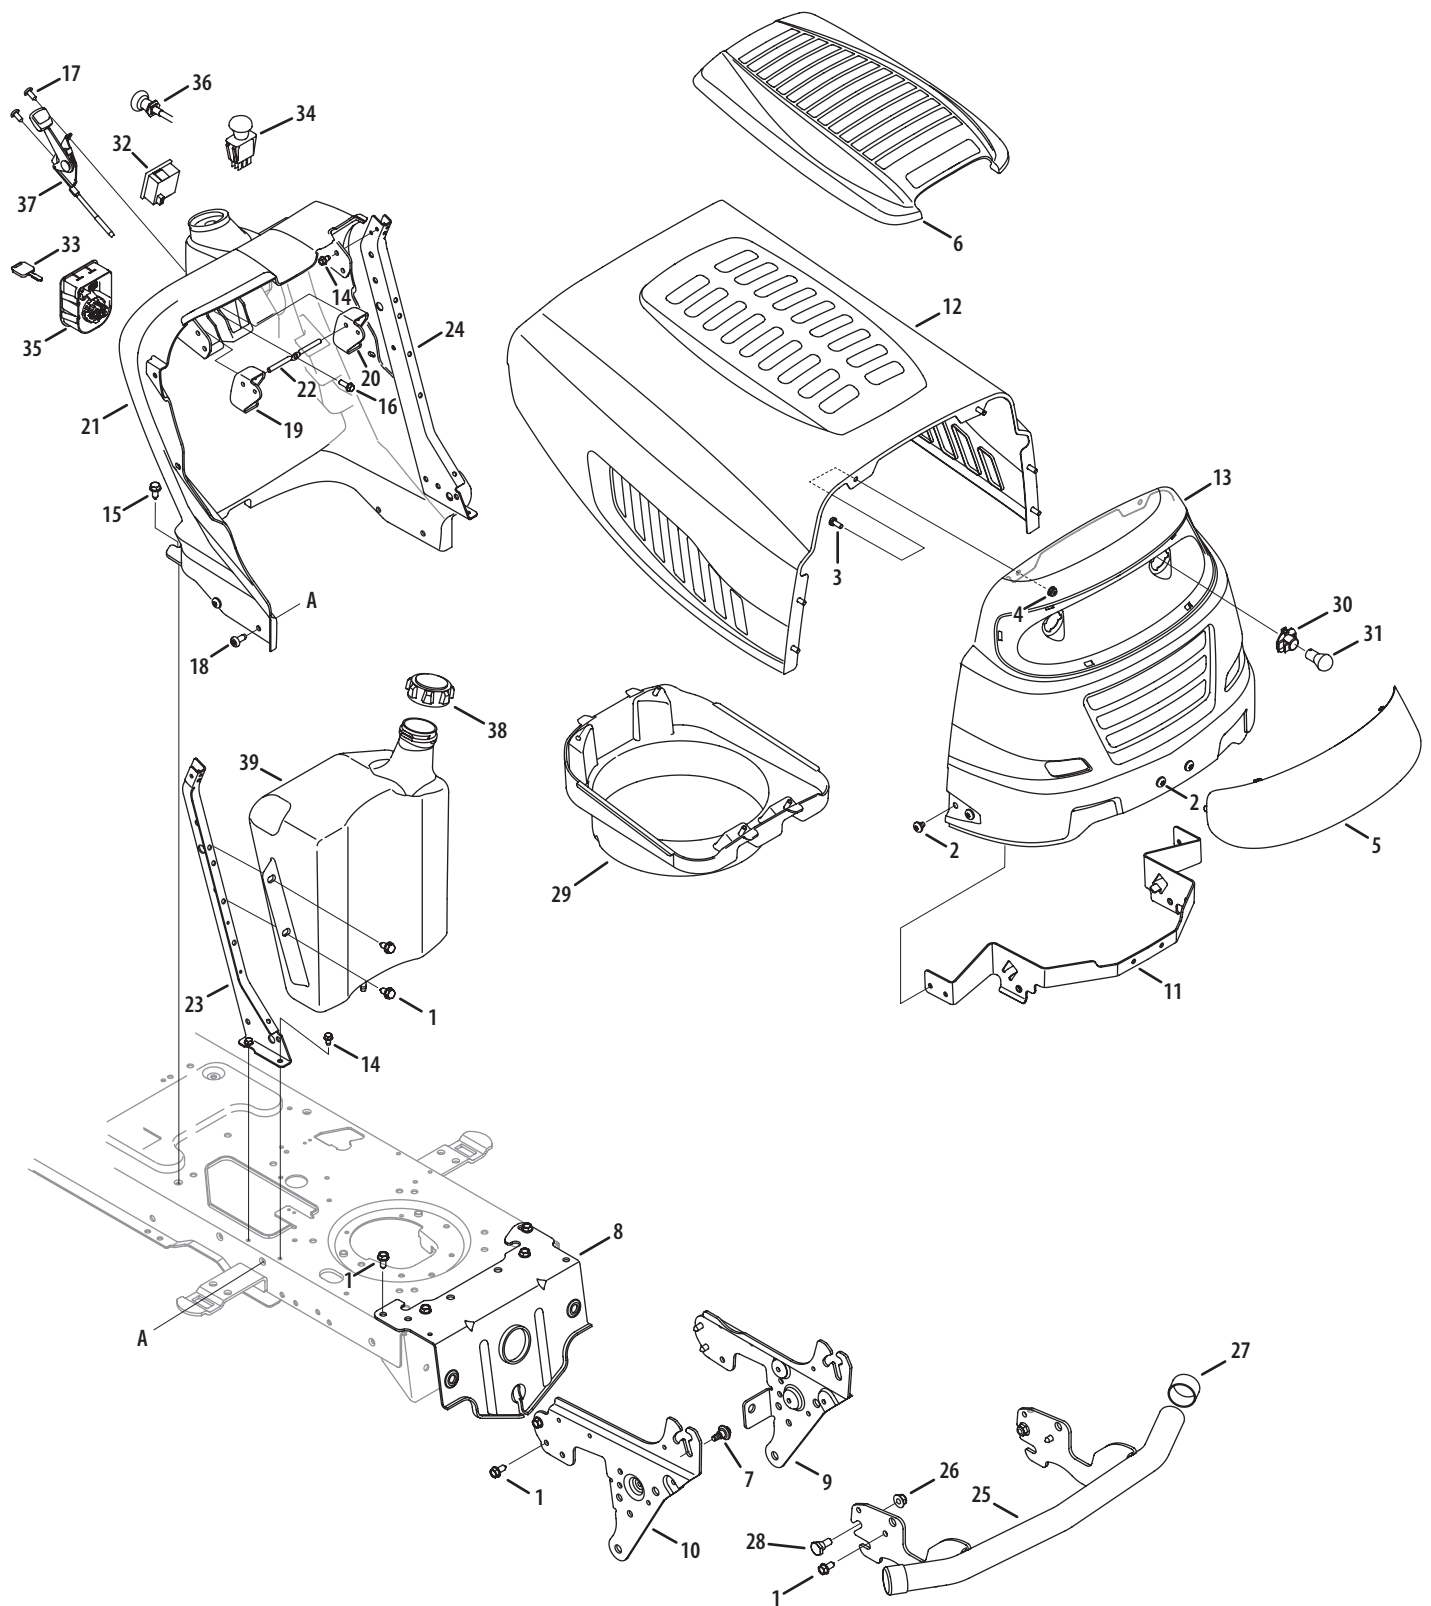


Hood, Grille, Dash & Bumper

Ref.	Part Number	Description	Ref.	Part Number	Description
1	710-04484	Screw, 5/16-18 x .750	22	747-1196	Brake/Cruise Pivot Rod
2	710-04593	Screw, 5/16-18 x .375	23	783-04285F-0637	RH Dash Support Plate
3	710-0751	Hex Cap Screw, 1/4-20 x.62	24	783-04323F-0637	LH Dash Support Plate
4	712-04064	Flange Lock Nut, 1/4-20	25	683-04219B-0637	Bumper Assembly
5	731-04949A	Headlight Lens	26	712-04065	Flange Lock Nut, 3/8-16
6	731-05522A	Hood Cover, 5 Style	27	731-05674	Cap
7	738-04091A	Shoulder Screw,.43 x.29	28	738-0143	Shoulder Bolt, 3/8-16
8	783-05326-0637	Pivot Bar Bracket	29	731-05165A	Plenum
9	783-05417-0637	Pivot Support Bracket LH	30	925-1649	Headlight Socket
10	783-05418-0637	Pivot Support Bracket RH	31	925-0963	Lamp
11	783-05454-0637	Hood Pivot Bracket	32	925-04036C	Systems Ind. Monitor w/Hr. Mtr.
12	783-05683-0662	5-Style Hood	33	925-1745A	Ignition Key w/ plastic cover
13	783-05685-0662	1-Style Grille	34	925-04174	Electric PTO Switch
14	710-0599	Self-tapping Screw, 1/4-20 x.5	35	925-04227B	Ignition Switch
15	710-0607	Screw, 5/16-18 x .500	36	746-1085A	Choke Control Cable
16	710-0895	Self-tapping Screw, 1/4-15 x.75	37	946-04541	Throttle Control/Cable
17	710-1017	Screw, 1/4-14 x.625	38	751-0603A	Fuel Cap
18	710-1611B	Screw, 5/16-18 x.75	39	751-0658E	Fuel Tank, Three Gallon
19	931-04215	Cruise Control Button	—	725-04862*	Wire Harness (w/Hr. Mtr & Elec. PTO)
20	931-04217	Parking Brake Button	—	777X41984	Headlight Reflective Insert
21	731-06169	Dash Panel			

* Not Shown

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Seat, Fender & Deck Lift

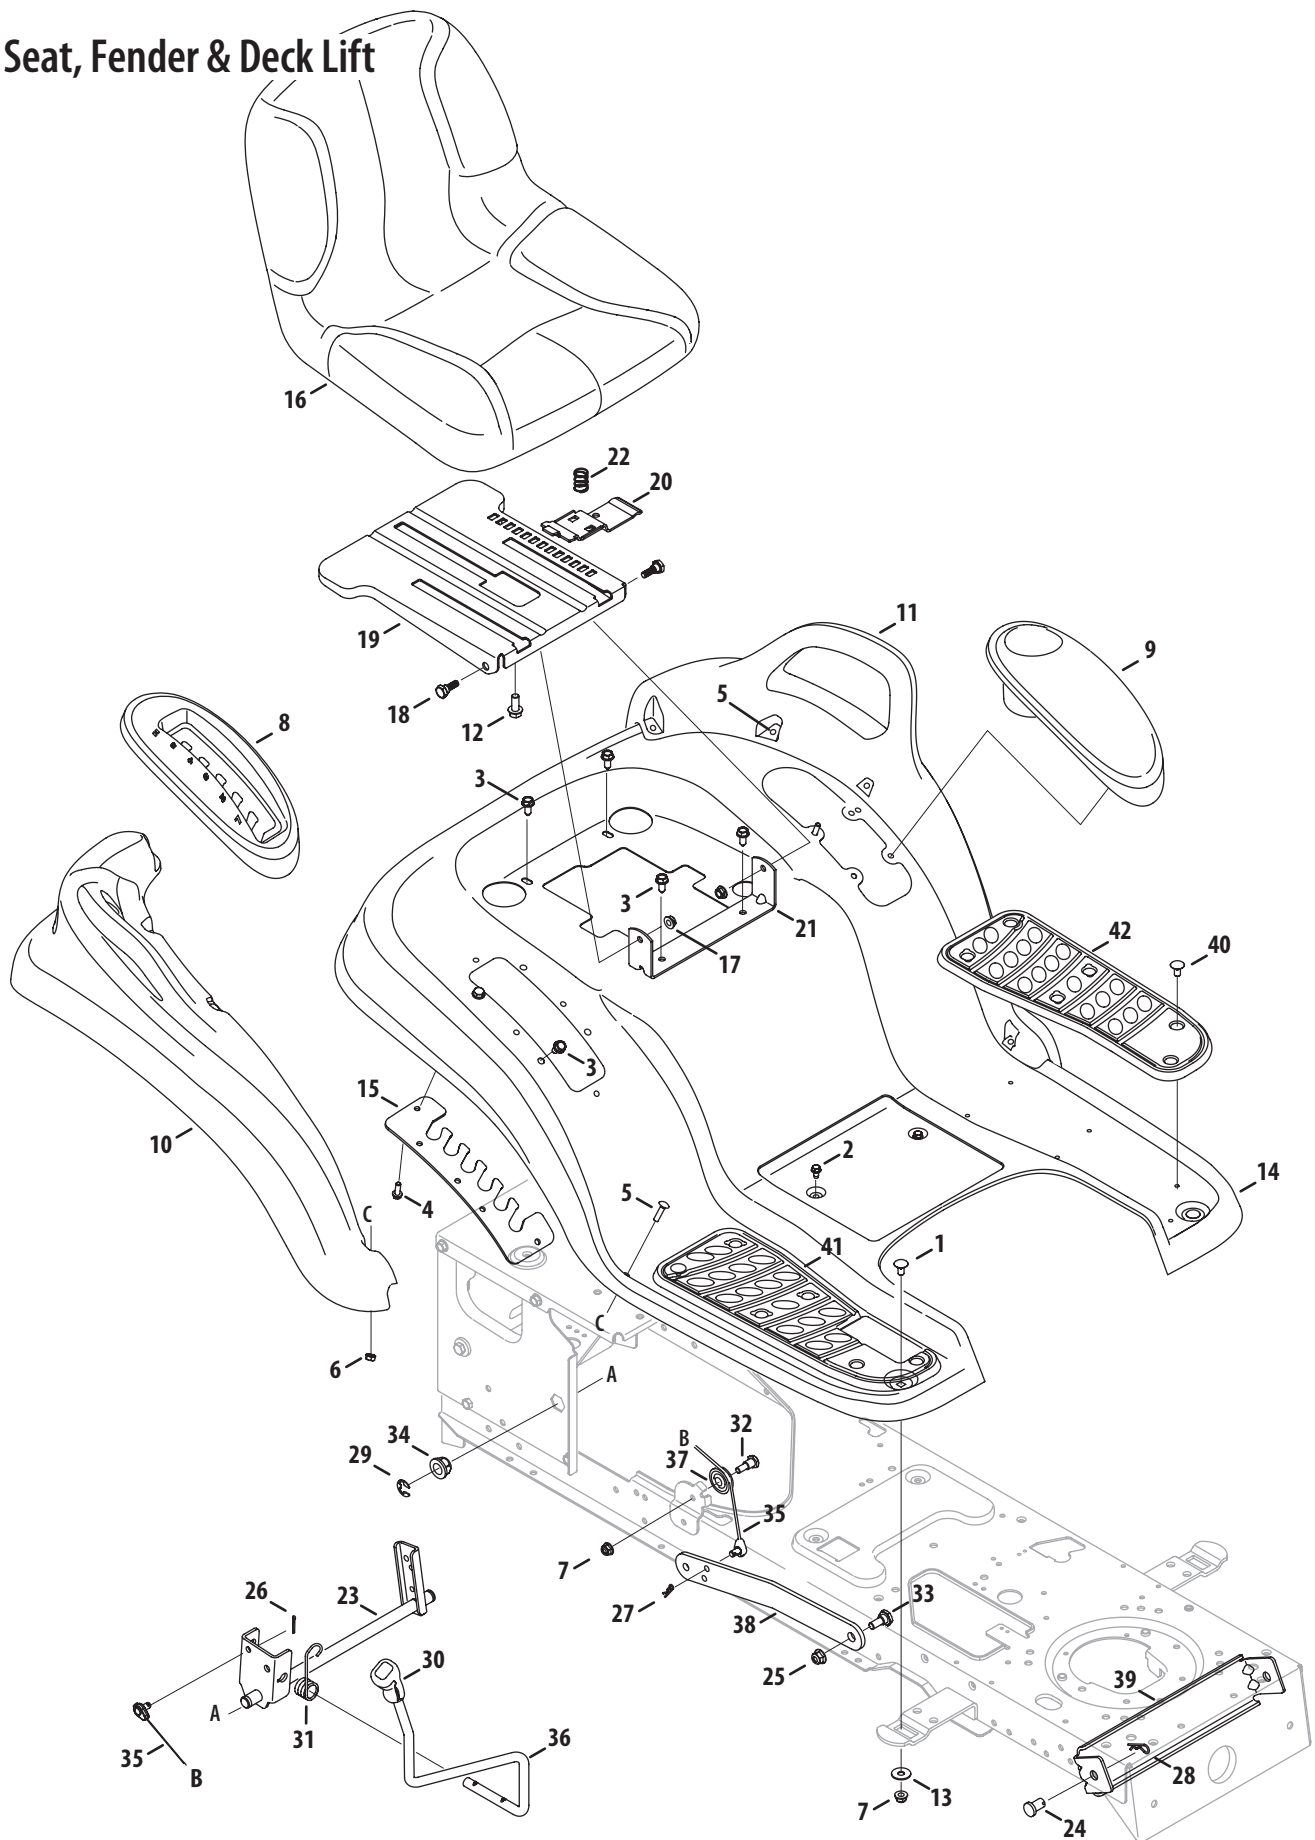


Seat, Fender & Deck Lift

Ref.	Part Number	Description	Ref.	Part Number	Description
1	710-0451	Carriage Bolt, 5/16-18 x.750	22	732-04563	Compression Spring, .68 x 1.065 x
2	710-0599	Screw, 1/4-20 x.500	23	683-04301-0637	Lift Shift Assembly
3	710-04484	Screw, 5/16-18 x .750	24	911-0332	Clevis Pin, .50 dia. x .78 lg
4	710-0895	Self-tapping Screw, 1/4-15 x.75	25	712-04065	Flange Lock Nut, 3/8-16
5	710-0932	Carriage Screw 1/4-20 x 1.00	26	914-0104	Cotter Pin, .072 dia. x 1.13 lg
6	712-0271	Sems Nut 1/4-20	27	914-0111	Cotter Pin, 3/32 x 1.00
7	712-04063	Flange Lock Nut, 5/16-18	28	914-04023	Cotter Pin, .080 x 1.5625
8	731-06795	Lift Lever Cover	29	716-0106A	E-type Ring
9	731-1993A	Cover w/ Cup Holder	30	720-0311	Handle Grip
10	731-2618	RH Fender Flare	31	732-0874	Torsion Spring
11	731-2619	LH Fender Flare	32	738-0138A	Shoulder Bolt, .496 x 2.5 x 3/8-16
12	710-04482	Screw, 3/8-16 x .875	33	938-0380	Shoulder Bolt, .500 x .270 x 3/8-16
13	736-3078	Flat Washer, .349 x 1.0 x.063	34	941-0225	Hex Flange Bearing
14	783-06247-0691	Fender 4 Sty Hydro w/ Flares	35	746-0968	Lift Cable
15	783-0677B-0637	Lift Adjustment Bracket	36	747-04447	Lift Handle
16	757-04086	Seat	37	756-1154	Roller Pulley
17	712-3004A	Flange Lock Nut, 5/16-18	38	783-05546-0637	Lift Arm
18	938-0296	Shoulder Screw, .437 x .268 x 5/16-18	39	783-0720C-0637	Front Deck Rod Adjustment Bracket
19	783-06049-0691	Seat Mount Bracket	40	726-3046	Clip
20	783-06050	Seat Adjustment Lever	41	735-0656	Foot Pad, RH
21	783-06088-0691	Seat Pivot Bracket	42	735-0657	Foot Pad, LH

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Steering Assembly

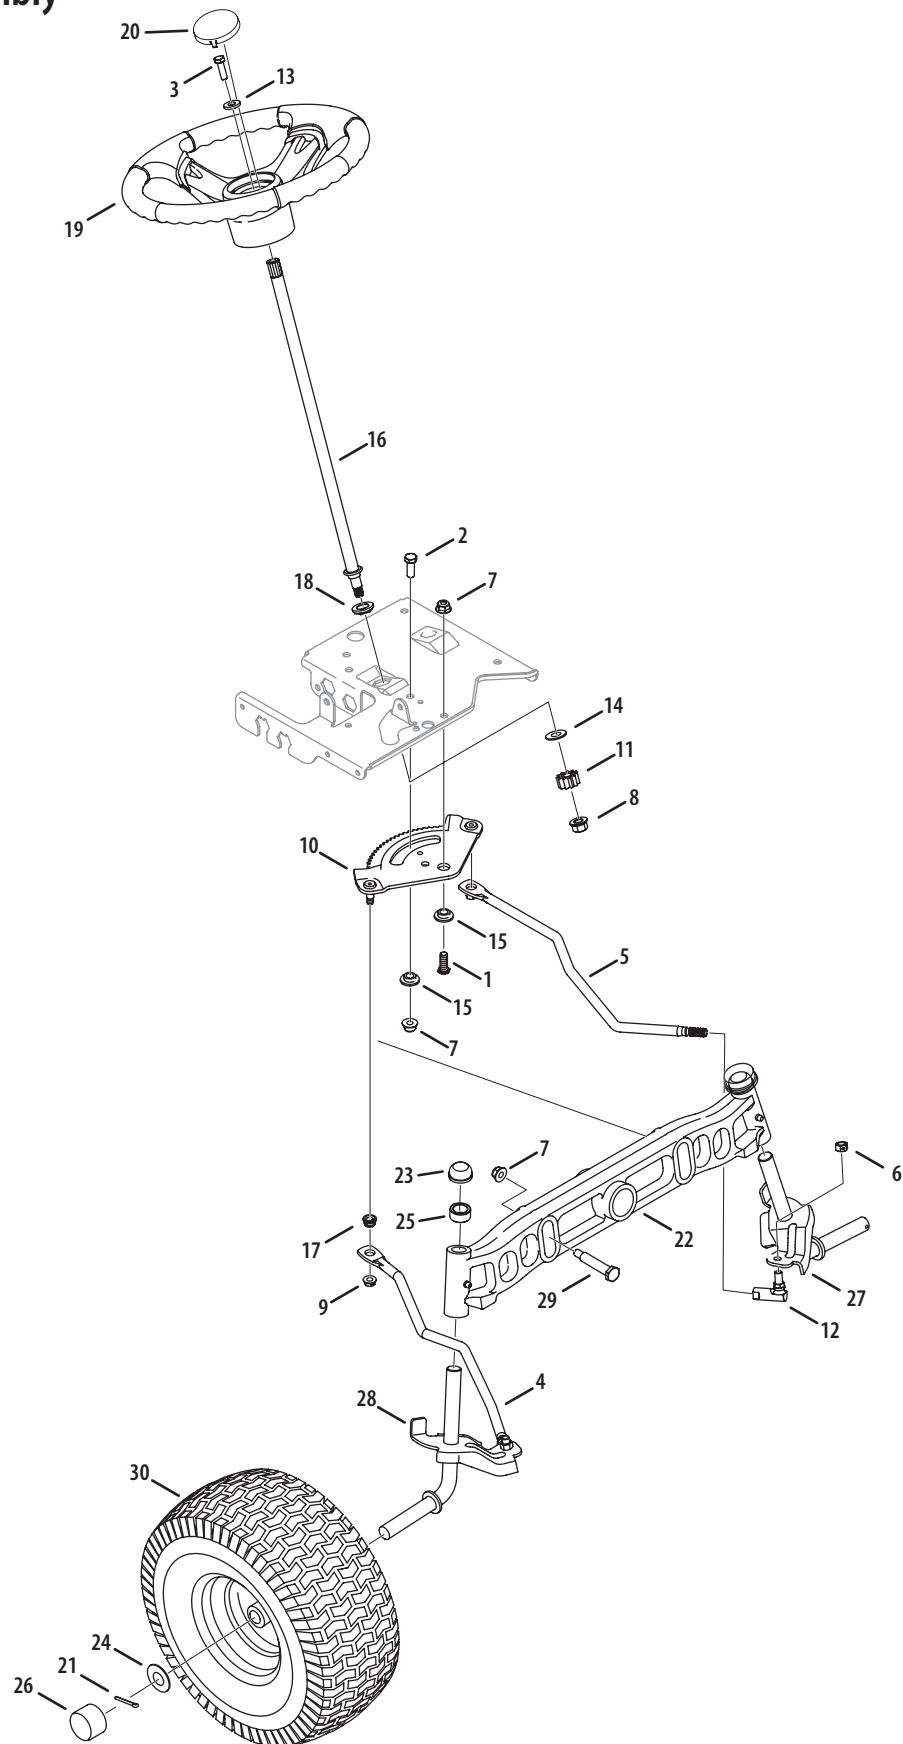

Ref.	Part Number	Description
1	710-04095	Hex Screw, 3/8-16, 1.00, Gr5
2	710-0514	Hex Screw, 3/8-16, 1.00, Gr5
3	710-0643	Hex Screw, 5/16-18, 1.00, Gr5
4	711-1408	Link, Drag, RH
5	711-1409A	Link, Drag, LH
6	912-0214	Nut, Hex Lock, 3/8-24
7	712-04065	Nut, Flange Lock, 3/8-16
8	712-0459	Nut, Flange Lock, 7/16-20
9	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
10	917-1550E	Gear, Steering, 11/90 Ratio
11	717-1554	Gear, Pinion, Steering
12	923-0448A	Ball Joint, 7/16-20, Lock
13	936-3004	Washer, Flat,.406 x.875 x.105
14	736-3084	Washer, Flat,.51 x 1.12 x.06
15	738-04154	Spacer, Shoulder,.38 x 1.00 x.31
16	738-04263	Shaft, Steering, .625 OD x 24.25
17	941-0475	Plastic Bushing.380 ID
18	741-04237A	Hex Flange Bearing 5/8 PM
19	631-04028	Steering Wheel
20	731-04040	Steering Wheel Cap
21	714-0162	Cotter Pin, 5/32 x 1.25
22	719-04177A	Cast Iron Pivot Bar
23	726-0341	Push Cap
24	736-04228A	Flat Washer, .781 x 1.589
25	748-04068	Spacer, .71 x .125 x .56
26	731-05674	Cap
27	638-04003AP	LH Axle Assembly,.750
28	938-04004A	RH Axle Assembly,.750
29	738-04128	Screw, Shldr, .500 x 2.38, 3/8-16
30	734-04148-0901	Tire Only 16 x 7.5 x 8
	934-04082-0662	Rim Only w/ Valve Stem
	710-1260A	Screw, 5/16-18, 0.750

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Frame & Battery

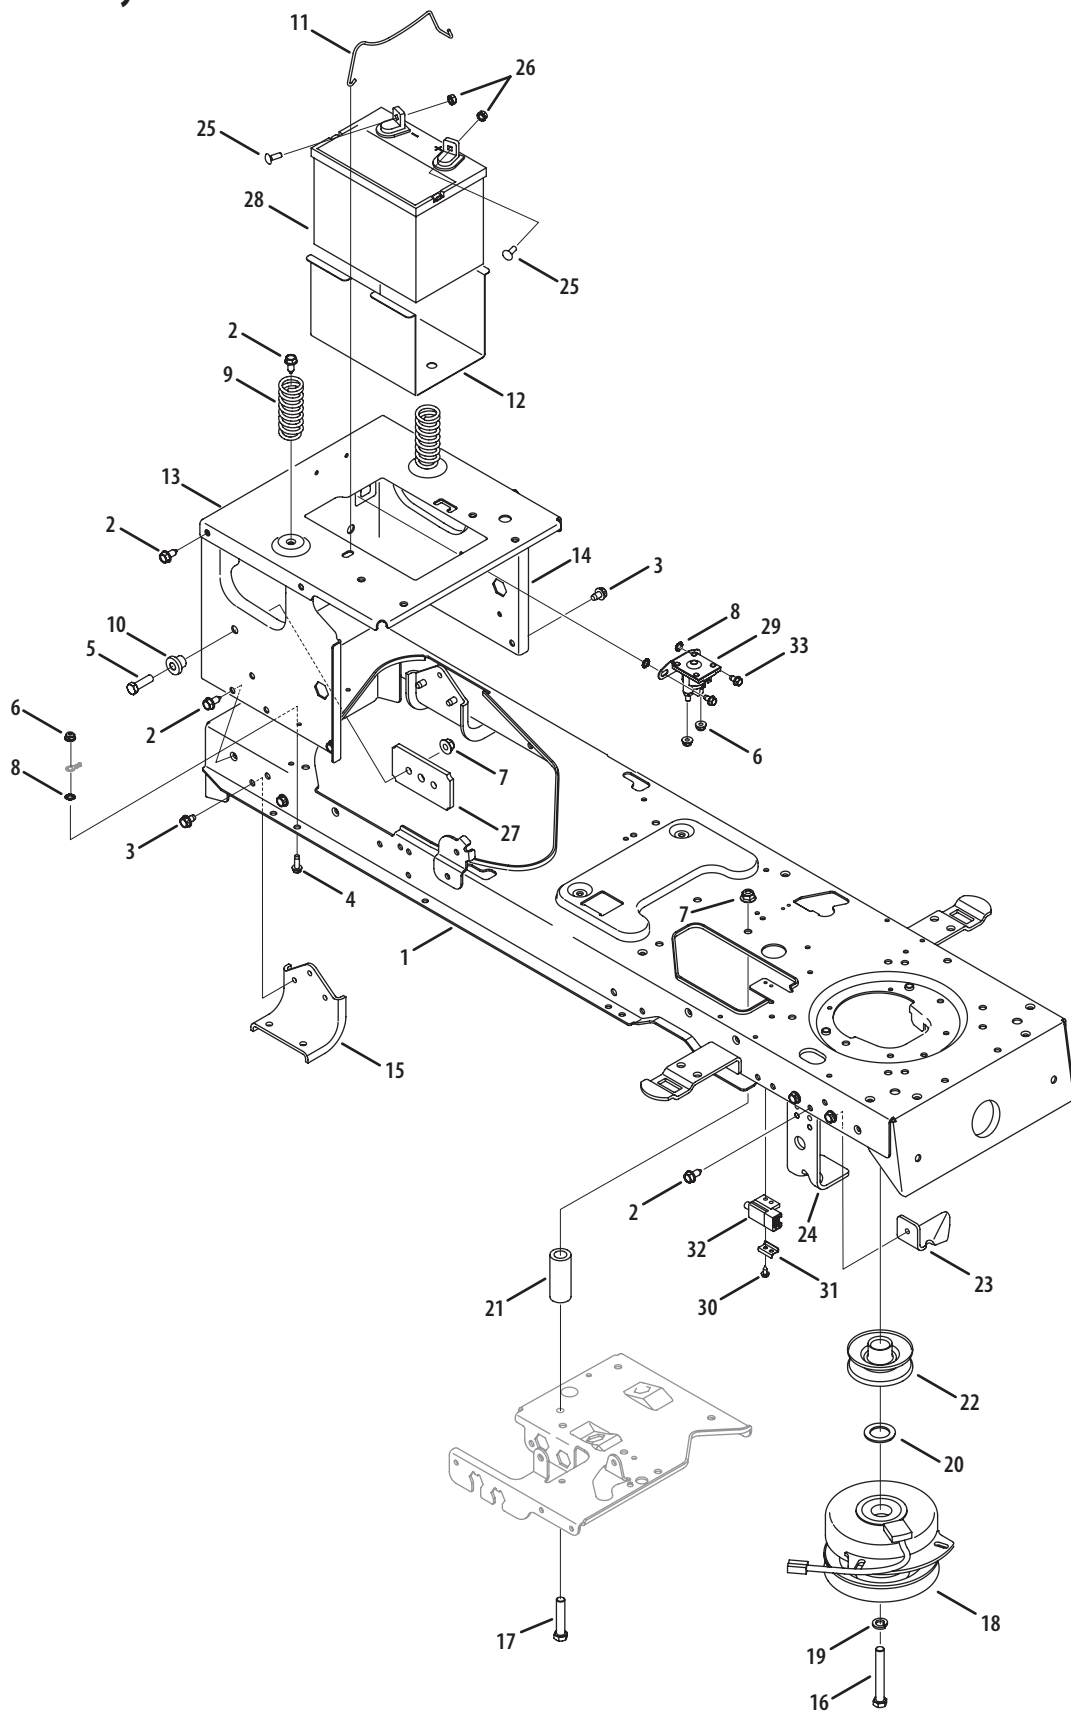

Ref.	Part Number	Description
1	683-04173B-0691	Frame Assembly, Lower
2	710-04484	Screw, 5/16-18 x 0.75
3	710-0607	Screw, 5/16-18, 0.500
4	710-0642	Screw, 1/4-20, 0.750
5	710-0520	Screw, 3/8-16, 1.25, Gr5
6	712-04064	Nut, Flange Lock, 1/4-20
7	712-04065	Nut, Flange Lock, 3/8-16
8	936-0222	Washer, Lock, 1/4, External
9	732-04561	Spring, Compress., 1.28 x 3.125
10	738-04058	Spacer, Shoulder,.38 x 1.0 x.70
11	747-04121A	Hold Rod, Battery
12	783-0349-0637	Battery Tray
13	783-04329A-0637	Seat Bracket, Frame
14	783-04811C-0637	Frame, Upper
15	783-0693-0637	Axle Bracket
16	710-04379A	Screw, 7/16-20, 3.50, Gr5, Lock
17	710-3011	Screw, 3/8-16, 2.25, Gr5
18	917-1774C	PTO Clutch, Electric
19	936-0171	Lock Washer, 7/16
20	736-0277	Washer, Flat, 1.031 x 1.620 x.095
21	748-0415B	Spacer,.385 ID x.635 OD x 1.54
22	756-0978B	Pulley, Engine, 3.56 Diameter
23	783-04419B-0637	Clutch Bracket
24	783-04467-0691	Deck Bracket, Up-Stop
25	710-04666	Hex Flange Bolt, 1/4-20,.75
26	712-0271	Nut, Sems, 1/4-20
27	783-05005-0637	Support Plate
28	925-1707D	Battery, 235 CCA
29	725-04439	Solenoid, 12V, 100 Amp
30	910-0224	AB Screw, #10-16 x.500
31	17962	Switch Plate
32	925-04039	Switch
33	710-0599	Screw, 1/4-20, 0.50

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Drive System

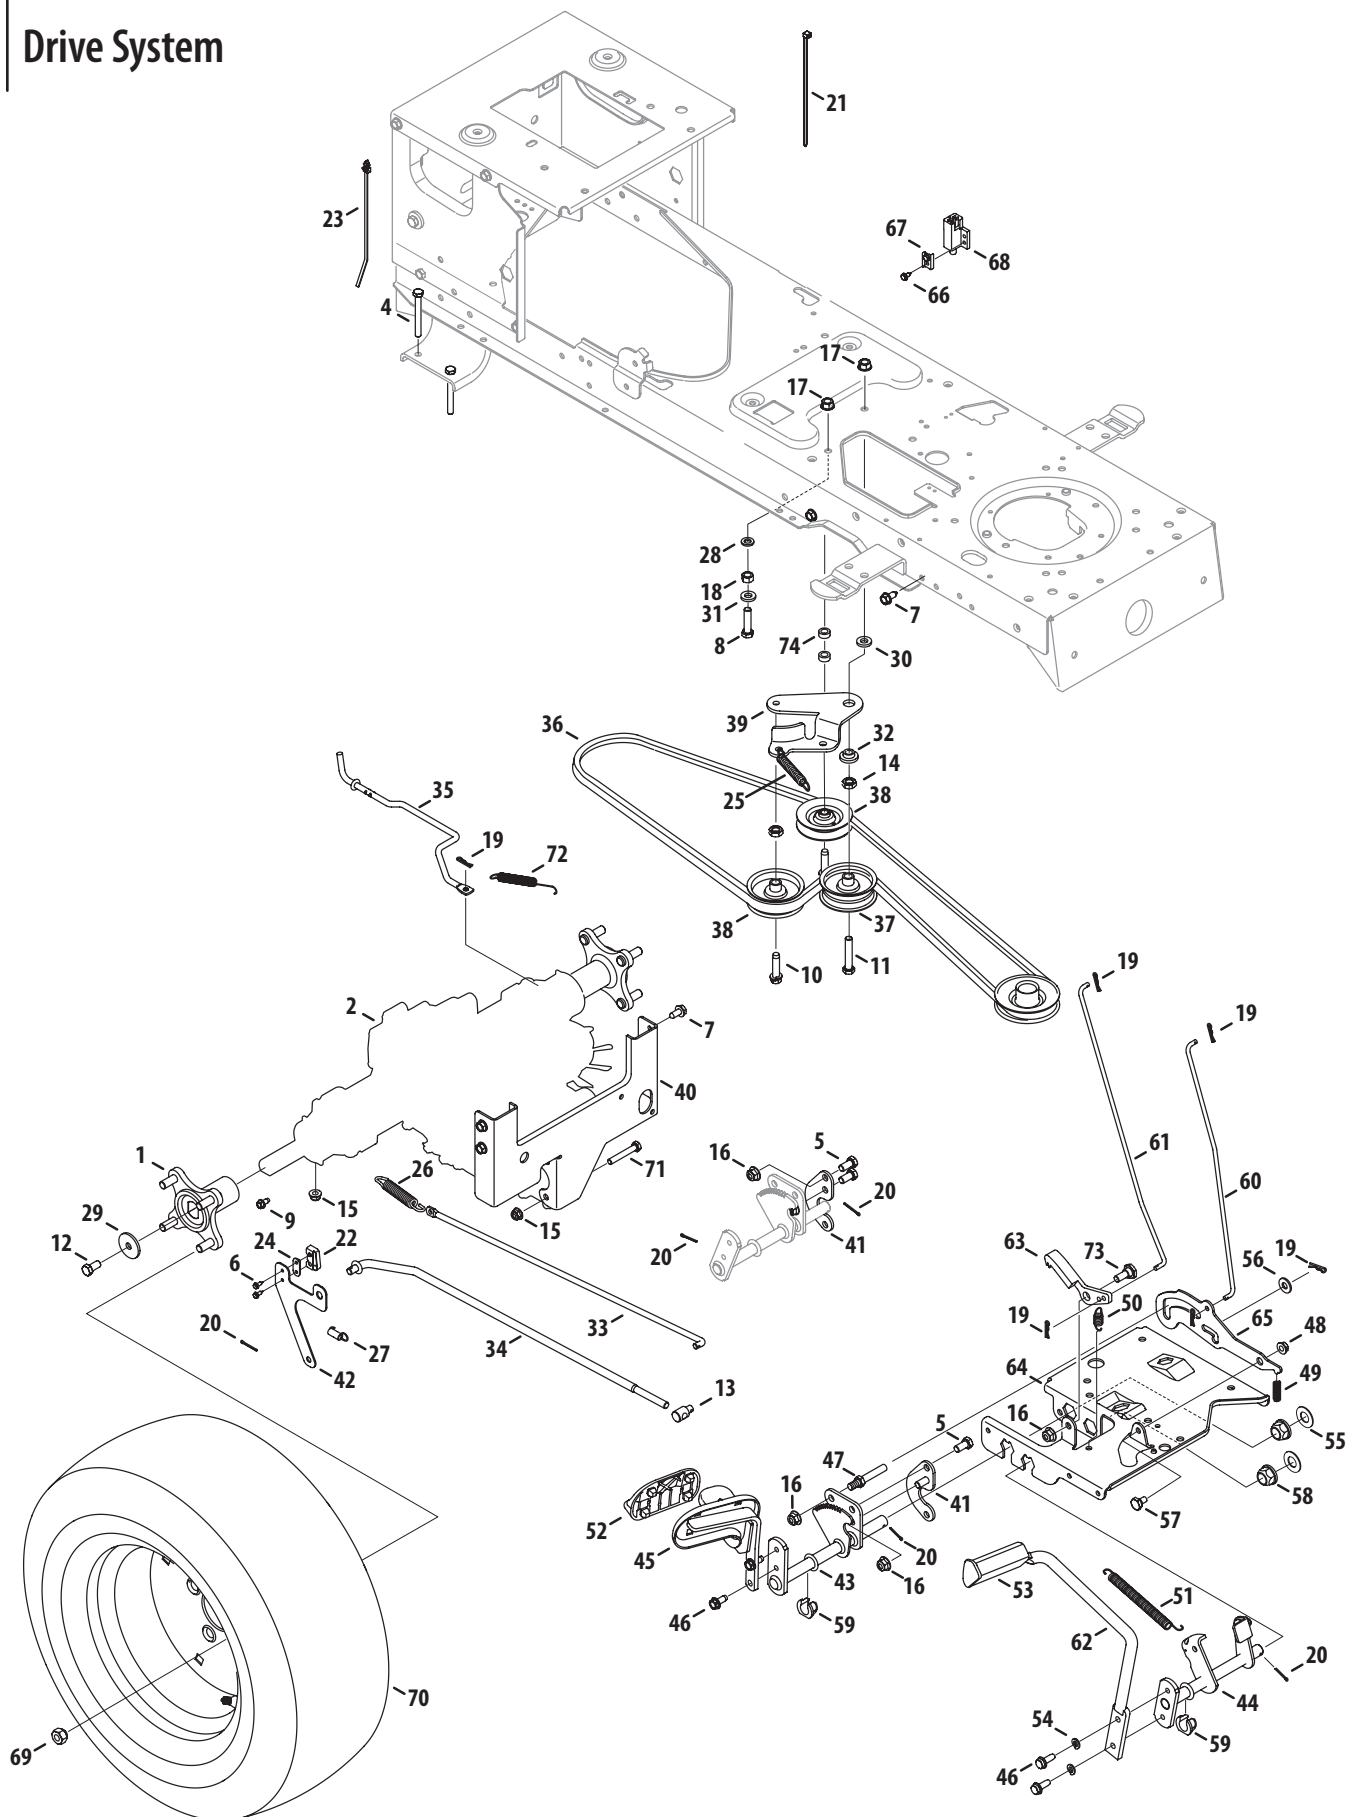


Ref.	Part Number	Description	Ref.	Part Number	Description
1	918-04317	Wheel Hub Assembly	40	783-05443	Transmission Torque Bracket
2	918-04468	Hydrostatic Transmission Assembly	41	783-0745-0637	Speed Control Bracket
3	629-0949B*	Revse/Grnd. Wire Harness Adaptor	42	783-05841	Switch Actuator Bracket
4	710-0189	Hex Cap Screw, 5/16-18 x 3.00	43	647-0049A-0637	Drive Control Assembly
5	710-0216	Hex Cap Screw, 3/8-16 x .75	44	647-04100-0637	Brake Control Assembly
6	710-0227	Screw, #8-18 x .5	45	683-0267C	Hydro Pedal Assembly
7	710-04484	Self-tapping Screw, 5/16-18 x .750	46	710-1260A	Self-tapping Screw, 5/16-18 x.75
8	710-0520	Hex Cap Screw, 3/8-16 x 1.5	47	711-04159B	Pin, 3/8-16 x 2.43
9	710-0599	Self-tapping Screw, 1/4-20 x .50	48	712-3004A	Flange Lock Nut, 5/16-18
10	710-1008	Hex Cap Screw, 3/8-16 x 1.875	49	732-0335	Compression Spring, .40 OD x 1.17
11	710-3011	Hex Cap Screw, 3/8-16 x 2.25	50	732-0955	Extension Spring, .50 OD x 1.41
12	710-3119	Screw, 3/8-16 x .750	51	732-0963	Extension Spring, .50 OD x 6.37
13	911-0832	Ferrule, 3/8-24	52	735-0662	Drive Pedal Pad
14	912-0240	Jam Nut, 7/16-20	53	735-3049A	Brake Pedal Pad
15	712-04063	Flange Lock Nut, 5/16-18	54	936-0119	Lock Washer, 5/16
16	712-04065	Flange Lock Nut, 3/8-16	55	736-0187	Flat Washer, .64 x 1.24 x.06
17	912-0431	Hex Nut, 3/8-16	56	736-0262	Flat Washer, .385 x.870 x.092
18	912-3017	Hex Nut, 3/8-16	57	938-0155	Shoulder Screw, .437 x 1.62
19	914-0104	Internal Cotter Pin	58	941-0225	Hex Flange Bearing
20	914-0111	Cotter Pin	59	741-3065B	Split Hex Flange Bearing
21	725-0157	Cable Tie	60	747-04093A	Brake Lock Control Rod
22	725-1644	Short Spring Switch	61	747-04096	Cruise Control Rod
23	926-0154	Push-mount Cable Tie	62	747-04641A-0637	Brake Pedal
24	926-0320	Insulator Nut Plate	63	748-04039C	Cruise Latch
25	732-04323B	Extension Spring, .770 x 3.72 Lg.	64	783-04612-0637	Steering Support Bracket
26	732-0716D	Extension Spring, .59 x 4.0	65	783-0663E	Drive Lockout Bracket
27	732-3118	Extension Spring, 3/8 x 1.44	66	910-0224	AB Screw, #10-16 x.500
28	936-0169	Lock Washer, 3/8	67	17962	Switch Plate
29	936-0227	Flat Washer, .390 x 1.500 x.134	68	925-04039	Switch
30	736-0258	Flat Washer, .385 x 1.00 x.135	69	712-3050	Lug Nut, 3/4-16
31	936-0300	Flat Washer, .406 x .875 x .059	70	634-0202A-0911	Wheel Assembly, 23 x 10.5 x 12
32	738-0372B	Shoulder Spacer, .38		634-04238-0662	Rim Only 12.0 x 7.0
33	747-04873	Hydrostatic Brake Rod		934-0255	Air Valve
34	747-04666	Hydrostatic Control Rod		734-04147-0901	Tire Only 23 x 10.5 x 12 Sq. Shldr.
35	747-04838A	Hydrostatic Bypass Rod	71	710-3103	Hex Cap Screw, 5/16-18 x 2.00
36	954-0461	Drive Belt	72	732-04528	Extension Spring, .50 OD x 5.00
37	756-04224	Flat Idler Pulley, 2.75	73	938-0380	Shoulder Bolt, .500 x .270 x 3/8-16
38	756-04325	V-idler Pulley, 3.06	74	750-04776	Spacer, .380 ID x .625 OD x .265
39	783-04442	Double Idler Bracket			

* Not Shown

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Briggs & Stratton Twin Cylinder Engine

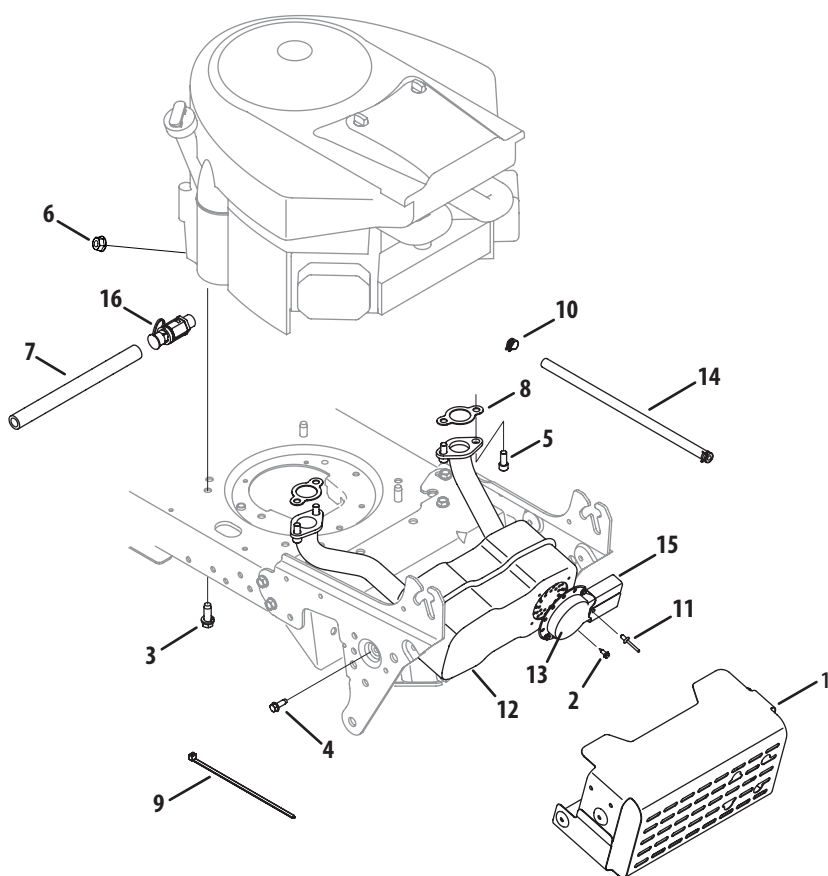

Ref.	Part Number	Description
1	683-04549-0637	Muffler Assembly Shield
2	710-0227	AB Screw #8-18 x 0.5
3	710-04683	TT Screw 3/8-16 x 1.00
4	710-0642	TT Screw 1/4-20 x 0.750
5	710-1314A	Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	751-3141-14	Oil Drain Extension Hose
8	721-0460	Exhaust Gasket

Ref.	Part Number	Description
9	725-0157	Cable Tie
10	726-0205	Hose Clamp
11	728-04000	Pop Rivets, .188 x .300
12	751-10542	Twin Inlet Muffler
13	751-0564B	Muffler Deflector
14	751-10349	Fuel Line Hose
15	751-10353	Long Muffler Deflector
16	951-10517A	Oil Drain Valve

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.