



Frame & Drive Idler Assembly

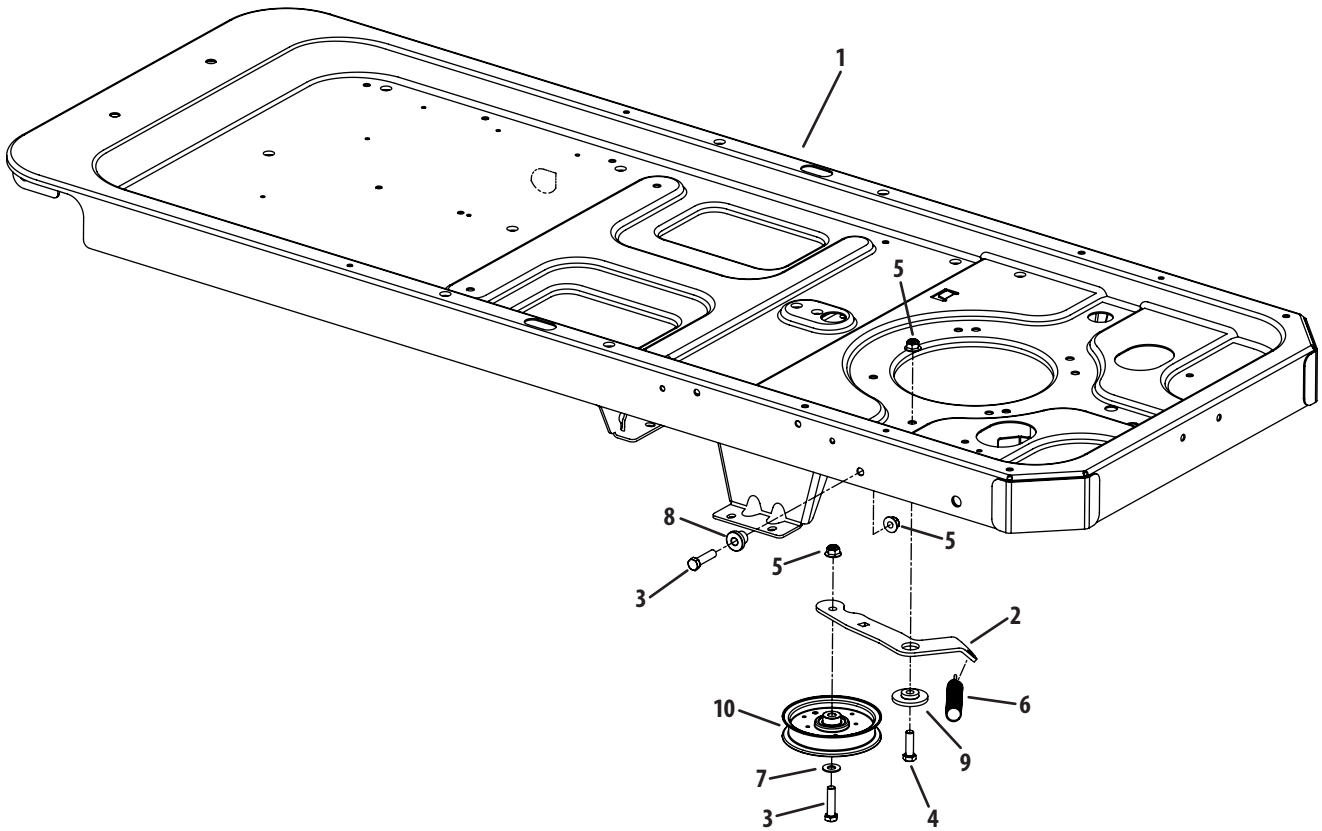

Ref.	Part Number	Description
1	603-04691	Frame Assembly
2	703-05829-0637	Drive Idler Arm
3	710-0520	Hex Screw, 3/8-16 x 1.5
4	710-3005	Hex Screw, 3/8-16 x 1.25
5	712-04065	Flange Nut, 3/8-16
6	732-0626	Extension Spring, .75 x 5.06
7	936-0300	Flat Washer, .406 x .875 x .059
8	738-04058	Shoulder Spacer, .39 x 1.0 x .7
9	738-04162A	Shoulder Spacer, .884 x .19
10	756-04129B	Idler Pulley, 4.25 Dia.


Operator's Platform (U.S.)

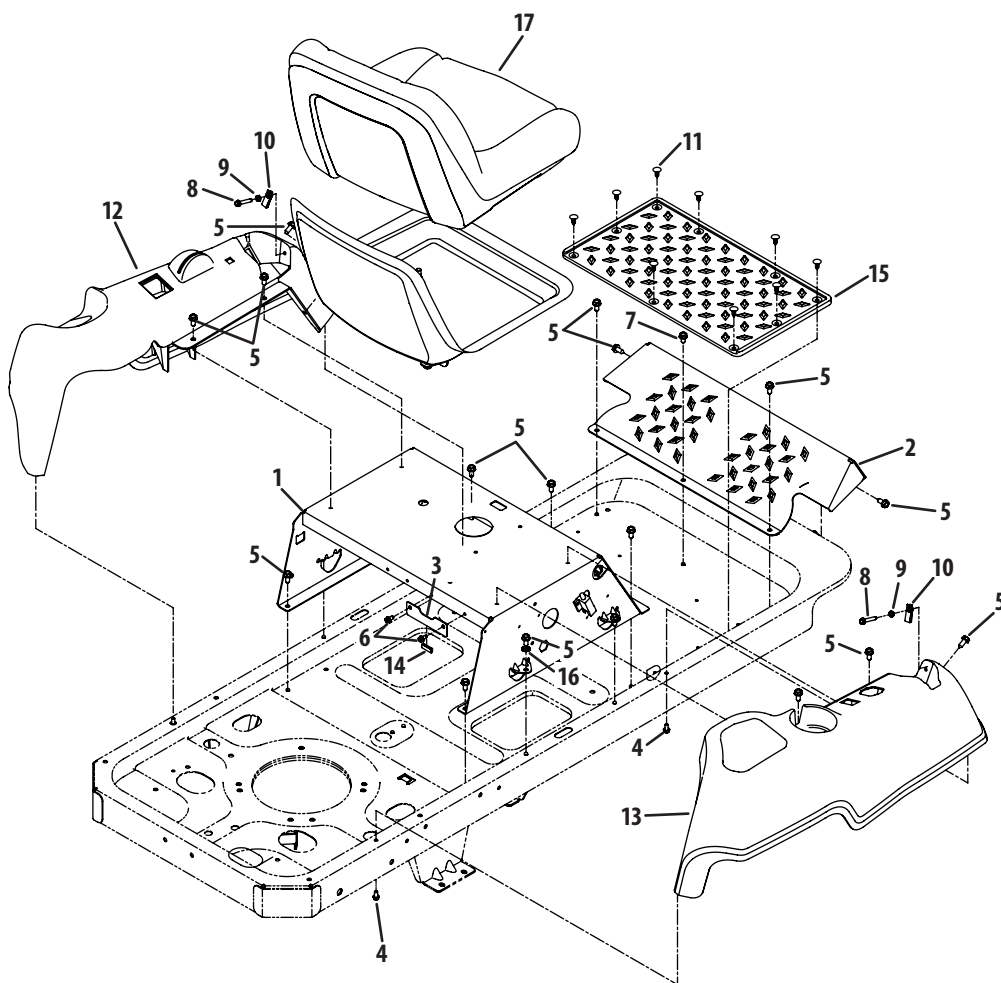

Ref.	Part Number	Description
1	603-04663-0691	Seat Frame Assembly
2	703-05373B-0691	Foot Rest Bracket
3	703-05894-0637	Batter Hold-Down Bracket
4	710-04187	Hex Washer Screw, 1/4-15 x .50
5	710-04484	Hex Washer Screw, 5/16-18 x .750
6	710-0599	Hex Washer Screw, 1/4-20 x .500
7	710-0604A	Hex Washer Screw, 5/16-18 x .625
8	710-0778	Hex Washer Screw, 1/4-20 x 1.500
9	912-0298	Jam Nut, 1/4-20

Ref.	Part Number	Description
10	712-04092	U-Type Nut, 1/4-20
11	726-3046	Ratchet Clip
12	731-04662E	LH Console
13	731-04663D	RH Console
14	731-0511	Trim Strip
15	735-04082B	Foot Pad
16	736-0148	Lock Washer, 3/8
17	757-04098	High-Back Seat


Operator's Platform (Australian w/ Kohler Engine)

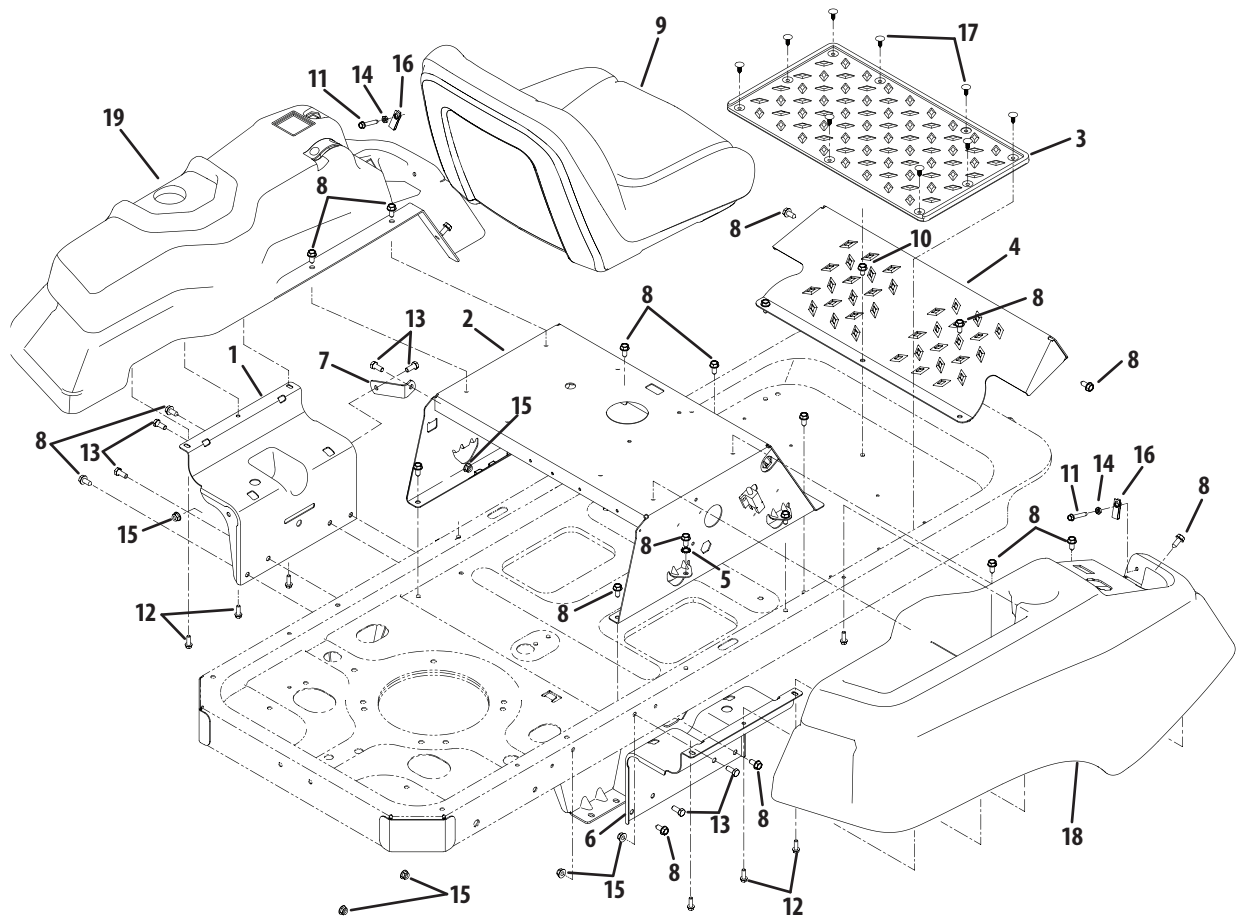

Ref.	Part Number	Description
1	603-04564	Console Mount Bracket
2	603-04663-0638	Seat Frame Assembly
3	735-04082B	Foot Pad
4	703-05373B-0638	Foot Rest
5	736-0148	Lock Washer, $\frac{3}{8}$
6	703-06451	Console Mount Bracket
7	703-06623-0637	Fuel Tank Support Bracket
8	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
9	757-04098	High-Back Seat
10	710-0604A	Hex Washer Screw, $\frac{5}{16}$ -18 x .825


Ref.	Part Number	Description
11	710-0778	Hex Washer Screw, $\frac{1}{4}$ -20 x 1.500
12	710-0895	Hex Washer Screw, $\frac{1}{4}$ -15 x .750
13	710-3008	Hex Screw, $\frac{5}{16}$ -18 x .75
14	912-1298	Jam Nut, $\frac{1}{4}$ -20
15	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
16	712-04092	U-Type Nut, $\frac{1}{4}$ -20
17	726-3046	Ratchet Clip, .250
18	731-06233	RH Console
19	731-06263	LH Console

Operator's Platform (Australian w/ Kawasaki Engine)

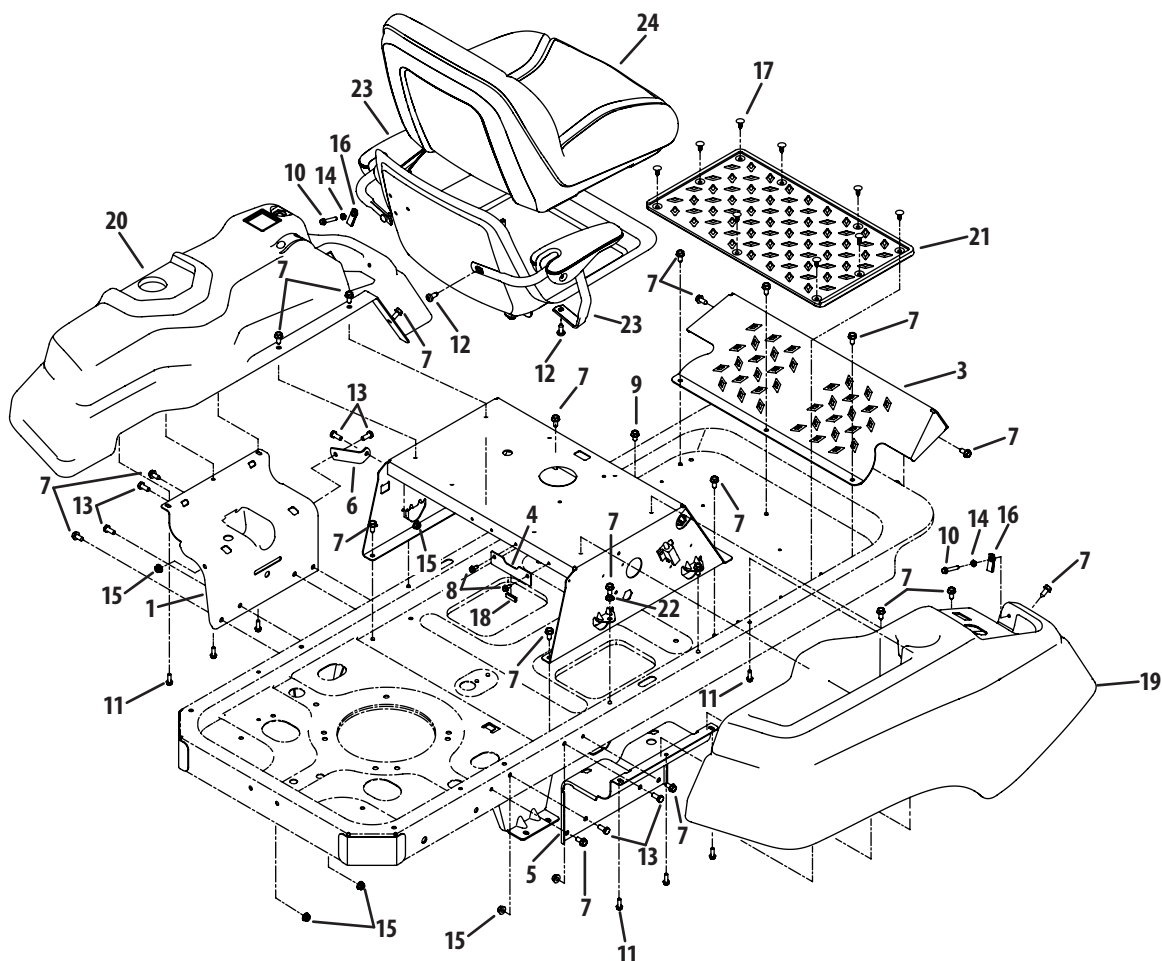


Ref.	Part Number	Description
1	603-04564-4015	Console Mount Bracket
2	603-04663-4015	Seat Frame Assembly
3	703-05373B-4015	Foot Rest Bracket
4	703-05894-0637	Battery Hold-Down Bracket
5	703-06451-4015	Console Mount Bracket
6	703-06623-0637	Fuel Tank Support Bracket
7	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
8	710-0599	Hex Washer Screw, $\frac{1}{4}$ -20 x .500
9	710-0604A	Hex Washer Screw, $\frac{5}{16}$ -18 x .625
10	710-0778	Hex Washer Screw, $\frac{1}{4}$ -15 x .750
11	710-0895	Hex Washer Screw, $\frac{1}{4}$ -15 x .750
12	710-1611B	Screw, $\frac{5}{16}$ -18 x .750

Ref.	Part Number	Description
13	710-3008	Hex Screw, $\frac{5}{16}$ -18 x .75
14	912-0298	Jam Nut, $\frac{1}{4}$ -20
15	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
16	712-04092	U-Type Nut, $\frac{1}{4}$ -20
17	726-3046	Ratchet Clip
18	731-0511	Trim Strip
19	731-06233	RH Console
20	731-06263	LH Console
21	735-04082B	Foot Rest Pad
22	736-0148	Lock Washer, $\frac{3}{8}$
23	757-04046	High-Back Seat Arm
24	757-04090	High-Back Seat

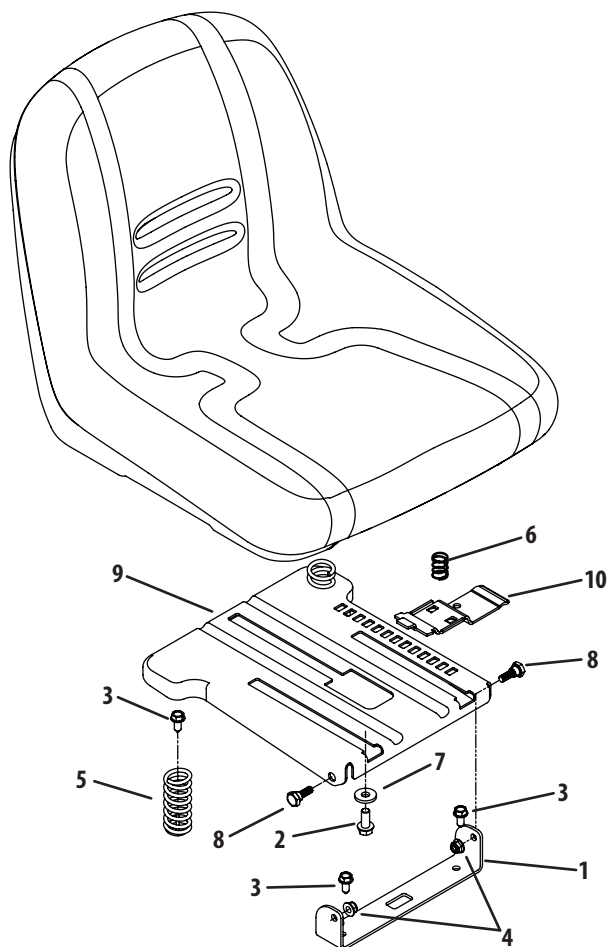

Ref.	Part Number	Description
1.	703-06941-0691	Seat Bracket
2.	710-04482	Hex Flange Bolt, $\frac{3}{8}$ -16 x .875
3.	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
4.	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
5.	732-04035	Compression Spring
6.	732-04563	Compression Spring
7.	736-0258	Flat Washer, .385 x 1.0 x .135
8.	938-0296	Shoulder Screw, .437 x .268 x $\frac{5}{16}$ -18
9.	783-06049-0691	Seat Mount Bracket
10.	783-06050	Seat Adjustment Lever

Engine Connection, 42"

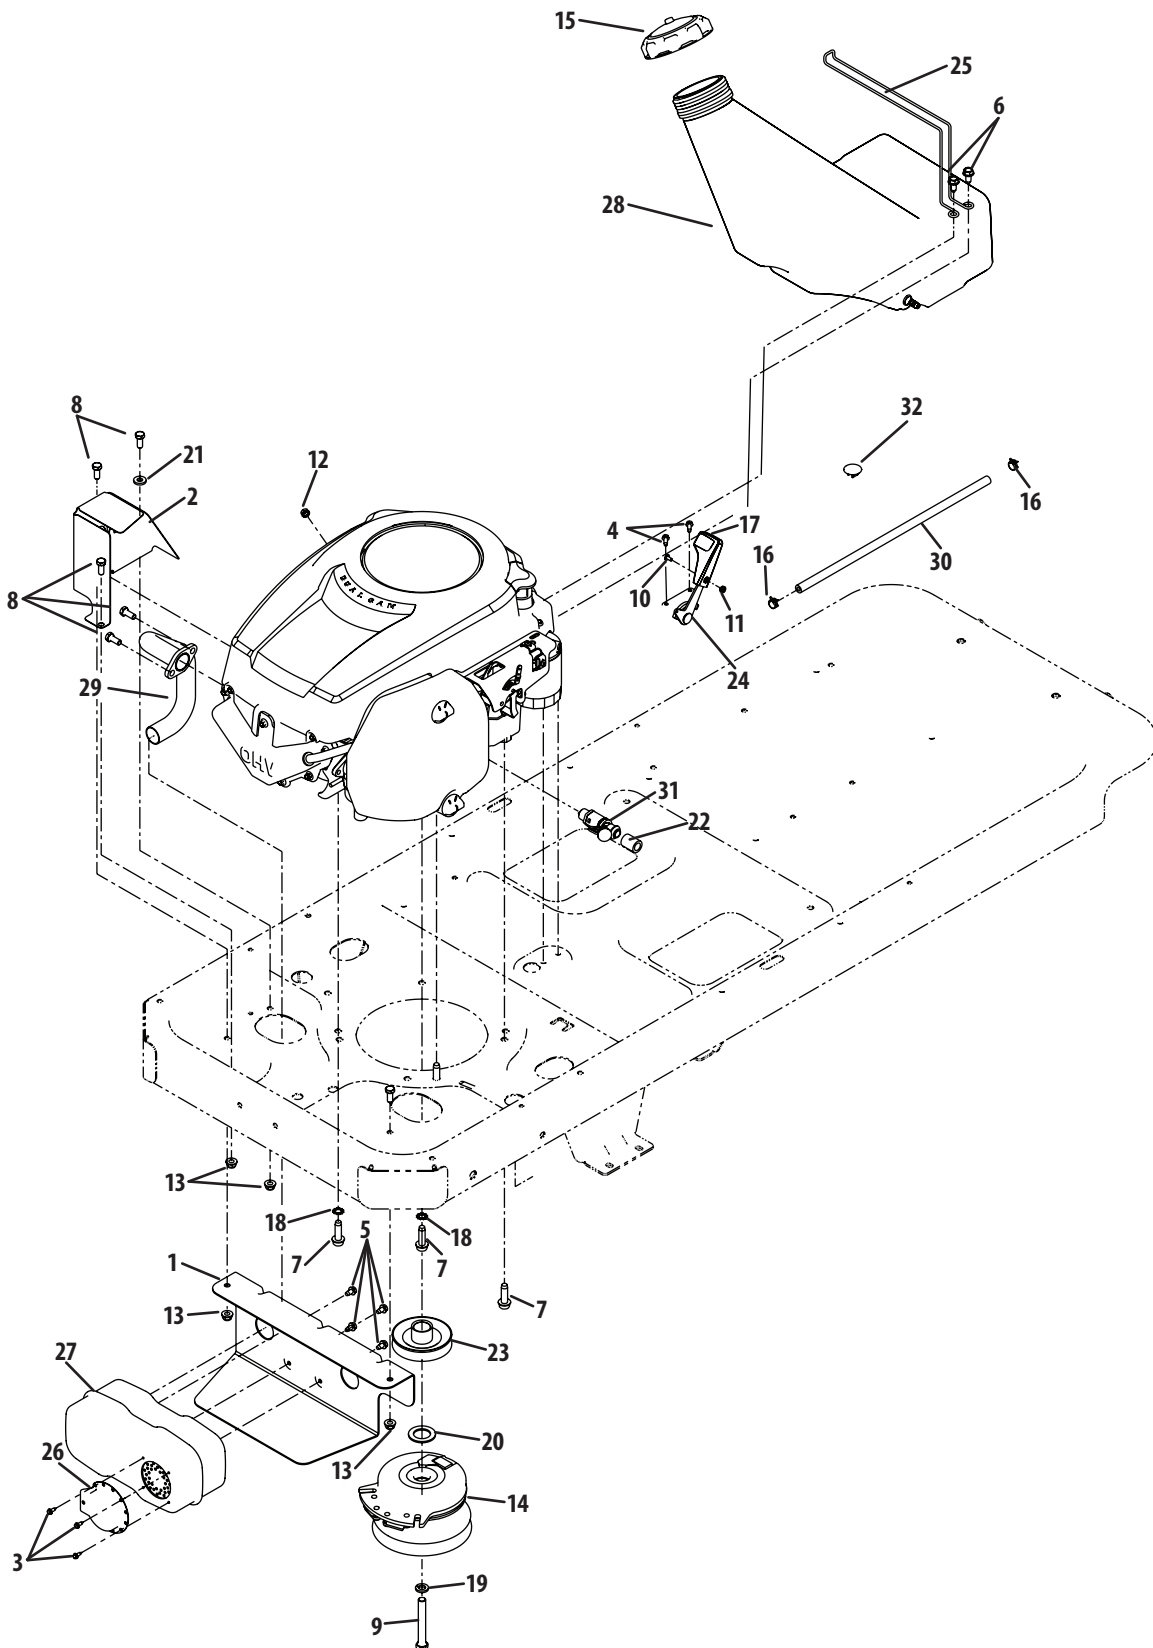

Ref.	Part Number	Description
1	703-05441A	Muffler Mounting Bracket
2	703-05870	Muffler Tube Heat Shield
3	710-0227	Hex Screw, #8-18 x .5
4	710-1017	AB Screw, 1/4-14 x .625
5	710-0599	Hex Screw, 1/4-20 x .5
6	710-04484	Hex Screw, 5/16-18 x .750
7	710-1315	Hex Screw, 3/8-16 x 1.250
8	710-3008	Hex Screw, 5/16-18 x .75
9	710-3157A	Hex Screw, 7/16-20 x 3.25
10	710-3217	Machine Screw, #8-32 x .375
11	712-0142	Hex Nut, #8-32
12	712-0271	Sems Nut, 1/4-20
13	712-04063	Flange Lock Nut, 5/16-18
14	917-04376A	Electric PTO Clutch
15	951-3124E	Fuel Cap
16	726-0205	Hose Clamp, .490
17	731-04914	Throttle/Choke Control Knob
18	736-0148	External Tooth Lock , 3/8
19	936-0171	Lock , 7/16
20	736-0277	Flat Washer, 1.031 x 1.620 x .095
21	936-3008	Flat Washer, .344 x .750 x .120
22	751-3141-14	Oil Drain Hose
23	756-04376	PTO Pulley
24	746-04161	Throttle Cable, 39.0 x .62
25	747-04228A	Tank Mounting Wire
26	751-0564B	Muffler Deflector
27	751-0617C	Single Inlet Muffler
28	751-10057D	Fuel Tank
29	751-10251	Exhaust Pipe
30	751-10349-28	Fuel Hose
31	951-10517A	Oil Drain
32	731-1999	Choke Plug

This exploded view diagram illustrates the assembly of a Karcher K2-0 power sprayer. The components are numbered as follows:


- 1**: Trigger gun
- 2**: Spray lance
- 3**: Spray lance connector
- 4**: Spray lance
- 5**: Trigger gun connector
- 6**: Trigger gun
- 7**: Trigger gun connector
- 8**: Trigger gun
- 9**: Trigger gun connector
- 10**: Trigger gun
- 11**: Trigger gun connector
- 12**: Trigger gun
- 13**: Trigger gun connector
- 14**: Trigger gun
- 15**: Trigger gun connector
- 16**: Trigger gun
- 17**: Trigger gun connector
- 18**: Trigger gun
- 19**: Trigger gun connector
- 20**: Trigger gun
- 21**: Trigger gun connector
- 22**: Trigger gun
- 23**: Trigger gun connector
- 24**: Trigger gun
- 25**: Trigger gun connector
- 26**: Trigger gun
- 27**: Trigger gun connector
- 28**: Trigger gun
- 29**: Trigger gun connector
- 30**: Trigger gun
- 31**: Trigger gun connector
- 32**: Trigger gun
- 33**: Trigger gun connector

Engine Connection, 50" w/ Kohler Engine

Ref.	Part Number	Description
1	703-05441A	Muffler Mount Bracket
2	710-0227	Hex Washer Screw, #8-18 x .500
3	710-04261	Hex Washer Screw, #12-16 x .50
4	710-04379A	Hex Lock Screw, 7/16-20 x 3.50
5	710-0599	Hex Washer Screw, 1/4-20 x .500
6	710-0654A	Hex Washer Screw, 3/8-16 x 1.000
7	710-3008	Hex Washer Screw, 5/16-18 x .75
8	710-3217	Machine Screw, #8-32 x .375
9	712-0142	Hex Nut, #8-32
10	712-0271	Sems Nut, 1/4-20
11	912-0429	Hex Lock Nut, 5/16-18
12	912-3005	Flange Lock Nut, 3/8-16
13	917-04552	Electric PTO Clutch
14	726-0197	Cable Tie
15	726-0205	Hose Clamp
16	731-04914	Throttle Control Knob
17	736-0148	Lock Washer, 3/8
18	936-0171	Lock Washer, 7/16
19	936-0300	Flat Washer, .406 x .875 x .059
20	746-04066	Throttle Cable
21	746-04214	Choke Cable
22	751-0564B	Muffler Deflector
23	751-0616B	Dual Inlet Muffler
24	751-10253	Exhaust Pipe, LH
25	751-10254	Exhaust Pipe, RH
26	751-10291	Oil Drain Hose
27	751-10349	Fuel Hose
28	756-04376	Engine Pulley
29	951-3124E	Fuel Cap *
30	751-10057D	Fuel Tank *
31	747-04228A	Tank Mounting Wire *
32	710-04484	Hex Washer Screw, 5/16-18 x .750 *
33	N/A	Fuel Tank Assembly +
—	935-0149	Fuel Tank Bushing +
—	751-10442	Fuel Pick-Up Fitting +
—	751-10692	Fuel Tank +
—	751-10703A	Fuel Cap +

+ — Australian Models
 * — Domestic Models


Engine Connection, 50" w/ Kawasaki Engine

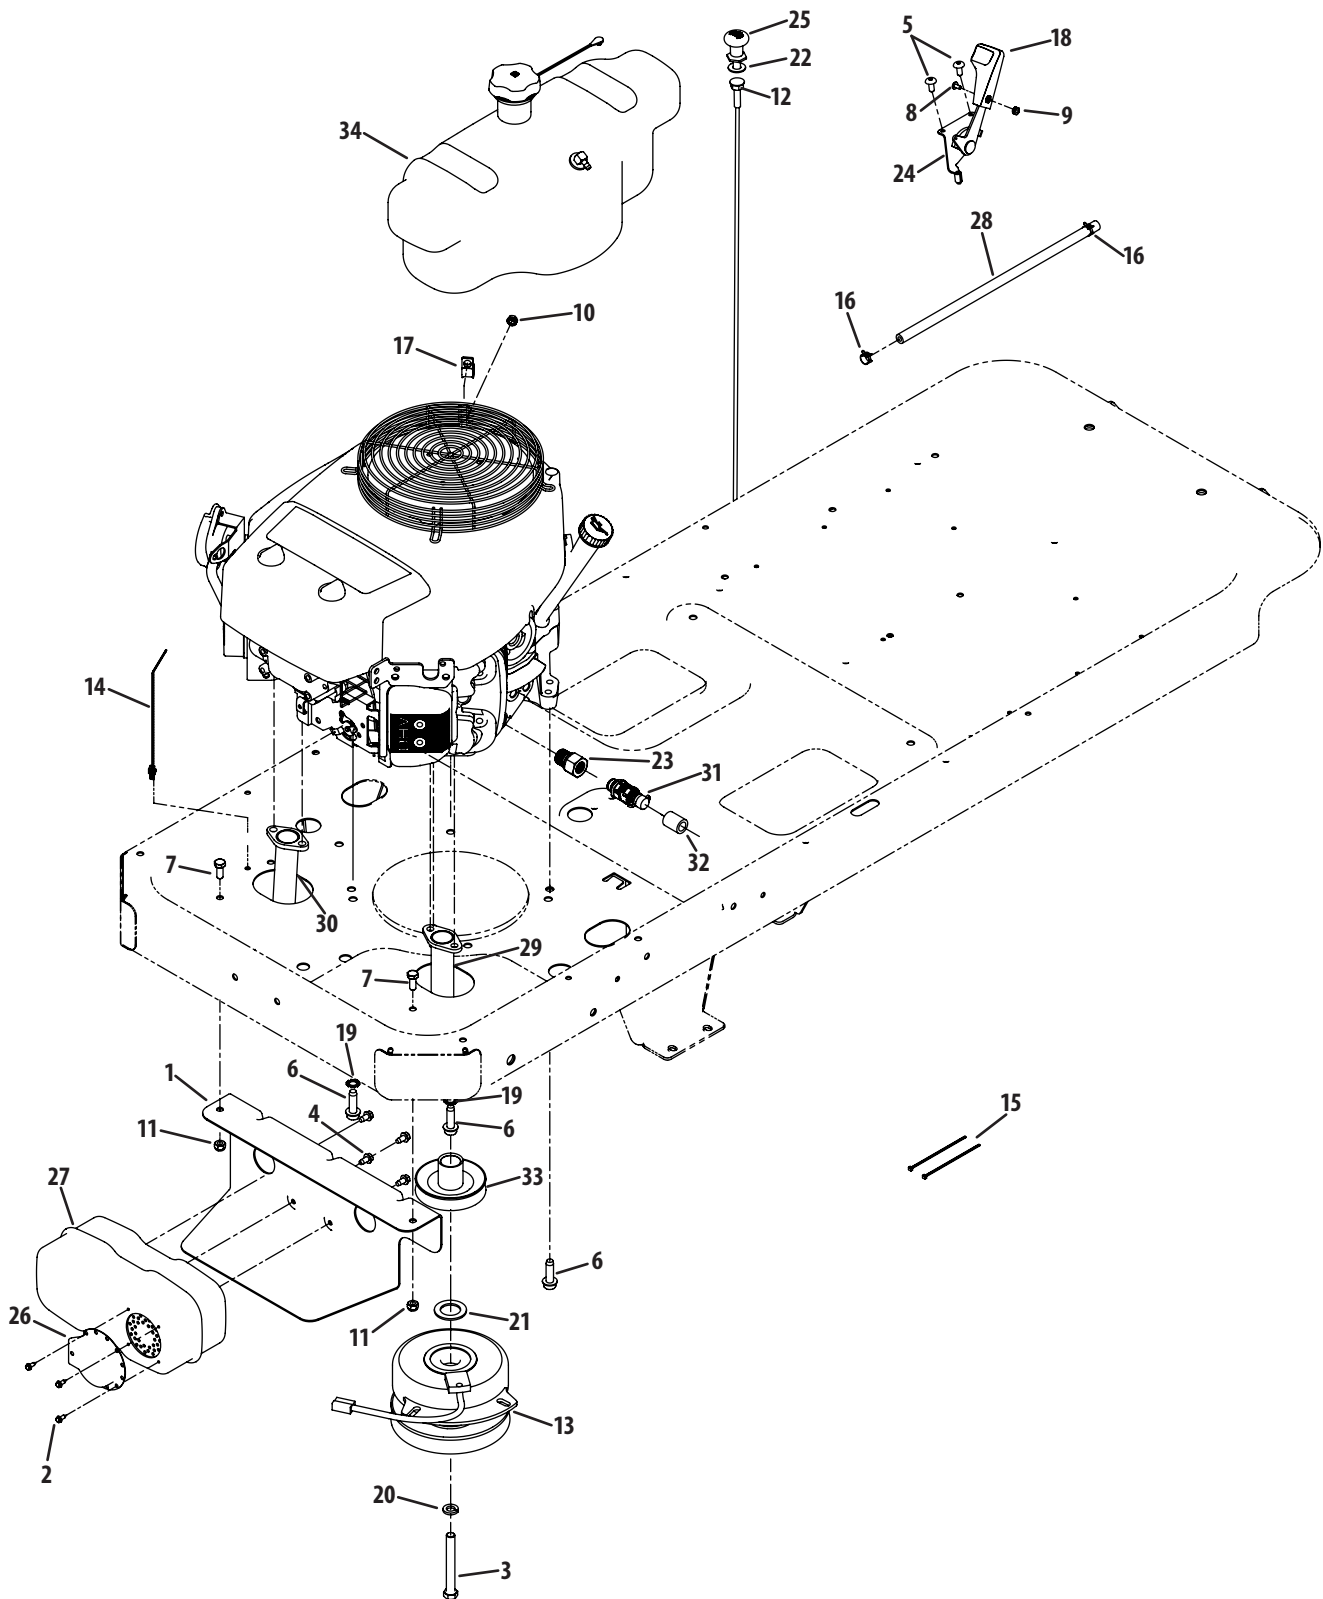

Engine Connection, 50" w/ Kawasaki Engine

Ref.	Part Number	Description
1	703-05441A	Muffler Mount Bracket
2	710-0227	Hex Washer Screw, #8-18 x .500
3	710-04261	Hex Washer Screw, #12-16 x .50
4	710-04379A	Hex Lock Screw, $\frac{7}{16}$ -20 x 3.50
5	710-1017	AB Screw, $\frac{1}{4}$ -14 x .625
6	710-1315	Hex Washer Screw, $\frac{3}{8}$ -16 x 1.250
7	710-3008	Hex Screw, $\frac{5}{16}$ -18 x .75
8	710-3217	Machine Screw, #8-32 x .375
9	712-0142	Hex Nut, #8-32
10	712-0271	Sems Nut, $\frac{1}{4}$ -20
11	912-0429	Hex Lock Nut, $\frac{5}{16}$ -18
12	912-3005	Flange Lock Nut, $\frac{3}{8}$ -16
13	917-04552	Electric PTO Clutch
14	926-0154	Cable Tie, 7.5
15	726-0197	Cable Tie
16	726-0205	Hose Clamp, .490
17	726-0272	Clamp, $\frac{1}{16}$
18	731-04914	Throttle Control Knob
19	736-0148	Lock Washer, $\frac{3}{8}$
20	936-0171	Lock Washer, $\frac{7}{16}$
21	736-0277	Flat Washer, 1.031 x 1.620 x .095
22	936-0300	Flat Washer, .406 x .875 x .059
23	737-04138	Fitting, 1.0
24	746-04066	Throttle Cable
25	746-04214	Choke Cable
26	751-0564B	Muffler Deflector
27	751-0616B	Dual Inlet Muffler
28	751-10349	Fuel Hose
29	751-10355	Exhaust Pipe, RH
30	751-10356	Exhaust Pipe, LH
31	951-10517A	Oil Drain
32	751-3141-14	Oil Drain Extension Hose
33	756-04376	Engine Pulley
34	N/A	Fuel Tank Assembly
—	935-0149	Fuel Tank Bushing
—	751-10442	Fuel Pick-Up Fitting
—	751-10692	Fuel Tank
—	751-10703A	Fuel Cap

Deck Lift & Controls

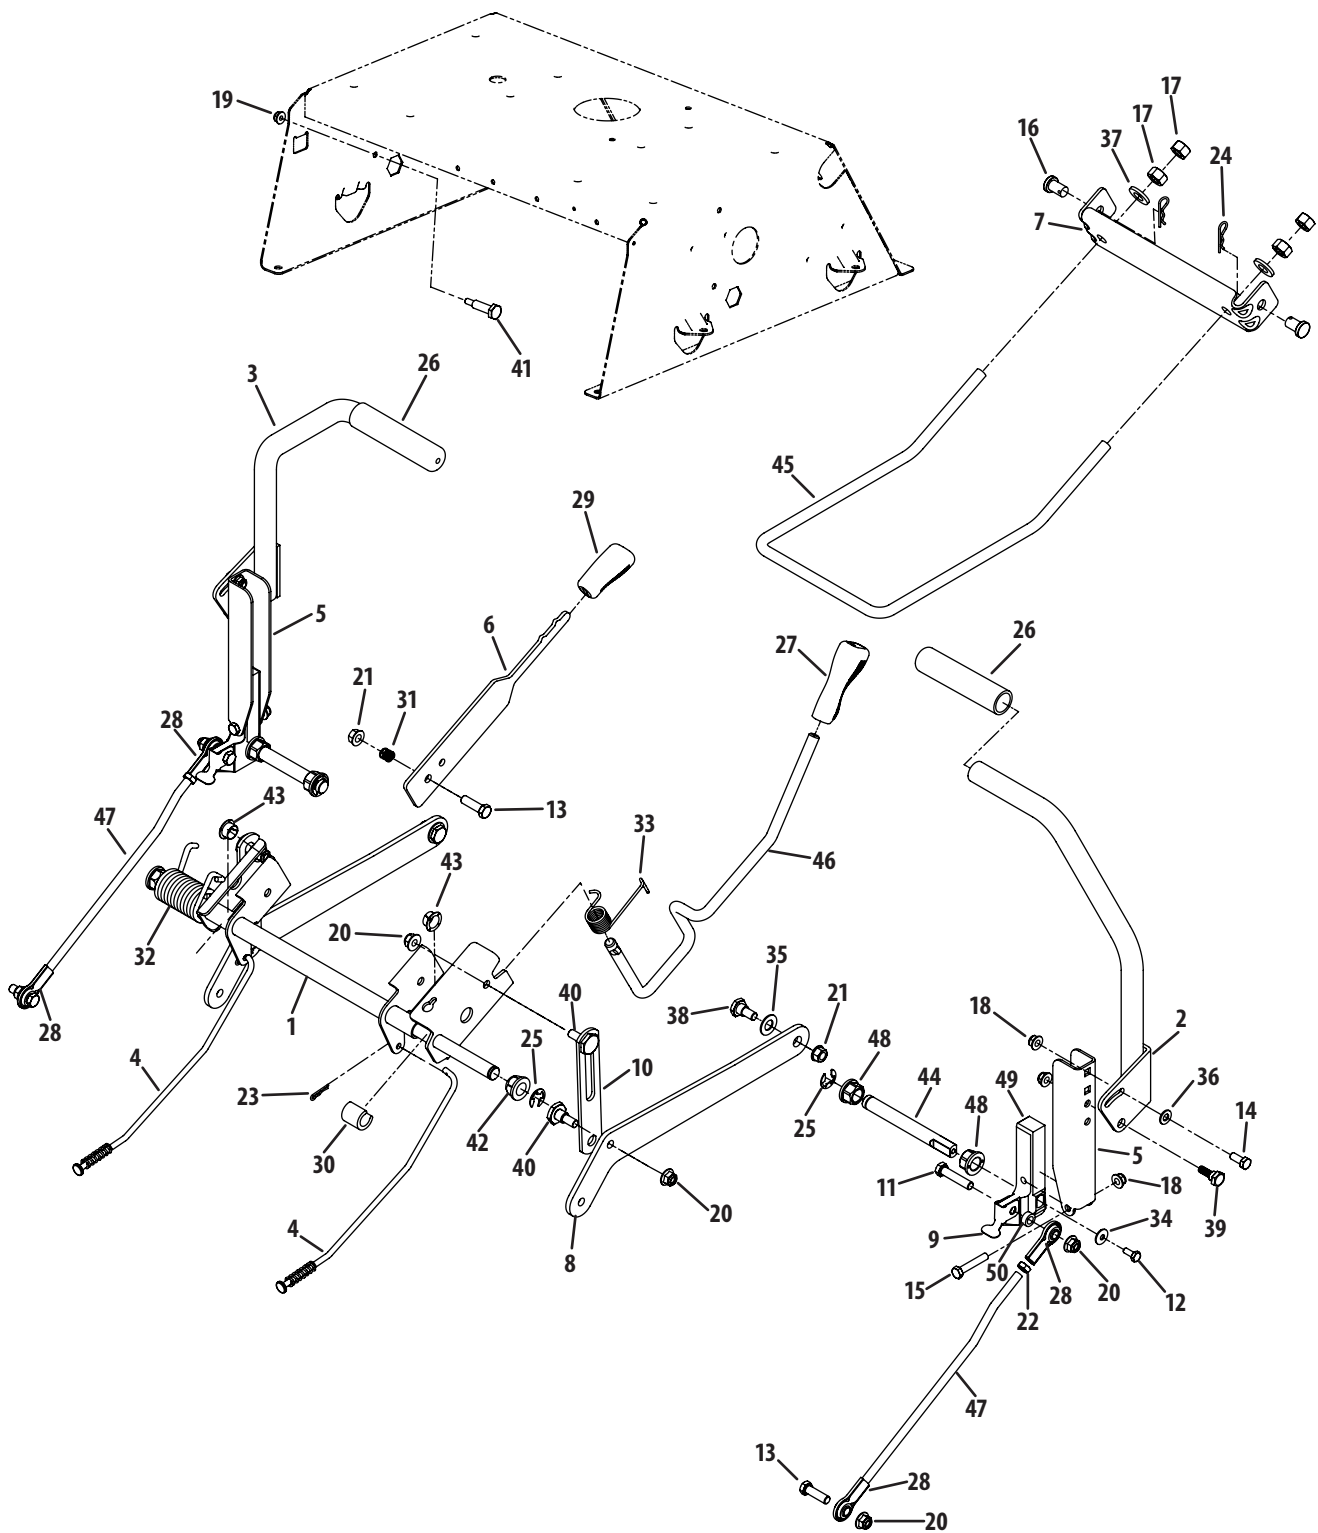


Ref.	Part Number	Description
1	603-04160B	Deck Lift Shift Assembly
2	603-04322-0662	Lapbar Lever Assembly, RH — Gray
—	603-04322-0638	Lapbar Lever Assembly, RH — Red
3	603-04324-0662	Lapbar Lever Assembly, LH — Gray
—	603-04324-0638	Lapbar Lever Assembly, LH — Red
4	947-04065	Brake Rod Assembly
5	703-05387B	Lapbar Pivot Bracket
6	703-05396A-0637	Brake/Shabs Assembly
7	703-05414A-0691	Front Deck Hanger Bracket
8	703-05793A-0691	Deck Lift Arm Plate
9	703-06096	Switch Actuator Bracket
10	703-06169-0637	Lift Link Plate
11	710-0347	Hex Screw, $\frac{3}{8}$ -16 x 1.75
12	710-0433	Hex Screw, $\frac{1}{4}$ -20 x .625
13	710-3005	Hex Screw, $\frac{3}{8}$ -16 x 1.25
14	710-3008	Hex Screw, $\frac{5}{16}$ -18 x .75
15	710-3180	Hex Screw, $\frac{5}{16}$ -18 x 1.75
16	911-0332	Clevis Pin, .50 x .78
17	912-0206	Hex Nut, $\frac{1}{2}$ -13
18	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
19	712-04064	Flange Lock Nut, $\frac{1}{4}$ -20 (50" Deck)
20	712-04065	Flange Lock Nut, $\frac{3}{8}$ -16
21	912-0431	Flange Lock Nut, $\frac{3}{8}$ -16
22	912-3001	Jam Nut, $\frac{3}{8}$
23	914-0104	Cotter Pin, .072 x 1.13
24	914-04023	Cotter Pin, .080 x 1.5625

Ref.	Part Number	Description
25	716-0106	E-Ring
26	720-0274	Grip, 1.0 x 5.0
27	720-0311	Handle Grip, $\frac{1}{2}$
28	723-04035	Rod End
29	731-04735	Selector Handle
30	731-05732	Spacer, .621 x 1.00
31	932-0334	Compression Spring, .50 x .50
32	732-04420	Torsion Spring, 1.191 x 2.78
33	732-0874	Torsion Spring
34	736-0270	Bell Washer, .265 x .75 x .062
35	936-0272	Flat Washer, .510 x 1.00 x .060
36	936-0275	Flat Washer, .344 x .688 x .065
37	736-3019	Flat Washer, .531 x .062 x .134
38	738-0143	Shoulder Bolt, $\frac{3}{8}$ -16 x .496 x .336
39	938-0296	Shoulder Screw, $\frac{5}{16}$ x .437 x .268
40	938-0507B	Shoulder Screw, .500 x .434
41	938-0572	Shoulder Screw, .374 x 1.16 (50" Deck)
42	941-0225	Hex Flange Bearing
43	741-3074	Flange Bearing, .626 x .938 x .344
44	747-04226A	Shaft Control
45	747-04401A	Front Hanger Deck Lift Rod
46	747-04637	Deck Lift Handle Rod
47	747-05057	Lapbar Control Rod
48	948-0227A	Hex Flange Bearing, .629
49	748-04169A	Control Hub
50	750-04776	Spacer, .380 x .625 x .265


Front Axle

42" Decks

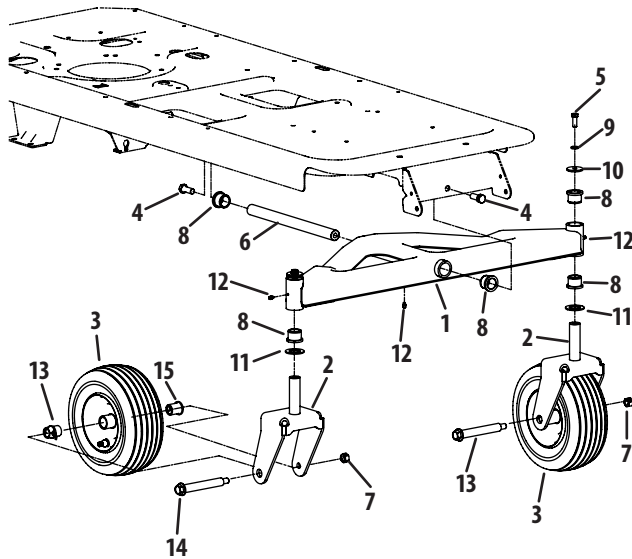


Ref.	Part Number	Description
1	603-04148C-0691	Front Pivot Axle
2	603-04308-0691	Castor Wheel Bracket
3	634-04237A	Wheel Assembly, 11.0 x 4.0 x 5.0
4	710-04186	Hex Lock Screw, 1/2-13 x 1.25
5	710-0514	Hex Cap Screw, 3/8-16 x 1.0
6	911-04228	Axle Shaft
7	712-3022	Hex Lock Nut, 1/2-13
8	731-05500	Flange Bearing, 1.0 x 1.246
9	936-0169	Lock Washer, 3/8
10	936-0227	Flat Washer, .39 x 1.5 x .134
11	736-0250	Flat Washer, 1.0 x 1.75 x .107
12	937-3000	Lube Fitting, 3/16 Drive
13	738-04182A	Shoulder Screw, .75 x 4.75 x 7/16-14
14	741-0516B	Flange Bearing, .76 x 1.0 x 1.2
15	741-0990B	Flange Bearing, .76 ID w/ Lube Ftg.

50" Decks

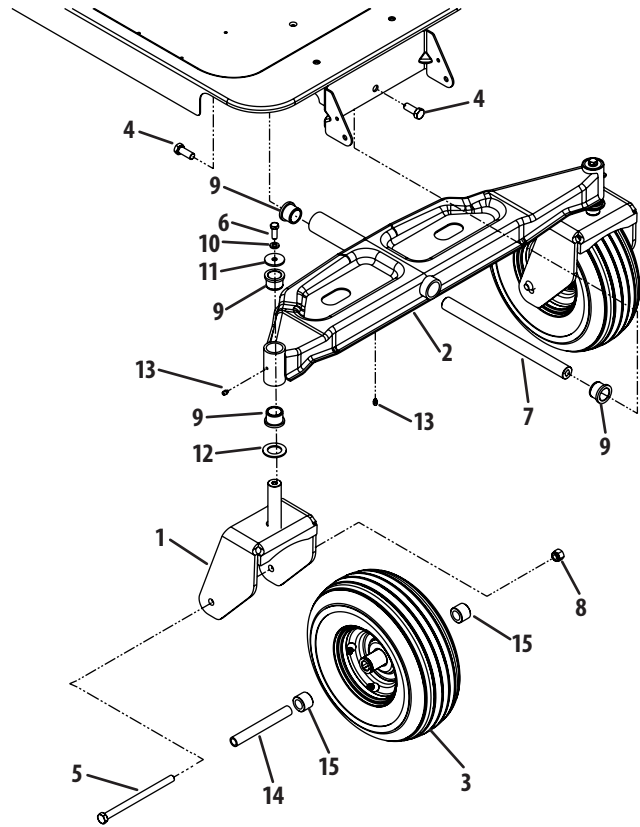


Ref.	Part Number	Description
1	603-04370-0691	Castor Wheel Bracket
2	603-04385A-0691	Front Pivot Axle
3	634-04323A	Wheel Assembly, 13 x 5-6
—	734-04255A	Tire, 13 x 5-6
4	710-04186	Hex Lock Screw, 1/2-13 x 1.25
5	710-04652	Hex Cap Screw, 1/2-20 x 7.25
6	710-0514	Hex Cap Screw, 3/8-16 x 1.0
7	911-04228	Axle Shaft
8	912-3058	Hex Insert Lock Nut, 1/2-13
9	731-05500	Flange Bearing, 1.0 x 1.246
10	936-0169	Lock Washer, 3/8
11	936-0227	Flat Washer, .39 x 1.5 x .134
12	736-0250	Flat Washer, 1.0 x 1.75 x .10
13	937-3000	Lube Fitting, 3/16 Drive
14	750-04775A	Spacer, .51 x .75 x 5.825
15	750-04792	Hub, .76 x 1.23 x .92

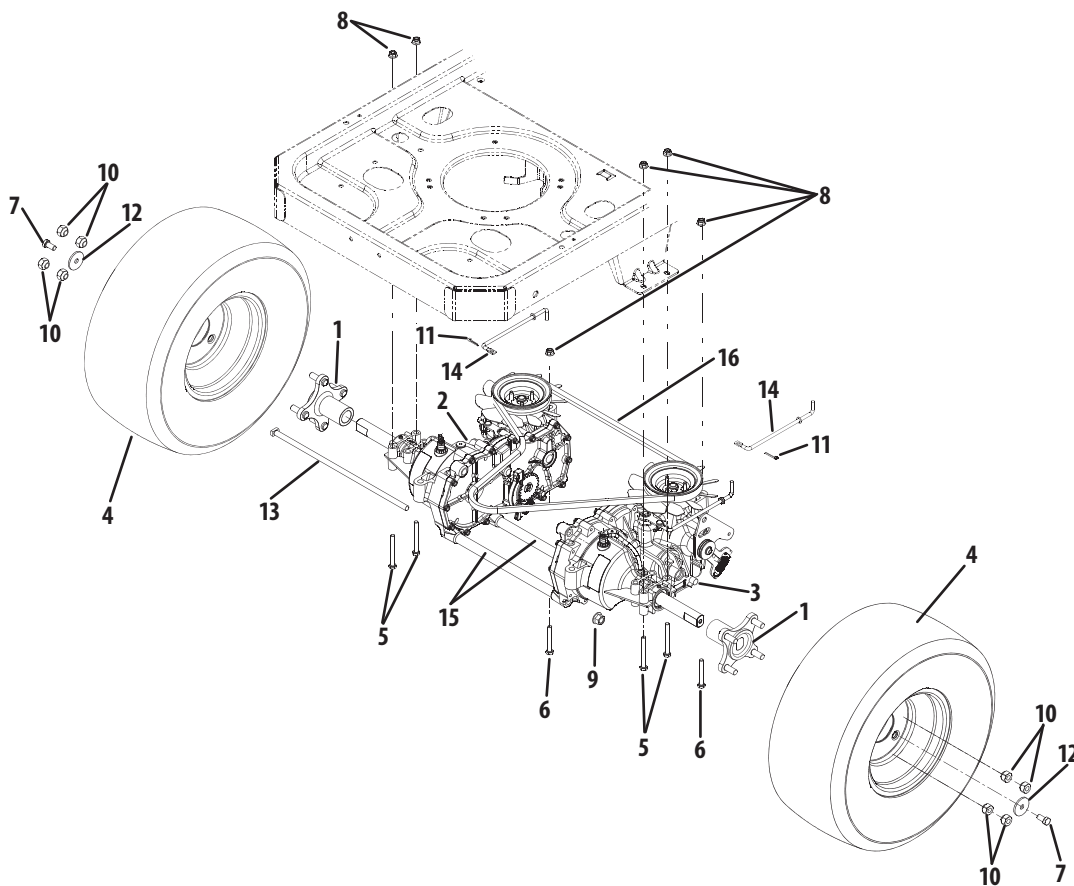

Ref.	Part Number	Description
1	918-04317	Wheel Hub, 7/16-14 x 1.6
2	918-04431A	Transmission Assembly, LH
3	918-04432A	Transmission Assembly, RH
4	634-04294	Wheel Assembly, 18 x 8.5-8 (42" Deck)
—	603-04173-0662	Rim Assembly
—	934-0255	Air Valve
—	734-04246-0901	Tire, 18 x 8.5-8
4	634-04171	Wheel Assembly, 18 x 9.5-8 (50" Deck)
—	603-04175-0662	Rim Assembly
—	934-0255	Air Valve
—	734-1729	Tire, 18 x 9.5-8
5	710-0176	Hex Cap Screw, 5/16-18 x 2.75

Ref.	Part Number	Description
6	710-0395	Hex Cap Screw, 5/16-18 x 2.25
7	710-3119	Hex Cap Screw, 3/8-16 x .75
8	712-04063	Hex Flange Nut, 5/16-18
9	712-0459	Hex Flange Nut, 7/16-20
10	712-3050	Lug Nut, 7/16-14
11	914-0507	Cotter Pin, 3/32 x .75
12	936-0227	Flat Washer, .39 x 1.5 .134
13	738-04192	Rod, .405 x 14.0
14	747-04217C-0637	Bypass Rod
15	750-04561	Tube, .45 x .69 x 10.2
16	954-04043A	V-Belt


42" Mower Deck

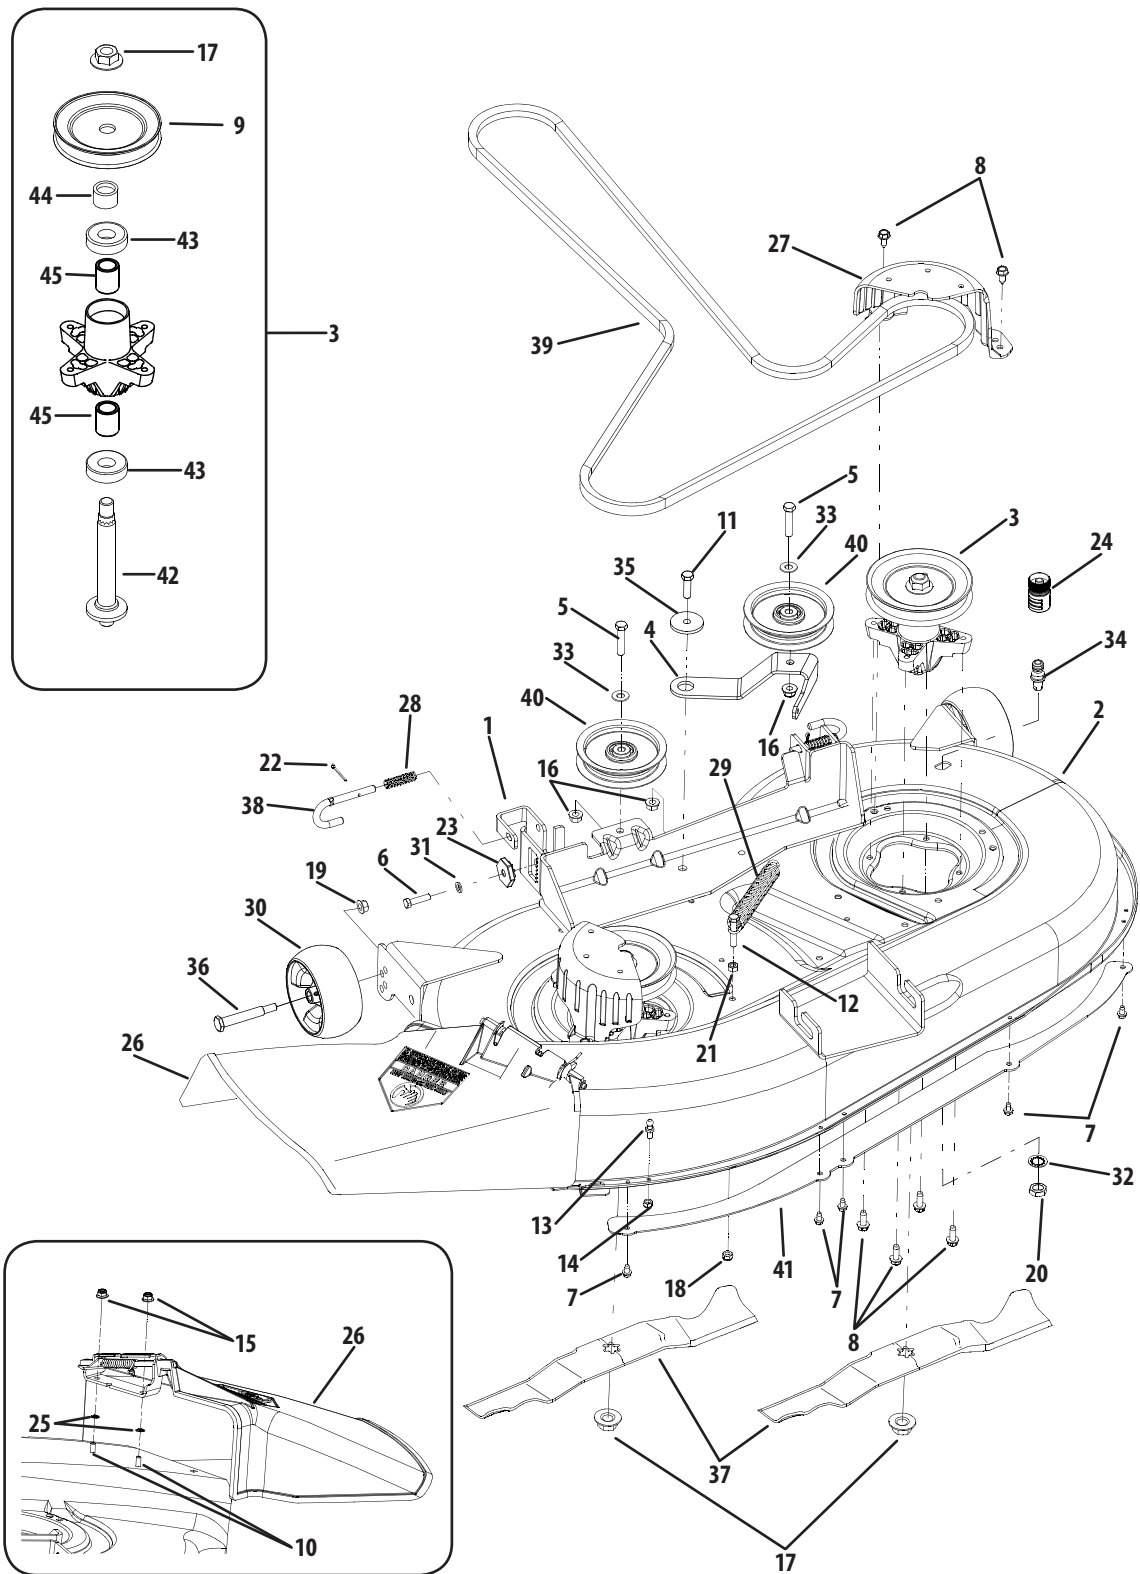

Ref.	Part Number	Description
1.	603-04156-0691	Deck Lift Bracket
2.	903-04335C-0691	Deck Housing
3.	918-0624	Spindle Assembly
4.	703-05824B-0691	Idler Arm
5.	710-0347	Hex Cap Screw, 3/8-16 x 1.75
6.	710-0528	Hex Cap Screw, 5/16-18 x 1.25
7.	710-0599	Hex Washer Head Screw, 1/4-20 x .5
8.	710-04484	Hex Washer Head Screw, 5/16-18 x .750
9.	956-1227	Deck Pulley, 6.3 Dia
10.	710-0751	Hex Cap Screw, 1/4-20 x .62
11.	710-3005	Hex Cap Screw, 3/8-16 x 1.25
12.	710-3180	Hex Cap Screw, 5/16-18 x 1.75
13.	911-04069	Grass Catcher Pin, 1/4-20
14.	712-0324	Hex Insert Lock Nut, 1/4-20
15.	712-04064	Hex Insert Flange Lock Nut, 1/4-20
16.	712-04065	Hex Insert Flange Lock Nut, 3/8-16
17.	712-0417A	Hex Flange Nut, 5/8-18
18.	912-0429	Hex Insert Lock, 5/16-18
19.	912-0431	Hex Flange Lock Nut, 3/8-16
20.	912-0641	Hex Nut, M16-1.5
21.	912-3010	Hex Nut, 5/16-18
22.	914-0470	Cotter Pin, 1/8 x 1.25
23.	917-04074	Deck Adjustment Gear

Ref.	Part Number	Description
24.	921-04041	Water Nozzle Adapter
25.	726-0233	Push Nut, .25 x .5
26.	931-1032B	Discharge Chute Assembly
27.	731-2231B	Belt Cover
28.	932-0306A	Compression Spring
29.	732-04609	Extension Spring, .94 Dia. x 6.74
30.	734-04155	Deck Ball Wheel, 5.0
31.	936-0119	Lock Washer, 5/16
32.	736-0225	Lock Washer
33.	736-3072	Flat Washer, .38 x .93 x .11
34.	737-04003D	Deck Water Nozzle
35.	738-04162A	Shoulder Spacer, .884 x .19
36.	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
37.	942-0616A	Blade, 3 in 1, 21.23
38.	747-1116	Deck Hanger Rod
39.	954-04137A	V-Belt
40.	756-04129B	Idler Pulley, 4.25 Dia
41.	753-0884	Deck Skirt
42.	738-1010A	Spindle Shaft, 5.75
43.	941-0919	Ball Bearing
44.	748-0433	Spacer, .820 x 1.15 x .73
45.	750-1000	Spacer, .8 x 1.10 x 1.322

50" Mower Deck

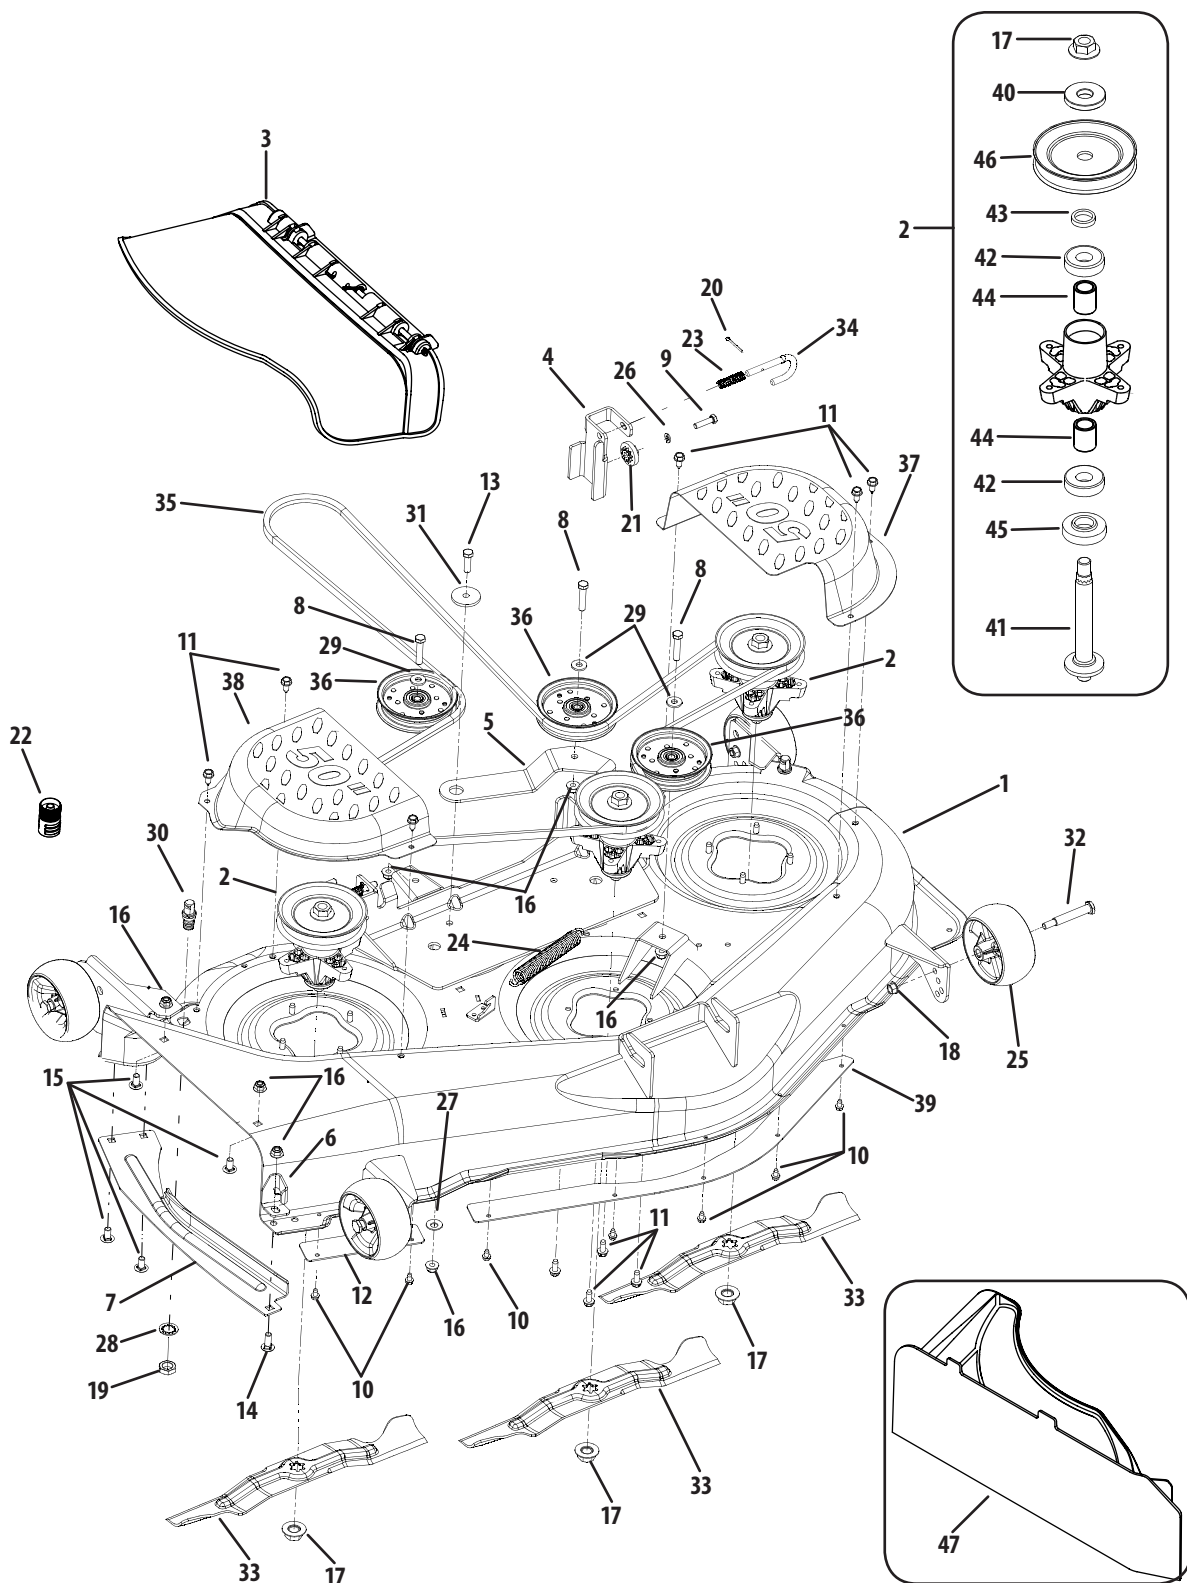

Ref.	Part Number	Description
1	603-04328A-0691	Deck Housing
2	918-04126A	Spindle Assembly
3	631-04070A	Discharge Chute Assembly
4	683-0254B-0691	Deck Hanger Bracket
5	703-05825B-0691	Idler Arm
6	703-3279-0691	Stop Bracket
7	703-3511A-0637	Finger Guard
8	710-0347	Hex Cap Screw, 3/8-16 x 1.75
9	710-0528	Hex Cap Screw, 5/16-18 x 1.25
10	710-0599	Hex Washer Head Screw, 1/4-20 x .5
11	710-04484	Hex Washer Head Screw, 5/16-18 x .750
12	783-04415-0637	Skirt, RH
13	710-3005	Hex Cap Screw, 3/8-16 x 1.25
14	710-3168	Carriage Screw, 3/8-16 x 1.0
15	710-3178	Carriage Screw, 3/8-16 x .75
16	712-04065	Hex Insert Flange Lock Nut, 3/8-16
17	712-0417A	Hex Flange Nut, 5/8-18
18	912-0431	Hex Flange Lock Nut, 3/8-16
19	912-0641	Hex Nut, M16-1.5
20	914-0470	Cotter Pin, 1/8 x 1.25
21	917-04074	Deck Adjustment Gear
22	921-04041	Water Nozzle Adapter
23	932-0306A	Compression Spring
24	732-04609	Extension Spring, .94 x 6.74

Ref.	Part Number	Description
25	734-04155	Deck Ball Wheel, 5.0
26	936-0119	Lock Washer, 5/16
27	736-0407	Bell Washer, .45 x 1.0 x .062
28	736-0225	Internal Tooth Lock Washer, 5/8
29	736-3072	Flat Washer, .38 x .93 x .110
30	737-04003D	Deck Wash Nozzle
31	738-04162A	Shoulder Spacer, .884 x .190
32	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
33	942-04053C	Blade, 2 in 1, 17.9
34	747-1116	Deck Hanger Rod
35	954-04044A	V-Belt Type A Sec x 134
36	756-04129B	Idler Pulley, 4.25 Dia
37	783-04399-0691	Belt Cover, LH
38	783-04400-0691	Belt Cover, RH
39	783-04414-0637	Center Skirt
40	736-0315	Flat Washer, .76 x 1.50 x .12
41	738-1010A	Spindle Shaft, 5.75
42	941-0919	Ball Bearing
43	748-0160A	Spacer, .79 x 1.25 x .175
44	750-1000	Spacer, .80 x 1.10 x 1.32
45	750-1349A	Spacer, .79 x 1.82 x .55
46	756-04216	V-Type Pulley, 5.39
47	731-04651	Mulch Kit