

Operator's Manual


CRAFTSMAN®

LAWN TRACTOR


20 HP, Variation Speed

42" Deck

Model No. 247.28919

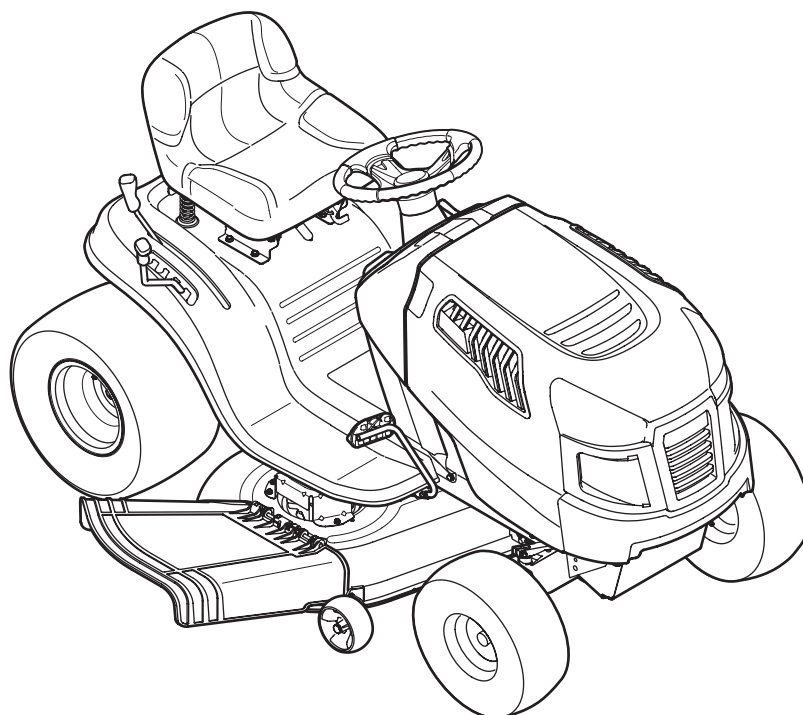

- Espanol, P. 59

 

This product has a low emission engine which operates differently from previously built engines. Before you start the engine, read and understand this Operator's Manual.

⚠ CAUTION

Before using this equipment, read this manual and follow all safety rules and operating instructions.

For answers to your questions about this product, Call:

1-800-659-5917

Craftsman Tractor Help Line

7 am - 7 pm CT, Mon. - Sun.

Sears Brands Management Corporation, Hoffman Estates, IL 60179 U.S.A.

Visit our website: www.craftsman.com

Form No. 769-05815A
(February 12, 2010)

Labels

777X43688



777I22773



REF: 751B278857



777S33517



777D14479



REF: 777D14476 (QTY 3)



777I22453



777X44381



777I23092



777D14483



777D14482



(QTY 2) 777D14490



777S30018



777S30503



 
777I22454



777I22469




777I22479



PARTS LIST

Craftsman Model 247.28919

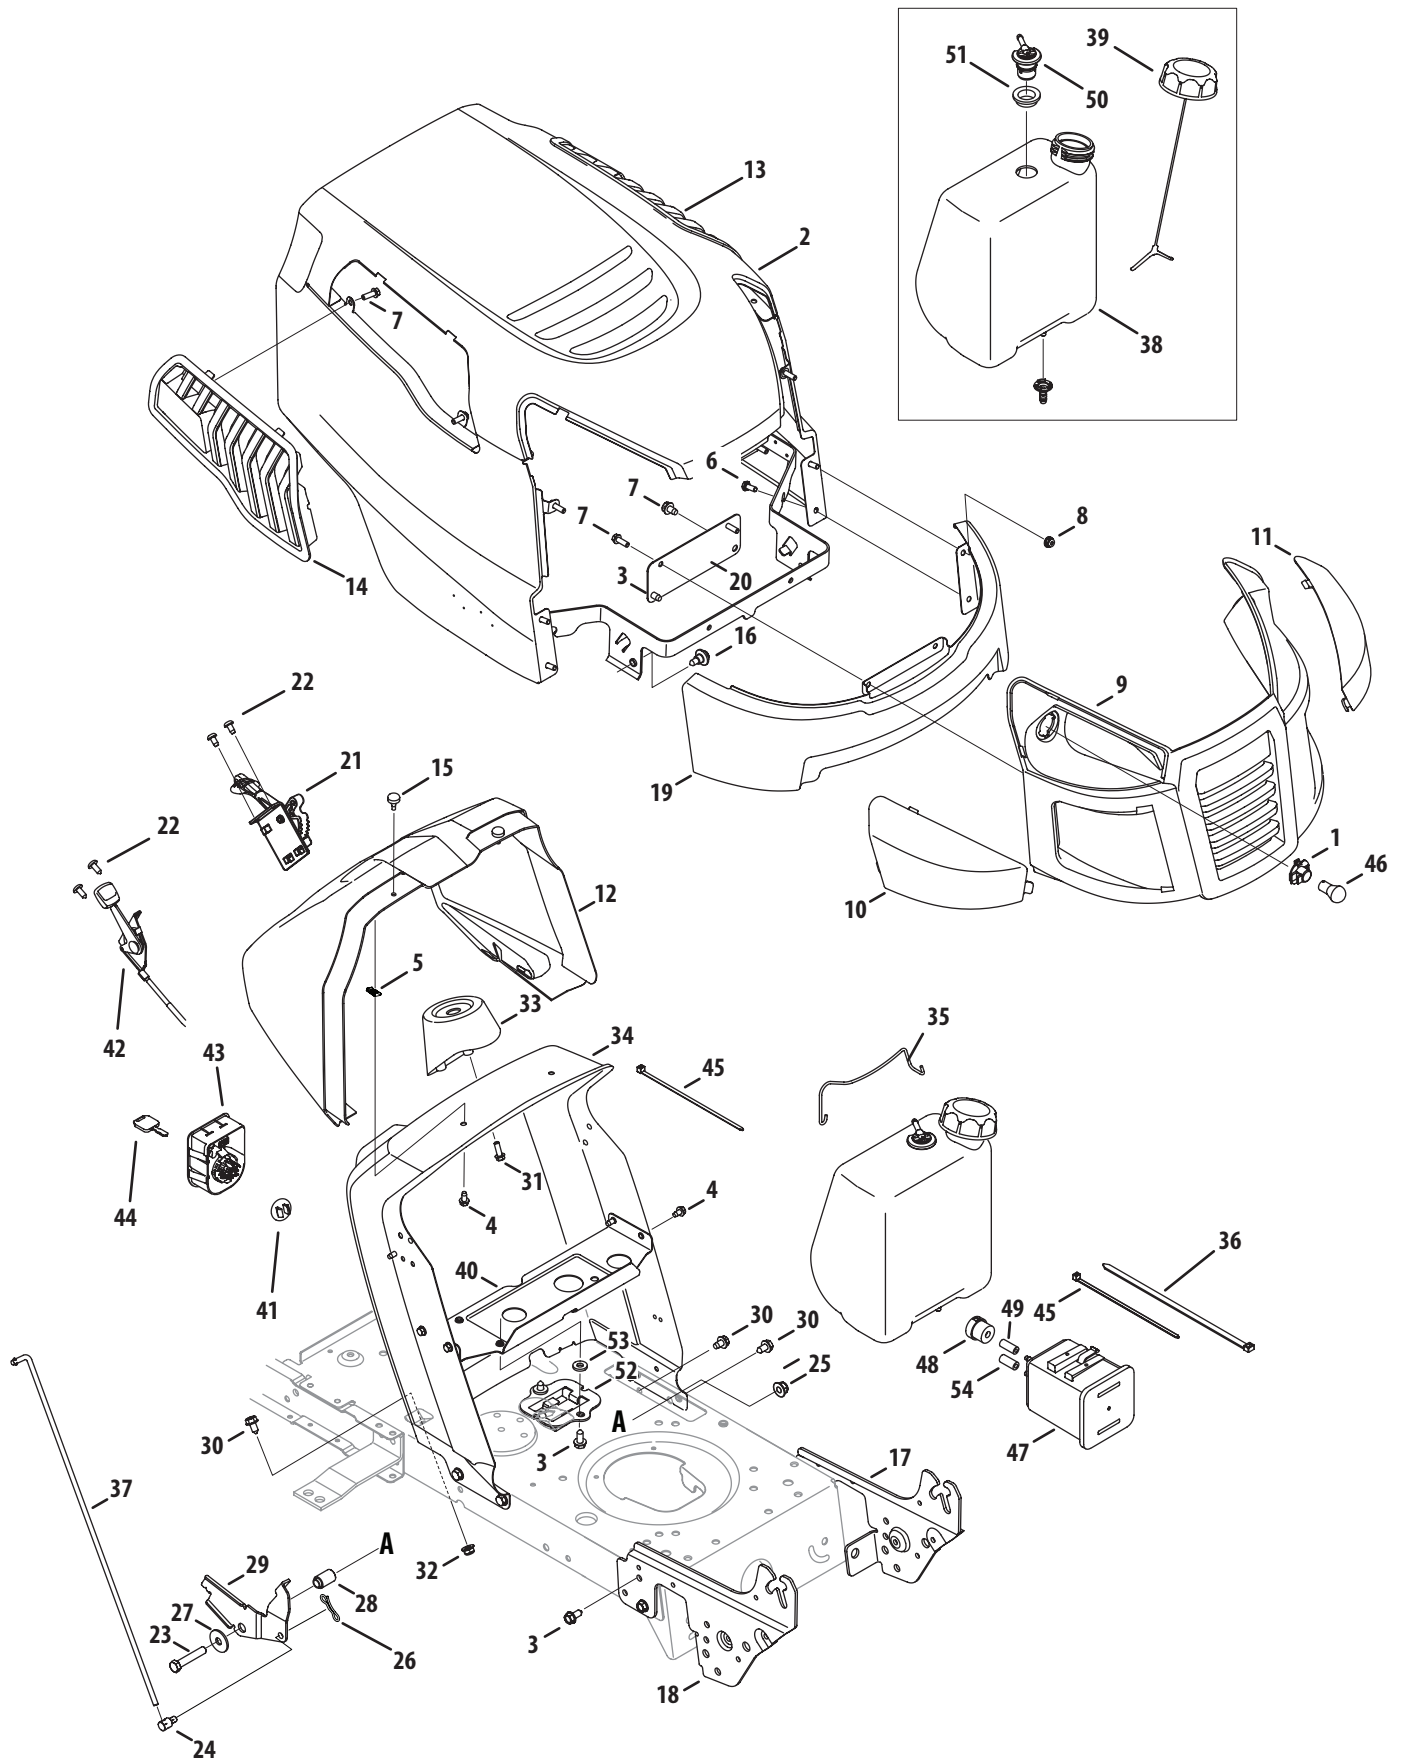


PARTS LIST

Craftsman Model 247.28919

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	925-1649	Bulb Socket	28	750-04465	Flange Spacer
2	683-04619-4043	Hood Assembly	29	783-04862	Speed latch
3	710-04484	Screw, 5/16-18 x .750	30	710-0604A	Self-Tap Screw, 5/16-18
4	710-0599	Hex Washer Screw, 1/4-20 x .500	31	710-0895	Hex Screw, 1/4-15
5	712-0292	Tin Clip Nut, 1/4-20	32	712-04063	Nut, Hex Flange Lock, 5/16-18
6	710-0751	Hex Screw, 1/4-20 x .620	33	731-04945	Steering Support
7	710-05108	Screw, 1/4 x .750	34	783-04892B-0637	Dash
8	712-04064	Nut, Hex Flange Insert Lock, 1/4-20	35	683-04448-0637	Battery Assembly Rod
9	731-07668	Grill	36	726-0230	Cable Tie
10	731-07458	Headlight Lens, RH	37	747-04430	Speed Selector Control Rod
11	731-07459	Headlight Lens, LH	38	751-10782	1.38 Gallon Fuel Tank
12	731-07460	Dash Collar	39	751-10947	Fuel Cap
13	731-07670	Hood Scoop, LH	40	783-04584A-0637	Gas Tank Support Bracket
14	731-07669	Hood Scoop, RH	41	731-05265	Choke Plug
15	735-0271A	Bumper	42	746-04364	Throttle/Choke Assembly
16	738-04091A	Shoulder Screw, 5/16-18	43	725-04992	Key Switch Module
17	783-05327B-0637	Left Support Pivot Bracket	44	625-04124	Key (2 pack)
18	783-05328A-0637	Right Support Pivot Bracket	45	725-0157	Cable Tie
19	783-06598-4043	Lower Grill	46	925-0963	Headlight Bulb
20	783-06610-0637	Lower Grill Bracket	47	751-10589	Carbon Canister
21	983-04226	Parking Brake Lever Assembly	48	751-10590	Filter Vent
22	710-04483	Self-Tap Screw, 1/4-20	49	751-10749	Low Perm Fuel Line 3/16 White
23	710-3144	Hex Head Screw, 3/8-16	50	751-10441	Rollover Valve
24	711-0736	Ferrule, 1/4-20 x 1.00	51	735-04081	Rubber Grommet
25	712-04065	Nut, Hex Flange Insert Lock, 3/8-16	52	751-10610	Canister Bracket
26	714-04040	Cotter Pin	53	736-3008	Flat Washer, .344 x .750 x .120
27	936-0133	Flat Washer, .411 x 1.25 x .100	54	751-10750	Low Perm Fuel Line 7/32 Yellow

PARTS LIST

Craftsman Model 247.28919

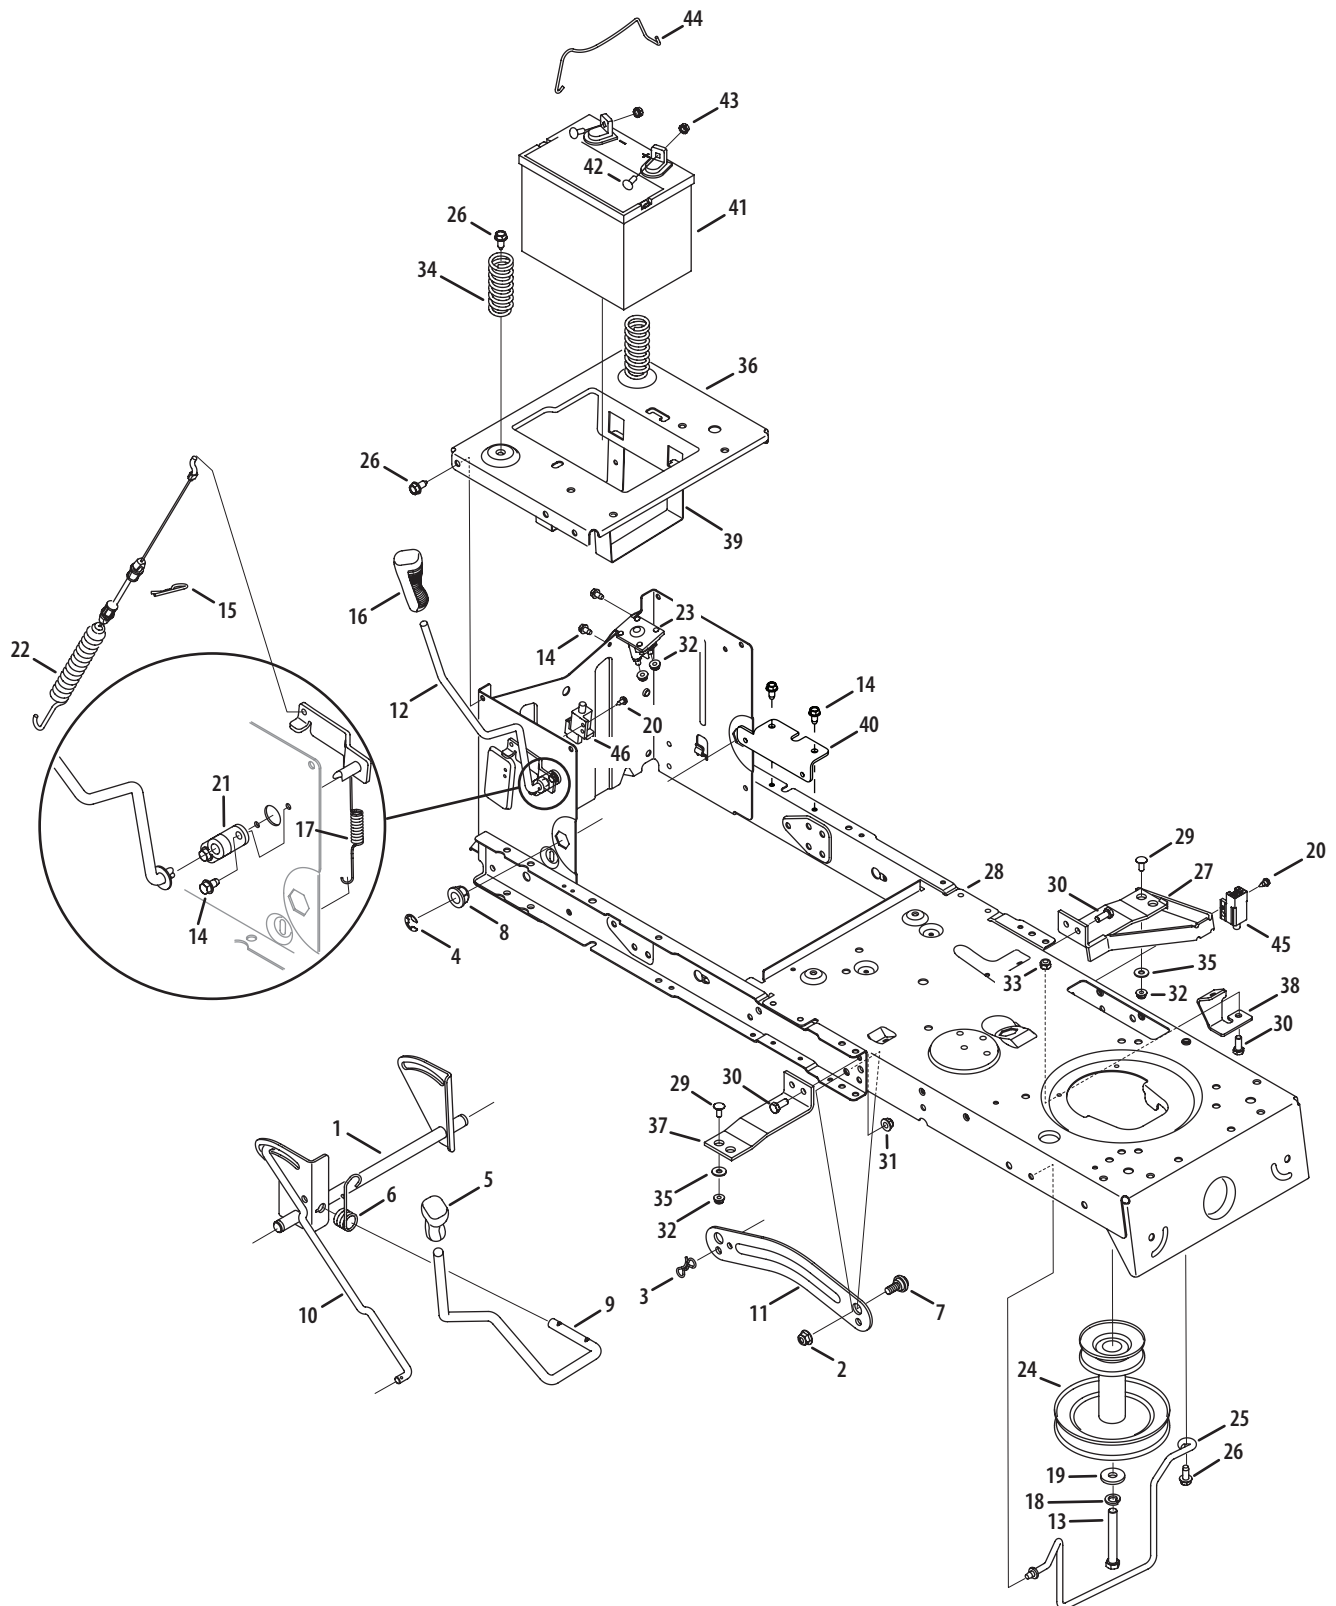


PARTS LIST

Craftsman Model 247.28919

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	683-04155A-0637	Shaft, Lift	24	756-04196A	Engagement Pulley
2	712-04065	Nut, Hex Flange Insert Lock, 3/8-16	25	747-04857	Belt Keeper Rod Assembly
3	714-04040	Bow-Tie Pin, 91, RH	26	710-04484	Screw, Hd. Tapp, 5/16-18 x .75
4	716-0106A	E-ring, .625 Shaft	27	683-04195-0637	Support Bracket Assembly
5	720-0311	Grip, Handle	28	683-04601-0637	Rider Frame Assembly
6	732-04225	Spring, Lift Handle Torsion	29	710-0134	Carriage Screw, 1/4-20 x .62
7	738-04130	Bolt, Shoulder, .625 x .175:3/8-16	30	710-3008	Screw, Hx. Hd., 5/16-18 x .75
8	941-0225	Bearing, Hex Flange,	31	712-04063	Nut, Hex Flange Insert Lock, 5/16-18
9	747-05296	Handle, Lift	32	712-04064	Nut, Hex Flange Insert Lock, 1/4-20
10	747-04393	Lift Rod, 13.68	33	912-0429	Hexlock Nut, 5/16-18
11	783-04494C-0637	Arm, Deck Lift RH	34	732-04035	Spring, Compress., 1.28 x 3.125
	783-04711C-0637	Arm, Deck Lift LH	35	736-0173	Flat Washer, .28 x .74 x .063
12	647-04096-0637	PTO Handle Assembly	36	783-04548C-0637	Seat Bracket Frame
13	710-04608	Screw, Hx. Hd., 7/16-20 x 3.25	37	783-04637-0637	Running Board Bracket
14	710-0599	Screw, Hd. Tapp, 1/4-20 x .5	38	783-04753-0637	Frame Support Bracket
15	714-04040	Click Pin	39	783-04869A-0637	Battery Bracket
16	720-04049A	Handle Grip	40	783-05389A-0637	Frame Brace Bracket
17	732-04276A	PTO Spring, Extension	41	725-05090	Die Hard Battery
18	936-0171	Washer, Flat, 7/16	42	738-1132	Screw, Shoulder, .250 x .150
19	736-0322	Washer, Flat, .450 x .250 x .164	43	712-0271	Nut, Sems, 1/4-20
20	738-04237A	Shoulder Screw, #10-32 x .500	44	683-04448-0637	Battery Rod
21	741-04119A	PTO Bearing	45	925-04039	Screw Mount Interlock Switch
22	946-04173B	Deck Engagement Cable	46	725-04363	Interlock Switch
23	725-04439	12v. Solenoid			

PARTS LIST

Craftsman Model 247.28919

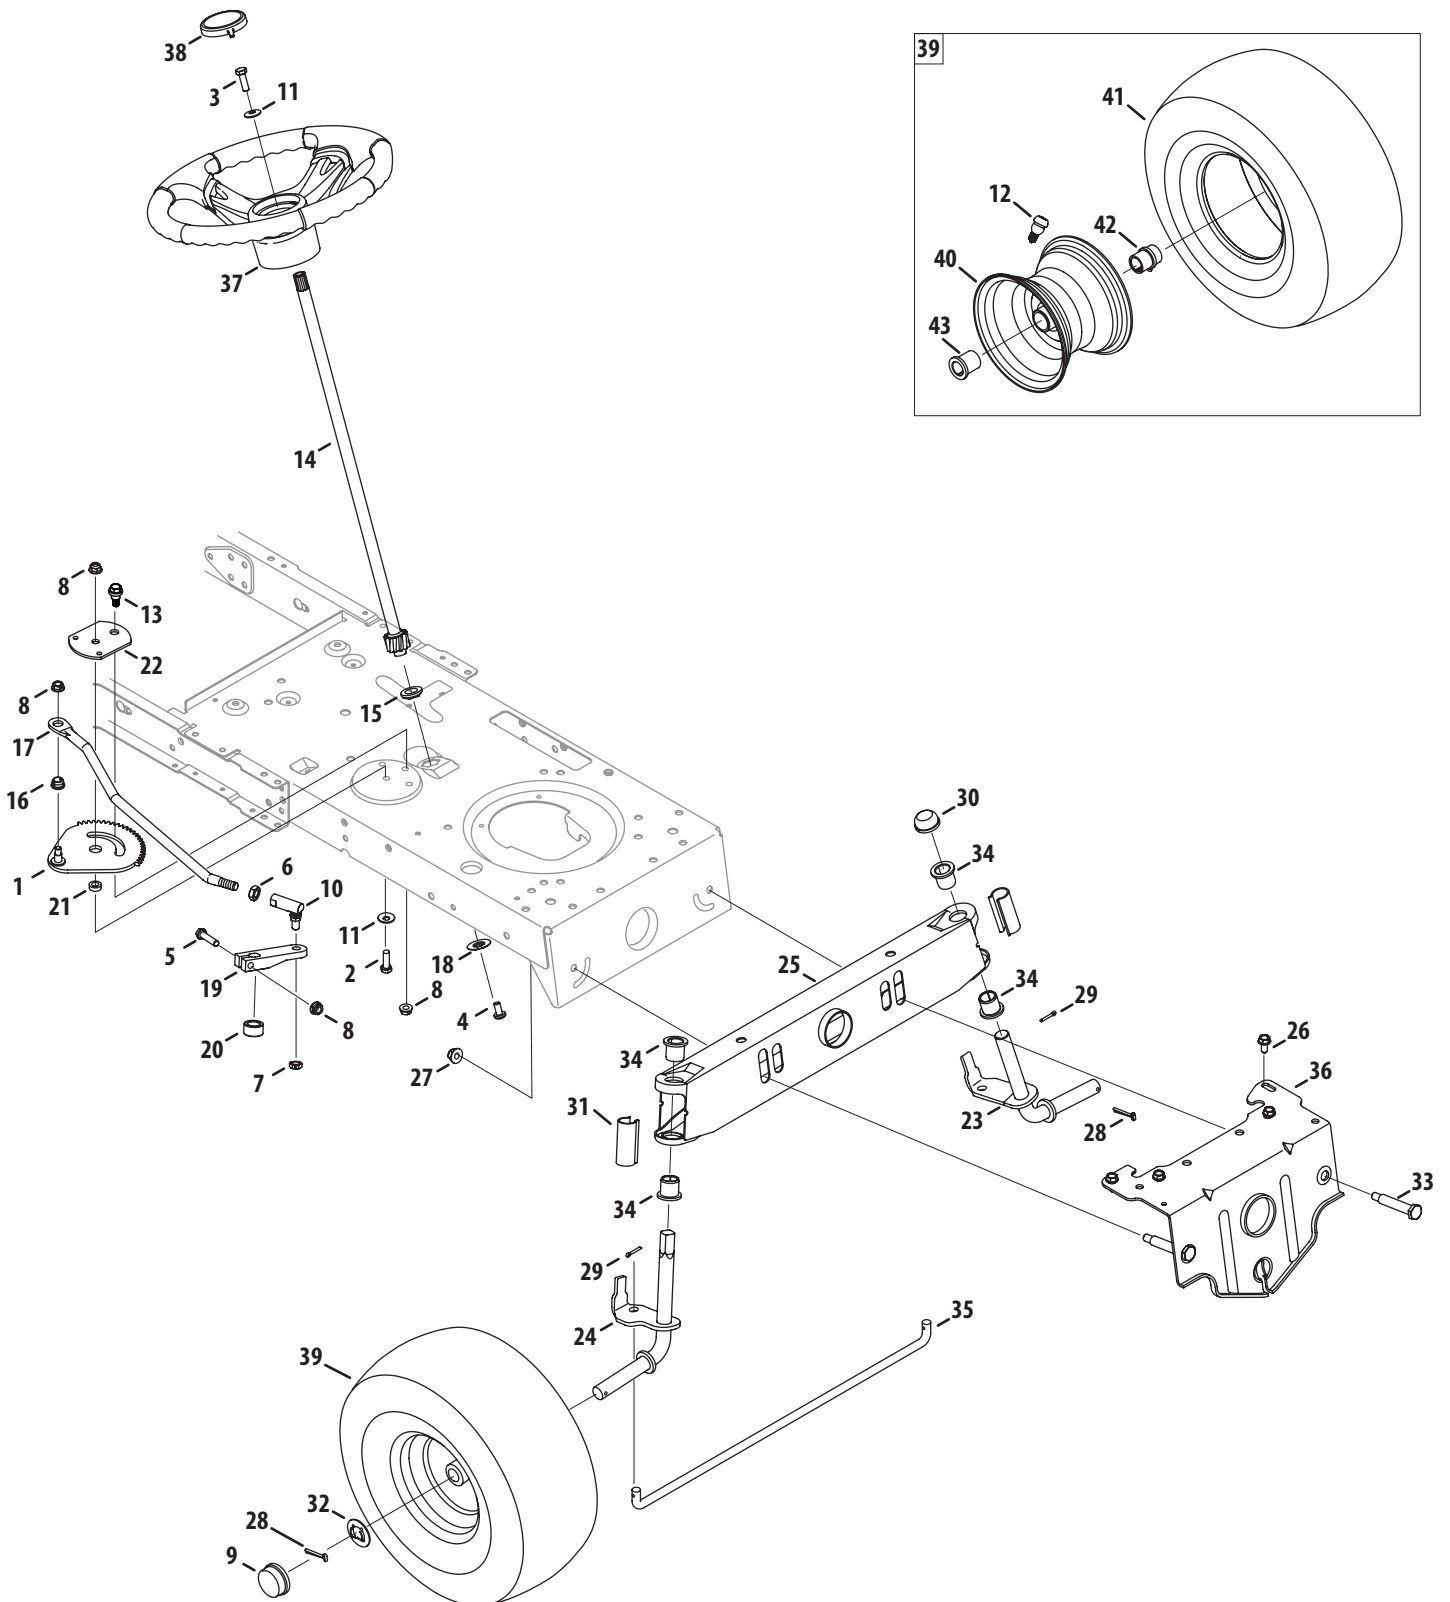

PARTS LIST


Craftsman Model 247.28919

Ref. No.	Part No.	Description
1	617-04024	Gear Assembly, Steering
2	710-0376	Screw, 5/16-18, 1.00, Gr5
3	710-0643	Screw, 5/16-18, 1.00, Gr5, Lock
4	710-1309	Screw, Mach, 5/16-18, 0.750
5	710-3180	Screw, 5/16-18, 1.75, Gr5
6	912-0240	Nut, Jam, 7/16-20, Gr2
7	912-0214	Nut, Jam Lock, 3/8-24
8	712-04063	Nut, Flange Lock, 5/16-18, Grf
9	931-0484A	Hub Cap
10	923-0448A	Ball Joint, 7/16-20, Lock
11	736-0242	Washer, Bell, .340 x .872 x .060
12	934-0255	Valve Stem
13	738-04141	Shoulder Screw, 5/16-18
14	738-0919A	Steering Shaft, 5/8 Spline x 21.86
15	941-04124	Bearing, Flange, Hex 5/8
16	941-04454	Plastic Bushing .375 ID x .05 OD
17	747-04298	Drag Link, Steering
18	948-0389	Cap, 1.25 x .16
19	748-04065-0637	Steering, Block
20	748-04068	Spacer, .710 ID x .125 OD x .56
21	750-04418	Spacer, .322 ID x .625 OD x .21
22	783-04644	Stabilizer Plate, Gear Segment

Ref. No.	Part No.	Description
23	938-04007A-0637	Axle Assembly LH
24	638-04008P	Axle Assembly RH
25	683-0128B-0637	Pivot Bar Axle Assembly
26	710-04484	Screw, 5/16-18, 0.750
27	712-04065	Nut, Flange Lock, 3/8-16, GrF
28	714-04039	Pin, Cotter, 5/32, 1.25
29	914-0474	Pin, Cotter, 1/8 x 0.75
30	736-0341	Push Cap, 3/4
31	731-04057A	Axle Cap
32	736-04228A	Washer, Flat, .781 x 1.59
33	738-04128	Screw, Shlder, .500 x 2.380, 3/8-16
34	741-0660A	Flange Bearing
35	747-04299A	Tie Rod
36	783-05326B-0637	Pivot Bar Bracket
37	631-04028	Steering Wheel, Standard Grip
38	731-06825	Cap, Steering Wheel (Crafts. logo)
39	634-04086-0961	Wheel Assembly
40	934-04081-4042	Rim
41	734-1731-0901	Tire, 15 x 6 x 6 Sq. Shoulder
42	741-0990B	Flange Bearing
43	741-0516B	Flange Bearing

PARTS LIST

Craftsman Model 247.28919

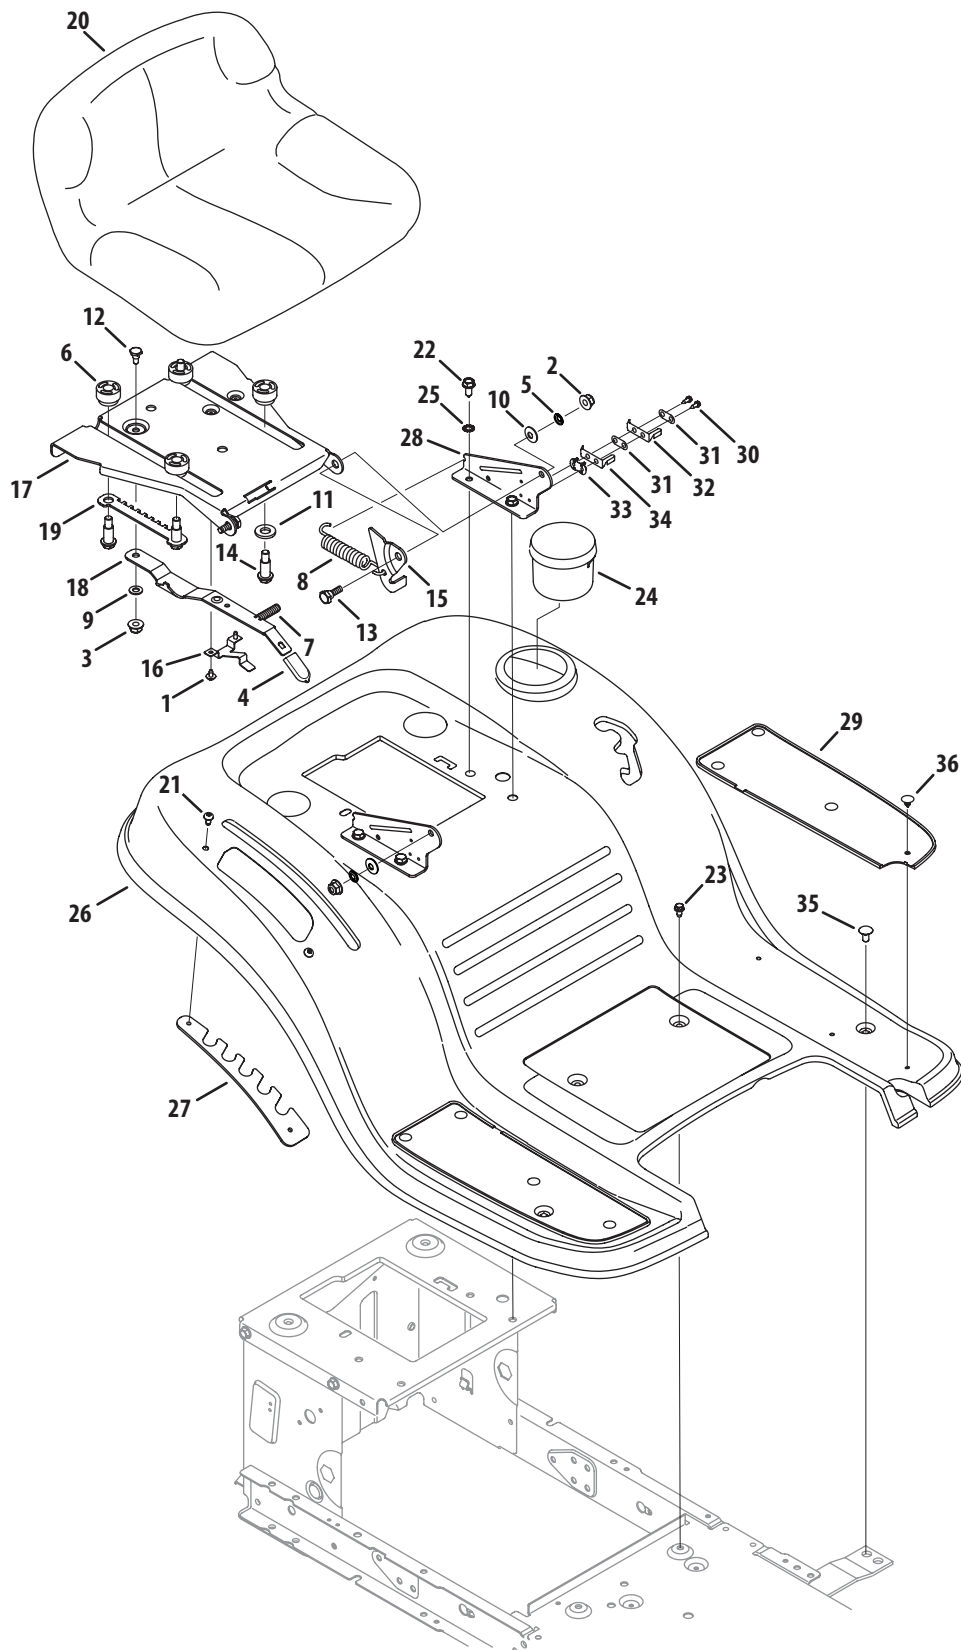


PARTS LIST

Craftsman Model 247.28919

Ref. No.	Part No.	Description
1	710-1268	Screw, #10-16 x .375
2	712-04063	Flange Lock Nut, 5/16-18
3	712-04064	Flange Lock Nut, 1/4-20
4	720-0309A	Seat Adjustment Grip
5	726-0201	Speed Nut
6	731-04074	Seat Adjustment Spacer
7	732-0499	Compression Spring, .41 x 1.50
8	732-1184	Extension Spring
9	736-0204	Flat Washer, .344 x .62 x .033
10	736-0242	Flat Washer, .340 x .872 x .060
11	736-3019	Flat Washer, .531 x .062 x .134
12	938-0137A	Shoulder Screw, .34 x .285: 1/4-20
13	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
14	738-0966A	Shoulder Bolt, .50 x .925: 3/8-16
15	783-0209D	Lift Seat Bracket
16	783-0611	Seat Adjustment Stop Bracket
17	783-0738D-0637	Seat Pivot Bracket
18	783-0739A-0637	Seat Adjustment Lever
19	783-0753	Seat Adjustment Selector
20	757-04125	Low Back Seat
21	710-04483	Screw, 1/4-20 x .500
22	710-04484	Screw, 5/16-18 x .750
23	710-0599	Screw Pan Torx Head, 1/4-20 x .500
24	731-04591A	Cup Holder
25	736-0607	Lock Washer, 5/16
26	783-04587C-4043	Fender
27	783-04843-0637	Lift Adjuster Bracket
28	783-1489C-0637	Seat Mounting Bracket
29	735-04047	Rubber Foot Pad, LH
	735-04048	Rubber Foot Pad, RH
30	710-0227	Screw, 8-18 x .500
31	726-0279	Insulator Plate
32	925-1303	Outer Seat Spring
33	726-0278	Insulator Boss Plate
34	725-1439	Inner Seat Spring
35	710-0134	Carriage Screw, .62: 1/4-20
36	726-04072A	Ratchet Clip, .250 x .500

PARTS LIST

Craftsman Model 247.28919

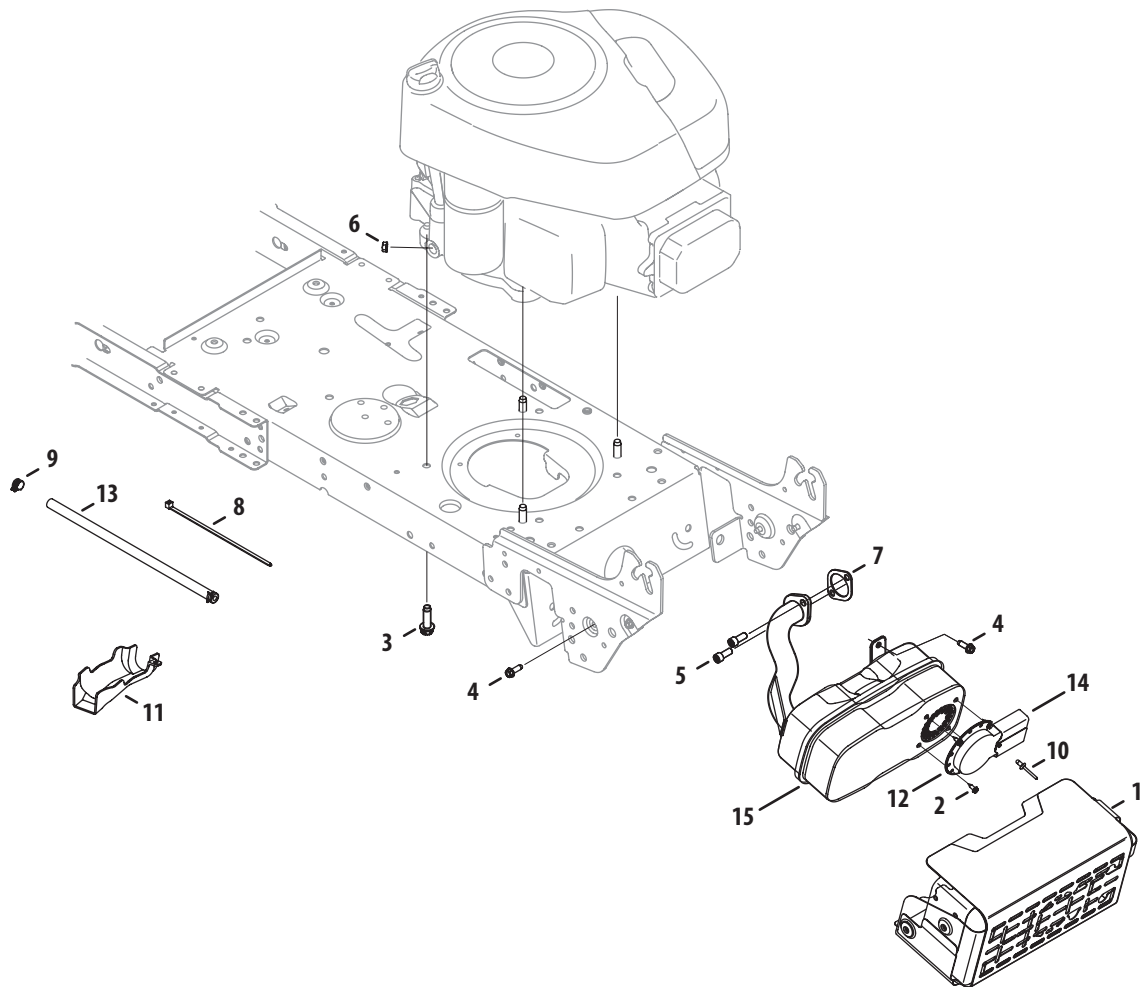


PARTS LIST

Craftsman Model 247.28919

Ref.	Part No.	Description
1	683-04549-0637	Muffler Shield Assembly
2	710-0227	Screw, AB #8-18 0.500
3	710-04683	Tap Screw, 3/8-16 1.000
4	710-0642	Tap Screw, 1/4-20 0.750
5	710-1314A	Screw, Socket Head, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket
8	725-0157	Cable Tie, 3/16 X .05 X 7.4
9	726-0205	Hose Clamp, .490 Dia.
10	728-04000	Pop Rivet, .188 Dia X .300 L
11	731-05628	Oil Drain Sleeve
12	751-0564B	Muffler Deflector
13	751-10349	Low Permeation Fuel Hose, 1/4
14	751-10353	Long Muffler Deflector
15	751-10448B	Briggs Single Muffler

PARTS LIST

Craftsman Model 247.28919

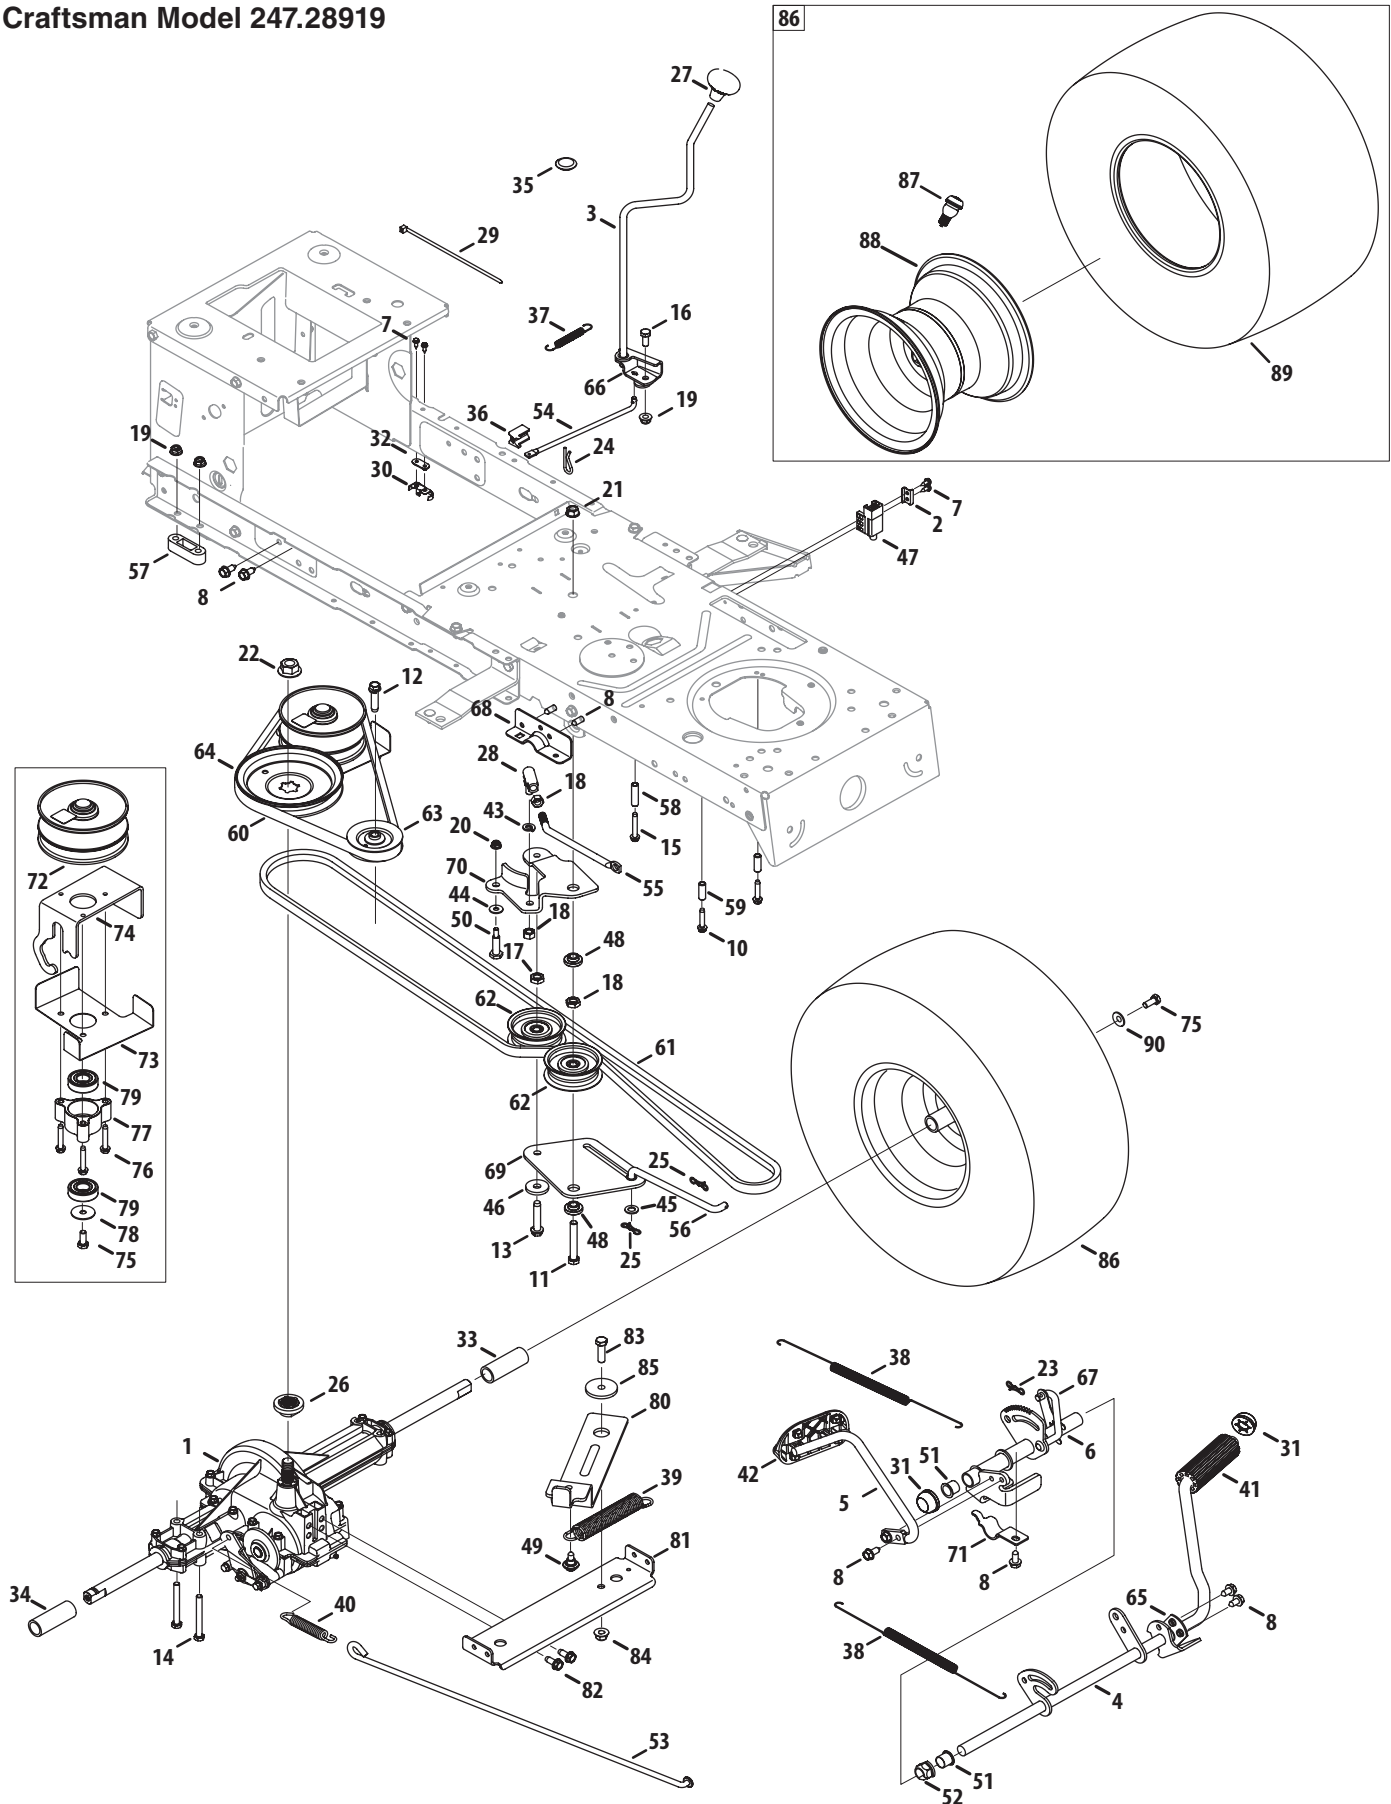


PARTS LIST

Craftsman Model 247.28919

Ref.	Part No.	Description	Ref.	Part No.	Description
1	918-04566	Dr Assembly, Autodrive Lt-5	47	725-04363	Interlock Switch
2	17962	Switch Plate	48	738-0372B	Spacer, Shoulder, 1.00 X .38 X .38
3	647-04035	Lvr Assembly, Shft	49	738-04091A	Screw, Shoulder, .43x.29, Tt, 5/16-18
4	647-04201-0637	Ped Assembly, Drive, Autodrive	50	938-0572	Screw, Shld, .374 Dia. X 1.16 Lg.
5	647-04203-0637	Ped Assembly, Cont, Autodrive	51	741-0495	Bearing, Flg, .630 Idx .695 Od X .60
6	683-04607	Bracket Assembly, Pedal, Autodrive	52	741-3065B	Bearing, Hex Flg, .628 Id, Split
7	710-0227	Screw, Ab, #8-18, 0.500	53	747-05188	Rod, Brake, Lt-5 Trans
8	710-04484	Screw, Tt, 5/16-18, .750	54	747-05243	Rod, Shift, Lt-5 Stretch 46"
9	710-0604A	Screw, Tt, 5/16-18, 0.625	55	747-05251A	Rod, Adj, Idlr, 3/8
10	710-0809	Screw, Tt, 1/4-20, 1.250	56	747-05307	Rod, Trans, Footpedal Bypass
11	710-0859	Hex Hd. Screw, 3/8-16, 2.50	57	948-0334	Spacer, T-Axle .68
12	710-1007	Screw, Ttsems, 3/8-16, 1.500	58	750-04456	Spacer, .260 X .372 X 1.420 Lg
13	710-1008	Screw, Ttsems, 3/8-16, 1.875	59	750-0566A	Spacer, .260 X .375 X 1.030 Lg
14	710-1266	Hex Hd. Screw, 5/16-18, 3.50	60	954-04263	Belt, V Typ, 5l X 39.9 Lg Poly
15	710-1325	Screw, Tt, 1/4-20, 1.625,	61	954-0467	Belt, V Typ, 5l, 90.80, Poly
16	710-3008	Hex Hd. Screw, 5/16-18, .75	62	756-04224	Pulley, Idlr, Flat 2.75 Od
17	912-0240	Nut, Jam, 7/16-20	63	756-04325	Pulley, Idlr, V-Type X 3.06
18	712-0241	Nut, Hex, 3/8-24	64	756-04432	Pulley, Trans, 6.3"Dia
19	712-04063	Nut, Flange Lock Nut, 5/16-18	65	783-04536B-0637	Bracket, Ped, Support Lt-5
20	712-04064	Nut, Flange Lock Nut, 1/4-20	66	783-04595A	Bracket, Shft, Adj
21	912-0431	Nut, Flange Lock Nut, 3/8-16	67	783-06278	Plt, Bracket, Reinforcement
22	712-0700	Nut, Flg, 9/16-18	68	783-06562-0637	Bracket, Ped, Frame Rh
23	914-0111	Pin, Cot, 3/32, 1.0	69	783-06570	Bracket, Idlr, Center Dbl
24	914-0209	Pin, Cotter Int-.125 Dia	70	783-06592	Bracket, Idlr, Dbl Autodrive
25	714-04040	Pin, Cot, Bow-Tie 72	71	783-06641	Bracket, Supt, Pedal Stap
26	718-04407	Hub, Pulley, 5/8 Spline	72	956-04015A	Pulley Assembly, Var. Spd. 4.75 Od
27	720-04028	Knob, Shft	73	683-04522	Belt Keeper Assembly
28	923-3018	Ball, Joint	74	683-04612-0637	Variable Bracket Assembly
29	725-0157	Cable, Tie, 3/16 X .05 X 7.4	75	710-0627	Hex Screw 5/16-24 .750
30	725-1644	Switch, Spring, Short	76	710-0778	Tap Screw, 1/4-20 1.500
31	726-0214	Cap, Push 5/8	77	718-04261	Bearing Cup
32	926-0320	Plate, Insulator Nut	78	736-0362	Wash, Flat .330 X 1.25 X .06
33	731-04602	Sleeve, .758 X .821 X 3.3125	79	941-0600	Ball Bearing, 17 x 40 x 12
34	731-04604	Sleeve, .758 X .821 X 2.4375	80	683-04521	Idler Bracket Assembly
35	731-06330	Plug, Deck Hole, 7/8	81	683-04606	Auto-drive Bracket Assembly
36	731-06894	Shift Plate Bearing	82	710-1260A	Tap Screw, 5/16-18 x 0.750
37	732-04488	Spring, Ext, .38 Od X 3.25 Lg	83	710-3005	Hex Screw, 3/8-16 x 1.25
38	732-04612	Spring, Extn, .70 Dia X 12.00 Lg	84	712-04065	Flange Lock Nut, 3/8-16
39	732-04616	Spring, Extn, .97 Od X 6.18 Lg	85	738-04162A	Shoulder Spacer, .8840 X .190
40	732-0716D	Spring, Extn, .59 Od X 4.00 Lg	86	634-04641-0961	Wheel Assembly, 18 x 9.5 x 8 Sq. Sh.
41	735-0239	Pad, Foot, 4.0 Long	87	634-04369-4042	Valve Stem
42	735-0662	Pad, Cont	88	934-0255	Rim Assembly
43	936-0169	Wash, Lock, 3/8, Regular Duty	89	734-1729	Tire, 18 x 9.5 x 8 Sq. Sh.
44	736-0173	Wash, Flat, .28 X .74 X .063	90	736-0242	Bell Washer, .340 x .872 x .060
45	936-0185	Wash, Flat, .375 X .738 X .063	—	925-04085	Wiring Harness (Not Shown)
46	736-0322	Wash, Flat, .450x1.250x.164, Ht			

PARTS LIST

Craftsman Model 247.28919

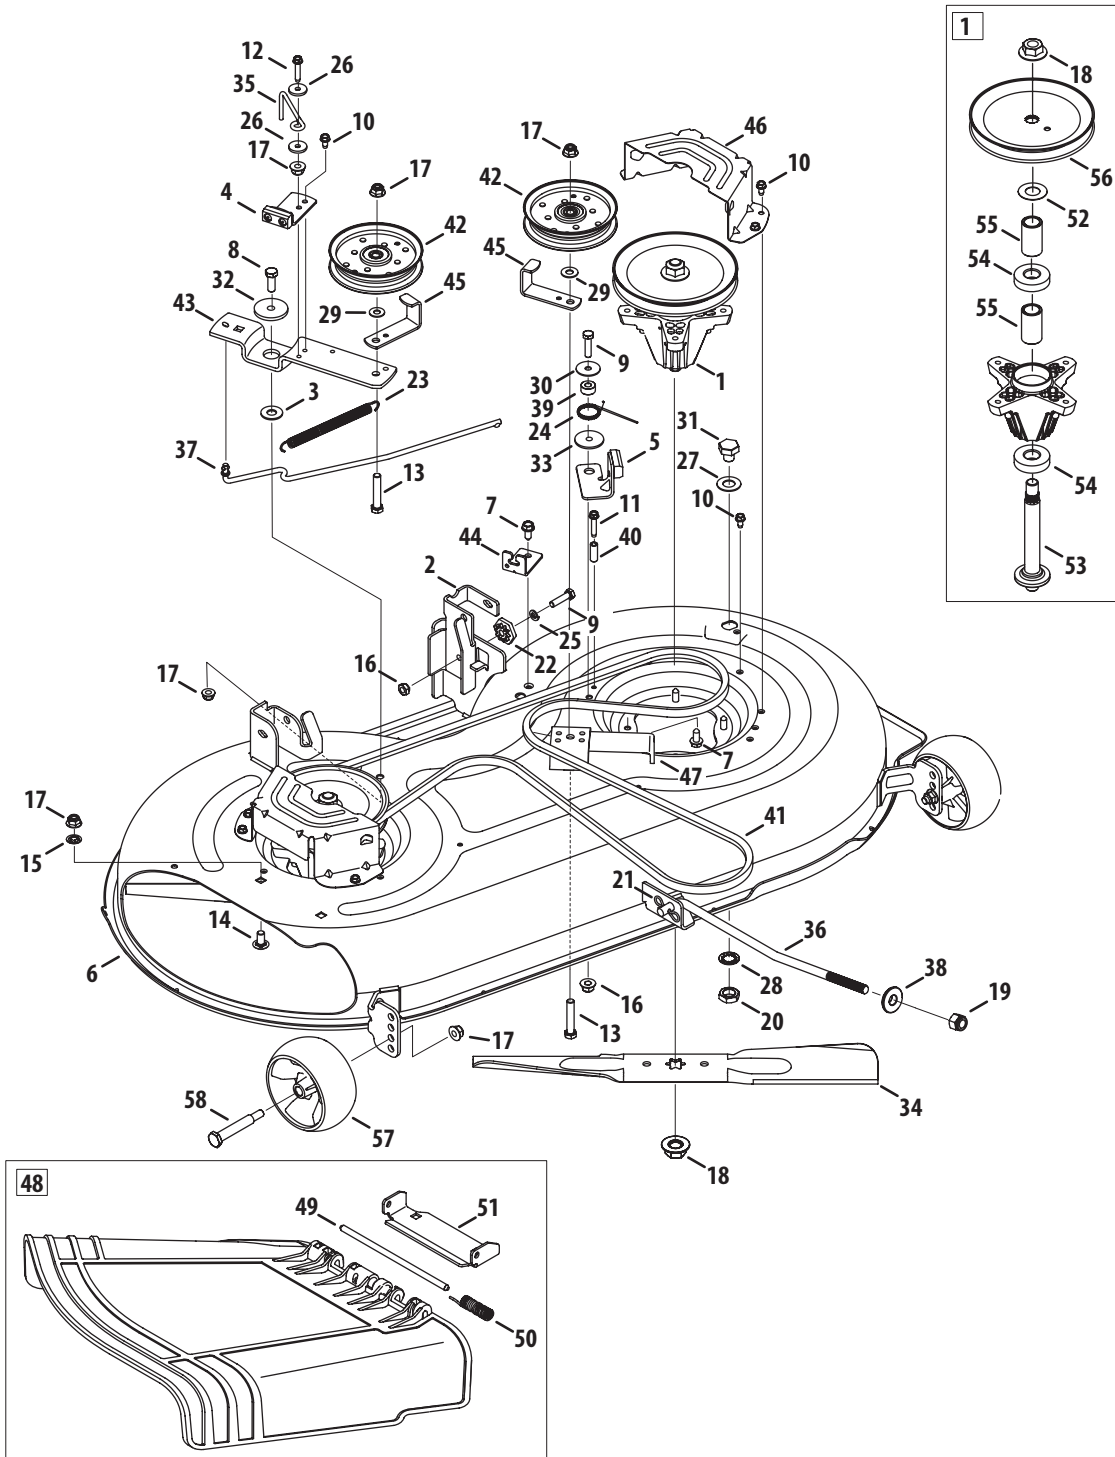

PARTS LIST

Craftsman Model 247.28919

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	918-04822A	Spindle Pulley Assembly	30	736-0362	Flat Washer, .330 x 1.25 x .06
2	683-0254B-0637	Deck Hanger Bracket Assembly	31	738-04146	Bolt Plug, M16 x 1.5
3	936-0344	Wash, Flat, .385 x 1.0 x .030	32	738-04162A	Shoulder Spacer, .8840 x .190
4	983-04511	Brake Assembly	33	738-04166	Shoulder Spacer, .5000 x .1475
5	983-04525	Brake Assembly	34	942-04308	Cutting Blade, 21.23": 2 in 1
6	983-04572-0637	Deck	35	747-04530	Belt Keeper Rod
7	710-04484	Screw, 5/16-18 x .750	36	747-04944B	Deck Lift Rod
8	710-0514	Screw, 3/8-16 x 1.00	37	747-05105	Brake Control Rod
9	710-0528	Hex Screw, 5/16-18 x 1.25	38	748-04069	Deck Lift Pivot Cup
10	710-0599	Screw, 1/4-20 x .500	39	750-0258	Spacer
11	710-0778	Screw, 1/4-20 x 1.50	40	750-0566A	Spacer
12	710-0809	Screw, 1/4-20 x 1.250	41	954-04060B	V-Type Belt, 96.5
13	710-3144	Hex Head Screw, 3/8-16	42	756-04129B	Idler Pulley, 4.25 Diameter
14	710-3178	Carriage Bolt, 3/8-16 x .75	43	783-05946	Idler Pivot Bracket
15	712-0229	Push Nut, 3/8	44	783-06243-0637	Deck Cable Engagement Bracket
16	712-04063	Flangelock Nut, 5/16-18	45	783-06368-0637	Belt Pulley Guard
17	712-04065	Flangelock Nut, 3/8-16	46	783-06424A-0637	Deck Belt Cover
18	712-0417A	Flange Nut, 5/8-18	47	783-06643-0637	Deck Support Bracket
19	712-04243	Flangelock Nut, 1/2-13	48	631-04460	Chute Deflector Assembly
20	912-0641	Hex Nut, M16 - 1.5	49	711-04847A	Hinge Pin
21	714-04043	Cotter Pin, Bow-Tie	50	732-04372	Torsion Spring, .44 x 2.0
22	917-04074	Deck Adjuster Gear	51	783-06074A	Chute Bracket
23	932-0384	Extension Spring, .62 x 6.12	52	936-0351	Flat Washer, .760 x 1.50
24	732-04727	Torsion Spring, 1.0 x 1.17	53	738-1186A	Spindle Shaft
25	936-0119	Lock Washer, 5/16	54	941-0919	Ball Bearing, .787 x 1.85 x .551
26	936-0176	Flat Washer, .265 x 9.38 x .120	55	750-04936	Spacer, .792 x 1.060 x 1.860
27	736-0187	Flat Washer, .64 x 1.24 x .06	56	956-1227	Spindle Pulley
28	736-0225	Flat Washer, .5/8 Int. Tth.	57	734-04155	Deck Wheel, 5" Dia. Ball
29	736-0262	Flat Washer, .385 x .870 x .092	58	938-3056	Shoulder Bolt, 3/8-16

PARTS LIST


Craftsman Engine Model 331777-1372-G2 For Model 247.28919

48 SHORT BLOCK

1058 OPERATOR'S MANUAL








1329 REPLACEMENT ENGINE

1330 REPAIR MANUAL

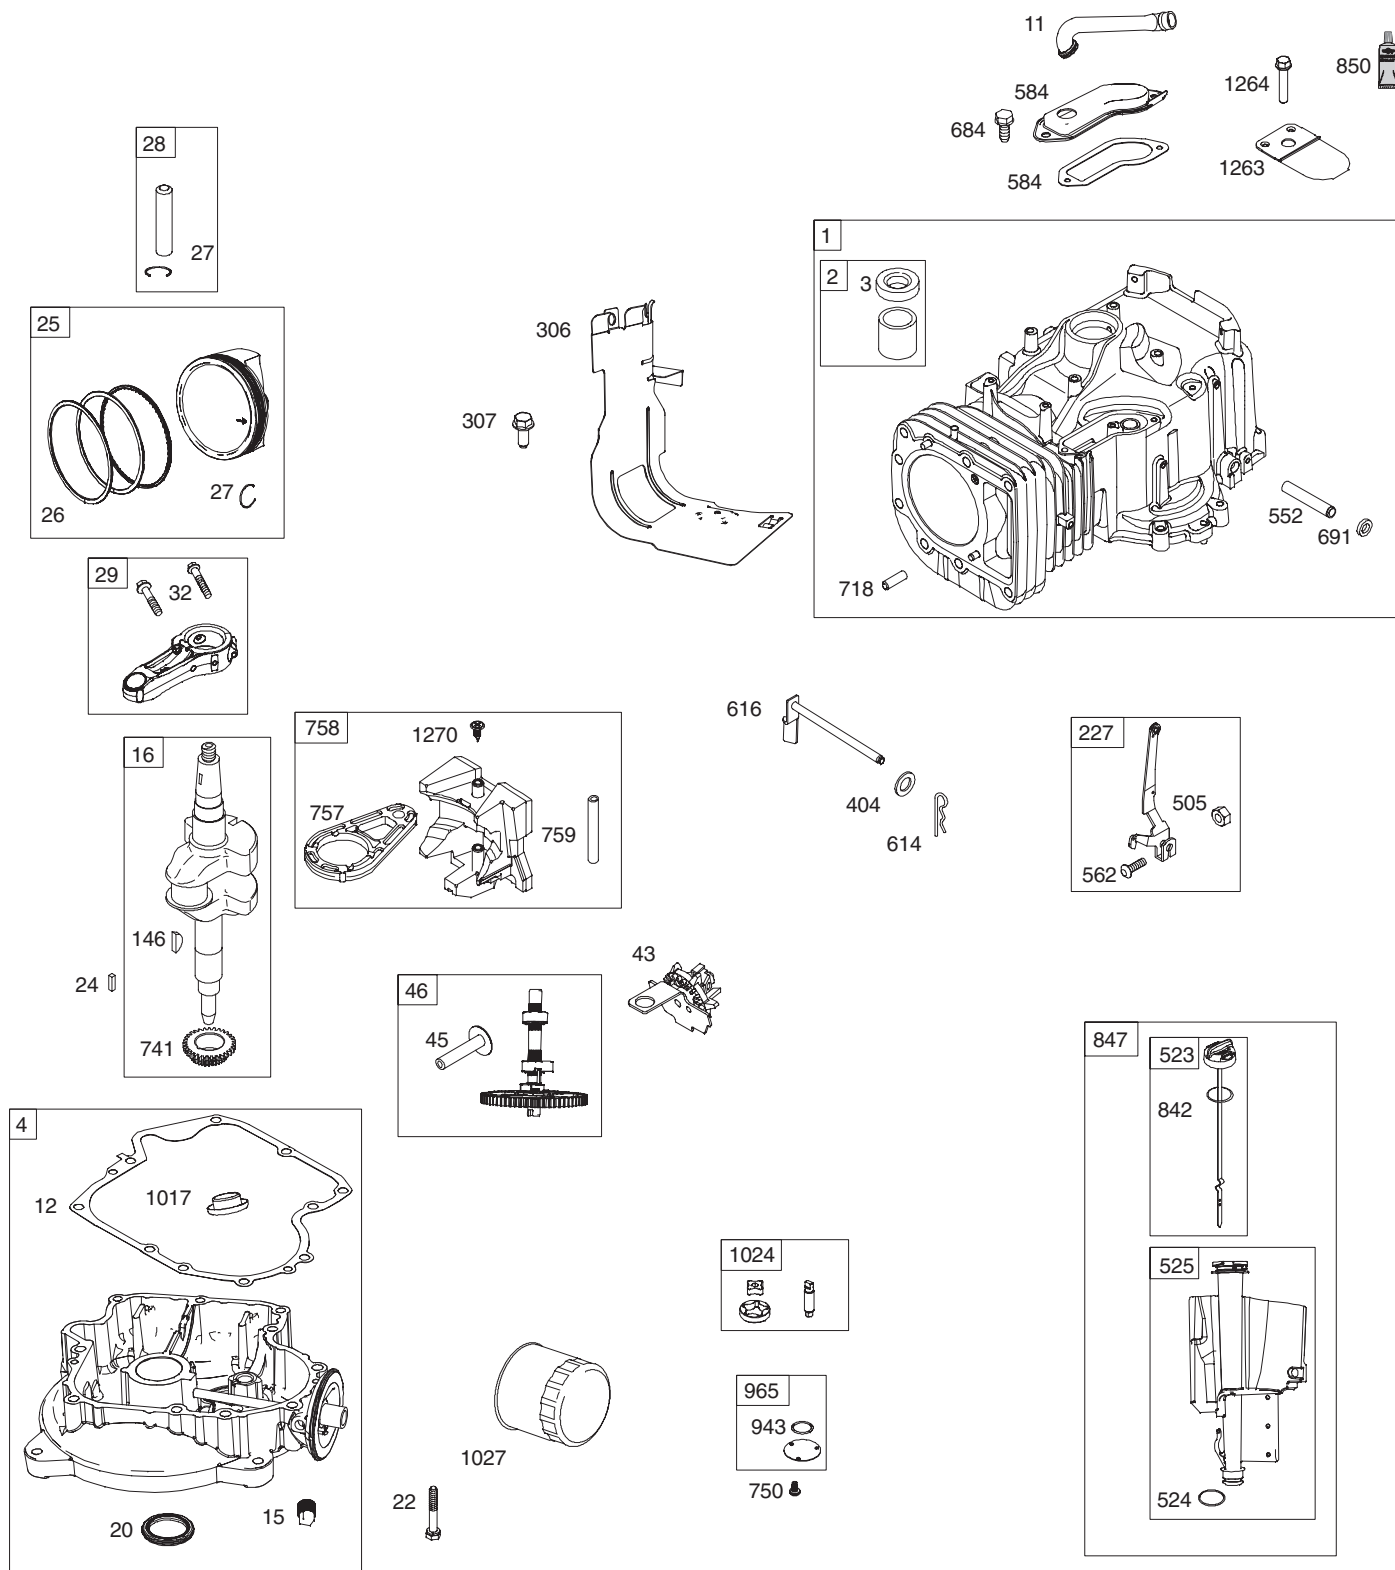



PARTS LIST

 Craftsman Engine Model 331777-1372-G2 For Model 247.28919

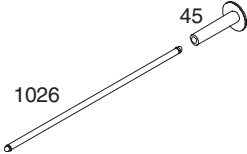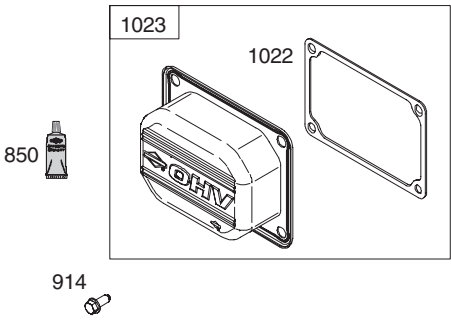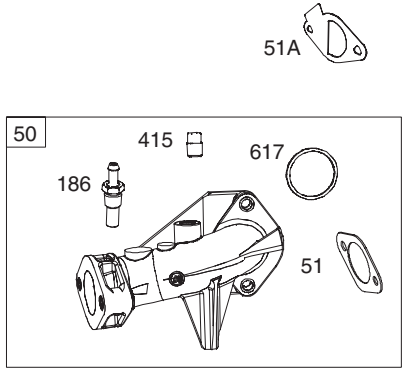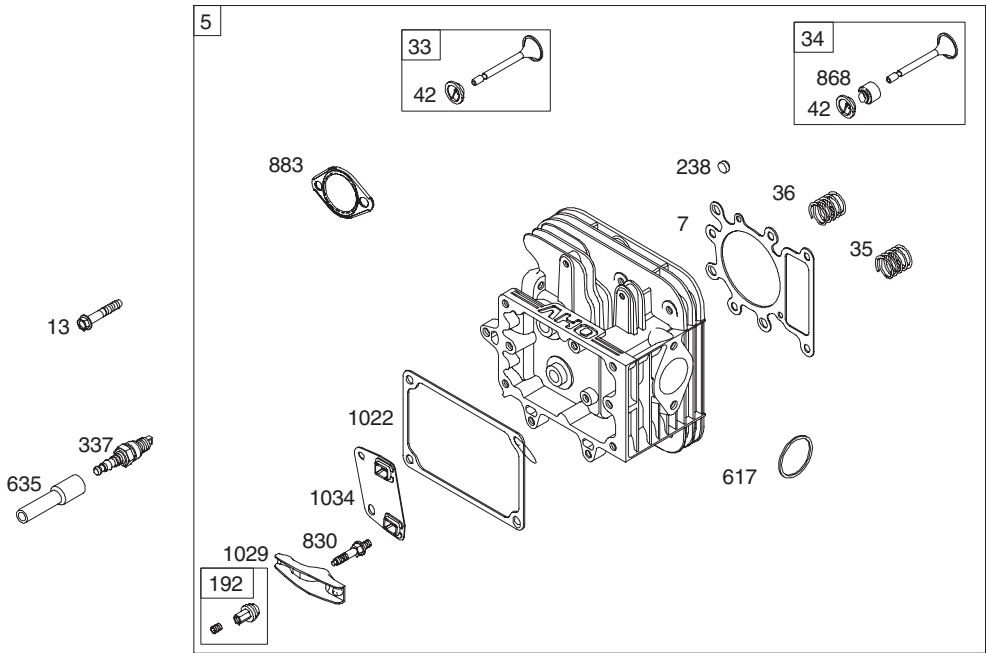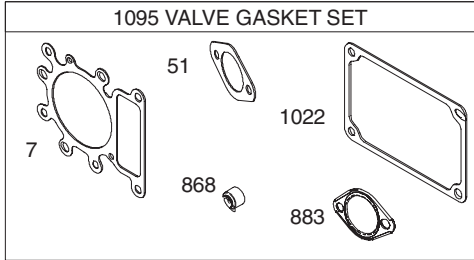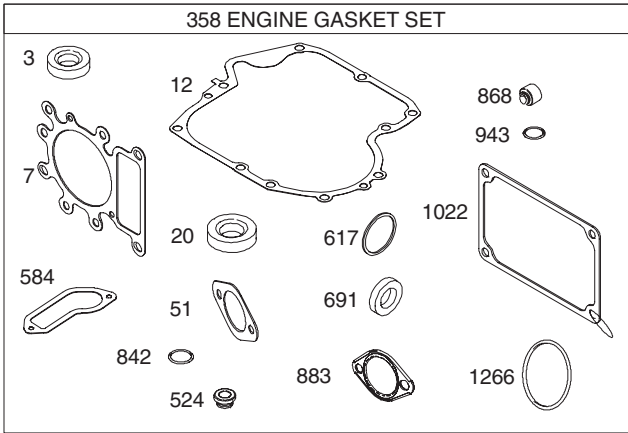


PARTS LIST

Craftsman Engine Model 331777-1372-G2 For Model 247.28919

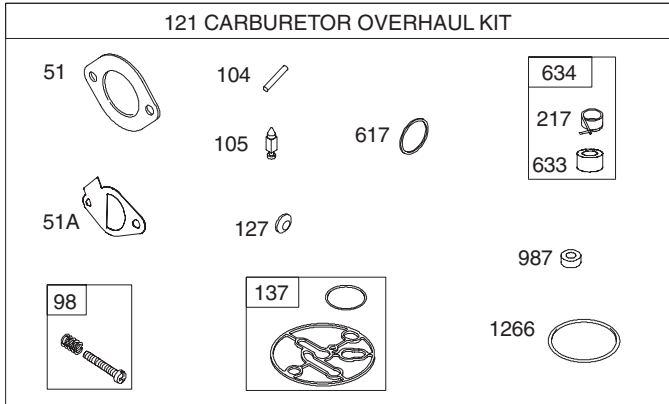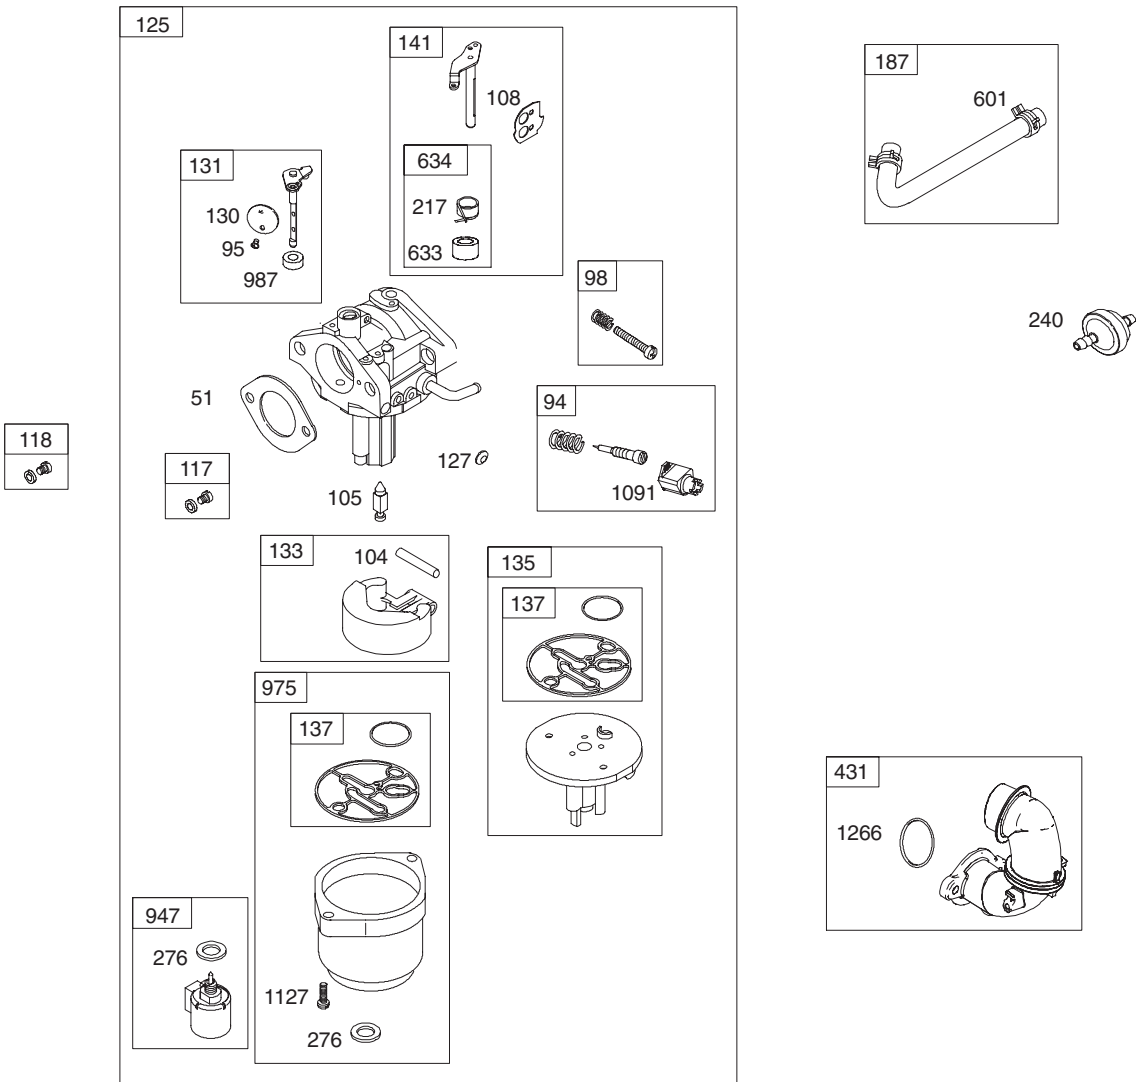




PARTS LIST

Craftsman Engine Model 331777-1372-G2 For Model 247.28919

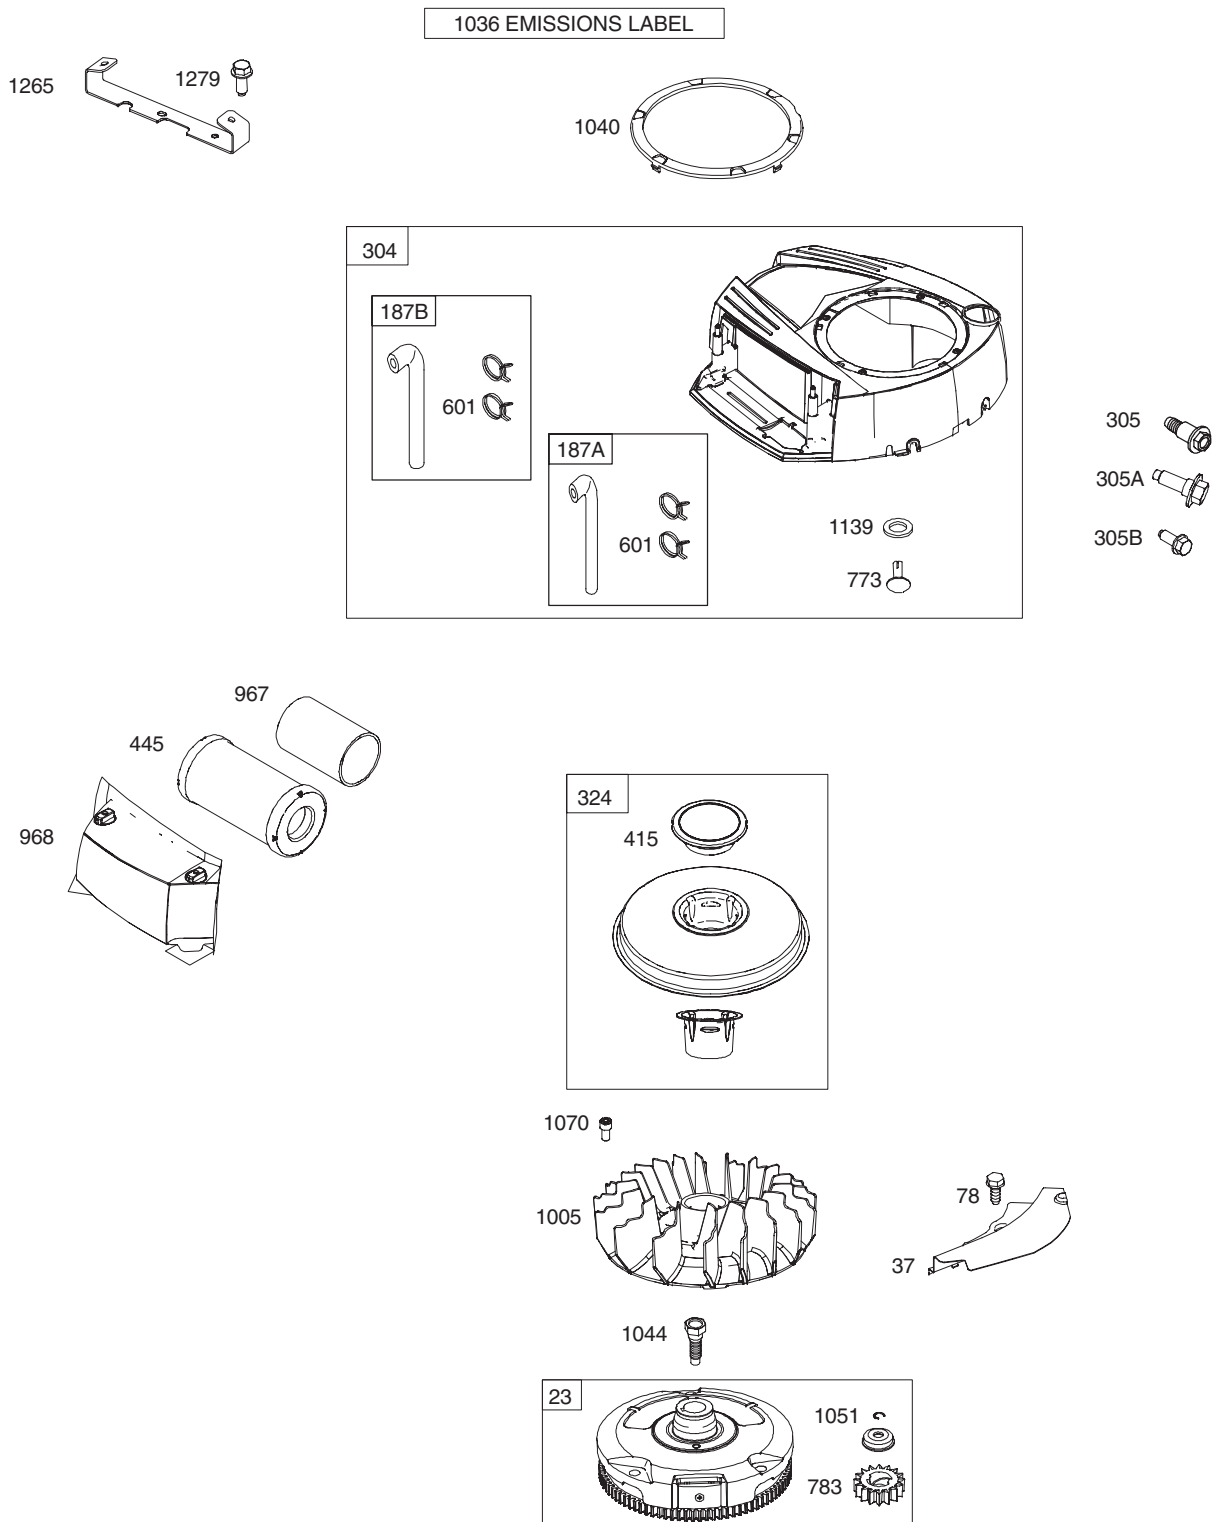


PARTS LIST


Craftsman Engine Model 331777-1372-G2 For Model 247.28919

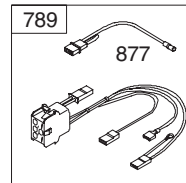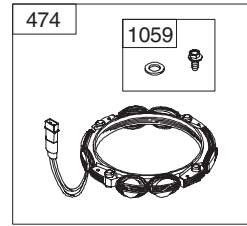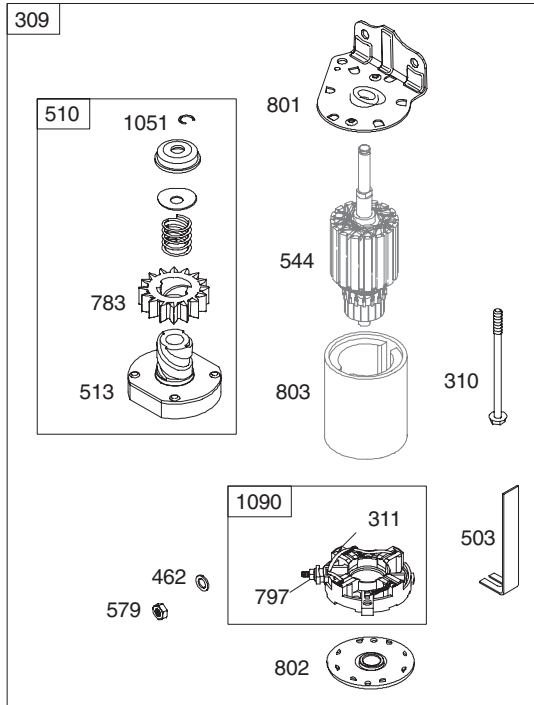

877

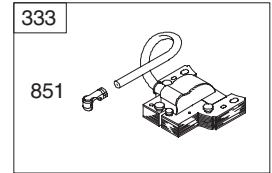

851

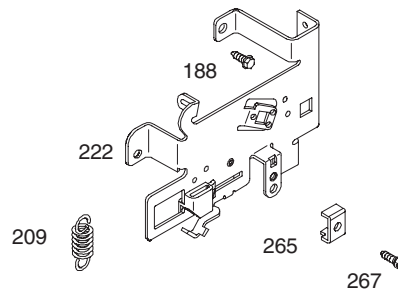

202

216

232

PARTS LIST

Craftsman Engine Model 331777-1372-G2 For Model 247.28919

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	794128	Cylinder Assembly	98	695408	Kit-Idle Speed
2	399265	Bushing/Seal Kit (Magneto Side)	104	694918Δ	Pin-Float Hinge
3	391086s†	Seal-Oil (Magneto Side)	105	696136Δ	Valve-Float Needle
4	795993	Sump-Engine	108	695419	Valve-Choke
5	796005	Head-Cylinder	117	796251	Jet-Main (Standard)
7	794114†*	Gasket-Cylinder Head	118	791406	Jet-Main (High Altitude)
11	794683	Tube-Breather	121	796184	Kit-Carburetor Overhaul
12	697110†	Gasket-Crankcase	125	796587	Carburetor
13	793988	Screw (Cylinder Head)	127	690727Δ	Plug-Welch
15	690946	Plug-Oil Drain	130	792747	Valve-Throttle
16	797579	Crankshaft	131	792765	Kit-Throttle Shaft
20	795387†	Seal-Oil (PTO Side)	133	694914	Float-Carburetor
22	692125	Screw (Crankcase Cover/Sump)	135	698780	Tube-Fuel Transfer
23	698281	Flywheel	137	698781Δ	Gasket-Float Bowl
24	222698s	Key-Flywheel	141	792777	Kit-Choke Shaft
25	795858	Piston Assembly (Standard)	146	691639	Key-Timing
	795877	Piston Assembly (.020" Oversize)	186	794873	Connector-Hose
26	794126	Ring Set (Standard)	187	791805	Line-Fuel (Formed) (Cut to Required Length)
	794127	Ring Set (.020" Oversize)	187A	791806	Line-Fuel (Formed) (Cut to Required Length)
27	698469	Lock-Piston Pin	187B	791744	Line-Fuel (Formed) (Cut to Required Length)
28	795861	Pin-Piston	188	691693	Screw (Control Bracket)
29	794122	Rod-Connecting	192	691986	Adjuster-Rocker Arm
32	791118	Screw (Connecting Rod)	202	691841	Link-Mechanical Governor
33	792868	Valve-Exhaust	209	692208	Spring-Governor (Green)
34	791935	Valve-Intake	216	691840	Link-Choke
35	691279	Spring-Valve (Intake)	217	695409	Spring-Choke Return
36	691279	Spring-Valve (Exhaust)	222	694042	Bracket-Control
37	699882	Guard-Flywheel	227	691374	Lever-Governor Control
42	499586	Keeper-Valve	232	691842	Spring-Governor Link
43	691968	Slinger-Governor/Oil	238	691843	Cap-Valve
45	690564	Tappet-Valve	240	394358s	Filter-Fuel
46	793880	Camshaft	265	691024	Clamp-Casing
48	795446	Short Block	267	794904	Screw (Casing Clamp)
50	699029	Manifold-Intake	276	695410	Washer-Sealing
51	692137†*Δ	Gasket-Intake	304	796451	Housing-Blower
51A	794312†*Δ	Gasket-Intake	305	697102	Screw (Blower Housing) (Long)
53	690227	Stud (Carburetor)			
54	691148	Screw (Intake Manifold)			
78	691003	Screw (Flywheel Guard)			
94	793610	Kit-Idle Mixture			
95	690718	Screw (Throttle Valve)			

PARTS LIST

Craftsman Engine Model 331777-1372-G2 For Model 247.28919

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
305A	793376	Screw (Blower Housing) (Short)	617	692138†Δ	Seal-O Ring (Intake Manifold) (Red)
305B	795891	Screw (Blower Housing) (Blower Housing to Elbow)	633	699813Δ	Seal-Choke/Throttle Shaft (Choke Shaft)
306	794953	Shield-Cylinder	634	698779Δ	Spring/Seal Assembly
307	691003	Screw (Cylinder Shield)	635	691909	Boot-Spark Plug
309	693551	Motor-Starter	654	690958	Nut (Carburetor)
310	690323	Screw (Starter Motor)	684	697157	Screw (Breather Passage Cover)
311	497608	Brush Set	691	692407†	Seal-Governor Shaft
324	796309	Screen/Cup Assembly	697	690372	Screw (Drive Cap)
333	795315	Armature-Magneto	718	690959	Pin-Locating
334	691061	Screw (Magneto Armature)	729	691224	Clip-Wire
337	491055s	Plug-Spark	741	697128	Gear-Timing
358	796187	Gasket Set-Engine	750	790832	Screw (Oil Pump Cover)
404	691691	Washer (Governor Crank)	757	793242	Link-Counterweight
415	794129	Plug (Cover/Retainer)	758	793763	Counterweight
415A	794903	Plug (Intake Manifold)	759	697392	Pin-Counterweight
431	794145	Elbow-Intake	783	693713	Gear-Pinion
445	793569	Filter-Air Cleaner Cartridge	789	698329	Harness-Wiring
462	691261	Washer (Starter Cable)	797	693167	Nut (Brush Retainer)
474	696459	Alternator	801	691283	Cap-Drive
503	691532	Strap-Starter	802	691286	Cap-End
505	691251	Nut (Governor Control Lever)	803		Housing-Starter (See Reference 309 for Service)
510	693699	Drive-Starter	830	691095	Stud-Rocker Arm
513	692024	Clutch-Drive	842	691031	Seal-O Ring (Dipstick Tube)
523	699908	Dipstick	847	790442	Dipstick/Tube Assembly
524	691032†	Seal-Dipstick Tube	850	100106	Sealant-Liquid (Rocker Cover Gasket and Breather Passage Gasket)
525	697184	Tube-Dipstick	851	692424	Terminal-Spark Plug
544		Armature-Starter (See Reference 309 for Service)	868	690968†*	Seal-Valve
552	697144	Bushing-Governor Crank	877	790544	Wire/Connector-Alternator
562	691119	Screw (Governor Control Lever)	883	692236†	Gasket-Exhaust
579	691029	Nut (Starter Cable)	914	697551	Screw (Rocker Cover)
584	794682	Cover-Breather Passage (Use with Liquid Sealant, Reference 850)	943	690589†	Seal-O Ring (Oil Pump Cover)
585	697109†	Gasket-Breather Passage (Breather Passage Gasket and Liquid Sealant are interchangeable)	947	699915	Solenoid-Fuel
601	791850	Hose-Clamp (Green)	965	499613	Cover-Oil Pump
614	691620	Pin-Cotter	967	793685	Filter-Pre Cleaner
616	692012	Crank-Governor	968	795757	Cover-Air Cleaner
			975	699502	Bowl-Fuel

PARTS LIST

Craftsman Engine Model 331777-1372-G2 For Model 247.28919

Ref. No.	Part No.	Description
987	698777Δ	Seal-Throttle Shaft
1005	796084	Fan-Flywheel
1017	796981	Screen-Oil Pump
1022	272475s†*	Gasket-Rocker Cover (Rocker Cover Gasket and Liquid Sealant are interchangeable)
1023	797421	Cover-Rocker
1024	794644	Pump-Oil
1026	692003	Rod-Push (Intake)
	692011	Rod-Push (Exhaust)
1027	492932s	Filter-Oil
1029	691751	Arm-Rocker
1034	690822	Guide-Push Rod
1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)
1040	698368	Plate-Trim
1044	698139	Screw (Flywheel)
1051	691265	Ring-Retaining
1058	276344	Operator's Manual
1059	698516	Kit-Screw/Washer (Alternator)
1070	690363	Screw (Flywheel Fan)
1090	691293	Retainer-Brush
1091	691333	Cap-Limiter
1095	794152	Gasket Set-Valve
1119	691183	Screw (Alternator)
1127	695407	Screw (Float Bowl)
1263	697124	Reed-Breather
1264	697104	Screw (Breather Reed)
1265	794151	Support-Blower Housing
1266	691917†Δ	Seal-O Ring (Intake Elbow) (Red)
1270	793243	Plug-AVS Counterweight
1329	331877-0036-G1	Replacement Engine
1330	276781	Repair Manual

† Engine Gasket Set

Key No. 358

* Valve Gasket Set

Key No. 1095

Δ Carburetor Overhaul Kit

Key No. 121