





ILLUSTRATED PARTS MANUAL

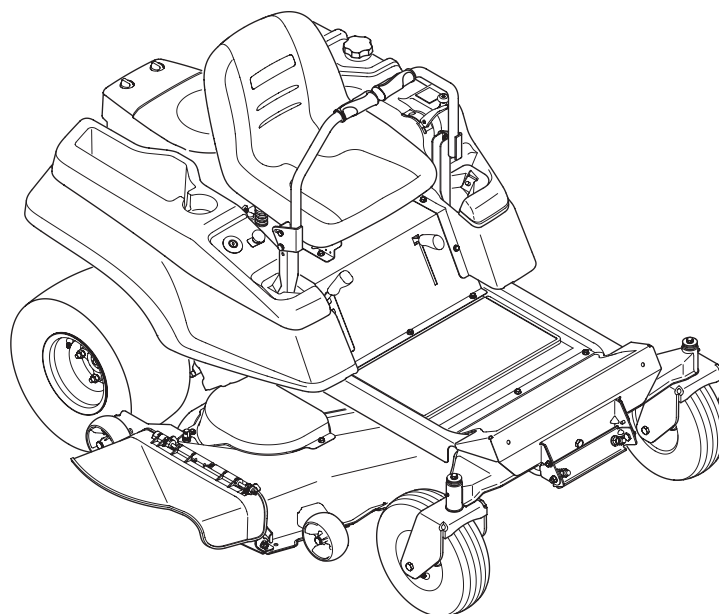

RZT Series Tractor — Mustang ZT50


TROY-BILT LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

Frame

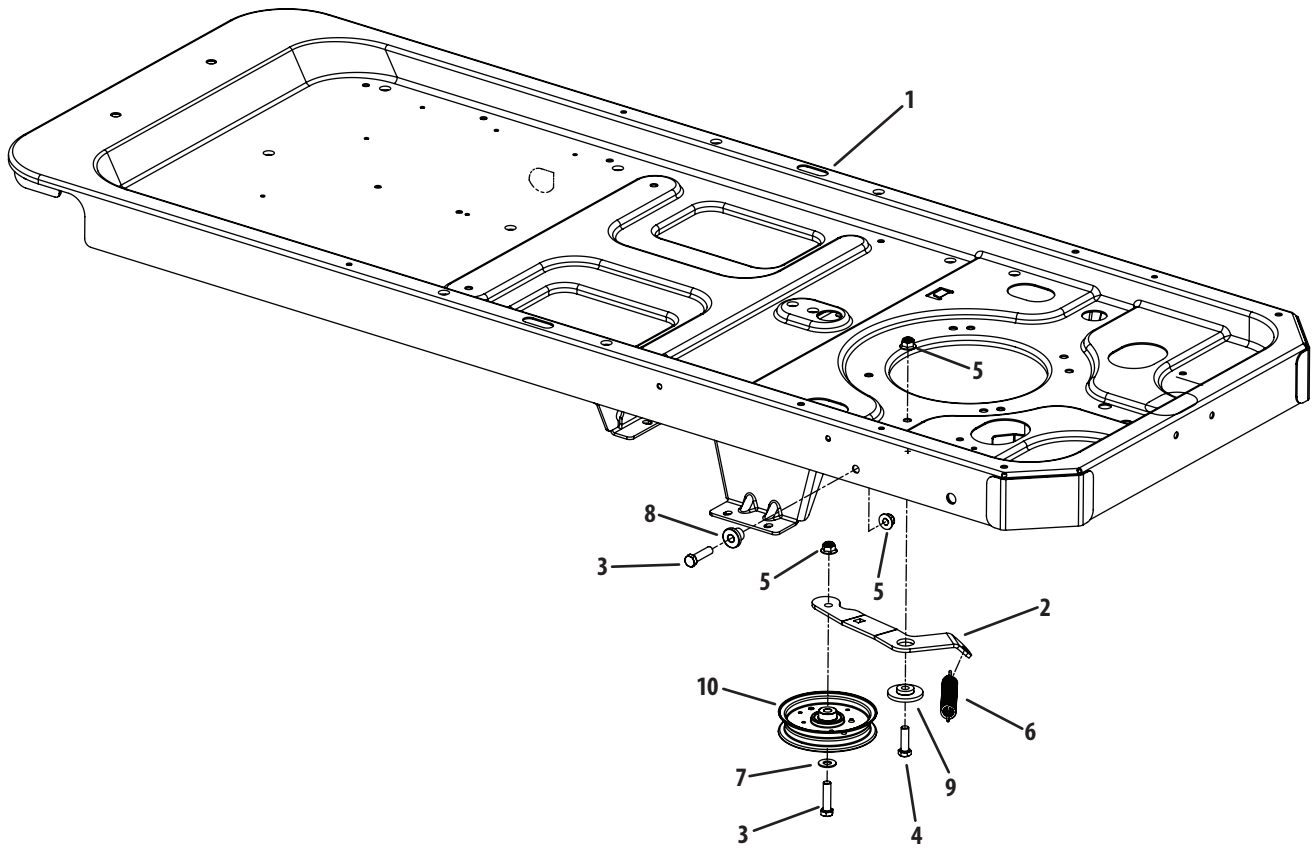


Ref.	Part Number	Description
1	603-04680	Frame
2	703-05829	Idler Arm
3	710-0520	Hex Cap Screw, $\frac{3}{8}$ -16 x 1.5
4	710-3005	Hex Cap Screw, $\frac{3}{8}$ -16 x 1.25
5	712-04065	Hex Flange Lock Nut, $\frac{3}{8}$ -16
6	732-0626	Extension Spring, .75 x 5.06
7	936-0300	Flat Washer, .406 x .875 x .059
8	738-04058	Shoulder Spacer, .38 x 1.0 x .7
9	738-04162A	Shoulder Spacer, .884 x 1.9
10	756-04129B	Idler Pulley

Front Axle

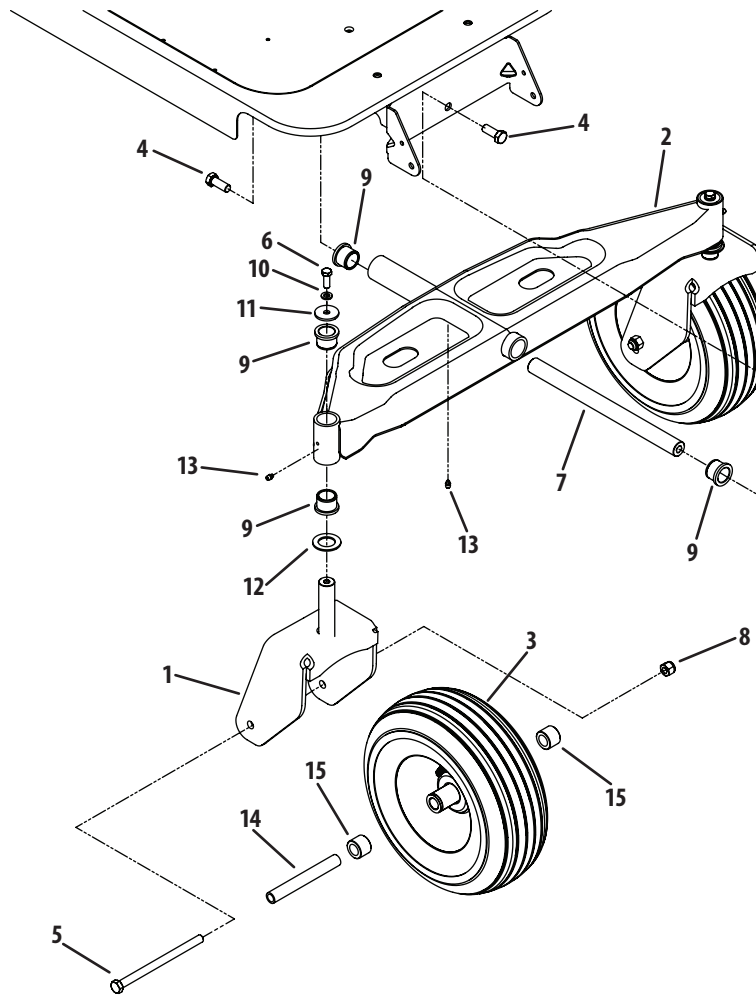


Ref.	Part Number	Description
1	603-04370	Castor Wheel Bracket
2	603-04385A	Front Pivot Axle
3	634-04321A-0911	Wheel Assembly, 13 x 5-6
—	734-04255A	Tire, 13 x 5-6
4	710-04186	Hex Lock Screw, 1/2-13 x 1.25
5	710-04652	Hex Cap Screw, 1/2-20 x 7.25
6	710-0514	Hex Cap Screw, 3/8-16 x 1.0
7	911-04228	Axle Shaft
8	912-3058	Hex Insert Lock Nut, 1/2-13
9	731-05500	Flange Bearing, 1.0 x 1.246
10	936-0169	Lock Washer, 3/8
11	936-0227	Flat Washer, .39 x 1.5 x .134
12	736-0250	Flat Washer, 1.0 x 1.75 x .10
13	937-3000	Lube Fitting, 3/16 Drive
14	750-04775A	Spacer, .51 x .75 x 5.825
15	750-04792	Hub, .76 x 1.23 x .92

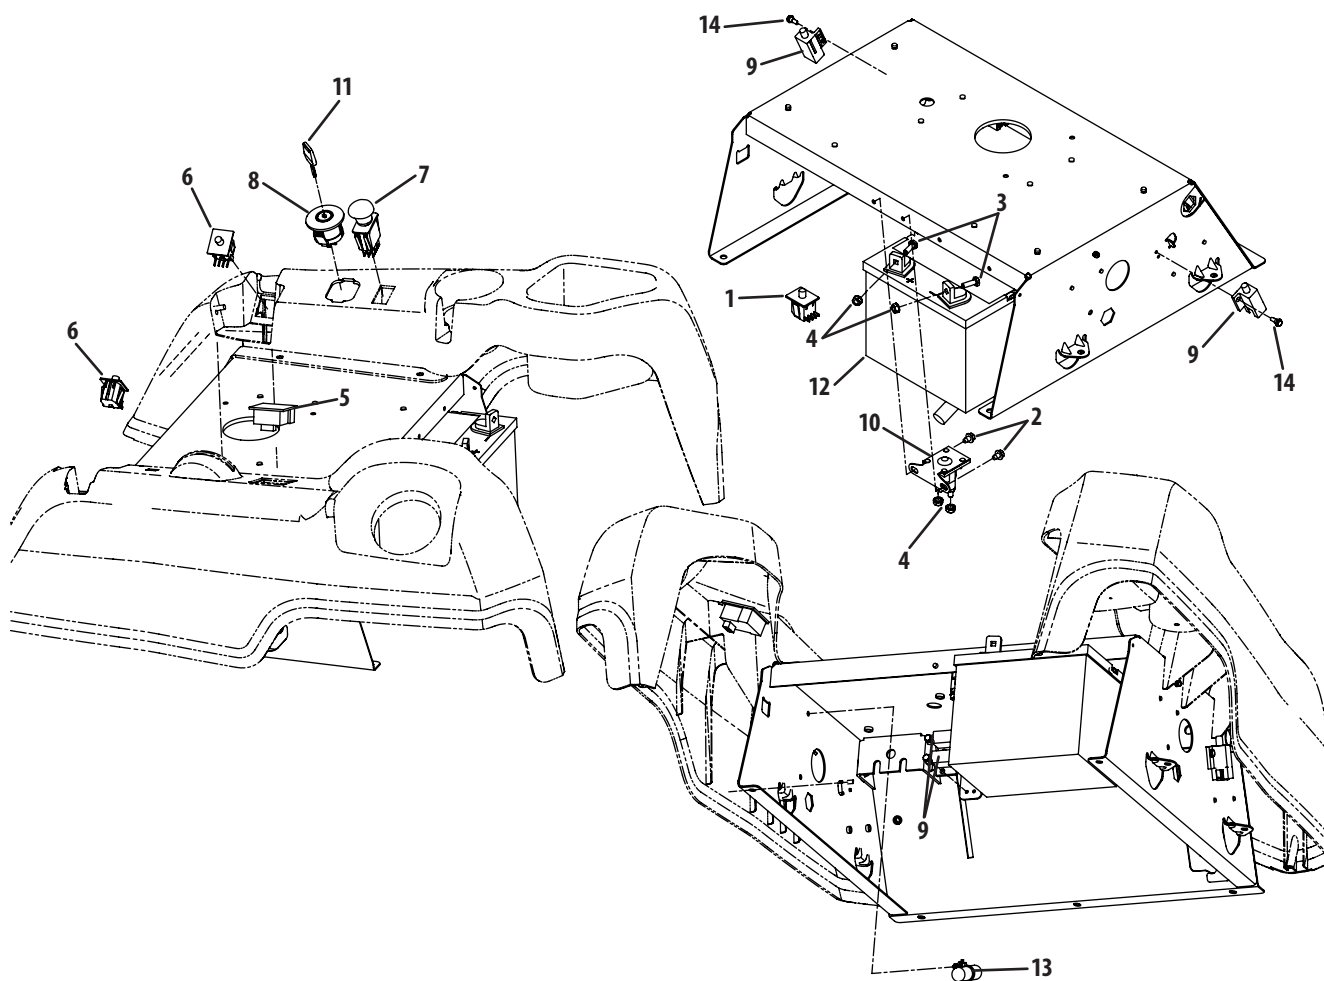


Ref.	Part Number	Description
1	925-04040	Seat Switch
2	710-0653	Hex Washer Screw, 1/4-20 x .375
3	710-3015	Hex Screw, 1/4-20 x .75
4	712-0271	Hex Nut, 1/4-20
5	925-04022B	Hour Meter
6	925-04165	Double Pole Neutral Switch
7	925-04174	PTO Switch
8	925-04228	Ignition Switch
9	725-04363	Brake/Reverse Interlock Switch
10	725-04439	Solenoid
11	925-1745A	Key
12	925-1707D	Battery
13	726-0470	Cable Tie
14	738-04237A	Shoulder Screw, #10-32 x .5
NS	925-04847B	Wire Harness Assembly

Engine Connections

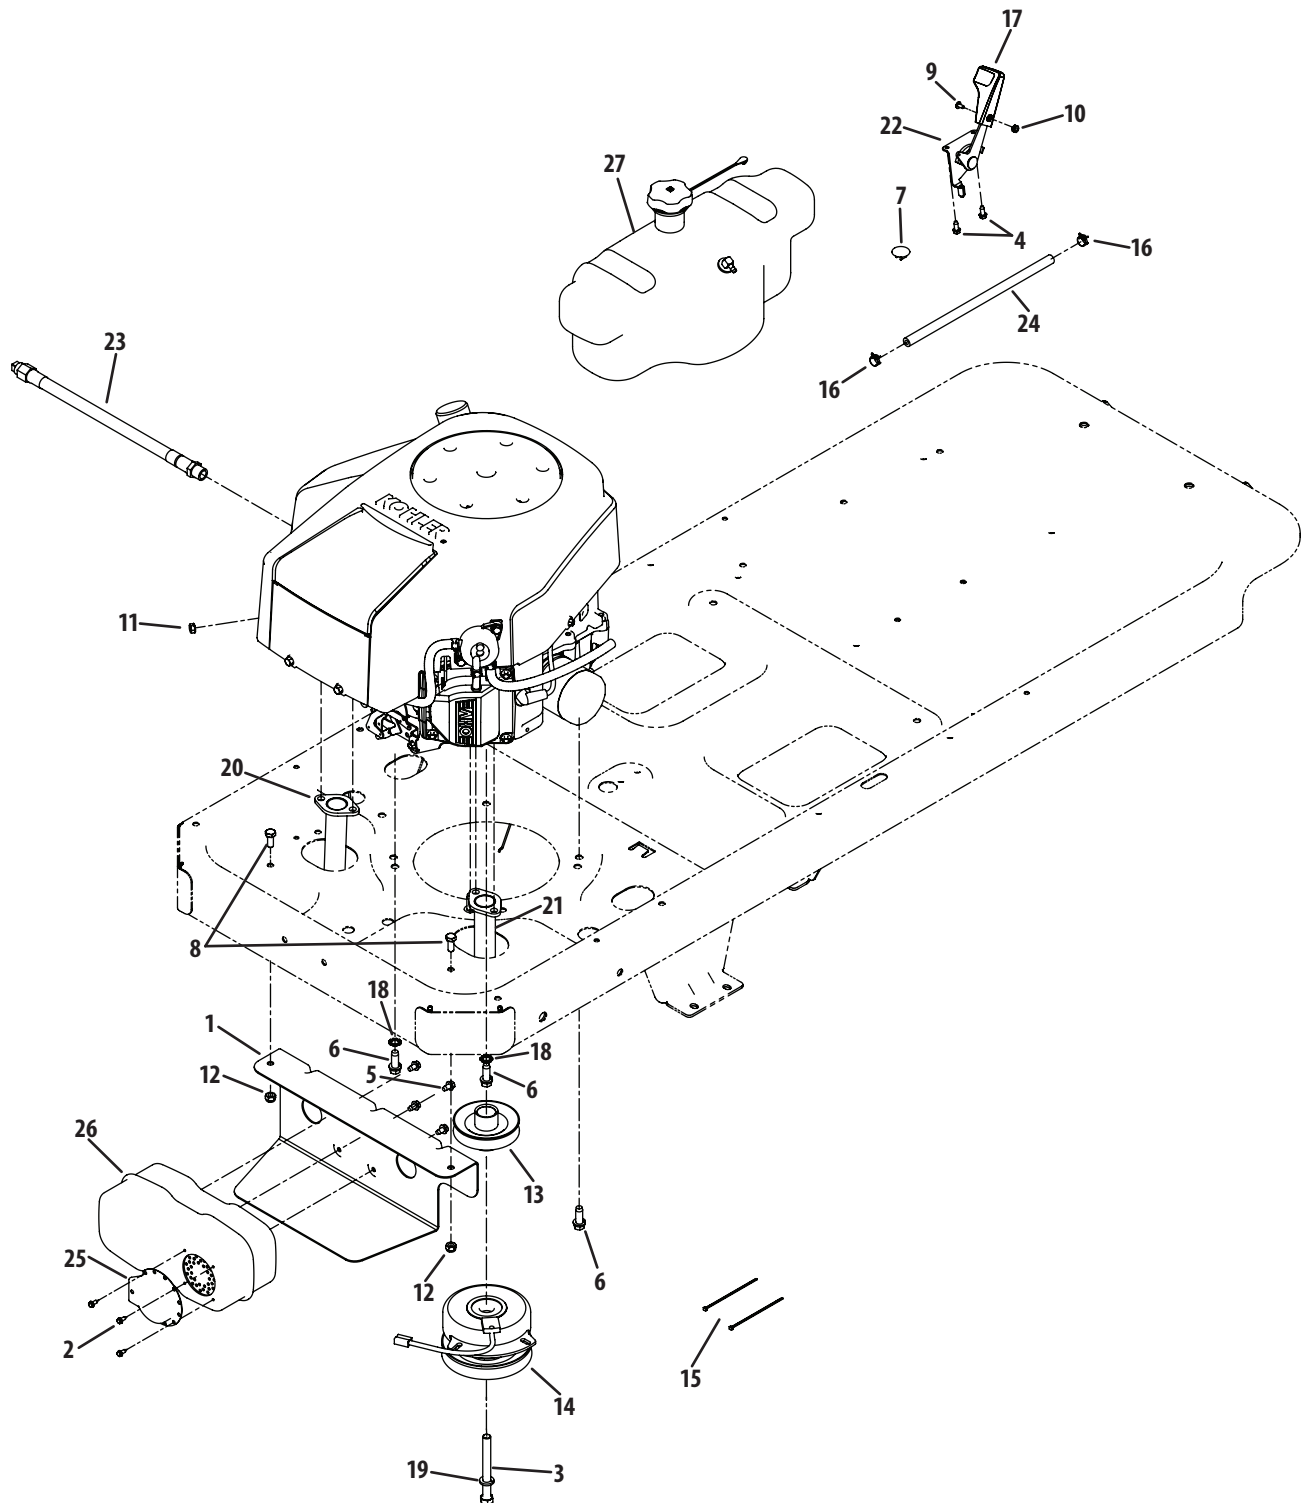


Ref.	Part Number	Description
1	703-05441A	Muffler Mounting Bracket
2	710-0227	Hex Washer Screw, #8-18 x .5
3	710-04379A	Hex Screw, 7/16-20 x 3.50
4	710-04261	Hex Washer Screw, #12-16 x .5
5	710-0599	Hex Washer Screw, 1/4-20 x .5
6	710-04683	Hex Washer Screw, 3/8-16 x 1.000
7	731-1999	Choke Plug
8	710-3008	Hex Screw, 5/16-18 x .75
9	710-3217	Machine Screw, #8-32 x .375
10	712-0142	Hex Nut, #8-32
11	712-0271	Hex Nut, 1/4-20
12	912-0429	Hex Lock Nut, 5/16-18
13	756-04376	Pulley
14	917-04552	Electric PTO Clutch
15	726-0197	Clutch Wire Tie
16	726-0205	Hose Clamp
17	731-04914	Throttle Control
18	736-0148	Lock Washer, 3/8
19	936-0171	Lock Washer, 7/16
20	751-10253	Exhaust Pipe, LH
21	751-10254	Exhaust Pipe, RH
22	746-04539	Throttle/Choke Cable
23	751-10291	Oil Drain Extension Hose
24	751-10349	Fuel Line Hose
25	751-0564B	Muffler Deflector
26	751-0616B	Muffler
27	N/A	Fuel Tank Assembly
—	935-0149	Fuel Tank Bushing
—	751-10442	Fuel Pick-Up Fitting
—	751-10692	Fuel Tank
—	751-10703A	Fuel Cap

Operator's Platform

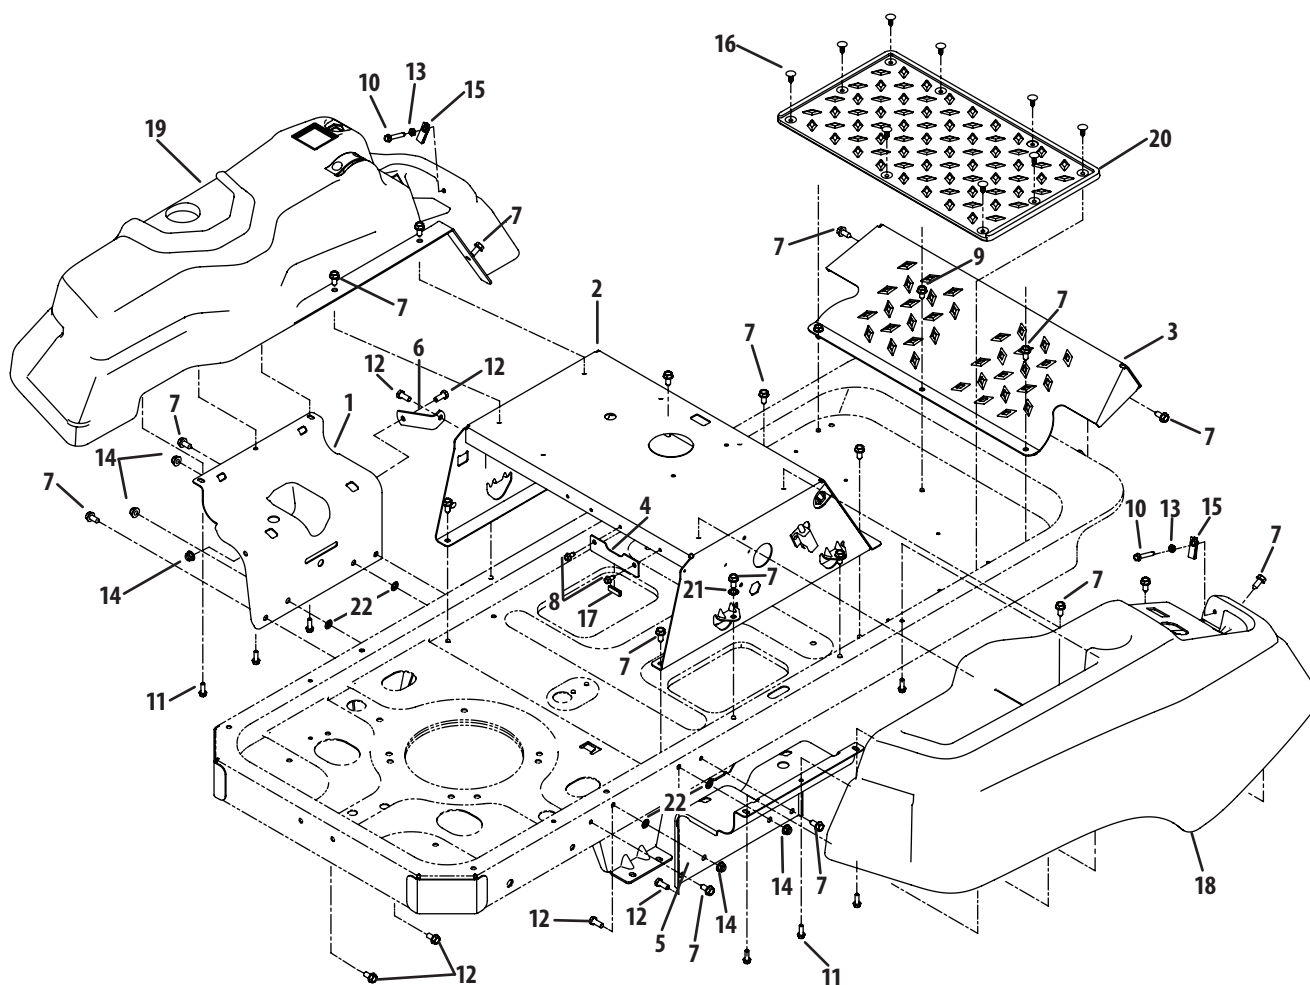

Ref.	Part Number	Description
1	603-04564	Console Bracket Assembly
2	603-04663	Seat Frame Assembly
3	703-05373B	Foot Rest Bracket
4	703-05894	Battery Hold-Down Bracket
5	703-06451	Console Mount Bracket
6	703-06623	Fuel Tank Support Bracket
7	710-04484	Hex Washer Screw, 5/16-18 x .750
8	710-0599	Hex Washer Screw, 1/4-20 x .500
9	710-0604A	Hex Washer Screw, 5/16-18 x .625
10	710-0778	Hex Washer Screw, 1/4-20 x 1.500
11	710-0895	Hex Washer Screw, 1/4-15 x .750


Ref.	Part Number	Description
12	710-3008	Hex Screw, 5/16-18 x .75
13	912-0298	Jam Nut, 1/4-20
14	712-04063	Flange Lock Nut, 5/16-18
15	712-04092	Speed Nut, 1/4-20
16	726-3046	Ratchet Clip
17	731-0511	Trim Strip
18	731-06233	RH Console
19	731-06263	LH Console
20	735-04082B	Foot Pad
21	736-0148	Lock Washer, 3/8
22	726-0201	Speed Nut, .3125

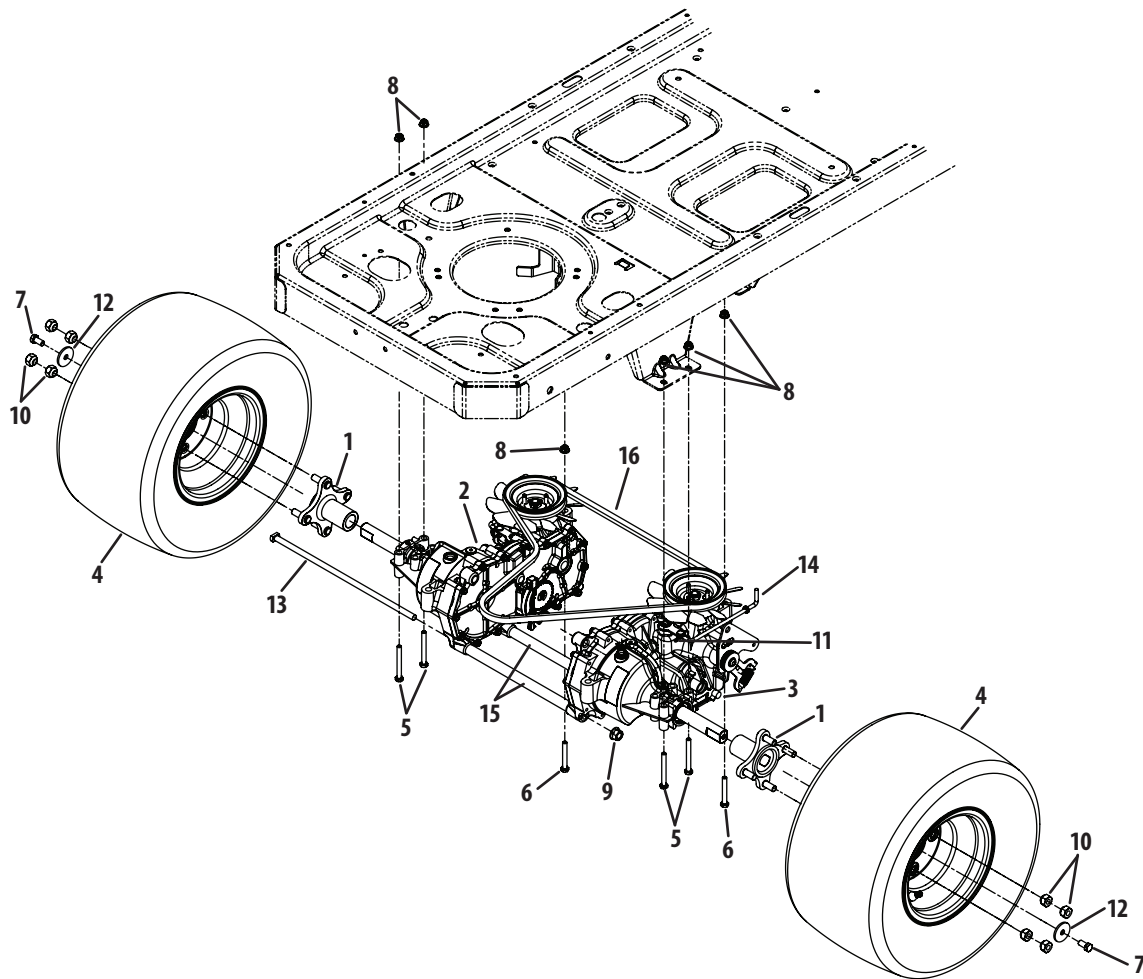

Ref.	Part Number	Description
1	918-04317	Wheel Hub
2	918-04431A	Transmission Assembly, LH
3	918-04432A	Transmission Assembly, RH
4	634-04172A	Wheel Assembly, 18 x 9.5 x 8
—	734-1729	Tire, 18 x 9.5 x 8
—	934-0255	Valve Assembly
—	603-04175	Rim Assembly
5	710-0176	Hex Screw, 5/16-18 x 2.75
6	710-0395	Hex Screw, 5/16-18 x 2.25
7	710-3119	Hex Lock Screw, 3/8-16 x .75

Ref.	Part Number	Description
8	712-04063	Hex Flange Lock Nut, 5/16-18
9	712-0459	Hex Flange Lock Nut, 7/16-20
10	712-3050	Lug Nut, 7/16-14
11	714-04040	Bow-Tie Cotter Pin
12	936-0227	Flat Washer, .39 x 1.5 x .134
13	738-04192	Rod, .405 x 14.0
14	747-04217C	Bypass Rod
15	750-04561	Tube, .45 x .69 x 10.2
16	954-04043A	V-Belt


Operator's Controls

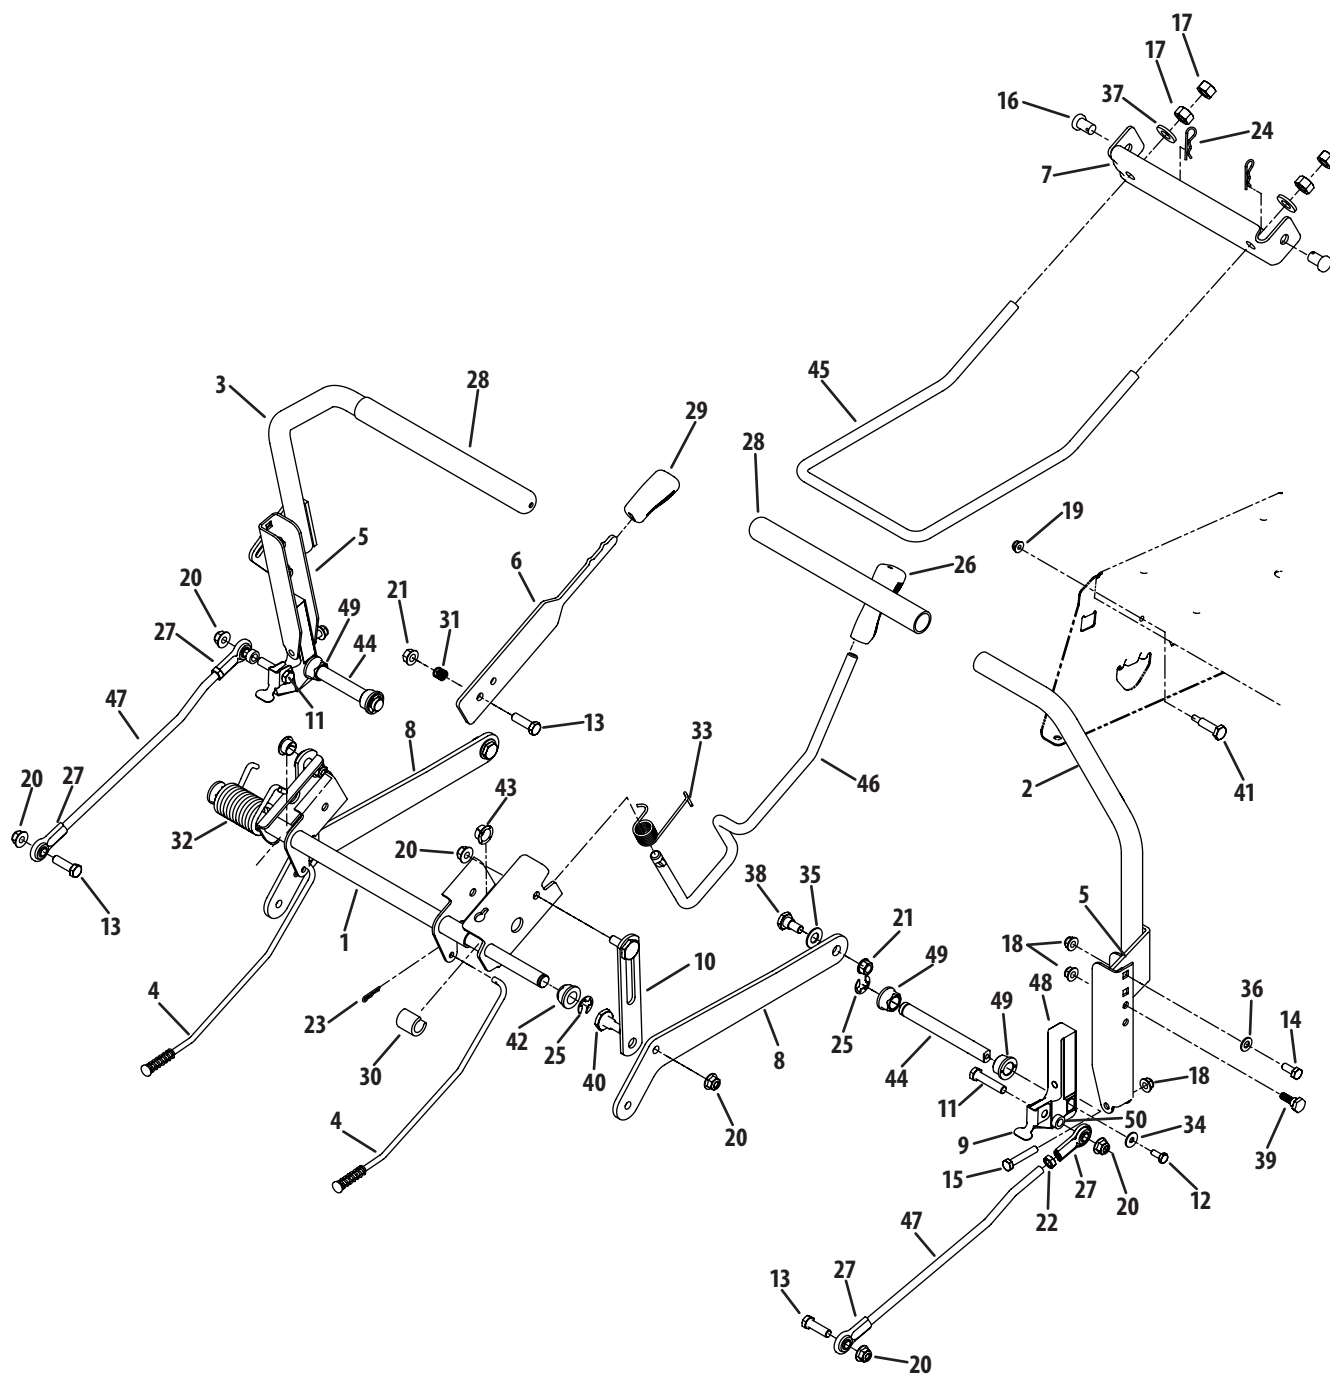

Ref.	Part Number	Description
1	603-04160B	Deck Lift Shift Assembly
2	603-04322	RH Lapbar Lever Assembly
3	603-04324	LH Lapbar Lever Assembly
4	947-04065	Brake Rod Assembly
5	703-05387B	Lapbar Pivot Bracket
6	703-05396A	Brake/Shabs Handle
7	703-05414A	Front Deck Hanger Bracket
8	703-05793A	Deck Lift Arm Plate
9	703-06096A	Switch Actuator Bracket
10	703-06169	Lift Link Plate
11	710-0347	Hex Screw, 3/8-16 x 1.75
12	710-0433	Hex Screw, 1/4-20 x .625
13	710-3005	Hex Screw, 3/8-16 x 1.25
14	710-3008	Hex Screw, 5/16-18 x .75
15	710-3180	Hex Screw, 5/16-18 x 1.75
16	911-0332	Clevis Pin, .50 x .78
17	912-0206	Hex Nut, 1/2-13
18	712-04063	Flange Lock Nut, 5/16-18
19	712-04064	Flange Lock Nut, 1/4-20
20	712-04065	Flange Lock Nut, 3/8-16
21	912-0431	Flange Lock Nut, 3/8-16
22	912-3001	Jam Nut, 3/8-24
23	714-04040	Bow-Tie Cotter Pin
24	914-04023	Cotter Pin, .080 x 1.5625
25	716-0106	E-Ring


Ref.	Part Number	Description
26	720-0311	Handle Grip
27	723-04035	Rod End
28	731-04719A	Lapbar Grip
29	731-04735	Selector Handle
30	731-05732	Spacer, .621 x 1.00
31	932-0334	Compression Spring, .50 x .50
32	732-04420	Torsion Spring, 1.19 x 2.78
33	732-0874	Torsion Spring
34	736-0270	Bell Washer, .265 x .75 x .062
35	936-0272	Flat Washer, .510 x 1.00 x .060
36	936-0275	Flat Washer, .344 x .688 x .065
37	736-3019	Flat Washer, .531 x 1.062 x .134
38	736-0143	Shoulder Bolt, 3/8-16 x .496 x .336
39	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
40	938-0507B	Shoulder Screw, .500 x .434
41	938-0572	Shoulder Screw, .374 x 1.16
42	941-0225	Hex Flange Bearing
43	741-3074	Flange Bearing, .626 x .938 x .344
44	747-04226A	Shaft Control
45	747-04401A	Front Hanger Deck Lift Rod
46	747-04637	Deck Lift Handle Rod
47	747-05057	Lapbar Rod Control
48	748-04169A	Control Hub
49	948-0227A	Hex Flange Bearing
50	750-04776	Spacer, .380 x .625 x .265

Mower Deck

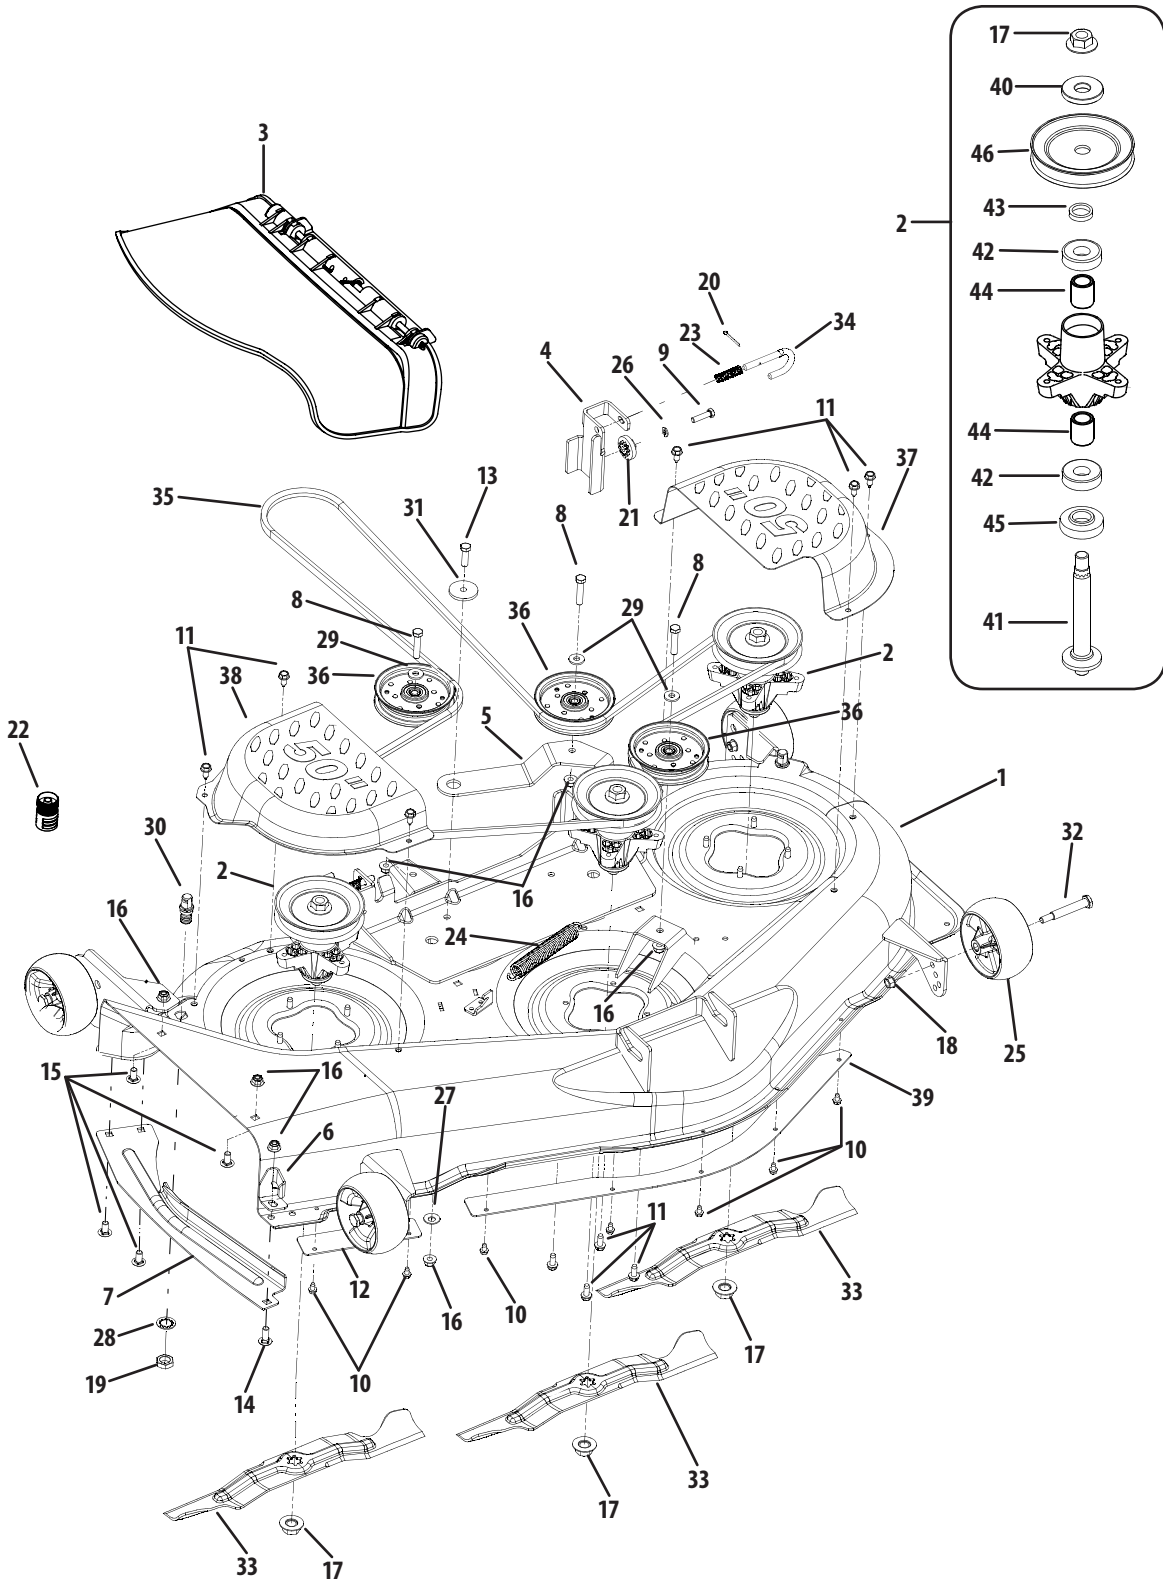

Ref.	Part Number	Description
1.	903-04328A	Deck Housing
2.	918-04126B	Spindle Assembly
3.	631-04070A	Discharge Chute Assembly
4.	683-0254B	Deck Hanger Bracket
5.	703-05825B	Idler Arm
6.	703-3279	Stop Bracket
7.	703-3511A	Finger Guard
8.	710-0347	Hex Cap Screw, $\frac{3}{8}$ -16 x 1.75
9.	710-0528	Hex Cap Screw, $\frac{5}{16}$ -18 x 1.25
10.	710-0599	Hex Washer Head Screw, $\frac{1}{4}$ -20 x .5
11.	710-04484	Hex Washer Head Screw, $\frac{5}{16}$ -18 x .750
12.	783-04415	Skirt, RH
13.	710-3005	Hex Cap Screw, $\frac{3}{8}$ -16 x 1.25
14.	710-04095	Hex Screw, $\frac{3}{8}$ -16 x 1.00
15.	710-3178	Carriage Screw, $\frac{3}{8}$ -16 x .75
16.	712-04065	Hex Insert Flange Lock Nut, $\frac{3}{8}$ -16
17.	712-0417A	Hex Flange Nut, $\frac{5}{8}$ -18
18.	912-0431	Hex Flange Lock Nut, $\frac{3}{8}$ -16
19.	912-0641	Hex Nut, M16-1.5
20.	914-0470	Cotter Pin, $\frac{1}{8}$ x 1.25
21.	917-04074	Deck Adjustment Gear
22.	921-04041	Water Nozzle Adapter
23.	732-04652	Compression Spring, .535 x 1.75

Ref.	Part Number	Description
24.	732-04609	Extension Spring, .94 x 6.74
25.	734-04155	Deck Ball Wheel, 5.0
26.	936-0119	Lock Washer, $\frac{5}{16}$
27.	736-0407	Bell Washer, .45 x 1.0 x .062
28.	736-0225	Internal Tooth Lock Washer, $\frac{5}{8}$
29.	736-3072	Flat Washer, .38 x .93 x .110
30.	737-04003D	Deck Wash Nozzle
31.	738-04162A	Shoulder Spacer, .884 x .190
32.	938-3056	Shoulder Screw, .5 x 2.5 x $\frac{3}{8}$ -16
33.	942-04053C	Blade, 2 in 1, 17.9
34.	747-1116	Deck Hanger Rod
35.	954-04044A	V-Belt
36.	756-04129B	Idler Pulley, 4.25 Dia
37.	783-04399	Belt Cover, LH
38.	783-04400	Belt Cover, RH
39.	783-04414A	Center Skirt
40.	736-0315	Flat Washer, .76 x 1.50 x .12
41.	738-1010A	Spindle Shaft, 5.75
42.	941-0919	Ball Bearing
43.	748-0160A	Spacer, .79 x 1.25 x .175
44.	750-1000	Spacer, .80 x 1.10 x 1.32
45.	750-1349A	Spacer, .79 x 1.82 x .55
46.	756-04216	V-Type Pulley, 5.39

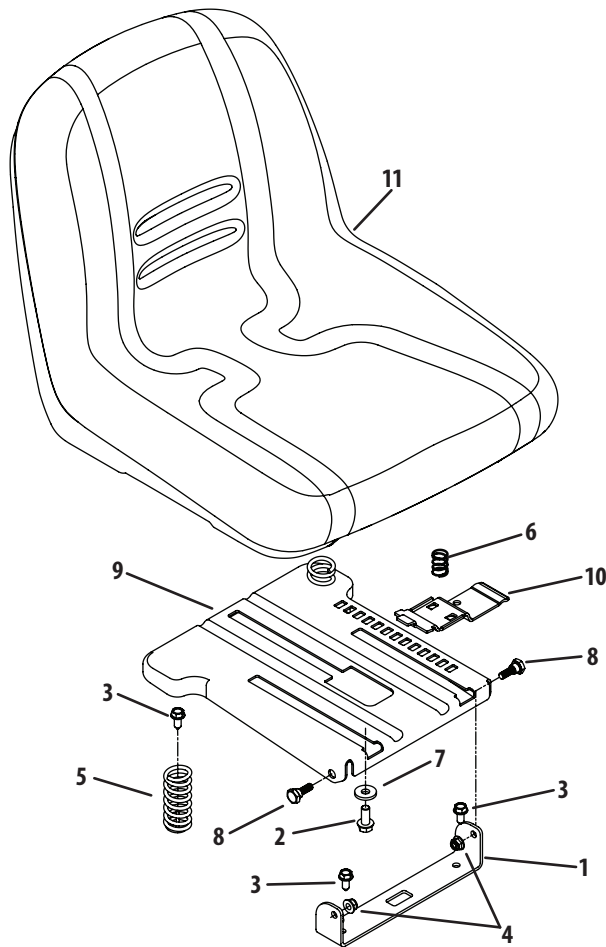

Ref.	Part Number	Description
1.	703-06941	Seat Bracket
2.	710-04482	Hex Flange Bolt, $\frac{3}{8}$ -16 x .875
3.	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
4.	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
5.	732-04035	Compression Spring
6.	732-04563	Compression Spring
7.	736-0258	Flat Washer, .385 x 1.0 x .135
8.	938-0296	Shoulder Screw, $\frac{5}{16}$ -18 x .437 x .268
9.	783-06049	Seat Mount Bracket
10.	783-06050	Seat Adjustment Lever
11.	757-04103	High Back Seat

Electrical Schematic

