



Frame & Drive Idler Assembly

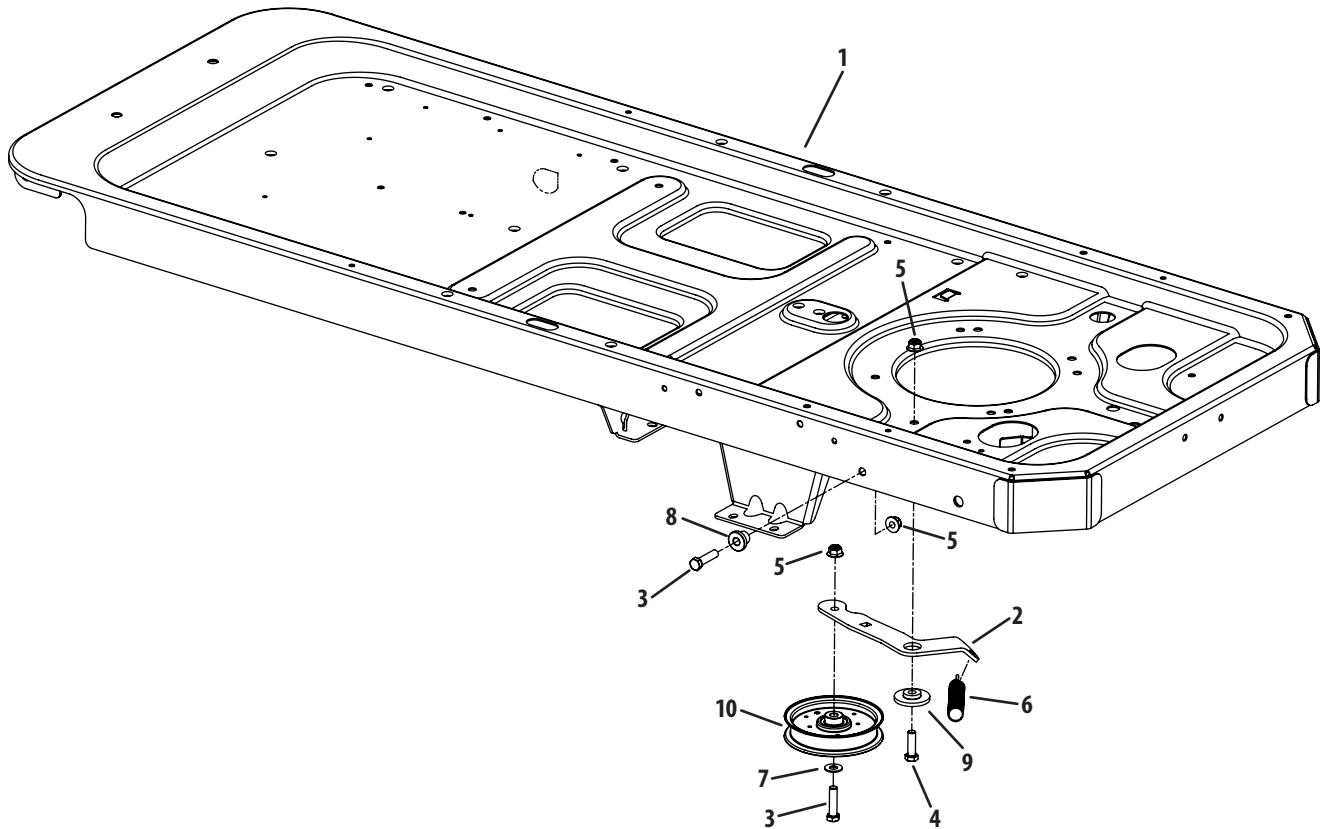

Ref.	Part Number	Description
1	603-04691	Frame Assembly
2	703-05829	Drive Idler Arm
3	710-0520	Hex Screw, $\frac{3}{8}$ -16 x 1.5
4	710-3005	Hex Screw, $\frac{3}{8}$ -16 x 1.25
5	712-04065	Flange Nut, $\frac{3}{8}$ -16
6	732-0626	Extension Spring, .75 x 5.06
7	936-0300	Flat Washer, .406 x .875 x .059
8	738-04058	Shoulder Spacer, .39 x 1.0 x .7
9	738-04162A	Shoulder Spacer, .884 x .19
10	756-04129B	Idler Pulley, 4.25 Dia.


Operator's Platform (U.S.)

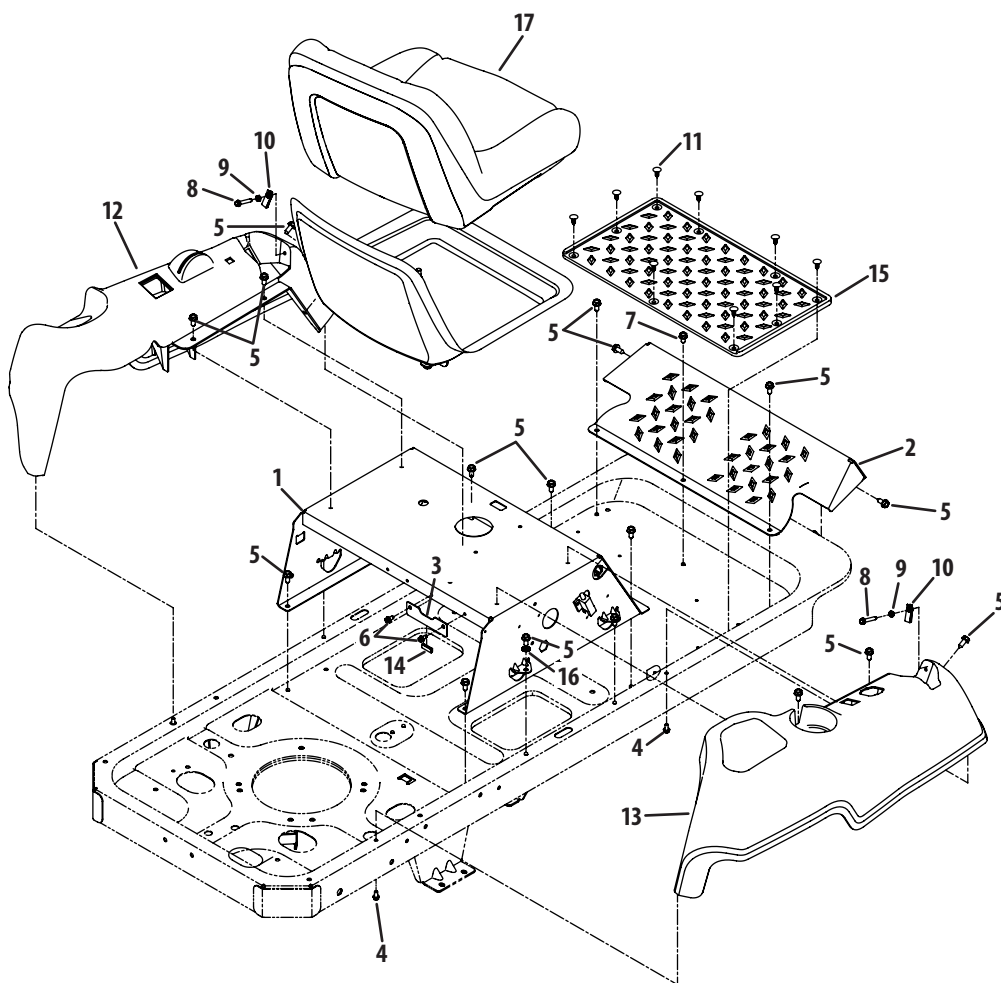

Ref.	Part Number	Description
1	603-04663	Seat Frame Assembly
2	703-05373B	Foot Rest Bracket
3	703-05894	Batter Hold-Down Bracket
4	710-04187	Hex Washer Screw, 1/4-15 x .50
5	710-04484	Hex Washer Screw, 5/16-18 x .750
6	710-0599	Hex Washer Screw, 1/4-20 x .500
7	710-0604A	Hex Washer Screw, 5/16-18 x .625
8	710-0778	Hex Washer Screw, 1/4-20 x 1.500
9	912-0298	Jam Nut, 1/4-20
10	712-04092	U-Type Nut, 1/4-20

Ref.	Part Number	Description
11	726-3046	Ratchet Clip
12	731-04662E	LH Console
—	731-06310A	LH Console (Oyster Gray)
13	731-04663D	RH Console
—	731-06309A	RH Console (Oyster Gray)
14	731-0511	Trim Strip
15	735-04082B	Foot Pad
16	736-0148	Lock Washer, 3/8
17	757-04098	High-Back Seat


Operator's Platform (Australian w/ Kohler Engine & Briggs Engine)

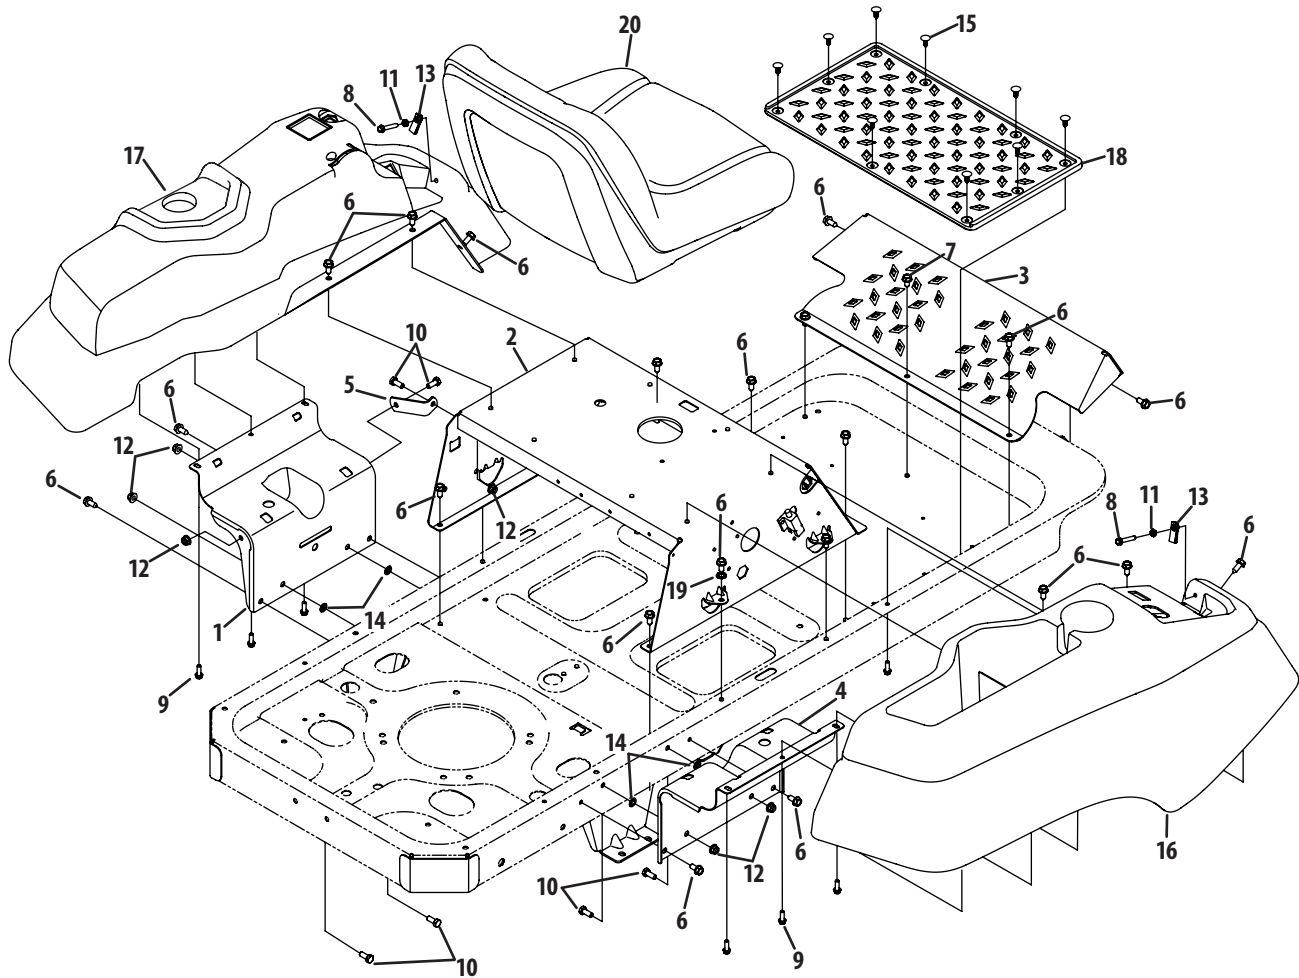

Ref.	Part Number	Description
1	603-04564	Console Bracket Assembly
2	603-04663	Seat Frame Assembly
3	703-05373B	Foot Rest Bracket
4	703-06451	Console Mount Bracket
5	703-06623	Fuel Tank Support Bracket
6	710-04484	Hex Washer Screw, 5/16-18 x .750
7	710-0604A	Hex Washer Screw, 5/16-18 x .625
8	710-0778	Hex Washer Screw, 1/4-20 x 1.500
9	710-0895	Hex Washer Screw, 1/4-15 x .750
10	710-3008	Hex Screw, 5/16-18 x .75


Ref.	Part Number	Description
11	912-0298	Jam Nut, 1/4-20
12	712-04063	Flange Lock Nut, 5/16-18
13	712-04092	Speed Nut, 1/4-20
14	726-0201	Speed Nut, .3125
15	726-3046	Ratchet Clip, .250
16	731-06233	RH Console
17	731-06263	LH Console
18	735-04082	Foot Pad
19	736-0148	Lock Washer, 3/8
20	757-04098	High-Back Seat

Operator's Platform (Australian w/ Kawasaki Engine)

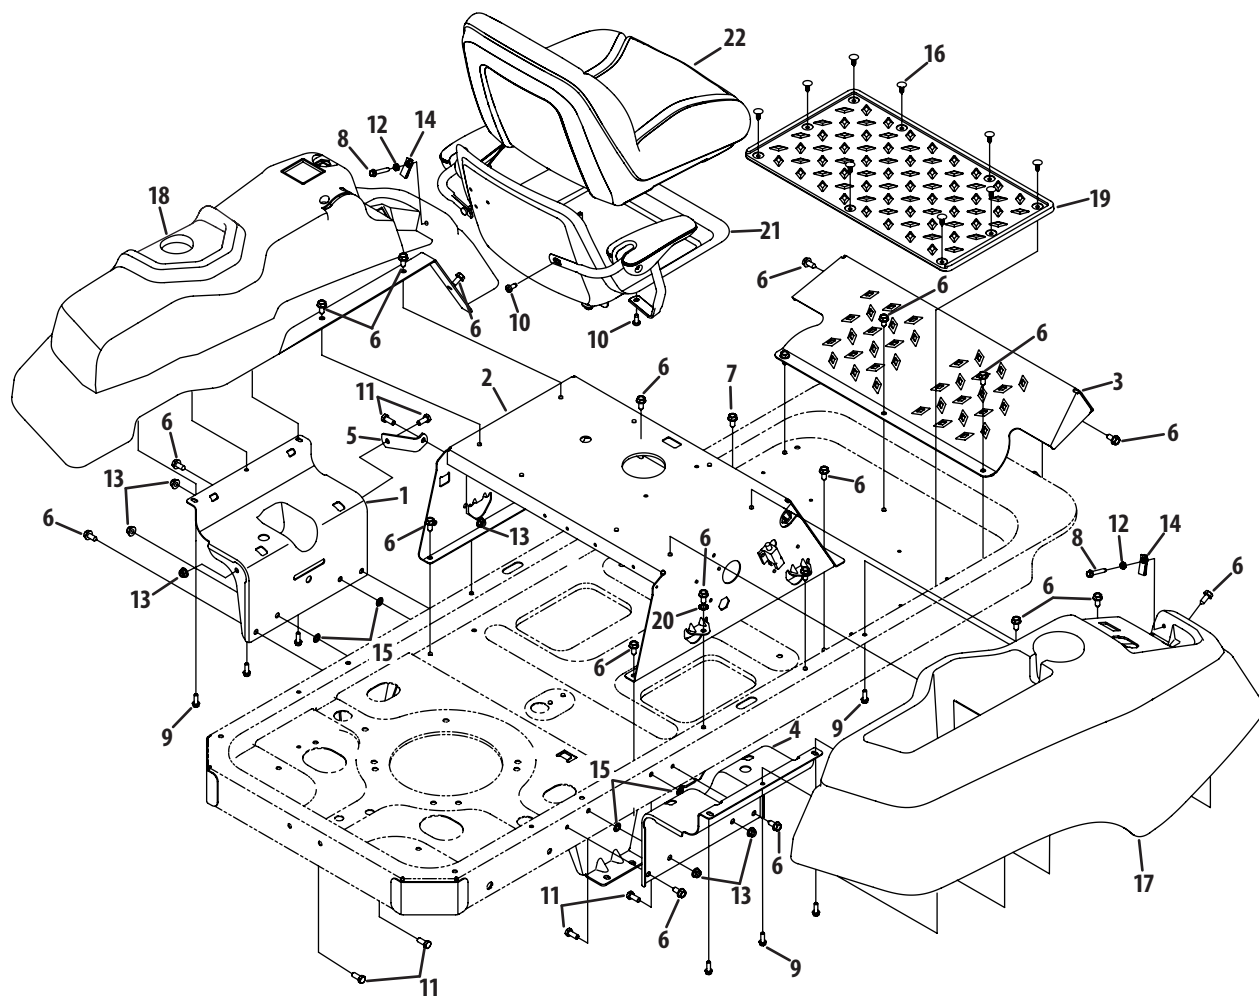


Ref.	Part Number	Description
1	603-04564	Console Bracket Assembly
2	603-04663	Seat Frame Assembly
3	703-05373B	Foot Rest Bracket
4	703-06451	Console Mount Bracket
5	703-06623	Fuel Tank Support Bracket
6	710-04484	Hex Washer Screw, 5/16-18 x .750
7	710-0604A	Hex Washer Screw, 5/16-18 x .625
8	710-0778	Hex Washer Screw, 1/4-20 x 1.500
9	710-0895	Hex Washer Screw, 1/4-15 x 0.750
10	710-1611B	Screw, 5/16-18 x .750
11	710-3008	Hex Screw, 5/16-18 x .75

Ref.	Part Number	Description
12	712-0298	Jam Nut, 1/4-20
13	712-04063	Flange Lock Nut, 5/16-18
14	712-04092	Speed Nut, 1/4-20
15	726-0201	Speed Nut, .3125
16	726-3046	Ratchet Clip, .250
17	731-06233	RH Console
18	731-06263	LH Console
19	735-04082B	Foot Pad
20	736-0148	Lock Washer, 3/8
21	757-04073	High-Back Seat Arm
22	757-04090	High-Back Seat

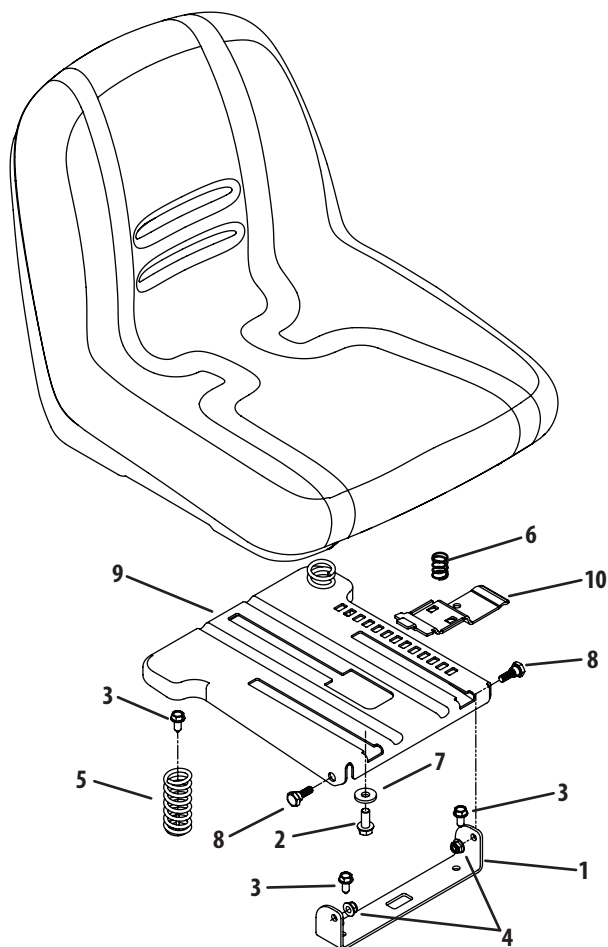

Ref.	Part Number	Description
1.	703-06941	Seat Bracket
2.	710-04482	Hex Flange Bolt, $\frac{3}{8}$ -16 x .875
3.	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
4.	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
5.	732-04035	Compression Spring
6.	732-04563	Compression Spring
7.	736-0258	Flat Washer, .385 x 1.0 x .135
8.	938-0296	Shoulder Screw, .437 x .268 x $\frac{5}{16}$ -18
9.	783-06049	Seat Mount Bracket
10.	783-06050	Seat Adjustment Lever


Engine Connection, 42" w/ Kohler Engine

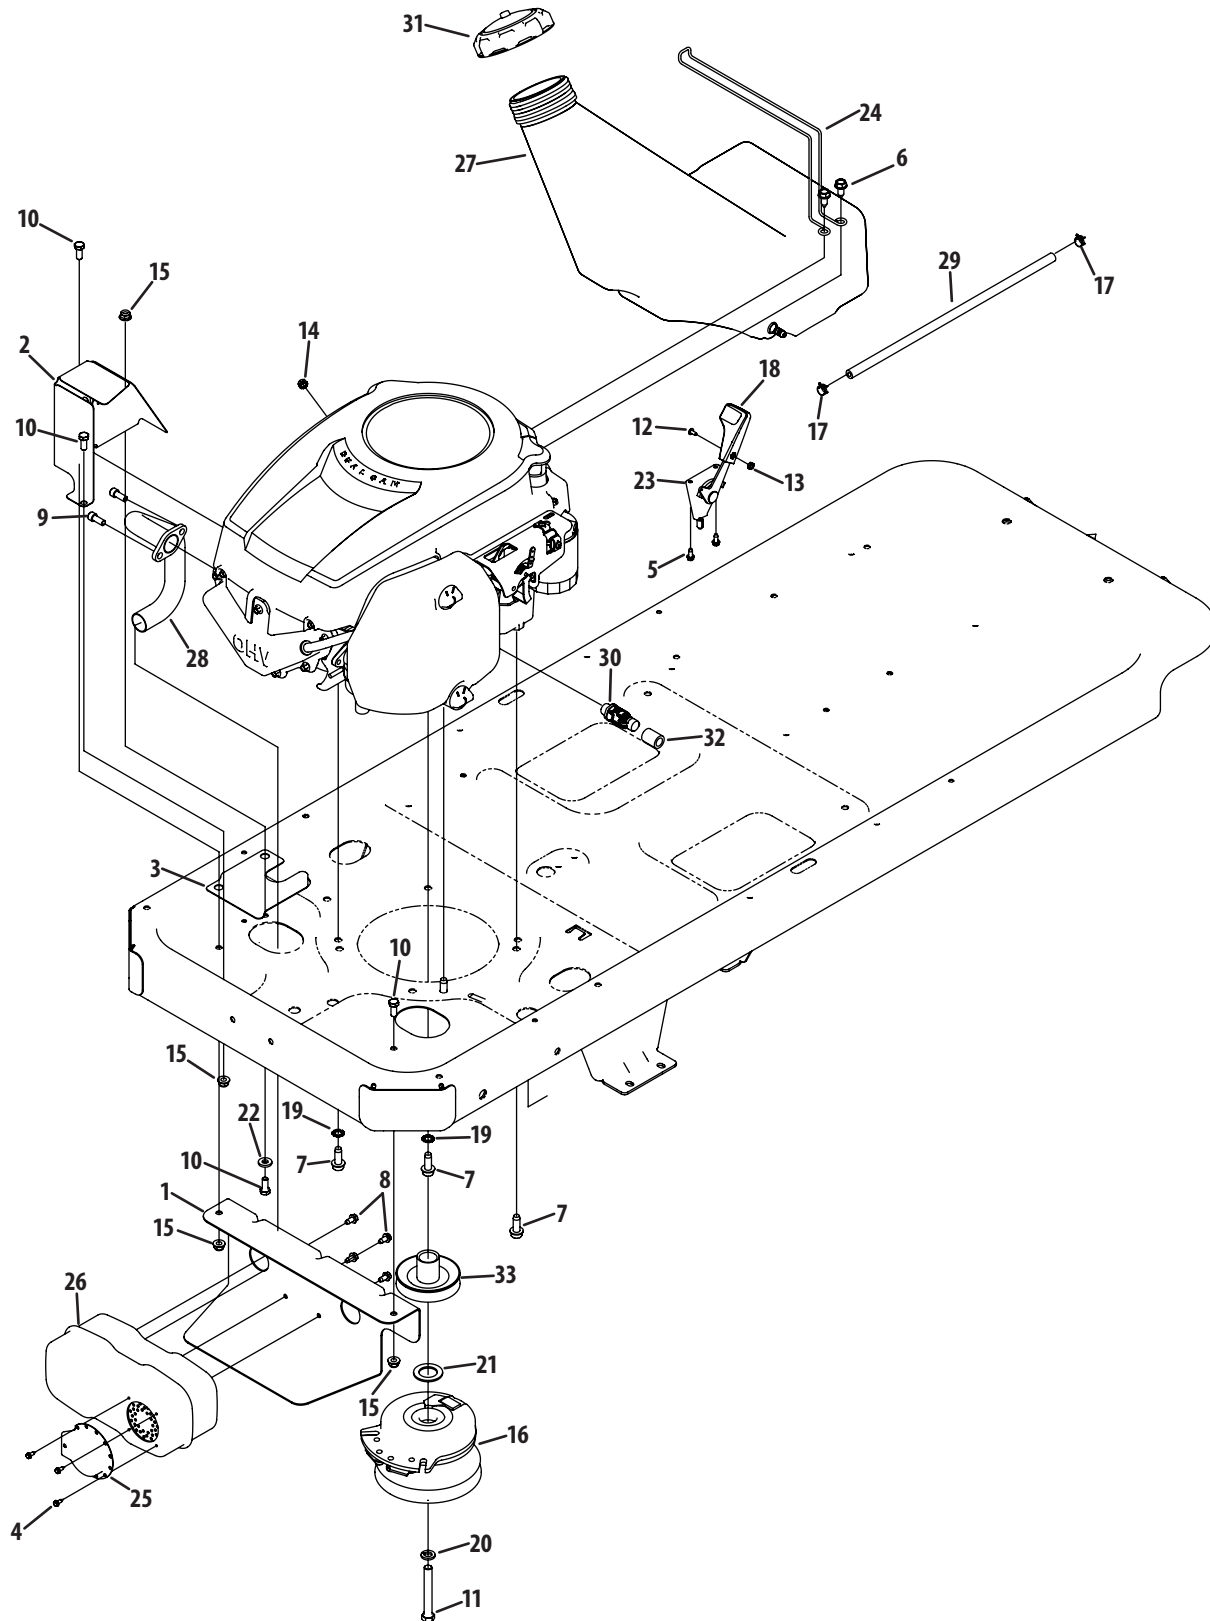

Engine Connection, 42" w/ Kohler Engine

Ref.	Part Number	Description
1	703-05441A	Muffler Bracket
2	703-05870	Muffler Heat Shield
3	703-07712A	Heat Shield
4	710-0227	Hex Washer Screw, #8-18 x .500
5	710-04261	Hex Washer Screw, #12-16 x .50
6	710-04484	Hex Washer Screw, 5/16-18 x .750
7	710-04683	Hex Washer Screw, 3/8-16 x 1.000
8	710-0599	Hex Washer Screw, 1/4-20 x .500
9	710-1314A	Socket Head Screw, 5/16-18 x .750
10	710-3008	Hex Screw, 5/16-18 x .75
11	710-3157A	Hex Screw, 7/16-20 x 3.25
12	710-3217	Machine Screw, #8-32 x .375
13	712-0142	Hex Nut, #8-32
14	712-0271	Sems Nut, 1/4-20
15	712-04063	Flange Lock Nut, 5/16-18
16	917-04376A	Electric PTO Clutch
17	726-0205	Hose Clamp. .490
18	731-04914	Throttle Contrl Knob
19	736-0148	Lock Washer, 3/8
20	936-0171	Lock Washer, 7/16
21	736-0277	Flat Washer, 1.031 x 1.620 x .095
22	936-3008	Flat Washer, .344 x .750 x .120
23	746-04161	Throttle/Choke Control Cable
24	747-04228A	Tank Wire
25	751-0564B	Muffler Deflector
26	751-0617C	Single Inlet Muffler
27	751-10057D	Fuel Tank
28	751-10251	Exhaust Pipe
29	751-10349	Low Permeation Fuel Hose
30	951-10517A	Oil Drain
31	951-3124E	Fuel Cap
32	751-3141-14	Oil Drain Extension Hose
33	756-04376	Electric PTO Engine Pulley


Engine Connection, 42" w/ Briggs Engine

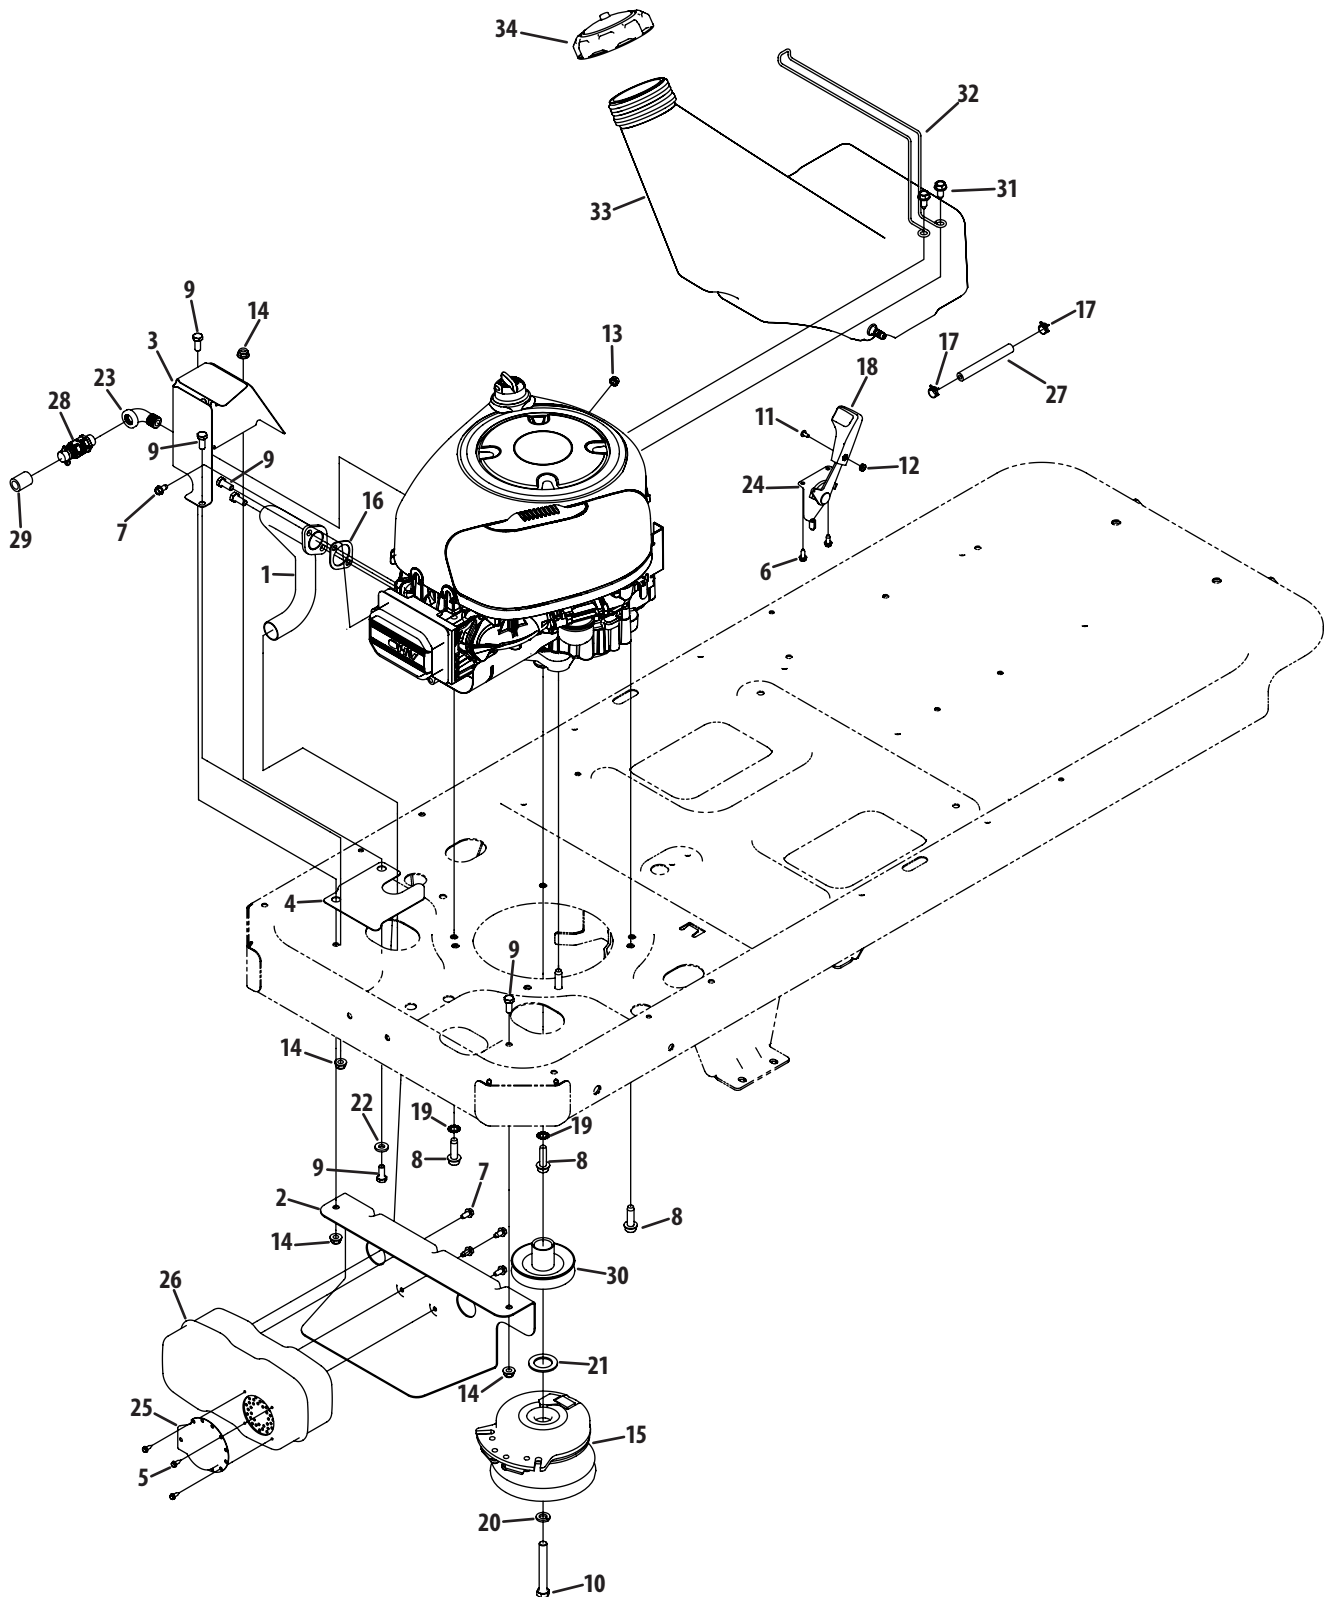

Engine Connection, 42" w/ Briggs Engine

Ref.	Part Number	Description
1	603-04176A	Exhaust Tube Assembly
2	703-05441A	Muffler Mount Bracket
3	703-05870	Muffler Heat Shield
4	703-07712A	Heat Shield
5	710-0227	Hex Washer Screw, #8-18 x .500
6	710-04261	Hex Washer Screw, #12-16 x .50
7	710-0599	Hex Washer Screw, ¼-20 x .500
8	710-1315	Hex Washer Screw, ⅜-16 x 1.250
9	710-3008	Hex Screw, ⅝-18 x .75
10	710-3157A	Hex Screw, 7/16-20 x 3.25
11	710-3217	Machine Screw, #8-32 x .375
12	712-0142	Hex Nut, #8-32
13	712-0271	Sems Nut, ¼-20
14	712-04063	Flange Lock Nut, ⅝-18
15	917-04376A	Electric PTO Clutch
16	BS-692236	Exhaust Gasket
17	726-0205	Hose Clamp, .490
18	731-04914	Throttle Control Knob
19	736-0148	Lock Washer, ⅜
20	936-0171	Lock Washer, 7/16
21	736-0277	Flat Washer, 1.031 x 1.620 x .095
22	936-3008	Flat Washer, .344 x .750 x .120
23	737-0125	Elbow Fitting, ⅜
24	746-04161	Throttle/Choke Control Cable
25	751-0564B	Muffler Deflector
26	751-0617C	Single Inlet Muffler
27	751-10349	Low Permeation Fuel Hose
28	951-10517A	Oil Drain
29	751-3141-14	Oil Drain Extension Hose
30	756-04376	Engine Pulley
31	710-04484	Hex Washer Screw, ⅝-18 x .750
32	747-04228A	Tank Wire
33	751-10057D	Fuel Tank
34	951-3124E	Fuel Cap

Engine Connection, 50" w/ Kohler Engine

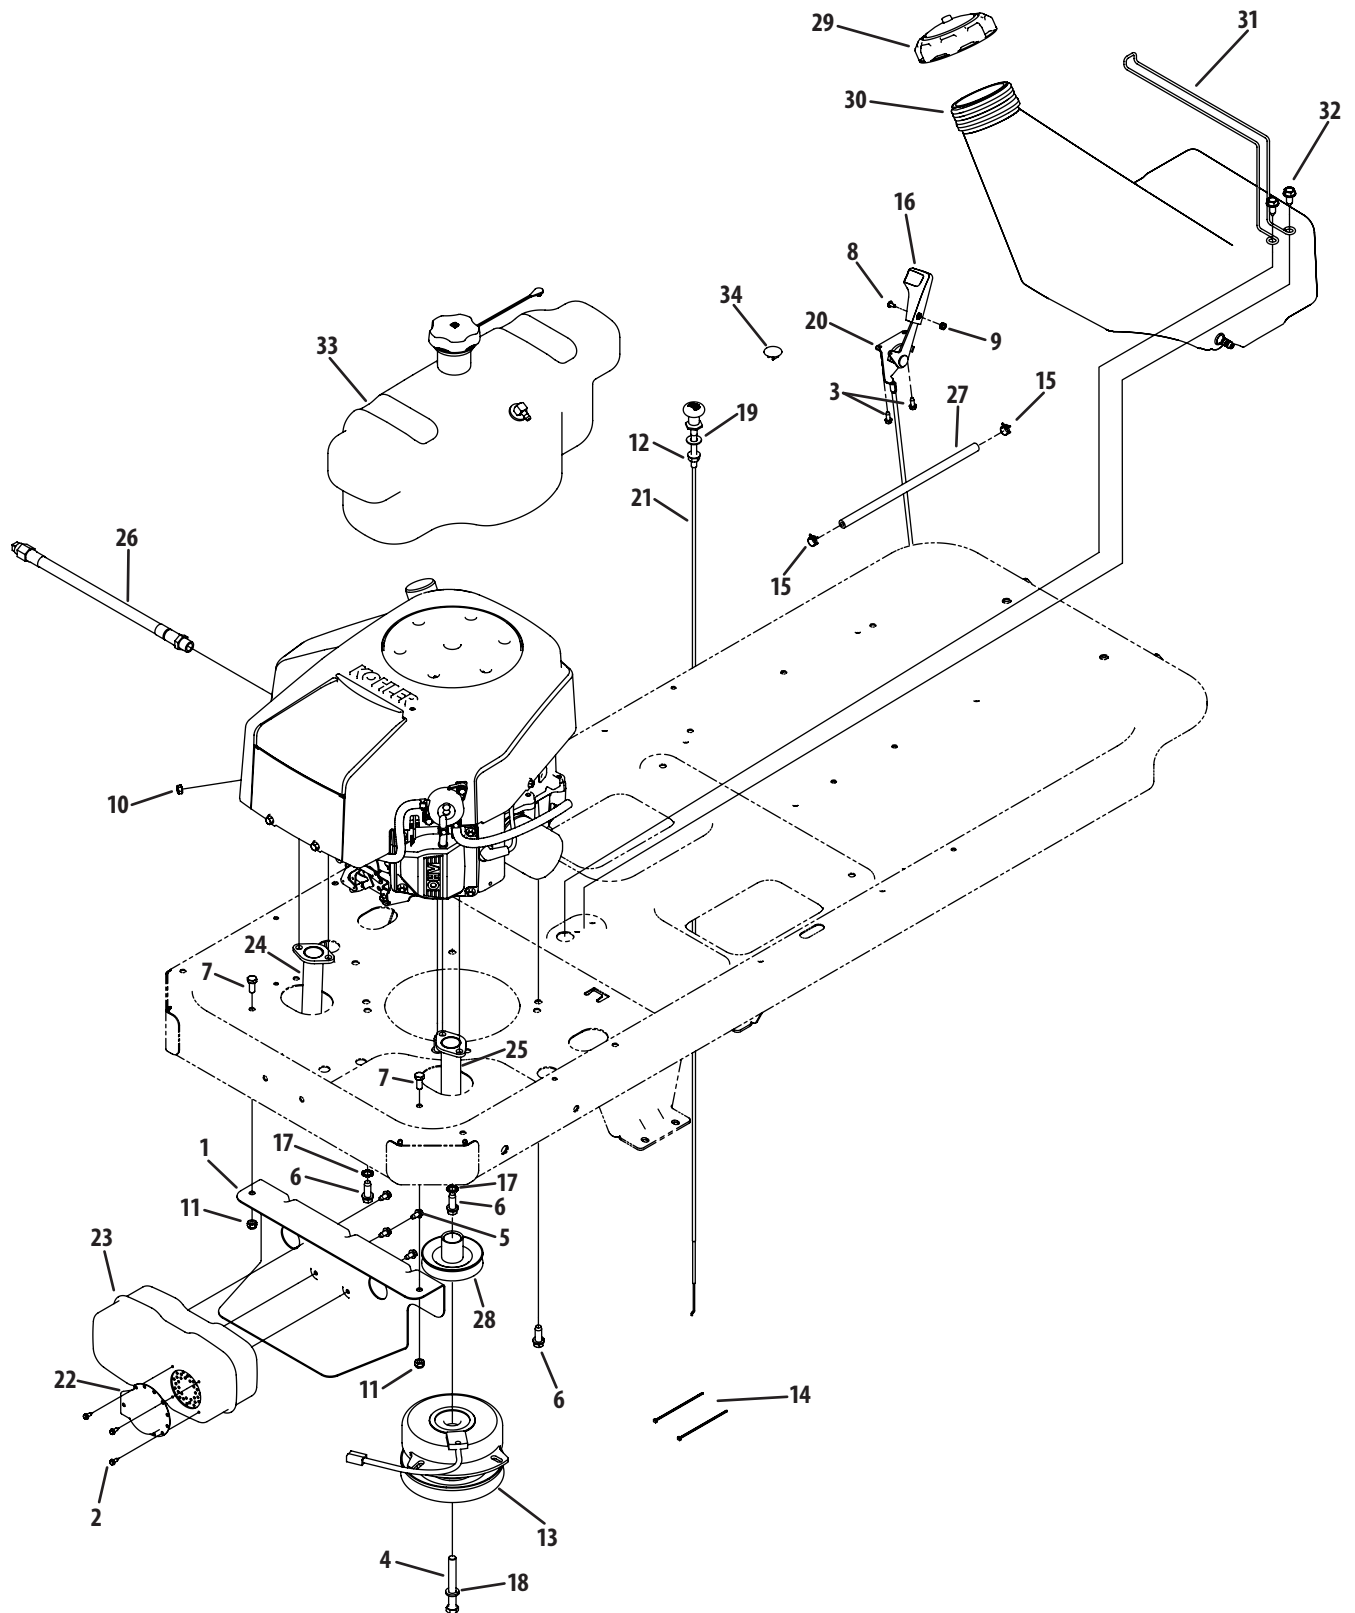


Engine Connection, 50" w/ Kohler Engine

Ref.	Part Number	Description
1	703-05441A	Muffler Mount Bracket
2	710-0227	Hex Washer Screw, #8-18 x .500
3	710-04261	Hex Washer Screw, #12-16 x .50
4	710-04379A	Hex Lock Screw, 7/16-20 x 3.50
5	710-0599	Hex Washer Screw, 1/4-20 x .500
6	710-04683	Hex Washer Screw, 3/8-16 x 1.000
7	710-3008	Hex Washer Screw, 5/16-18 x .75
8	710-3217	Machine Screw, #8-32 x .375
9	712-0142	Hex Nut, #8-32
10	712-0271	Sems Nut, 1/4-20
11	912-0429	Hex Lock Nut, 5/16-18
12	912-3005	Flange Lock Nut, 3/8-16 +
13	917-04552	Electric PTO Clutch
14	726-0197	Cable Tie
15	726-0205	Hose Clamp
16	731-04914	Throttle Control Knob
17	736-0148	Lock Washer, 3/8
18	936-0171	Lock Washer, 7/16
19	936-0300	Flat Washer, .406 x .875 x .059 +
20	746-04066	Throttle Cable +
—	746-04539	Throttle/Choke Control Cable *
21	946-04214	Choke Cable +
22	751-0564B	Muffler Deflector
23	751-0616B	Dual Inlet Muffler
24	751-10253	Exhaust Pipe, LH
25	751-10254	Exhaust Pipe, RH
26	751-10291	Oil Drain Hose
27	751-10349	Fuel Hose
28	756-04376	Engine Pulley
29	951-3124E	Fuel Cap *
30	751-10057D	Fuel Tank *
31	747-04228A	Tank Mounting Wire *
32	710-04484	Hex Washer Screw, 5/16-18 x .750 *
33	N/A	Fuel Tank Assembly +
—	935-0149	Fuel Tank Bushing +
—	751-10442	Fuel Pick-Up Fitting +
—	751-10692	Fuel Tank +
—	751-10703A	Fuel Cap +
34	731-1999	Choke Plug *

+ — Australian Models
 * — Domestic Models


Engine Connection, 50" w/ Kawasaki Engine

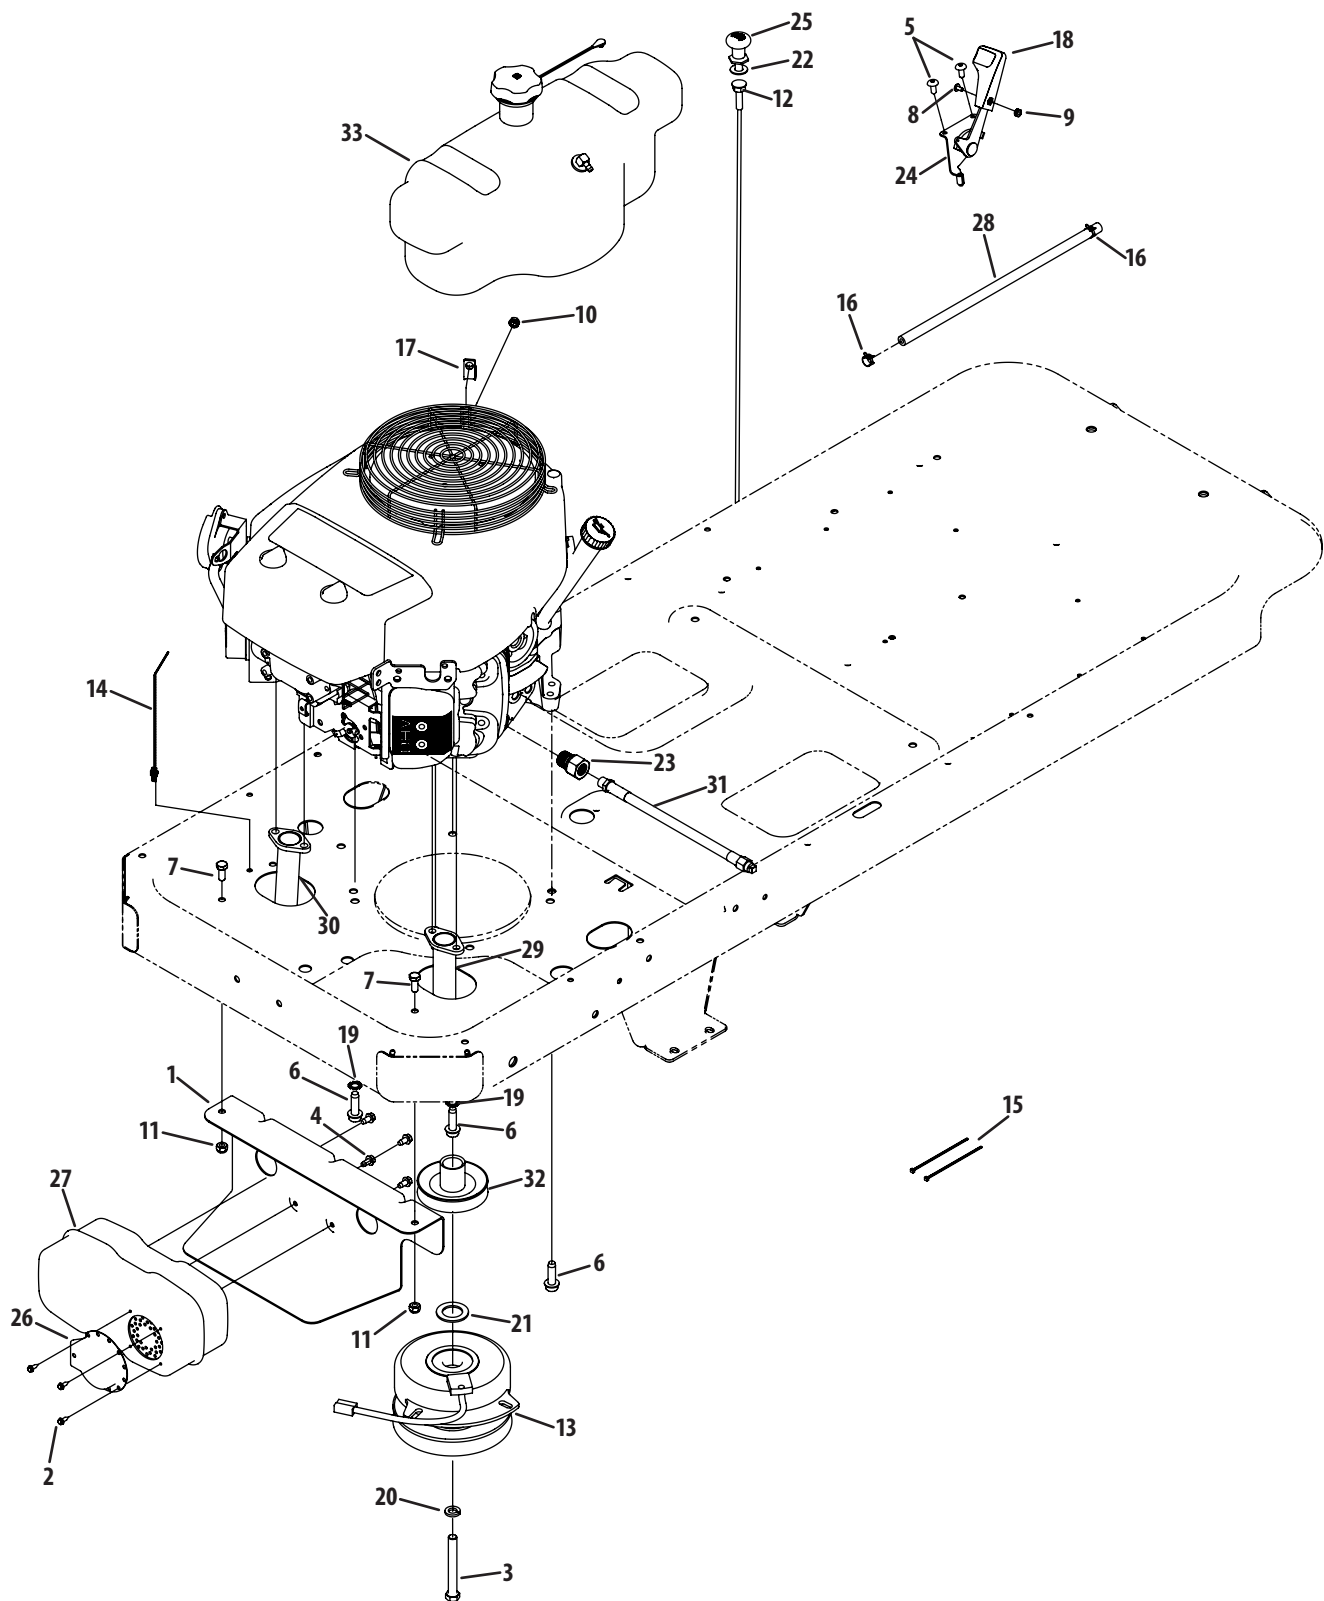

Engine Connection, 50" w/ Kawasaki Engine


Ref.	Part Number	Description
1	703-05441A	Muffler Mount Bracket
2	710-0227	Hex Washer Screw, #8-18 x .500
3	710-04379A	Hex Washer Screw, 7/16-20 x 3.50
4	710-0599	Hex Washer Screw, 1/4-20 x .500
5	710-1017	AB Screw, 1/4-14 x .625
6	710-1315	Hex Washer Screw, 3/8-16 x 1.250
7	710-3008	Hex Screw, 5/16-18 x .75
8	710-3217	Machine Screw, #8-32 x .375
9	712-0142	Hex Nut, #8-32
10	712-0271	Sems Nut, 1/4-20
11	912-0429	Hex Lock Nut, 5/16-18
12	912-3005	Flange Lock Nut, 3/8-16
13	917-04552	Electric PTO Clutch
14	926-0154	Cable Tie, 7.5
15	726-0197	Cable Tie
16	726-0205	Hose Clamp, .490
17	726-0272	Clamp, 1/16
18	731-04914	Throttle Control Knob
19	736-0148	Lock Washer, 3/8
20	936-0171	Lock Washer, 7/16
21	736-0277	Flat Washer, 1.031 x 1.620 x .095
22	936-0300	Flat Washer, .406 x .875 x .059
23	737-04138	Fitting, 1.0
24	946-04581	Throttle Cable
25	946-04214	Choke Cable
26	751-0564B	Muffler Deflector
27	751-0616B	Dual Inlet Muffler
28	751-10349	Fuel Hose
29	751-10770	RH Exhaust Pipe
30	751-10771	LH Exhaust Pipe
31	751-10291	Oil Drain Hose
32	756-04376	Engine Pulley
33	N/A	Fuel Tank Assembly
—	935-0149	Fuel Tank Bushing
—	751-10442	Fuel Pick-Up Fitting
—	751-10692	Fuel Tank
—	751-10703A	Fuel Cap

Engine Connection, 54"

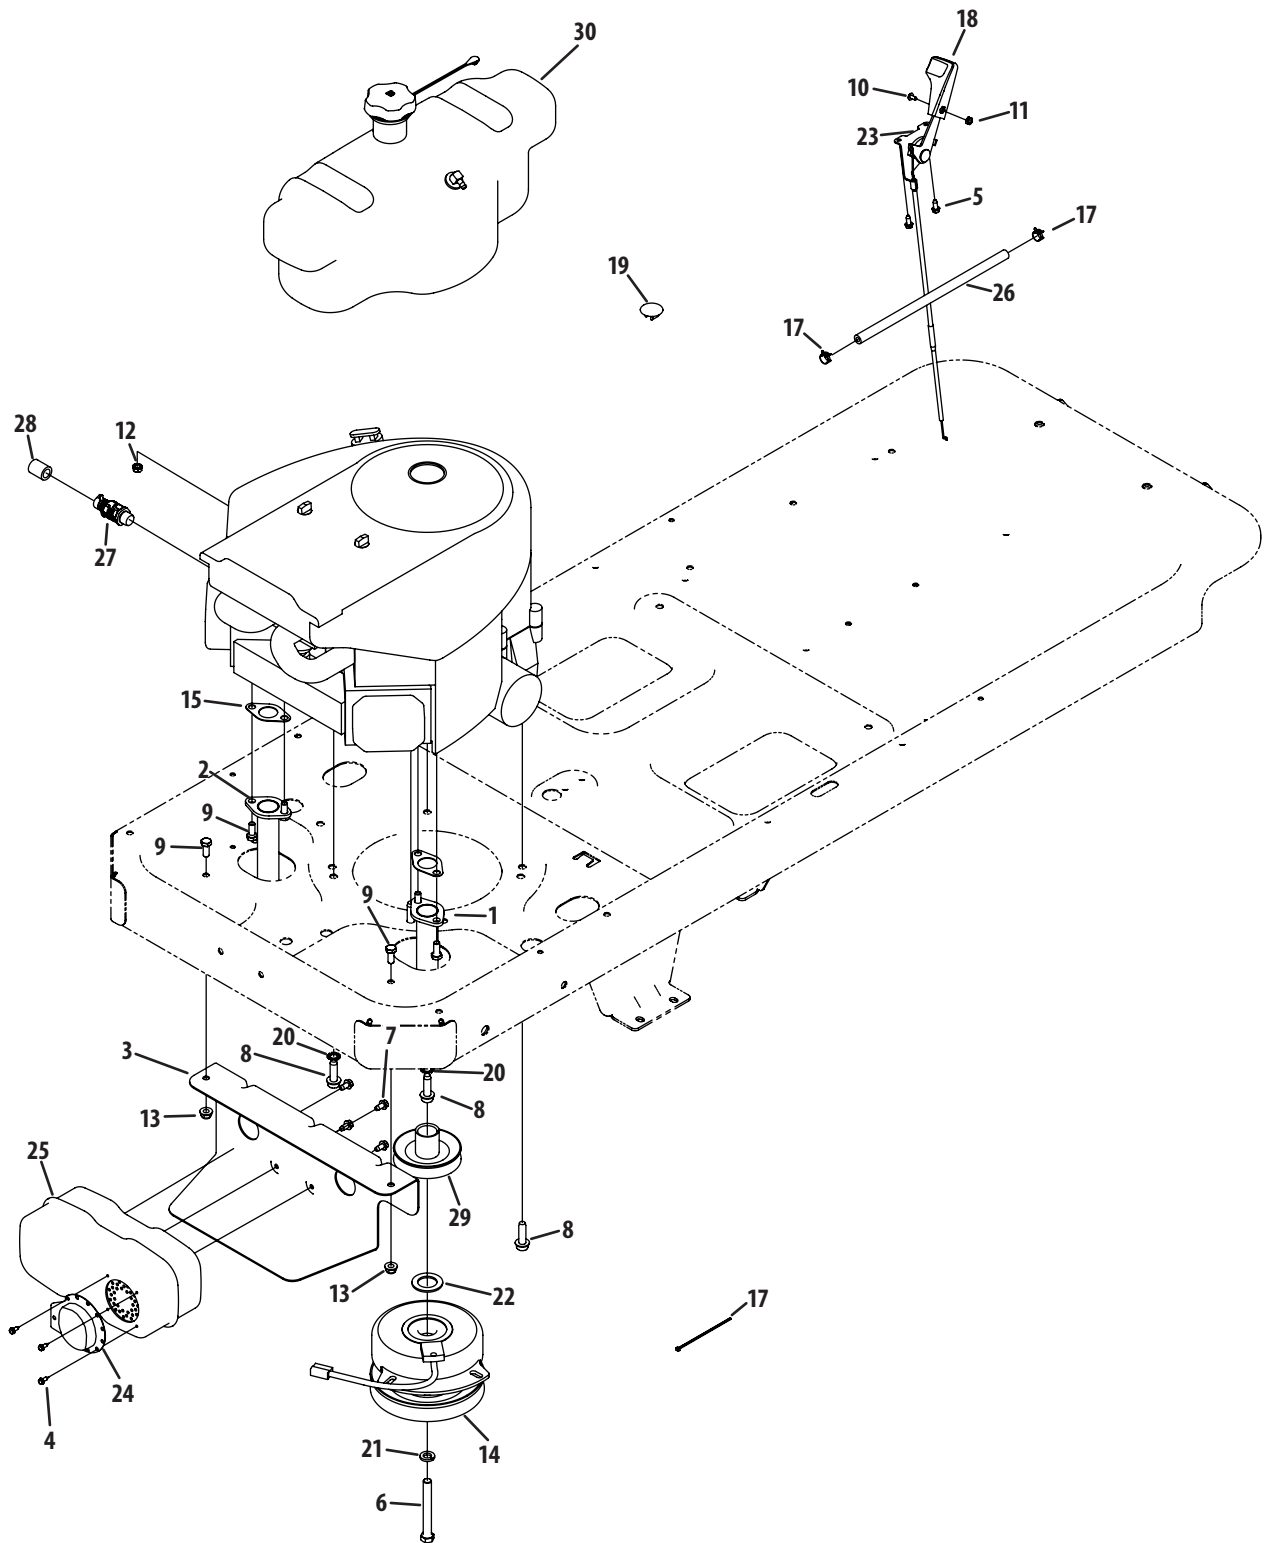

Ref.	Part Number	Description
1	603-04162	RH Exhaust Tube
2	603-04163	LH Exhaust Tube
3	703-05441A	Muffler Mount Bracket
4	710-0227	Hex Washer Screw, #8-18 x .500
5	710-04261	Hex Washer Screw, #12-16 x .50
6	710-04379A	Hex Lock Screw, 7/16-20 x 3.50
7	710-0599	Hex Washer Screw, 1/4-20 x .500
8	710-04683	Hex Washer Screw, 3/8-16 x 1.000
9	710-3008	Hex Screw, 5/16-18 x .75
10	710-3217	Machine Screw, #8-32 x .375
11	712-0142	Hex Nut, #8-32
12	712-0271	Sems Nut, 1/4-20
13	712-04063	Flange Lock Nut, 5/16-18
14	917-1774C	Electric PTO Clutch
15	721-0460	Exhaust Gasket
16	726-0197	Cable Tie
17	726-0205	Hose Clamp
18	731-04914	Throttle Control Knob
19	731-1999	Choke Plug
20	736-0148	Lock Washer, 3/8
21	936-0171	Lock Washer, 7/16
22	736-0277	Flat Washer, 1.031 x 1.620 x .095
23	746-04539	Throttle/Choke Control Cable
24	751-0564B	Muffler Deflector
25	751-0616B	Dual Inlet Muffler
26	751-10349	Fuel Hose
27	951-10517A	Oil Drain
28	751-3141-14	Oil Drain Extension Hose
29	756-04376	Electric PTO Pulley
30	N/A	Fuel Tank Assembly
—	935-0149	Fuel Tank Bushing
—	751-10442	Fuel Pick-Up Fitting
—	751-10692	Fuel Tank
—	751-10703A	Fuel Cap

Deck Lift & Controls, 42 & 50" Decks

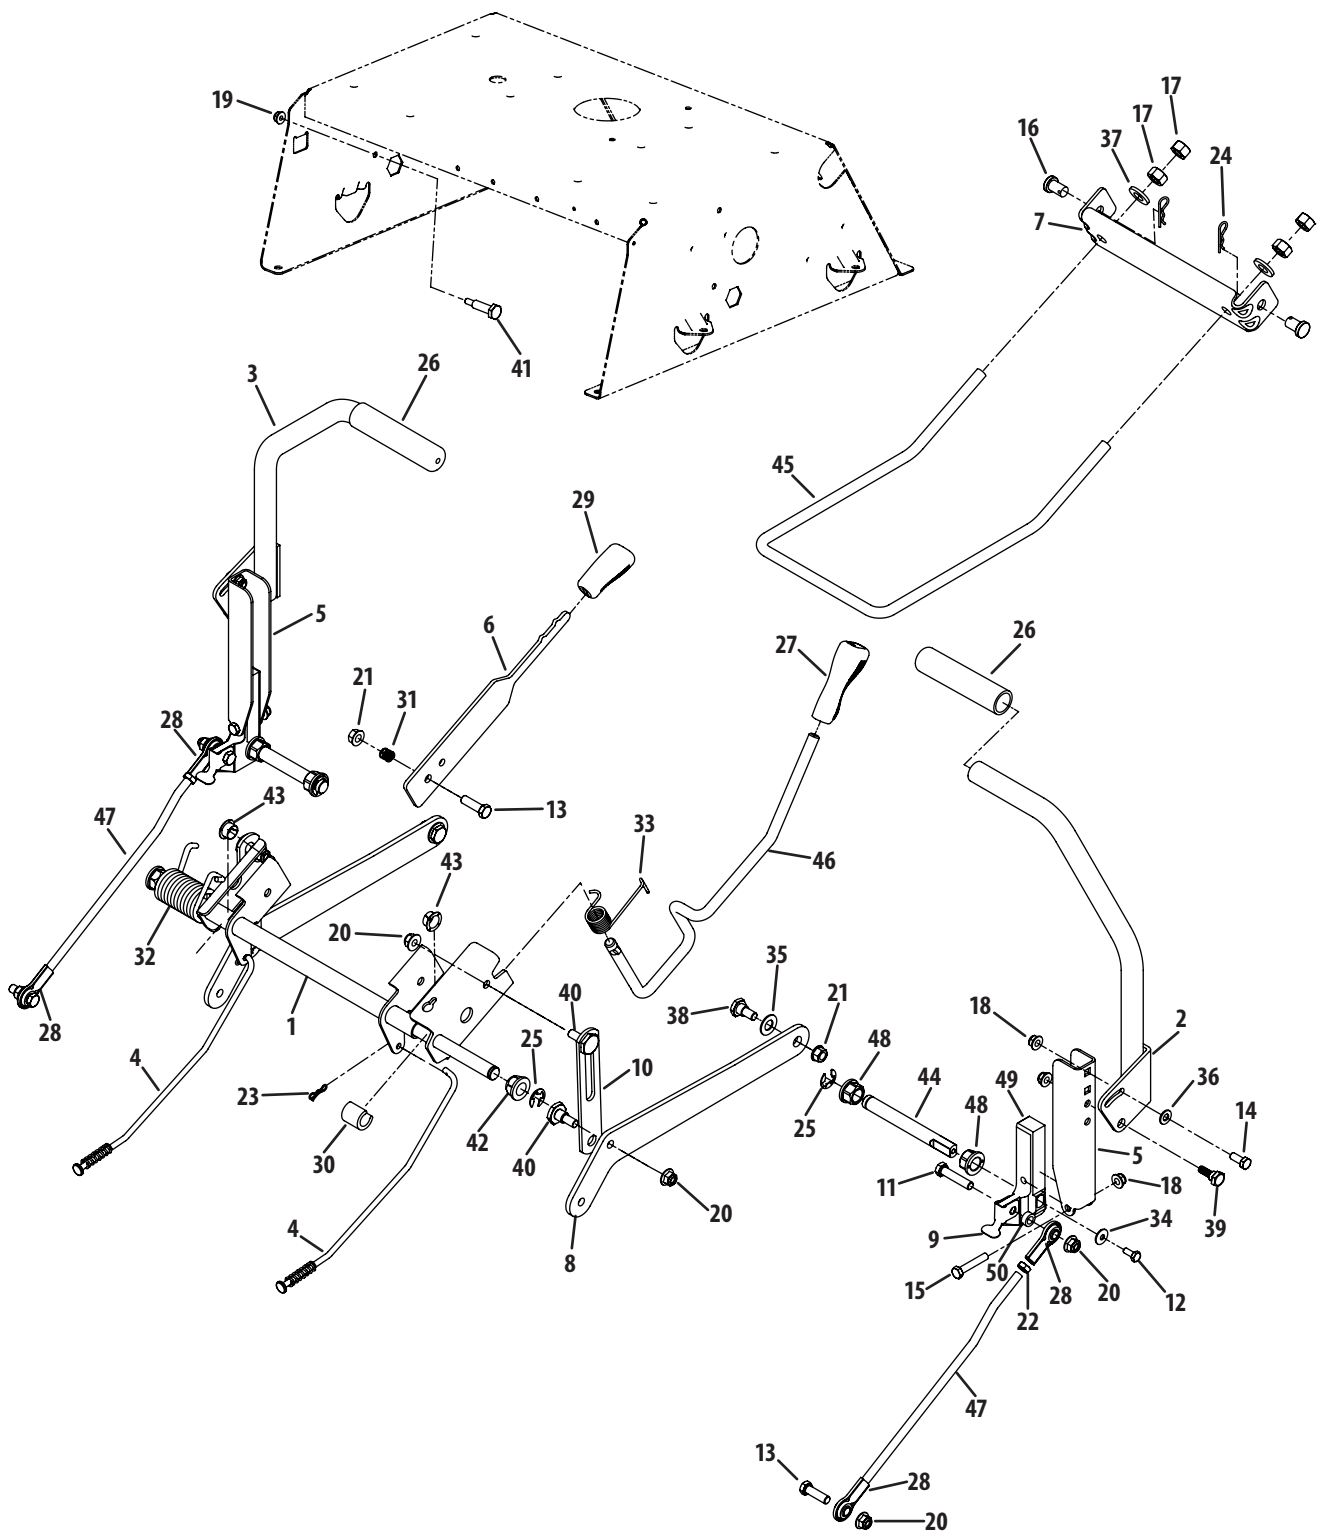


Deck Lift & Controls, 42 & 50" Decks

Ref.	Part Number	Description
1	603-04160B	Deck Lift Shift Assembly
2	603-04322	RH Lapbar Lever Assembly
3	603-04324	LH Labpar Lever Assembly
4	947-04065	Brake Rod Assembly
5	703-05387B	Lapbar Pivot Bracket
6	703-05396A	Brake/Shabs Assembly
7	703-05414A	Front Deck Hanger Bracket
8	703-05793A	Deck Lift Arm Plate
9	703-06096A	Switch Actuator Bracket
10	703-06169	Lift Link Plate
11	710-0347	Hex Screw, 3/8-16 x 1.75
12	710-0433	Hex Screw, 1/4-20 x .625
13	710-3005	Hex Screw, 3/8-16 x 1.25
14	710-3008	Hex Screw, 5/16-18 x .75
15	710-3180	Hex Screw, 5/16-18 x 1.75
16	911-0332	Clevis Pin, .50 x .78
17	712-04243	Flex Lock Nut, 1/2-13
18	712-04063	Flange Lock Nut, 5/16-18
19	712-04064	Flange Lock Nut, 1/4-20 (50" Deck)
20	712-04065	Flange Lock Nut, 3/8-16
21	912-0431	Flange Lock Nut, 3/8-16
22	912-3001	Jam Nut, 3/8
23	714-04040	Bow-Tie Cotter Pin
24	914-04023	Cotter Pin, .080 x 1.5625
25	716-0106	E-Ring

Ref.	Part Number	Description
26	720-0274	Grip, 1.0 x 5.0
27	720-0311	Handle Grip, 1/2
28	723-04035	Rod End
29	731-04735	Selector Handle
30	731-05732	Spacer, .621 x 1.00
31	932-0334	Compression Spring, .50 x .50
32	732-04420	Torsion Spring, 1.191 x 2.78
33	732-0874	Torsion Spring
34	736-0270	Bell Washer, .265 x .75 x .062
35	936-0272	Flat Washer, .510 x 1.00 x .060
36	936-0275	Flat Washer, .344 x .688 x .065
37	736-3019	Flat Washer, .531 x .062 x .134
38	738-0143	Shoulder Bolt, 3/8-16 x .496 x .336
39	938-0296	Shoulder Screw, 5/16 x .437 x .268
40	938-0507B	Shoulder Screw, .500 x .434
41	938-0572	Shldr. Screw, .374 x 1.16 (50" Deck)
42	941-0225	Hex Flange Bearing
43	741-3074	Flange Bearing, .626 x .938 x .344
44	747-04226A	Shaft Control
45	747-04401A	Front Hanger Deck Lift Rod
46	747-04637	Deck Lift Handle Rod
47	747-05057	Lapbar Control Rod
48	948-0227A	Hex Flange Bearing, .629
49	748-04169A	Control Hub
50	750-04776	Spacer, .380 x .625 x .265

Deck Lift & Controls, 54" Decks

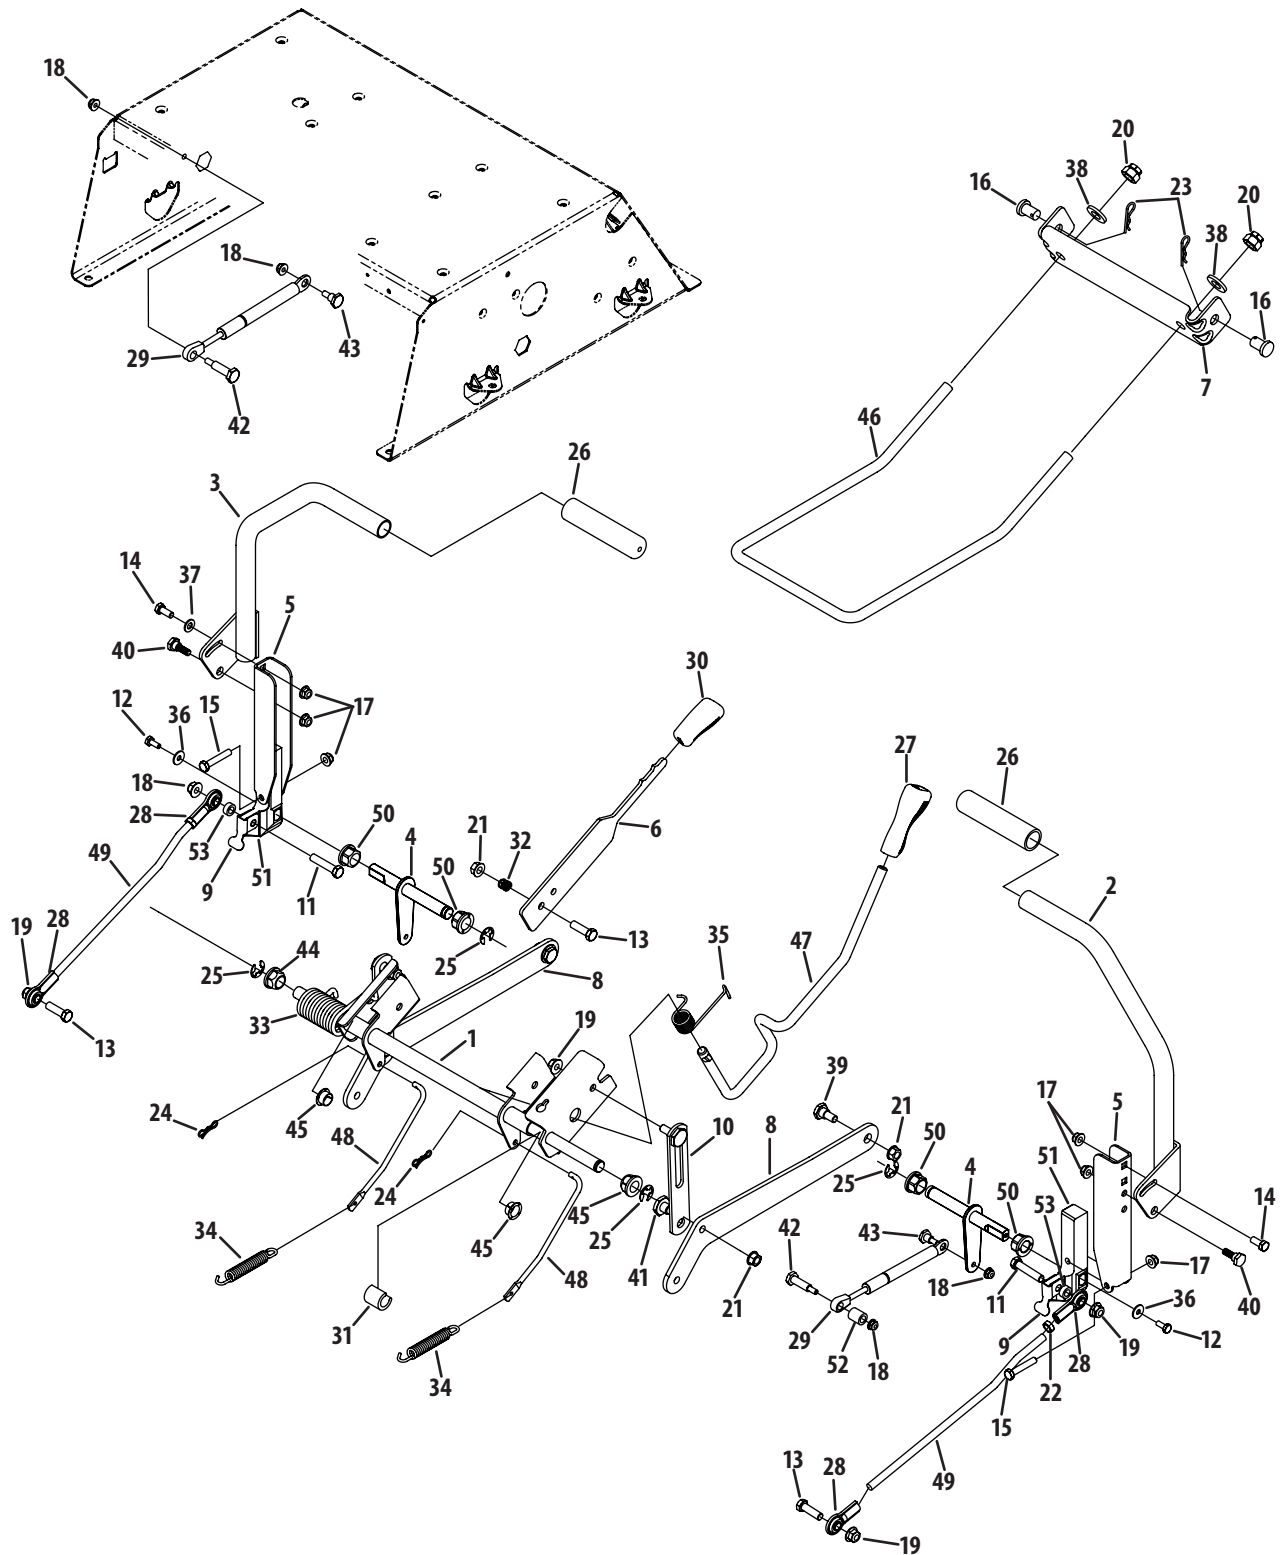


Deck Lift & Controls, 54" Decks


Ref.	Part Number	Description
1	603-04160B	Deck Lift Shaft Assembly
2	603-04322	RH Lapbar Lever Assembly
3	603-04324	LH Lapbar Lever Assembly
4	647-04099A	Damper Shaft Control Assembly
5	703-05387B	Lapbar Pivot Bracket
6	703-05396A	Brake/Shabs Handle
7	703-05414A	Front Deck Hanger Bracket
8	703-05793A	Deck Lift Arm Plate
9	703-06096A	Actuator Switch Bracket
10	703-06169	Link Lift Plate
11	710-0347	Hex Screw, 3/8-16 x 1.75
12	710-0433	Hex Lock Screw, 1/4-20 x .625
13	710-3005	Hex Screw, 3/8-16 x 1.25
14	710-3008	Hex Screw, 5/16-18 x .75
15	710-3180	Hex Screw, 5/16-18 x 1.75
16	711-0332	Clevis Pin, .50 x .78
17	712-04063	Flange Lock Nut, 5/16-18
18	712-04064	Flange Lock Nut, 1/4-20
19	712-04065	Flange Lock Nut, 3/8-16
20	712-04243	Flex Lock Nut, 1/2-13
21	912-0431	Flange Lock Nut, 3/8-16
22	912-3001	Jam Nut, 3/8-24
23	914-04023	Internal Cotter Pin, .080 x 1.5625
24	714-04040	Bow-Tie Cotter Pin
25	716-0106	E-Ring, .625
26	720-0274	Grip, 1.0 x 5.0
27	720-0311	Handle Grip, 1/2

Ref.	Part Number	Description
28	723-04035	B/Joint Rode End, .375
29	727-04141	Damper Cylinder, .59 x 7.84
30	731-04735	Selector Handle
31	731-05732	Spacer, .62 x 1.00
32	932-0334	Compression Spring, .50 x .50
33	732-04420	Torsion Spring, 1.19 x 2.78
34	732-04432	Extension Spring, .59 x 4.00
35	732-0874	Torsion Spring
36	736-0270	Bell Washer, .265 x .75 x .062
37	936-0275	Flat Washer, .344 x .688 x .065
38	736-3019	Flat Washer, .531 x 1.062 x .134
39	738-0143	Shoulder Bolt, 3/8-16 x .496 x .336
40	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
41	938-0507B	Shoulder Screw, .500 x .434
42	938-0572	Shoulder Screw, .374 x 1.16
43	938-0974	Shoulder Screw, 1/4-20 x .375 x .380
44	941-0225	Hex Flange Bearing
45	741-3074	Flange Bearing, .626 x .938 x .344
46	747-04401A	Deck Lift Frong Hanger Rod
47	747-04637	Deck Lift Handle Rod
48	747-04651	Brake Rod
49	747-05057	Lapbar Rod Control
50	948-0227A	Hex Flange Bearing, .629
51	748-04169A	PM Control Hub
52	750-04676	Spacer, .385 x .630 x .75LG
53	750-04776	Spacer, .380 x .625 x .255

Front Axle, 42" Decks

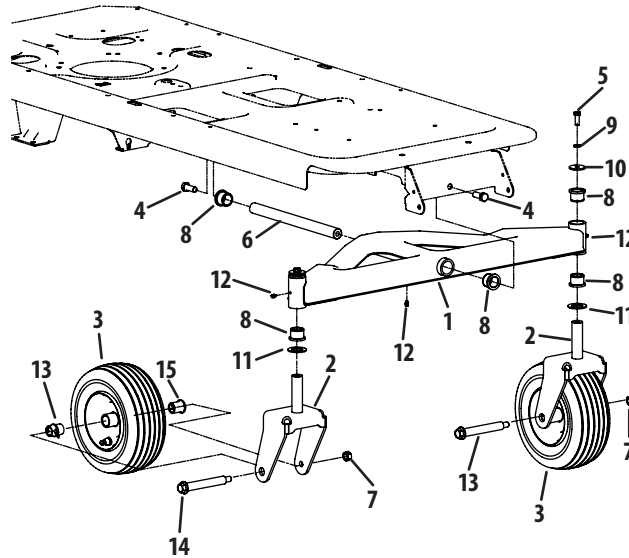


Ref.	Part Number	Description
1	603-04148C	Front Pivot Axle
2	603-04308	Castor Wheel Bracket
3	634-04237B	Wheel Assembly, 11.0 x 4.0 x 5.0
4	710-04186	Hex Lock Screw, 1/2-13 x 1.25
5	710-0514	Hex Cap Screw, 3/8-16 x 1.0
6	911-04228	Axle Shaft
7	712-3022	Hex Lock Nut, 1/2-13
8	731-05500	Flange Bearing, 1.0 x 1.246
9	936-0169	Lock Washer, 3/8
10	936-0227	Flat Washer, .39 x 1.5 x .134
11	736-0250	Flat Washer, 1.0 x 1.75 x .107
12	937-3000	Lube Fitting, 3/16 Drive
13	738-04182A	Shoulder Screw, .75 x 4.75 x 7/16-14
14	741-0516B	Flange Bearing, .76 x 1.0 x 1.2
15	741-0990B	Flange Bearing, .76 ID w/ Lube Ftg.

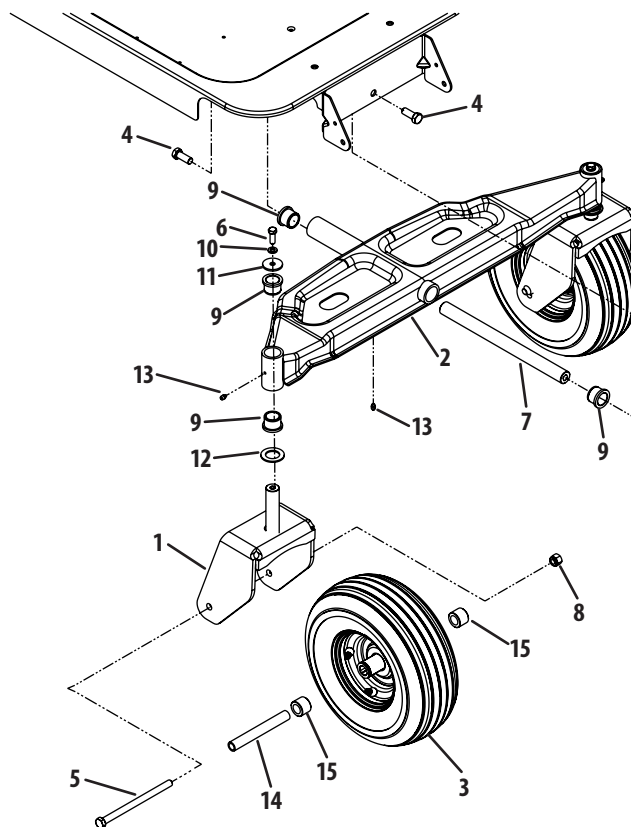

Ref.	Part Number	Description
1	603-04370	Castor Wheel Bracket
2	603-04385A	Front Pivot Axle
3	634-04321A	Wheel Assembly, 13 x 5-6
4	710-04186	Hex Lock Screw, 1/2-13 x 1.25
5	710-04652	Hex Cap Screw, 1/2-20 x 7.25
6	710-0514	Hex Cap Screw, 3/8-16 x 1.0
7	911-04228	Axle Shaft
8	912-3058	Hex Insert Lock Nut, 1/2-13
9	731-05500	Flange Bearing, 1.0 x 1.246
10	936-0169	Lock Washer, 3/8
11	936-0227	Flat Washer, .39 x 1.5 x .134
12	736-0250	Flat Washer, 1.0 x 1.75 x .10
13	937-3000	Lube Fitting, 3/16 Drive
14	750-04775A	Spacer, .51 x .75 x 5.825
15	750-04792	Hub, .76 x 1.23 x .92


Rear Drive & Wheels, 42" & 50" Decks

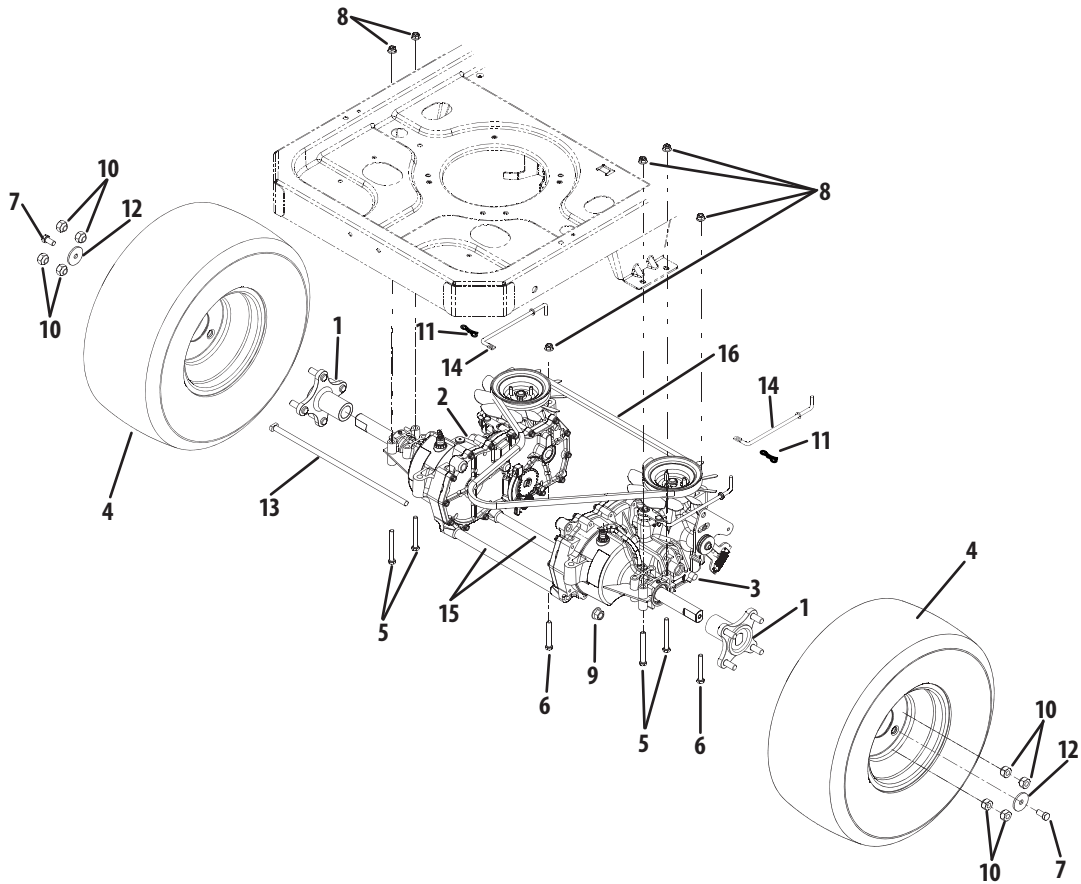


Ref.	Part Number	Description
1	918-04317	Wheel Hub, 7/16-14 x 1.6
2	918-04431A	Transmission Assembly, LH
3	918-04432A	Transmission Assembly, RH
4	634-04293	Wheel Assembly, 18 x 8.5-8 (42" Deck)
—	634-04128	Wheel Assembly, 18 x 9.5-8 (50" Deck)
5	710-0176	Hex Cap Screw, 5/16-18 x 2.75
6	710-0395	Hex Cap Screw, 5/16-18 x 2.25
7	710-3119	Hex Cap Screw, 3/8-16 x .75
8	712-04063	Hex Flange Nut, 5/16-18

Ref.	Part Number	Description
9	712-0459	Hex Flange Nut, 7/16-20
10	712-3050	Lug Nut, 7/16-14
11	714-04040	Bow-Tie Cotter Pin
12	936-0227	Flat Washer, .39 x 1.5 .134
13	738-04192	Rod, .405 x 14.0
14	747-04217C	Bypass Rod
15	750-04561	Tube, .45 x .69 x 10.2
16	954-04043A	V-Belt

25

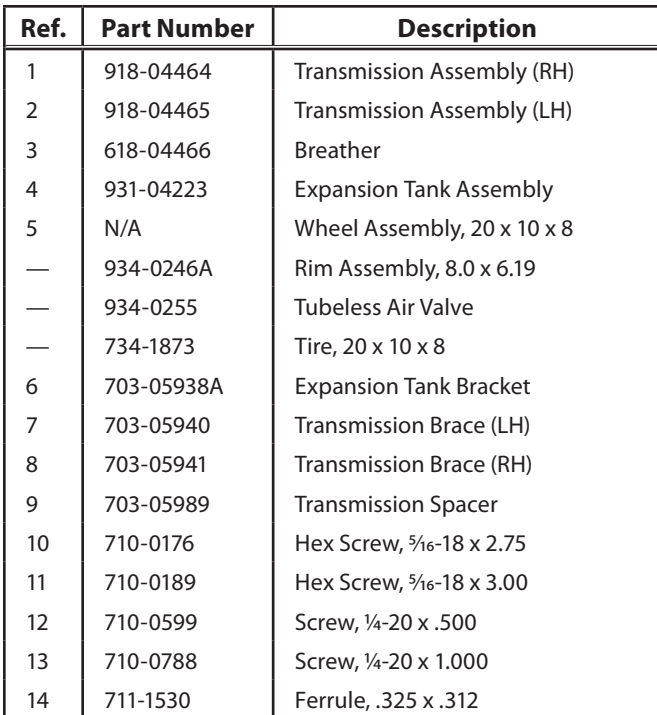25


42" Mower Deck

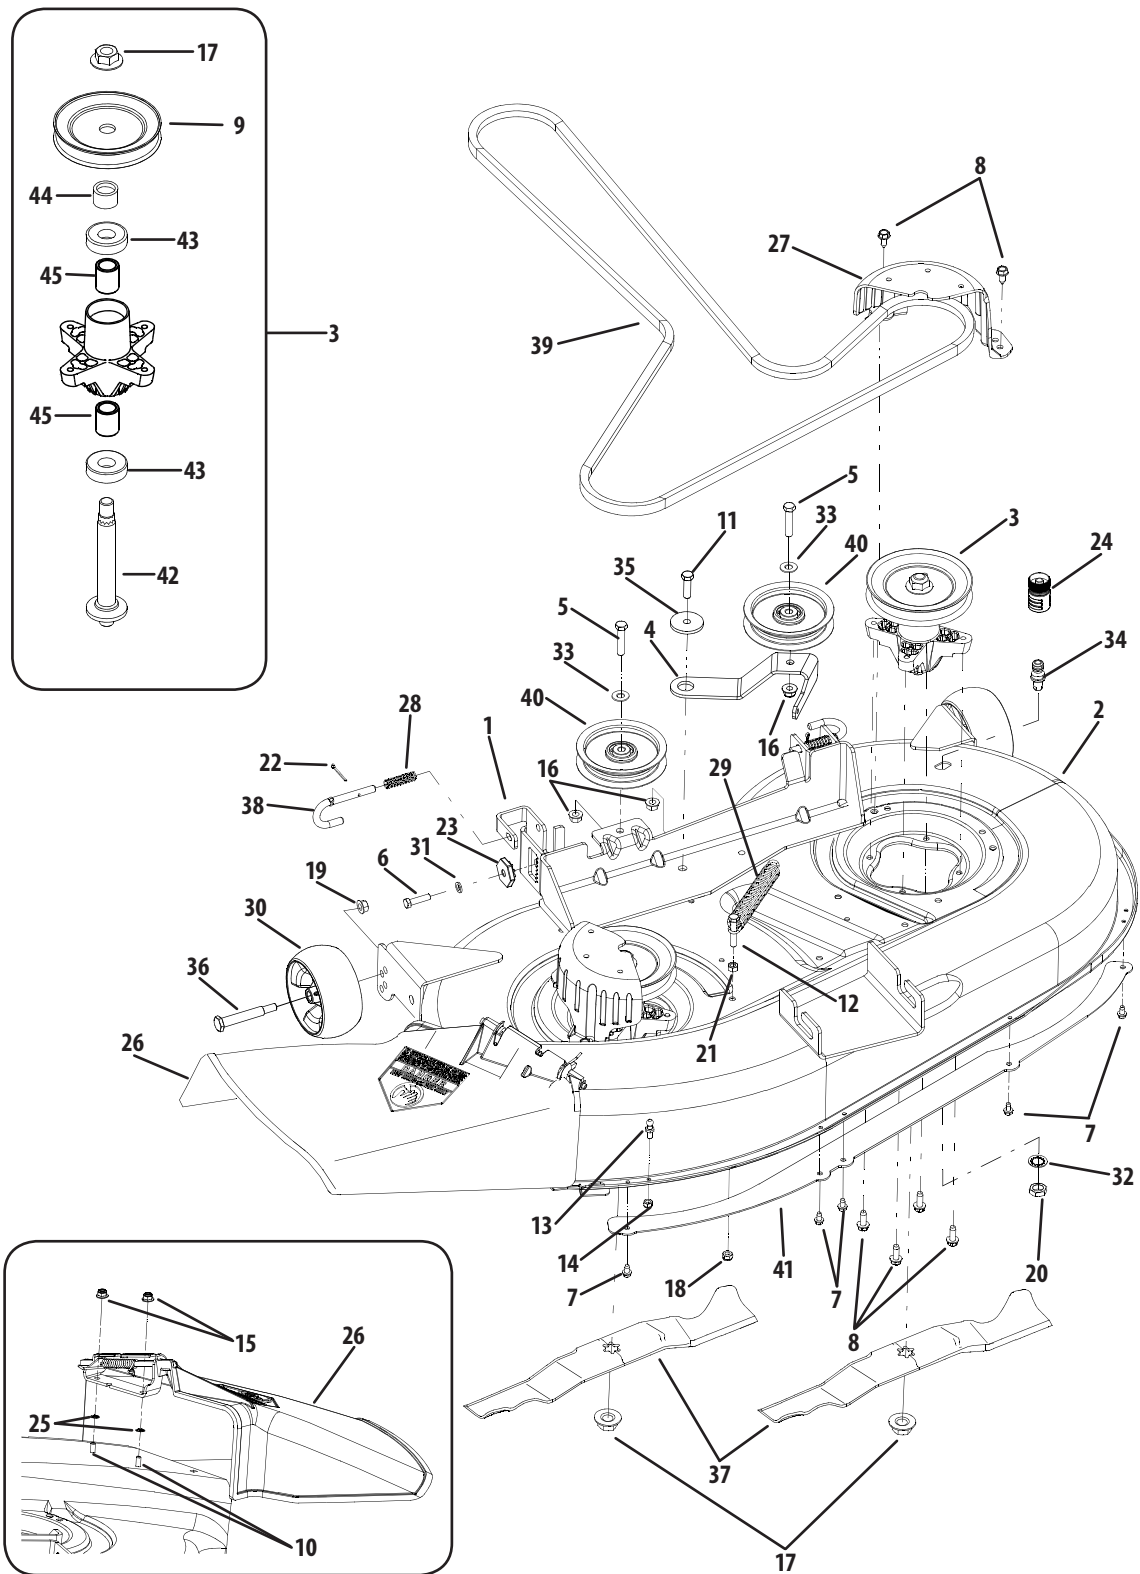

Ref.	Part Number	Description
1.	603-04156	Deck Lift Bracket
2.	903-04335C	Deck Housing
3.	918-0624A	Spindle Assembly
4.	703-05824C	Idler Arm
5.	710-0347	Hex Cap Screw, 3/8-16 x 1.75
6.	710-0528	Hex Cap Screw, 5/16-18 x 1.25
7.	710-0599	Hex Washer Head Screw, 1/4-20 x .5
8.	710-04484	Hex Washer Head Screw, 5/16-18 x .750
9.	756-04129B	Idler Pulley
10.	710-0751	Hex Cap Screw, 1/4-20 x .62
11.	710-3005	Hex Cap Screw, 3/8-16 x 1.25
12.	710-3180	Hex Cap Screw, 5/16-18 x 1.75
13.	911-04069	Grass Catcher Pin, 1/4-20
14.	712-0324	Hex Insert Lock Nut, 1/4-20
15.	712-04064	Hex Insert Flange Lock Nut, 1/4-20
16.	712-04065	Hex Insert Flange Lock Nut, 3/8-16
17.	712-0417A	Hex Flange Nut, 5/8-18
18.	912-0429	Hex Insert Lock, 5/16-18
19.	912-0431	Hex Flange Lock Nut, 3/8-16
20.	912-0641	Hex Nut, M16-1.5
21.	912-3010	Hex Nut, 5/16-18
22.	914-0470	Cotter Pin, 1/8 x 1.25
23.	917-04074	Deck Adjustment Gear

Ref.	Part Number	Description
24.	921-04041	Water Nozzle Adapter
25.	726-0233	Push Nut, .25 x .5
26.	931-1032B	Discharge Chute Assembly
27.	731-2231B	Belt Cover
28.	732-04652	Compression Spring, .535 x 1.751
29.	732-04609	Extension Spring, .94 Dia. x 6.74
30.	734-04155	Deck Ball Wheel, 5.0
31.	936-0119	Lock Washer, 5/16
32.	736-0225	Lock Washer
33.	736-3072	Flat Washer, .38 x .93 x .11
34.	737-04003D	Deck Water Nozzle
35.	738-04162A	Shoulder Spacer, .884 x .19
36.	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
37.	942-0616A	Blade, 3 in 1, 21.23
38.	747-1116	Deck Hanger Rod
39.	954-04137A	V-Belt
40.	756-04129B	Idler Pulley, 4.25 Dia
41.	753-0884	Deck Skirt
42.	738-1010A	Spindle Shaft, 5.75
43.	941-0919	Ball Bearing
44.	748-0433	Spacer, .820 x 1.15 x .73
45.	750-1000	Spacer, .8 x 1.10 x 1.322


50" Mower Deck

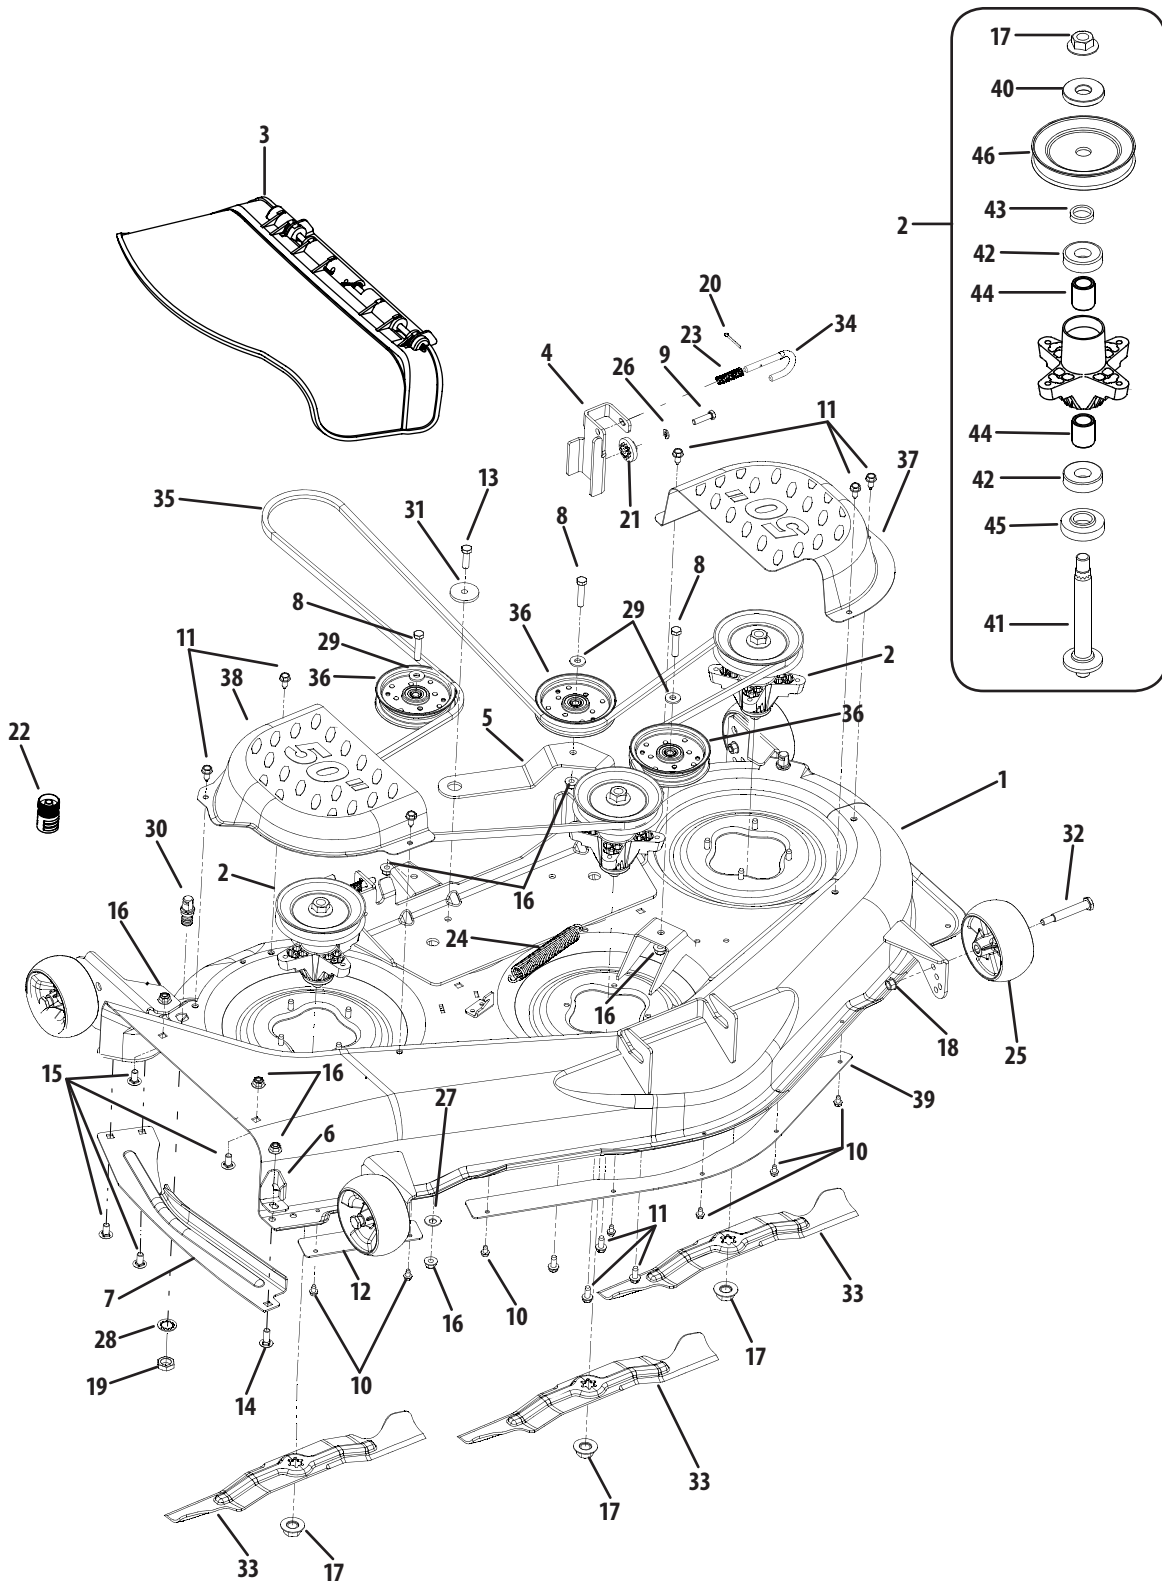

Ref.	Part Number	Description
1	903-04328A	Deck Housing
2	918-04125B	Spindle Assembly
3	631-04070A	Discharge Chute Assembly (U.S.)
—	631-04092B	Discharge Chute Assembly (Aus.)
4	683-0254B	Deck Hanger Bracket
5	703-05825B	Idler Arm
6	703-3279	Stop Bracket
7	703-3511A	Finger Guard
8	710-0347	Hex Cap Screw, 3/8-16 x 1.75
9	710-0528	Hex Cap Screw, 5/16-18 x 1.25
10	710-0599	Hex Washer Head Screw, 1/4-20 x .5
11	710-04484	Hex Washer Head Screw, 5/16-18 x .750
12	783-04415	RH Skirt
13	710-3005	Hex Cap Screw, 3/8-16 x 1.25
14	710-04095	Hex Screw, 3/8-16 x 1.00
15	710-3178	Carriage Screw, 3/8-16 x .75
16	712-04065	Hex Insert Flange Lock Nut, 3/8-16
17	712-0417A	Hex Flange Nut, 5/8-18
18	912-0431	Hex Flange Lock Nut, 3/8-16
19	912-0641	Hex Nut, M16-1.5
20	914-0470	Cotter Pin, 1/8 x 1.25
21	917-04074	Deck Adjustment Gear
22	921-04041	Water Nozzle Adapter
23	732-04652	Compression Spring, .535 x 1.751


Ref.	Part Number	Description
24	732-04609	Extension Spring, .94 x 6.74
25	734-04155	Deck Ball Wheel, 5.0
26	936-0119	Lock Washer, 5/16
27	736-0407	Bell Washer, .45 x 1.0 x .062
28	736-0225	Internal Tooth Lock Washer, 5/8
29	736-3072	Flat Washer, .38 x .93 x .110
30	737-04003D	Deck Wash Nozzle
31	738-04162A	Shoulder Spacer, .884 x .190
32	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
33	942-04053C	Blade, 2 in 1, 17.9
34	747-1116	Deck Hanger Rod
35	954-04044A	V-Belt Type A Sec x 134
36	756-04129B	Idler Pulley, 4.25 Dia
37	783-04399	Belt Cover, LH
38	783-04400	Belt Cover, RH
39	783-04414A	Center Skirt (U.S.)
—	783-05513	Center Skirt (Aus.)
40	736-0315	Flat Washer, .76 x 1.50 x .12
41	738-1010A	Spindle Shaft, 5.75
42	941-0919	Ball Bearing
43	748-0160A	Spacer, .79 x 1.25 x .175
44	750-1000	Spacer, .80 x 1.10 x 1.32
45	750-1349A	Spacer, .79 x 1.82 x .55
46	756-04216	V-Type Pulley, 5.39

54" Mower Deck

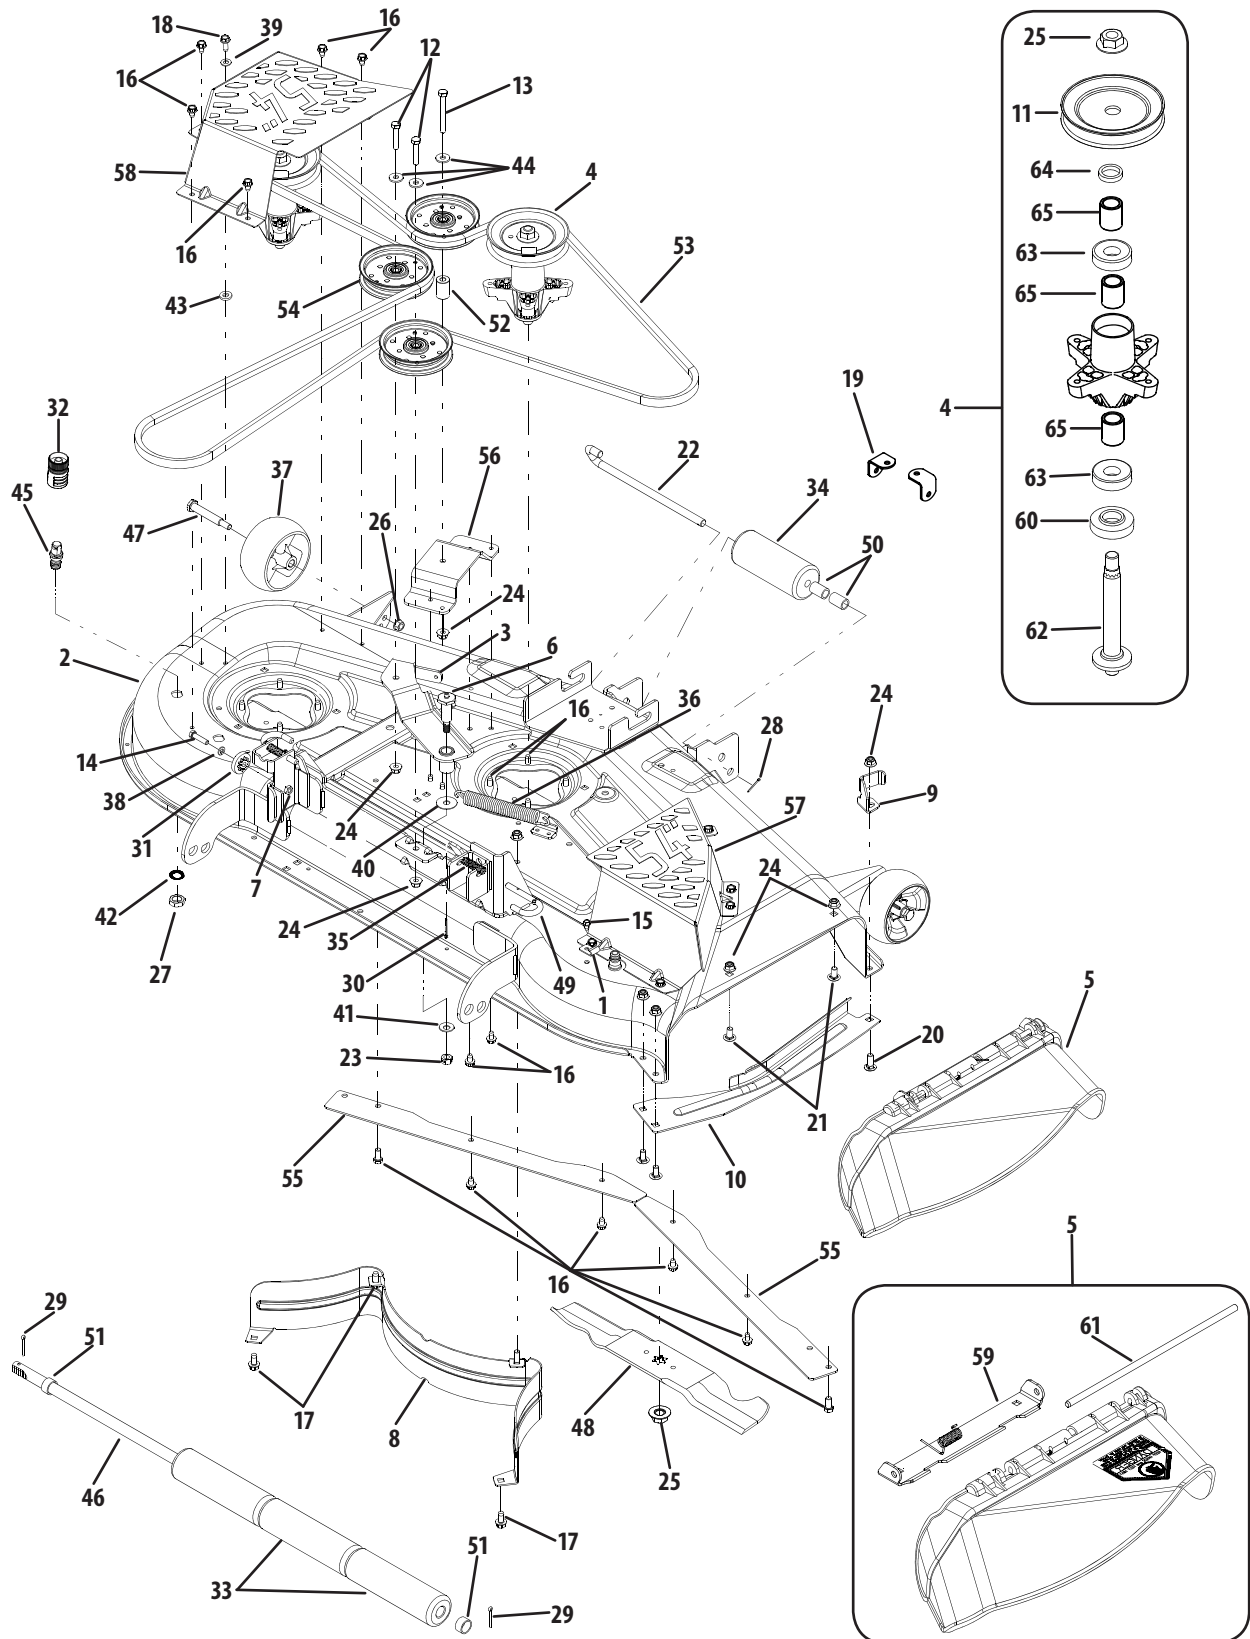

Ref.	Part Number	Description
1.	96606	Retainer Bracket
2.	903-04603	Deck Housing
3.	603-04386A	Idler Assembly
4.	918-0671D	Spindle Assembly
5.	631-04092B	Discharge Chute Assembly
6.	638-04012A	Shoulder Bolt Assembly
7.	683-0254B	Deck Hanger Bracket
8.	703-2093	Rear Inner Baffle
9.	703-3279	Stop Bracket
10.	703-3511A	Finger Guard
11.	756-04216	V-Type Pulley, 5.39
12.	710-0347	Hex Cap Screw, 3/8-16 x 1.75
13.	710-0521	Hex Cap Screw, 3/8-16 x 3.0
14.	710-0528	Hex Cap Screw, 5/16-18 x 1.25
15.	710-0599	Hex Washer Screw, 1/4-20 x .5
16.	710-04484	Hex Washer Screw, 5/16-18 x .750
17.	710-0623	Hex Washer Screw, 3/8-16 x .75
18.	710-0650	Hex Washer Screw, 5/16-18 x .875
19.	703-05970	Frame Support Bracket
20.	710-04095	Hex Screw, 3/8-16 x 1.00
21.	710-3178	Carriage Screw, 3/8-16 x .75
22.	711-1737	Roller Pin, .5 x 10.06
23.	712-0290	Hex Lock Nut, 7/16-14
24.	712-04065	Hex Insert Flange Lock Nut, 3/8-16
25.	712-0417A	Hex Flange Nut, 5/8-18
26.	912-0431	Hex Flange Lock Nut, 3/8-16
27.	912-0641	Hex Nut, M16-1.5
28.	914-0111	Cotter Pin, 3/32 x 1.0
29.	714-0162	Cotter Pin, 5/32 x 1.25
30.	914-0470	Cotter Pin, 1/8 x 1.25
31.	917-04074	Deck Adjustment Gear
32.	921-04041	Water Nozzle Adapter
33.	731-05825	Deck Roller, 7.895

Ref.	Part Number	Description
34.	731-05679	Front Roller
35.	732-04652	Compression Spring, .535 x 1.751
36.	732-04609	Extension Spring, .94 x .04609
37.	734-04155	Deck Ball Wheel, 5.0
38.	936-0119	Lock Washer, 5/16
39.	936-0275	Flat Washer, .344 x .688 x .065
40.	936-0406	Flat Washer, .442 x 1.39 x .06
41.	736-0407	Bell Washer, .45 x 1.0 x .062
42.	936-0760	Lock Washer
43.	736-3010	Flat Washer, .407 x .812 x .135
44.	736-3072	Flat Washer, .38 x .93 x .110
45.	737-04003D	Deck Wash Nozzle
46.	738-04260	Shaft, .75 x 26.893
47.	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
48.	942-0677B	Blade, 18.5
49.	747-1116	Deck Hanger Rod
50.	950-0151	Spacer, .55 x .75 x 1.125
51.	950-0212	Spacer, .82 x 1.0 x .53
52.	750-04597	Spacer, .38 x .9 x 1.313
53.	954-04138A	V-Belt
54.	756-04129B	Idler Pulley, 4.25 Dia
55.	783-04690B	Deck Skirt
56.	783-04726	Stationary Idler Bracket
57.	783-1470A	Belt Cover, RH
58.	783-1471	Belt Cover, LH
59.	783-05030	Chute Mounting Bracket
60.	750-1349A	Spacer, .79 x 1.82 x .55
61.	711-04565	Hinge Pin
62.	738-1197	Spindle Shaft, 6.95
63.	941-0919	Ball Bearing
64.	748-0160A	Spacer, .79 x 1.25 x .175
65.	750-1000	Spacer, .80 x 1.10 x 1.32

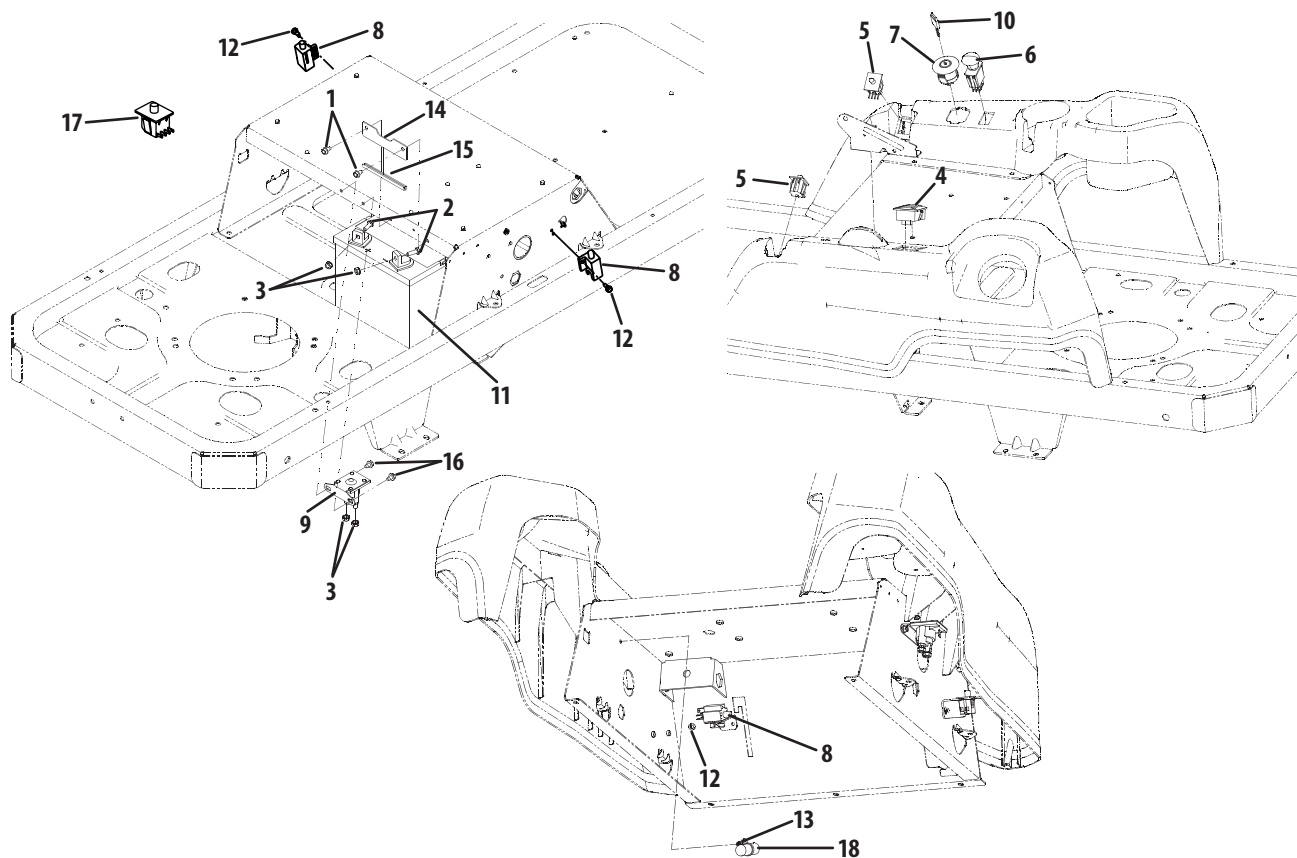

Ref.	Part Number	Description
1	710-0599	Hex Screw, ¼-20 x .5
2	710-3015	Hex Screw, ¼-20 x .75
3	712-0271	Hex Nut, ¼-20
4	925-04022B	Hour Meter
5	925-04165	Double Pole — Neutral Switch
6	925-04174	PTO Switch
7	925-04228	Ignition Switch
8	725-04363	Interlock Switch
9	725-04439	Solenoid

Ref.	Part Number	Description
10	925-1745A	Key
11	925-1707D	Battery, 235 CCA
12	738-04237A	Shoulder Screw, #10-32 x .500
13	726-0470	Cable Tie
14	703-05894	Battery Hold-down
15	731-0511	Trim Strip
16	710-0653	Hex Screw, ¼-20 x .375
17	925-04040	Seat Switch
18	925-04847A	Wire Harness

The following attachments and accessories are compatible with your RZT tractor. See your dealer or the retailer from which you purchased your tractor for information regarding price and availability.

Part Number	Part
19A700050OEM	42" Double Bagger
19A70004OEM	50" Double Bagger
OEM-190-116	42" Mulch Plug Kit
OEM-190-193	50" Mulch Plug Kit
19A-115-100	Rear Bumper
19A-116-100	Rear Spreader
190-117-100	Sun Shade