

Labels



BATTERY BY
DieHard

[illegible]

NOTICE
STEERING WHEEL
MOUNTING HARDWARE
UNDER CAP, BEFORE
OPERATION SECURE
STEERING WHEEL TO
SHAFT ACCORDING
TO MANUAL

Description	Stock No.	Part No.
Oil Filter	24200	85-402000
Air Filter		85-402000
7-1/2" Square Element		85-402000
Spark Plug	24240	7-1/2-24200
Plug Filter	24260	85-402000
Valve Cover	24280	7-1/2-24200
Valve Rod		7-1/2-24200
Valve Seal	24300	85-402000
Valve Spring	24320	85-402000
Valve Spring Retainer	24340	85-402000
Valve Spring Lock Wash	24360	85-402000
Valve Spring Nut	24380	85-402000
Valve Spring Shim	24400	85-402000
Valve Spring Seal	24420	85-402000
Valve Spring Washer	24440	85-402000
Valve Spring Lock Washer	24460	85-402000
Valve Spring Nut	24480	85-402000
Valve Spring Shim	24500	85-402000
Valve Spring Seal	24520	85-402000
Valve Spring Washer	24540	85-402000
Valve Spring Lock Washer	24560	85-402000
Valve Spring Nut	24580	85-402000
Valve Spring Shim	24600	85-402000
Valve Spring Seal	24620	85-402000
Valve Spring Washer	24640	85-402000
Valve Spring Lock Washer	24660	85-402000
Valve Spring Nut	24680	85-402000
Valve Spring Shim	24700	85-402000
Valve Spring Seal	24720	85-402000
Valve Spring Washer	24740	85-402000
Valve Spring Lock Washer	24760	85-402000
Valve Spring Nut	24780	85-402000
Valve Spring Shim	24800	85-402000
Valve Spring Seal	24820	85-402000
Valve Spring Washer	24840	85-402000
Valve Spring Lock Washer	24860	85-402000
Valve Spring Nut	24880	85-402000
Valve Spring Shim	24900	85-402000
Valve Spring Seal	24920	85-402000
Valve Spring Washer	24940	85-402000
Valve Spring Lock Washer	24960	85-402000
Valve Spring Nut	24980	85-402000
Valve Spring Shim	25000	85-402000
Valve Spring Seal	25020	85-402000
Valve Spring Washer	25040	85-402000
Valve Spring Lock Washer	25060	85-402000
Valve Spring Nut	25080	85-402000
Valve Spring Shim	25100	85-402000
Valve Spring Seal	25120	85-402000
Valve Spring Washer	25140	85-402000
Valve Spring Lock Washer	25160	85-402000
Valve Spring Nut	25180	85-402000
Valve Spring Shim	25200	85-402000
Valve Spring Seal	25220	85-402000
Valve Spring Washer	25240	85-402000
Valve Spring Lock Washer	25260	85-402000
Valve Spring Nut	25280	85-402000
Valve Spring Shim	25300	85-402000
Valve Spring Seal	25320	85-402000
Valve Spring Washer	25340	85-402000
Valve Spring Lock Washer	25360	85-402000
Valve Spring Nut	25380	85-402000
Valve Spring Shim	25400	85-402000
Valve Spring Seal	25420	85-402000
Valve Spring Washer	25440	85-402000
Valve Spring Lock Washer	25460	85-402000
Valve Spring Nut	25480	85-402000
Valve Spring Shim	25500	85-402000
Valve Spring Seal	25520	85-402000
Valve Spring Washer	25540	85-402000
Valve Spring Lock Washer	25560	85-402000
Valve Spring Nut	25580	85-402000
Valve Spring Shim	25600	85-402000
Valve Spring Seal	25620	85-402000
Valve Spring Washer	25640	85-402000
Valve Spring Lock Washer	25660	85-402000
Valve Spring Nut	25680	85-402000
Valve Spring Shim	25700	85-402000
Valve Spring Seal	25720	85-402000
Valve Spring Washer	25740	85-402000
Valve Spring Lock Washer	25760	85-402000
Valve Spring Nut	25780	85-402000
Valve Spring Shim	25800	85-402000
Valve Spring Seal	25820	85-402000
Valve Spring Washer	25840	85-402000
Valve Spring Lock Washer	25860	85-402000
Valve Spring Nut	25880	85-402000
Valve Spring Shim	25900	85-402000
Valve Spring Seal	25920	85-402000
Valve Spring Washer	25940	85-402000
Valve Spring Lock Washer	25960	85-402000
Valve Spring Nut	25980	85-402000
Valve Spring Shim	26000	85-402000
Valve Spring Seal	26020	85-402000
Valve Spring Washer	26040	85-402000
Valve Spring Lock Washer	26060	85-402000
Valve Spring Nut	26080	85-402000
Valve Spring Shim	26100	85-402000
Valve Spring Seal	26120	85-402000
Valve Spring Washer	26140	85-402000
Valve Spring Lock Washer	26160	85-402000
Valve Spring Nut	26180	85-402000
Valve Spring Shim	26200	85-402000
Valve Spring Seal	26220	85-402000

LEFT

RIGHT



▲ DANGER

WARNING: SERIOUS INJURY OR DEATH.
 • KEEP HANDS AND FEET AWAY FROM MOVING PARTS.

WARNING: PRODUCTS THAT CAN BE THROWN AT YOU OR IN YOUR DIRECTION CAN BE VERY DANGEROUS.
 • ALWAYS WEAR EYE PROTECTION WHEN YOU USE THE TOOL.
 • ALWAYS WEAR A HEAVY DUTY GLOVE WHEN YOU HOLD THE TOOL.

DO NOT USE CHILDREN OR INJURED. DO NOT WORK UNDER THE INFLUENCE OF DRUGS OR ALCOHOL. ALWAYS WEAR YOUR SAFETY GEAR.

READ THE MANUAL, KEEP YOUR EYES ON THE TOOL AND WORKING

A DANGER

KEEP HANDS AND FEET AWAY DO NOT OPERATE MOWER UNLESS CHUTE SWINGS OR BEHIND MOWER IS IN ITS PROPER PLACE.

ADJUSTABLE CHUTE

BE FLEXIBLE TO THIS UNIT
BE FLEXIBLE OPERATING.




19.5 HP Gold Series Engine

The diagram shows the engine compartment with two callouts. One callout points to a lever on the left side of the engine, which is the choke lever. The other callout points to a control panel on the right side of the engine, which is the choke control panel. The control panel has a vertical slider with 'CHOKE' at the top, 'FAST' in the middle, and 'SLOW' at the bottom. A hand icon is shown moving the slider from 'SLOW' towards 'FAST'.

PARTS LIST

 Craftsman Model 247.288841

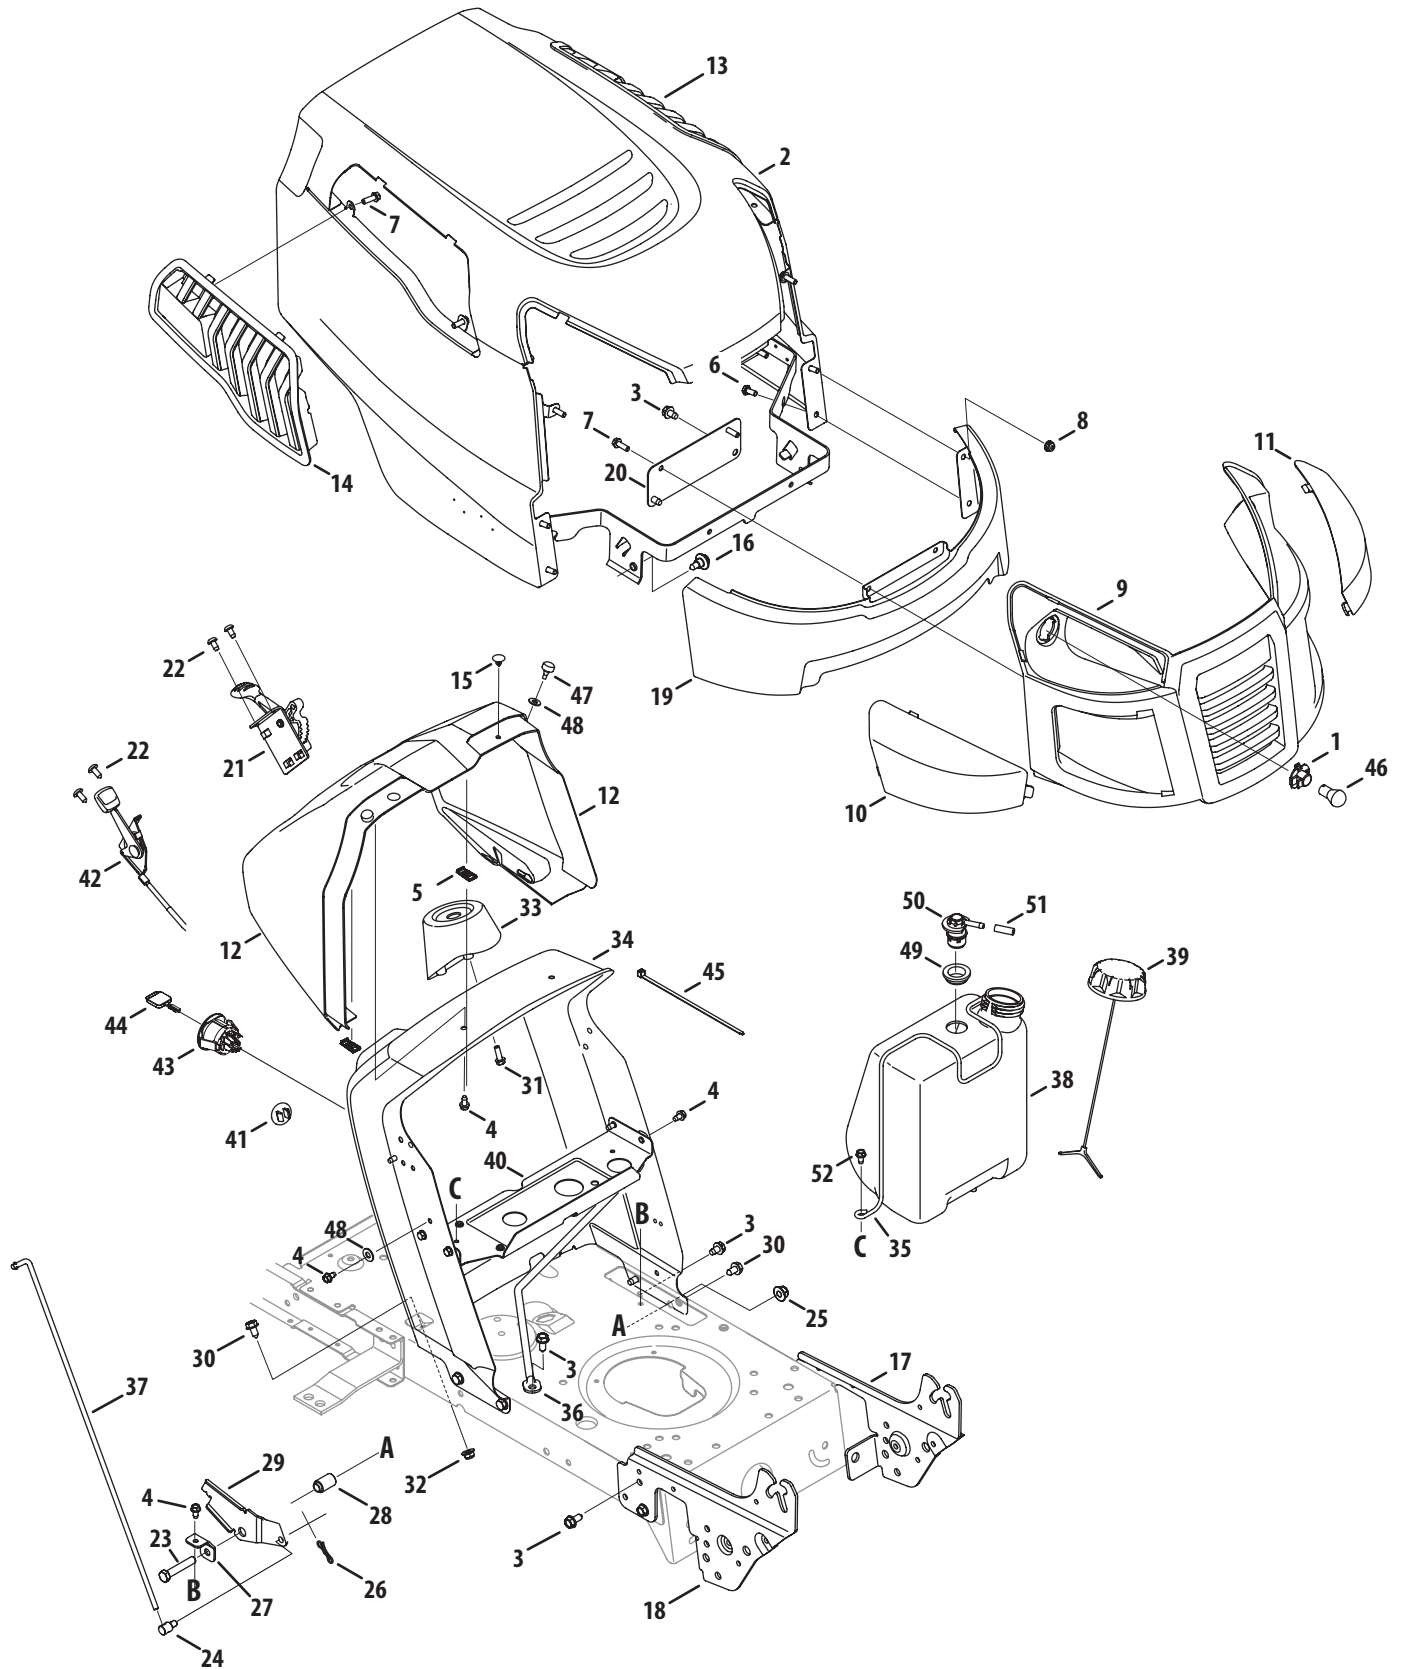

PARTS LIST


Craftsman Model 247.288841

Ref. No.	Part No.	Description
1	925-1649	Bulb Socket
2	683-04619-4043	Hood Assembly
3	710-04484	Screw, 5/16-18 x .750
4	710-0599	Hex Washer Screw, 1/4-20 x .500
5	712-0292	Tin Clip Nut, 1/4-20
6	710-0751	Hex Screw, 1/4-20 x .620
7	710-05108	Screw, 1/4 x .750
8	712-04064	Nut, Hex Flange Insert Lock, 1/4-20
9	931-07668	Grill
10	731-07458	Headlight Lens, RH
11	731-07459	Headlight Lens, LH
12	731-07460	Dash Collar
13	731-07711	Hood Scoop, LH
14	731-07712	Hood Scoop, RH
15	735-0271A	Bumper
16	738-04091A	Shoulder Screw, 5/16-18
17	783-05327B-0637	Left Support Pivot Bracket
18	783-05328A-0637	Right Support Pivot Bracket
19	783-06598-4043	Lower Grill
20	783-06610-0637	Lower Grill Bracket
21	983-04503	Speed Selector, 7-Speed
22	710-05070	Self-Tap Screw, 1/4-20
23	710-3144	Hex Head Screw, 3/8-16
24	711-0736	Ferrule, 1/4-20 x 1.00
25	712-04065	Nut, Hex Flange Insert Lock, 3/8-16
26	714-04040	Cotter Pin

Ref. No.	Part No.	Description
27	783-06823	Speed Latch Support Tab
28	750-04465B	Flange Spacer
29	783-04903A	Speed latch
30	710-0604A	Self-Tap Screw, 5/16-18
31	710-05108	Hex Screw, 1/4 x .750
32	712-04063	Nut, Hex Flange Lock, 5/16-18
33	731-04945	Steering Support
34	783-04873B-0637	Dash
35	747-05371	Fuel Tank Support Rod
36	747-05326	Dash support Rod
37	747-04430	Speed Selector Control Rod
38	951-04304	1.36 Gallon Fuel Tank
39	951-12179	Fuel Cap
40	783-04584B-0637	Gas Tank Support Bracket
41	731-05265	Choke Plug
42	746-04364	Throttle/Choke Assembly
43	925-04659	Key Switch Module
44	625-04124	Key (2 pack)
45	725-0157	Cable Tie
46	925-0963	Headlight Bulb
47	726-04072A	Ratchet Clip: .250 x .500
48	936-0463	Flat Washer, .25 x .630 x .0515
49	735-04081	Rubber Grommet
50	751-12118	Fuel Rollover Valve
51	751-12089-28	Vent Hose
52	710-1652	Hex Washer Screw, 1/4-20 x .625

PARTS LIST

 Craftsman Model 247.288841

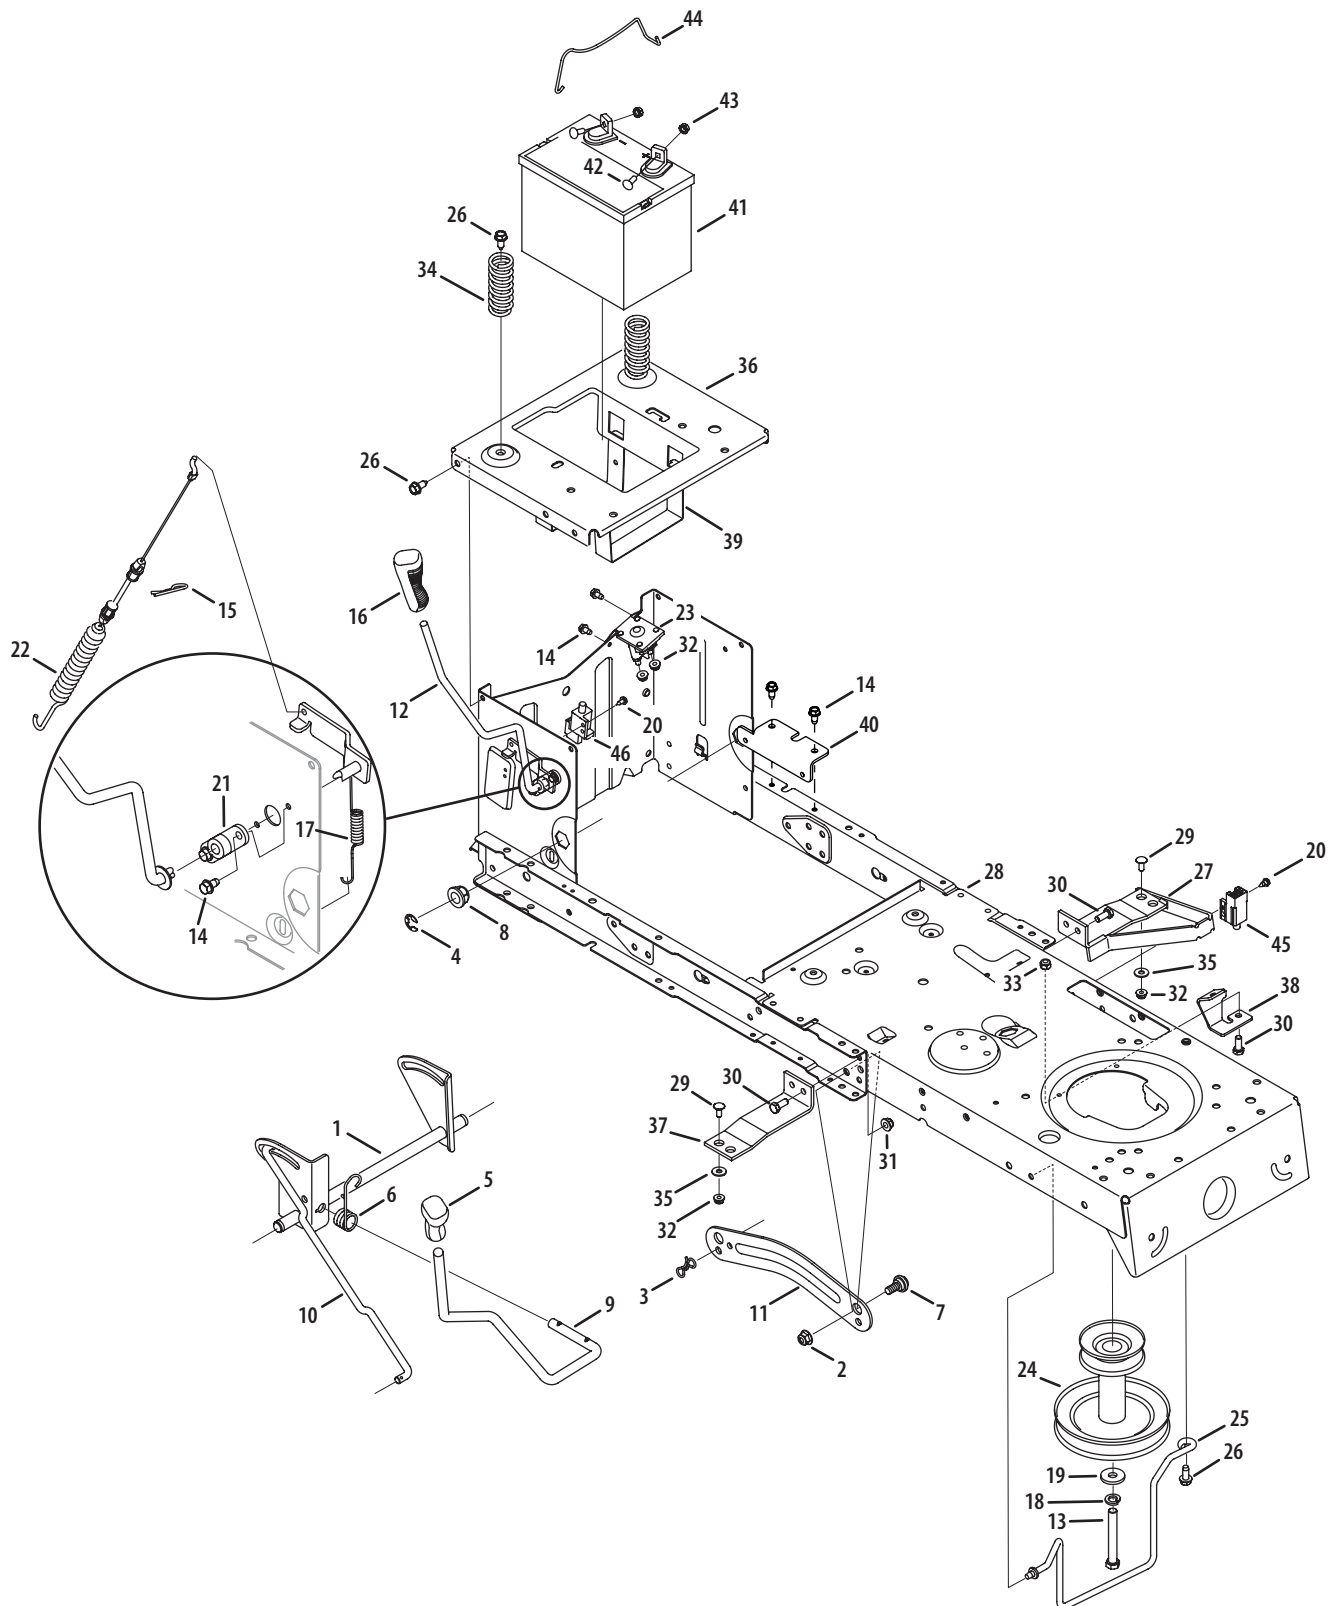


PARTS LIST

Craftsman Model 247.288841

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	683-04155A-0637	Shaft, Lift	24	756-04196A	Engagement Pulley
2	712-04065	Nut, Hex Flange Insert Lock, 3/8-16	25	747-04857	Belt Keeper Rod Assembly
3	714-04040	Bow-Tie Pin, 91, RH	26	710-04484	Screw, Hd. Tapp, 5/16-18 x .75
4	716-0106A	E-ring, .625 Shaft	27	683-04195-0637	Support Bracket Assembly
5	720-0311	Grip, Handle	28	683-04601-0637	Rider Frame Assembly
6	732-04225	Spring, Lift Handle Torsion	29	710-0134	Carriage Screw, 1/4-20 x .62
7	738-04130	Bolt, Shoulder, .625 x .175:3/8-16	30	710-3008	Screw, Hx. Hd., 5/16-18 x .75
8	941-0225	Bearing, Hex Flange,	31	712-04063	Nut, Hex Flange Insert Lock, 5/16-18
9	747-05296	Handle, Lift	32	712-04064	Nut, Hex Flange Insert Lock, 1/4-20
10	747-04393	Lift Rod, 13.68	33	912-0429	Hexlock Nut, 5/16-18
11	783-04494C-0637	Arm, Deck Lift RH	34	732-04035	Spring, Compress., 1.28 x 3.125
	783-04711C-0637	Arm, Deck Lift LH	35	736-0173	Flat Washer, .28 x .74 x .063
12	647-04096-0637	PTO Handle Assembly	36	783-04548C-0637	Seat Bracket Frame
13	710-04608	Screw, Hx. Hd., 7/16-20 x 3.25	37	783-04637-0637	Running Board Bracket
14	710-0599	Screw, Hd. Tapp, 1/4-20 x .5	38	783-04753-0637	Frame Support Bracket
15	714-04040	Click Pin	39	783-04869A-0637	Battery Bracket
16	720-04049A	Handle Grip	40	783-05389A-0637	Frame Brace Bracket
17	732-04276A	PTO Spring, Extension	41	725-05090	Die Hard Battery
18	936-0171	Washer, Flat, 7/16	42	738-1132	Screw, Shoulder, .250 x .150
19	736-0322	Washer, Flat, .450 x .250 x .164	43	712-0271	Nut, Sems, 1/4-20
20	738-04237A	Shoulder Screw, #10-32 x .500	44	683-04448-0637	Battery Rod
21	741-04119A	PTO Bearing	45	925-04039	Screw Mount Interlock Switch
22	946-04173C	Deck Engagement Cable	46	725-04363	Interlock Switch
23	725-04439	12v. Solenoid			

PARTS LIST

 Craftsman Model 247.288841

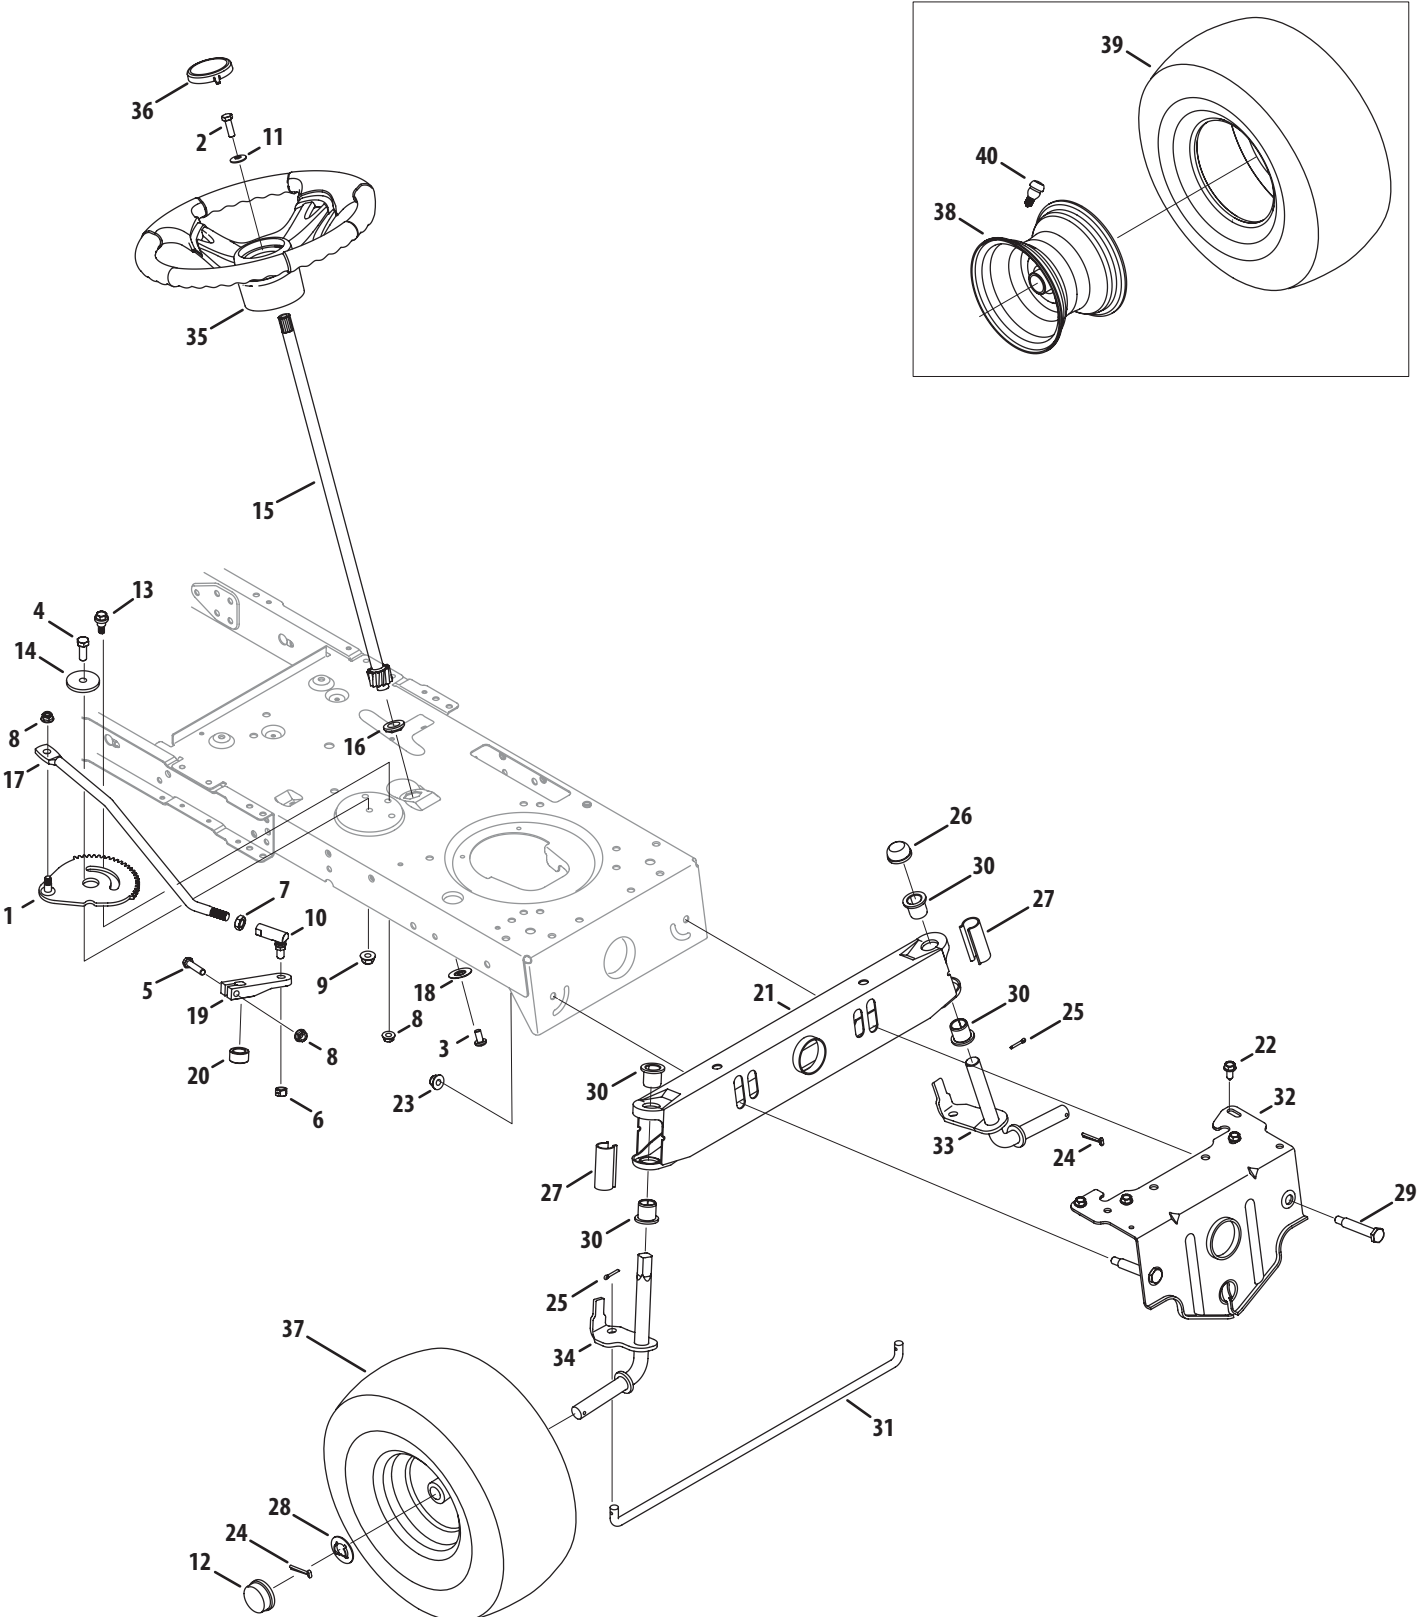

PARTS LIST


Craftsman Model 247.288841

Ref. No.	Part No.	Description
1	617-04094	Gear Assembly, Steering
2	710-0643	Screw, 5/16-18, 1.00, Gr5, Lock
3	710-1309	Screw, Mach, 5/16-18, 0.750
4	710-3094A	Hex Head Screw, 3/8-16 x 1.00
5	710-3180	Screw, 5/16-18, 1.75, Gr5
6	912-0214	Nut, Jam Lock, 3/8-24
7	912-0240	Nut, Jam, 7/16-20, Gr2
8	712-04063	Nut, Flange Lock, 5/16-18, Grf
9	712-04065	Nut, Flange Lock, 3/8-16, Grf
10	923-0448A	Ball Joint, 7/16-20, Lock
11	736-0242	Washer, Bell, .340 x .872 x .060
12	931-0484A	Hub Cap
13	738-04141	Shoulder Screw, 5/16-18
14	738-04162A	Shoulder Spacer, .8840 x .190
15	738-0919A	Steering Shaft, 5/8 Spline x 21.86
16	941-04124	Bearing, Flange, Hex 5/8
17	747-05385	Drag Link, Steering
18	948-0389	Cap, 1.25 x .16
19	748-04065-0637	Steering, Block
20	748-04068	Spacer, .710 ID x .125 OD x .56

Ref. No.	Part No.	Description
21	683-0128B-0637	Pivot Bar Axle Assembly
22	710-04484	Screw, 5/16-18, 0.750
23	712-04065	Nut, Flange Lock, 3/8-16, GrF
24	714-04039A	Pin, Cotter, 5/32, 1.25
25	914-0474	Pin, Cotter, 1/8 x 0.75
26	736-0341	Push Cap, 3/4
27	731-04057A	Axle Cap
28	736-04228A	Washer, Flat, .781 x 1.59
29	738-04128	Screw, Shlder, .500 x 2.380, 3/8-16
30	741-0660A	Flange Bearing
31	747-04299A	Tie Rod
32	783-05326B-0637	Pivot Bar Bracket
33	938-04007A-0637	Axle Assembly LH
34	638-04008P	Axle Assembly RH
35	631-04028	Steering Wheel, Standard Grip
36	731-06825	Cap, Steering Wheel (Crafts. logo)
37	634-04086-0961	Wheel Assembly
38	934-04081-4042	Rim
39	734-1731-0901	Tire, 15 x 6 x 6 Sq. Shoulder
40	934-0255	Valve Stem

PARTS LIST

 Craftsman Model 247.288841

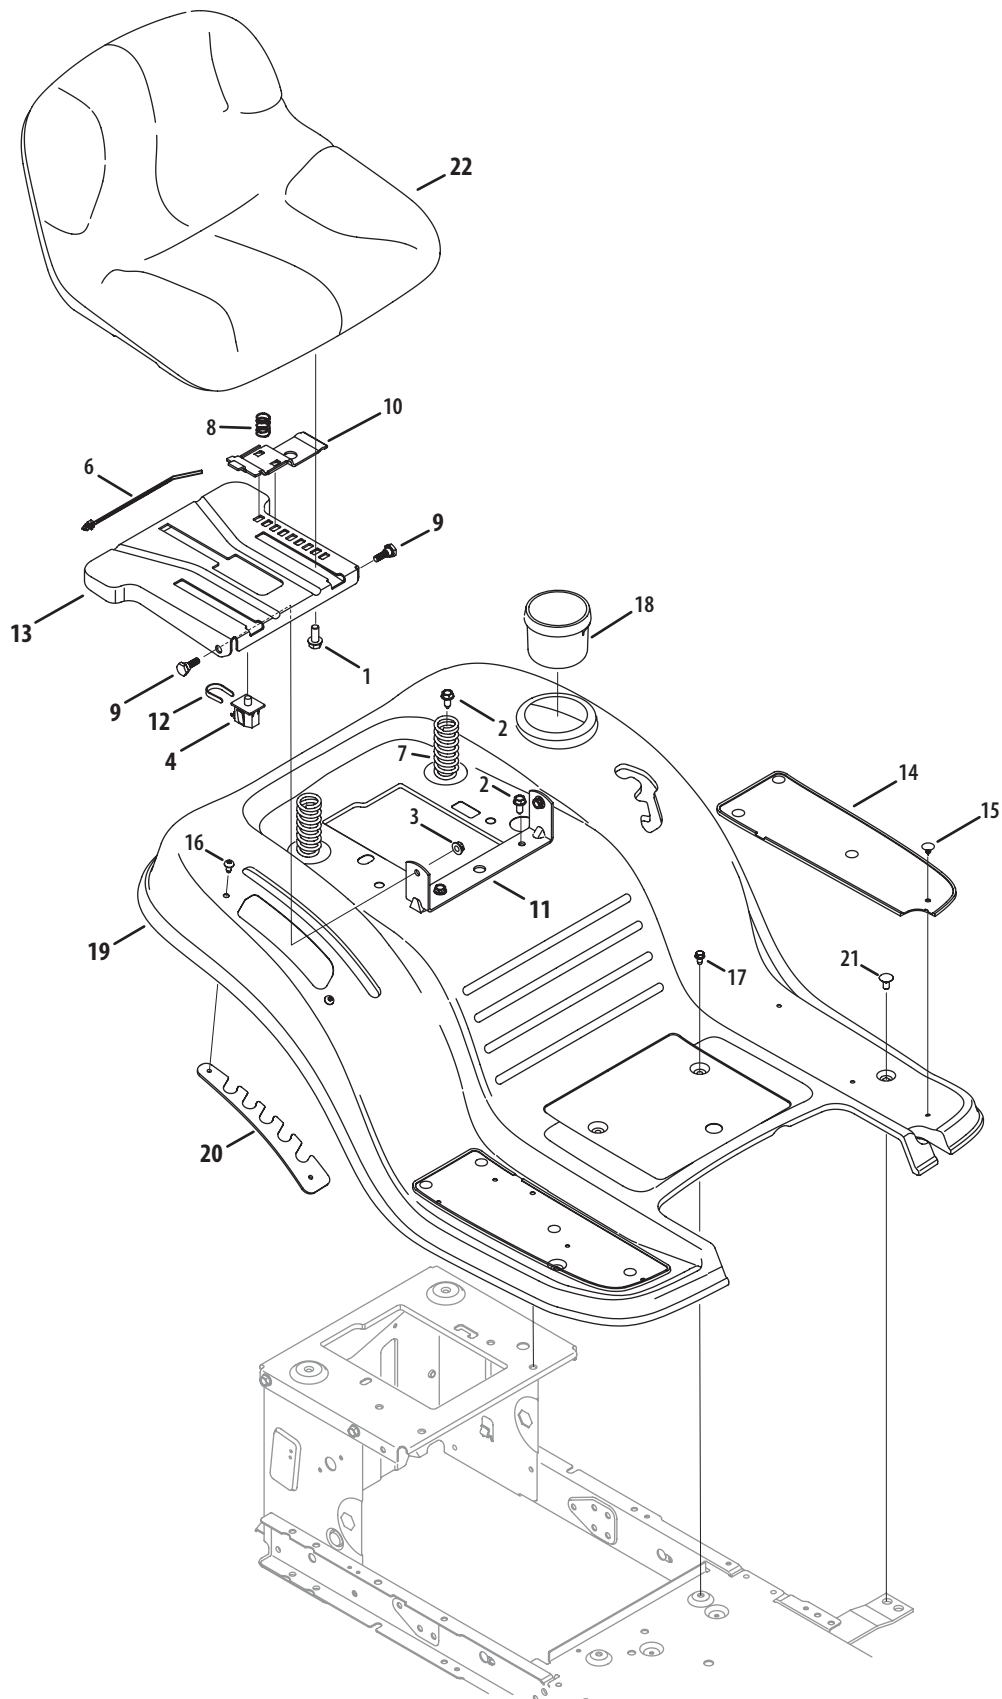


PARTS LIST

Craftsman Model 247.288841

Ref. No.	Part No.	Description
1	710-04482	Hex Flange Bolt, 3/8-16 x .875
2	710-04484	Screw, Hd. Tapp, 5/16-18 x .75
3	712-3004A	Flange Lock Nut, 5/16-18
4	925-05013	Seat Safety Switch
5	725-05277	Seat Jumper Harness <i>(not shown)</i>
6	926-0154	Push Mount Cable Tie
7	732-04035	Spring, Compress., 1.28 x 3.125
8	732-04563	Spring, Compress., .68 x 1.065 x .055
9	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
10	783-06050	Seat Adjustment Lever
11	783-06088-0637	Seat Pivot Bracket
12	783-06448	Switch Retainer Clip
13	783-06840	Seat Mounting Bracket
14	735-04047	Rubber Foot Pad, LH
	735-04048	Rubber Foot Pad, RH
15	726-3046	Ratchet Clip, .250
16	710-05070	Tap Screw, 1/4-20 x .5
17	710-0599	Screw Pan Torx Head, 1/4-20 x .500
18	731-04591A	Cup Holder
19	783-04587D-4043	Fender
20	783-04843-0637	Lift Adjuster Bracket
21	710-0134	Carriage Screw, 1/4-20 x .62
22	757-04144	Seat

PARTS LIST

 Craftsman Model 247.288841

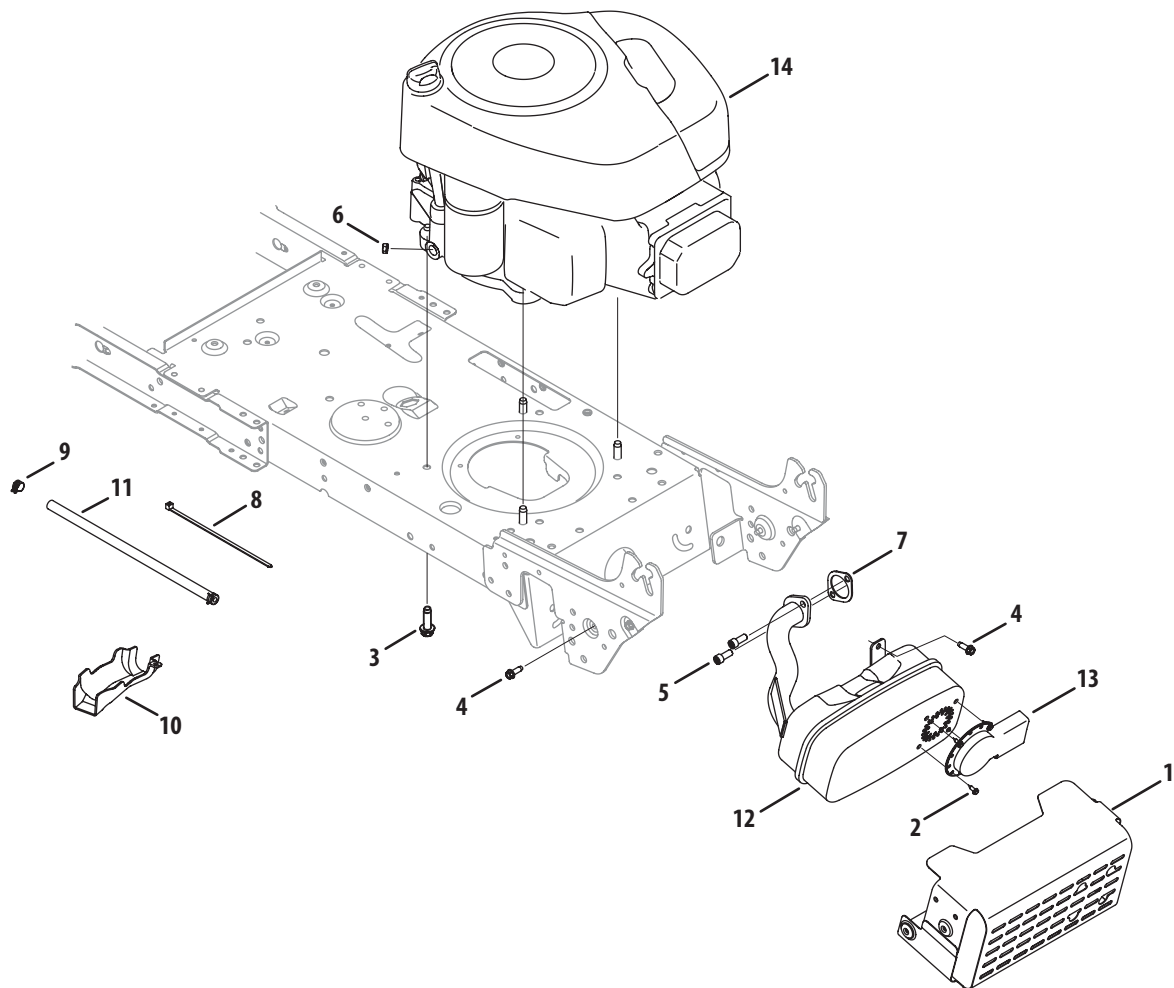


PARTS LIST

Craftsman Model 247.288841

Ref.	Part No.	Description
1	683-04549-0637	Muffler Shield Assembly
2	710-0227	Screw, AB #8-18 0.500
3	710-04683	Tap Screw, 3/8-16 1.000
4	710-0642	Tap Screw, 1/4-20 0.750
5	710-1314A	Screw, Socket Head, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket
8	725-0157	Cable Tie, 3/16 X .05 X 7.4
9	726-0205	Hose Clamp, .490 Dia.
10	731-05628	Oil Drain Sleeve
11	751-10349	Low Permeation Fuel Hose, 1/4
12	751-10448B	Briggs Single Muffler
13	751-10353	Long Muffler Deflector
14	31P677-3373-G2/G6	Engine

PARTS LIST

 Craftsman Model 247.288841

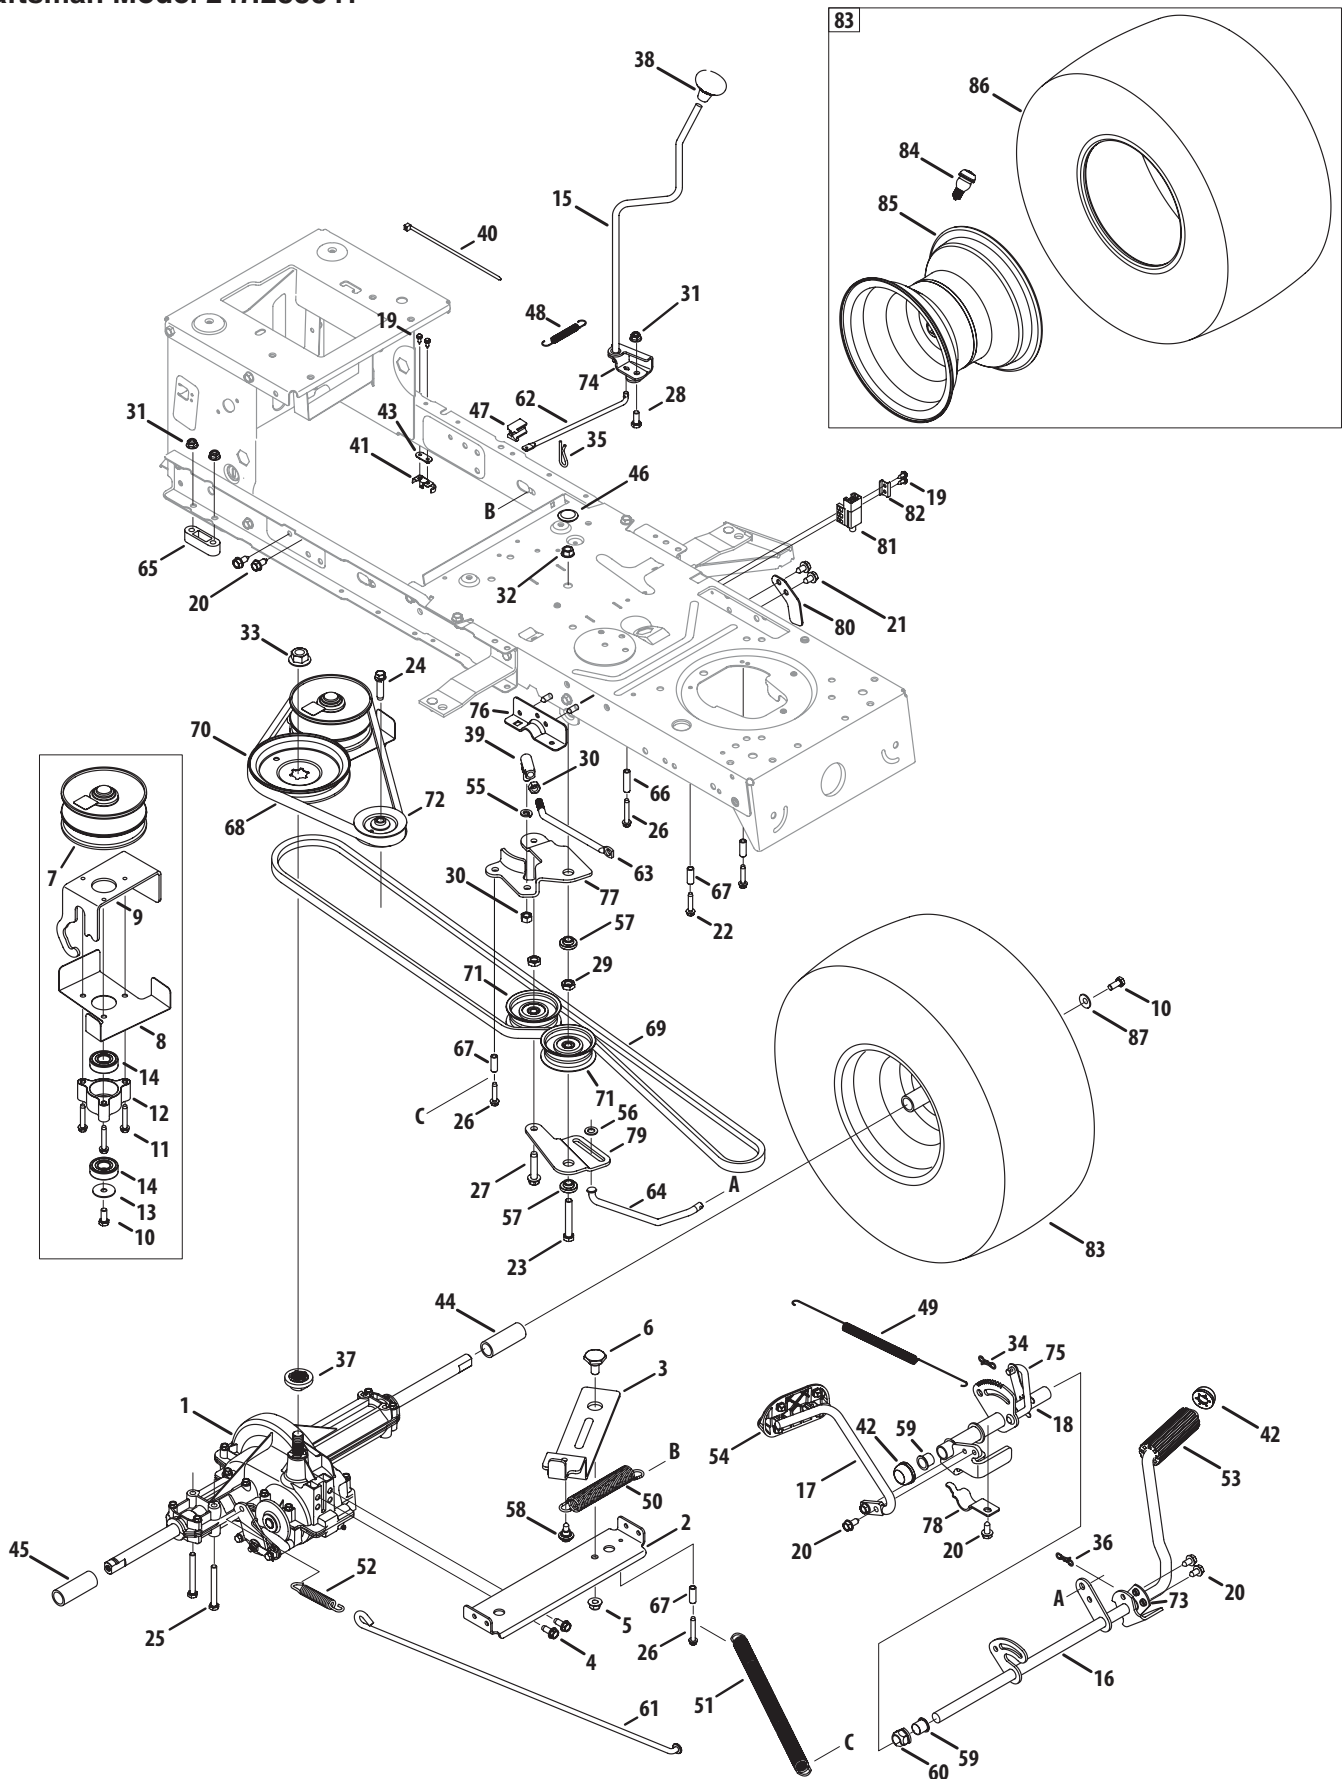

PARTS LIST


Craftsman Model 247.288841

Ref.	Part No.	Description
1	918-04566	Dr Assembly, Autodrive Lt-5
2	683-04606	Auto-drive Bracket Assembly
3	753-06662	Idler Bracket Assembly
4	710-1260A	Tap Screw, 5/16-18 x 0.750
5	712-04065	Flange Lock Nut, 3/8-16
6	738-0322A	Shoulder Screw, .625 x .217
7	956-04015A	Pulley Assembly, Var. Spd. 4.75 Od
8	683-04522	Belt Keeper Assembly
9	683-04612-0637	Variable Bracket Assembly
10	710-0627	Hex Screw 5/16-24 .750
11	710-0778	Tap Screw, 1/4-20 1.500
12	718-04261	Bearing Cup
13	736-0362	Wash, Flat .330 X 1.25 X .06
14	941-0600	Ball Bearing, 17 x 40 x 12.6203
15	647-04035	Lvr Assembly, Shft
16	647-04201-0637	Ped Assembly, Drive, Autodrive
17	647-04203A-0637	Ped Assembly, Cont, Autodrive
18	683-04607	Bracket Assembly, Pedal, Autodrive
19	710-0227	Screw, Ab, #8-18, 0.500
20	710-04484	Screw, Tt, 5/16-18, .750
21	710-0604A	Screw, Tt, 5/16-18, 0.625
22	710-0809	Screw, Tt, 1/4-20, 1.250
23	710-0859	Hex Hd. Screw, 3/8-16, 2.50
24	710-1007	Screw, Ttsems, 3/8-16, 1.500
25	710-1266	Hex Hd. Screw, 5/16-18, 3.50
26	710-1325	Screw, Tt, 1/4-20, 1.625,
27	710-1858A	Screw, Tt, 3/8-16 x 1.75
28	710-3008	Hex Hd. Screw, 5/16-18, .75
29	912-0240	Nut, Jam, 7/16-20
30	712-0241	Nut, Hex, 3/8-24
31	712-04063	Nut, Flange Lock Nut, 5/16-18
32	912-0431	Nut, Flange Lock Nut, 3/8-16
33	712-0700	Nut, Flg, 9/16-18
34	914-0111	Pin, Cot, 3/32, 1.0
35	914-0209	Pin, Cotter Int- .125 Dia
36	714-04040	Pin, Cot, Bow-Tie 72
37	718-04407	Hub, Pulley, 5/8 Spline
38	720-04028	Knob, Shft
39	923-3018	Ball, Joint
40	725-0157	Cable, Tie, 3/16 X .05 X 7.4
41	725-1644	Switch, Spring, Short
42	726-0214	Cap, Push 5/8
43	926-0320	Plate, Insulator Nut
44	731-04602	Sleeve, .758 X .821 X 3.3125

Ref.	Part No.	Description
45	731-04604	Sleeve, .758 X .821 X 2.4375
46	731-06330	Plug, Deck Hole, 7/8
47	731-06894	Shift Plate Bearing
48	732-04488	Spring, Ext, .38 Od X 3.25 Lg
49	732-04612	Spring, Extn, .70 Dia X 12.00 Lg
50	732-04616B	Spring, Extn, .97 Od X 6.18 Lg
51	732-04764	Spring, Extn, .56 X 12.05 x .068
52	732-0716D	Spring, Extn, .59 Od X 4.00 Lg
53	735-0239	Pad, Foot, 4.0 Long
54	735-0662	Pad, Cont
55	936-0169	Wash, Lock, 3/8, Regular Duty
56	936-0185	Wash, Flat, .375 X .738 X .063
57	738-0372B	Spacer, Shoulder, 1.00 X .38 X .38
58	738-04091A	Screw, Shoulder, .43x.29, Tt, 5/16-18
59	741-0495	Bearing, Flg, .630 Idx .695 Od X .60
60	741-3065B	Bearing, Hex Flg, .628 Id, Split
61	747-05188	Rod, Brake, Lt-5 Trans
62	747-05243	Rod, Shift, Lt-5 Stretch 46"
63	747-05251A	Rod, Adj, Idlr, 3/8
64	747-05415	Rod, Trans, Footpedal Bypass
65	948-0334	Spacer, T-Axle .68
66	750-04456	Spacer, .260 X .372 X 1.420 Lg
67	750-0566A	Spacer, .260 X .375 X 1.030 Lg
68	954-04208	Belt, V Typ, 5I X 40.9 Lg Poly
69	954-0467A	Belt, V Typ, 5I, 90.80, Poly
70	956-04002	Pulley, Idlr, Flat 7.25 Od
71	756-04224	Pulley, Idlr, Flat 2.75 Od
72	756-04325	Pulley, Idlr, V-Type X 3.06
73	783-04536B-0637	Bracket, Ped, Support Lt-5
74	783-04595A	Bracket, Shft, Adj
75	783-06278	Plt, Bracket, Reinforcement
76	783-06562-0637	Bracket, Ped, Frame Rh
77	783-06592A	Bracket, Idlr, Dbl Autodrive
78	783-06641	Bracket, Supt, Pedal Stap
79	783-06769	Bracket, Idlr, Center Dbl
80	783-06807	Pedal Stop Plate
81	725-04363	Interlock Switch
82	17962	Switch Plate
83	634-04641-0961	Wheel Assembly, 18 x 9.5 x 8 Sq. Sh.
84	634-04369-4042	Valve Stem
85	934-0255	Rim Assembly
86	734-1729	Tire, 18 x 9.5 x 8 Sq. Sh.
87	736-0242	Bell Washer, .340 x .872 x .060
—	925-04082	Wiring Harness (Not Shown)

PARTS LIST

 Craftsman Model 247.288841

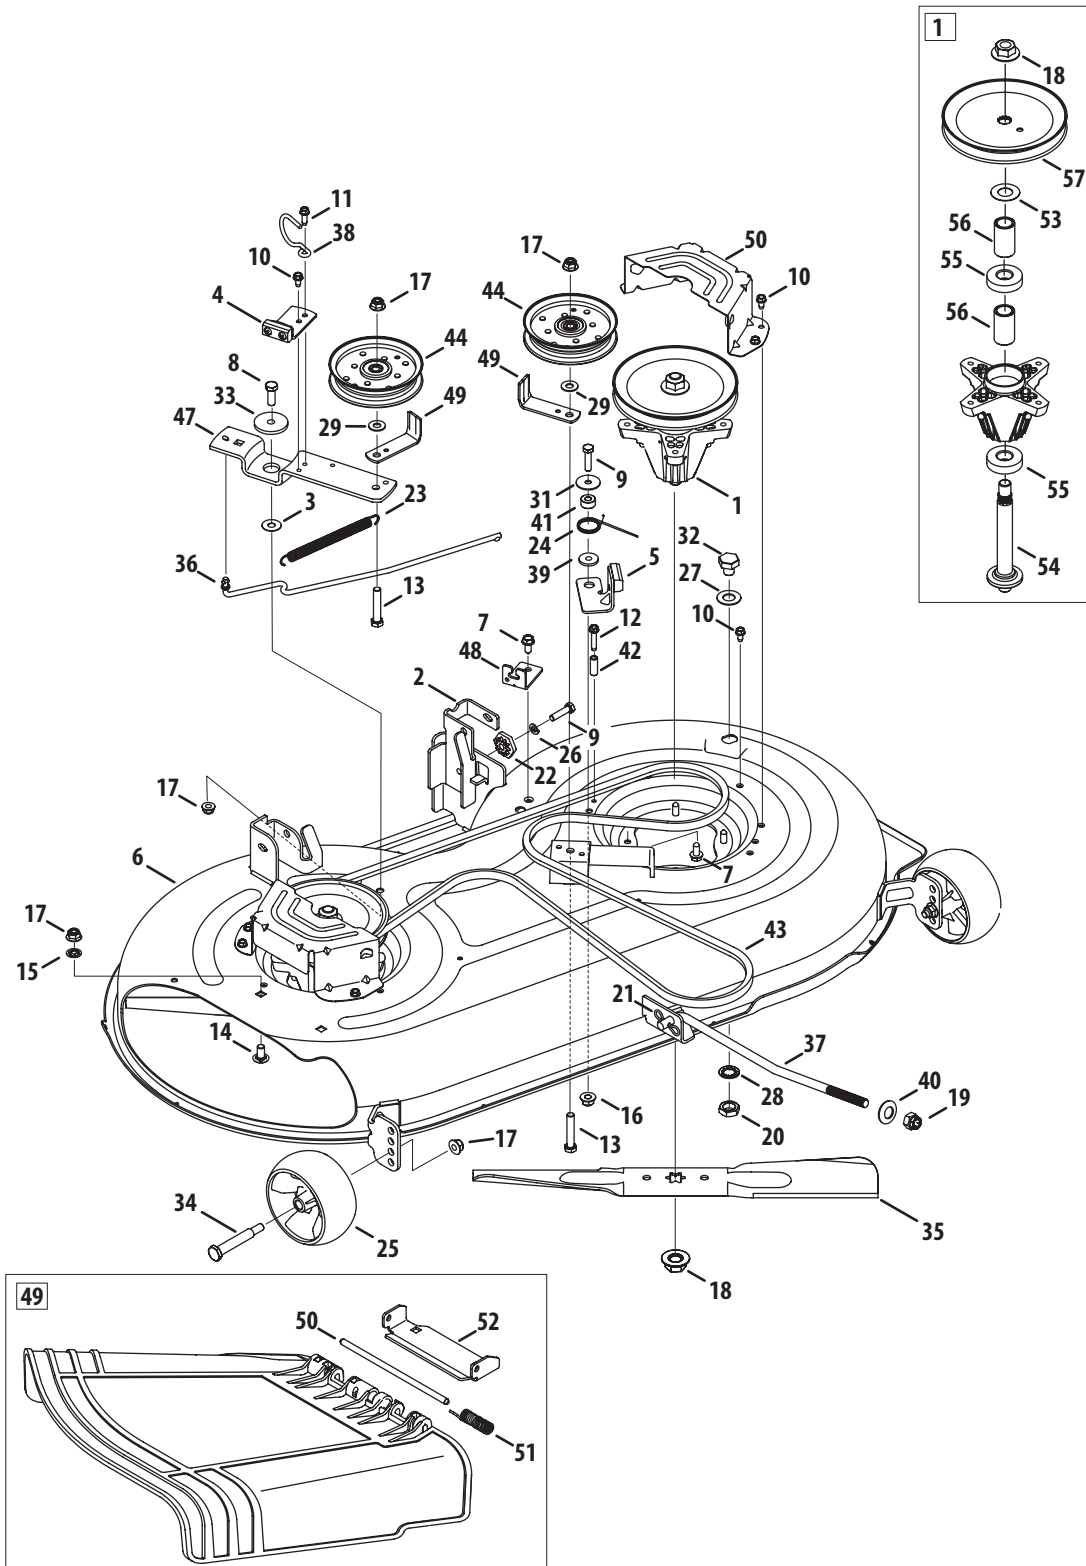

PARTS LIST

Craftsman Model 247.288841

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	918-04822A	Spindle Pulley Assembly	30	736-0362	Flat Washer, .330 x 1.25 x .06
2	683-0254B-0637	Deck Hanger Bracket Assembly	31	738-04146	Bolt Plug, M16 x 1.5
3	936-0344	Wash, Flat, .385 x 1.0 x .030	32	738-04162A	Shoulder Spacer, .8840 x .190
4	983-04511	Brake Assembly	33	938-3056	Shoulder Bolt, 3/8-16
5	983-04525	Brake Assembly	34	942-04308	Cutting Blade, 21.23": 2 in 1
6	983-04572-0637	Deck	35	747-05105	Brake Control Rod
7	710-04484	Screw, 5/16-18 x .750	36	747-05141A	Deck Lift Rod
8	710-0514	Screw, 3/8-16 x 1.00	37	747-05323	Belt Keeper Rod
9	710-0528	Hex Screw, 5/16-18 x 1.25	38	748-0234	Shoulder Spacer
10	710-0599	Screw, 1/4-20 x .500	39	748-04069	Deck Lift Pivot Cup
11	710-0642	Screw, 1/4-20 x .750	40	750-0258	Spacer
12	710-0778	Screw, 1/4-20 x 1.50	41	750-0566A	Spacer
13	710-3144	Hex Head Screw, 3/8-16	42	954-04060B	V-Type Belt, 96.5
14	710-3178	Carriage Bolt, 3/8-16 x .75	43	756-04129B	Idler Pulley, 4.25 Diameter
15	712-0229	Push Nut, 3/8	44	783-05946	Idler Pivot Bracket
16	712-04063	Flangelock Nut, 5/16-18	45	783-06243-0637	Deck Cable Engagement Bracket
17	712-04065	Flangelock Nut, 3/8-16	46	783-06368A-0637	Belt Pulley Guard
18	712-0417A	Flange Nut, 5/8-18	47	783-06424A-0637	Deck Belt Cover
19	712-04243	Flangelock Nut, 1/2-13	48	783-06643-0637	Deck Support Bracket
20	912-0641	Hex Nut, M16 - 1.5	49	631-04288	Chute Deflector Assembly
21	714-04043	Cotter Pin, Bow-Tie	50	711-04847B	Hinge Pin
22	917-04074	Deck Adjuster Gear	51	732-04372	Torsion Spring, .44 x 2.0
23	932-0384	Extension Spring, .62 x 6.12	52	783-06074A	Chute Bracket
24	732-04727	Torsion Spring, 1.0 x 1.17	53	936-0351	Flat Washer, .760 x 1.50
25	734-04155	Deck Wheel, 5" Dia. Ball	54	738-1186A	Spindle Shaft
26	936-0119	Lock Washer, 5/16	55	941-0919	Ball Bearing, .787 x 1.85 x .551
27	736-0187	Flat Washer, .64 x 1.24 x .06	56	750-04936	Spacer, .792 x 1.060 x 1.860
28	736-0225	Flat Washer, .5/8 Int. Tth.	57	956-1227	Deck Pulley, 6.3 dia.
29	736-0262	Flat Washer, .385 x .870 x .092			

PARTS LIST

 
Craftsman Engine Model 31P677-3373-G2/G6 For Model 247.288841

48 SHORT BLOCK

1058 OPERATOR'S MANUAL

1329 REPLACEMENT ENGINE





1330 REPAIR MANUAL

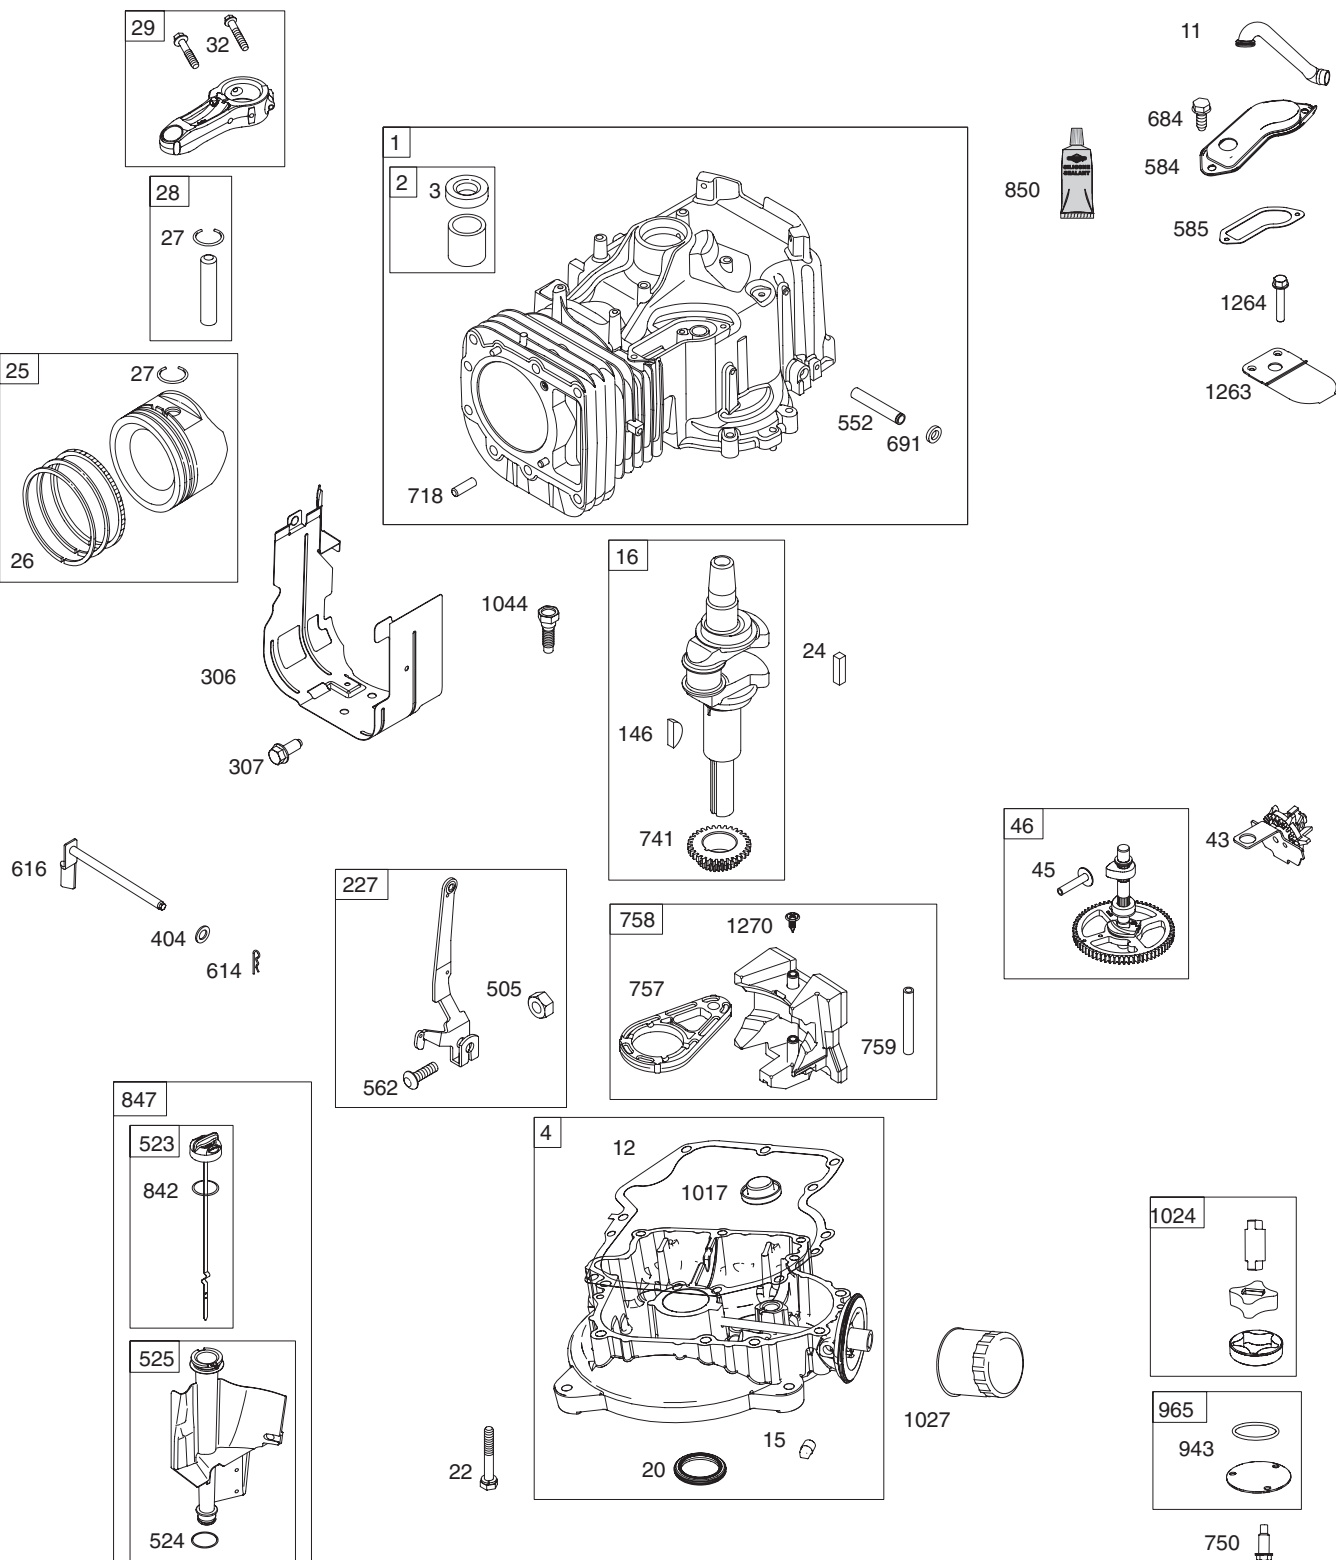

Assemblies include all parts shown in frames.

PARTS LIST

    
Craftsman Engine Model 31P677-3373-G2/G6 For Model 247.288841

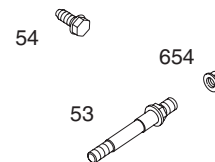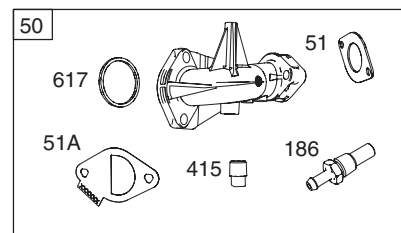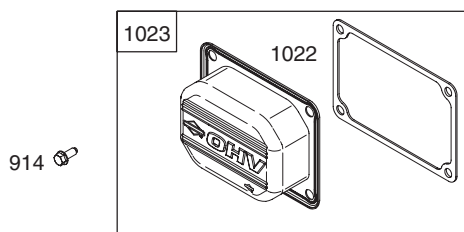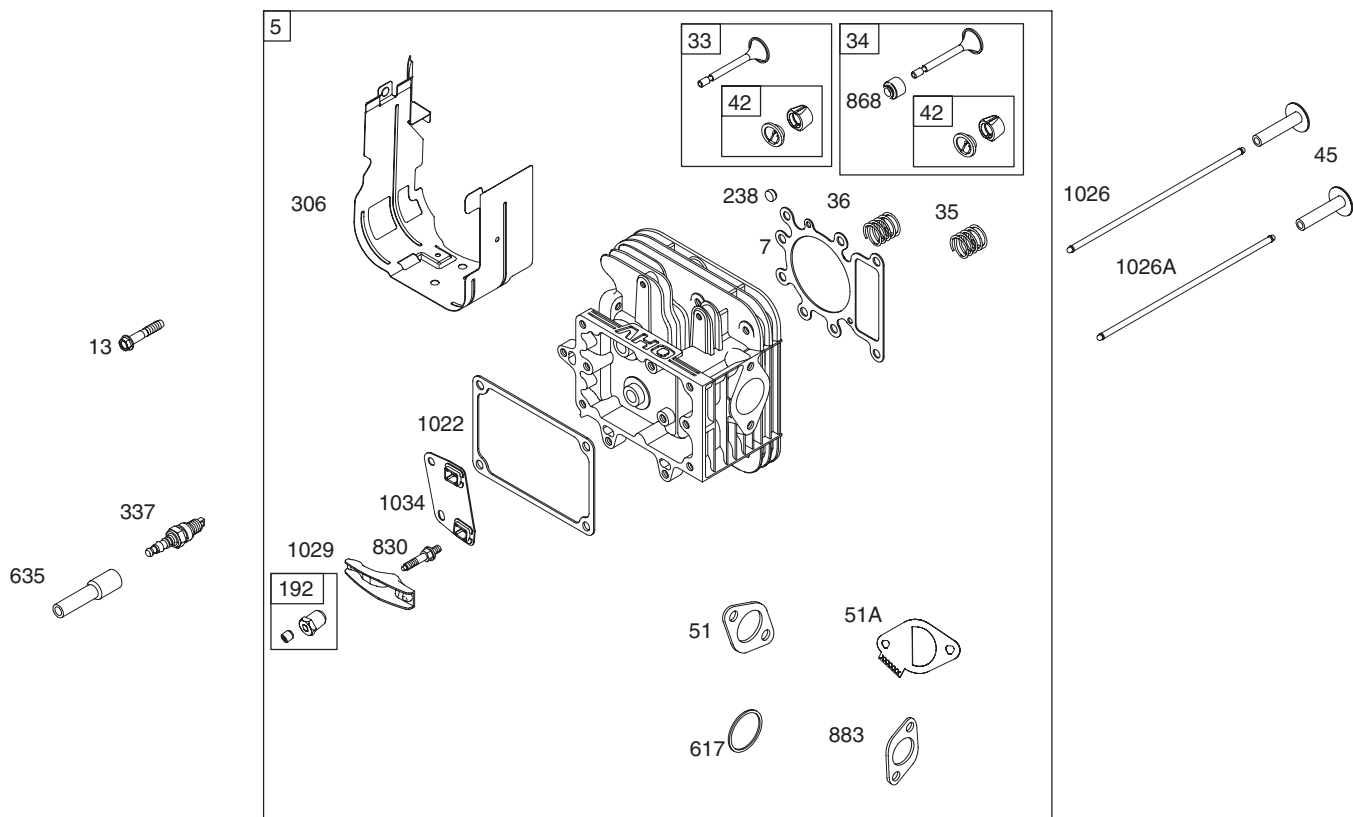

Assemblies include all parts shown in frames.

PARTS LIST

 Craftsman Engine Model 31P677-3373-G2/G6 For Model 247.288841

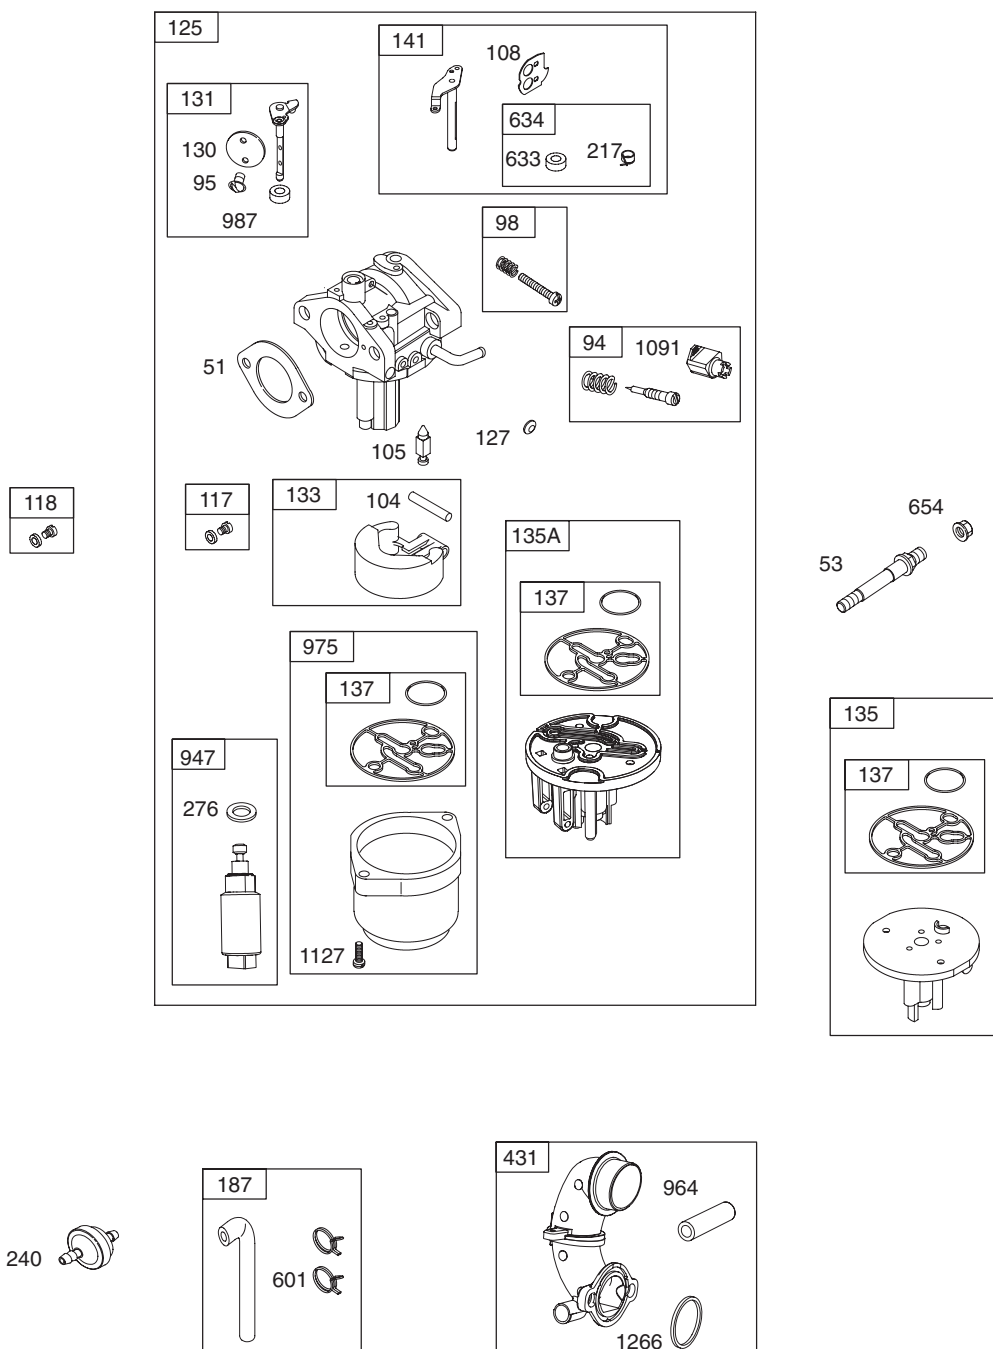


Assemblies include all parts shown in frames.


PARTS LIST

Craftsman Engine Model 31P677-3373-G2/G6 For Model 247.288841

 1036 EMISSIONS LABEL

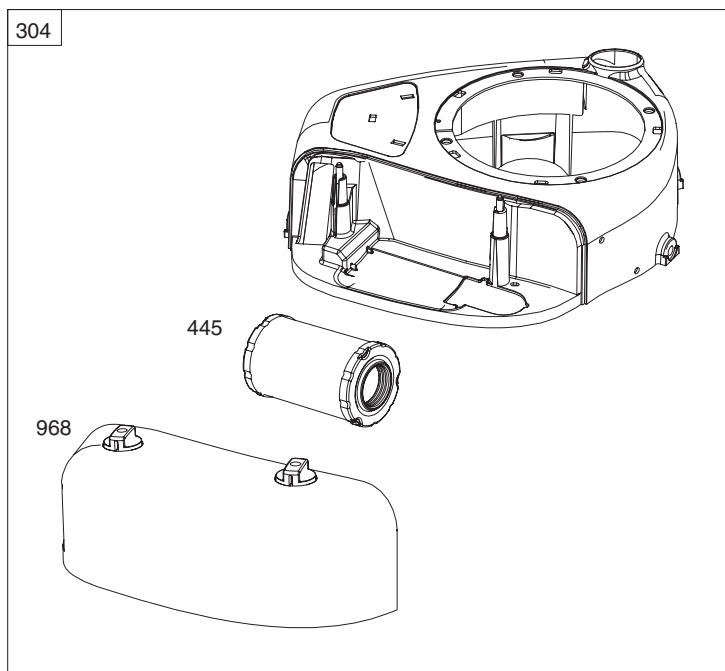


1040

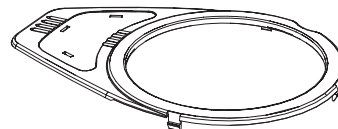 


305

305A


 
305B

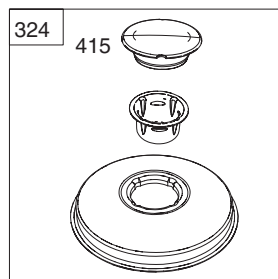

1070

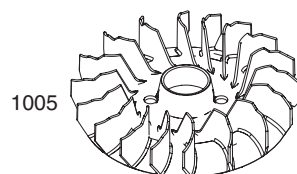 


1044

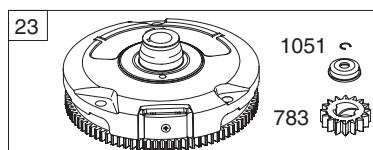  

Assemblies include all parts shown in frames.

PARTS LIST

 Craftsman Engine Model 31P677-3373-G2/G6 For Model 247.288841

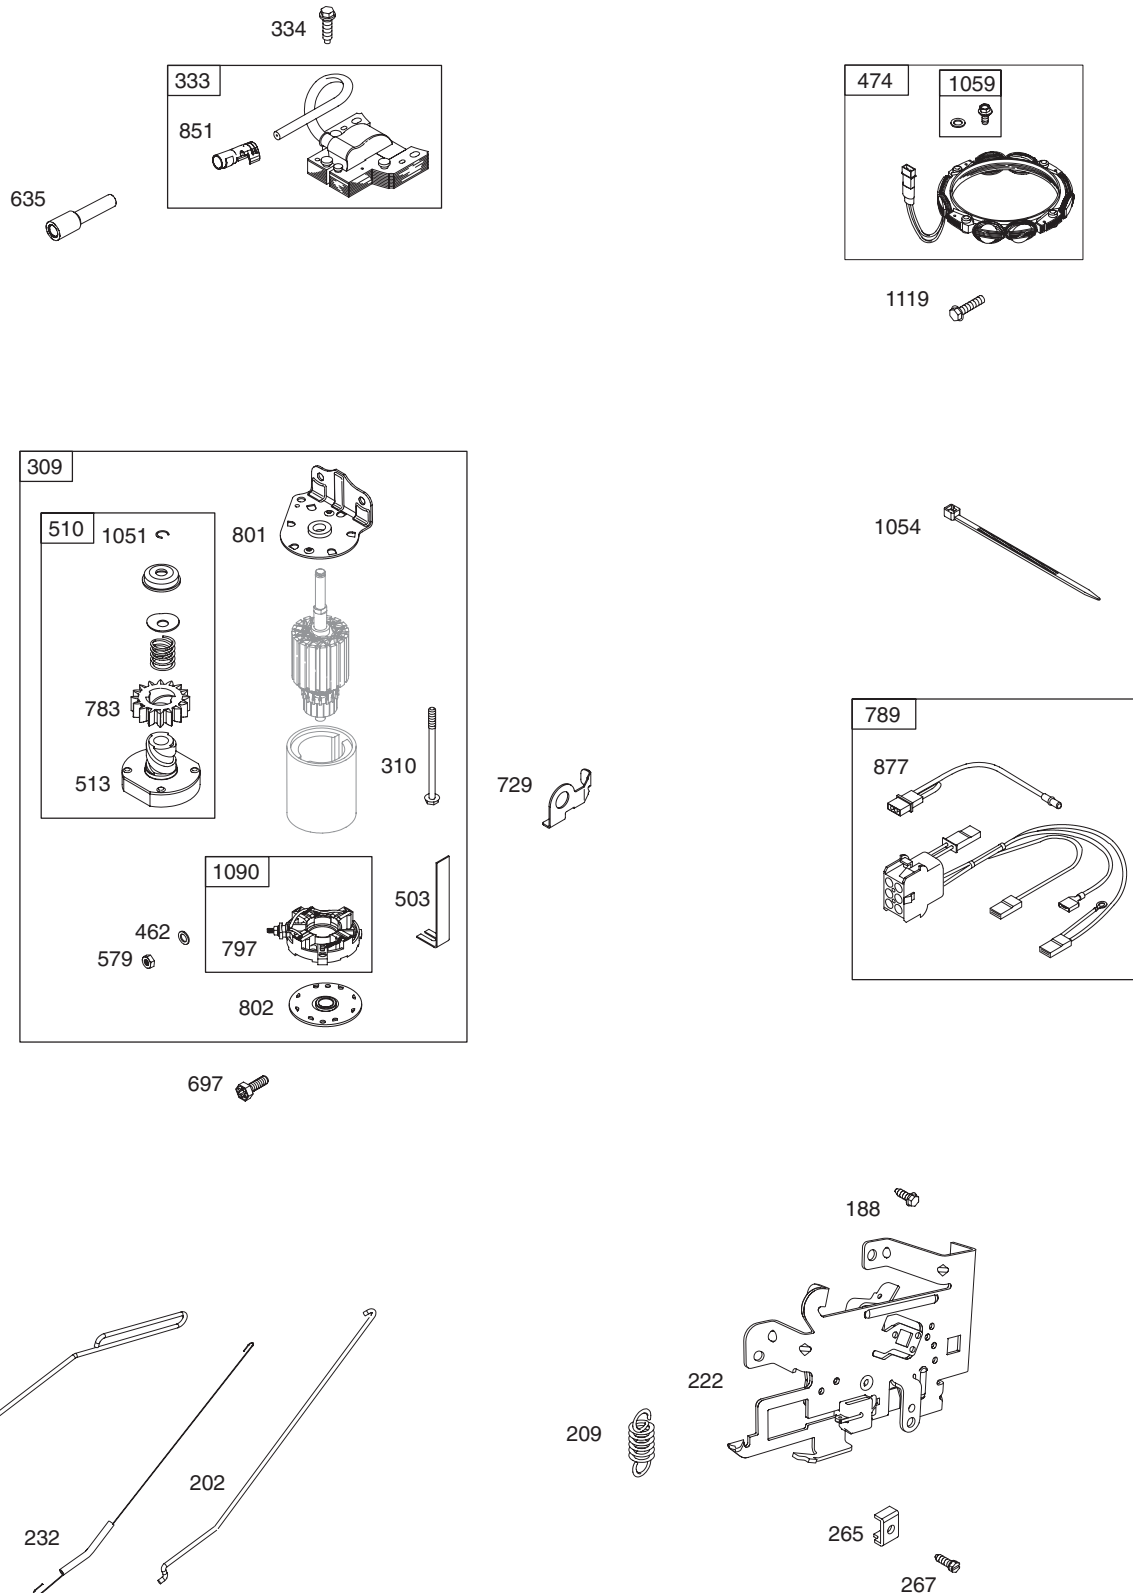

Assemblies include all parts shown in frames.

PARTS LIST

Craftsman Engine Model 31P677-3373-G2/G6 For Model 247.288841

121 CARBURETOR OVERHAUL KIT

 
51

127

617

987

104

137

634

1266

105

633

 
217

1266A




358 ENGINE GASKET SET

3

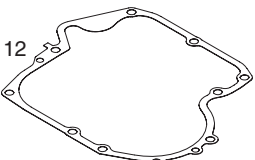12

 883

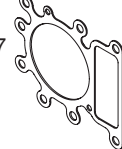7

20

 
691

943

9

51

842

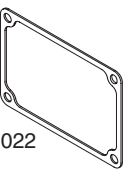1022

 
524

617


868

1266

1095 VALVE GASKET SET

7

 51

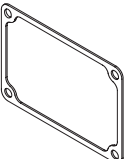1022

868

Assemblies include all parts shown in frames.

PARTS LIST

Craftsman Engine Model 31P677-3373-G2/G6 For Model 247.288841

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	796010	Cylinder Assembly	104	694918	Pin-Float Hinge
2	399265	Kit-Bushing/Seal (Magneto Side)	105	696136	Valve-Float Needle
3	391086s	Seal-Oil (Magneto Side)	108	695419	Valve-Choke
4	697188	Sump-Engine	117	699773	Jet-Main (Standard)
5	796026	Head-Cylinder	118	843099	Jet-Main (High Altitude)
7	796584	Gasket-Cylinder Head	121	796184	Kit-Carburetor Overhaul
11	794683	Tube-Breather	125	796110	Carburetor (Service Carburetor)
12	697110	Gasket-Crankcase	127	690727	Plug-Welch
13	793988	Screw (Cylinder Head)	130	792747	Valve-Throttle
15	690946	Plug-Oil Drain	131	792765	Kit-Throttle Shaft
16	797759	Crankshaft	133	694914	Float-Carburetor
20	795387	Seal-Oil (PTO Side)	135	698780	Tube-Fuel Transfer (Original Carburetor)
22	692125	Screw (Crankcase Cover/Sump)	135A	792022	Tube-Fuel Transfer (Service Carburetor)
23	698281	Flywheel	137	698781	Gasket-Float Bowl
24	796335	Key-Flywheel (Steel)	141	792777	Kit-Choke Shaft
25	796172	Piston Assembly (Standard)	146	691639	Key-Timing
	796173	Piston Assembly (.020" Oversize)	186	794873	Connector-Hose (Intake Manifold)
26	791936	Ring Set (Standard)	187	791805	Line-Fuel (Formed) (Cut to Required Length)
	792649	Ring Set (.020" Oversize)	188	691693	Screw (Control Bracket)
27	698469	Lock-Piston Pin	192	691986	Adjuster-Rocker Arm
28	796007	Pin-Piston	202	691841	Link-Mechanical Governor
29	794122	Rod-Connecting	209	692208	Spring-Governor (Green)
32	791118	Screw (Connecting Rod)	216	691840	Link-Governor
33	792868	Valve-Exhaust	217	695409	Spring-Choke Return
34	791935	Valve-Intake	222	694042	Bracket-Control
35	691279	Spring-Valve (Intake)	227	691374	Lever-Governor Control
36	691279	Spring-Valve (Exhaust)	232	691842	Spring-Governor Link
37	697352	Guard-Flywheel	238	691843	Cap-Valve
42	499586	Keeper-Valve	240	394358s	Filter-Fuel
43	691968	Slinger-Governor/Oil	265	691024	Clamp-Casing
45	690564	Tappet-Valve	267	794904	Screw (Casing Clamp)
46	793880	Camshaft	276	695410	Washer-Sealing
48	N/A	Short Block (Not Available At This Printing)	304	797900	Housing-Blower
50	796180	Manifold-Intake	305	697102	Screw (Blower Housing) (Blower Housing to Cylinder) (1/4-20x1.14)
51	692137	Gasket-Intake	305A	793376	Screw (Blower Housing) (1/4-20x.68)
51A	796081	Gasket-Intake	305B	795891	Screw (Blower Housing) (To Carburetor Elbow) (#10-16x.43)
53	690227	Stud (Carburetor)	305C	799370	Screw (Blower Housing) (After Date Code: 10120500) (1/4-20x.90)
54	691148	Screw (Intake Manifold)			
78	691693	Screw (Flywheel Guard)			
94	793610	Kit-Idle Mixture			
95	690718	Screw (Throttle Valve)			
98	695408	Kit-Idle Speed			

PARTS LIST

Craftsman Engine Model 31P677-3373-G2/G6 For Model 247.288841

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
306	796006	Shield-Cylinder	684	697157	Screw (Breather Passage Cover)
307	691693	Screw (Cylinder Shield)	691	692407	Seal-Governor Shaft
309	693551	Motor-Starter	697	690372	Screw (Drive Cap)
310	690323	Screw (Starter Motor)	718	690959	Pin-Locating
324	796308	Screen/Cup Assembly	729	691224	Clip-Wire
333	795315	Armature-Magneto	741	697128	Gear-Timing
334	691061	Screw (Magneto Armature)	750	790832	Screw (Oil Pump Cover)
337	491055s	Plug-Spark	757	793242	Link-Counterweight
358	796187	Gasket Set-Engine	758	793763	Counterweight
404	691691	Washer (Governor Crank)	759	697392	Pin-Counterweight
415	794129	Plug (Cover/Retainer)	783	693713	Gear-Pinion
415A	690283	Plug (Intake Manifold)	789	698329	Harness-Wiring
431	797901	Elbow-Intake	797	693167	Nut (Brush Retainer)
445	796031	Filter-Air Cleaner Cartridge	801	691283	Cap-Drive
462	691261	Washer (Starter Cable)	802	691286	Cap-End
474	696459	Alternator	830	691095	Stud-Rocker Arm
503	691532	Strap-Starter	842	691031	Seal-O Ring (Dipstick Tube)
505	691251	Nut (Governor Control Lever)	847	790442	Dipstick/Tube Assembly
510	693699	Drive-Starter	850	100106	Sealant-Liquid
513	692024	Clutch-Drive	851	692424	Terminal-Spark Plug
523	699908	Dipstick	868	690968	Seal-Valve
524	691032	Seal-Dipstick Tube	877	790544	Wire/Connector-Alternator
525	697184	Tube-Dipstick	883	692236	Gasket-Exhaust
552	697144	Bushing-Governor Crank	914	697551	Screw (Rocker Cover)
562	691119	Bolt (Governor Control Lever)	943	690589	Seal-O Ring (Oil Pump Cover)
579	691029	Nut (Starter Cable)	947	699915	Solenoid-Fuel
584	794682	Cover-Breather Passage	964	799159	Cap-Connector
585	697109	Gasket-Breather Passage	965	499613	Cover-Oil Pump
601	791850	Hose-Clamp (Green)	968	797902	Cover-Air Cleaner
614	691620	Pin-Cotter (Governor Crank)	975	699502	Bowl-Float
616	692012	Crank-Governor	987	698777	Seal-Throttle Shaft
617	692138	Seal-O Ring (Intake Manifold) (Red)	1005	796083	Fan-Flywheel
633	699813	Seal-Choke/Throttle Shaft (Choke Shaft)	1017	796981	Screen-Oil Pump
634	698779	Spring/Seal Assembly (Choke Shaft)	1022	272475s	Gasket-Rocker Cover
635	691909	Boot-Spark Plug	1023	797421	Cover-Rocker
643	698401	Retainer-Air Filter	1024	794644	Pump-Oil
654	690958	Nut (Carburetor)	1026	692003	Rod-Push (Intake)

PARTS LIST

Craftsman Engine Model 31P677-3373-G2/G6 For Model 247.288841

Ref. No.	Part No.	Description
1026A	692011	Rod-Push (Exhaust)
1027	492932s	Filter-Oil
1029	691751	Arm-Rocker
1034	690822	Guide-Push Rod
1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)
1040	699852	Plate-Trim
1044	698139	Screw (Flywheel)
1051	691265	Ring-Retaining
1054	280275	Tie-Cable
1058	276344	Operator's Manual
1059	698516	Kit-Screw/Washer (Alternator)
1070	690363	Screw (Flywheel Fan)
1090	691293	Retainer-Brush
1091	691333	Cap-Limiter
1095	794152	Gasket Set-Valve
1119	691183	Screw (Alternator)
1127	695407	Screw (Float Bowl)
1263	697124	Reed-Breather
1264	697104	Screw (Breather Reed)
1266	691917	Seal-O Ring (Intake Elbow) (Red)
1270	793243	Plug-AVS Counterweight
1329	31P677-3373-G2/G6	Replacement Engine
1330	276781	Repair Manual

Engine Gasket Set	Key No. 358
Valve Gasket Set	Key No. 1095
Carburetor Overhaul Kit	Key No. 121