


2 Style Hood

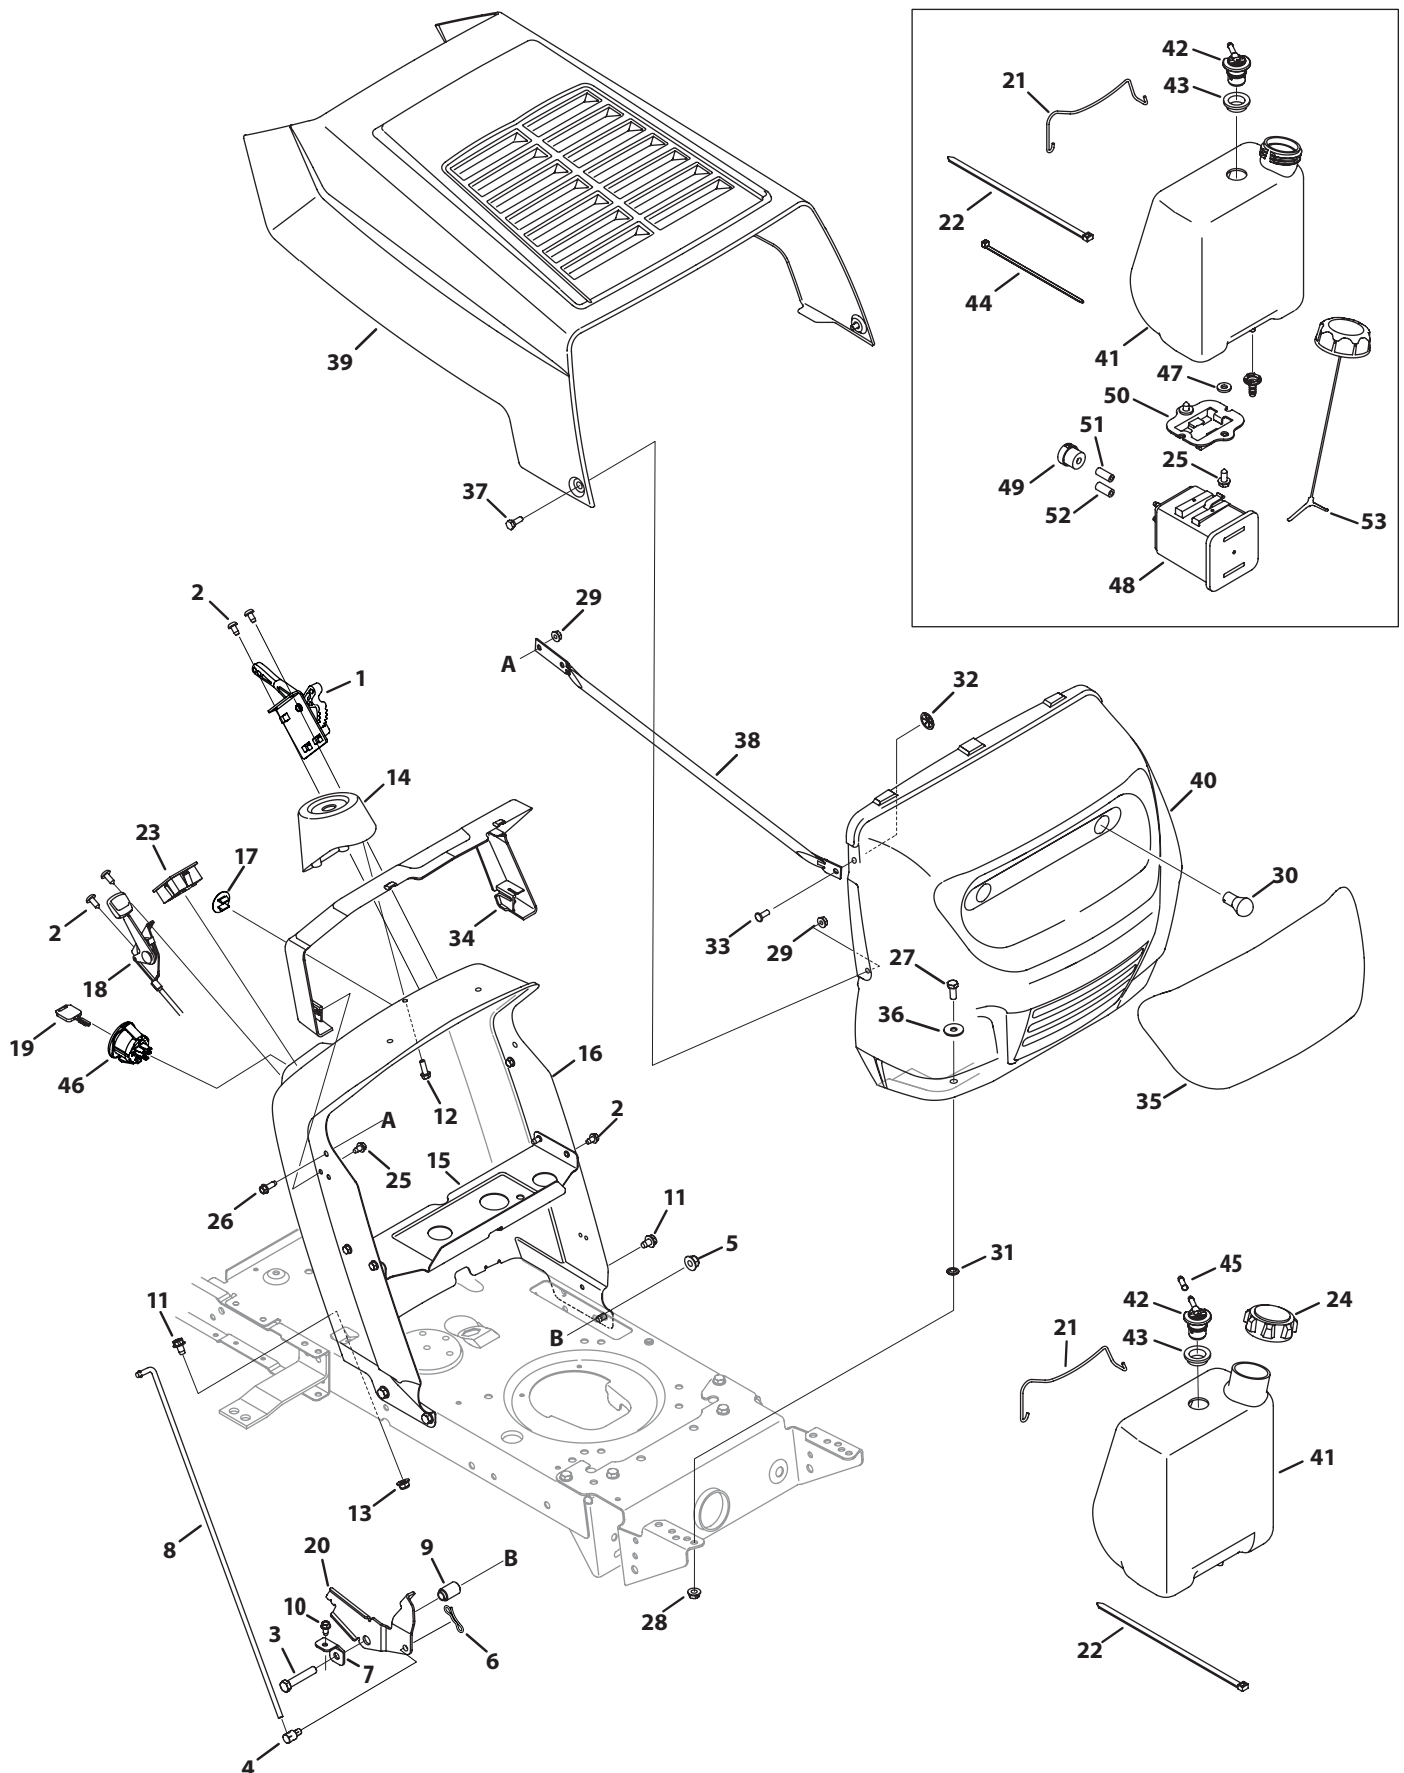


2 Style Hood

Ref.	Part Number	Description
1	983-04216	7-Speed Control Assembly
	983-04225	6-Speed Control Assembly
2	710-05070	Screw, 1/4-20 x .500
3	710-3144	Hex Screw, 3/8-16 x 2.0
4	711-0736	Ferrule, 1/4-20 x 1.00
5	710-04065	Flangelock Nut, 3/8-16
6	714-04040	Bow Tie Cotter Pin, 72
7	783-06823	Speed Latch Tab
8	747-04430	Speed Selector
9	750-04465B	Flange Spacer, .390 x .671 x 1.095
10	710-0599	Hex Washer Screw, 1/4-20 x .500
11	710-0604A	Screw, 5/16-18 x .625
12	710-05108	Screw, 1/4 x .750
13	712-04063	Flangelock Nut, 5/16-18
14	731-04945	Steering Support
15	783-04584A	Gas Tank Support Bracket
16	783-04873B	Dash, No RMC
	983-04889B	Dash, RMC
17	731-05265	Choke Plug
18	746-04364	Throttle/Choke Cable
19	925-1745A	Key
20	783-04862B	Speed Latch. RMC
	783-04903A	Speed Latch, No RMC
21	683-04448	Battery Assembly Rod
22	726-0230	Cable Tie
23	925-04156	Ammeter
24	751-0603A	Fuel Cap
	951-12179	Fuel Cap
25	710-04484	Screw, 5/16-18 x .750

Ref.	Part Number	Description
26	710-0642	Screw, 1/4-20 x .750
27	710-3008	Hex Screw, 5/16-18 x .75
28	712-04063	Flangelock Nut, 5/16-18
29	712-04064	Flangelock Nut, 1/4-20
30	925-0963	Miniature Lamp 12V Socket
31	726-0201	Speed Nut, .3125
32	926-04012	Push-On Nut, .25
33	728-0162	Flat Head Rivet, 1/4"
34	731-05012B	Dash
35	731-06042	Lens
36	736-3078	Flat Washer, .344 x 1.0 x .063
37	938-0952A	Shoulder Bolt, 1/4-20 x .375 x .125
38	749-04220	Grill Support Rod
39	783-04608	Hood
40	783-05656	Grill
41	751-0555B	1.5 Gallon Fuel Tank
	951-04304	1.36 Gallon Fuel Tank
42	751-12118	Rollover Valve
43	735-04081	Rubber Grommet, 23 x 3.55
44	725-0157	Cable Tie
45	751-12089-28	Hose Vent, 3/16
46	925-04659	Key Switch
47	936-3008	Flat Washer, .344 x .750 x .120
48	951-10589	5 Gallon Carbon Canister
49	951-10590	Vent Filter Canister
50	951-10610	Canister Adaptor Bracket
51	751-10749-30	Hose, Fuel, Low Perm., White
52	751-10750	Hose, Fuel, Low Perm., Yellow
53	951-10947	Fuel Cap, 2.25"


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Frame and PTO Lift

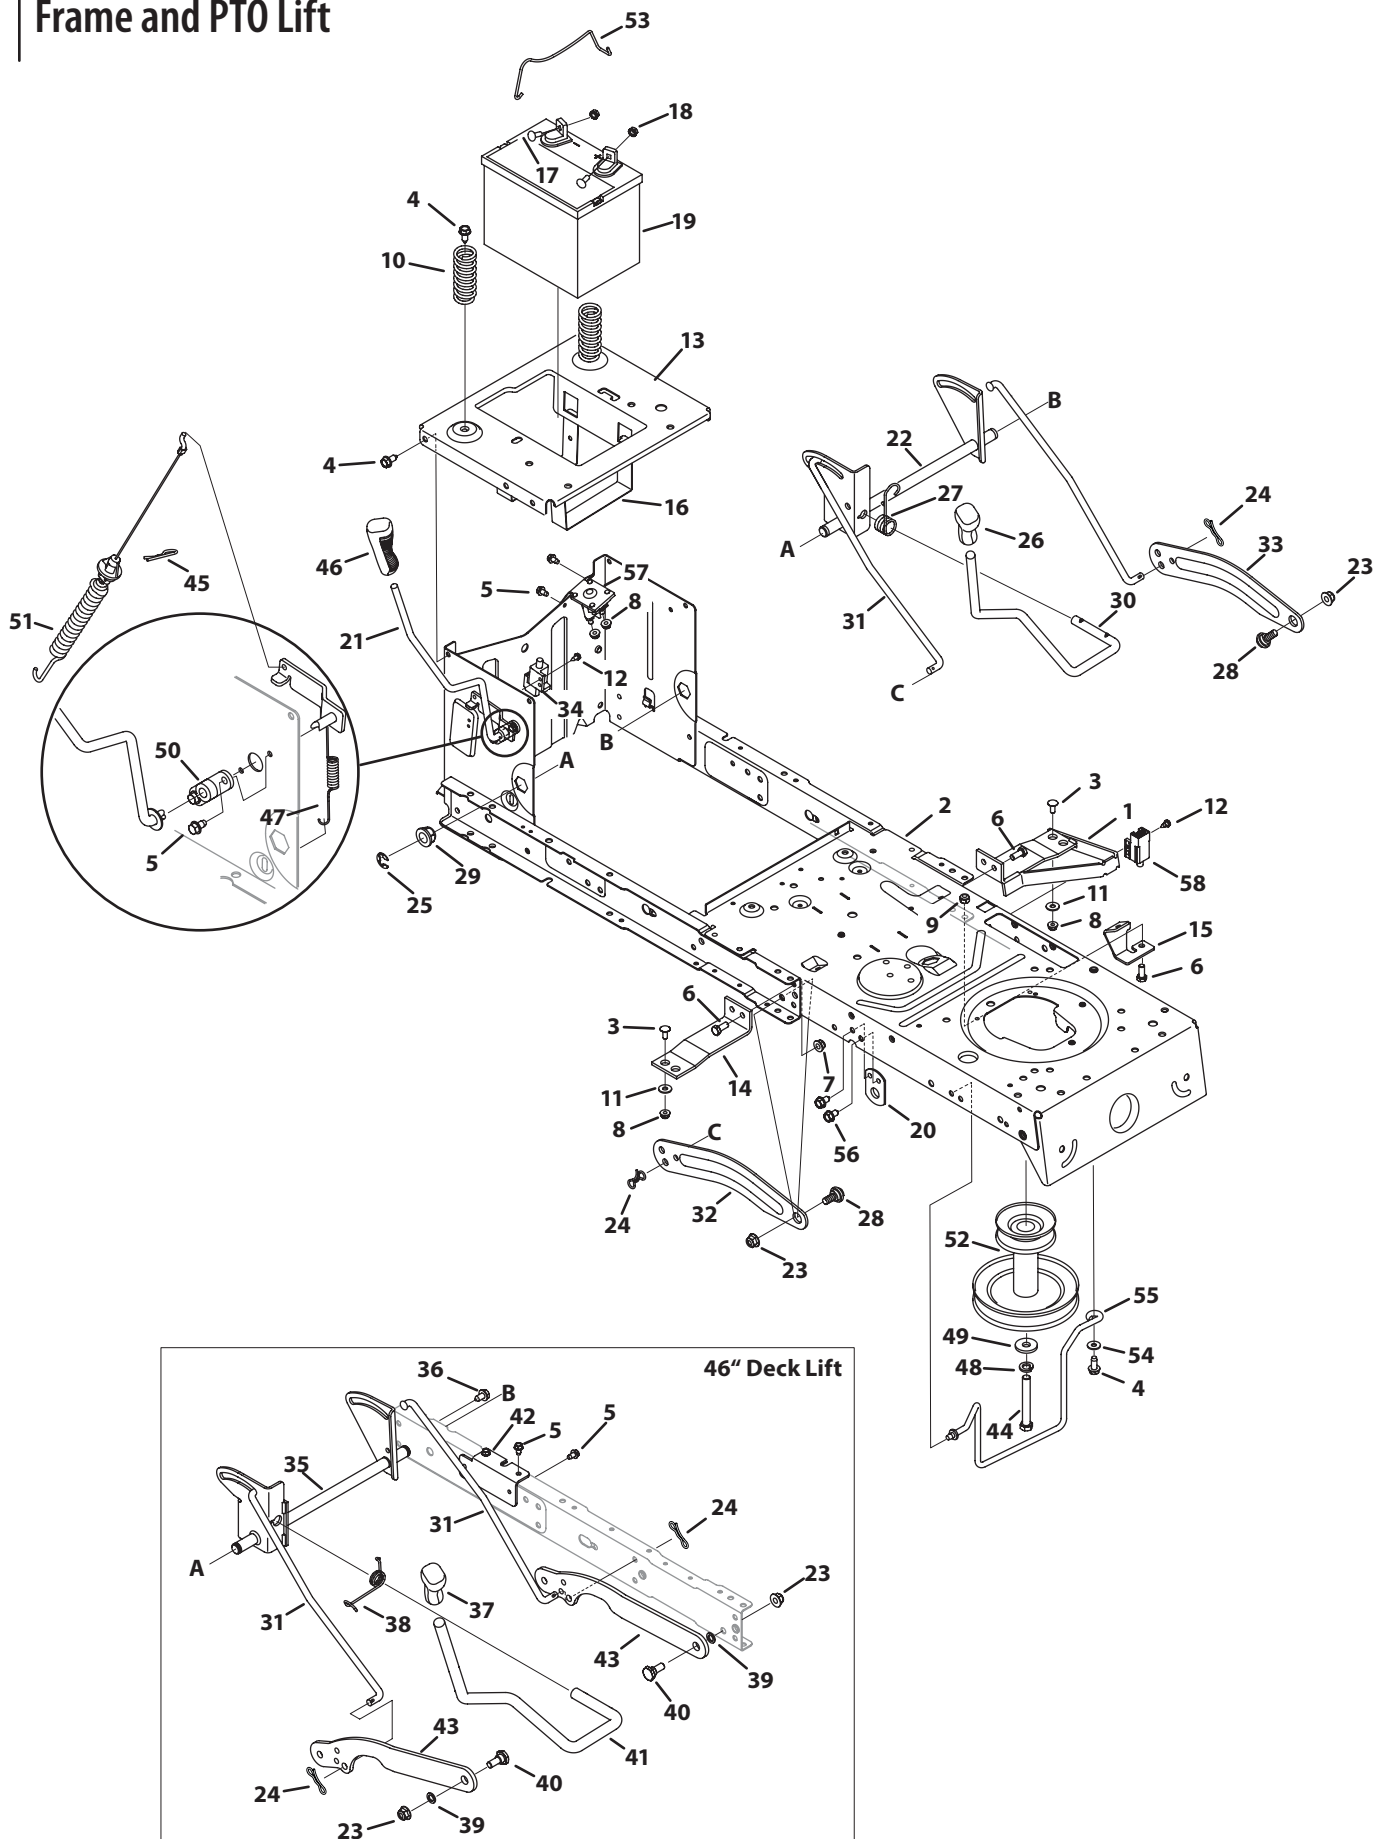

Ref.	Part Number	Description	Ref.	Part Number	Description
1	683-04195	Support Bracket	32	783-04494C	38/42" Lift Arm, RH
2	683-04649	Frame Assembly	33	783-04711C	38/42" Lift Arm, LH
3	710-0134	Screw Carriage, 1/4-20 x .62	34	725-04363	Switch Interlock
4	710-04484	Screw 5/16-18 x .750	35	683-04334	Lift Assembly, 46"
5	710-0599	Screw, 1/4-20 x .500	36	710-0604A	Screw, 5/16-18 x .625
6	710-3008	Hex Screw, 5/16-18 x .75	37	720-0298	Handle Grip, 5/8
7	712-04063	Flangelock Nut, 5/16-18	38	732-04438	Torsion Spring Handle, 46"
8	712-04064	Flangelock Nut, 1/4-20	39	936-0140	Flat Washer, .385 x .62 x .063
9	912-0429	Hexlock Nut, 5/16-18	40	938-0380	Shoulder Bolt, 3/8-16 x .500 x .270
10	732-04035	Compression Spacer, 1.28 x 3.125	41	747-04653	46" Lift Handle
11	736-0173	Flat Washer, .28 x .74 x .063	42	783-05389A	Frame Brace Bracket
12	738-04237A	Shoulder Spacer, 10-32 x .500	43	783-0678C	Lift Deck Link
13	783-04548D	Seat Frame Bracket	44	710-04607	Hex Screw, 7/16-20 x 2.75, 46"
14	783-04637	Running Board Bracket		710-04608	Hex Screw, 7/16-20 x 3.25, 38/42"
15	783-04753	Support Frame Bracket	45	914-0145	Click Pin, .092 x 1.64
16	783-04869A	Battery Bracket	46	720-04049A	Handle Grip, 3/8
17	710-04666	Hex Head Flange, 1/4-20 x .75	47	732-04276A	PTO Spring Extension
18	712-0271	Sems Nut, 1/4-20	48	936-0171	Regular Duty Washer Lock, 7/16
19	925-1707D	230 CCA Battery	49	736-0322	Flat Washer, .450 x 1.250 x .164
20	783-04536B	Support Bracket	50	741-04119A	PTO Bearing
21	647-04096	PTO Handle Assembly	51	946-04173C	Deck Engage Cable
22	683-04155A	Lift Assembly, 38/42"	52	756-04207A	Engine Pulley, 3.39 x 6.12, 46"
23	712-04065	Flangelock Nut, 3/8-16		756-04196A	Engine Pulley, 3.39 x 6.12, 38/42"
24	714-04040	Bow-tie Cotter Pin	53	683-04448	Battery Hold Down Rod
25	716-0106A	E Ring	54	936-0300	Flat Washer, .406 x .875 x .059
26	720-0311	Handle Grip, 1/2	55	747-04332A	38" Belt Keeper
27	732-04225	Torsion Spring		747-04857	42" Belt Keeper
28	738-04130	Shoulder Bolt, 3/8-16 x .625 x .175		683-04414	46" Belt Keeper
29	941-0225	Hex Flange Bearing	56	710-0604A	Screw, 5/16-18.0 x .625
30	747-04282	Deck Lift Handle 38"	57	725-04439	12V Solenoid
	747-05296	Deck Lift Handle 42"	58	925-04039	Screw Mount Interlock Switch
31	747-04393	Lift Rod			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

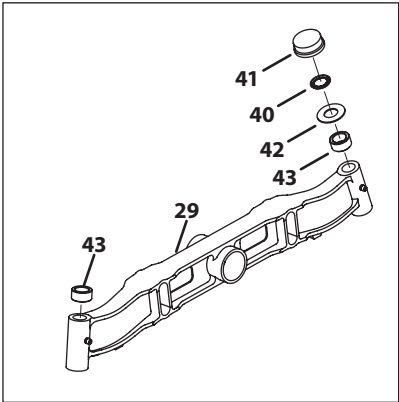


Front End Steering

Ref.	Part Number	Description
1	617-04094	Front Steering Gear Assembly
2	710-0514	Hex Screw, 3/8-16 x 1.00
3	710-0643	Hex Screw, 5/16-18 x 1.00, Lock
4	710-1309	Machine Screw, 5/16-18 x .750
5	710-3180	Hex Screw, 5/16-18 x 1.75
6	912-0240	Jam Nut, 7/16-20
7	912-0214	Jamlock Nut, 3/8-24
8	712-04063	Flangelock Nut, 5/16-18
9	638-04008P	Front RH Axle
	938-04013	46" Front RH Axle
10	923-0448A	Ball Joint, 7/16-20
11	736-0242	Bell Washer, .340 x .872 x .060
12	938-04007A	Front LH Axle
	938-04014A	46" Front LH Axle
13	738-04141	Shoulder Bolt, 5/16-18 x .435 x .350
14	738-0919A	Steering Shaft, 5/8 x 22.08
15	941-04124	Flange Bearing, 5/8
16	931-0484A	Hub Cap
17	747-05385	Steering Link
18	948-0389	Cap, 1.25 x .16
19	748-04065	Steering Block
20	748-04068	Spacer, .71 x .125 x .56
21	731-04681	Cap, Troy-Bilt
	731-04039	Cap
	731-04040	Sprig Cap
22	738-04162A	Shoulder Spacer, .884 x .190
23	736-04228A	Flat Washer, .781 x 1.590
24	783-04568	Front Deck Hanger Bracket

Ref.	Part Number	Description
25	714-04039A	Cotter Pin, 5/32 x 1.25
26	710-04484	Screw, 5/16-18 x .750
27	712-04065	Flangelock Nut, 3/8-16
28	914-0474	Cotter Pin, .125 x .75
29	683-0128B	Pivot Axle
	919-04177A	Pivot Axle
30	631-04028	Steering Wheel
	631-04560	Steering Wheel Soft Grip
31	934-04081	Rim Asm, 6.0 x 4.5, 42/38" Deck
	634-04634	Rim Asm, 6.0 x 4.5, 46" Deck
32	934-0255	Valve, tubeless Air
33	734-1731	Tire, 15 X 6 X 6 Sq Shldr 42/46"
	734-04240A	Tire, 15 X 6 X 6 Rd Shldr, 38"
34	738-04128	Shoulder Bolt, 3/8-16 x .500 x 2.38
35	747-04299A	Fixed Rod
36	783-05326B	Pivot Bar Bracket
	783-04601C	Pivot Bar Bracket
37	726-0341	Push Cap, 3/4
38	731-04057A	Standard Axle Cap
39	741-0660A	Flange Bearing, .760 x .941 x 1.0
40	726-04035	Push Nut, 3/4
41	731-04693	Hub Cap
42	936-0316	Flat Washer, .78 x 1.59 x .060
43	748-04068	Spacer, .71 x .125 x .56
44	634-04086	Wheel Assembly, 42"
	634-04325	Wheel Assembly, 38"
	634-04639	Wheel Assembly, 46"

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Seat and Fender

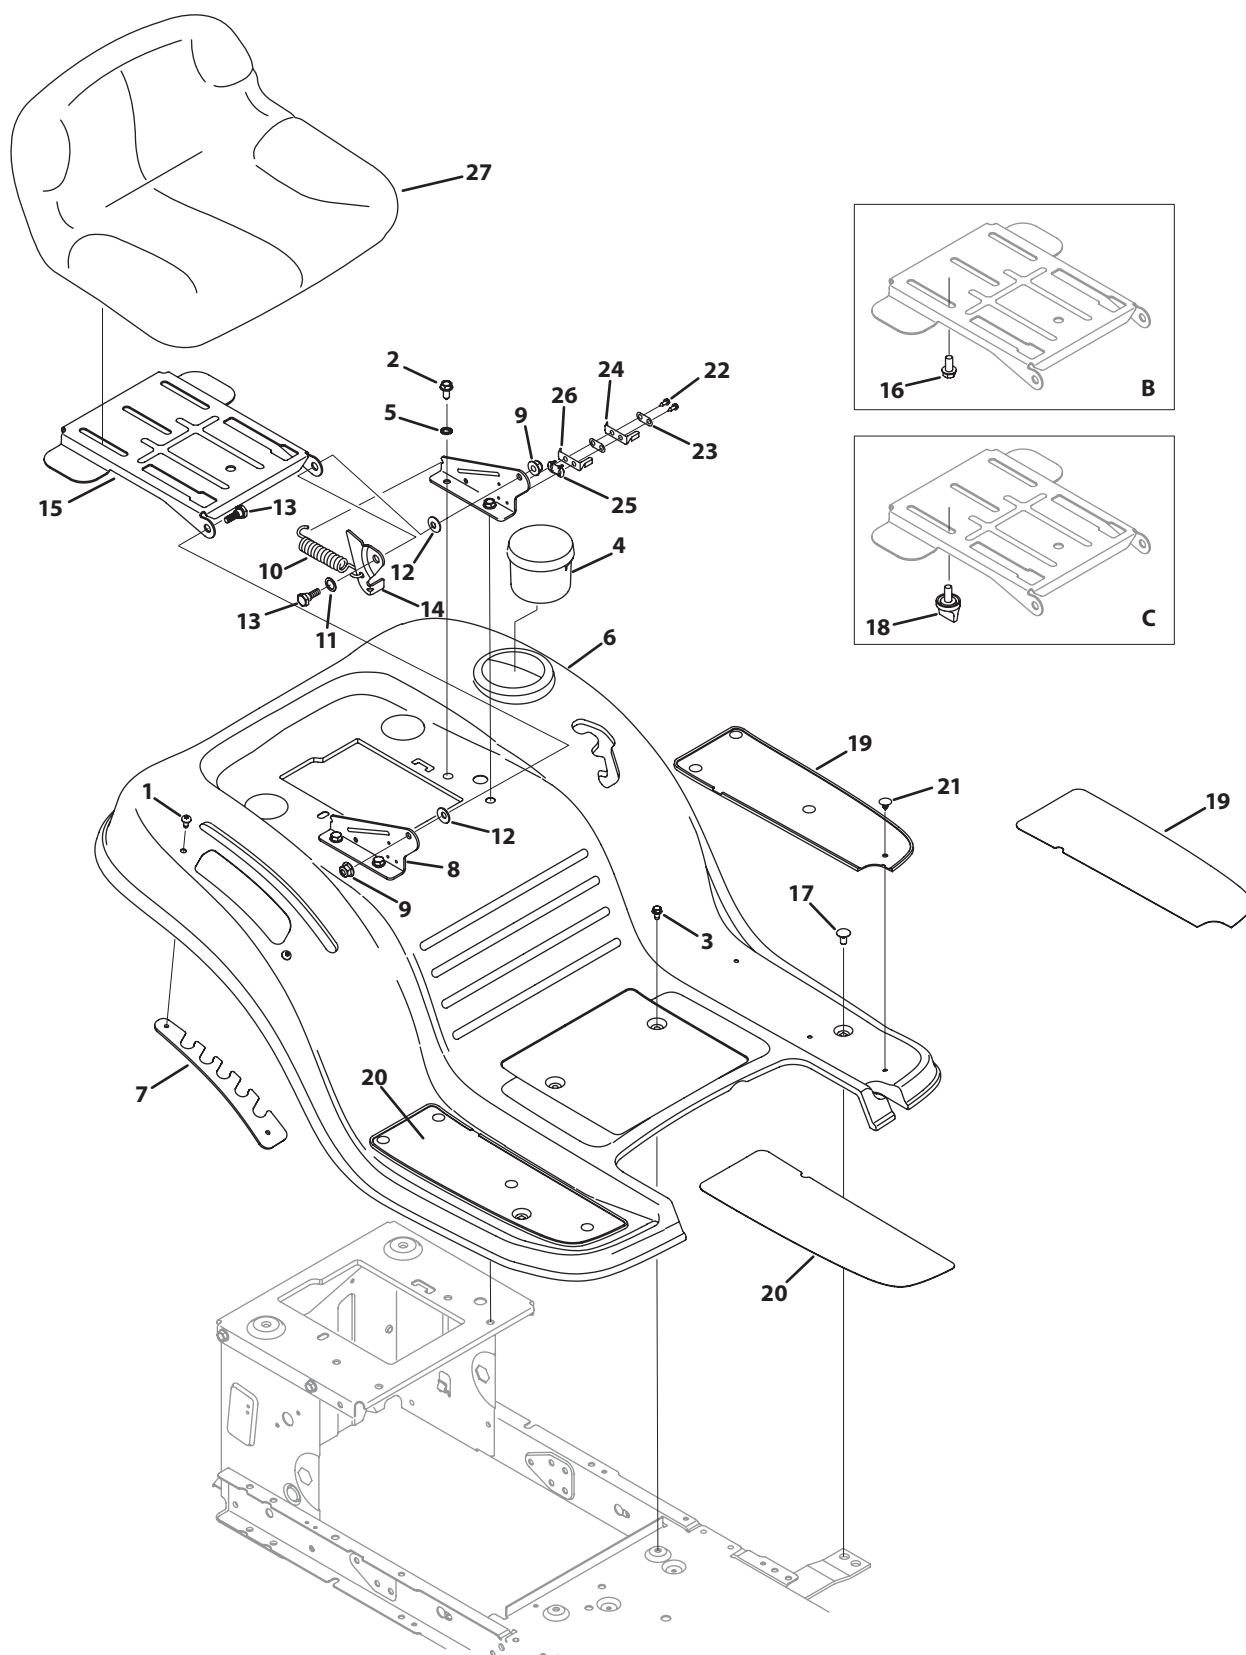

Ref.	Part Number	Description
1	710-05070	Screw, 1/4-20 x .500
2	710-04484	Screw, 5/16-18 x .750
3	710-0599	Screw Pan Torx Head, 1/4-20 x .500
4	731-04591A	Cup Holder
5	736-0607	Loack Washer, 5/16
6	783-04587D	Fender - Red
7	783-04843	Lift Adjuster Bracket - Powder Black
8	783-1489D	Seat Mount Bracket - Powder Black
9	712-04063	Flangelock Nut, 5/16-18
10	732-1184	Extension Spring
11	936-0108	Flat Washer, .510x .750 x .033
12	736-0242	Bell Washer, .340 x .872 x .060
13	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
14	783-0209D	Lift Seat Bracket
15	783-04081D	Pivot Seat Manual Adjust Bracket
16	710-04482	Hex Head Flange, 3/8-16 x .875
17	710-0134	Screw Carriage, 1/4-20 x .62
18	720-04061	Knob, 3/8-16 x .875
19	735-04047	Foot Pad, LH
	723-04026	Foot Pad, Abrasive, LH
20	735-04048	Foot Pad, RH
	723-04025	Foot Pad, Abrasive, RH
21	726-3046	Ratchet Clip, .250 x .500
22	710-0227	Screw, 8-18 x .500
23	726-0279	Insulator Plate
24	925-1303	Outer Seat SPring
25	726-0278	Insulator Boss Plate
26	725-1439	Inner Seat Spring
27	757-04083	Medium Back Seat, Black, Set-up B
	757-04099	Low Back Seat, Black, Set-up B or C
	757-04088	High Back Seat, Set-up B


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

This diagram illustrates the exploded view of a mechanical assembly, likely a pump or motor component. The parts are numbered 1 through 63. Key components include a main housing (1), a shaft (23), a pulley (36), a spring (52), and a large wheel (55). The diagram also shows various fasteners, pins, and structural elements. Labels A, B, and C indicate specific areas of interest or assembly points. The exploded view shows the relative positions and assembly sequence of the components.

Ref.	Part Number	Description	Ref.	Part Number	Description
1	918-04566	Transmission Drive Assembly	33	948-0334	Spacer, T-Axle, 46" Only
2	647-04034C	Pedal Assembly	34	750-0566A	Spacer, .260 x .375 x 1.030 LG
3	647-04035	Shaft Lever Assembly	35	750-0802	Spacer, .640 ID x .76 OD x 2.63
4	710-0227	Screw, 8-18:0.500	36	954-0241A	V Belt, 5L 35.25 POLY
5	710-04484	Screw, 5/16-18 x .750	37	954-04249A	V Belt, 5L 70.90 POLY
6	710-0599	Screw, 1/4-20 x 0.500	38	956-04002	V Pulley 7.25 DIA SPUN
7	710-0604A	Screw, 5/16-18 x 0.625	39	783-04536B	Pedal Support Bracket
8	710-0809	Screw, 1/4-20 x 1.250	40	783-04595A	Shaft Adjust Bracket
9	710-1266	Hex Screw, 5/16-18 x .625	41	956-04015A	Variable Speed Pulley Assembly
	710-0176	Hex Screw, 5/16-18 x 2.75	42	683-04176A	Transmission Bracket Assembly
10	710-3008	Hex Screw, 5/16-18 x .75	43	683-04207	Idler Bracket Assembly
11	911-04075A	Ferrule, 3/8-24 X .375 DIA.	44	710-0347	Hex Screw, 3/8-16 x 1.75
12	712-04063	Flangelock Nut, 5/16-18	45	710-1260A	Screw, 5/16-18 x 0.750
13	712-0700	Flange Nut, 9/16-18	46	712-04065	Flangelock Nut, 3/8-16
14	914-0209	Cotter Pin INT- .125 DIA	47	938-0347	Shoulder Spacer, .625 ID x .169
15	714-04040	Bow-Tie Cotter Pin, 72	48	683-04206	Bracket Assembly
16	718-04407	Pulley Hub, 5/8 SPLINE	49	710-0627	Hex Screw, 5/16-24 x .750
17	720-04028	Shift Knob	50	710-0778	Screw, 1/4-20 x 1.500
18	725-0157	Cable Tie	51	718-04261	Bearing Cup
19	725-1644	Short Spring Switch	52	732-04746	Extension Spring, .94 OD x 6.75 LG
20	726-0214	Push Cap, 5/8	53	736-0362	Flat Washer, .330 x 1.25 x .06:HT
21	926-0320	Plate Insulator Nut	54	941-0600	Ball Bearing, 17 x 40 x 12
22	731-04602	Sleeve, .758 x .821 x 3.3125	55	634-04324	Wheel, 20 x 8 x 8, 38"
23	731-04604	Sleeve, .758 x .821 x 2.4375		634-0104	Wheel, 20 x 8 x 8, 42/46"
24	732-04306	Spring Extension, .80 OD x 3.28 LG	56	736-0242	Bell Washer, .340 x .872 x .060
25	732-04488	Spring Extension, .38 OD x 3.25 LG	57	725-04363	Switch Interlock
26	732-0716D	Spring Extension, .59 OD x 4.00 LG	58	17962	Plate Switch
27	735-0239	Foot Pad, 4.0 LONG	59	738-04237A	Shoulder Screw, #10-32 x .500
28	756-04325	Idler Pulley	60	731-06894	Shift Plate Bearing
29	747-05243	Shift Rod, 46"	61	634-04369	Rim, 8.0 x 7.0 x .750, 38/42/46"
	747-05244	Shift Rod, 38/42"	62	934-0255	Valve, tubeless Air
30	747-05186	Variable Speed Control Rod	63	734-1730	Tire, 20 X 8 X 8 Sq Shldr, 42/46"
31	747-05188	Brake Rod		734-04241	Tire, 20 X 8 X 8 Rd Shldr, 38"
32	747-04969	Belt Keeper Rod			


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

46" Deck

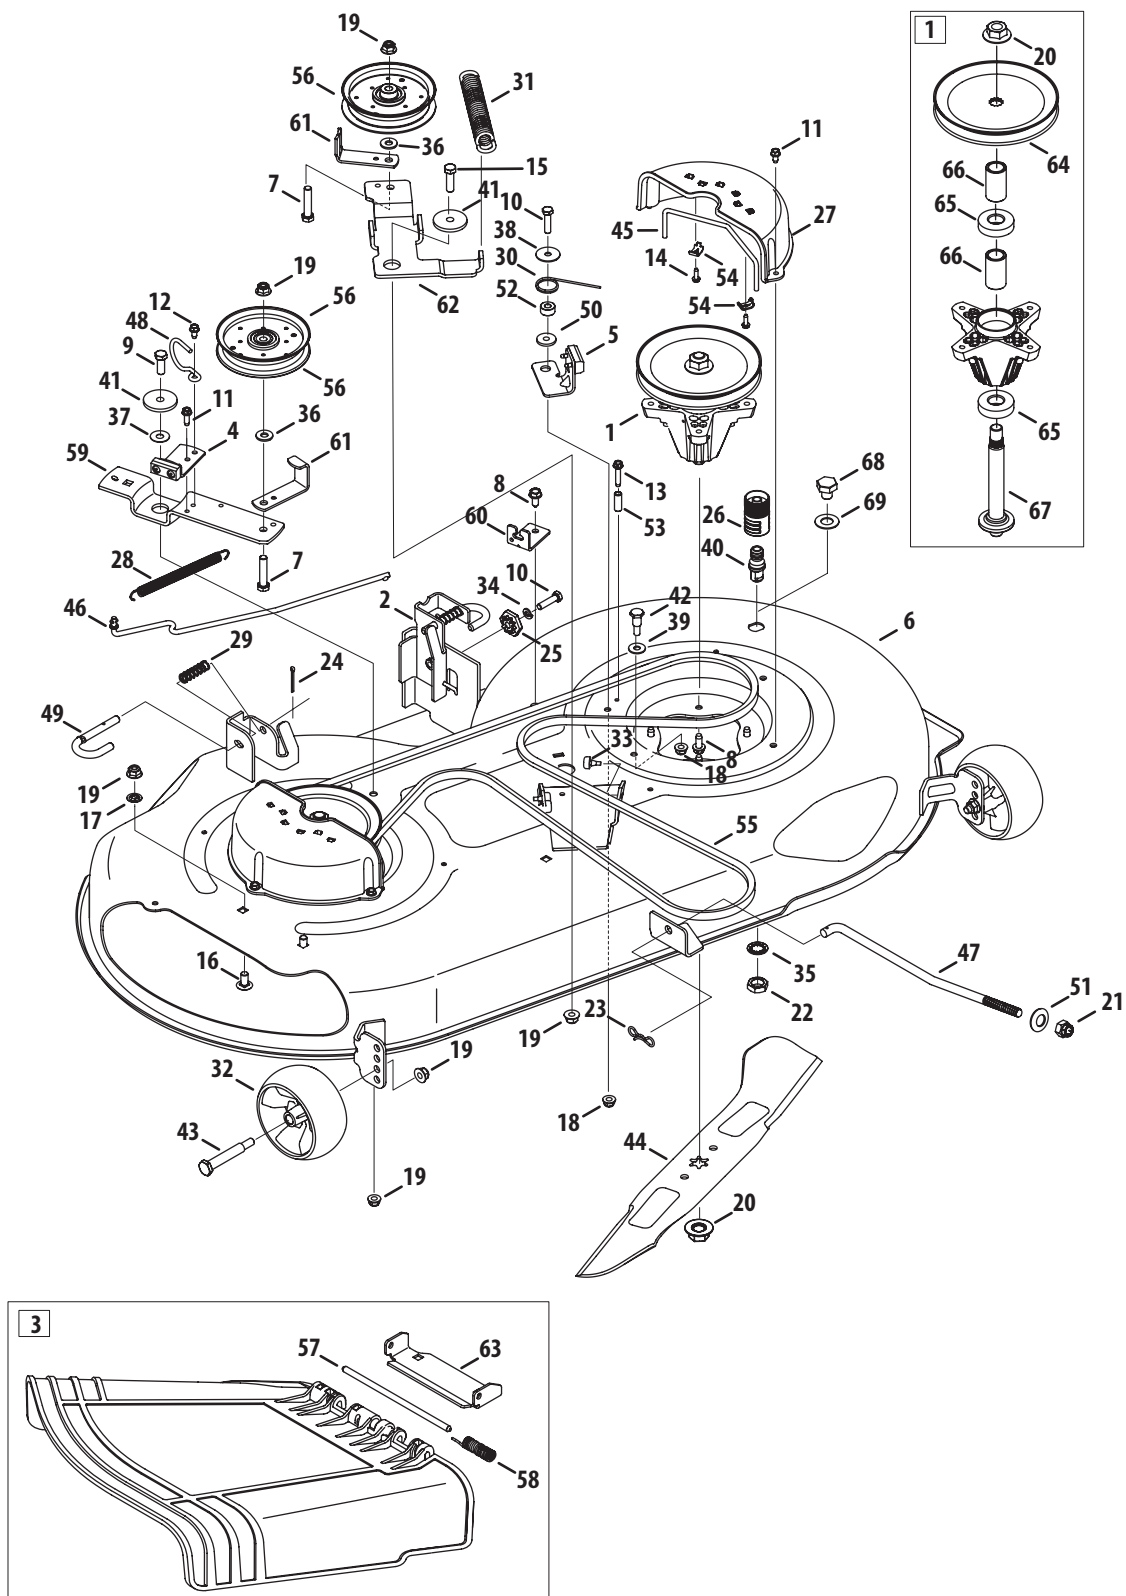

Ref.	Part Number	Description
1.	918-04865A	Spdl Asm, Pul 6.93 Dia W/O Zerk
2.	683-0254B	Brkt Asm, Deck, Hngr Lh Lt
3.	631-04288	Chute Deflector Assembly
4.	983-04511	Brake Asm, Deck, 42/46
5.	983-04525	Brake Asm, Deck, 46"
6.	983-04704	Deck Asm, 46t, 2w
7.	710-0347	Hhcs, 3/8-16, 1.75, Gr5, Std
8.	710-04484	Scr, Tt, 5/16-18, .750, Hxindwsh
9.	710-0514	Hhcs, 3/8-16, 1.00, Gr5, Std
10.	710-0528	Hhcs, 5/16-18, 1.25, Gr5, Std
11.	710-0599	Scr, Tt, 1/4-20, 0.500, Hxindwsh
12.	710-0642	Scr, Tt, 1/4-20, 0.750, Hxindwsh
13.	710-0778	Scr, Tt, 1/4-20, 1.500, Hxindwsh
14.	710-1003	Scr, B, #10-16, 0.625, Hxindwsh, Sp
15.	710-3005	Hhcs, 3/8-16, 1.25, Gr5, Std
16.	710-3178	Bolt, Crg, 3/8-16, 0.75, Gr1
17.	712-0229	Nut, Push, 3/8
18.	712-04063	Nut, Flglk, 5/16-18, Grf, Nylon
19.	712-04065	Nut, Flglk, 3/8-16, Grf, Nylon
20.	712-0417A	Nut, Flg, 5/8-18
21.	712-04243	Nut, Flxlk, 1/2-13
22.	912-0641	Nut, Hex, M16-1.5 Din 936
23.	714-04043	Pin, Cot, Bow-Tie 91
24.	914-0470	Pin, Cot, Split, 1/8x1.25
25.	917-04074	Gear, Deck, Adj
26.	921-04041	Adap, Water Nozzle
27.	731-06496	Cvr, Belt, Universal
28.	932-0384	Spr, Extn, .62 Dia X 6.12 Lg
29.	732-04652	Spr, Comp, .70 Od X 2.06 Lg
30.	732-04773	Spr, Torsn, .992 I.D X 1.17 O.D
31.	732-04871	Spr, Extn, 1.00 X 7.1175 X .183
32.	734-04155	Whl, Deck, 5.0 Dia Ball
33.	735-0271A	Bmpr, .62 Dia X .3
34.	936-0119	Wash, Lock, 5/16, Splt, Reg
35.	736-0225	Wash, Lock, 5/8, Int Tooth

Ref.	Part Number	Description
36.	736-0262	Wash, Flat, .385x.870x.092
37.	936-0344	Wash, Flat, .385 X 1.0 X .030
38.	736-0362	Wash, Flat, .330x1.250x.060, Hd
39.	736-0371	Wash, Flat, .343 X .880 X .062
40.	737-04003D	Noz, Deck, Water
41.	738-04162A	Spcr, Shldr, .8840 X .190
42.	738-0754	Scr, Shld, .437 Dia. X .54
43.	938-3056	Shld-Scr - 1/2 Dia X 2.50 Lg.
44.	942-04290	Blade, Cut, 23.25" 2-In-1, Econ
45.	747-05011	Rod, Keepr, Belt
46.	747-05052	Rod, Cont, Brake 46"
47.	747-05141A	Rod, Lift, Deck, Medium
48.	747-05323	Rod, Keepr, Belt, 42s 46t
49.	747-1116	Rod, Hndl, Deck Rel .375 Dia
50.	748-0234	Shoulder Spacer
51.	748-04069	Cup, Pivot, Deck Lift
52.	750-0258	Spcr, .315 X .750 X .375 Lg
53.	750-0566A	Spcr, .260 X .372 X 1.030 Lg
54.	751B221535	Clamp, Casing
55.	954-04219	Belt, V Typ, A Sec X 106.62
56.	756-04129B	Pul, Idlr, 4.25"Dia
57.	711-04847B	Hinge Pin
58.	732-04372	Torsion Spring
59.	783-05946	Brkt, Idlr, Piv, 46
60.	783-06243	Brkt, Cbl, Deck Engage
61.	783-06368A	Brkt, Guard, Belt, 4.25 Pulley
62.	783-06981	Brkt, Idlr, 46" Lh
63.	783-06074A	Chute Bracket
64.	756-04356	Deck Pulley, 6.93 DIA
65.	941-0919	Ball Bearing, .787ID X 1.85 ODX.551
66.	750-04936	Spacer, .792 X 1.060 X 1.860 LG
67.	738-1186A	Spindle Shaft, 6.05 LG.
68.	738-04146	Plug, Bolt, M16 X 1.5
69.	736-0187	Wash, Flat, .64 X 1.24 X .06, Ht

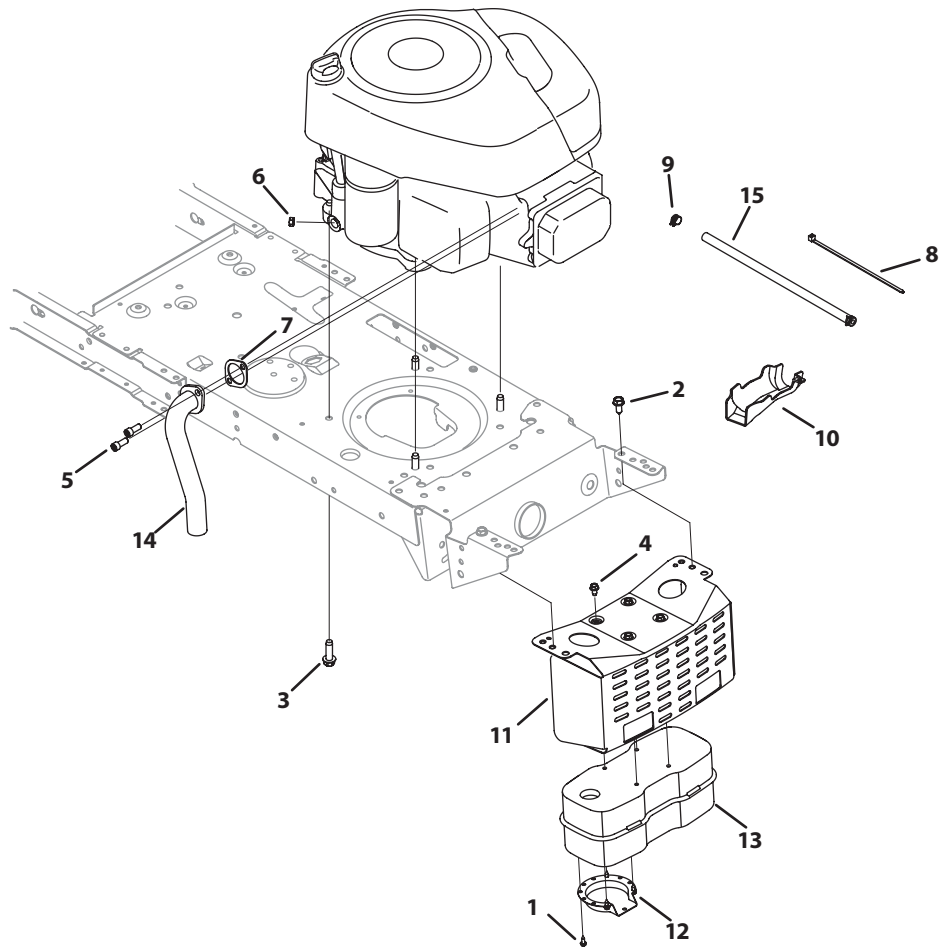

Ref.	Part Number	Description
1	710-0227	Screw, 8-18 x .500
2	710-04484	Screw, 5/16-18 x .750
3	710-04683	Screw, 3/8-16 x 1.000
4	710-0599	Screw, 1/4-20 x .500
5	710-1214	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket, 10 HP Briggs
8	725-0157	Cable Tie
9	726-0205	Hose Clamp, .490 Diameter
10	731-05628	Oil Drain Sleeve
11	783-0615E	Muffler Bracket
12	751-0564B	Muffler Deflector
13	751-0617C	Single Inlet Muffler
14	751-0619A	Exhaust Pipe, Single Briggs
15	751-10349-28	Fuel Hose, Low Permeation

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

41

