


5 Style Hood

Attachments:	42"	46"
Bagger.....	19A30003OEM	19A30003OEM
Bumper Kit.....	OEM-190-679	OEM-190-679
Mulch Kit.....	19A30006OEM	19A30005OEM
Snow Blade.....	OEM-190-833	OEM-190-833
Snow Thrower.....	OEM-190-032	OEM-190-032

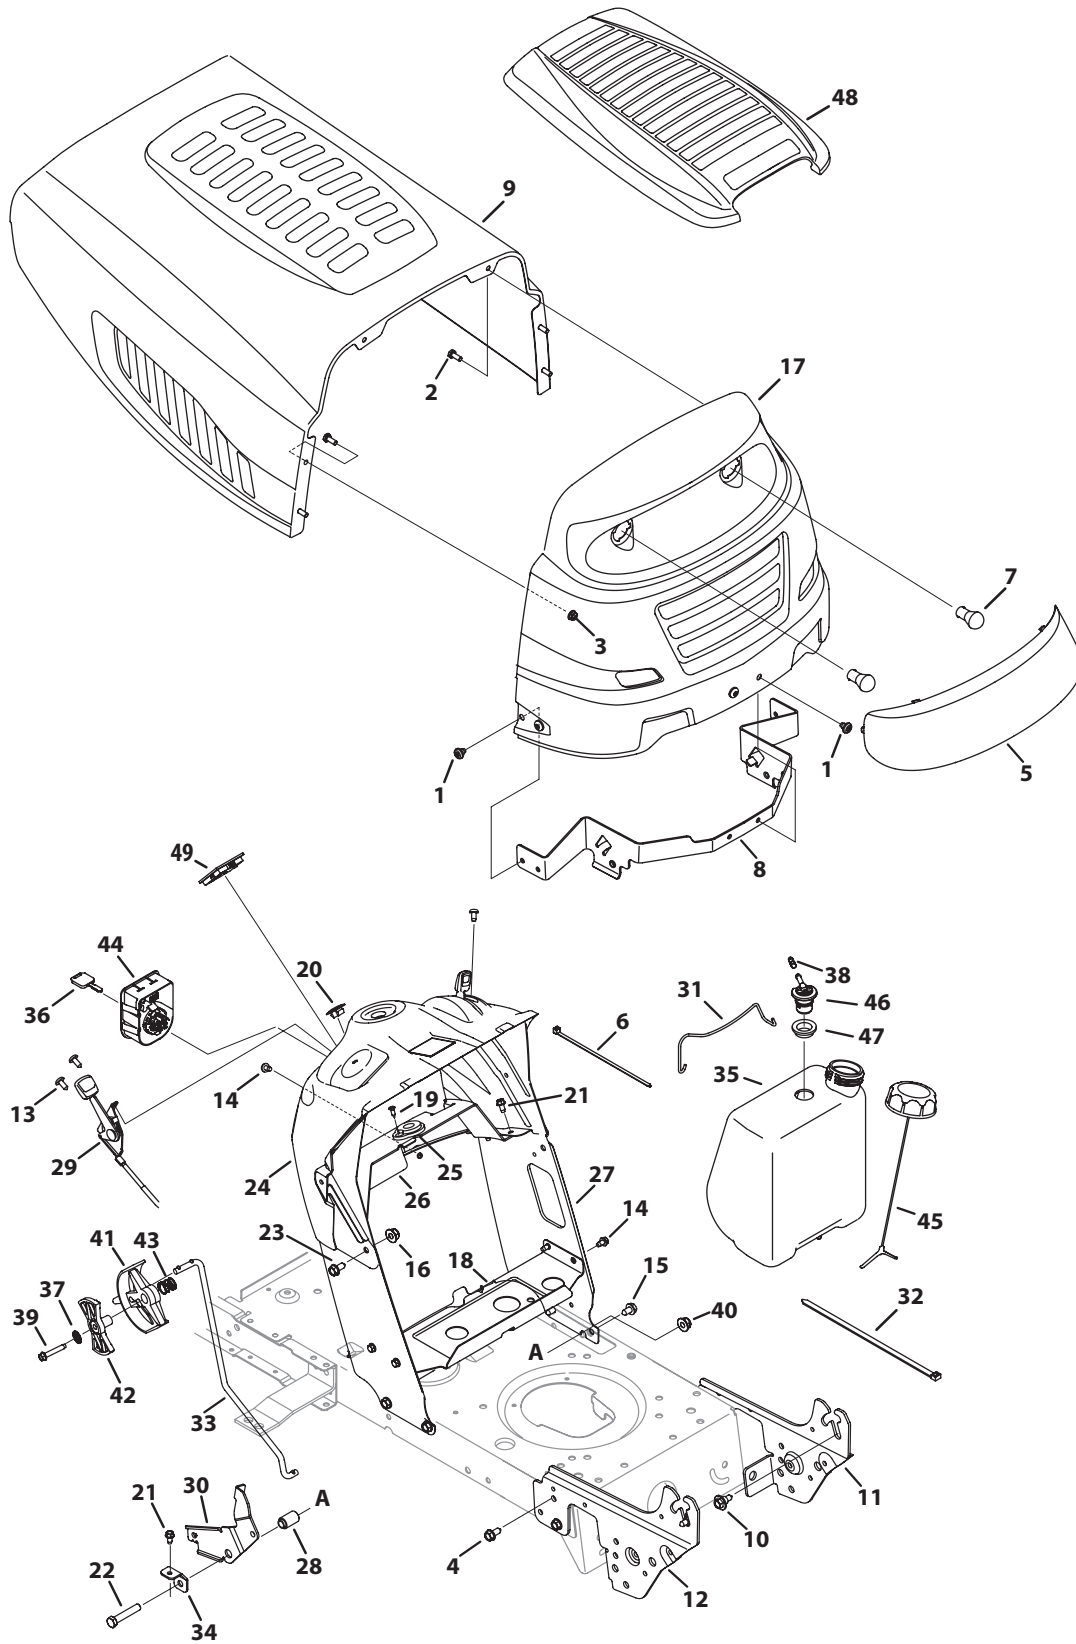


5 Style Hood

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-04593	Screw, 5/16-18 x .375	27	783-06811	Dash, Lower
2	710-0751	Hex Screw, 1/4-20 x .620	28	750-04465B	Flange Spacer, .390 x .671 x 1.095
3	712-04064	Flangelock Nut, 1/4-20	29	746-04367	Throttle/Choke Cable
4	710-04484	Screw, 5/16-18 x .750	30	683-04766	Transmission Speed Latch, RMC
5	731-04949A	Grill Lens	31	683-04448	Battery Assembly Rod
6	725-0157	Cable Tie	32	726-0230	Cable Tie
7	925-0963	Lamp	33	747-05398	Speed Control Rod
8	783-05454	Hood Pivot Bracket	34	783-06823	Speed Latch Tab
9	783-05683	Hood	35	951-04304	1.36 Gallon Fuel Tank
10	738-04091A	Shoulder Screw, 5/16-18 x .43 x .29	36	925-1745A	Key
11	783-05327B	Left Support Pivot Bracket	37	736-3006	Lock Washer, 1/4
12	783-05328A	Right Support Pivot Bracket	38	751-12089-28	Hose Vent, 3/16 EPA
13	710-04483	Screw, 1/4-20 x .500	39	710-0778	Hex Washer Screw, 1/4-20 x 1.50
14	710-05070	Screw, 1/4-20 x .500	40	712-04065	Flangelock Nut, 3/8-16
15	710-0604A	Screw, 5/16-18 x .625	41	731-07885A	Shift Lever
16	712-04063	Flangelock Nut, 5/16-18	42	731-07966	Index Control
17	783-05685	Grill	43	732-04877	Compr. Spring, .72 OD x .78
18	783-07083	Gas Tank Support Bracket	44	925-04227B	Key Switch Module
19	910-0224	Screw, #10-16 x .500		925-04659	Key Switch 3 Position
20	731-05265	Choke Plug	45	951-12179A	Fuel Cap, 2.25"
21	710-1652	Tap Screw, 1/4-20, 0.625	46	751-12118	Rollover Valve
22	710-3144	Hex Screw, 3/8-16 x 2.0	47	735-04081	Rubber Grommet, 23 x 3.55
23	710-3025	Hex Screw, 5/16-18 x .625	48	731-05522A†	Hood cover
24	931-07770	Dash, Upper	49	731-05232	Ammeter Plug
25	741-0587	Bearing, .628 ID x 1.36	—	725-04432G	Harness, LT-5, RMC, Dual
26	783-06785A	Bracket, Steering Support			

†If Equipped

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

K Style (Troy-Bilt) Hood

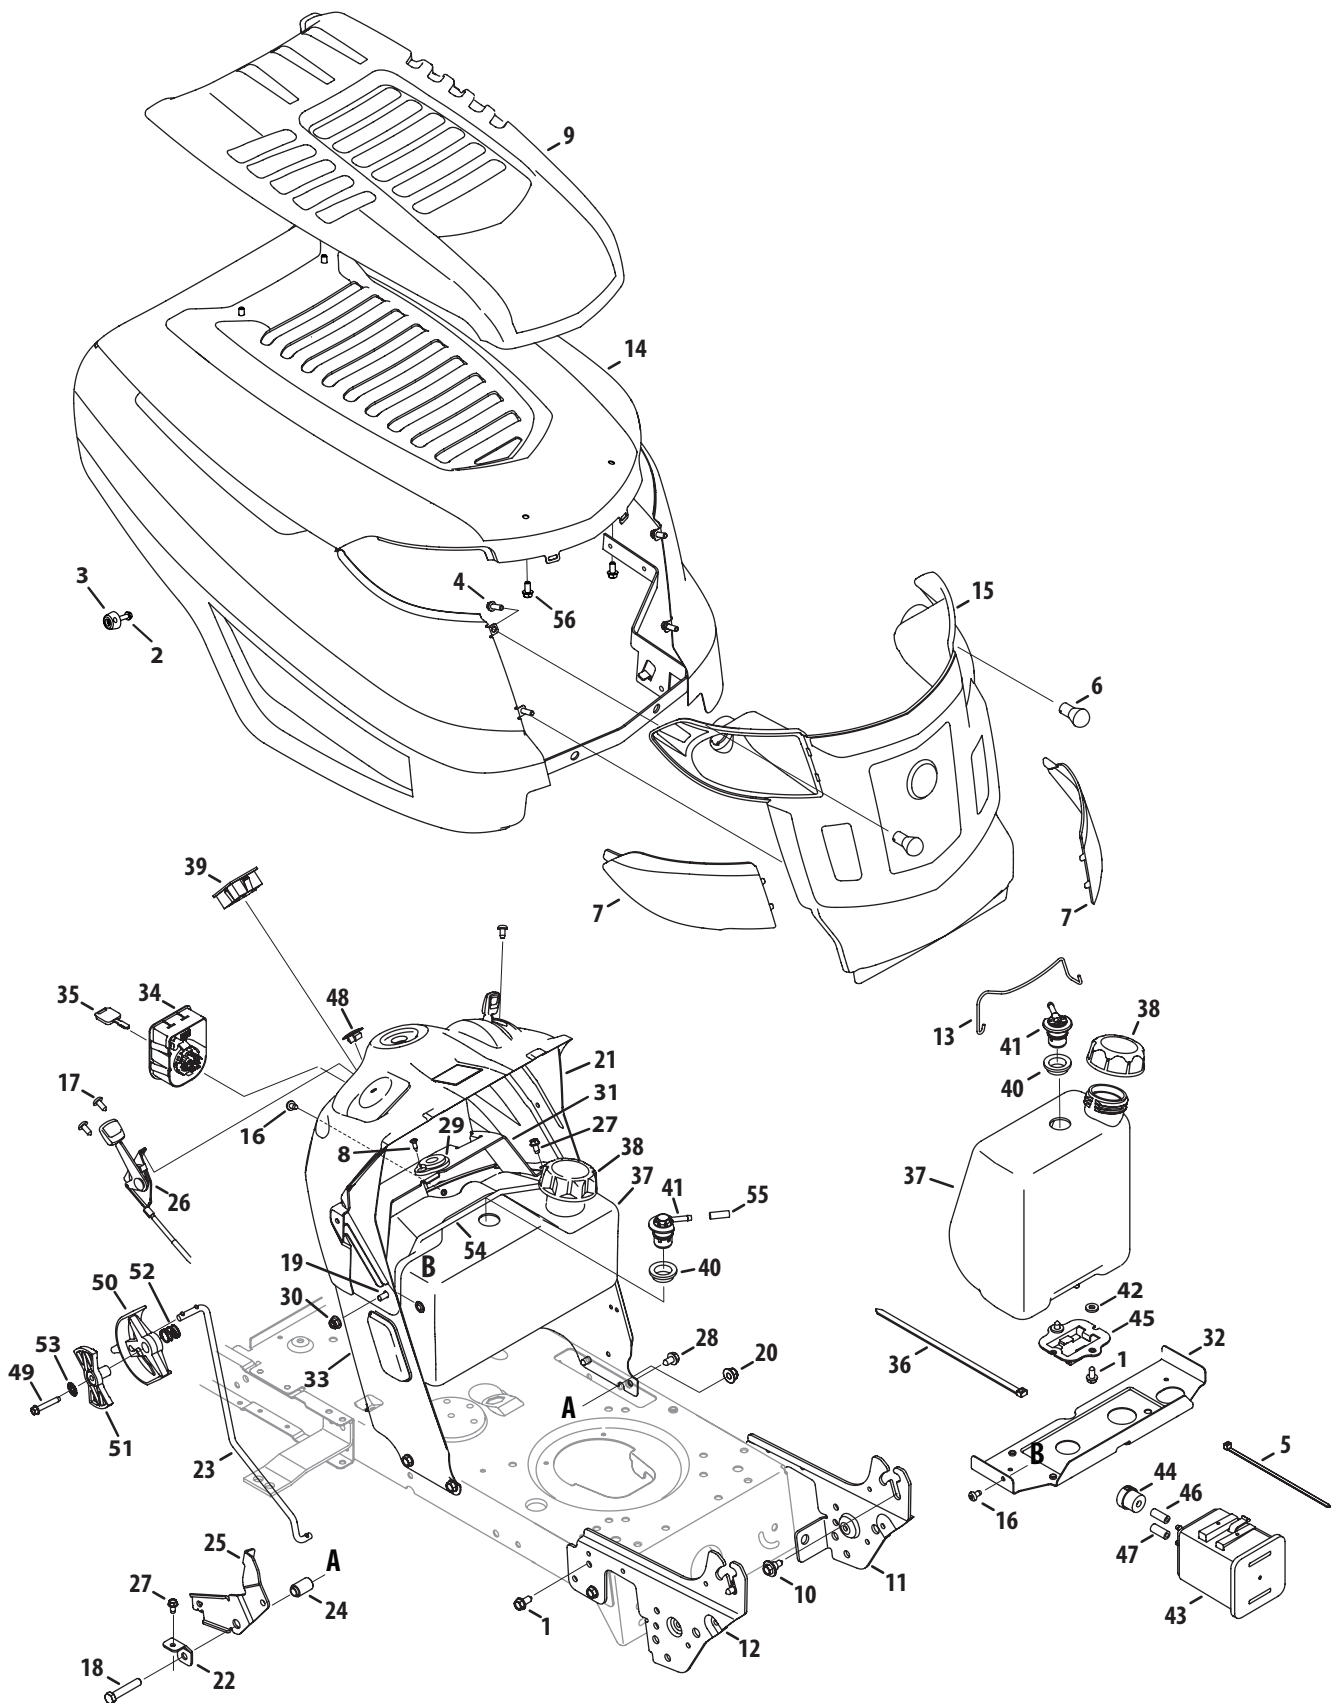

K Style (Troy-Bilt) Hood

Ref. No.	Part No.	Description
1	710-04484	Screw 5/16-18 x .750
2	710-05281	Screw, #12-16 x 1.25
3	731-06404	K-Style Bumper
4	710-05108	Screw, 1/4 x .750
5	725-0157	Cable Tie
6	925-0963	Miniature lamp 12V socket
7	731-06095	Grill Lens - LH
	731-06096	Grill Lens - RH
8	910-0224	Screw, #10-16 x .500
9	731-06194b	Hood Scoop
10	738-04091A	Shoulder Screw .43 x .29
11	783-05327B	Support Bracket LH
12	783-05328A	Support Bracket RH
13	683-04448	Battery Rod
14	683-04774	Hood
15	631-04272	Grill
16	710-05070	Screw, 1/4-20 x .500
17	710-04483	Screw 1/4-20 x .500
18	710-3144	Hex Screw 3/8-16 x 2.00
19	710-3025	Hex Screw, 5/16-18 x .625
20	712-04065	Flange Lock Nut 3/8-16
21	931-07770	Dash, Upper
22	783-06823	Speed Latch Tab
23	747-05398	Speed Control Rod
24	750-04465C	Flange Spacer .39 x .671 x 1.095
25	683-04766	Transmission Speed Latch
26	746-04367	Throttle/Choke Control Cable
	746-04406	Throttle/Choke Cable w/ Knob
27	710-1652	Tap Screw, 1/4-20, 0.625
28	710-0604A	Screw 5/16-18 x .625
29	741-0587	Bearing, .628 ID x 1.36
30	712-04063	Flange lock Nut 5/16-18


Ref. No.	Part No.	Description
31	783-06785A	Bracket, Steering Support
32	783-07083†	Gas Tank Support Bracket
33	783-06811	Dash, Lower NWNDW
	783-06656	Dash, Lower
34	925-04227B	Key Switch Module
35	925-1745A	Key
36	726-0230†	Cable Tie
37	951-04295	Fuel Tank, 2 Gallons, EPA
	951-04304	Fuel Tank, 1.36 Gallon, CARB
38	951-12179A	Fuel Cap
	951-12426	Fuel Cap, CARB
39	925-04156	Ammeter Monitor Indicator
40	735-04081	Rubber Grommet
41	751-12118	Rollover Valve
42	936-3008††	Washer, Flat, .344 x .750 x .120
43	951-10589††	Canister, Carbon, 5 Gallon
44	951-10590††	Filter, Vent, Canister
45	951-10610††	Bracket., Adapter, Canister
46	751-10749††	Hose, Fuel, Low Perm., White
47	751-10750††	Hose, Fuel, Low Perm., Yellow
48	731-05265	Choke Plug
49	710-0778	Hex Washer Screw, 1/4-20 x 1.50
50	731-07885A	Shift Lever
51	731-07966	Index Control
52	732-04877	Compr. Spring, .685 OD x .63
53	736-3006	Lock Washer, 1/4
54	747-05373	Fuel Tank Clamp Rod
55	751-12089-28	Hose Vent, 3/16 EPA
56	710-04187	Screw, 1/4-15 x 0.50
—	725-04432G	Harness, LT-5, RMC, Dual
—	725-04469	Harness, Jmpr., Amtr.

† If Equipped

†† Equipped with CARB Fuel Tank

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Seat and Fender

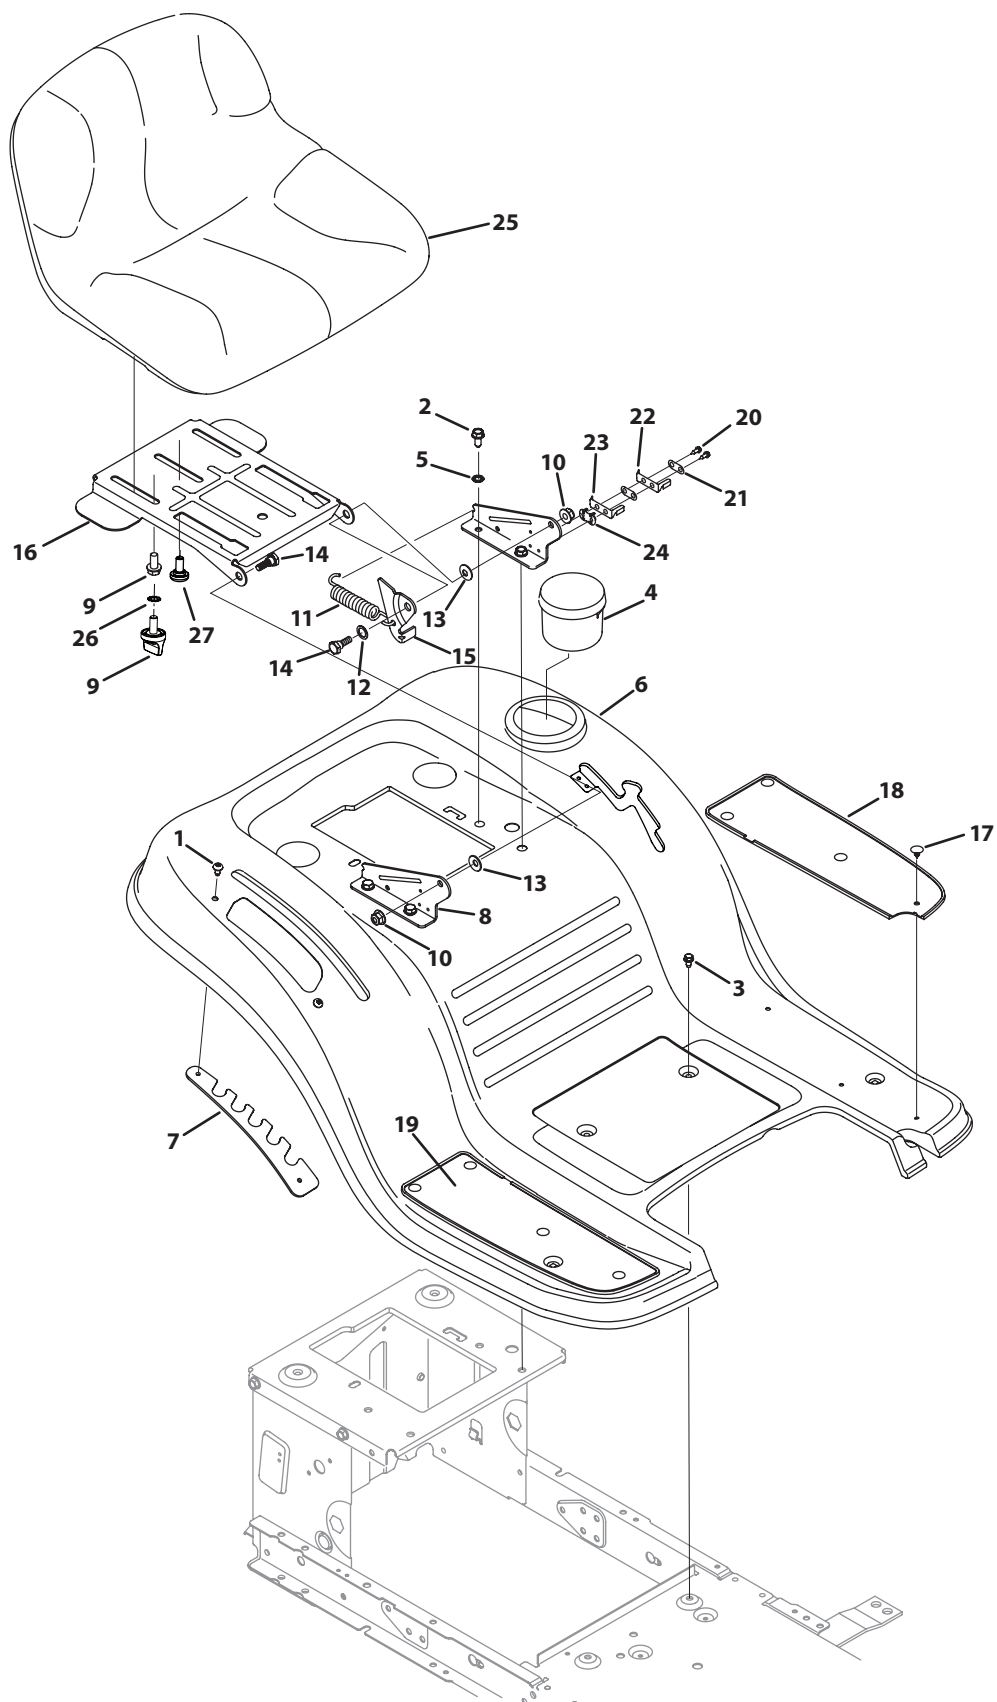


Ref. No.	Part No.	Description
1	710-05070	Screw, 1/4-20 x .500
2	710-04484	Screw, 5/16-18 x .750
3	710-0599	Screw Pan Torx Head, 1/4-20 x .500
4	731-04591A	Cup Holder
5	736-0607	Loack Washer, 5/16
6	783-04593E	Fender
7	783-04843	Lift Adjuster Bracket
8	783-1489D	Seat Mount Bracket
9	710-04482	Hex Flange, 3/8-16 x .875
	720-04061†	Knob
10	712-04063	Flangelock Nut, 5/16-18
11	732-1184	Extension Spring
12	936-0108	Flat Washer, .510x .750 x .033
13	736-0242	Bell Washer, .340 x .872 x .060
14	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
15	783-0209D	Lift Seat Bracket
16	783-04081D	Pivot Seat Manual Adjust Bracket
17	726-3046	Ratchet Clip, .250 x .500
18	735-04047	Foot Pad, LH
	723-04026	Foot Pad, Abrasive, LH
19	735-04048	Foot Pad, RH
	723-04025	Foot Pad, Abrasive, RH
20	710-0227	Screw, 8-18 x .500
21	726-0279	Insulator Plate
22	925-1303	Outer Seat Spring
23	725-1439	Inner Seat Spring
24	726-0278	Insulator Boss Plate
25	757-04083	Medium Back Seat
	757-04088	High Back Seat
26	736-0148†	Lock Washer
27	738-04012A†	Scr., Shldr., .625 x .145 x 3/8-16

† If Equipped

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Front End Steering

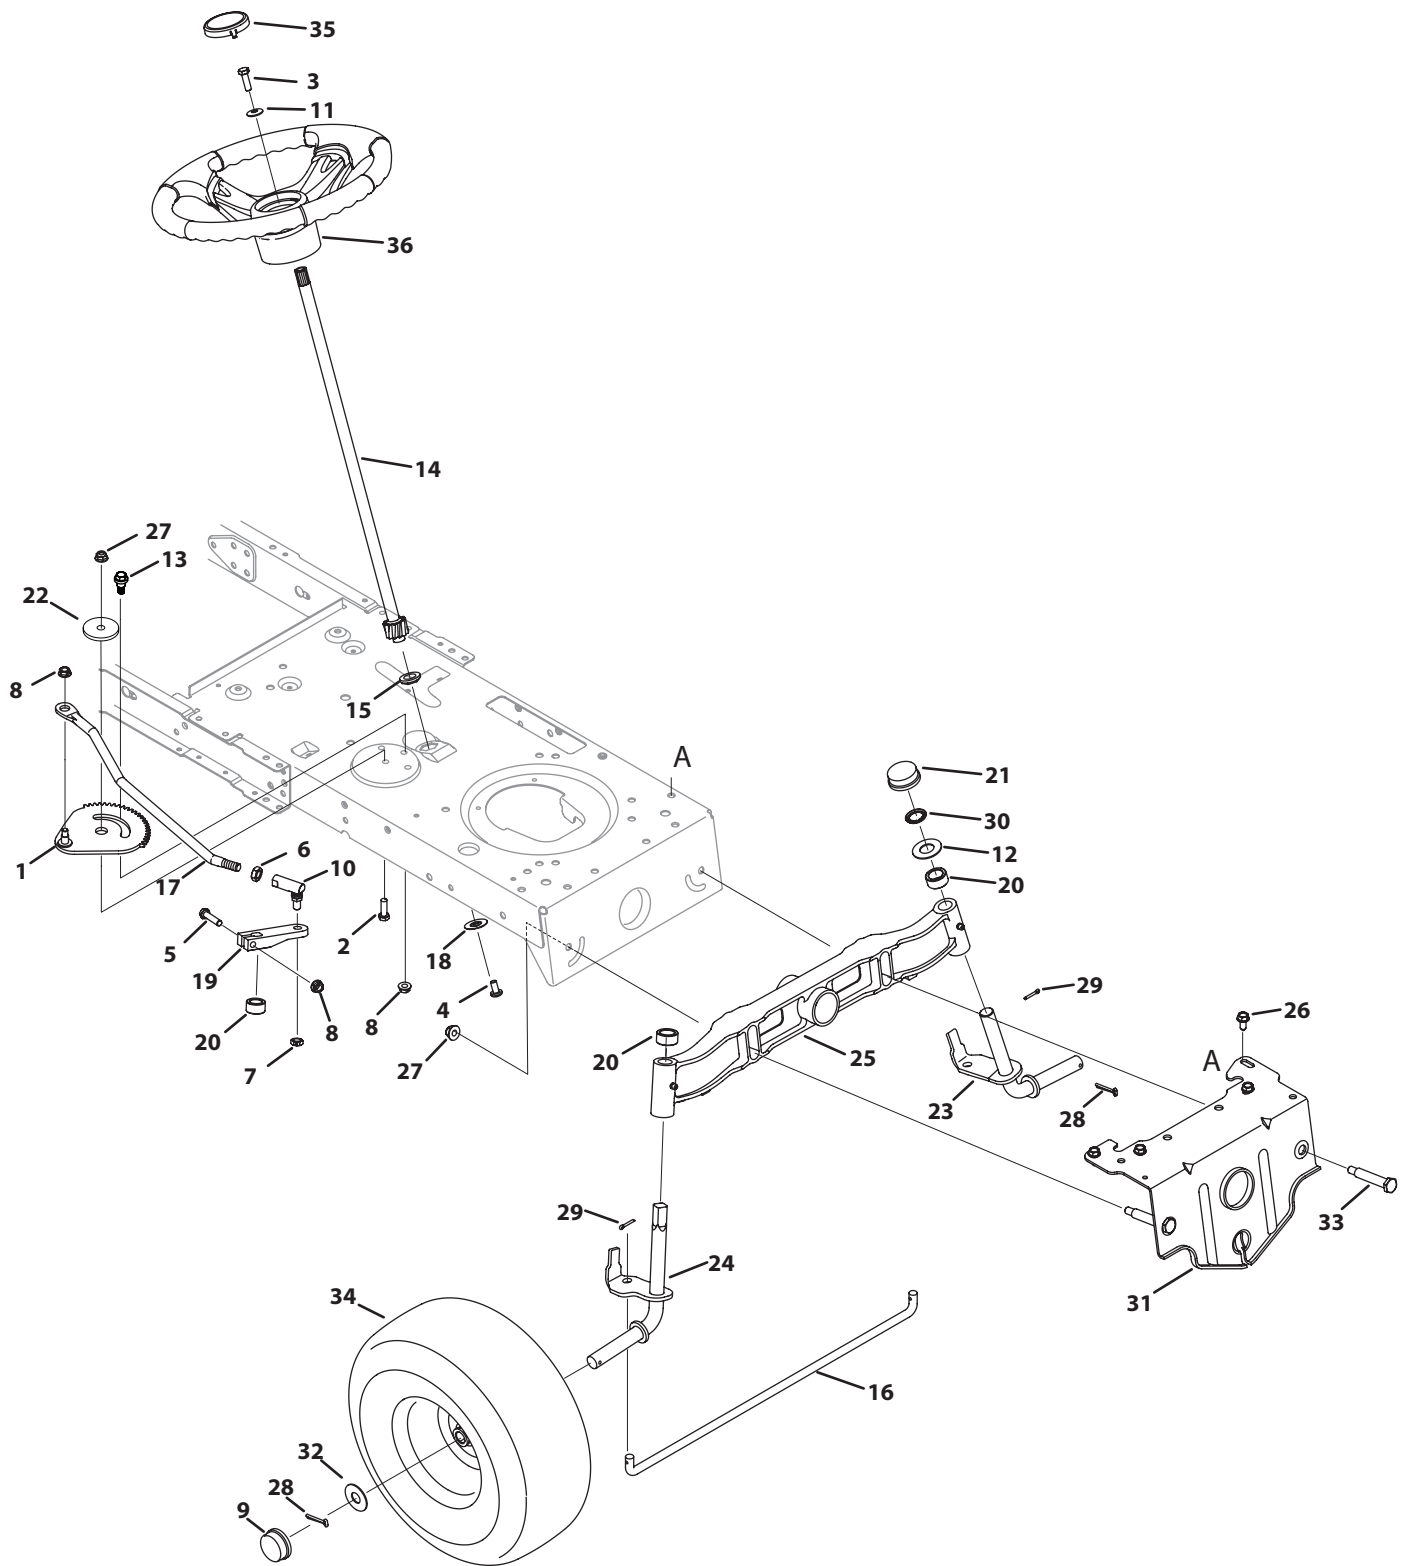


Front End Steering

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	617-04094	Front Steering Gear Assembly	22	738-04162A	Shoulder Spacer, .884 x .190
2	710-0514	Hex Screw, 3/8-16 x 1.00	23	938-04007A	Axle Assmbly LH (38" & 42" Deck)
3	710-0643	Screw, 5/16-18, 1.00, Gr5, Lock		938-04014A	Axle Assembly, LH (46" Deck)
4	710-1309	Screw, Mach, 5/16-18, 0.750	24	638-04008P	Axle Assmbly RH (38" & 42" Deck)
5	710-3180	Screw, 5/16-18, 1.75, Gr5		938-04013	Axle Assembly, RH (46" Deck)
6	912-0240	Nut, Jam, 7/16-20, Gr2	25	919-04177A	Pivot Bar, Cast
7	912-0214	Nut, Hex Lock, 3/8-24	26	710-04484	Screw, 5/16-18, 0.750
8	712-04063	Nut, Flange Lock, 5/16-18, Grf	27	712-04065	Nut, Flange Lock, 3/8-16, GrF
9	931-0484A	Hub Cap	28	714-04039A	Pin, Cotter, 5/32, 1.25
10	923-0448A	Ball Joint, 7/16-20, Lock	29	914-0474	Pin, Cotter, 1/8 x 0.75
11	736-0242	Washer, Bell, .340 x .872 x .060	30	726-04035	Push Nut 3/4 Dia.
12	936-0316	Washer, Flat, .78 x 1.59 x .60	31	783-05326B	Pivot Bar Bracket
13	738-04141	Shoulder Screw, .435 x .3485, 5/16-18	32	736-04228A	Washer, Flat, .781 x 1.59
14	738-0919A	Steering Shaft, 5/8 Spline x 21.86	33	738-04128	Scr., Shlder, .500 x 2.380, 3/8-16
15	941-04124	Bearing, Flange, Hex 5/8	34	634-04086-0911	Wheel Ass'y, 15 x 6 x 6 - Grey
16	747-04299A	Tie Rod		634-04639-0911	Wheel Ass'y, Sq. Shldr., 15 x 6 x 6.5
17	747-05385	Steering Link	35	731-04040	Cap, Steering Wheel (Sprig Logo)
18	948-0389	Cap, 1.25 x .16		731-04681	Cap, Steering Wheel (Troy-Bilt)
19	748-04065	Steering, Block	36	631-04028	Steering Wheel, Standard Grip
20	748-04068	Spacer, .710 ID x .125 OD x .56		631-04560	Steering Wheel Soft Grip
21	731-04693	Push Cap, Cast			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Transmission

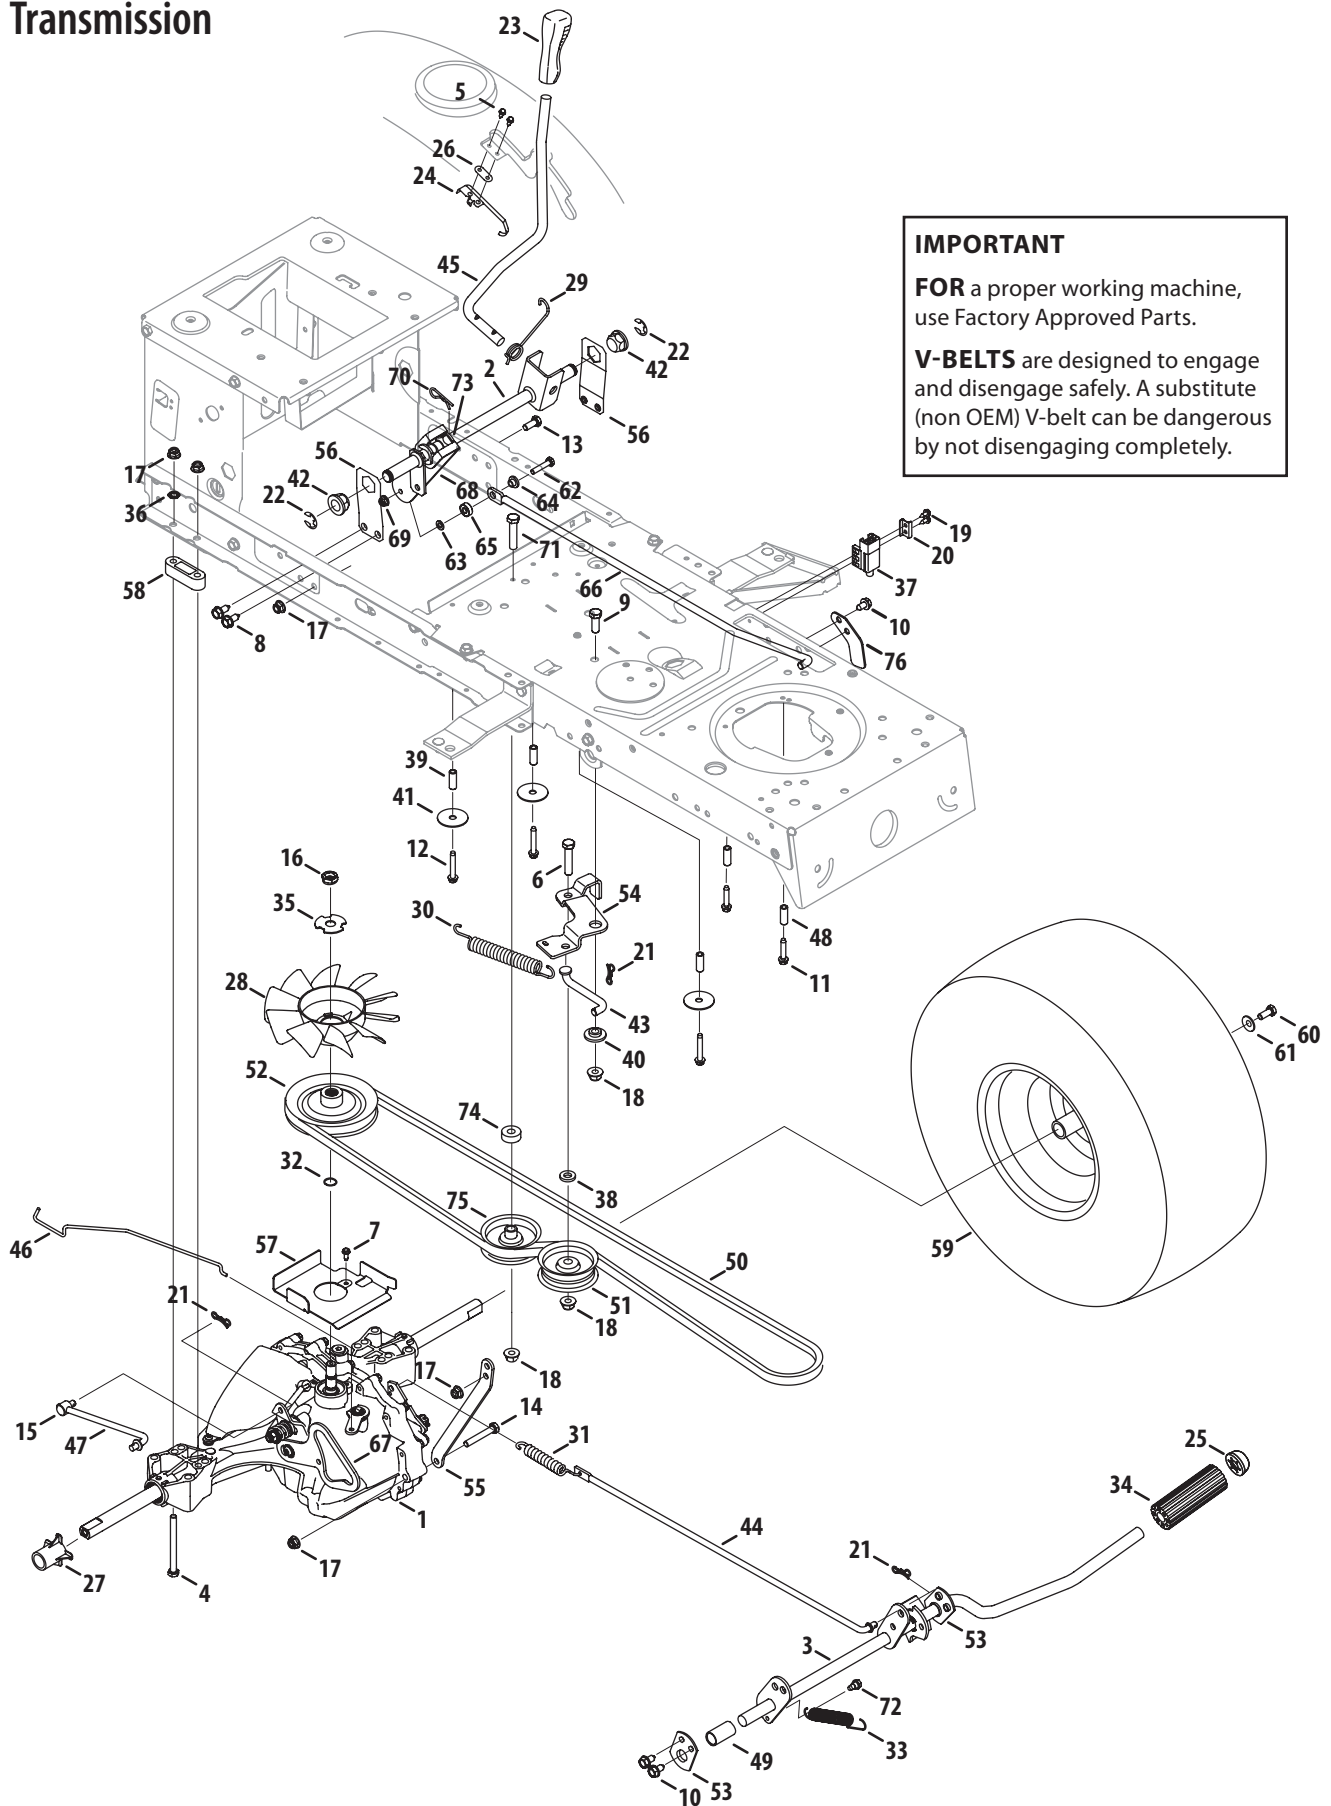

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	918-04892A	Hydro Transmission	40	738-04430	Shldr Spacer, 1.375 ID X .380 x 1.54
	918-04925B	Hydro Transmission, 18" Tires	41	736-0430	Flat Washer, .350 x 1.59 x .062
2	647-04200A	Hydro Handle Control Assembly	42	941-0225	Hex Flange Bearing
3	647-04261	Hydro Pedal Assembly	43	747-05603	Declutching Rod
4	710-1266	Hex Screw, 5/16-18 x 3.5	44	747-05242	Brake Rod
5	710-0227	Screw, #8-18:0.500	45	747-04296A	Hydro Control Handle
6	710-0347	Hex Screw, 3/8-16:1.75	46	747-05245	Hydro Bypass Rod
7	910-0224	Screw, #10-16:0.500	47	747-04407A	Hydro Control Rod
8	710-04484	Screw, 5/16-18:.750	48	750-0566A	Spacer, .260 x .375 x 1.030 LG
9	710-0514	Hex Screw, 3/8-16:1.00	49	750-05593	Spacer, .640 ID X .76 OD X 1.60
10	710-0604A	Screw, 5/16-18:0.625	50	954-04252	V Belt, 4L SEC X 84.17
11	710-0809	Screw, 1/4-20:1.250	51	756-04224	Flat Idler Pulley 2.75 OD
12	710-1026	Screw, 1/4-20 x 1.75	52	756-04308	Input Pulley
13	710-3008	Hex Screw, 5/16-18:.75	53	783-04536B	Support Pedal Bracket
14	710-3103	Screw, 5/16-18 x 2.00	54	783-04570B	Idler Arm
15	711-04448	Ferrule, 5/16-24 X .312 DIA.	55	783-06551	Torque Bracket
16	912-0346	Jamlock Nut, 1/2-20	56	783-04585A	Handle Bracket
17	712-04063	Flangelock Nut, 5/16-18	57	783-06558	Belt Support Bracket
18	712-04065	Flangelock Nut, 3/8-16	58	948-0334	Spacer, T-Axle
19	728-04021	Rivet	59	634-0104-0911	Wheel, 20 x 8 x 8 - Grey
20	17962	Plate Switch		634-04641-0911	Wheel, 18 x 9.5 x 8
21	714-04040	Cotter Pin, Bow Tie	60	710-0627	Hex Screw, 5/16-24 x .750
22	716-0106A	E Rign, .625 DIA	61	736-0242	Bell Washer, .340 x .872 x .060
23	720-0311	Handle Grip	62	710-0106	Hex Screw, 1/4-20 x 1.25
24	725-04249	Hydro Spring Switch	63	936-0142	Flat Washer, .281 x .500 x .063
25	726-0214	Push Cap, 5/8	64	738-04483	Shoulder Spacer, .375 x .625 x .20
26	926-0320	Insulator Plate Nut	65	741-04280	Ball Bearing, .25 x .6875 x .25
27	731-08237	Sleeve, .765 ID X 2.11 LG	66	747-05598	Hydro Rod, RTN
28	731-06098	Hydro Fan	67	783-06750A	Cam Bracket, RTN
29	732-04225	Torsion Spring	68	783-06756	Pivot Bracket, RTN
30	732-04229	Extension Spring, .75 DIA. X 6.02	69	712-04064	Nut, Flange Lock, 1/4-20, GrF
31	732-0716D	Extension Spring, .59 OD X 4.00 LG	70	914-0145	Click Pin, .092 x 1.64 LG
32	732-0729	Wire Ring	71	710-3144	Hex Screw, 3/8-16 x 2.00
33	732-04587	Extension Spring, .63 DIA X 4.95 LG	72	738-04278	Shoulder Screw, 1/4-20 x 0.50
34	735-0239	Foot Pad, 4.0	73	741-3065B	Hex Flange Bearing, .628 ID
35	736-04263	Lock Washer, TRANS HYDRO	74	750-3119	Spacer, .406 ID x 1.00 OD x .38
36	736-0607	Lock Washer, 5/16 EXT TOOTH	75	756-04325	V Pulley 3.06 OD
37	925-04039	Switch Interlock	76	783-06807	Stop Pedal Plate
38	736-3010	Flat Washer, .407X.812X.135:HT	—	725-04990	Harness, Jmpr, Hydro
39	750-04456	Spacer, .260 x .372 x 1.420			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Frame and PTO Lift

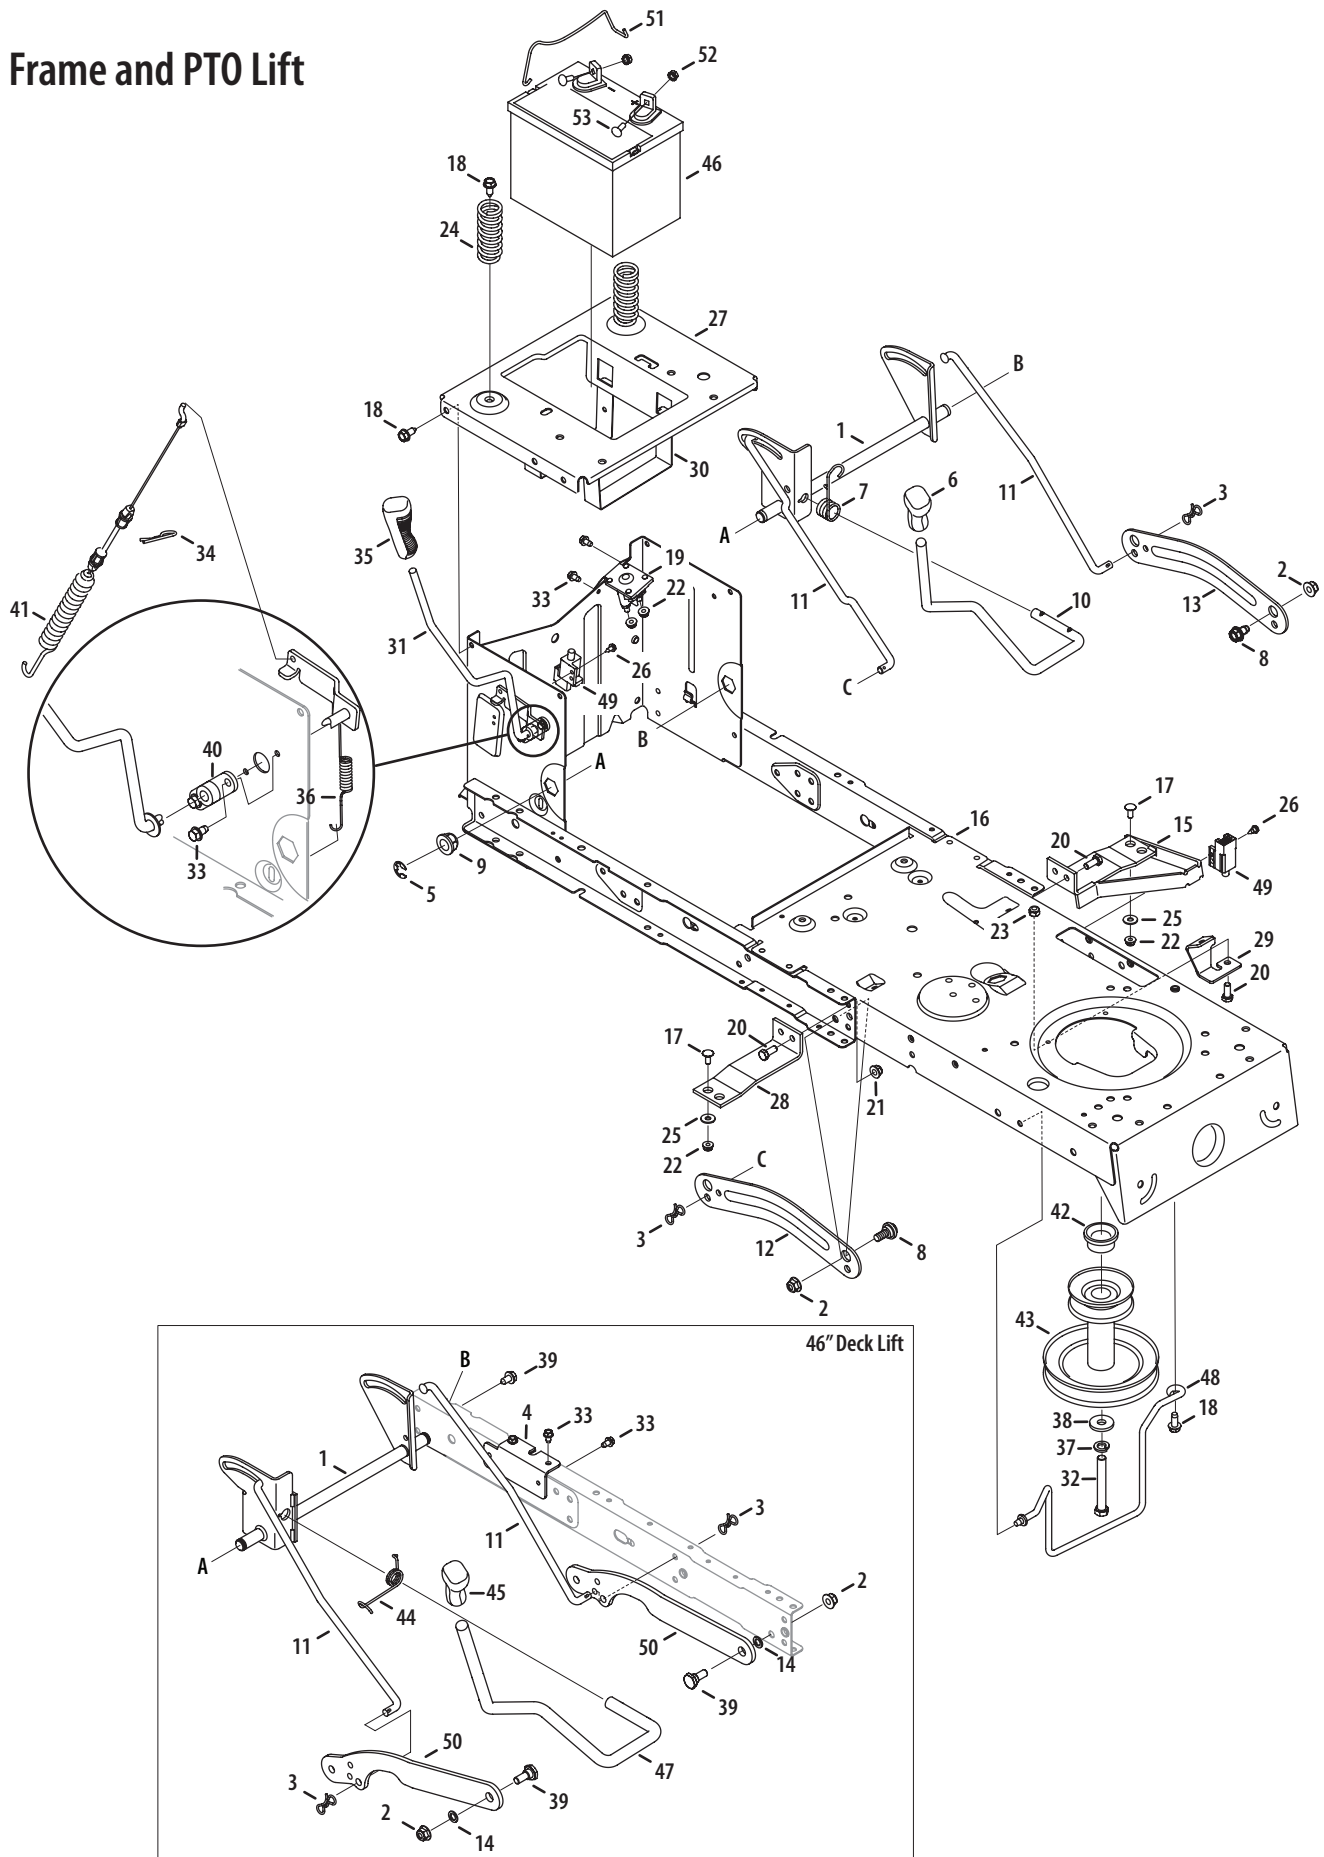

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	683-04155A	Shaft Assembly Lift 42" Deck	28	783-04637	Bracket, Runing Board
	683-04334	Shaft Assembly Lift 46" Deck	29	783-04753	Frame Support Bracket
2	712-04065	Nut, Flange Lock, 3/8-16, GrF	30	783-04869A	Bracket, Battery
3	714-04040	Pin, Cotter, Bow Tie	31	647-04096A	Handle Assembly, PTO
4	783-05389A	Frame Brace Bracket	32	710-04608	Screw, 7/16-20, 3.25 42" Deck
5	716-0106A	Ring, E-Type, .625 Dia.	33	710-0599	Screw, 1/4-20, 0.500
6	720-0311	Grip, Handle, 1/2	34	914-0145	Pin, Click, .092 x 1.64
7	732-04225	Spring, Torsion 42" Deck	35	720-04049A	Grip, Handle, 3/8
8	738-04130	Screw, Shoulder, .625 x .175, 3/8-16	36	732-04276A	Spring, Extension
9	941-0225	Bearing, Hex Flange	37	936-0171	Washer, Lock, 7/16
10	747-05296	Deck Handle, Lift, 42" Deck	38	736-0322	Washer, Flat, .450 x 1.250 x .164
11	747-04393	Rod, Lift	39	938-0380	Bolt, Shldr. .500 x .270 3/8-16
12	783-04494C	Lift Arm, Deck - RH	40	741-04119A	Bearing, PTO
13	783-04711C	Lift Arm, Deck - LH	41	946-04173D	Cable, Deck Engagement
14	936-0140	Washer, Flat, .385 x .62 x .063	42	750-0956	Spacer, 1.010 x 1.400 x .825, 42" Deck
15	683-04195	Support Bracket Assembly	43	956-04067A	Engine Pulley
16	683-04649	Frame Assembly	44	732-04438	Spring, Torsion 46" Deck
17	710-0134	Carriage Screw, 1/4-20 x .62	45	720-0298	Grip, Handle, 5/8
18	710-04484	Screw, 5/16-18, .750	46	925-1707D	Battery, 155 CCA
19	725-04439	Solenoid	47	747-04653	Deck Handle, Lift, 46" Deck
20	710-3008	Hex Screw, 5/16-18 x .75	48	747-04857	Rod, Belt Keeper (42" Deck)
21	712-04063	Flange Lock Nut, 5/16-18		683-04414	Rod, Belt Keeper (46" Deck)
22	712-04064	Nut, Flange Lock, 1/4-20, GrF	49	725-04363	Switch, Interlock
23	912-0429	Hex Lock Nut, 5/16-18	50	783-0678C	Deck Lift Link
24	732-04035	Spring, Compr. , 1.28 OD x 3.125	51	683-04448	Battery Hold Down Rod
25	736-0173	Flat Washer, .28 x .74 x .063	52	712-0271	Nut, Sems, 1/4-20
26	738-04237A	Shoulder Screw, #10-32 x .500	53	710-04666	Screw, Carriage, 1/4-20, .75, Gr5
27	783-04548D	Seat Bracket, Frame			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

42" Deck

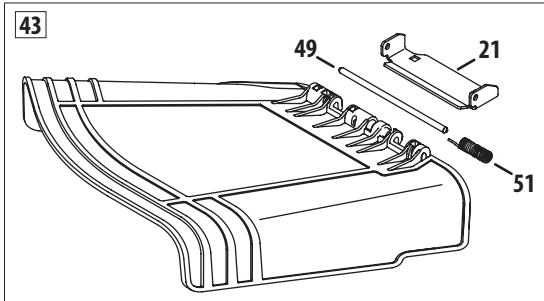


Ref.	Part Number	Description	Ref.	Part Number	Description
1.	918-04822A	Spindle Ass'y, Pulley, 6.3 Dia	29.	936-0344	Washer, Flat, .385 X 1.0 X .030
2.	683-0254B	Bracket Ass'y, Deck, Hanger LH	30.	736-0187	Washer, flat, .64 X 1.24 X .06
3.	983-04511	Brake Ass'y, Deck, 42/46	31.	736-0225	Washer, Lock, 5/8, Int Tooth
4.	983-04525	Brake Ass'y, Deck, 46"	32.	736-0262	Washer, Flat, .385 x .870 x .092
5.	983-04572	Deck Ass'y, Offset, 42 W/ 2 wheel	33.	750-04936	Spacer, .792 x 1.060 x 1.860
6.	710-04484	Screw, Self-tapping, 5/16-18, .750	34.	783-06643	Bracket, Support, Stationary Idler
7.	710-3005	Hex Screw, 3/8-16, 1.25, Gr5, Std	35.	738-04146	Plug, Bolt, M16 X 1.5
8.	710-0528	Hex Screw, 5/16-18, 1.25, Gr5, Std	36.	738-04162A	Spacer, Shoulder, .8840 x .190
9.	710-0599	Screw, Self-tapping, 1/4-20, 0.500	37.	748-04272	Shoulder Spacer
10.	936-3039	Flat Washer, .406 x 1.500 x .105	38.	938-3056	Bolt, Shoulder, .496 x 2.50, 3/8-16
11.	710-0642	Screw, Self-tapping, 1/4-20, .750	39.	942-04308	Blade, Cut, 21.23" 2-In-1, Econ
12.	710-3144	Hex Screw, 3/8-16, 2.00, Gr5, Std	40.	747-05323	Rod, Keepr, Belt 42 Idler
13.	710-3178	Bolt, Carriage, 3/8-16, 0.75, Gr1	41.	747-05141A	Rod, Lift, Deck, Frt, 12.7
14.	712-0229	Nut, Push, 3/8	42.	747-05105B	Rod, Control, Brake 42"
15.	712-04063	Nut, Flange Lock, 5/16-18, Grf	43.	631-04288	Chut Assembly, 42" Deck
16.	712-04065	Nut, Flange Lock, 3/8-16, Grf	44.	737-04003D†	Deck Water Nozzle
17.	712-0417A	Nut, Flange, 5/8-18	45.	936-0351	Washer, Flat, .760 ldx1.50 Od
18.	712-04243	Nut, Lock, 1/2-13	46.	738-1186A	Shift, Spindle, 6.11.
19.	912-0641	Nut, Hex, M16-1.5	47.	954-04060B	Belt, V Type, A Sec X 96.5
20.	714-04043	Bow-Tie Cotter Pin	48.	756-04129B	Pulley, Idler, 4.25"Dia
21.	783-06074A	Chute Bracket	49.	711-04847B	Pin, Hinge, Dia .3125 x 7.96
22.	917-04074	Gear, Deck, Adjustment	50.	956-1227	Pulley, Deck, 6.3 Dia
23.	932-0384	Spring, Extension, .62 Dia x 6.12	51.	732-04372	Spring, Torsion, .44 I.D. X 2.0
24.	921-04041†	Water Nozzle Adapter	52.	783-05946	Pivot idler Bracket, 46
25.	732-04840	Spring, Torsion, .992 ID X 1.17 OD	53.	783-06243	Bracket, Cable, Deck Engage
26.	734-04155†	Wheel, Deck, 5.0 Dia Ball	54.	783-06368A	Bracket, Guard, Belt, 4.25 Pulley
27.	936-0119	Washer, Lock, 5/16, Regular Duty	55.	783-06424A	Deck Belt Cover, 42
28.	941-0919	Bearing, Ball, .787id x 1.85 Odx.551	56.	748-04069	Deck Lift Pivot Cup

† If Equipped

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

46" Deck

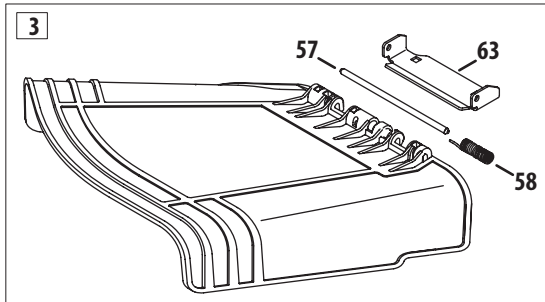


Ref.	Part Number	Description
1.	918-04865A	Spindle Assembly, Pul 6.93 Dia
2.	683-0254B	Bracket Assembly, Deck Hanger, LH
3.	631-04288	Chute Deflector Assembly
4.	983-04511	Brake Assembly, Deck, 42/46
5.	983-04525	Brake Assembly, Deck, 46"
6.	753-06766	Deck Assembly, 46t, 2w
7.	710-3144	Hex Screw, 3/8-16 x 2.00
8.	710-04484	Screw, Self-tapping, 5/16-18, .750
9.	710-0514	Hex Screw, 3/8-16, 1.00, Gr5, Std
10.	710-0528	Hex Screw, 5/16-18, 1.25, Gr5, Std
11.	710-0599	Screw, Self-tapping, 1/4-20, 0.500
12.	710-0642	Screw, Self-tapping, 1/4-20, .750
13.	936-0226	Washer, Flat, .474 x .879 x .064
14.	710-1003	Screw, B, #10-16, 0.625
15.	710-3005	Hex Screw, 3/8-16 x 1.25
16.	710-3178	Bolt, Carriage, 3/8-16, 0.75, Gr1
17.	712-0229	Nut, Push, 3/8
18.	712-04063	Nut, Flange Lock, 5/16-18, Nylon
19.	712-04065	Nut, Flange Lock, 3/8-16, Nylon
20.	712-0417A	Nut, Flange, 5/8-18
21.	712-04243	Nut, Lock, 1/2-13
22.	912-0641	Nut, Hex, M16-1.5
23.	714-04043	Bow-Tie Cotter Pin
24.	714-04040	Bow-Tie Cotter Pin, 72
25.	917-04074	Gear, Deck Adjustment
26.	921-04041†	Water Nozzle Adapter
27.	731-06496	Belt Cover, Universal
28.	932-0384	Spring, Extension, .62 x 6.12
29.	732-04652	Spring, Compression, .535 x 1.751
30.	732-04840	Spring, Torsion, .992 I.D X 1.17 O.D
31.	732-04909	Spring, Extension, 1.05 X 6.346
32.	734-04155	Wheel, Deck, 5.0 Dia Ball
33.	735-0271A	Bumper, .62 Dia X .3

Ref.	Part Number	Description
34.	936-0119	Washer, Lock, 5/16, Regular Duty
35.	736-0225	Washer, Lock, 5/8, Int Tooth
36.	736-0262	Washer, Flat, .385 x .870 x .092
37.	738-04091A	Shoulder Spacer, .43 x .29, 5/16-18
38.	748-04272	Shoulder Spacer, .50 x .145
39.	736-0371	Washer, Flat, .343 X .880 X .062
40.	737-04003D†	Deck Water Nozzle
41.	738-04162A	Shoulder Spacer, .8840 X .190
42.	738-0754	Shoulder Screw, .437 Dia. X .54
43.	938-3056	Bolt, Shoulder, .496 x 2.50, 3/8-16
44.	942-04290	Blade, Cut, 23.25" 2-In-1, Econ
45.	747-05011	Rod, Keeper, Belt
46.	747-05052A	Rod, Control, Brake 46"
47.	747-05141A	Rod, Lift, Deck, Medium
48.	747-05323	Rod, Keeper, Belt, 42s 46t
49.	747-1116	Rod, Deck Release
50.	736-0187	Washer, Flat, .64 X 1.24 X .06
51.	738-04146	Plug, Bolt, M16 X 1.5
52.	783-07183A	Belt Guide
53.	738-1186A	Spindle Shaft, 6.05 LG.
54.	751B221535	Clamp, Casing
55.	954-04219	Belt, V-Typ, A Sec
56.	756-04129B	Pulley, Idler, 4.25" Dia
57.	711-04847B	Hinge Pin
58.	732-04372	Torsion Spring
59.	783-05946	Bracket, Idler, Pivot, 46
60.	783-06243	Bracket, Cable, Deck Engagement
61.	783-06368A	Bracket, Guard, Belt, 4.25 Pulley
62.	783-07234	Bracket, Idler, 46" Lh
63.	783-06074A	Chute Bracket
64.	756-04356	Deck Pulley, 6.93 DIA
65.	941-0919	Ball Bearing, .787ID X 1.85 ODX.551
66.	750-04936	Spacer, .792 X 1.060 X 1.860 LG

† If Equipped


NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Briggs & Stratton Model 28

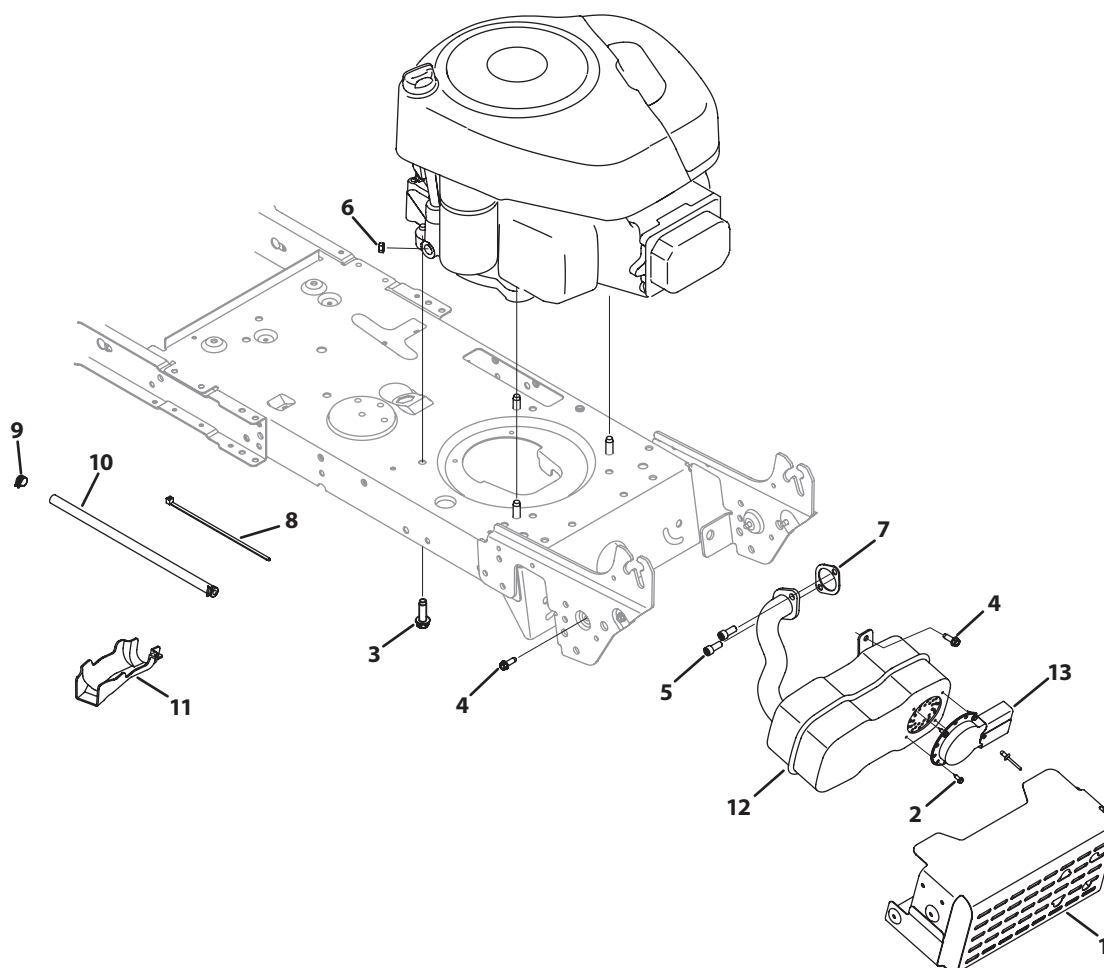

Ref. No.	Part No.	Description
1	683-04549	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0642	Screw, 1/4-20 x .750
5	710-1314A	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket, 10 HP Briggs
8	725-0157	Cable Tie
9	726-0205	Clamp Hose, .490 diameter
10	751-10349	Fuel Hose, Low Permeation
11	731-05628	Oil Drain Sleeve
12	751-10448C	Muffler, Single Inlet
13	751-11053	Muffler Deflector Long

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

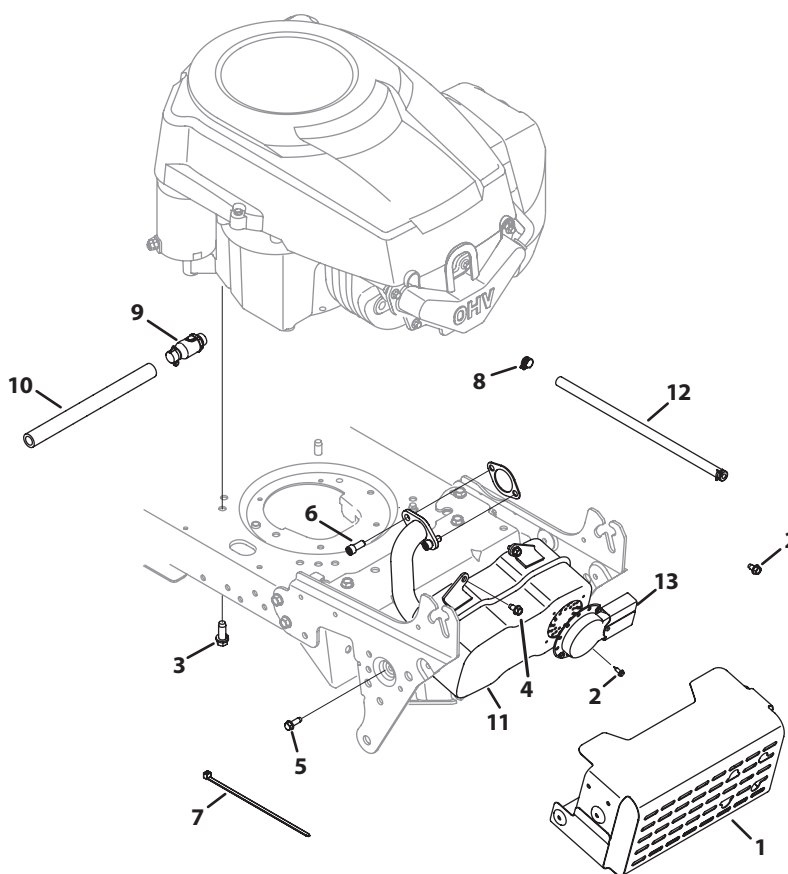

Ref. No.	Part No.	Description
1	683-04549	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0599	Screw, 1/4-20 x .500
5	710-0642	Screw, 1/4-20 x .750
6	710-1314A	Socket Screw, 5/16-18 x .750
7	725-0157	Cable Tie
8	726-0205	Clamp Hose, .490 diameter
9	951-10517A	Oil Drain
10	751-3141-14	Oil Drain, Extension Hose
11	751-11943	Muffler
12	751-10349-28	Fuel Hose, Low Permeation
13	751-11053	Muffler Deflector Long

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

Wiring Harness Schematic - 725-04432G

