


REPLACEMENT PARTS - MODEL TB2BP

2-CYCLE GAS BACKPACK BLOWER

PPN 41AR2BEG766

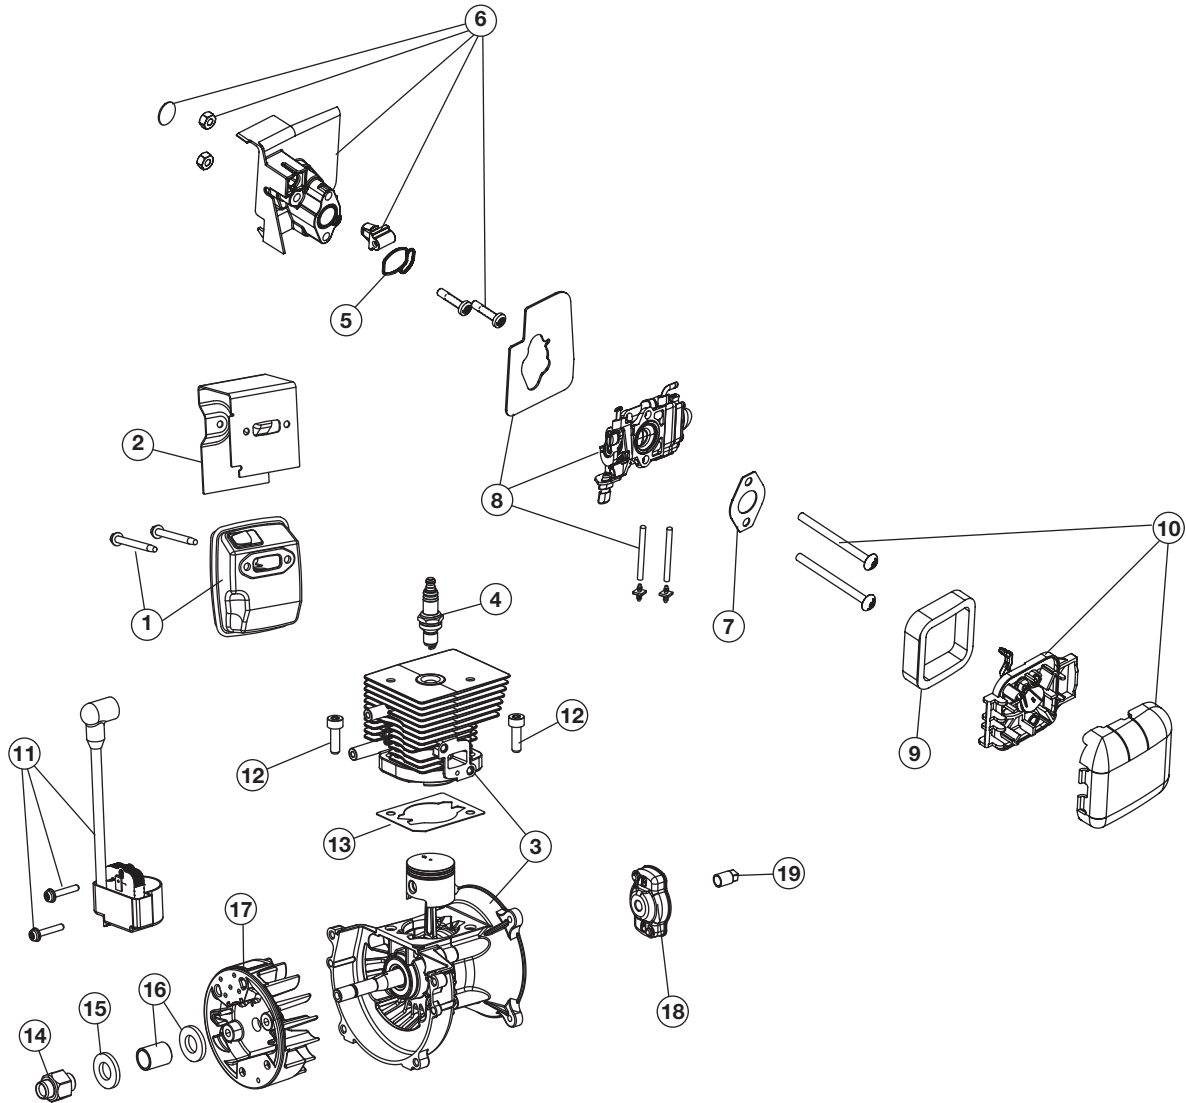


Item	Part No.	Description
1	753-06418	Muffler Assembly (includes 2)
2	753-06419	Muffler Gasket
3	753-06441	Shortblock Assembly (includes 4 & 11-17)
4	753-06193	Spark Plug
5	753-06184	Insulator O-Ring
6	753-06189	Insulator Assembly (includes 5)
7	753-06253	Carburetor Gasket
8	753-06442	Carburetor Assembly (includes 7)
9	791-181757	Air Filter

Item	Part No.	Description
10	753-05634	Air Cleaner Assembly (includes 9)
11	753-06443	Module Assembly
12	753-05703	Screw
13	753-06440	Cylinder Gasket
14	753-05705	Flywheel Adaptor
15	753-05706	Washer
16	753-05707	Bushing
17	753-06246	Flywheel Assembly
18	753-06091	Pawl Assembly
19	753-06104	Electric Start Adaptor

REPLACEMENT PARTS - MODEL TB2BP

2-CYCLE GAS BACKPACK BLOWER

PPN 41AR2BEG766

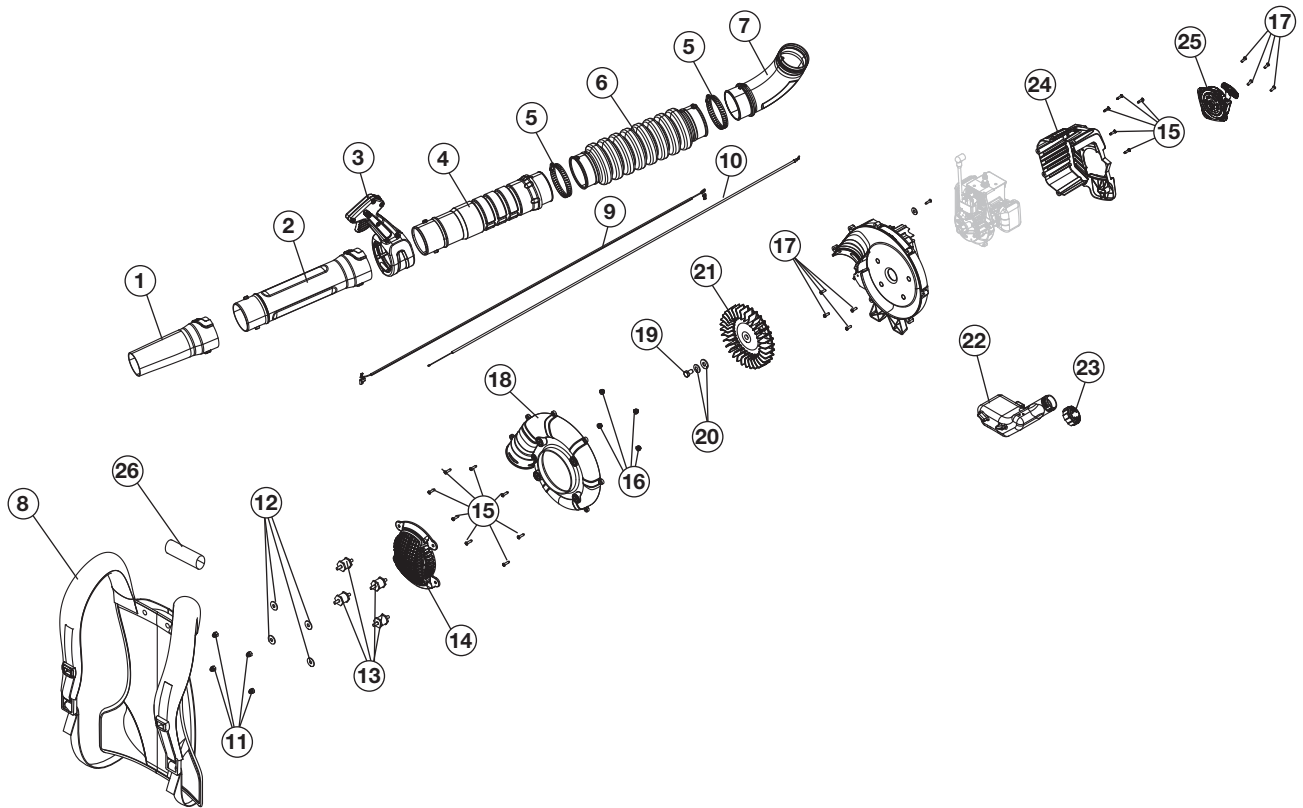

Item	Part No.	Description
------	----------	-------------

1	753-06000	Nozzle
2	753-05971	Lower Blower Tube
3	753-05975	Throttle Grip Assembly
4	753-05991	Upper Blower Tube
5	753-05640	Clamp
6	753-05641	Flex Tube
7	753-05990	Elbow
8	753-05645	Harness
9	753-05643	Lead Wire
10	753-06434	Throttle Cable
11	753-05647	Nut
12	791-182678	Washer
13	753-05648	Insulator Mount

Item	Part No.	Description
------	----------	-------------

14	753-05786	Intake Cover
15	791-181345	Screw
16	791-180050	Nut
17	791-181862	Screw
18	753-06597	Impeller Housing Assembly (includes 13-17)
19	791-182414	Bolt
20	753-04482	Impeller Hardware (includes 19)
21	753-05651	Impeller (includes 19 & 20)
22	753-05654	Fuel Tank Assembly (includes 23)
23	791-182529	Fuel Cap
24	753-06598	Housing Assembly (includes 15)
25	753-06596	Starter Assembly (includes 17)
26	753-06345	Grip