 
 
 



Component	Part Number and Description	
	954-04060B	Drive Belt (Mowing Deck) 42" Deck
	954-04219B	Drive Belt (Mowing Deck) 46" Deck
	918-04822A	Deck Spindle 42" Deck
	918-04865A	Deck Spindle 46" Deck
	942-04308	Blade (42" Deck)
	942-04308-X	Extreme Blade (42" Deck)
	942-04290	Blade (46" Deck)
	942-04361	Extreme Blade (46" Deck)
	925-1707D	Battery
	951-12179A	Fuel Tank Cap
	625-05002	Key Asm-Black Key W/Keychain
	734-1731	Tire (Front) 15 x 6 x 6 Square Shoulder
	734-1730	Tire (Rear) 20 x 8 x 8 Square Shoulder
	746-04367	Throttle Control/Cable
	631-04288	Discharge Chute Assembly

NOTE: This Operators Manual covers a range of product specifications for various models. Characteristics and features discussed and/or illustrated in this manual may not be applicable to all models. MTD reserves the right to change product specifications, designs and equipment without notice and without incurring obligation.


The following attachments and accessories are compatible for these models of Lawn Tractors. See the retailer from which you purchased your tractor, an authorized MTD Service Dealer or phone (800) 800-7310 for information regarding price and availability.

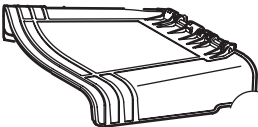

CAUTION: These models of Lawn Tractors are NOT designed for use with any type of ground-engaging attachments (e.g. tiller or plow). Use of this type of equipment WILL void the tractor's warranty.

Model Number	Description
OEM-190-116	38-inch Deck Mulch Kit
19A30006OEM	42-inch Deck Mulch Kit
19A30005OEM	46-inch Deck Mulch Kit
490-850-0005	Cutting Blade Removal Tool
OEM-190-607	Deluxe Tractor Sunshade
OEM-190-679	Bumper
OEM-190-183	Deck Wheel Kit 38"
OEM-190-180	Double Bagger Kit 38"
19A30003OEM	Double Bagger Kit 42" & 46"
490-900-0025	Deck Wash Kit
490-850-0008	Oil Siphon
490-290-0013	Arnold Tractor Cover
490-900-0045	Arnold Oil Filter Wrench
SPW-134	Arnold Spark Plug Wrench
490-325-L021	1 Gallon Tire & Tube Sealant By Tire Aid
490-325-L019	24 Oz Tire & Tube Sealant By Tire Aid
490-850-L013	Deluxe Tire/ Tube Foot Pump By Tire Aid
490-850-L014	Tire Aid Deluxe Tire Plug Kit By Tire Aid
490-328-L014	15" Tractor Tube With Sealant By Tire Aid
490-328-L017	16" Tractor Tube With Sealant By Tire Aid
490-328-L016	18" & 20" Tractor Tube With Sealant By Tire Aid
22216	32 oz. STA-BIL ®

5 Style Hood

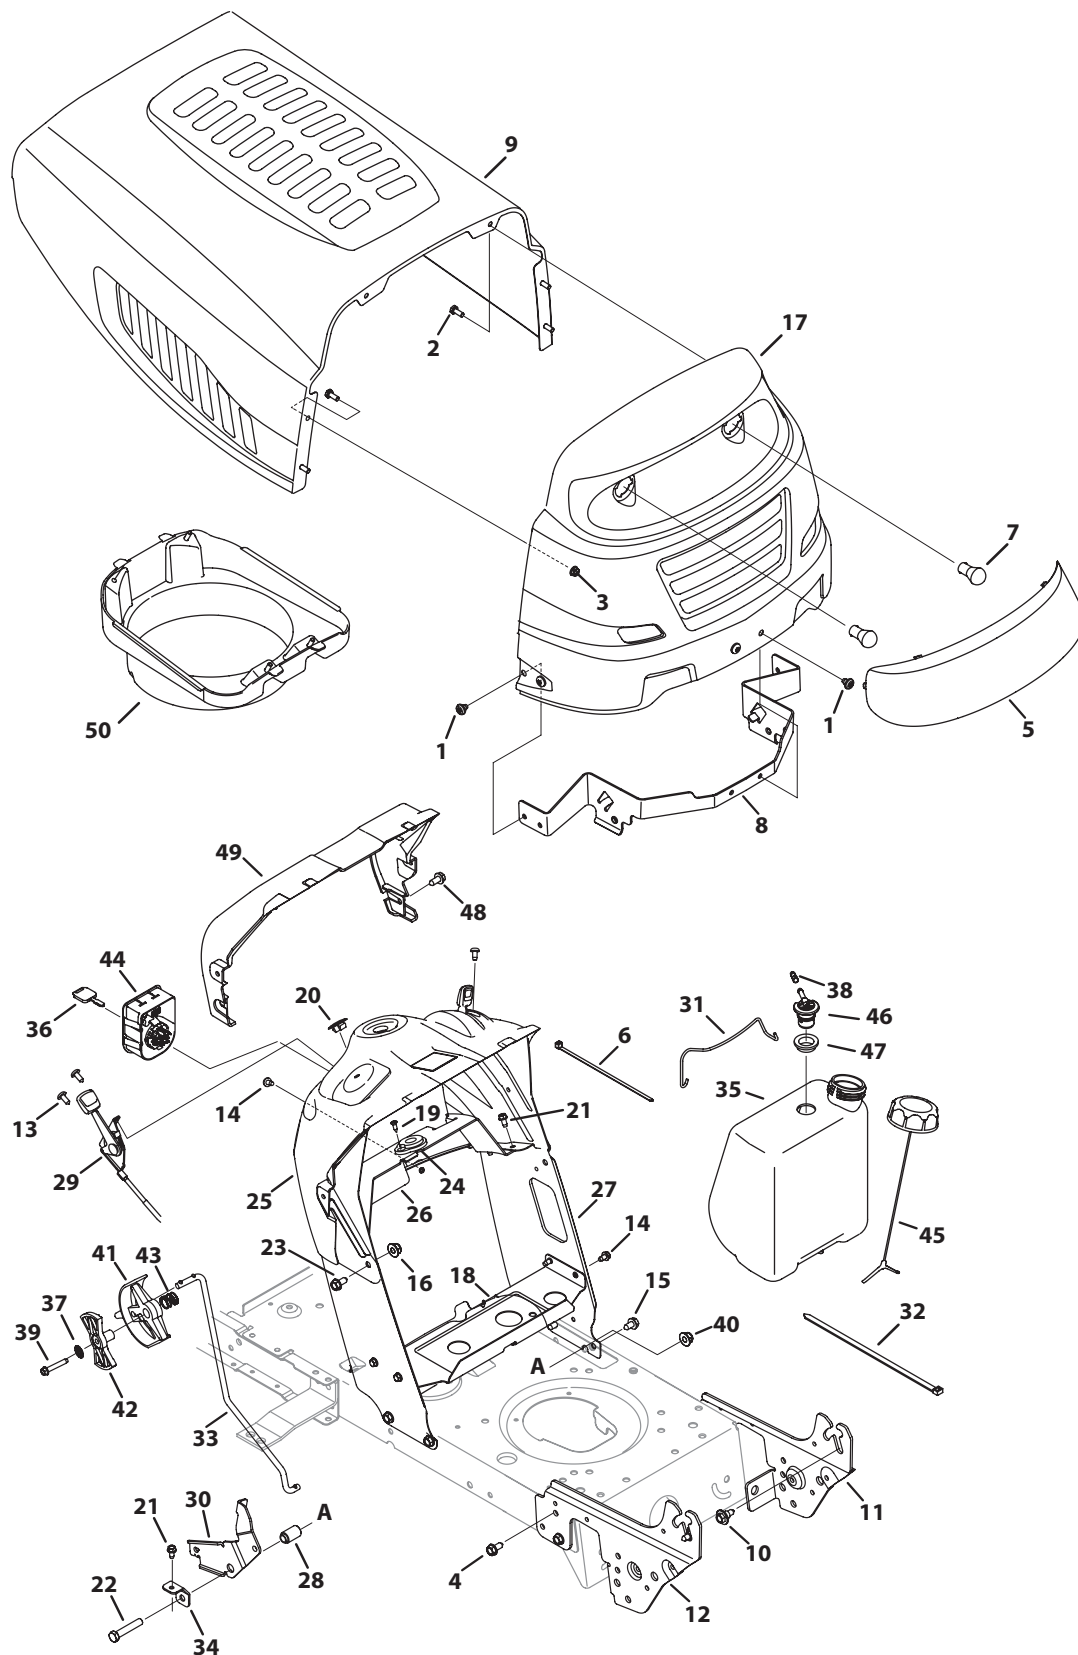


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-04593	Screw, 5/16-18 x .375	26	783-06785A	Bracket, Steering Support
2	710-0751	Hex Screw, 1/4-20 x .620	27	783-06811	Dash, Lower
3	712-04064	Flangelock Nut, 1/4-20	28	750-04465B	Flange Spacer, .390 x .671 x 1.095
4	710-04484	Screw, 5/16-18 x .750	29	746-04367	Throttle/Choke Cable
5	731-04949A	Grill Lens	30	783-06991	Speed Latch - No RMC
6	725-0157	Cable Tie	31	683-04448	Battery Assembly Rod
7	925-0963	Lamp	32	726-0230	Cable Tie
8	783-05454	Hood Pivot Bracket	33	747-05398	Speed Control Rod
9	783-05683	Hood	34	783-06823	Speed Latch Tab
10	738-04091A	Shoulder Screw, 5/16-18 x .43 x .29	35	951-04304	1.36 Gallon Fuel Tank
11	783-05327B	Left Support Pivot Bracket	36	625-05002	Key, Assembly
12	783-05328A	Right Support Pivot Bracket	37	736-3006	Lock Washer, 1/4
13	710-04483	Screw, 1/4-20 x .500	38	751-12089-28	Hose Vent, 3/16 EPA
14	710-05070	Screw, 1/4-20 x .500	39	710-0778	Hex Washer Screw, 1/4-20 x 1.50
15	710-0604A	Screw, 5/16-18 x .625	40	712-04065	Flangelock Nut, 3/8-16
16	712-04063	Flangelock Nut, 5/16-18	41	731-07885B	Shift Lever
17	783-05685	Grill	42	731-07966A	Index Control
18	783-07083	Gas Tank Support Bracket	43	732-04877	Compr. Spring, .72 OD x .78
19	910-0224	Screw, #10-16 x .500	44	925-04659	3 Position Key Switch
20	731-05265	Choke Plug	45	951-12179A	Fuel Cap, 2.25"
21	710-1652	Tap Screw, 1/4-20, 0.625	46	751-12118	Rollover Valve
22	710-3144	Hex Screw, 3/8-16 x 2.0	47	735-04081	Rubber Grommet, 23 x 3.55
23	710-3025	Hex Screw, 5/16-18 x .625	48	710-0895	Screw, 1/4-15 x .750
24	741-0587	Bearing, .628 ID x 1.36	49	731-05078C†	Dash Collar
25	931-08054	Dash, Upper	50	731-05147A†	Plenum
	931-08542A	Dash, Upper NRMC	—	925-04567G	Harness, LT-5, NRMC, Dual

† If Equipped


NOTE, Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Frame and PTO Lift

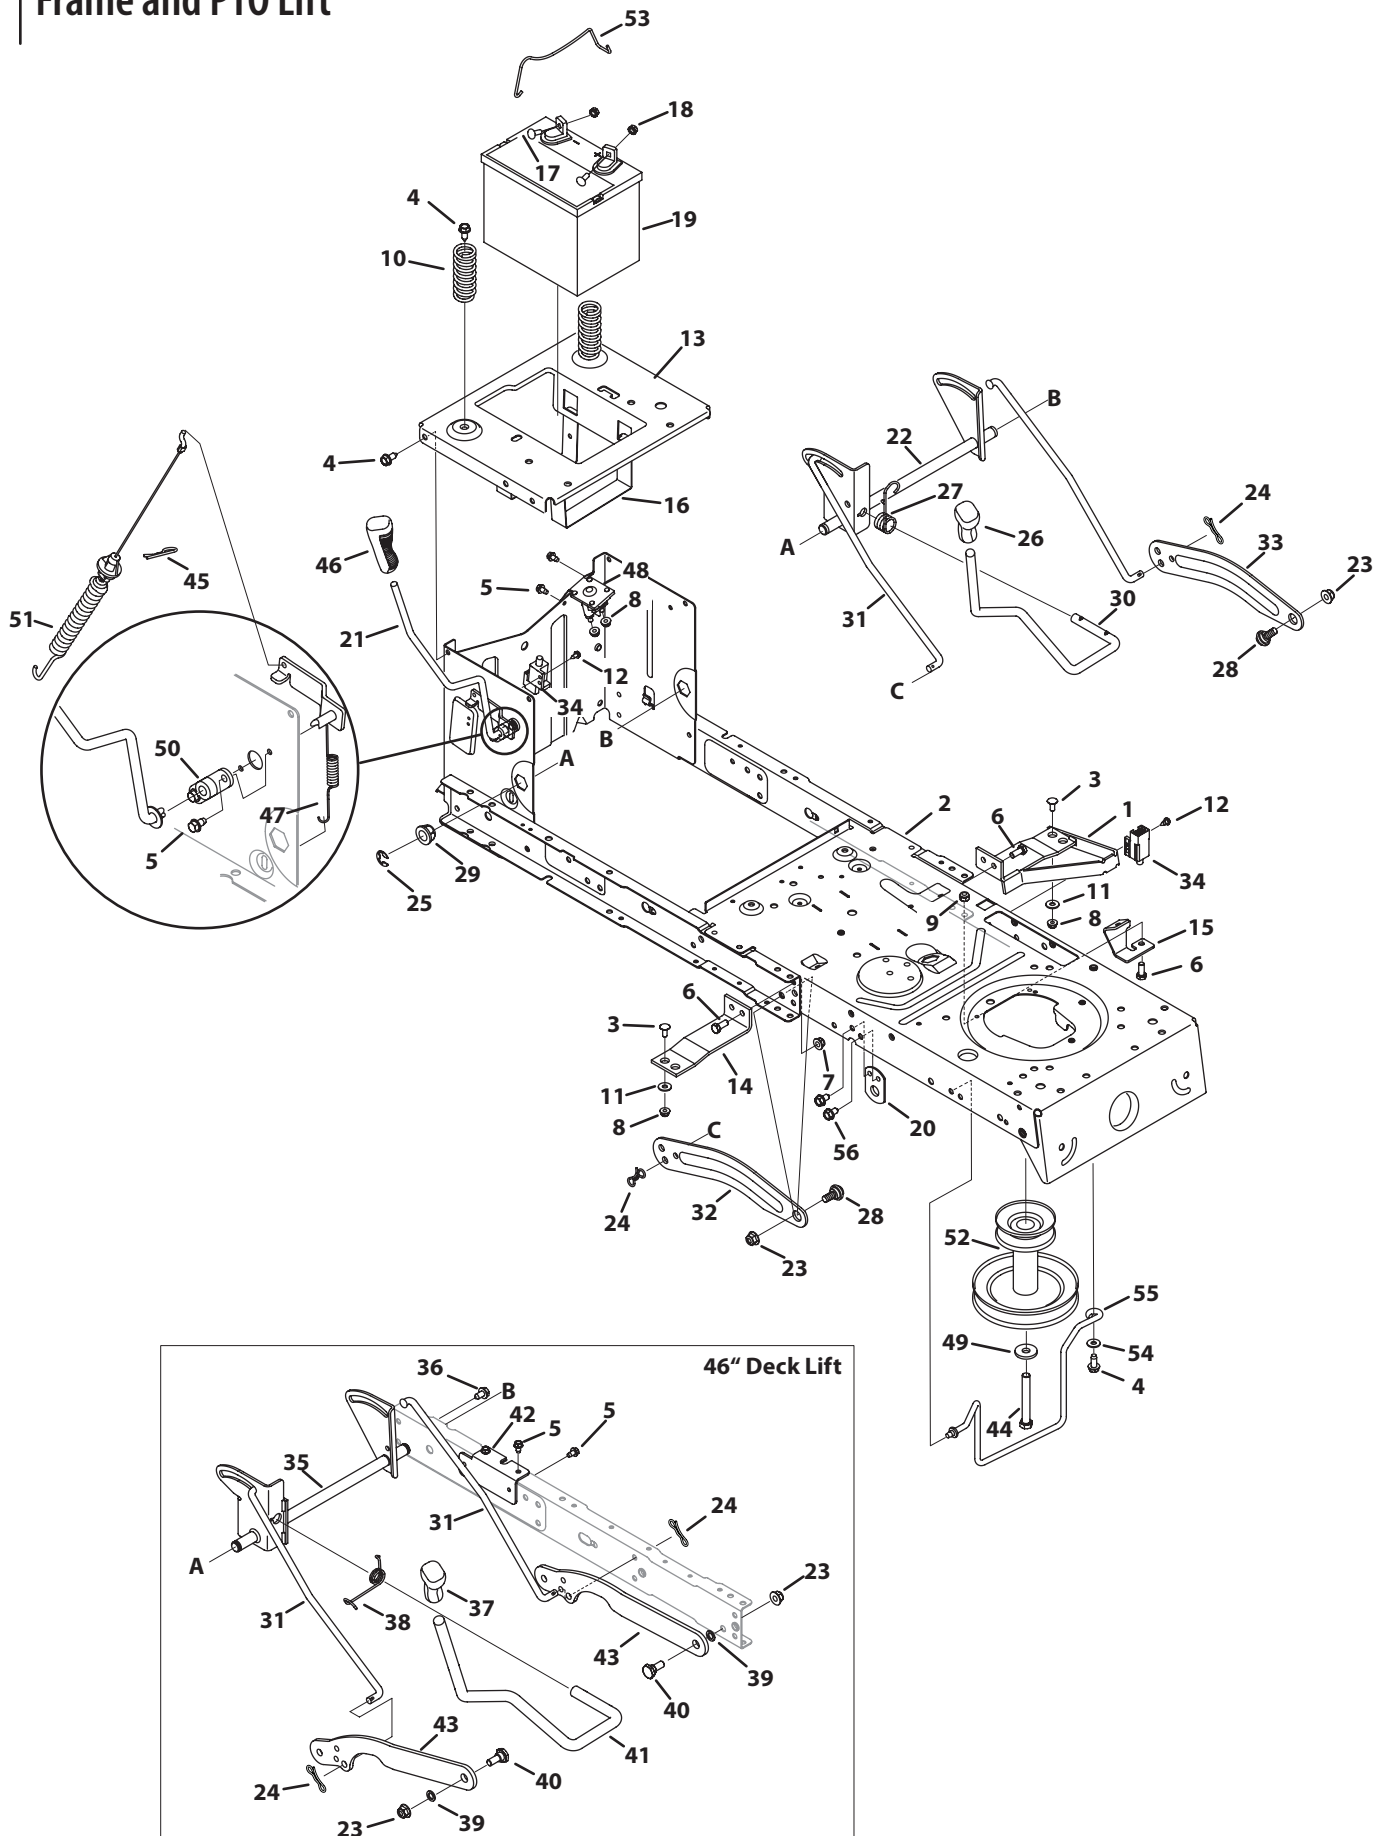

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	683-04195	Support Bracket	30	747-04282	Deck Lift Handle
2	683-04649A	Frame Assembly	31	747-04393	Lift Rod
3	710-0134	Screw Carriage, 1/4-20 x .62	32	783-04494C	42" Lift Arm, RH
4	710-04484	Screw 5/16-18 x .750	33	783-04711C	42" Lift Arm, LH
5	710-0599	Screw, 1/4-20 x .500	34	725-04363	Switch Interlock
6	710-3008	Hex Screw, 5/16-18 x .75	35	683-04334	Lift Assembly, 46"
7	712-04063	Flangelock Nut, 5/16-18	36	710-0604A	Screw, 5/16-18 x .625
8	712-04064	Flangelock Nut, 1/4-20	37	720-0298	Handle Grip, 5/8
9	912-0429	Hexlock Nut, 5/16-18	38	732-04438	Torsion Spring Handle, 46"
10	732-04035	Compression Spacer, 1.28 x 3.125	39	936-0140	Flat Washer, .385 x .62 x .063
11	736-0173	Flat Washer, .28 x .74 x .063	40	938-0380	Shoulder Bolt, 3/8-16 x .500 x .270
12	738-04237A	Shoulder Spacer, 10-32 x .500	41	747-04653A	46" Lift Handle
13	783-04548D	Seat Frame Bracket	42	783-05389	Frame Brace Bracket
14	783-04637	Running Board Bracket	43	783-0678C	Lift Deck Link
15	783-04753	Support Frame Bracket	44	710-3157A	Hex Screw, 7/16-20 x 3.25
16	783-04869A	Battery Bracket	45	914-0145	Click Pin, .092 x 1.64
17	710-04666	Hex Head Flange, 1/4-20 x .75	46	720-04049A	Handle Grip, 3/8
18	712-0271	Sems Nut, 1/4-20	47	732-04276A	PTO Spring Extension
19	925-1707D	230 CCA Battery	48	725-04439	12V Solenoid
20	783-04536B	Support Bracket	49	736-0322	Flat Washer, .450 x 1.250 x .164
21	647-04096A	PTO Handle Assembly	50	741-04119A	PTO Bearing
22	683-04155A	Lift Assembly, 42"	51	946-04173E	Deck Engage Cable
23	712-04065	Flangelock Nut, 3/8-16	52	756-04196A	Engine Pulley, 3.39 x 6.12
24	714-04040	Bow-tie Cotter Pin	53	683-04448	Battery Hold Down Rod
25	716-0106A	E Ring	54	936-0300	Flat Washer, .406 x .875 x .059
26	720-0311	Handle Grip, 1/2	55	747-04857	42" Belt Keeper
27	732-04225	Torsion Spring		683-04414	46" Belt Keeper
28	738-04130	Shoulder Bolt, 3/8-16 x .625 x .175	56	710-0604A	Screw, 5/16-18.0 x .625
29	941-0225	Hex Flange Bearing			

NOTE, Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

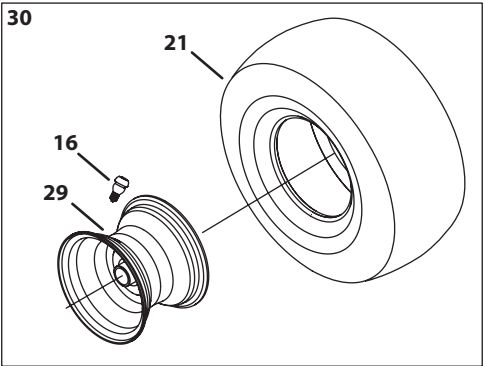


Front End Steering

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	617-04094	Front Steering Gear Assembly	23	736-04228A	Flat Washer, .781 x 1.590
2	710-0514	Hex Screw, 3/8-16 x 1.00	24	714-0162	Cotter Pin, 5/32 x 1.25
3	710-0643	Hex Screw, 5/16-18 x 1.00, Lock	25	683-0128B	Pivot Axle
4	710-1309	Machine Screw, 5/16-18 x .750	26	710-04484	Screw, 5/16-18 x .750
5	710-3180	Hex Screw, 5/16-18 x 1.75	27	712-04065	Flangelock Nut, 3/8-16
6	912-0240	Jam Nut, 7/16-20	28	914-0474	Cotter Pin, .125 x .75
7	912-0214	Jamlock Nut, 3/8-24	29	634-05066	Rim Asm, 6.0x4.5, 42" Deck
8	712-04063	Flangelock Nut, 5/16-18		634-04634	Rim Asm, 6.0x4.5, 46" Deck
9	938-04013	42" & 46" Front RH Axle	30	634-05053	Wheel Assembly, 42"
10	923-0448A	Ball Joint, 7/16-20		634-04639	Wheel Assembly, 46"
11	736-0242	Bell Washer, .340 x .872 x .060	31	731-04040	Sprig Cap
12	938-04014A	42" & 46" Front LH Axle		731-04039	Cap, No Sprig
13	738-04141	Shoulder Bolt, 5/16-18 x .435 x .350		731-0220	Cap
14	738-0919A	Steering Shaft, 5/8 x 22.08	32	631-04028	Steering Wheel
15	941-04124	Flange Bearing, 5/8		631-0027A	Steering Wheel
16	934-0255	Valve, tubeless Air	33	931-0484A	Hub Cap
17	747-05385	Steering Link	34	738-04128	Shoulder Bolt, 3/8-16 x .500 x 2.38
18	948-0389	Cap, 1.25 x .16	35	747-04299A	Fixed Rod
19	748-04065	Steering Block	36	783-05326B	Pivot Bar Bracket
20	748-04068	Spacer, .71 x .125 x .56	37	726-0341	Push Cap, 3/4
21	734-04240A	Tire, 15 x 6 x 6, 42" Deck	38	731-04057A	Standard Axle Cap
	734-1731	Tire, 15 X 6 X 6, 46" Deck	39	741-0660A	Flange Bearing, .760 x .941 x 1.0
22	738-04162C	Shoulder Spacer, .884 x .190			

NOTE, Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Seat and Fender

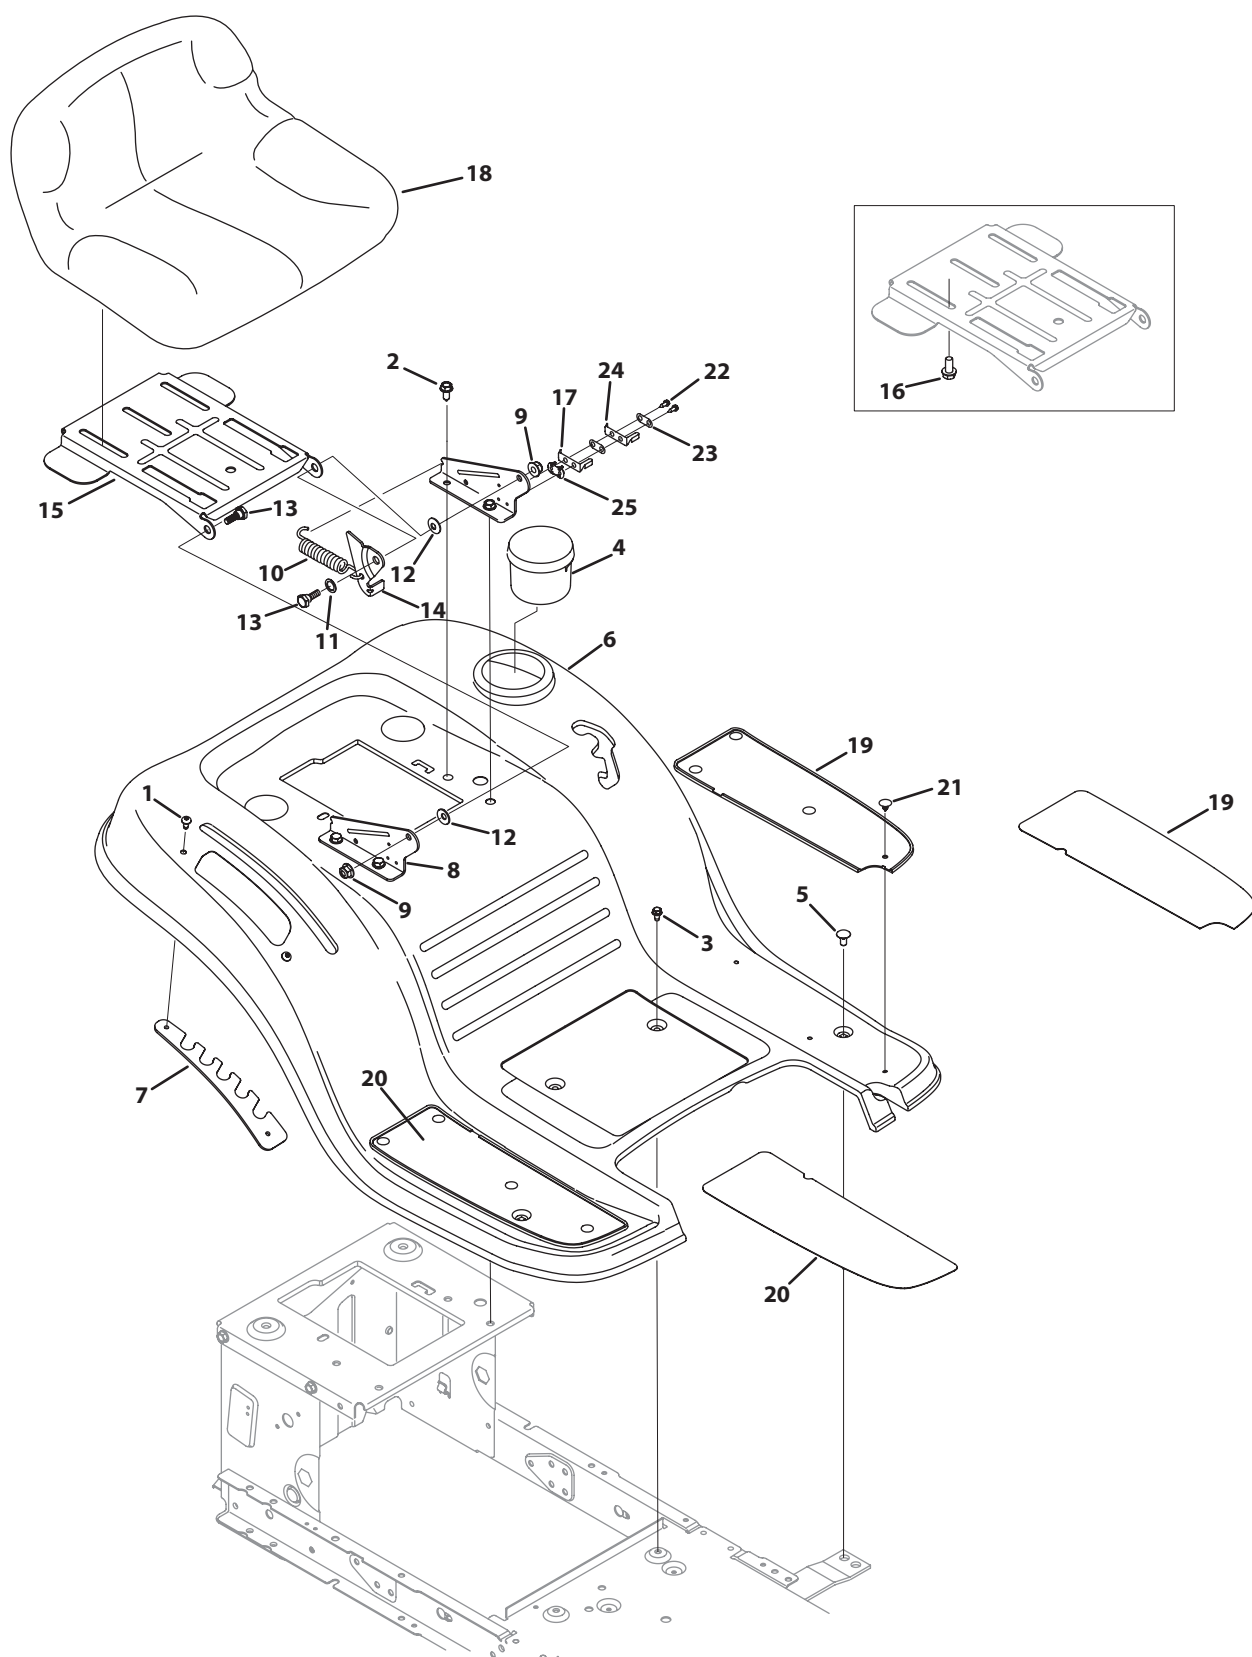

Ref. No.	Part No.	Description
1	710-05070	Screw, 1/4-20 x .500
2	710-04484	Screw, 5/16-18 x .750
3	710-0599	Screw Pan Torx Head, 1/4-20 x .500
4	731-04591A	Cup Holder
5	710-0134	Screw Carriage, 1/4-20 x .62
6	783-04587D	Fender - Red
7	783-04843	Lift Adjuster Bracket - Powder Black
8	783-1489D	Seat Mount Bracket - Powder Black
9	712-04063	Flangelock Nut, 5/16-18
10	732-1184	Extension Spring
11	936-0108	Flat Washer, .510x .750 x .033
12	736-0242	Bell Washer, .340 x .872 x .060
13	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
14	783-0209D	Lift Seat Bracket
15	783-04081D	Pivot Seat Manual Adjust Bracket
16	710-04482	Hex Head Flange, 3/8-16 x .875
17	725-1439	Inner Seat Spring
18	757-04083A	Med. Back Seat, Black
19	735-04047	Foot Pad, LH
	723-04026	Foot Pad, Abrasive, LH
20	735-04048	Foot Pad, RH
	723-04025	Foot Pad, Abrasive, RH
21	726-3046	Ratchet Clip, .250 x .500
22	710-0227	Screw, 8-18 x .500
23	726-0279	Insulator Plate
24	925-1303	Outer Seat Spring
25	726-0278	Insulator Boss Plate

NOTE, Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Transmission


This diagram illustrates the exploded view of a transmission assembly, showing the relationship between various components. The main assembly includes the transmission housing (7), internal shafts (3, 20), and various gears and pulleys (22, 60, 62, 63, 64, 66, 67, 68, 69, 70, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100). The diagram also shows the installation of the transmission into the vehicle frame (1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100). Callouts A, B, and C indicate specific assembly points or sub-assemblies. The diagram is a technical drawing with numbered parts and callouts, showing the exploded view of a transmission assembly.

Transmission

Ref.	Part No.	Description	Ref.	Part No.	Description
1	918-04566	Transmission Drive Assembly	44	736-3040	Flat Washer, .406 x 1.920 x .060
2	17962	Plate Switch	45	936-0185	Flat Washer, .375 X .738 X .063
3	647-04266	Shaft Lever Assembly	46	725-04363	Switch Interlock
4	647-04201A	Pedal Assembly, drive	47	634-04324	Wheel, 20 x 8 x 8, 42" Deck
5	647-04203A	Pedal Assembly, control		634-0104	Wheel, 20 x 8 x 8, 46" Deck
6	683-04736	Pedal Bracket Assembly	48	738-0372B	Shoulder Spacer, 1.00 X .38 X .38
7	710-0227	Screw, 8-18:0.500	49	738-04091A	Shoulder Screw, .43 x .29, 5/16-18
8	710-04484	Screw, 5/16-18 x .750	50	783-06807A	Stop Pedal Plate
9	710-0604A	Screw, 5/16-18 x 0.625	51	741-0495	Flng Bearing .63 Id x .695 Od X .60
10	710-0809	Screw, 1/4-20 x 1.250	52	934-0255	Valve, tubeless Air
11	710-0859	Hex Screw, 3/8-16 x 2.50	53	747-05188	Brake Rod
12	710-1007	Screw, 3/8-16 x 1.500	54	747-05243	Shift Rod, 46"
13	710-1858A	Screw, 3/8-16 x 1.750	55	747-05596	Idler Adjustment Rod
14	710-1266	Hex Screw, 5/16-18 x .625	56	747-05415	Transmission Bypass Rod
15	710-1026	Screw, 1/4-20 x 1.75	57	948-0334	Spacer, T-Axle .68
16	710-3008	Hex Screw, 5/16-18 x .75	58	750-04456	Spacer, .260 X .372 X 1.420 Lg
17	912-0240	Jam Nut, 7/16-20	59	750-0566A	Spacer, .260 X .375 X 1.030 Lg
18	712-0241	Hex Nut, 3/8-24	60	954-04208	V Belt, 5L 40.9 Poly
19	712-04063	Flangelock Nut, 5/16-18	61	954-0467A	V Belt, 5L, 90.93 Poly
20	732-04764	Spring Extension, .56 OD x 12.05	62	956-04002	V Pulley 7.25 DIA SPUN
21	912-3000	Nut, 3/8-16, Centerlock	63	756-04224	Idler Pulley
22	712-0700	Flange Nut, 9/16-18	64	756-04325	Idler Pulley
23	734-04241	Tire, 20 x 8 x 8, 42" Deck	65	783-04536B	Pedal Support Bracket
	734-1730	Tire, 20 X 8 X 8, 46" Deck	66	783-04595A	Shaft Adjust Bracket
24	914-0209	Cotter Pin INT- .125 DIA	67	634-04369	Rim, 8.0 X 7.0 X .750, 46" Deck
25	714-04040	Bow-Tie Cotter Pin, 72	68	783-06562A	Frame Pedal Bracket, Rh
26	718-04407	Pulley Hub, 5/8 SPLINE	69	783-06769	Center Idler Bracket
27	720-04028	Shift Knob	70	783-06592A	Idler Bracket
28	923-3018	Ball joint	71	783-06641A	Pedal Support Bracket
29	725-0157	Cable tie	72	753-06662	Idler Bracket Assembly
30	725-1644	Short Spring Switch	73	683-04606	Bracket Assembly
31	726-0214	Push Cap, 5/8	74	710-1260A	Screw, 5/16-18 x 0.750
32	926-0320	Plate Insulator Nut	75	710-3005	Hex Screw, 3/8-16 x 1.25
33	731-04602	Sleeve, .758 x .821 x 3.3125	76	712-04065	Flangelock Nut, 3/8-16
34	731-04604	Sleeve, .758 x .821 x 2.4375	77	738-04162C	Shoulder Spacer, .8840 X .190
35	731-06330	Plug, 7/8	78	956-04015A	Variable Speed Pulley Assembly
36	731-06894	Shift Plate Bearing	79	683-04522	Belt Keepr Assembly
37	732-04488	Spring Extension, .38 OD x 3.25 LG	80	683-04612	Bracket Assembly
38	732-04612	Spring Extension, .70 OD X 12.00	81	710-05339	Screw, 5/16-24 x .750
39	732-04616B	Spring Extension, .97 Od X 6.18 Lg	82	710-0778	Screw, 1/4-20 x 1.500
40	732-0716D	Spring Extension, .59 OD x 4.00 LG	83	718-04261	Bearing Cup
41	735-0239	Foot Pad, 4.0 Long	84	736-0362	Flat Washer, .330 X 1.25 X .06
42	735-04272	Control Pad	85	941-0600	Ball Bearing, 17 x 40 x 12
43	936-0169	Lock Washer 3/8	86	747-05430	Spring Retainer Rod

NOTE, Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

42" Deck

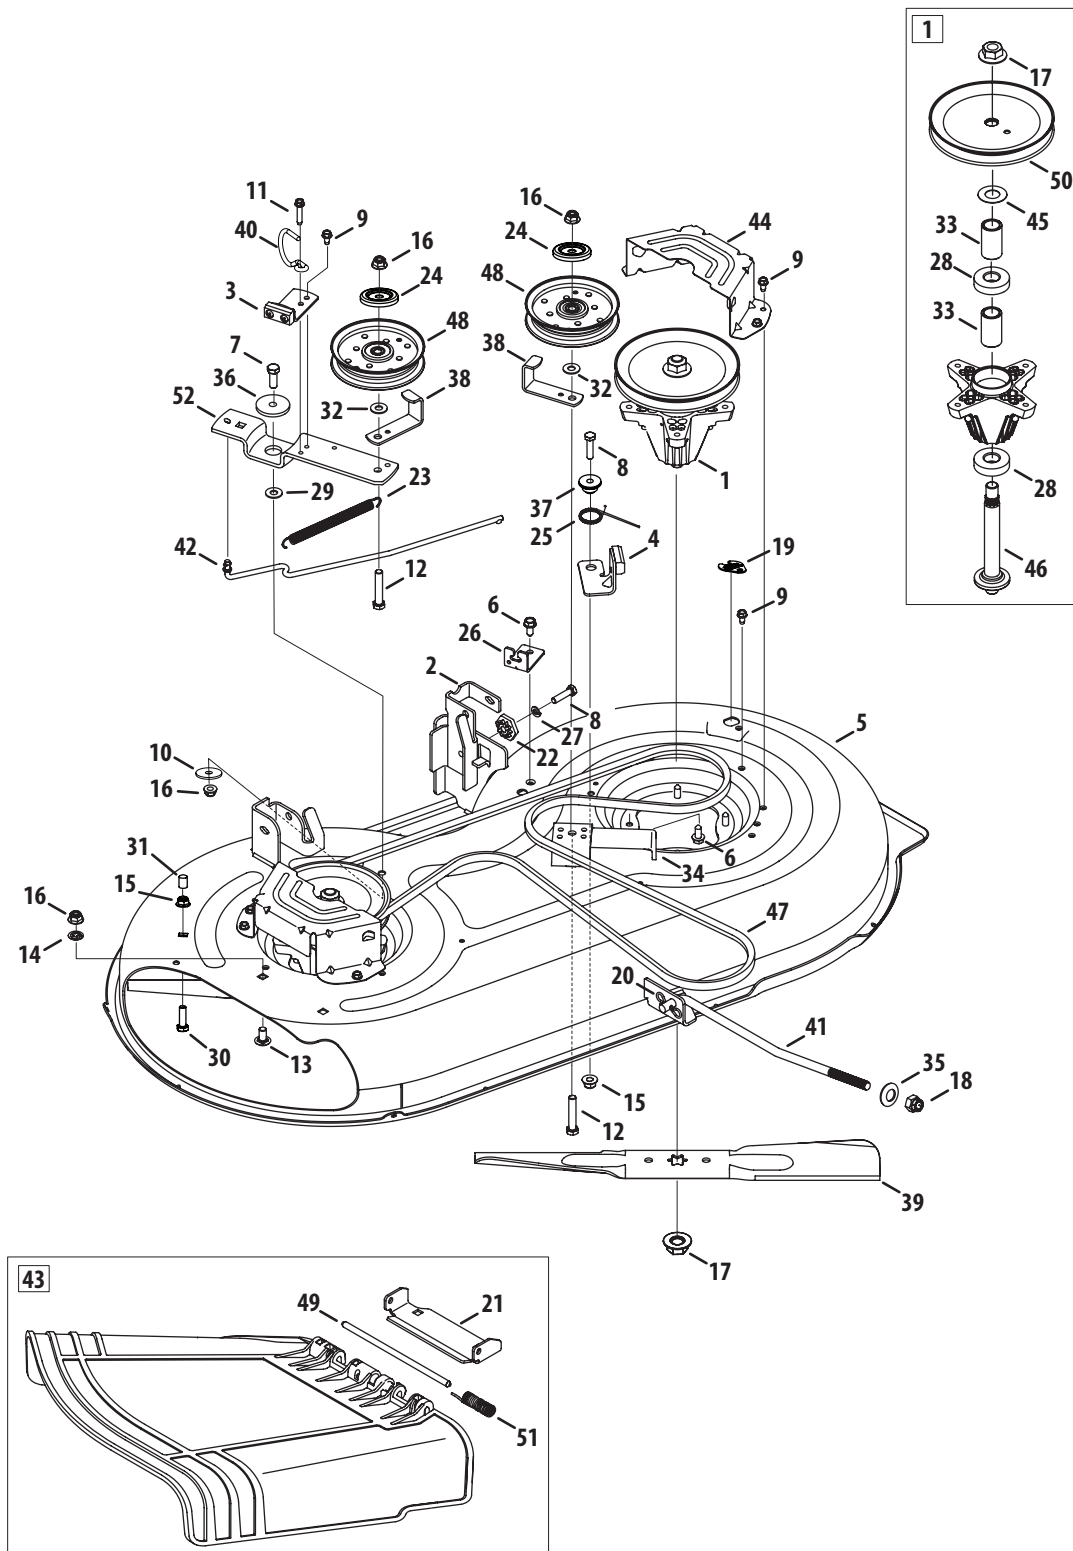


Ref.	Part Number	Description
1.	918-04822A	Spindle Ass'y, Pulley, 6.3 Dia
2.	683-0254B	Bracket Ass'y, Deck, Hanger LH
3.	983-04511	Brake Ass'y, Deck, 42/46
4.	983-04525	Brake Ass'y, Deck, 46"
5.	983-04570A	Deck Ass'y, Offset, 42" W/O wheel
6.	710-04484	Screw, Self-tapping, 5/16-18, .750
7.	710-3005	Hex Screw, 3/8-16, 1.25, Gr5, Std
8.	710-0528	Hex Screw, 5/16-18, 1.25, Gr5, Std
9.	710-0599	Screw, Self-tapping, 1/4-20, 0.500
10.	936-3039	Flat Washer, .406 x 1.500 x .105
11.	710-0642	Screw, Self-tapping, 1/4-20, .750
12.	710-3144	Hex Screw, 3/8-16, 2.00, Gr5, Std
13.	710-3178	Bolt, Carriage, 3/8-16, 0.75, Gr1
14.	712-0229	Nut, Push, 3/8
15.	712-04063	Nut, Flange Lock, 5/16-18, Grf
16.	712-04065	Nut, Flange Lock, 3/8-16, Grf
17.	712-0417A	Nut, Flange, 5/8-18
18.	712-04243	Nut, Lock, 1/2-13
19.	783-06464	Deck Wash Plug
20.	714-04043	Bow-Tie Cotter Pin
21.	783-06074A	Chute Bracket
22.	917-04074	Gear, Deck, Adjustment
23.	932-0384	Spring, Extension, .62 Dia x 6.12
24.	783-07236	Pulley Cap
25.	732-04840	Spring, Torsion, .992 ID X 1.17 OD
26.	783-06243	Bracket, Cable, Deck Engage

Ref.	Part Number	Description
27.	936-0119	Washer, Lock, 5/16, Regular Duty
28.	941-0919A	Bearing, Ball, .787id x 1.85 Odx.551
29.	936-0344	Washer, Flat, .385 X 1.0 X .030
30.	710-0376	Hex Cap Screw, 5/16-18 x 1.00
31.	720-05010	Cap, .290 x .500
32.	736-0262	Washer, Flat, .385 x .870 x .092
33.	750-04936	Spacer, .792 x 1.060 x 1.860
34.	783-06643	Bracket, Support, Stationary Idler
35.	748-04069	Deck Lift Pivot Cup
36.	738-04162C	Spacer, Shoulder, .8840 x .190
37.	748-04272	Shoulder Spacer
38.	783-06368	Bracket, Guard, Belt, 4.25 Pulley
39.	942-04308	Blade, Cut, 21.23" 2-In-1, Econ
40.	747-05323	Rod, Keepr, Belt 42 Idler
41.	747-05141A	Rod, Lift, Deck, Frt, 12.7
42.	747-05105B	Rod, Control, Brake 42"
43.	631-04288	Chut Assembly, 42" Deck
44.	783-06424A	Deck Belt Cover, 42
45.	936-0351	Washer, Flat, .760 Idx1.50 OD
46.	738-1186A	Shift, Spindle, 6.11.
47.	954-04060B	Belt, V Type, A Sec X 96.5
48.	756-04129B	Pulley, Idler, 4.25"Dia
49.	711-04847B	Pin, Hinge, Dia .3125 x 7.96
50.	956-1227	Pulley, Deck, 6.3 Dia
51.	732-04372	Spring, Torsion, .44 I.D. X 2.0
52.	783-05946	Pivot idler Bracket, 46


NOTE, Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

46" Deck

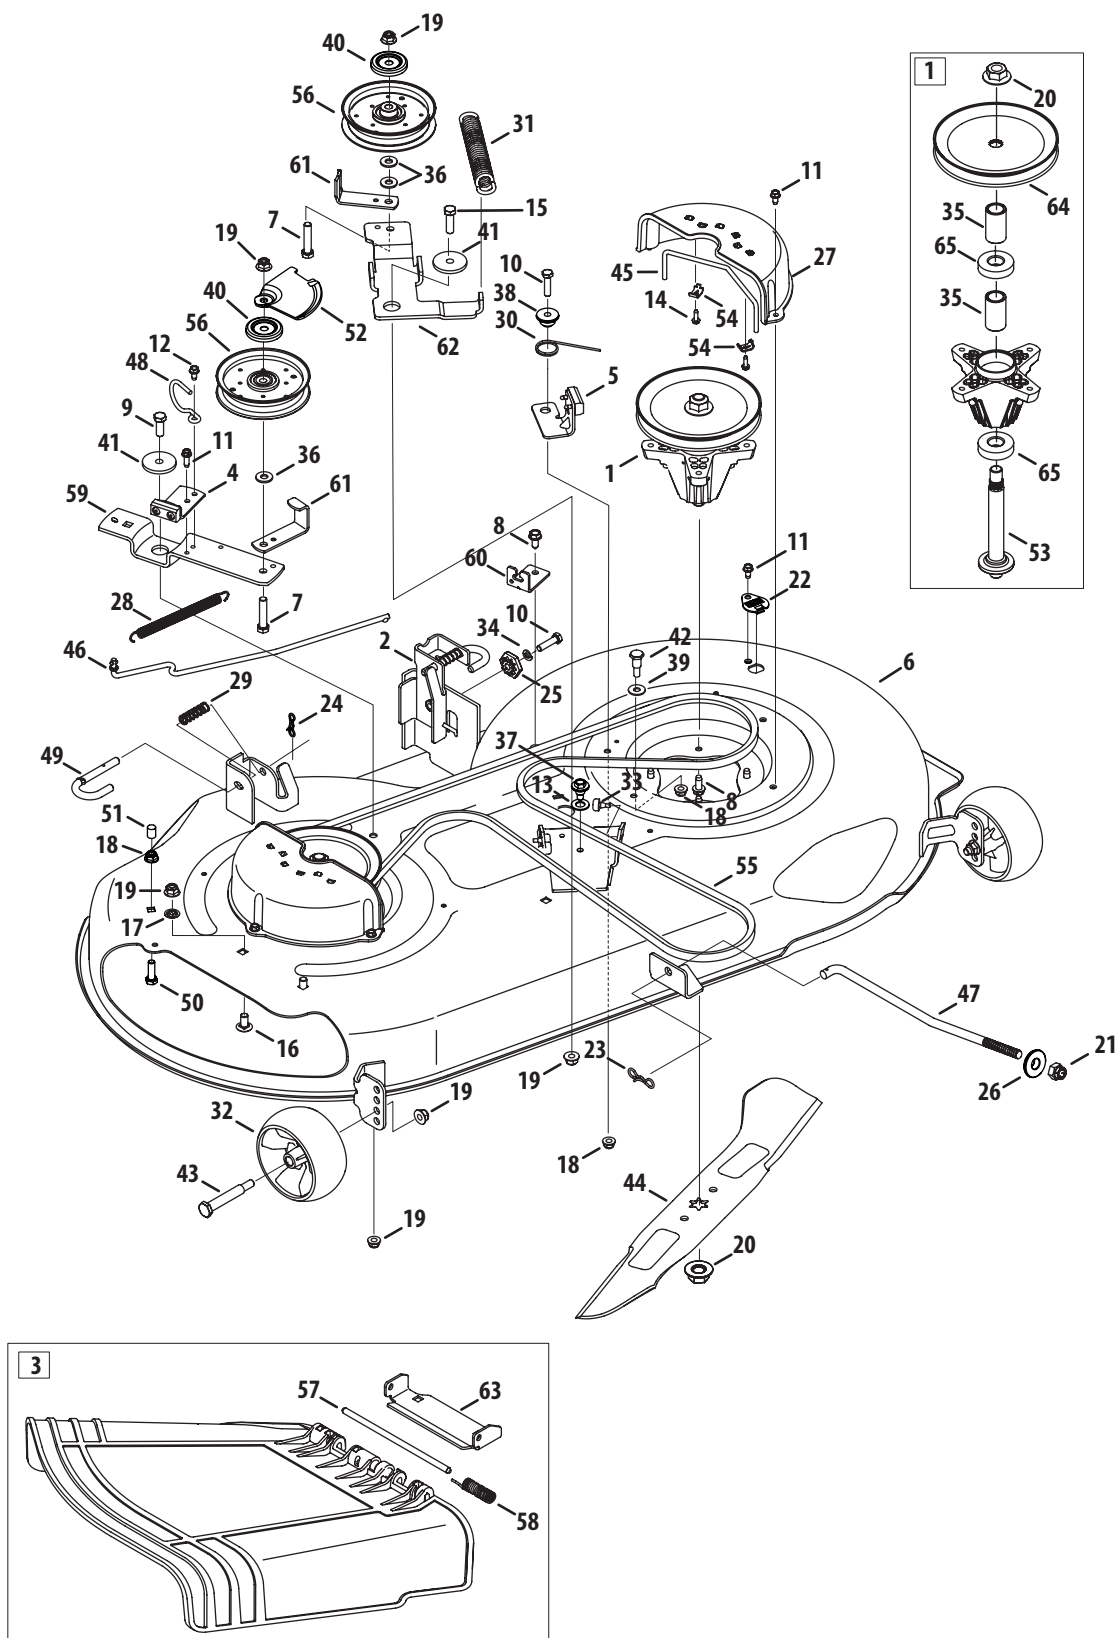

Ref.	Part Number	Description
1.	918-04865A	Spindle Assembly, Pul 6.93 Dia
2.	683-0254B	Bracket Assembly, Deck Hanger, LH
3.	631-04288	Chute Deflector Assembly
4.	983-04511	Brake Assembly, Deck, 42/46
5.	983-04525	Brake Assembly, Deck, 46"
6.	683-04730A	Deck Assembly, 46t, 2w
7.	710-3144	Hex Screw, 3/8-16 x 2.00
8.	710-04484	Screw, Self-tapping, 5/16-18, .750
9.	710-0514	Hex Screw, 3/8-16, 1.00, Gr5, Std
10.	710-0528	Hex Screw, 5/16-18, 1.25, Gr5, Std
11.	710-0599	Screw, Self-tapping, 1/4-20, 0.500
12.	710-0642	Screw, Self-tapping, 1/4-20, .750
13.	936-0226	Washer, Flat, .474 x .879 x .064
14.	710-1003	Screw, B, #10-16, 0.625
15.	710-3005	Hex Screw, 3/8-16 x 1.25
16.	710-3178	Bolt, Carriage, 3/8-16, 0.75, Gr1
17.	712-0229	Nut, Push, 3/8
18.	712-04063	Nut, Flange Lock, 5/16-18, Nylon
19.	712-04065	Nut, Flange Lock, 3/8-16, Nylon
20.	712-0417A	Nut, Flange, 5/8-18
21.	712-04243	Nut, Lock, 1/2-13
22.	783-06464	Deck Wash Plug
23.	714-04043	Bow-Tie Cotter Pin
24.	714-04040	Bow-Tie Cotter Pin, 72
25.	917-04074	Gear, Deck Adjustment
26.	748-04069	Pivot Cup, Deck List
27.	731-06496	Belt Cover, Universal
28.	932-0384	Spring, Extension, .62 x 6.12
29.	732-04652	Spring, Compression, .535 x 1.751
30.	732-04840	Spring, Torsion, .992 I.D X 1.17 O.D
31.	732-04909	Spring, Extension, 1.05 X 6.346
32.	734-04155	Wheel, Deck, 5.0 Dia Ball
33.	735-0271A	Bumper, .62 Dia X .3

Ref.	Part Number	Description
34.	936-0119	Washer, Lock, 5/16, Regular Duty
35.	750-04936	Spacer, .792 X 1.060 X 1.860 LG
36.	736-0262	Washer, Flat, .385 x .870 x .092
37.	738-04091A	Shoulder Spacer, .43 x .29, 5/16-18
38.	748-04272	Shoulder Spacer, .50 x .145
39.	736-0371	Washer, Flat, .343 X .880 X .062
40.	783-07236	Pulley Cap
41.	738-04162C	Shoulder Spacer, .8840 X .190
42.	738-0754	Shoulder Screw, .437 Dia. X .54
43.	938-3056	Bolt, Shoulder, .496 x 2.50, 3/8-16
44.	942-04290	Blade, Cut, 23.25" 2-In-1, Econ
45.	747-05011	Rod, Keeper, Belt
46.	747-05052A	Rod, Control, Brake 46"
47.	747-05141A	Rod, Lift, Deck, Medium
48.	747-05323	Rod, Keeper, Belt, 42s 46t
49.	747-1116	Rod, Deck Release
50.	710-0376	Hex Cap Screw, 5/16-18 x 1.00
51.	720-05010	Cap, .290 x .500
52.	783-07183A	Belt Guide
53.	738-1186A	Spindle Shaft, 6.05 LG.
54.	751B221535	Clamp, Casing
55.	954-04219	Belt, V-Typ, A Sec
56.	756-04129B	Pulley, Idler, 4.25"Dia
57.	711-04847B	Hinge Pin
58.	732-04372	Torsion Spring
59.	783-05946	Bracket, Idler, Pivot, 46
60.	783-06243	Bracket, Cable, Deck Engagement
61.	783-06368A	Bracket, Guard, Belt, 4.25 Pulley
62.	783-07234	Bracket, Idler, 46" Lh
63.	783-06074A	Chute Bracket
64.	756-04356	Deck Pulley, 6.93 DIA
65.	941-0919A	Ball Bearing, .787ID X 1.85 ODX.551

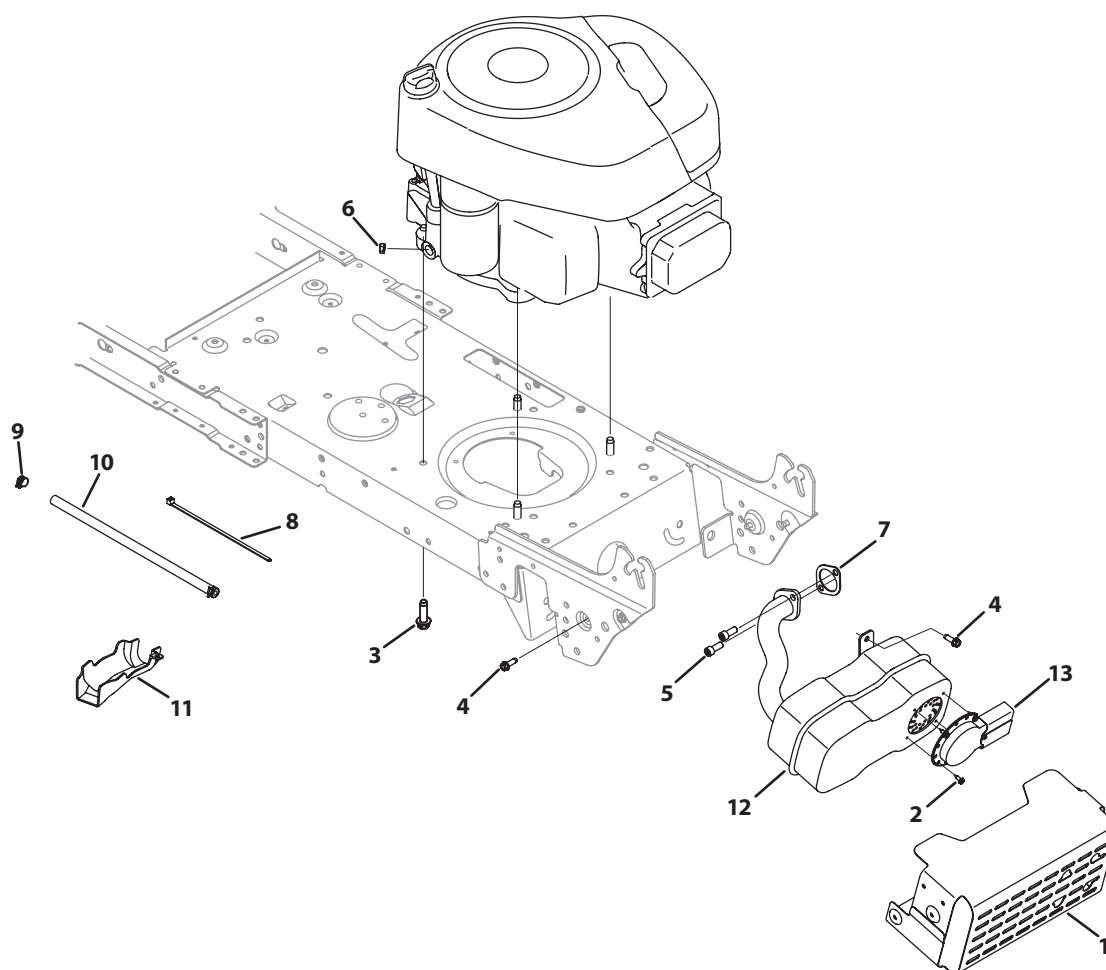

Ref. No.	Part No.	Description
1	683-04549	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683A	Screw, 3/8-16 x 1.0
4	710-0642	Screw, 1/4-20 x .750
5	710-1314A	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket, 10 HP Briggs
8	725-0157	Cable Tie
9	726-0205	Clamp Hose, .490 diameter
10	751-10349-28	Fuel Hose, Low Permeation
11	731-05628	Oil Drain Sleeve
12	751-10448D	Muffler, Single Inlet
13	751-11053A	Muffler Deflector Long

NOTE, Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

Wiring Harness Schematic - 725-04567G

