 
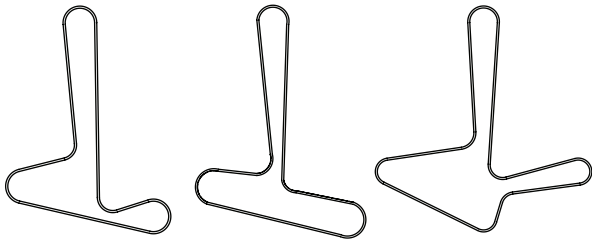 
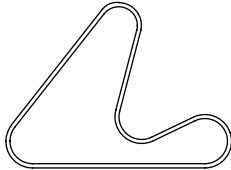 
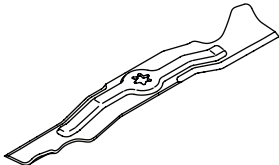 
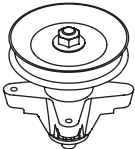 
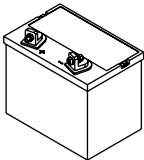 
 
 
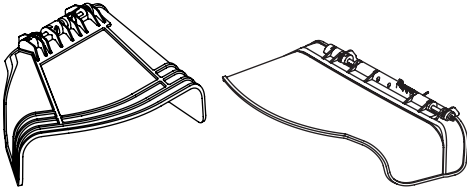 
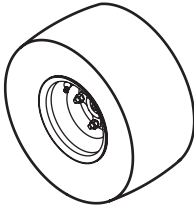 
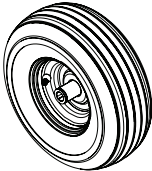 


Component	Part Number and Description
	954-04033A Deck Belt, RZT L42 954-04325 Deck Belt, RZT L46 954-05008 Deck Belt, RZT L50 954-04329 Deck Belt, RZT L54
	954-04317 Drive Belt
	942-04312 Deck Blade, RZT L42 942-04244A Deck Blade, RZT L46 942-04053C Deck Blade, RZT L50 942-04053C-X Extreme Blade, RZT L50 942-0677B Deck Blade, RZT L54 942-0677-X Extreme Blade, RZT L54
	918-04822A Deck Spindle, RZT L42 918-05078 Deck Blade, RZT L46 918-04125B Deck Spindle, RZT L50 918-05137 Deck Blade, RZT L54
	734-04155 Deck Wheel
	925-1707D Battery
	951-12428 Fuel Tank Cap

Component	Part Number and Description
	946-4830A Throttle/Choke Control Cable
	925-1745A Ignition Key
	631-04288 Discharge Chute Assy., RZT L42/46 631-05058 Discharge Chute Assy., RZT L50/54
	634-04293-0931 Wheel Assembly, RZT L42/46/54 634-04128-0931 Wheel Assembly, RZT L50
	634-04237B Caster Wheel Assy., RZT L42 634-04711 Caster Wheel Assy., RZT L46/50/54

The following attachments and accessories are compatible with your Troy-Bilt RZT L tractor. See your Troy-Bilt dealer or the retailer from which you purchased your tractor for information regarding price and availability.

Part Number	Part
19A30006OEM	42" Mulch Kit
19A30005OEM	46" Mulch Kit
190-193-000	50" Mulch Kit
190-841-190	54" Mulch Kit
19B70020OEM	42" Bagger w/ Weight Kit
19B70020100	46" Bagger w/ Weight Kit
19B70004OEM	50" Bagger w/ Weight Kit
19A70034OEM	54" Bagger w/ Weight Kit
19A70030100	Front Weight Kit
490-290-0013	Tractor Cover
490-850-0005	Blade Removal Tool
490-850-0008	Oil Siphon
490-900-0045	Oil Filter Wrench
SPW-136	Spark Plug Wrench
490-325-L021	1 Gallon Tire & Tube Sealant by Tire Aid™
490-325-L019	24 oz. Tire & Tube Sealant by Tire Aid™
490-850-L013	Deluxe Tire/Tube Foot Pump by Tire Aid™
490-850-L014	Tire Aid™ Deluxe Tire Plug Kit by Tire Aid™
490-328-L014	15" Tractor Tube with Sealant by Tire Aid™
490-328-L016	18" & 20" Tractor Tube with Sealant by Tire Aid™
22216	32 oz. STA-BIL®

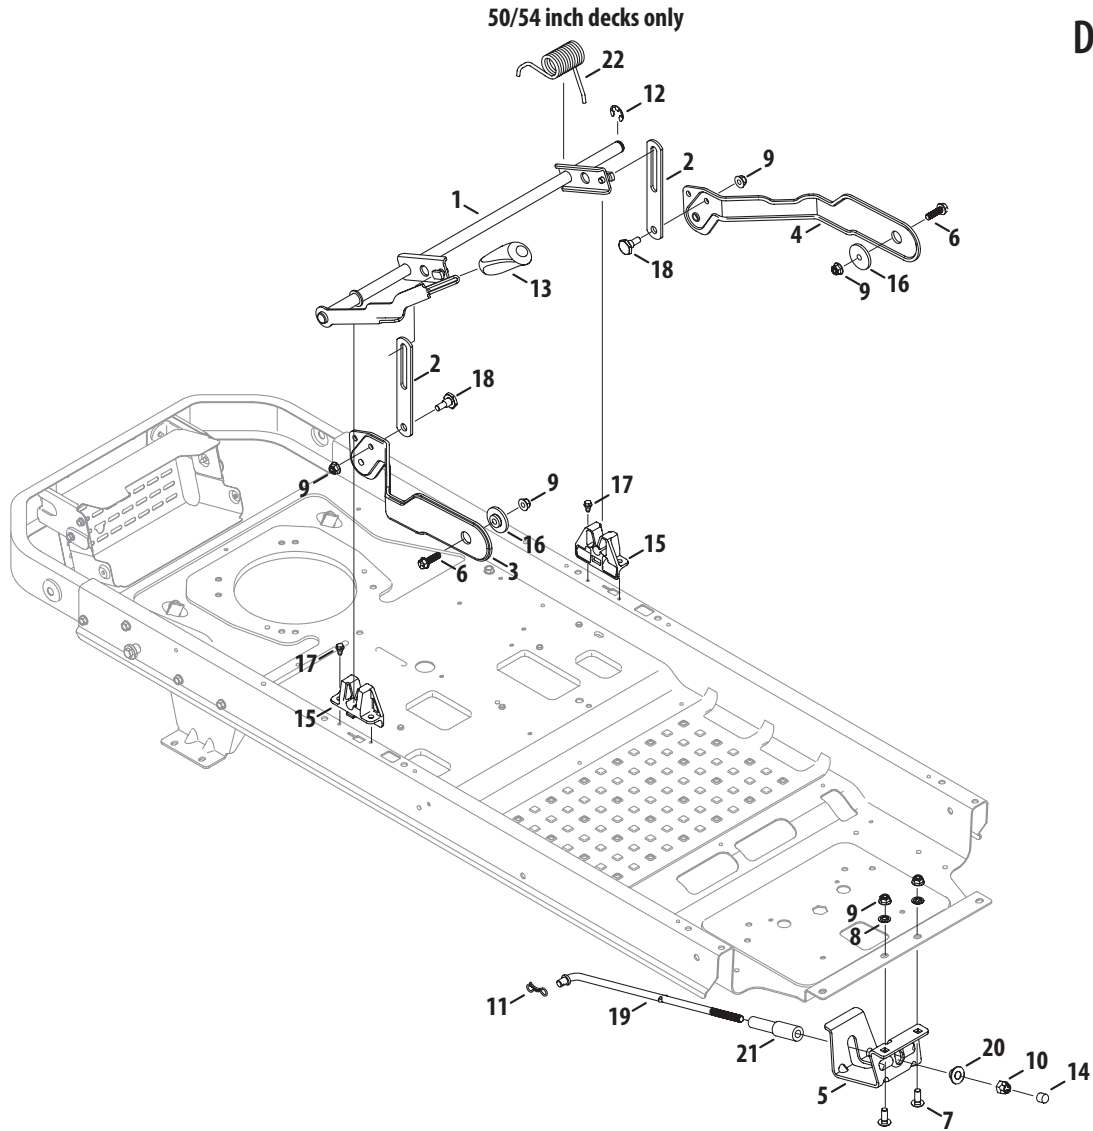


Ref	Part Number	Description
1	603-04983A	Deck Lift Shift Assembly
2	703-08591A	Lift Link Plate
3	703-08592	Deck Lift Plate, RH
4	703-08593	Deck Lift Plate, LH
5	703-08644	Rod Support Mounting Bracket
6	710-1315	Hex Washer Screw, $\frac{3}{8}$ -16 x 1.250
7	710-3168	Carriage Bolt, $\frac{3}{8}$ -16 x 1.00
8	712-0229	Push Nut, 3/8
9	712-04065	Flange Lock Nut, $\frac{3}{8}$ -16
10	712-04243	Flange Lock Nut, $\frac{1}{2}$ -13
11	714-04043	Bow-Tie Cotter Pin

Ref	Part Number	Description
12	916-0231	E-Type Ring, .750
13	720-04139B	Grip, .50 ID
14	726-05009	End Cap
15	731-08782	Deck Lift Bracket
16	738-04162C	Shoulder Spacer, .884 x .190
17	738-04278	Shoulder Screw, .500 x $\frac{1}{4}$ -20
18	938-0507B	Shoulder Screw, .500 Dia. x .434
19	747-05552A	Deck Lift Rod
20	748-04069	Deck Lift pivot Cup
21	750-05658	Nylon Sleeve, .55 ID x 4.50 LG
22	732-04947A†	Torsion Spring, 1.323 ID x 2.83 LG


† If Equipped

 Drive System

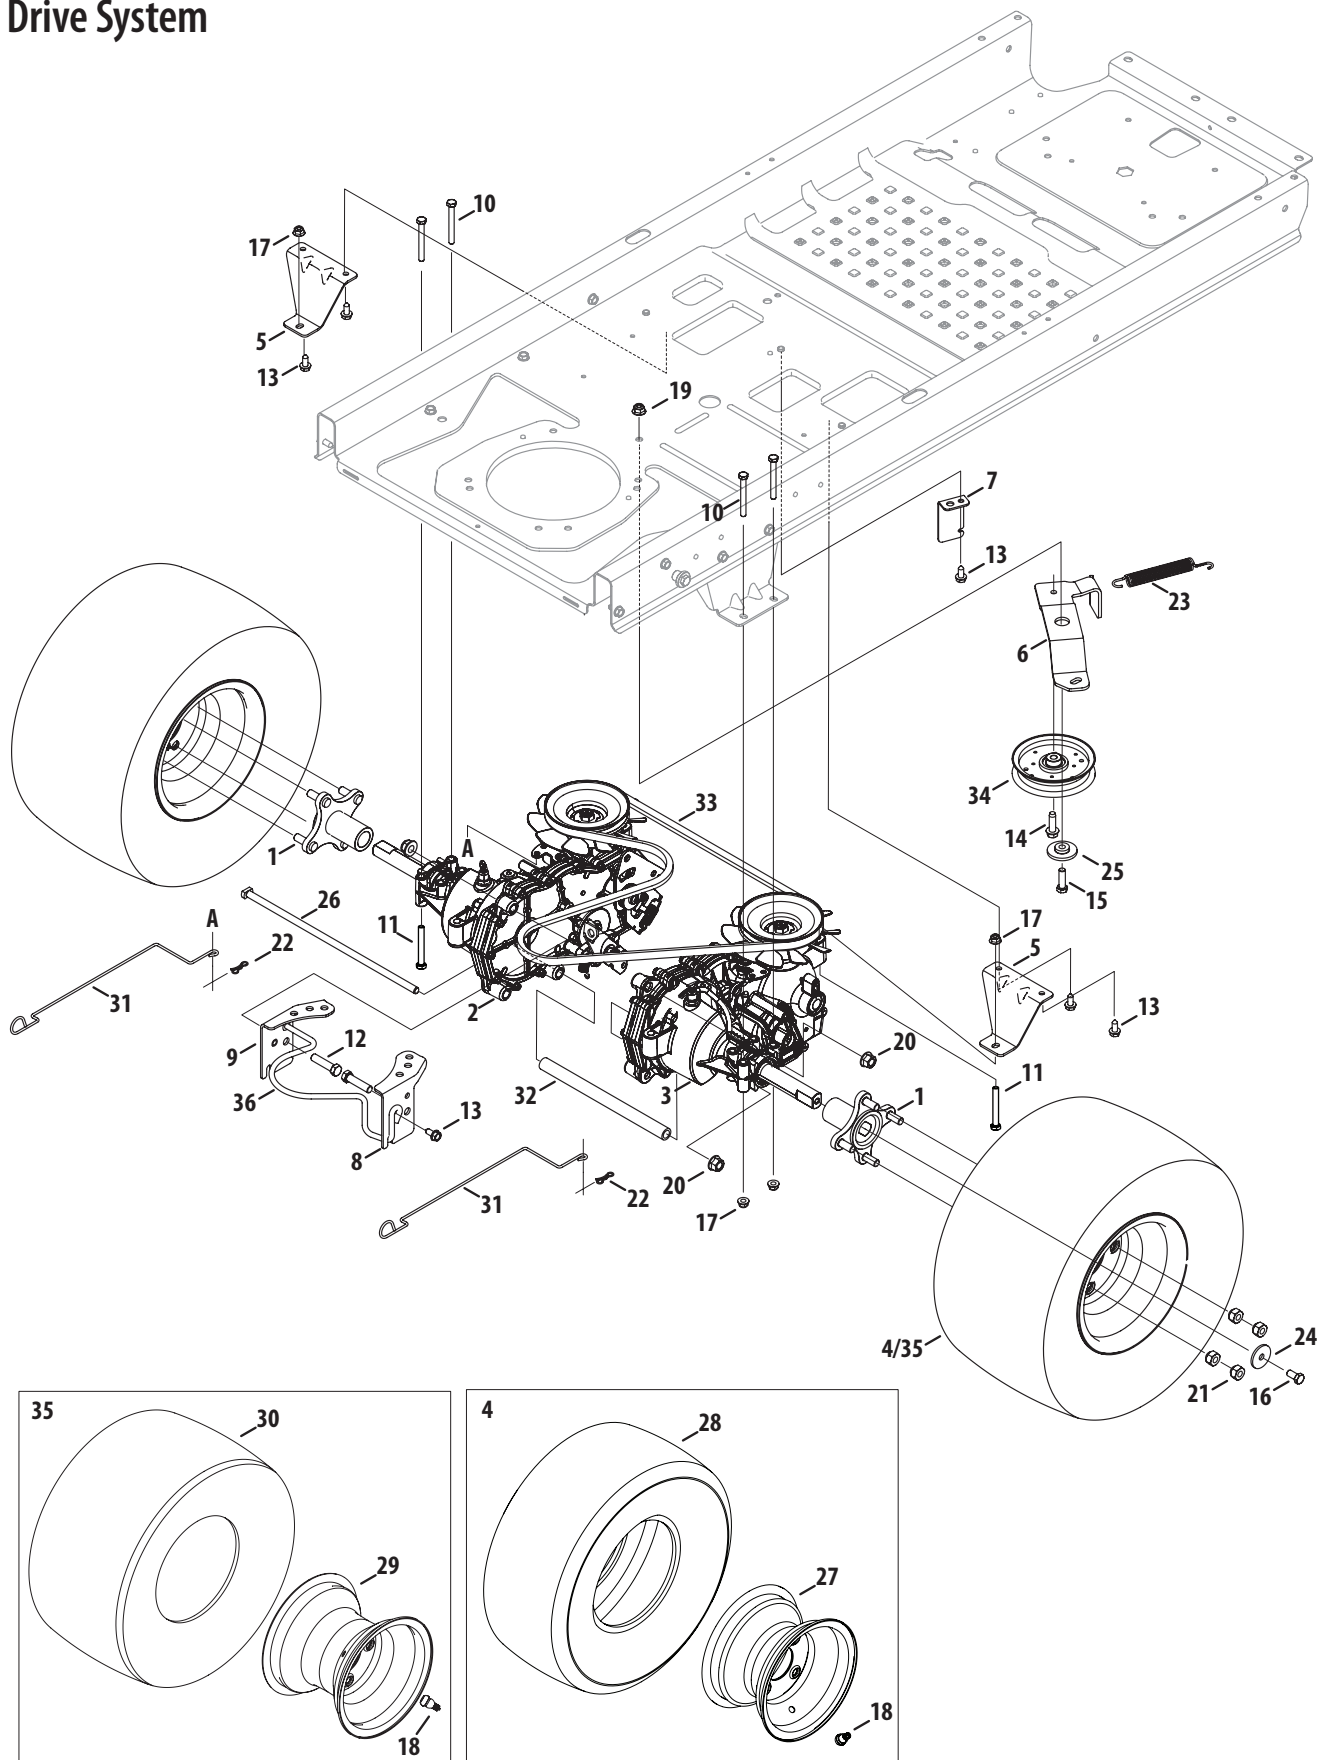


Ref.	Part Number	Description
1	918-04317	Wheel Hub Assembly
2	918-05128	Transmission Assembly, LH
3	918-05129	Transmission Assembly, RH
4	634-04293-0911	Complete Wheel, 18 x 8.5-8 (42" & 46")
5	703-08570	Transmission Mounting Bracket
6	703-08605	Idler Bracket
7	703-08613	Spring Mounting Bracket
8	703-08614A	Transmission Bracket
9	703-08615A	Transmission Bracket
10	710-0176	Hex Screw, $\frac{5}{16}$ -18 x 2.75
11	710-0395	Hex Screw, $\frac{5}{16}$ -18 x 2.25
12	710-04092	Hex Screw, $\frac{7}{16}$ -20 x 1.75
13	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
14	710-1315	Hex Washer Screw, $\frac{3}{8}$ -16 x 1.250
15	710-0514	Hex Screw, $\frac{3}{8}$ -16 x 1.00
16	710-3119	Hex Screw, $\frac{3}{8}$ -16 x .75
17	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
18	934-0255	Valve Tubeless
19	712-04065	Flange Lock Nut, $\frac{3}{8}$ -16
20	712-0459	Flange Lock Nut, $\frac{7}{16}$ -20
21	712-3050	Lug Nut, $\frac{7}{16}$ -14
22	714-04040	Bow-Tie Cotter Pin
23	732-04229	Extension Spring, .75 Dia. x 6.02
24	936-0227	Flat Washer, .390 x 1.50 x .134
25	738-04162C	Shoulder Spacer, .884 x .190
26	738-04192B	Rod, .405 Dia. x 14.0 LG
27	603-04173-0662	Rim Only, (42" & 26")
28	734-04246-0901	Tire Only, 18 x 8.5-8 (42" & 46")
29	603-04175-0662	Rim Only, (50" & 54")
30	734-1729-0901	Tire Only, 18 x 9.5-8 (50" & 54")
31	747-05657	Bypass Rod
32	750-04561	Tube, .51 ID x .75 OD x 10.2
33	954-04317	Belt, A-Type x 67.0
34	756-04129B	Idler Pulley, 4.25 Dia.
35	634-04128-0911	Complete Wheel, 18 x 9.5-8 (50" & 54")
36	747-06037	Engine Keeper Rod (42")
	747-06070	Engine Keeper Rod (46", 50" & 54")

 Frame & Electrical

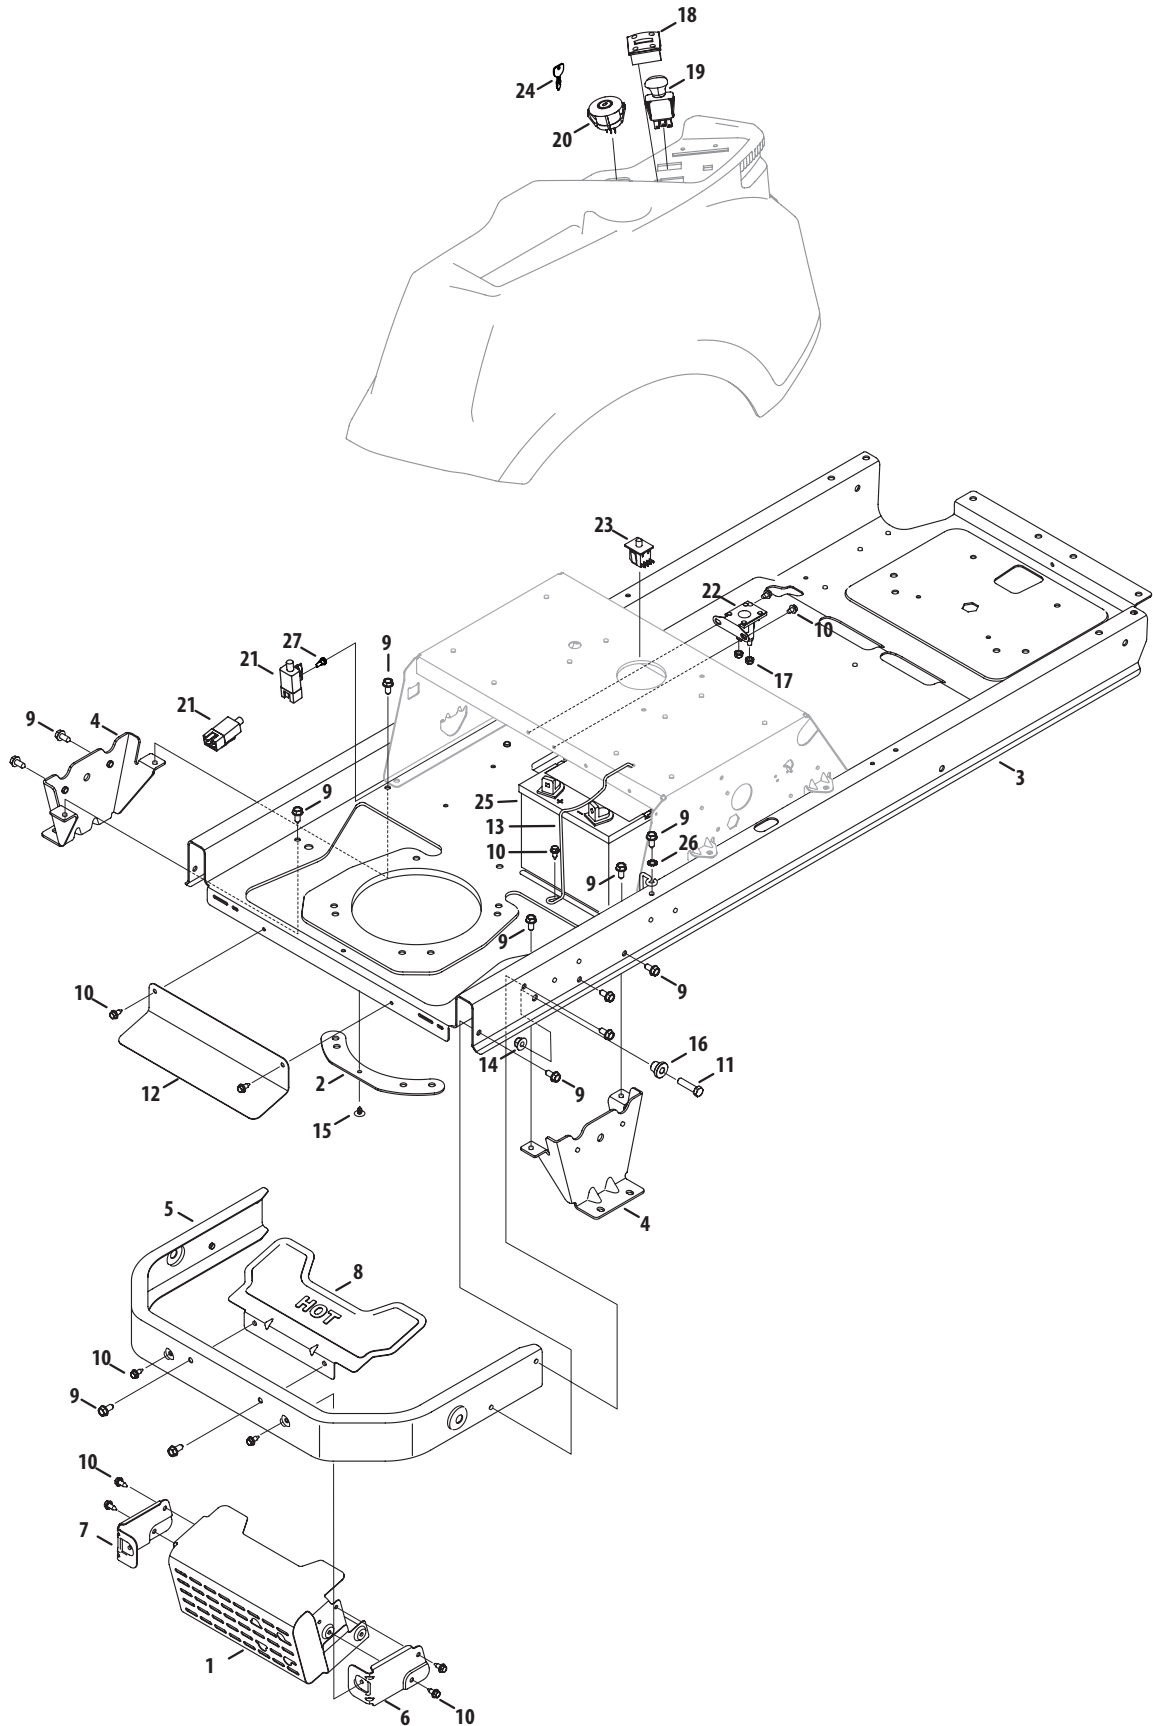


Ref	Part Number	Description
1	683-04549	Muffler Shield Assembly
2	703-05383B	Retainer Plate
3	703-08884B	Frame Assembly
4	703-08555	Transmission Mounting Bracket
5	703-08558	Rear Bumper
6	703-08671	Muffler Mounting Shield Bracket, RH
7	703-08695	Muffler Mounting Shield Bracket, LH
8	703-09083	Muffler Shield
9	710-04484	Hex Washer Screw, 5/16-18 x .750
10	710-1652	Hex Washer Screw, 1/4-20 x .625
11	710-3005	Hex Screw, 3/8-16 x 1.25
12	703-09195	Lower Heat Shield
13	747-05685	Battery Rod
14	712-04065	Flange Lock Nut, 3/8-16
15	726-04072A	Clip, .250 Dia. x .500 LG
16	738-04058	Shoulder Spacer, .38 x 1.0 x .70
17	712-04064	Flange Lock Nut, 1/4-20
18	925-04022B	Hour Meter/Service Minder
19	925-3233	Electric PTO Switch
20	925-04228	Key Switch
21	725-04363	Interlock Switch
22	725-04439	Solenoid
23	925-05013	Seat Switch
24	625-05002	Key, Assembly
25	925-1707D	Battery
26	736-0607	Lock Washer, 5/16
27	738-04237A	Shoulder Screw, #10-32 x .500
—	925-06000	Harness Assembly

 Engine Accessories (B&S)

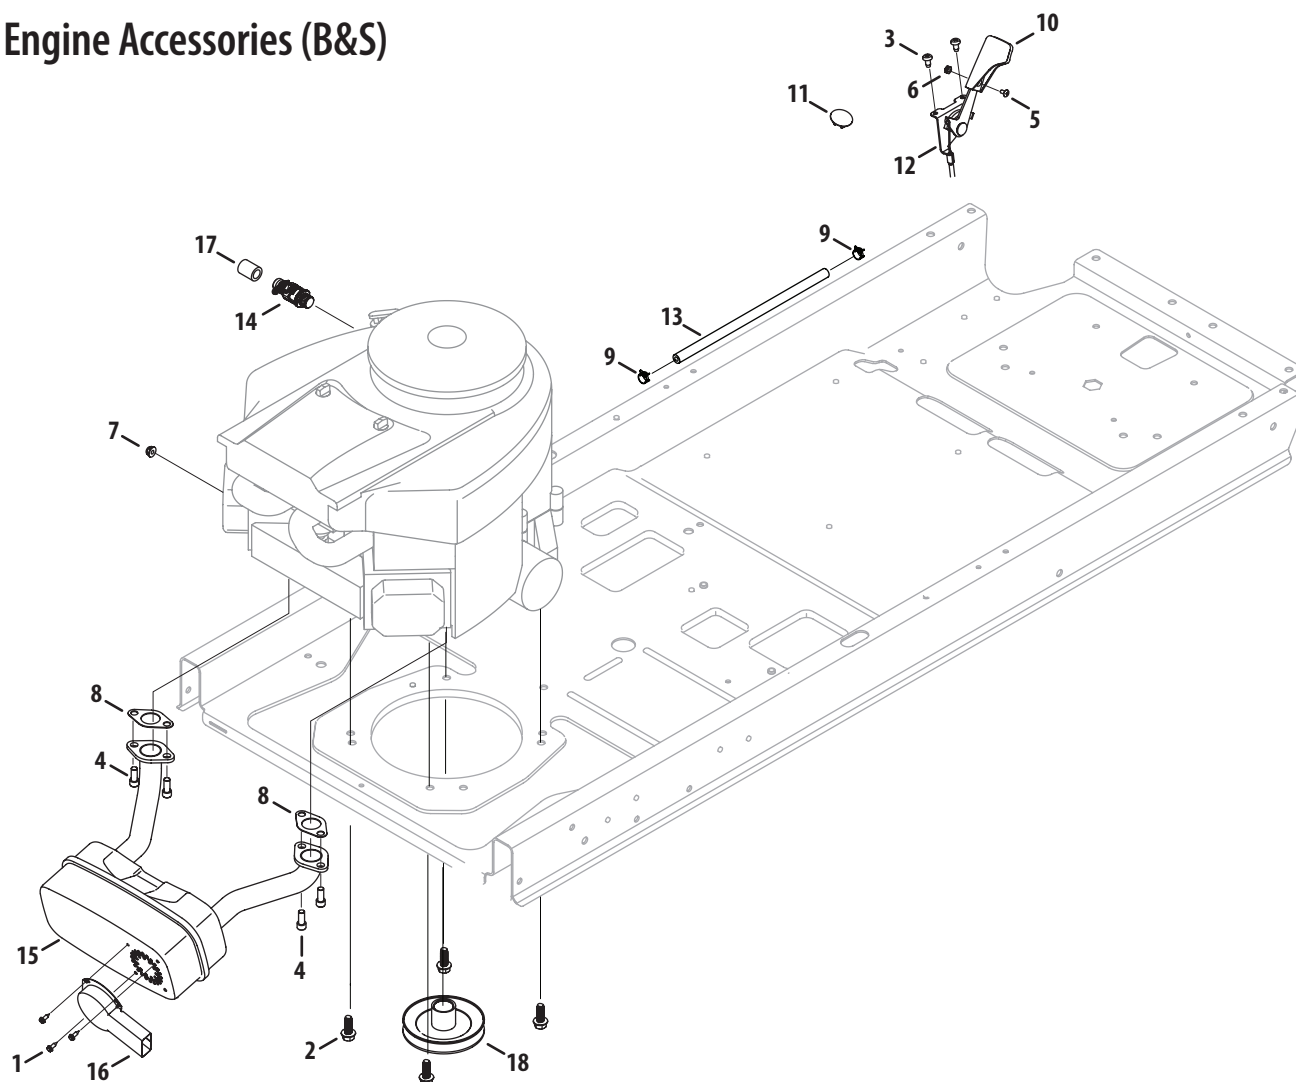

Ref.	Part Number	Description
1	710-0227	Hex Washer Screw, #8-18 x .500
2	710-04683A	Hex Washer Screw, 3/8-16 x 1.00
3	710-05070	Screw, 1/4-20 x .50
4	710-1314A	Socket Head Screw, 5/16-18 x .750
5	710-3217	Screw, #8-32 x .375
6	712-0142	Hex Nut, #8-32
7	712-04064	Flange Lock Nut, 1/4-20
8	721-0460	Exhaust Gasket
9	726-0205	Hose Clamp, .490 Dia.


Ref.	Part Number	Description
10	731-04914	Throttle Control Knob
11	731-1999	Choke Plug
12	946-04556	Throttle/Choke Control Cable
13	751-10349-28	Fuel Hose, 1/4
14	951-10517A	Oil Drain
15	751-10542A	Muffler, Intek Twin
16	751-11053A	Muffler Deflector Long
17	751-3141-14	Oil Drain Hose
18	756-04494	Engine Pulley

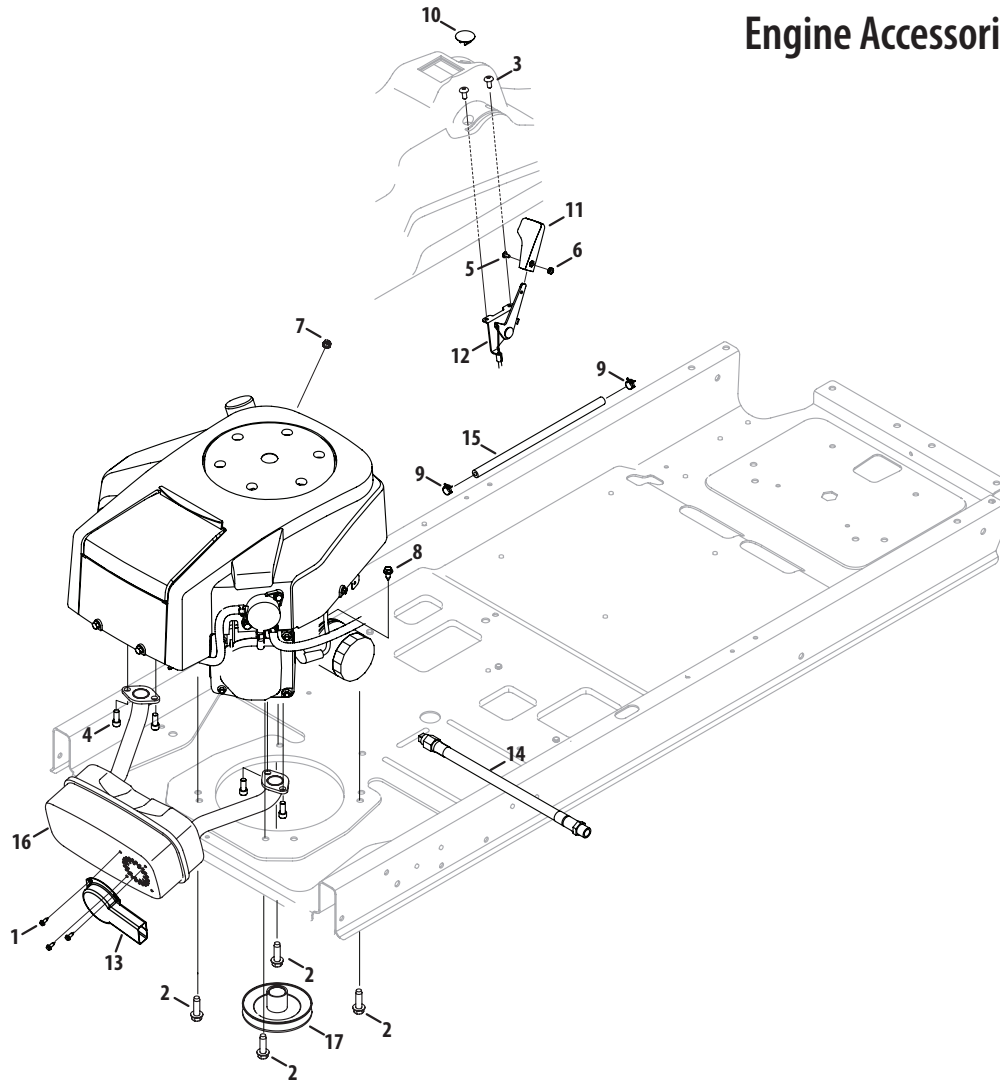 

Ref.	Part Number	Description
1	710-0227	Hex Washer Screw, #8-18 x .500
2	710-04683A	Hex Washer Screw, 3/8-16 x 1.00
3	710-05070	Screw, 1/4-20 x .50
4	710-1314A	Socket Head Screw, 5/16-18 x .750
5	710-3217	Screw, #8-32 x .375
6	712-0142	Hex Nut, #8-32
7	712-04064	Flange Lock Nut, 1/4-20
8	710-1652	Hex Washer Screw, 1/4-20 x .625
9	726-0205	Hose Clamp, .490 Dia.


Ref.	Part Number	Description
10	731-1999	Choke Plug
11	731-04914	Throttle Control Knob
12	946-04830A	Throttle/Choke Control Cable
13	751-0564B	Muffler Deflector
14	751-10291A	Oil Drain Hose
15	751-10349-28	Fuel Hose, 1/4
16	751-10528A	Twin Muffler
17	756-04494	Engine Pulley

 Operator's Platform

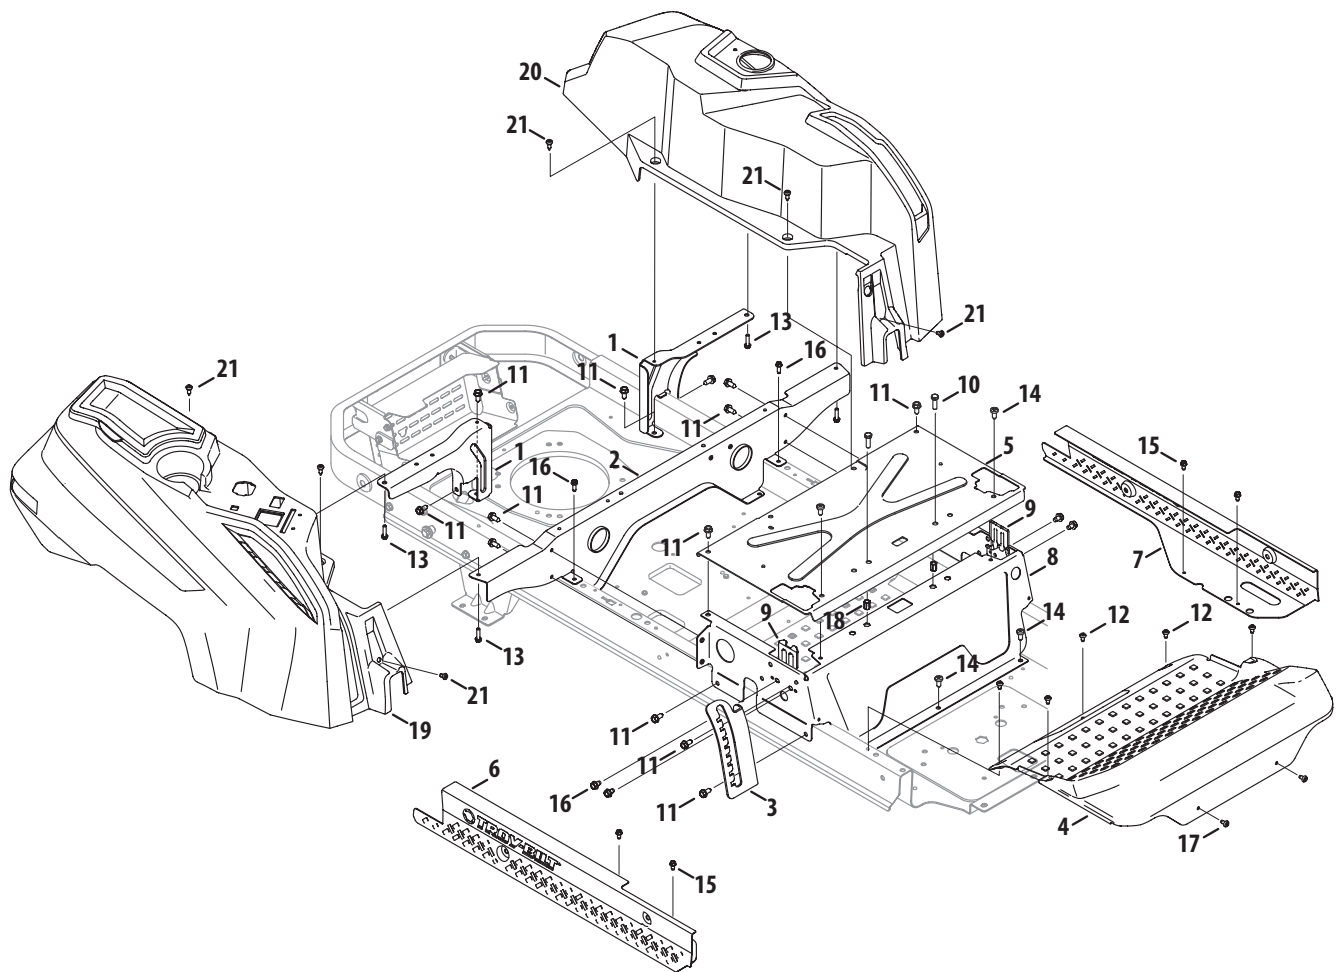


Ref.	Part Number	Description
1	703-08720A	Rear Tank Bracket
2	703-08722	Rear Seatbox Brace
3	703-08762B	Height Index Bracket
4	703-08902	Floor Board
5	703-09045	Seatbox Plate
6	703-09119	Frame Support, RH
7	703-09139	Frame Support, LH
8	703-09175	Seat Frame
9	703-09211	Lapbar Brace Bracket
10	710-0376	Hex Cap Screw, 5/16-18 x 1.00
11	710-04484	Hex Washer Screw, 5/16-18 x .750

Ref.	Part Number	Description
12	710-05070	Screw, 1/4-20 x .500
13	710-05109	Hex Washer Screw, 5/16-14 x 1.00
14	710-05424	Self Tapping Screw, 5/16-18 x .750
15	710-0599	Hex Washer Screw, 1/4-20 x .500
16	710-0607	Hex Washer Screw, 5/16-18 x .50
17	710-06096	Self Tapping Screw, 5/16-18 x .750
18	728-05012	Nut, 5/16-18
19	931-09040	RH Console
20	931-09042	LH Console
21	738-04549A	Shoulder Screw, 1/4-20

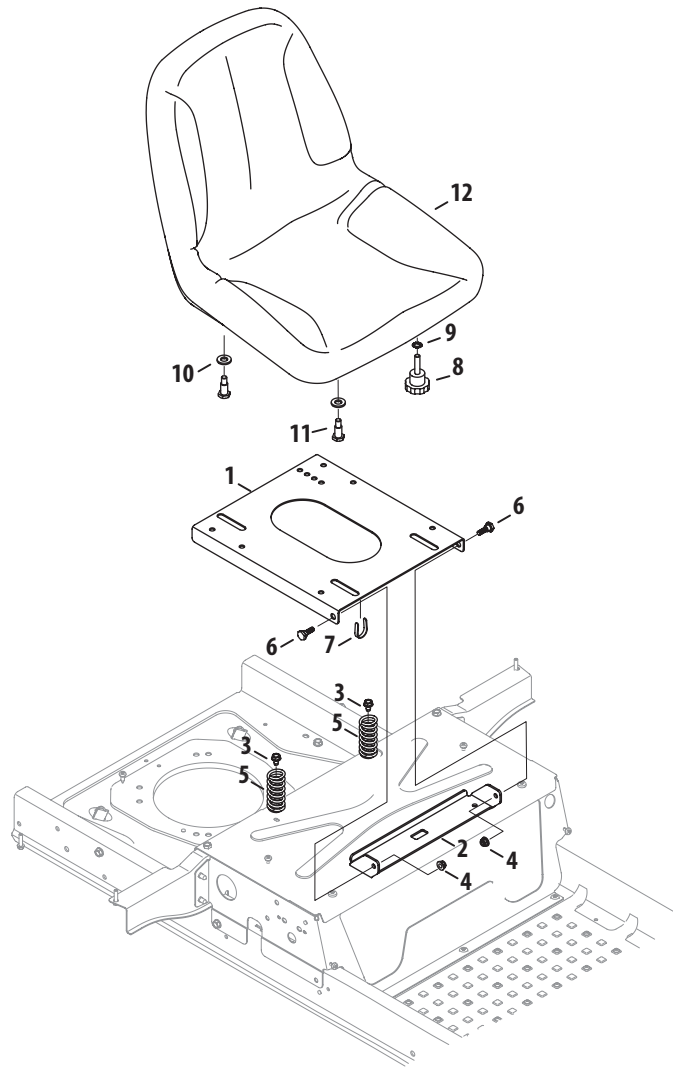 

Ref.	Part Number	Description
1	703-07668E	Seat Mount Bracket
2	703-08746	Seat Bracket
3	710-0607	Hex Washer Screw, 5/16-18 x .50
4	712-04063	Flange Lock Nut, 5/16-18
5	732-04035	Spring, Compression, 1.28 OD x 3.125 Lg
6	938-0140	Shoulder Screw, .435 x .178, 5/16 x .56
7	783-06448	Clip
8	731-05131	Knob Assembly
9	736-0148	External Tooth Lock Washer, 3/8
10	936-0326	Flat Washer, .510 x 1.00 x .125
11	938-0145	Shoulder Screw, 3/8-16
12	757-05004	Seat

 
Front Axle 42"

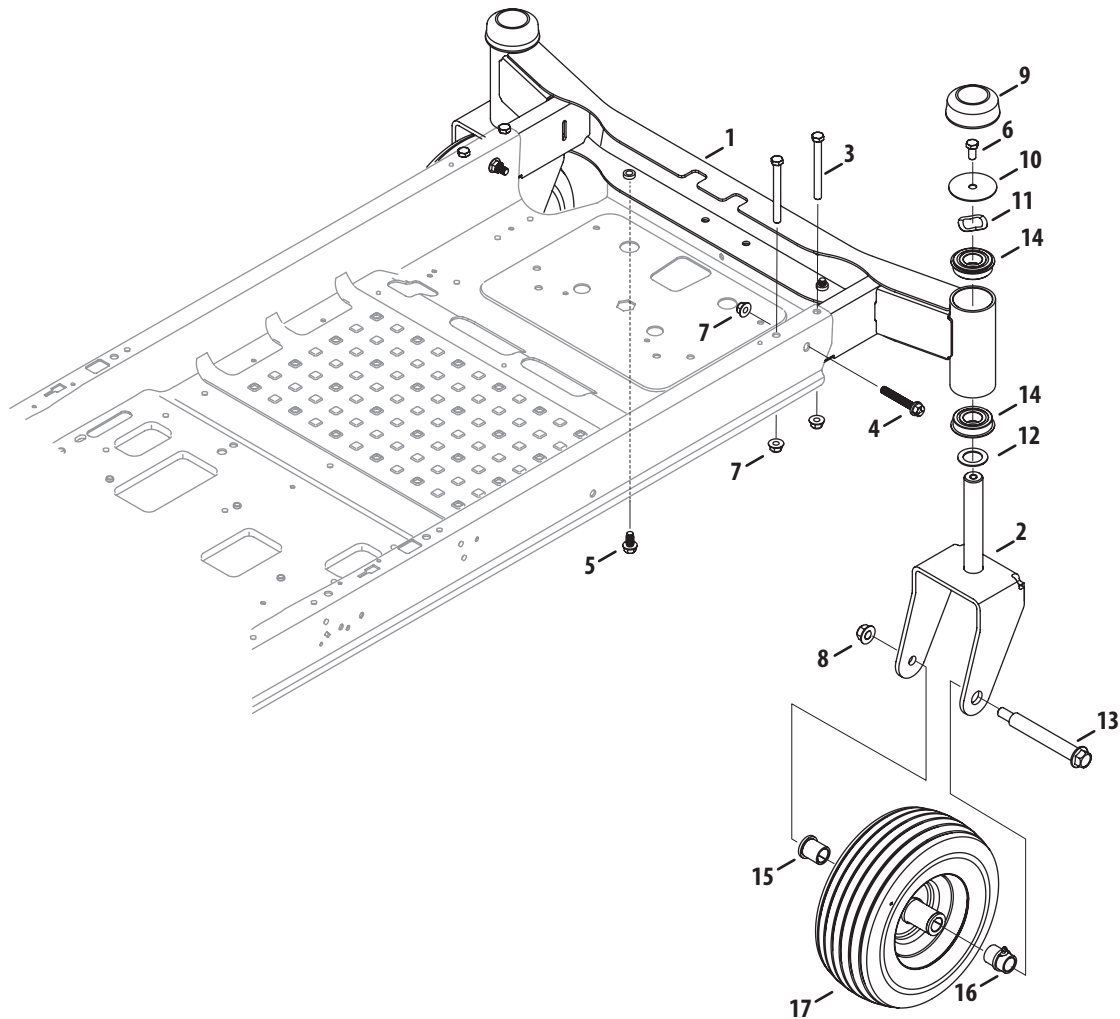

Ref.	Part Number	Description
1	603-05053	Front Axle
2	603-05057A	Caster Wheel Bracket
3	710-04576	Hex Cap Screw, 3/8-16 x 3.75
4	710-06045	Hex Flange Screw, 3/8-16 x 2.25
5	710-0623	Screw TT, 3/8-16 x .750
6	710-3119	Hex Cap Screw, 3/8-16 x .750
7	712-04065	Flange Lock Nut, 3/8-16
8	712-04150	Flange Lock Nut, 1/2-13
9	731-09347	Cap

Ref.	Part Number	Description
10	736-05022	Flat Washer, .406 x 2.50 x .060
11	736-05033	Wave Washer, 1.25 x 1.00 x .300
12	736-0745	Flat Washer, 1.010 x 1.56 x .060
13	738-04182B	Shoulder Screw, 1/2-13
14	941-05022	Ball Bearing
15	741-0516B	Flange Bearing, .76 x 1.0 x 1.2
16	741-0990B	Flange Bearing, .76 ID w/Lube Ftg.
17	634-04237B	Wheel Assembly, 11.0 x 4.0 x 5.0

 
Front Axle 46/50/54"

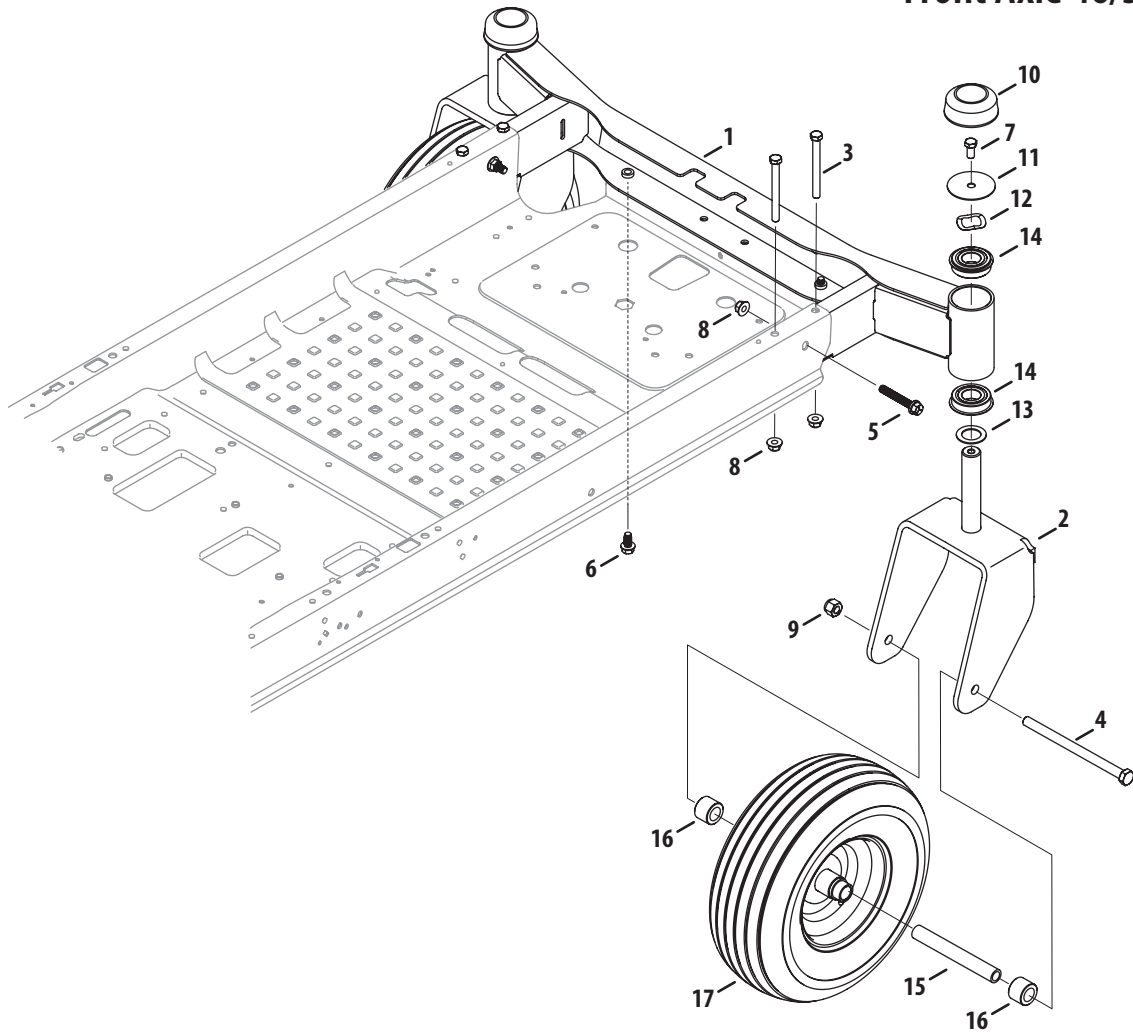


Ref.	Part Number	Description
1	603-05001	Front Axle
2	603-05058A	Caster Wheel Bracket
3	710-04576	Hex Cap Screw, 3/8-16 x 3.75
4	710-04652	Hex cap Screw, 1/2-20 x 7.25
5	710-06045	Hex Flange Screw, 3/8-16 x 2.25
6	710-0623	Screw TT, 3/8-16 x .750
7	710-3119	Hex Cap Screw, 3/8-16 x .750
8	712-04065	Flange Lock Nut, 3/8-16
9	912-3058	Hex Lock Nut, 1/2-20

Ref.	Part Number	Description
10	731-09347	Cap
11	736-05022	Flat Washer, .406 x 2.50 x .060
12	736-05033	Wave Washer, 1.25 x 1.00 x .300
13	736-0745	Flat Washer, 1.010 x 1.56 x .060
14	941-05022	Ball Bearing
15	750-04775A	Spacer, .51 x .75 x 5.825
16	750-04792	Hub, .76 x 1.23 x .92
17	634-04711-0931	Wheel Assembly, 13 x 5 x 6

 
Fuel Tank

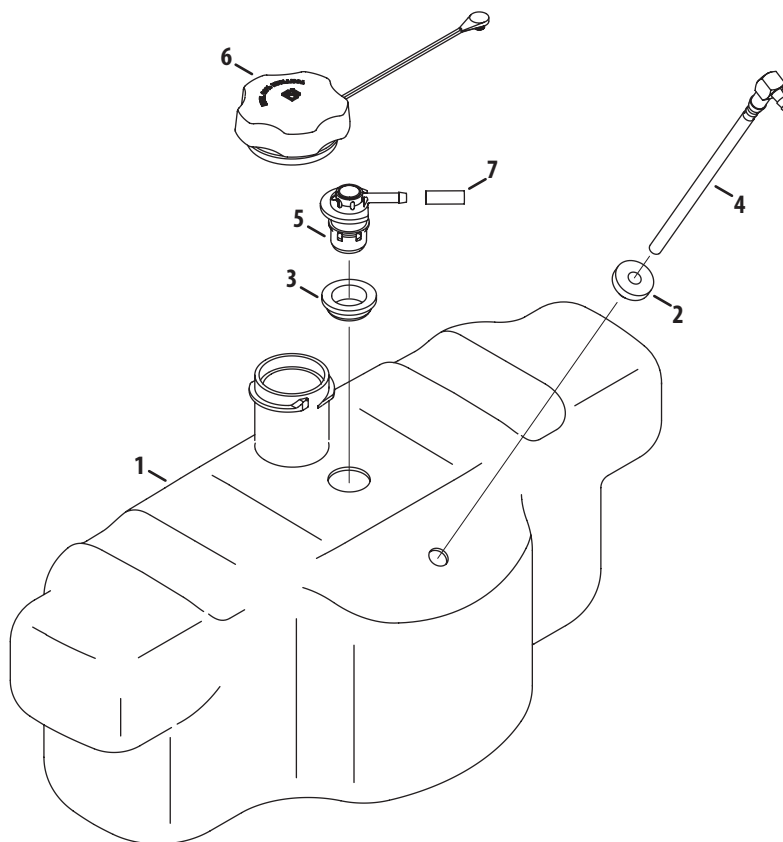

Ref.	Part Number	Description
1	951-04395	Fuel Tank
2	935-0149	Fuel Tank Bushing
3	735-04081	Rubber Grommet
4	751-10442	Fuel Pickup Fitting
5	751-12118	Rollover Valve
6	951-12428	Fuel Cap
7	751-12089-51	Vent Hose

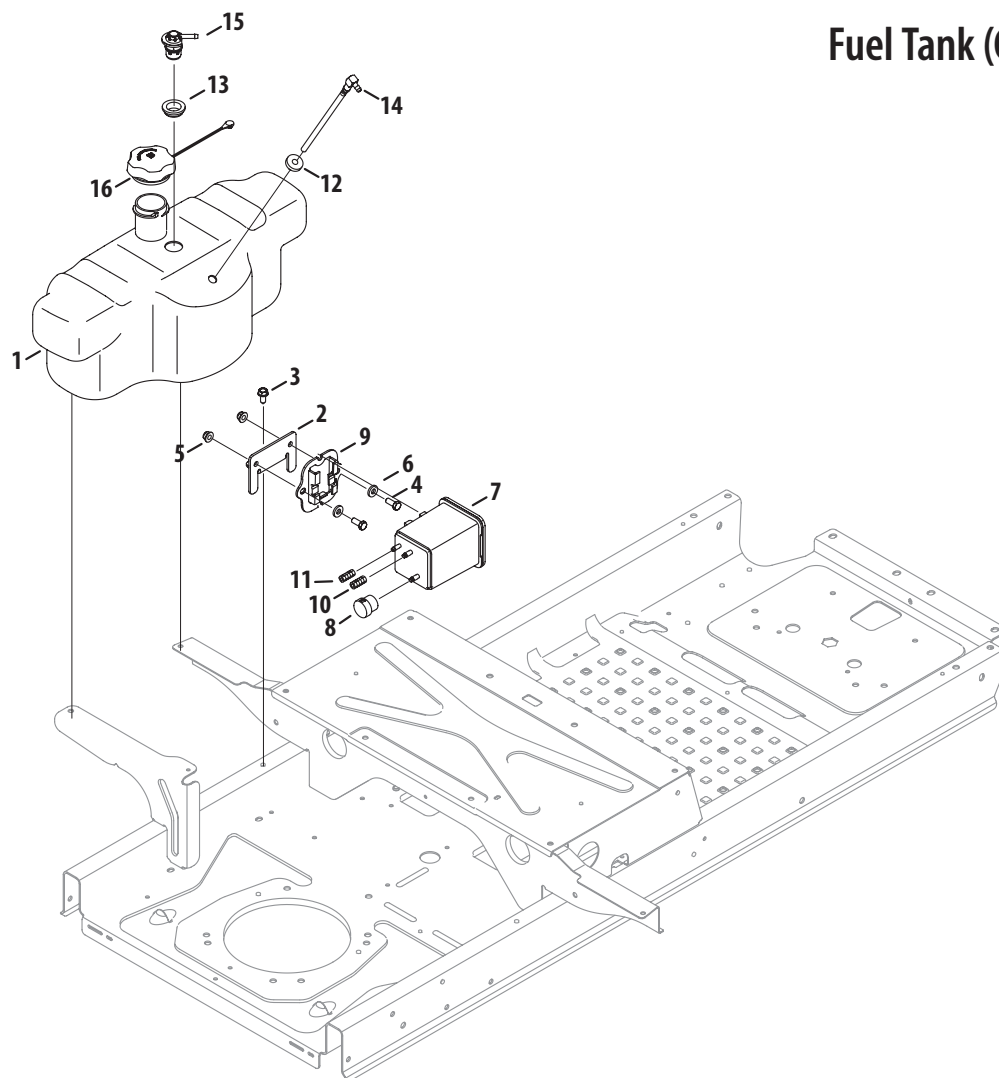 


Ref.	Part Number	Description
1	951-04395	Fuel Tank
2	703-08769	Carbon Canister Bracket
3	710-04484	Hex Washer Screw, 5/16-18 x .750
4	710-3008	Hex Screw, 5/16-18 x .75
5	712-04063	Flange Lock Nut, 5/16-18
6	936-3008	Flat Washer, .344 x .750 x .120
7	951-10589	Carbon Canister
8	951-10590	Cannister Filter Vent
9	951-10610	Cannister Adapter Bracket
10	751-10750	Low Perm Fuel Hose 7/32 Yellow
11	751-10749	Vent Hose, Carb
12	935-0149	Fuel Tank Bushing
13	735-04081	Rubber Grommet
14	751-10442	Fuel Pickup Fitting
15	751-12118	Rollover Valve
16	951-12429	Fuel Cap

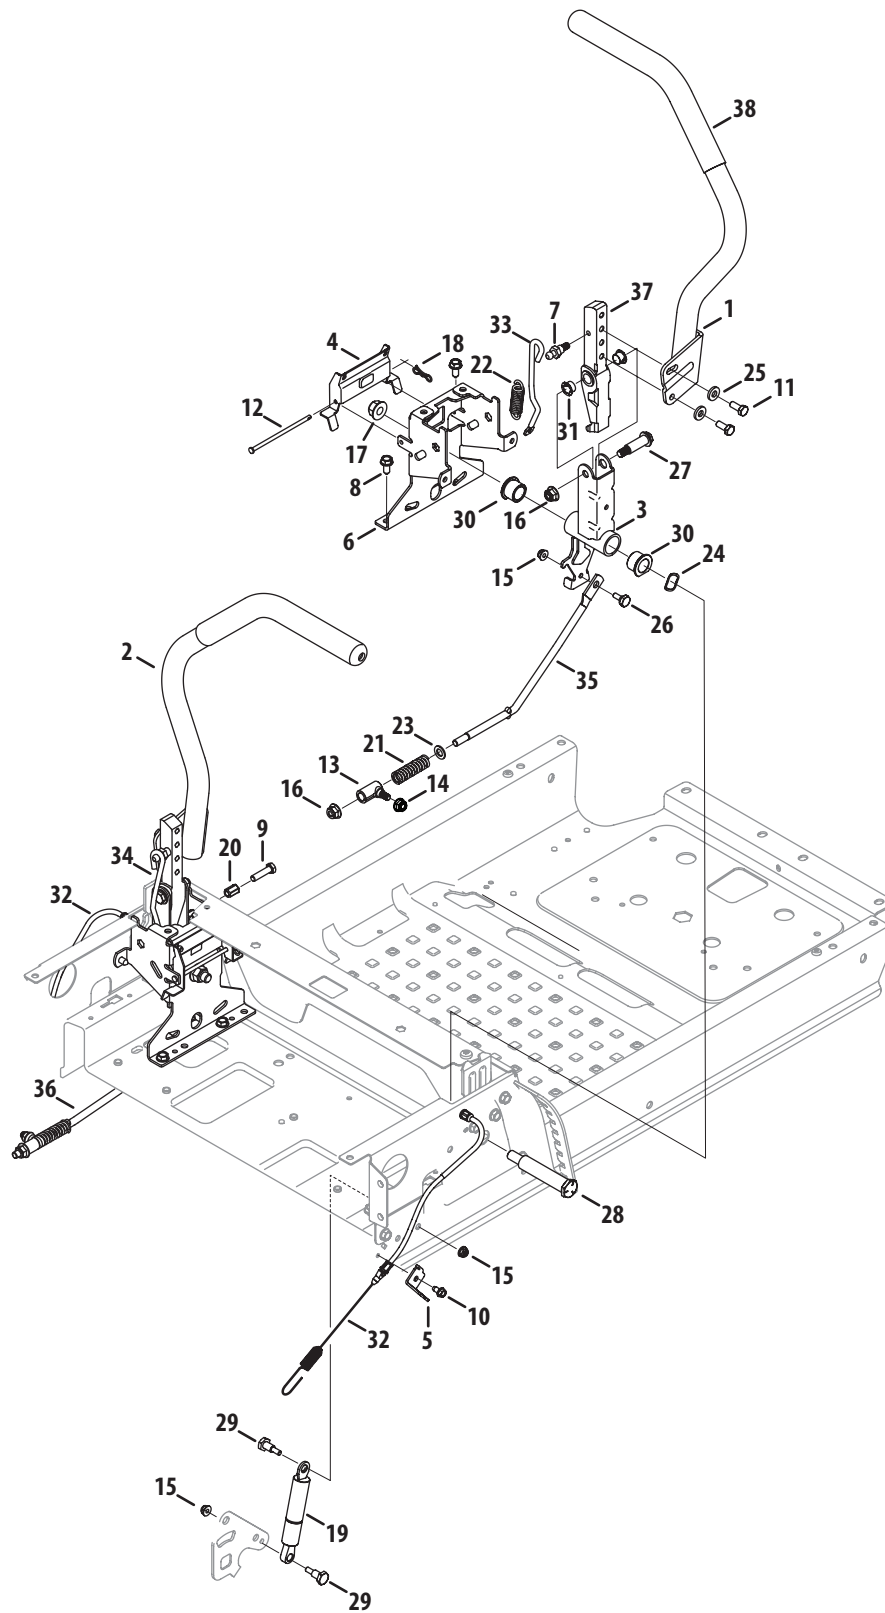 

Ref.	Part Number	Description	Ref.	Part Number	Description
1	603-05016A	RH Lapbar Lever Assembly	20	728-05012	Nut, 5/16-18
2	603-05019A	LH Labpar Lever Assembly	21	732-05075	Compression Spring, .45 x 3.215
3	603-05033A	Lapbar Pivot bracket	22	732-1162	Extension Spring, .56 x 2.31 x .105
4	703-09069	Brake Lever Actuator	23	936-0140	Flat Washer, .385 x .62 x .063
5	703-09220	Brake Cable Bracket	24	736-0621	Washer, Wave, .785 x 1.0 x .012
6	703-09325	Lapbar Pivot Support Bracket	25	936-3008	Flat Washer, .344 x .750 x .120
7	710-04471	Screw, Shoulder Ball, 5/16-18 x .48	26	738-04419A	Shoulder Screw, .375 x .148 x 1/4-20
8	710-04484	Hex Washer Screw, 5/16-18 x .750	27	738-05025	Shoulder Screw, .498 Dia. x 1.296
9	710-0528	Hex Cap Screw, 5/16-18 x 1.25	28	738-05033	Shoulder Screw, .75 x 3.25 x 1/2-13
10	710-0599	Hex Washer Screw, 1/4-20 x .500	29	738-05034	Shoulder Screw, .395 Dia. x .56
11	710-1880	Hex Head Screw, 5/16-18 x .75, Patch	30	741-04050	Bearing, .75 x 1.00 x .73
12	711-06068	Pin, .188 x 4.1	31	741-0491	Flange Bearing, .500 x .34
13	711-06094A	Ferrule, 3/8 ID x .420 Shldr	32	946-05008	Park Brake Cable
14	712-04063	Flange Lock Nut, 5/16-18	33	747-06085	Lapbar Detent Rod, RH
15	712-04064	Flange Lock Nut, 1/4-20	34	747-06086	Lapbar Detent Rod, LH
16	712-04065	Flange Lock Nut, 3/8-16	35	747-06149	Hydro Control Rod, RH
17	712-04150	Flange Lock Nut, 1/2-13	36	747-06160	Hydro Control Rod, LH
18	714-04040	Bow-Tie Cotter Pin	37	748-05000	Lower Arm
19	727-04400A	Dampener, .87 OD x 7.06 Lg	38	720-05008	Lapbar Grip

 
42" Deck

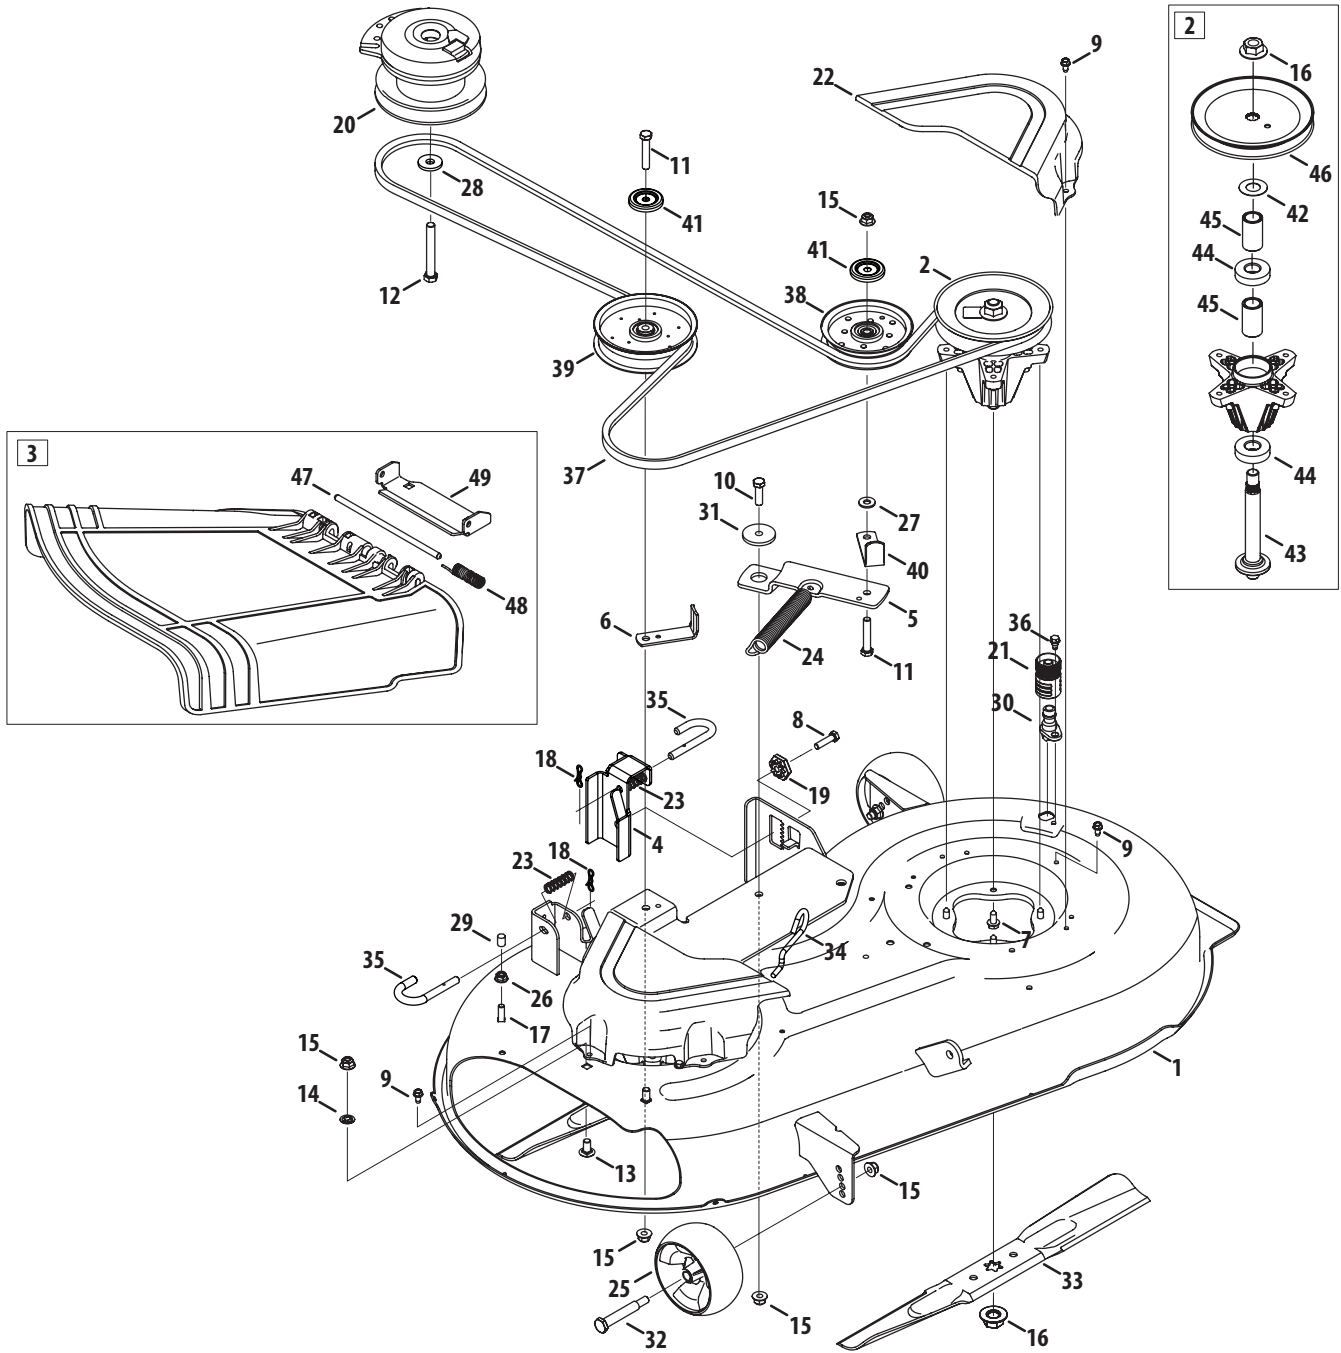

Ref.	Part Number	Description
1	903-04927A	42" Deck Assembly
2	918-04822A	Spindle Assembly
3	631-04288	Discharge Chute Assembly
4	683-05031	Deck Lift Bracket
5	703-08336C	Pivot Idler Bracket
6	703-08705	Bracket, Belt Guard
7	710-1260A	Hex Washer Head Screw, 5/16-18 x .75
8	710-0573	Hex Cap Screw, 5/16-18 x 1.25
9	710-1652	Hex Washer Screw, 1/4-20 x .625
10	710-3005	Hex Cap Screw, 3/8-16 x 1.25
11	710-3144	Hex Cap Screw, 3/8-16 x 2.00
12	710-3157A	Screw, 7/16-20 x 3.25
13	710-3178	Carriage Screw, 3/8-16 x .75
14	712-0229	Push Nut, 3/8
15	712-04065	Flange Lock Nut, 3/8-16
16	712-0417A	Hex Flange Nut, 5/8-18
17	710-0376	Hex Cap Screw, 5/16-18 x 1.00
18	714-04040	Bow-Tie Cotter Pin, 72
19	917-04074	Deck Adjustment Gear
20	917-05121	Electric PTO Clutch
21	921-04041	Water Nozzle Adapter
22	731-08698	Belt Cover
23	732-04652	Compression Spring, .535 x 1.751
24	732-04960	Extension Spring, .94 Dia. x 7.57
25	734-04155	Deck Ball Wheel, 5.0

Ref.	Part Number	Description
26	712-04063	Flange Lock Nut, 5/16-18
27	736-0262	Flat Washer, .385 x .870 x .092
28	736-0322	Flat Washer, .450 x 1.25 x .164
29	720-05010	Cap, .290 x .500
30	731-07487	Deck Wash Nozzle
31	738-04162C	Shoulder Spacer, .884 x .190
32	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
33	942-04312	Blade, 2 in 1, 21.23
34	747-05608	Deck Spring Rod
35	747-06082	Deck Hanger Rod
36	738-04278	Shoulder Screw, .500 x 1/4-20
37	954-04033A	V-Belt
38	756-04129B	Idler Pulley, 4.25 Dia.
39	756-04511A	Idler Pulley, 5.00 Dia.
40	783-06368A	Bracket Belt Guard
41	783-07236	Pulley Cap
42	936-0351	Washer, .760 x 1.50 x .030
43	738-1186A	Spindle Shaft
44	941-0919A	Ball Bearing
45	750-04936	Spacer, .792 x 1.060 x 1.860
46	956-1227	Deck Pulley
47	711-04847B	Hinge Pin
48	732-04372	Torsion Spring
49	783-06074A	Chute Bracket

 
46" Deck

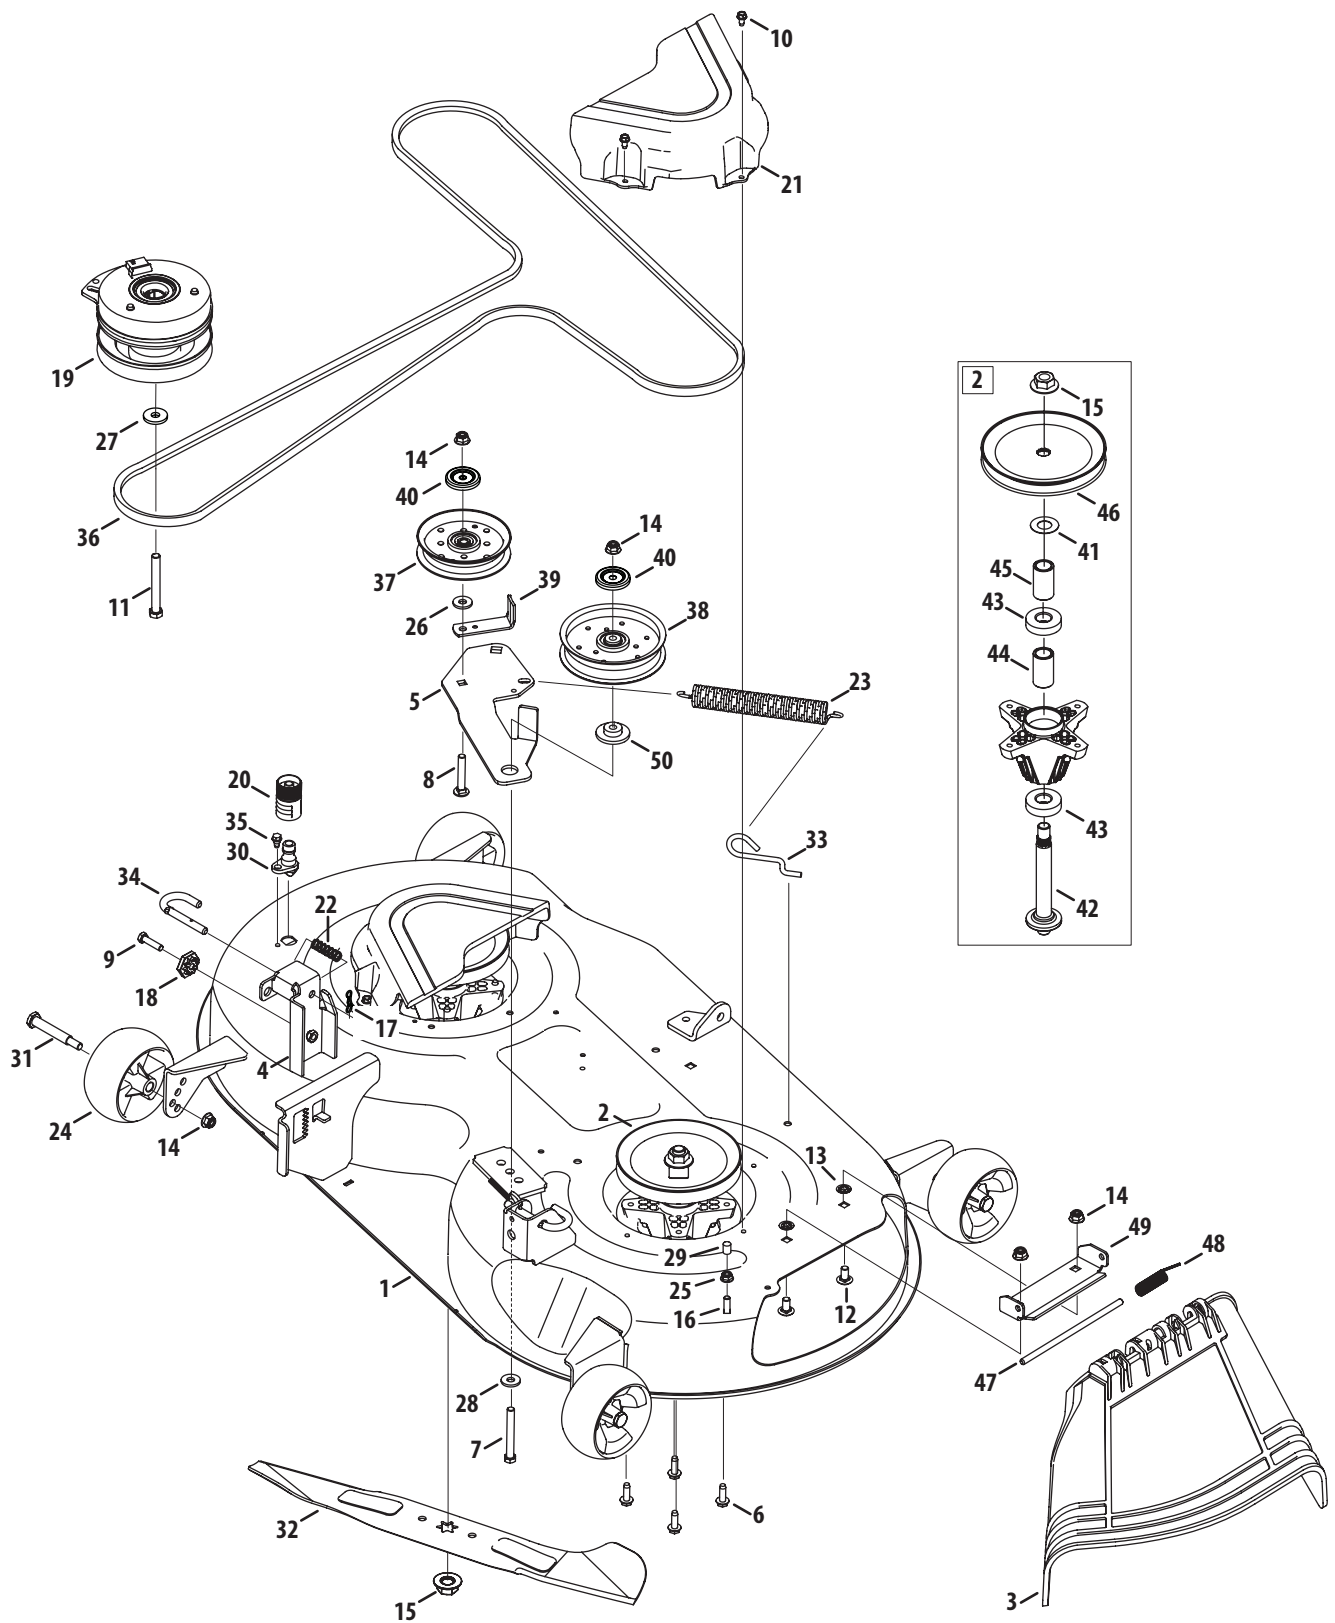

Ref.	Part Number	Description
1	903-04898A	46"Deck Assembly
2	918-05078	Spindle Assembly
3	631-04288	Chute Deflector Assembly
4	683-05031	Deck Lift Bracket
5	703-08612A	Idler Bracket
6	710-04484	Hex Washer Screw, 5/16-18 x .750
7	710-3085	Hex Cap Screw, 3/8-16 x 3.50
8	710-05376	Carriage Screw, 3/8-16 x 1.75
9	710-0573	Hex Cap Screw, 5/16-18 x 1.25
10	710-1652	Hex Washer Screw, 1/4-20 x .625
11	710-3157A	Screw, 7/16-20 x 3.25
12	710-3178	Carriage Screw, 3/8-16 x .75
13	712-0229	Push Nut, 3/8
14	712-04065	Flange Lock Nut, 3/8-16
15	712-0417A	Hex Flange Nut, 5/8-18
16	710-0376	Hex Cap Screw, 5/16-18 x 1.00
17	714-04040	Bow-Tie Cotter Pin, 72
18	917-04074	Deck Adjustment Gear
19	917-05122	Electric PTO Clutch
20	921-04041	Water Nozzle Adapter
21	731-08698	Belt Cover
22	732-04652	Compression Spring, .535 x 1.751
23	732-04927	Extension Spring, 1.25 OD x 1.751
24	734-04155	Deck Ball Wheel, 5.0
25	712-04063	Flange Lock Nut, 5/16-18

Ref.	Part Number	Description
26	736-0262	Flat Washer, .385 x .870 x .092
27	736-0322	Flat Washer, .450 x 1.25 x .164
28	736-3052	Flat Washer, .406 x 1.00 x .105
29	720-05010	Cap, .290 x .500
30	731-07487	Deck Wash Nozzle
31	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
32	942-04244A	Blade, 2 in 1, 23.25
33	747-05608	Deck Spring Rod
34	747-06082	Deck Hanger Rod
35	738-04278	Shoulder Screw, .500 x 1/4-20
36	954-04325	V-Belt
37	756-04129B	Idler Pulley, 4.25 Dia.
38	756-04511	Idler Pulley, 5.00 Dia.
39	783-06368A	Bracket Belt Guard
40	783-07236	Pulley Cap
41	936-0351	Washer, .760 x 1.50 x .030
42	938-1128	Spindle Shaft
43	941-0919A	Ball Bearing
44	750-04936	Spacer, .792 x 1.060 x 1.860
45	750-1343	Spacer, .8 x 1.1 x 2.26
46	756-04356	Deck Pulley
47	711-04847B	Hinge Pin
48	732-04372	Torsion Spring
49	783-06074A	Chute Bracket
50	738-05013A	Shoulder Spacer

 
50" Deck

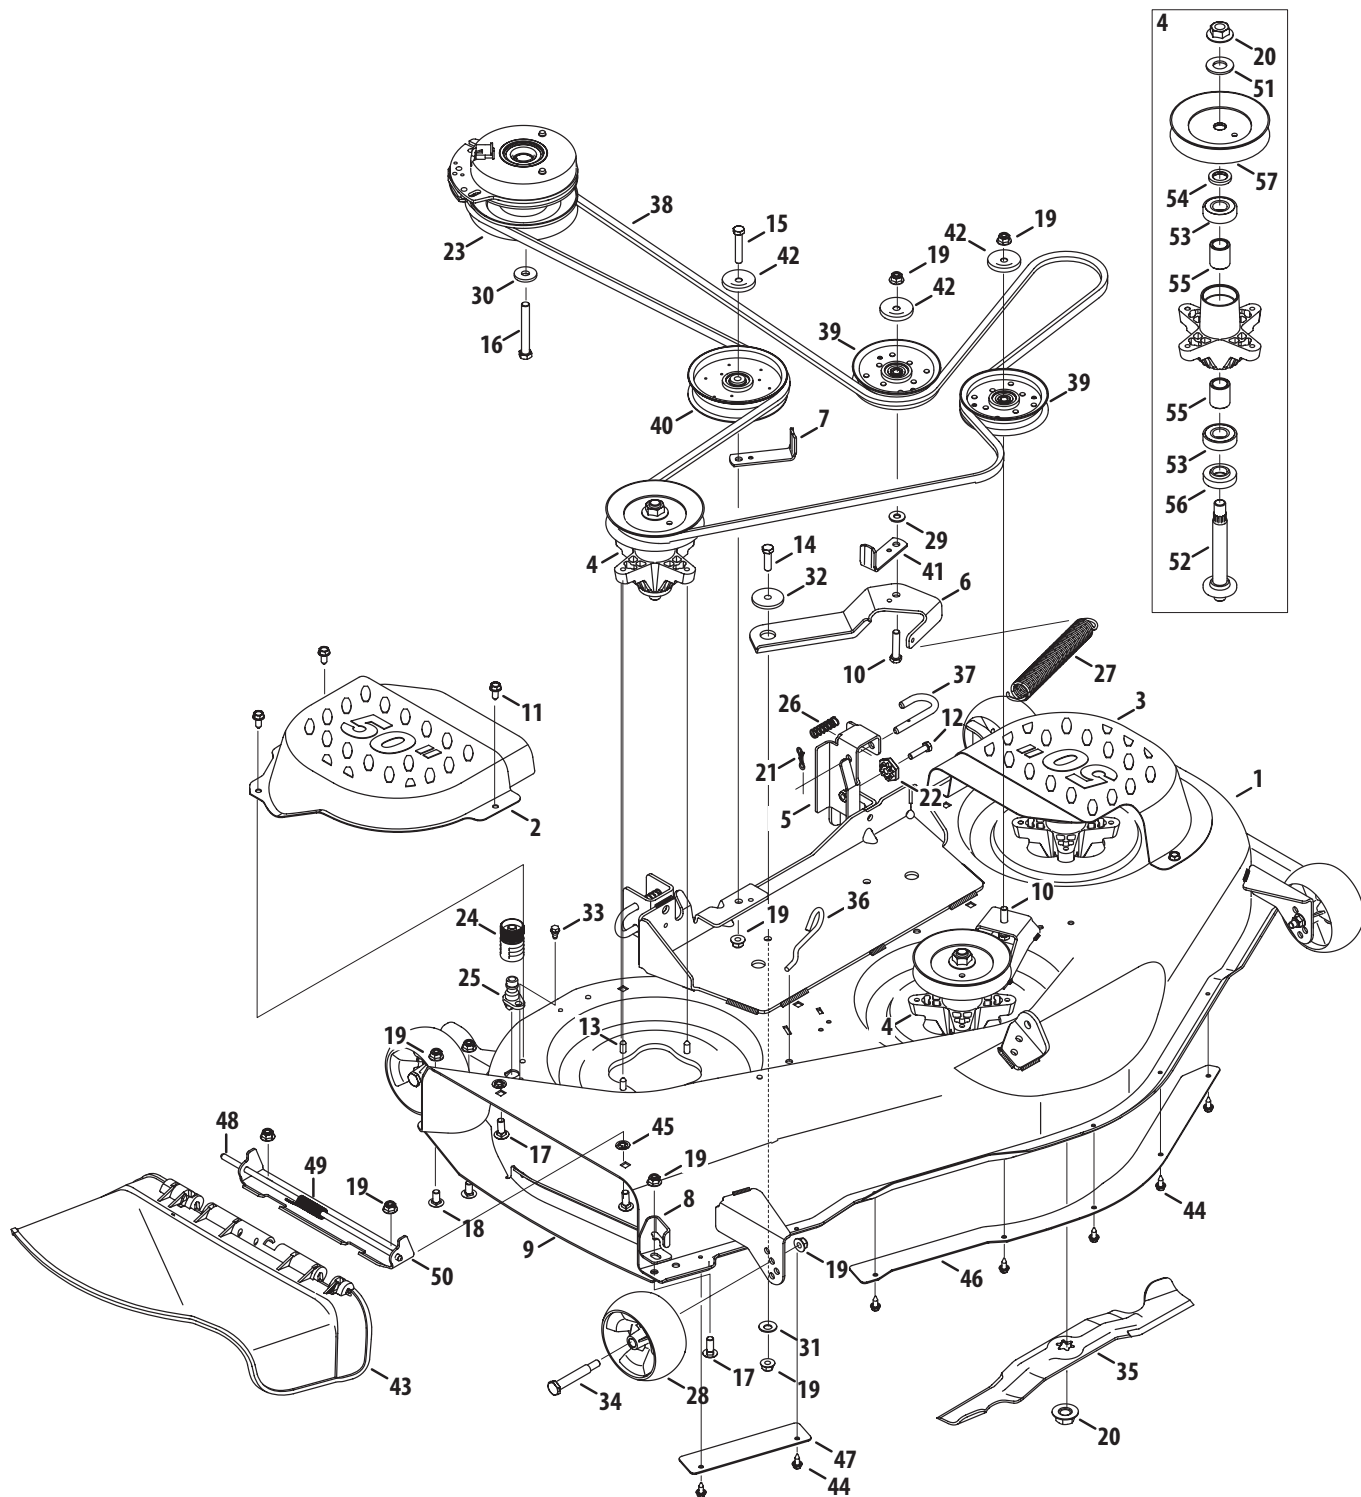

Ref.	Part Number	Description
1	603-04926B	50" Deck Assembly
2	603-04947	Belt Cover, RH
3	603-04948	Belt Cover, LH
4	918-04125B	Spindle Assembly
5	683-05031	Deck Lift Bracket
6	703-05825C	Idler Arm
7	703-08705	Bracket, Belt Guard
8	703-3279	Stop Bracket
9	703-3511B	Finger Guard
10	710-0347	Hex Cap Screw, $\frac{3}{8}$ -16 x 1.75
11	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
12	710-0573	Hex Cap Screw, $\frac{5}{16}$ -18 x 1.25
13	710-1260A	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
14	710-3005	Hex Cap Screw, $\frac{3}{8}$ -16 x 1.25
15	710-3144	Hex Cap Screw, $\frac{3}{8}$ -16 x 2.00
16	710-3157A	Screw, 7/16-20 x 3.25
17	710-3168	Carriage Screw, $\frac{3}{8}$ -16 x 1.00
18	710-3178	Carriage Screw, $\frac{3}{8}$ -16 x .75
19	712-04065	Flange Lock Nut, $\frac{3}{8}$ -16
20	712-0417A	Hex Flange Nut, $\frac{5}{8}$ -18
21	714-04040	Bow-Tie Cotter Pin, 72
22	917-04074	Deck Adjustment Gear
23	917-05122	Electric PTO Clutch
24	921-04041	Water Nozzle Adapter
25	731-07487	Deck Wash Nozzle
26	732-04652	Compression Spring, .535 x 1.751
27	732-04927	Extension Spring, 1.25 OD x 1.751
28	734-04155	Deck Ball Wheel, 5.0
29	736-0262	Flat Washer, .385 x .870 x .092

Ref.	Part Number	Description
30	736-0322	Flat Washer, .450 x 1.25 x .164
31	736-0407	Bell Washer, .45 x 1.0 x .062
32	738-04162C	Shoulder Spacer, .884 x .190
33	738-04278	Shoulder Screw, .500 x $\frac{1}{4}$ -20
34	938-3056	Shoulder Screw, .5 x 2.5 x $\frac{3}{8}$ -16
35	942-04053C	Blade, 2 in 1, 17.9
36	747-05608	Deck Spring Rod
37	747-06082	Deck Hanger Rod
38	954-05008	V-Belt
39	756-04129B	Idler Pulley, 4.25 Dia
40	756-04511A	Idler Pulley, 5.00 Dia.
41	783-06368A	Bracket, Belt Guard
42	783-07236	Pulley Cap
43	631-05058	Discharge Chute Assembly
44	710-1652	Hex Washer Screw, $\frac{1}{4}$ -20 x .625
45	712-0229	Push Nut, 3/8
46	783-04414A	Center Skirt
47	783-04415	RH Skirt
48	711-04565	Hinge Pin
49	732-04372	Torsion Spring
50	703-09219	Chute Bracket
51	736-0315	Flat Washer, .76 x 1.50 x .12
52	738-1010A	Spindle Shaft, 5.75
53	941-0919A	Ball Bearing
54	748-0160A	Spacer, .79 x 1.25 x .175
55	750-1000	Spacer, .80 x 1.10 x 1.32
56	750-1349A	Spacer, .79 x 1.82 x .55
57	756-04216	V-Type Pulley, 5.39

 
54" Deck

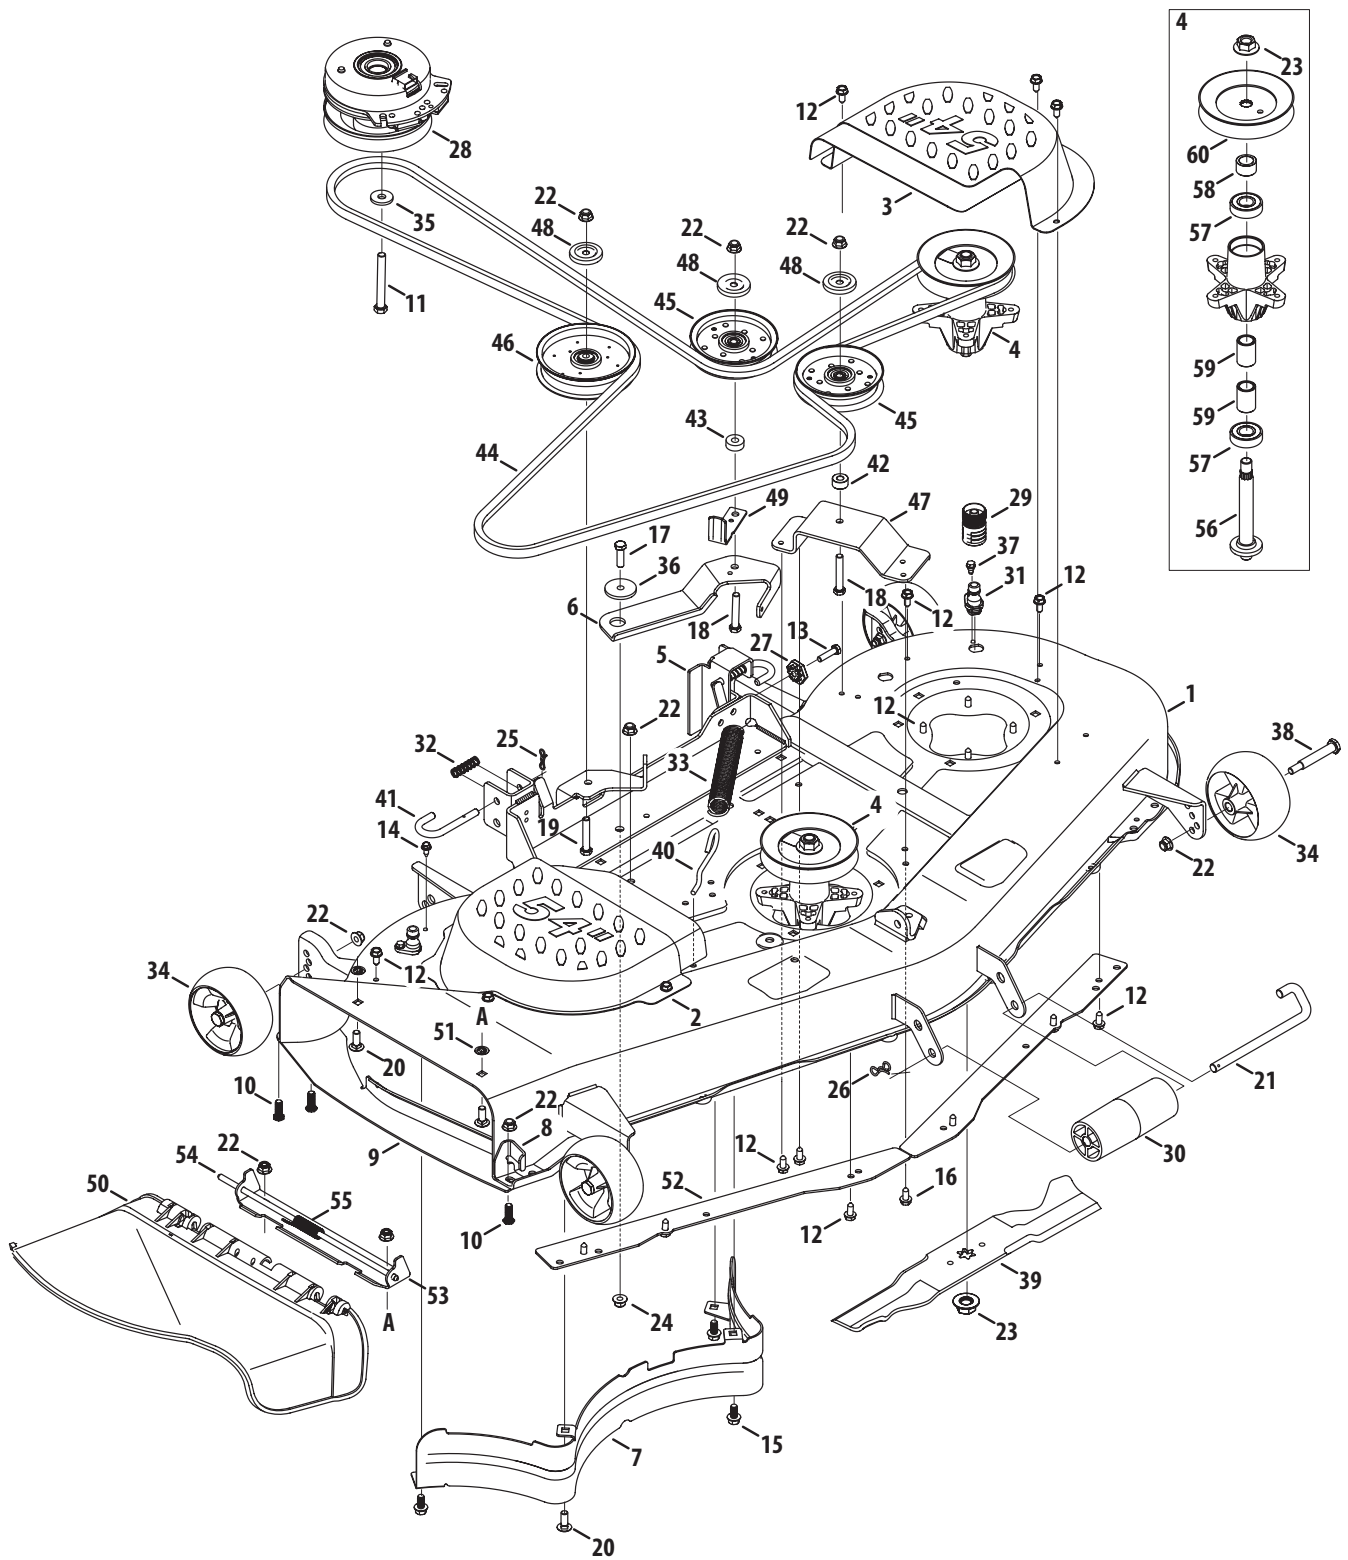

Ref.	Part Number	Description
1	903-04925	54" Deck Assembly
2	603-05004	Belt Cover, RH
3	603-05005	Belt Cover, LH
4	918-05137	Spindle Assembly
5	683-05031	Deck Lift Bracket
6	703-05825C	Idler Arm
7	703-2093C	Inner Baffle
8	703-3279	Stop Bracket
9	703-3511B	Finger Guard
10	710-04095	Hex Cap Screw, 3/8-16, 1.00
11	710-04379A	Hex Cap Screw, 7/16-20 x 3.50
12	710-04484	Hex Washer Screw, 5/16-18 x .750
13	710-0573	Hex Cap Screw, 5/16-18 x 1.25
14	710-0599	Hex Washer Screw, 1/4-20 x .500
15	710-0623	Hex Washer Screw, 3/8-16 x .75
16	710-0650	Self Tapping Screw, 5/16-18 x .875
17	710-3005	Hex Cap Screw, 3/8-16 x 1.25
18	710-3011	Hex Cap Screw, 3/8-16, 2.25
19	710-3144	Hex Cap Screw, 3/8-16 x 2.00
20	710-3168	Carriage Screw, 3/8-16 x 1.00
21	911-3314	Roller Pin, 1/2" x 7.31 Lg
22	712-04065	Flange Lock Nut, 3/8-16
23	712-0417A	Hex Flange Nut, 5/8-18
24	712-04217	Flange Lock Nut, 3/8-16
25	714-04040	Bow-Tie Cotter Pin, 72
26	714-04043	Bow-Tie Cotter Pin
27	917-04074	Deck Adjustment Gear
28	917-05123	Electric PTO Clutch
29	921-04041	Water Nozzle Adapter
30	731-05679	Front Roller

Ref.	Part Number	Description
31	731-07487	Deck Wash Nozzle
32	732-04652	Compression Spring, .535 x 1.751
33	732-04927	Extension Spring, 1.25 OD x 1.751
34	734-04155	Deck Ball Wheel, 5.0
35	736-0322	Flat Washer, .450 x 1.25 x .164
36	738-04162C	Shoulder Spacer, .884 x .190
37	738-04278	Shoulder Screw, .500 x 1/4-20
38	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
39	942-0677B	Blade, 18.5
40	747-05608	Deck Spring Rod
41	747-06082	Deck Hanger Rod
42	750-05635	Spacer, .385 ID x .875 OD x .458
43	750-3119	Spacer, .406 ID x 1.00 OD x .380
44	954-04329	V-Belt
45	756-04129B	Idler Pulley, 4.25 Dia
46	756-04511A	Idler Pulley, 5.00 Dia.
47	783-04726	Bracket, Idler, Stationary
48	783-07236	Pulley Cap
49	783-08027	Belt Guard Bracket
50	631-05058	Discharge Chute Assembly
51	712-0229	Push Nut, 3/8
52	783-04690B	Deck Skirt
53	703-09219	Chute Bracket
54	711-04565	Hinge Pin
55	732-04372	Torsion Spring
56	738-1186A	Spindle Shaft, 6.11 Long
57	941-0919A	Ball Bearing
58	748-04302	Spacer, .82 x 1.15 x .69
59	750-06055	Spacer, .792 x 1.06 x 1.52
60	756-04216	V-Type Pulley, 5.39

 Bumper

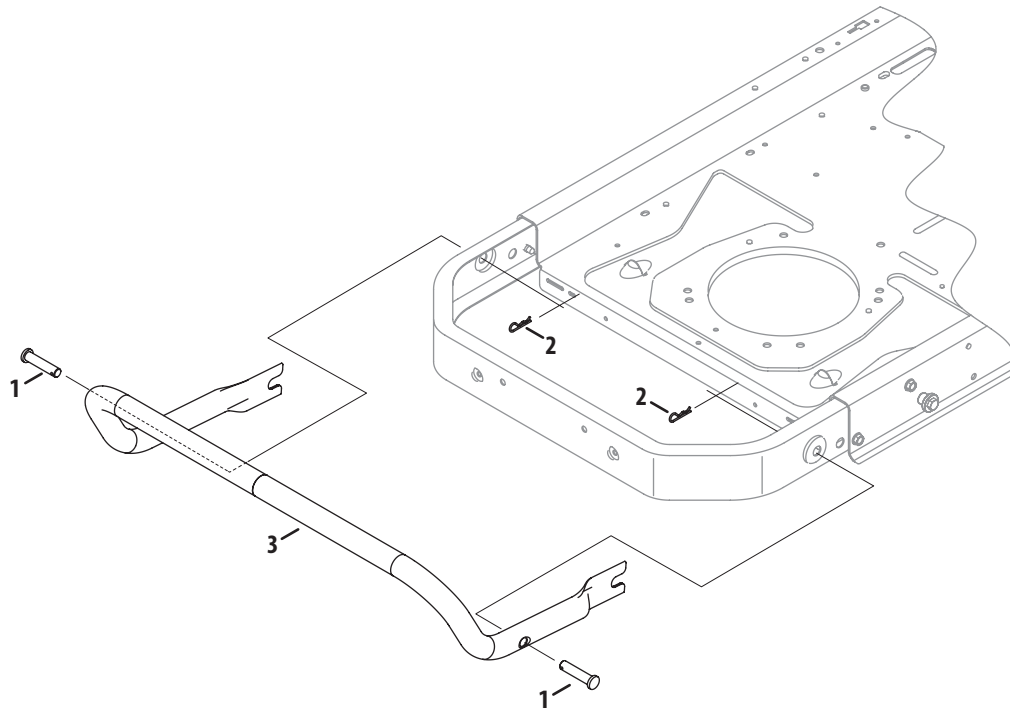

Ref. No.	Part No.	Description
1	711-0510A	Clevis Pin, .50 Dia. x 2.00
2	914-04023	Internal Cotter Pin, .080 x 1.56
3	749-05068	Bumper

Wiring Harness Schematic - 725-06000

