


SECTION 7: PARTS LIST FOR MODEL 5KL

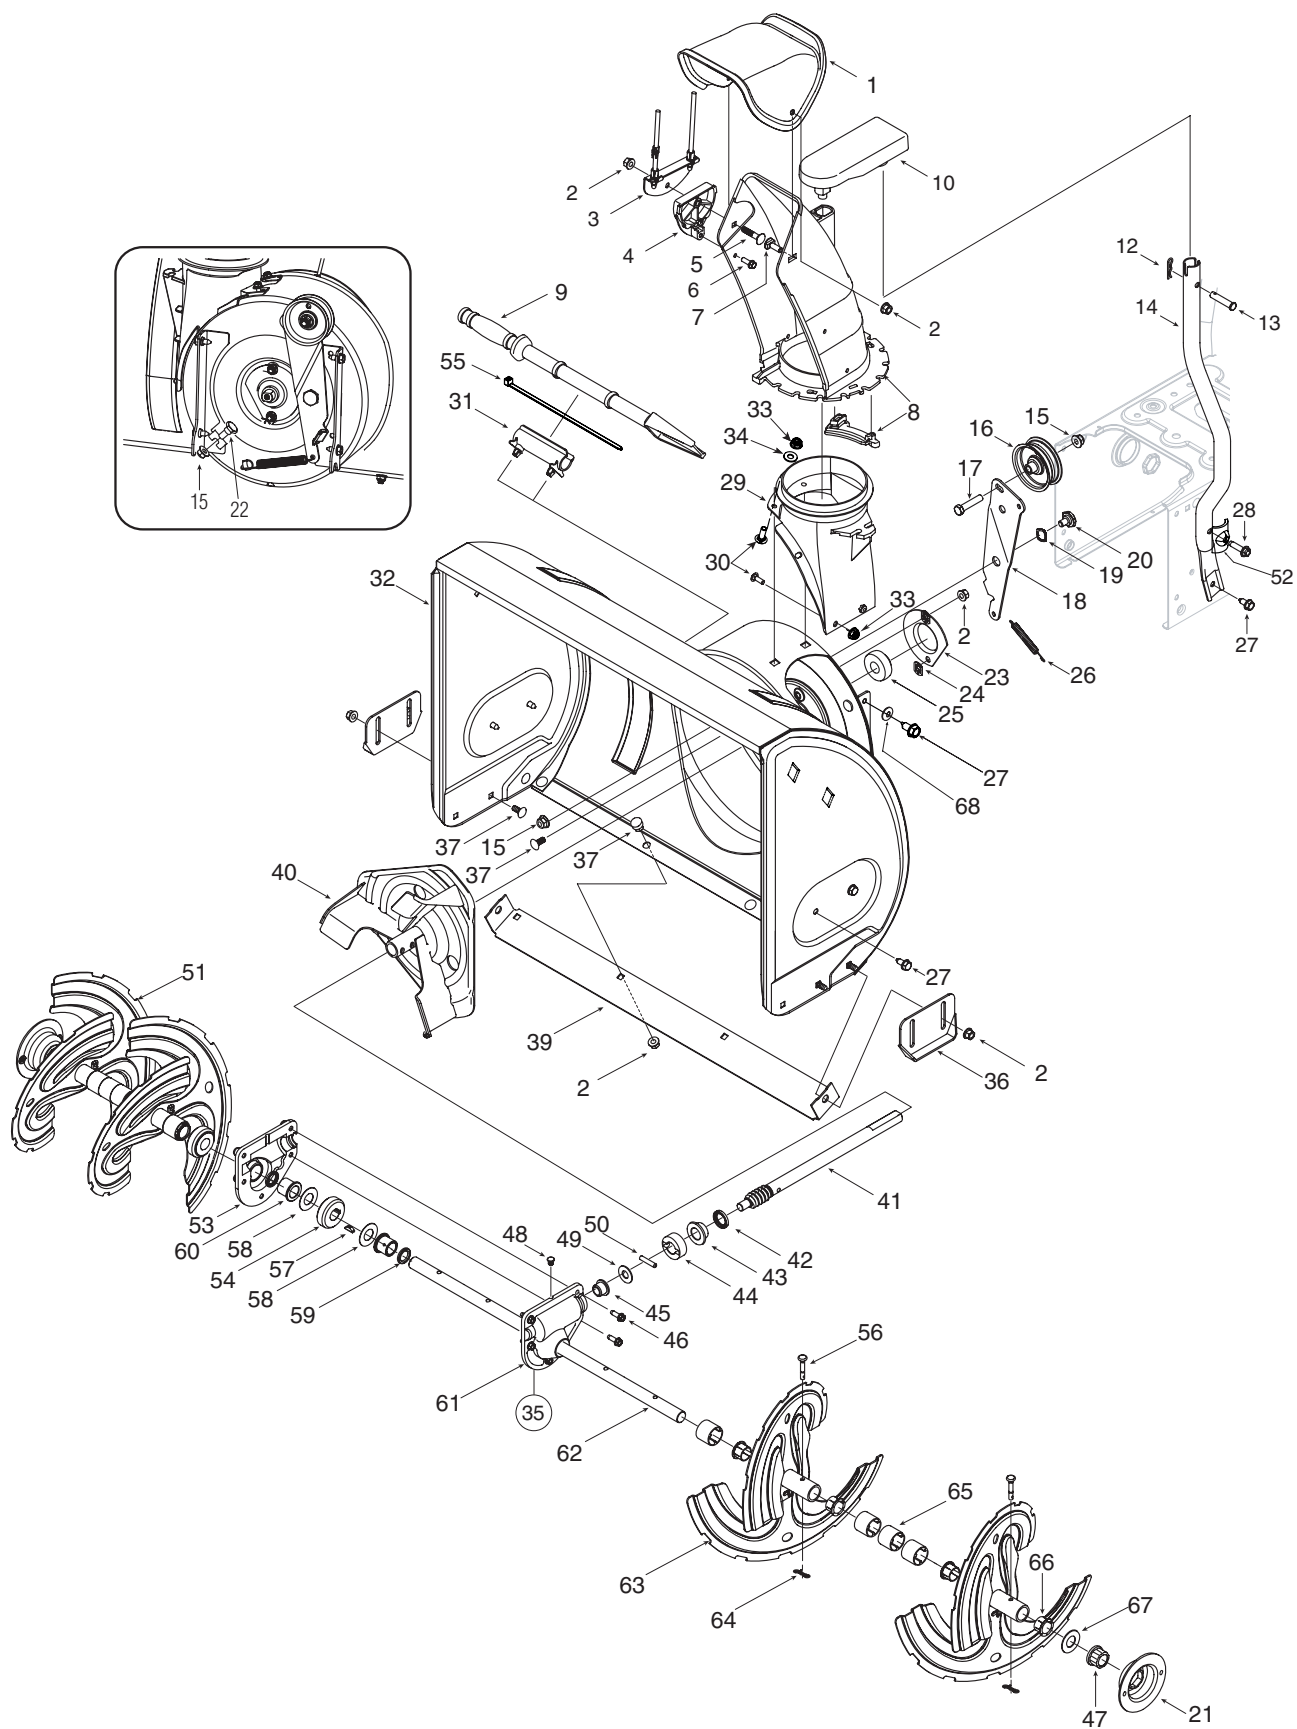


Model 5KL

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	731-04427A	Upper Chute	36.	784-5580	Slide Shoe
2.	712-04063	Flange Lock Nut, 5/16-18	37.	710-0451	Carriage Bolt
3.	784-5594	Cable Bracket	39.	790-00121	Shave Plate
4.	731-1313C	Chute Tilt Cable Guide	40.	684-04057	Impeller Assembly
5.	710-0262	Carriage Bolt, 5/16-18 x 1.50	41.	717-04126	Worm Shaft
6.	710-0895	Hi-Lo Screw, 1/4-15 x 0.75	42.	721-0327	Oil Seal
7.	710-04071	Carriage Bolt, 5/16-18 x 1.0	43.	741-0662	Flange Bearing
8.	631-04132	Lower Chute Assembly	44.	718-04071	Thrust Collar
9.	731-2643	Clean-Out Tool	45.	741-0663	Flange Bearing
10.	684-04116	4-Way Chute Control™ Assembly	46.	710-0642	TT Screw, 1/4-20 x 0.75
12.	714-0104	Cotter Pin	47.	741-0245	Hex Flange Bearing
13.	711-0415	Clevis Pin	48.	721-0325	Plug
14.	749-04155	Chute Support Tube	49.	736-3084	Flat Washer
15.	712-04065	Flange Lock Nut	50.	715-04021	Dowel Pin
16.	756-0981A	Flat Idler Pulley	51.	684-04108	Spiral Assembly- RH
17.	710-0347	Hex Bolt, 3/8-16 x 1.75	52.	784-5599	Handle Tab
18.	790-00080	Auger Idler Bracket	53.	618-0123	Reducer Hsg.-RH (Incl Ref. 59-60)
19.	736-0174	Wave Washer	54.	717-0528A	Worm Gear, 20T
20.	738-0281	Shoulder Screw	55.	725-0157	Cable Tie
21.	790-00087	Bearing Housing	56.	738-04124	Shear Pin
22.	738-0143	Shoulder Screw	57.	714-0161	Key
23.	790-00075	Bearing Housing	58.	736-0351	Flat Washer
24.	726-04012	Push Nut	59.	721-0179	Oil Seal
25.	741-0309	Ball Bearing	60.	741-0661A	Flange Bearing
26.	732-0611	Extension Spring	61.	618-0124	Reducer Hsg.-LH (Incl Ref. 59-60)
27.	710-0726	AB Screw, 5/16-12 x 0.75	62.	711-04284	Auger Axle
28.	710-0909A	TT Screw, 5/16-18 x 1.750	63.	684-04107	Spiral Assembly- LH
29.	731-04705	Chute Adapter	64.	714-04040	Bow Tie Cotter Pin
30.	710-0703	Carriage Screw, 1/4-20 x 0.75	65.	731-04870	Spacer
31.	731-2635	Clean-out Tool Mtg. Bracket	66.	741-0493A	Flange Bushing
32.	684-04071	Auger Housing Assembly: 26"	67.	736-0188	Flat Washer
33.	712-04064	Flange Lock Nut, 1/4-20	68.	736-0242	Bell Washer
34.	736-0463	Flat Washer	—	629-0071	Extension Cord (Not Shown)
35.	618-04172	Gearbox Assembly Complete			

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part, numbered 700-xxxx, is painted green, the part number to order would be 700-xxxx-0665.

YM Green: 0665
Powder Black: 0637
YM Yellow: 0674

Model 5KL

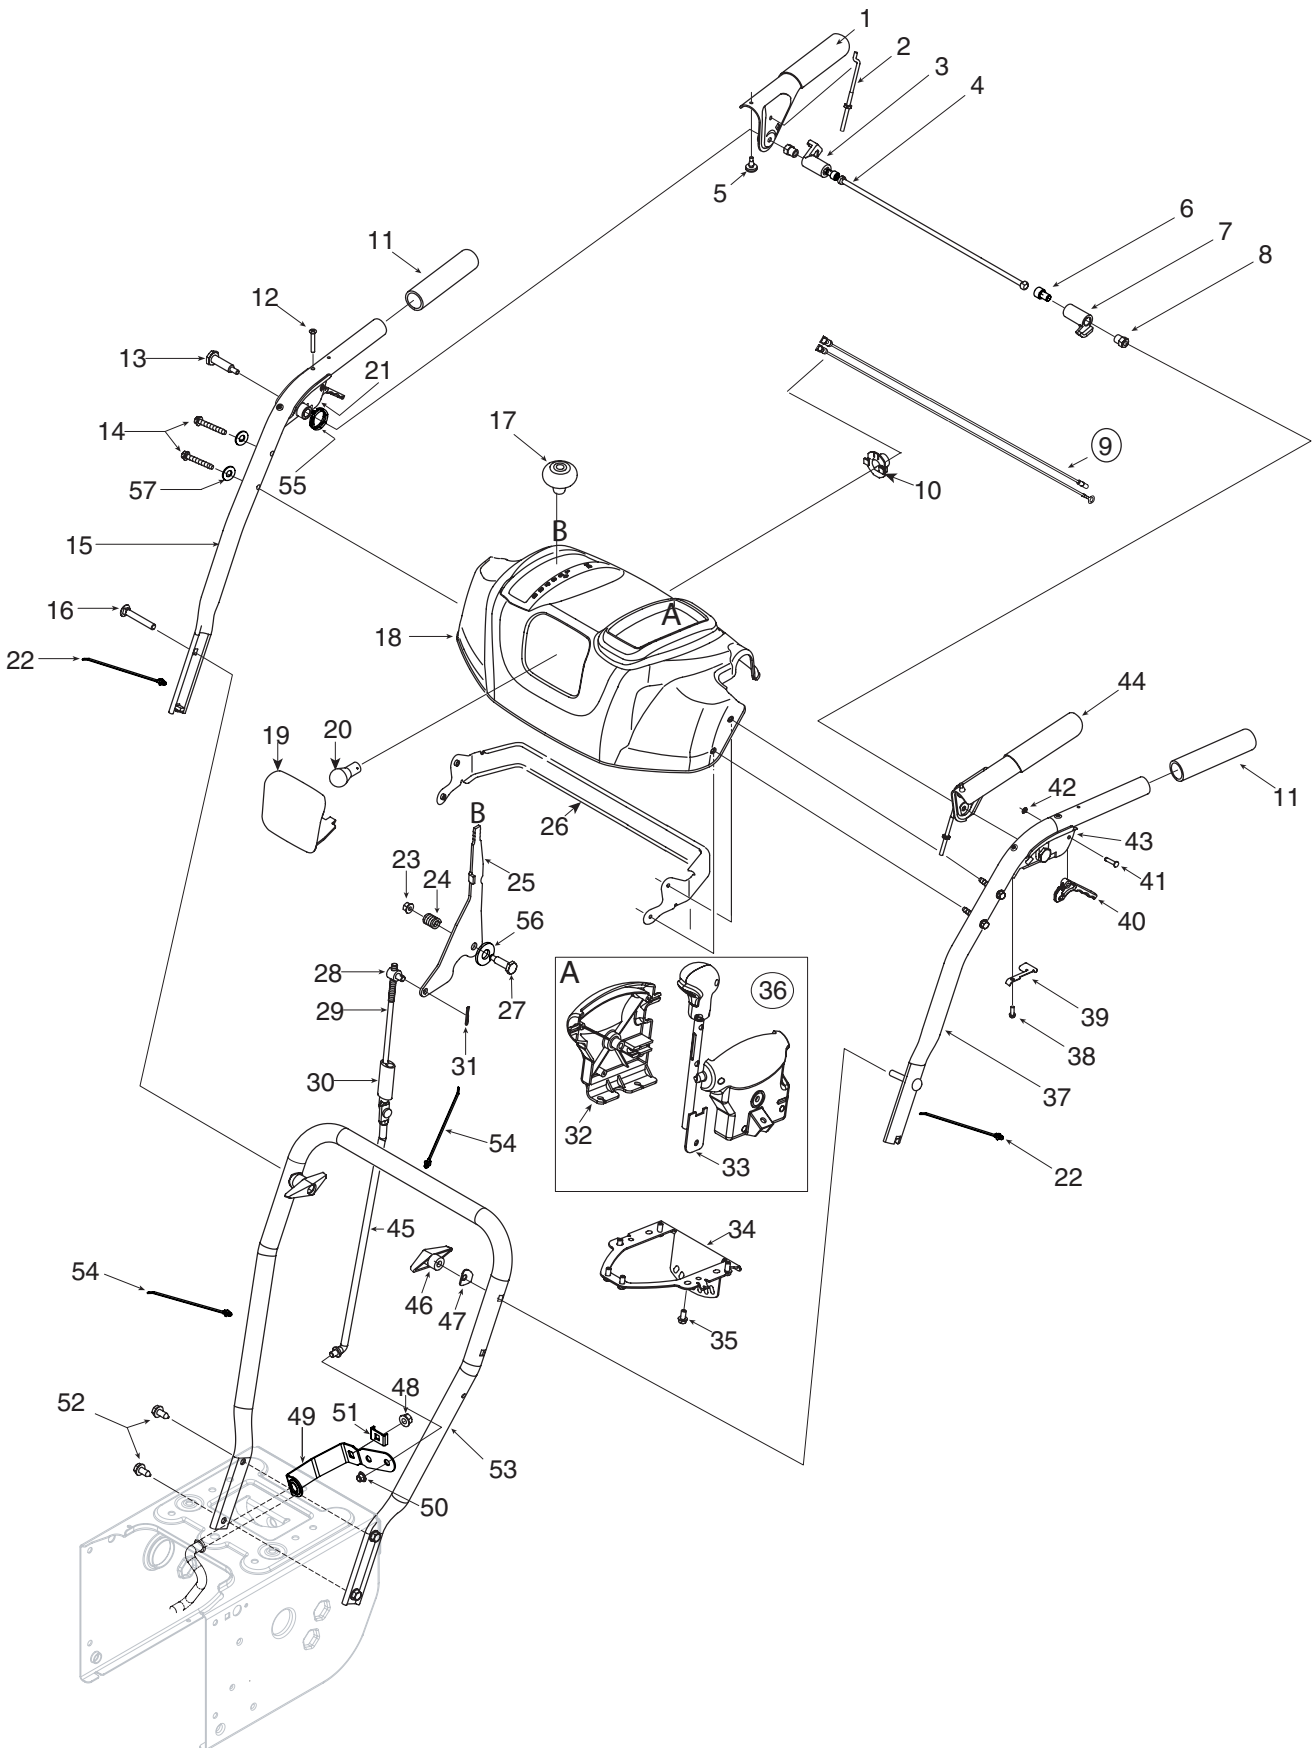


Model 5KL

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	684-04106	Handle Engagement Assembly RH	30.	750-0963	Shift Rod Connector
2.	746-0778	Cable Z- Fitting	31.	714-0104	Hairpin Clip
3.	731-04894	Lock Plate	32.	753-04864	Joystick Housing w/Fasteners
4.	711-04287	Pivot Rod	33.	753-04863	Knob Assembly w/ Trigger
5.	735-0199A	Rubber Bumper	34.	790-00131	Joystick Bracket
6.	710-04354	Screw, 1/4-20 x.375	35.	710-04187	Hi-Lo Screw, 1/4-15 x 0.5
7.	731-04896	Clutch Lock Cam	36.	684-04116	4-Way Chute Control™ Assembly
8.	712-04081A	Shoulder Nut, 1/4-20	37.	749-04142	Upper Handle LH
9.	725-04214	Wire Harness	38.	710-04326	Screw, #8-16 x 0.50
10.	725-1649	Light Socket	39.	732-04219	Clutch Lock Spring
11.	720-0274	Handle Grip	40.	731-04913	Steering Control
12.	710-1233	Screw, #10-24 x 0.375	41.	738-04126	Pin, 3/16
13.	738-04122	Shoulder Screw, 1/4-20 x 1.345	42.	716-04036	E Ring
14.	710-1026	Screw, 1/4-20 x 1.750	43.	631-04133	Handle Clutch Lock - LH
15.	749-04141	Upper Handle RH	44.	684-04105	Handle Engagement Assembly LH
16.	710-0449	Carriage Screw, 5/16-18 x 2.25	45.	747-04266	Lower Shift Control Rod
17.	720-04045	Shift Knob	46.	720-0284	Handle Knob Assembly
18.	731-04863	Handle Panel	47.	736-0451	Saddle Washer
19.	731-04864	Lens	48.	712-04063	Flange Lock Nut, 5/16-18
20.	725-04213	Lamp	49.	732-04205	Shift Arm
21.	631-04134	Handle Clutch Lock - RH	50.	726-0135	Speed Nut
22.	725-0157	Cable Tie	51.	790-00156	Shift Bracket Spacer
23.	712-04064	Flange Lock Nut, 1/4-20	52.	710-0726	AB Screw, 5/16-12 x 0.75
24.	732-0193	Compression Spring	53.	749-04138	Lower Handle
25.	790-00130	Shift Lever	54.	726-0470	Cable Tie
26.	790-00140	Panel Bracket	55.	732-04238	Torsion Spring
27.	738-04125	Shoulder Screw	56.	736-0262	Flat Washer
28.	711-0677	Ferrule	57.	736-0463	Washer, Flat,.25 x.630 x.0515
29.	747-04348	Upper Shift Rod			

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part, numbered 700-xxxx, is painted green, the part number to order would be 700-xxxx-0665.

YM Green: 0665
Powder Black: 0637
YM Yellow: 0674

Model 5KL

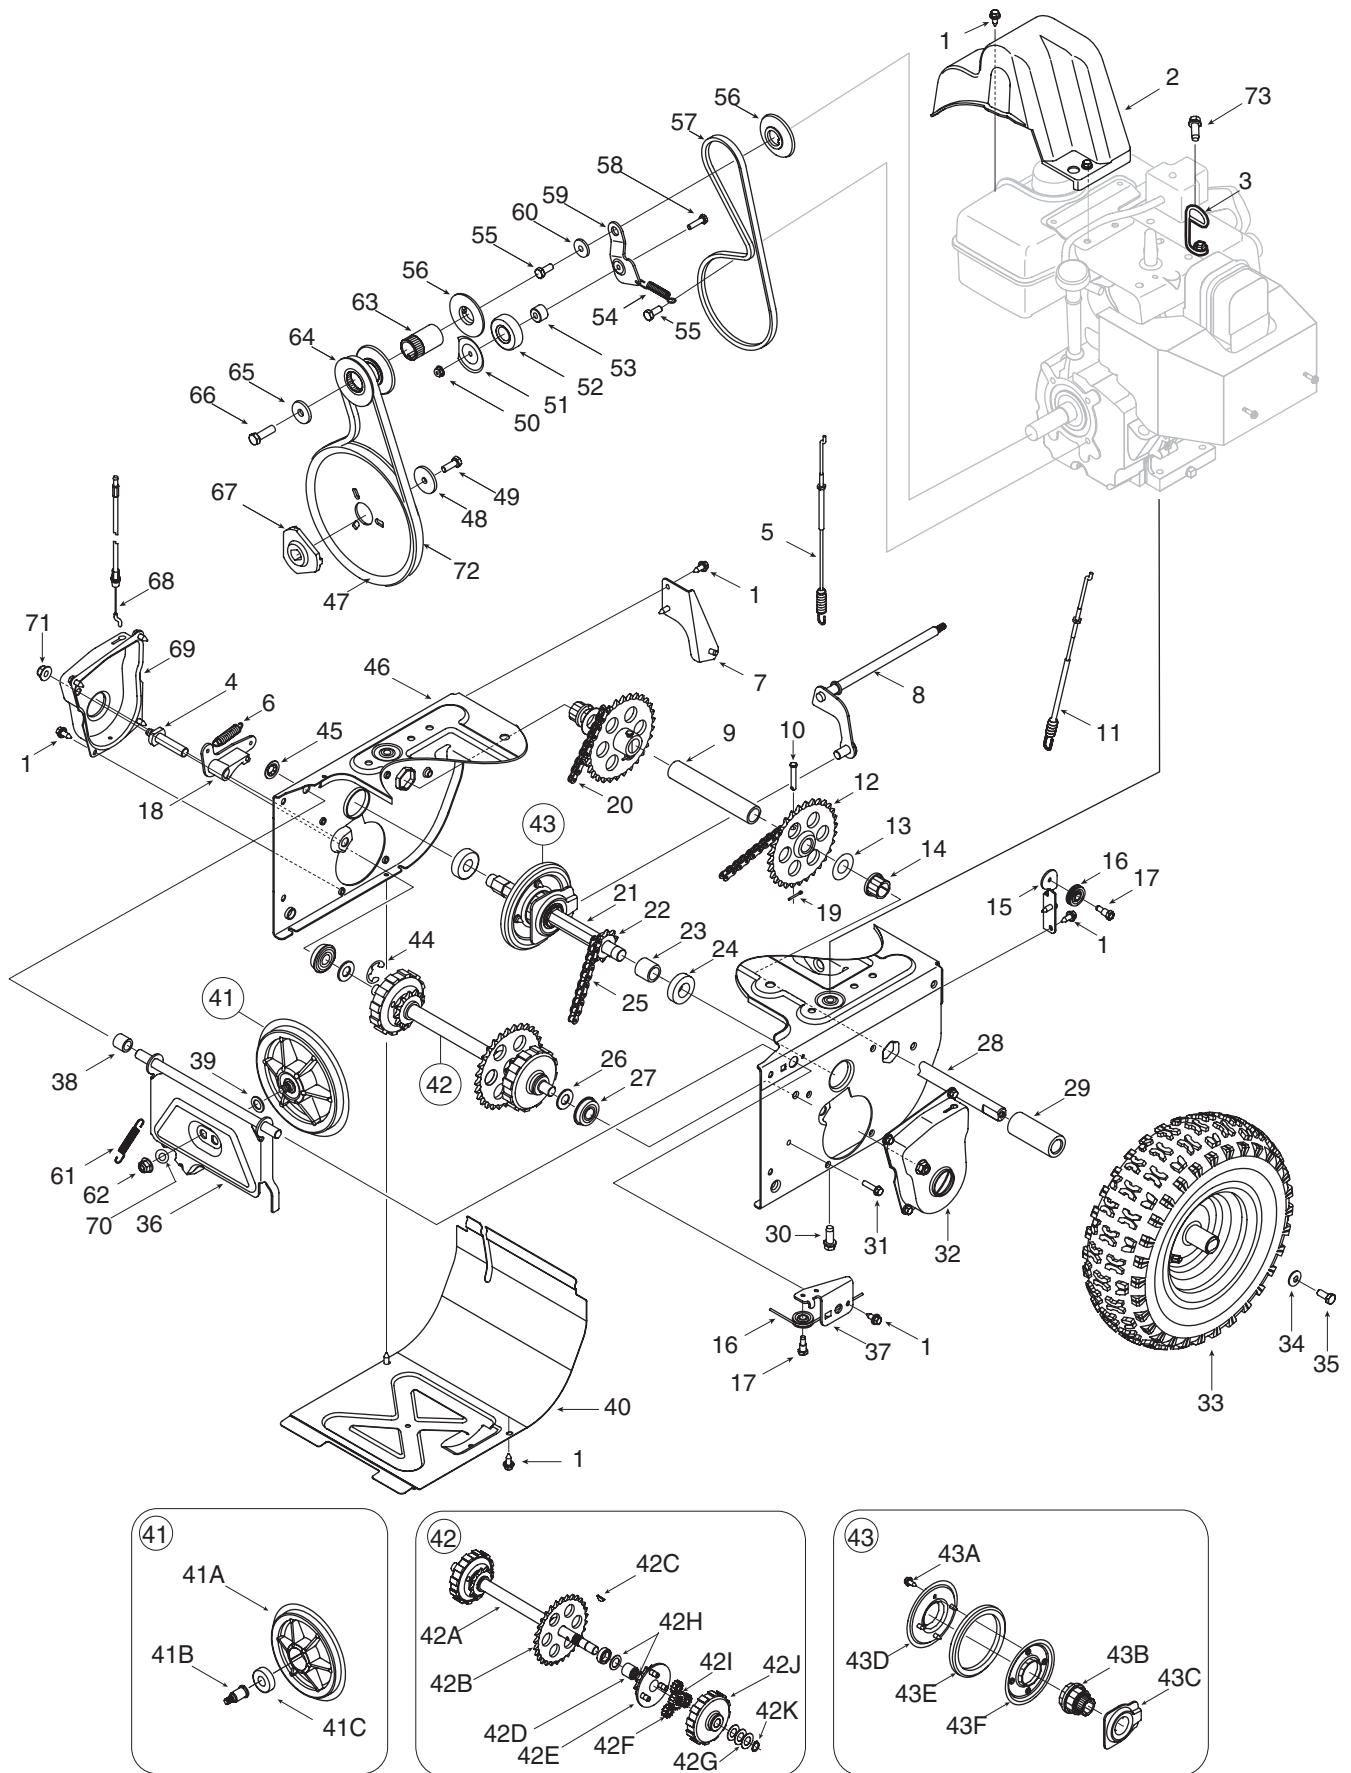

Model 5KL

Ref No.	Part No.	Description	Ref No.	Part No.	Description
1.	710-1652	AB Screw, 1/4-20 x 0.625	B.	713-04010	Sprocket
2.	731-04792	Belt Cover	C.	714-0214	Key
3.	732-0705	Cable Guide	D.	750-1177	Spacer
4.	711-1268A	Actuator Shaft	E.	618-0577A	Planetary Carr. Assembly
5.	746-04086	Drive Clutch Cable	F.	717-1209A	Gear, 12T
6.	732-0209	Extension Spring	G.	736-0502	Flat Washer
7.	790-00055	Roller Bracket	H.	736-0336	Flat Washer
8.	684-04140	Shift Rod Assembly	I.	717-1210A	Gear, 18T
9.	750-04312	Axle Support Tube	J.	717-1495B	Planetary Ring Gear
10.	711-1364	Clevis Pin	K.	716-0194	Retainer Ring
11.	746-0897	Auger Clutch Cable	43.	684-04066	Friction Wheel Assembly
12.	713-04009	Sprocket	A.	710-1652	AB Screw, 1/4-20 x 0.625
13.	736-0351	Flat Washer	B.	718-04070	Friction Wheel Hub
14.	741-0245	Hex Flange Bearing	C.	618-04169	Bearing Assembly
15.	784-5687A	Auger Clutch Cable Guide	D.	790-00011	Friction Plate
16.	756-0625	Cable Roller	E.	735-0243B	Friction Wheel Rubber
17.	738-0924	C Screw, 1/4-28 x 0.375	F.	790-00010	Friction Plate
18.	618-0043	Dogg Assembly - RH	44.	716-0136	Retainer Ring
—	618-0044	Dogg Assembly - LH (not shown)	45.	726-0221	Speed Nut
19.	714-0507	Hairpin Clip	46.	790-00073	Wheel Drive Frame
20.	713-0286	Chain	47.	756-04109	Auger Pulley
21.	711-04270	Drive Shaft	48.	736-0505	Flat Washer
22.	713-04015	Sprocket	49.	710-1245B	Hex Bolt, 5/16-24 x 0.875
23.	750-1162	Spacer	50.	712-04064	Flange Lock Nut, 1/4-20
24.	741-0600	Ball Bearing	51.	790-00062	Bearing Washer
25.	713-04011	Chain	52.	741-0919	Ball Bearing
26.	736-0626	Flat Washer	53.	750-04230	Spacer
27.	741-04076	Ball Bearing	54.	732-0710	Extension Spring
28.	738-04105A	Axle	55.	710-0627	Hex Bolt, 5/16-24 x 0.75
29.	731-04873	Spacer	56.	756-04114	Pulley Half
30.	710-0654A	TT Sems Screw, 3/8-16 x 1.0	57.	754-0456	V-Belt, 3/8 x 28.6
31.	710-0788	TT Screw, 1/4-20 x 1.0	58.	710-0597	Hex Bolt, 1/4-20 x 1.0
32.	790-00056	Shaft Retainer - LH	59.	790-00082	Drive Clutch Idler Bracket
33.	634-04141	Wheel Complete	60.	748-0234	Shoulder Spacer
34.	736-0242	Bell Washer	61.	732-0264	Extension Spring
35.	710-0627	Hex Bolt, 5/16-24 x 0.75	62.	712-0711	Jam Nut, 3/8-24
36.	684-04045	Friction Wheel Support Bracket	63.	750-04303	Spacer
37.	790-00096	Auger Cable Guide Bracket	64.	756-04113	Pulley Half
38.	748-0190	Spacer	65.	736-0247	Flat Washer
39.	736-0300	Flat Washer	66.	710-0191	Hex Bolt, 3/8-24 x 1.25
40.	790-00054	Frame Cover	67.	748-04053	Pulley Adapter
41.	656-0012A	Friction Wheel Disc Assembly	68.	746-0956	Steering Cable
A.	756-0648A	Friction Wheel Disc	69.	790-00057	Shaft Retainer - RH
B.	738-0865	Friction Disc Bearing Pin	70.	736-0105	Bell Washer
C.	741-0600	Ball Bearing	71.	712-04065	Flange Lock Nut, 3/8-16
42.	618-04116	Drive Shaft Assembly	72.	754-04050	V-Belt, .500 x 35.00 Lg
A.	711-04271	Drive Shaft	73.	710-0602	TT Screw, 5/16-18 x 1.00

Safety & Decorative Labels

