


Model 60TP


* Please Note: There are no baggers available for this model *

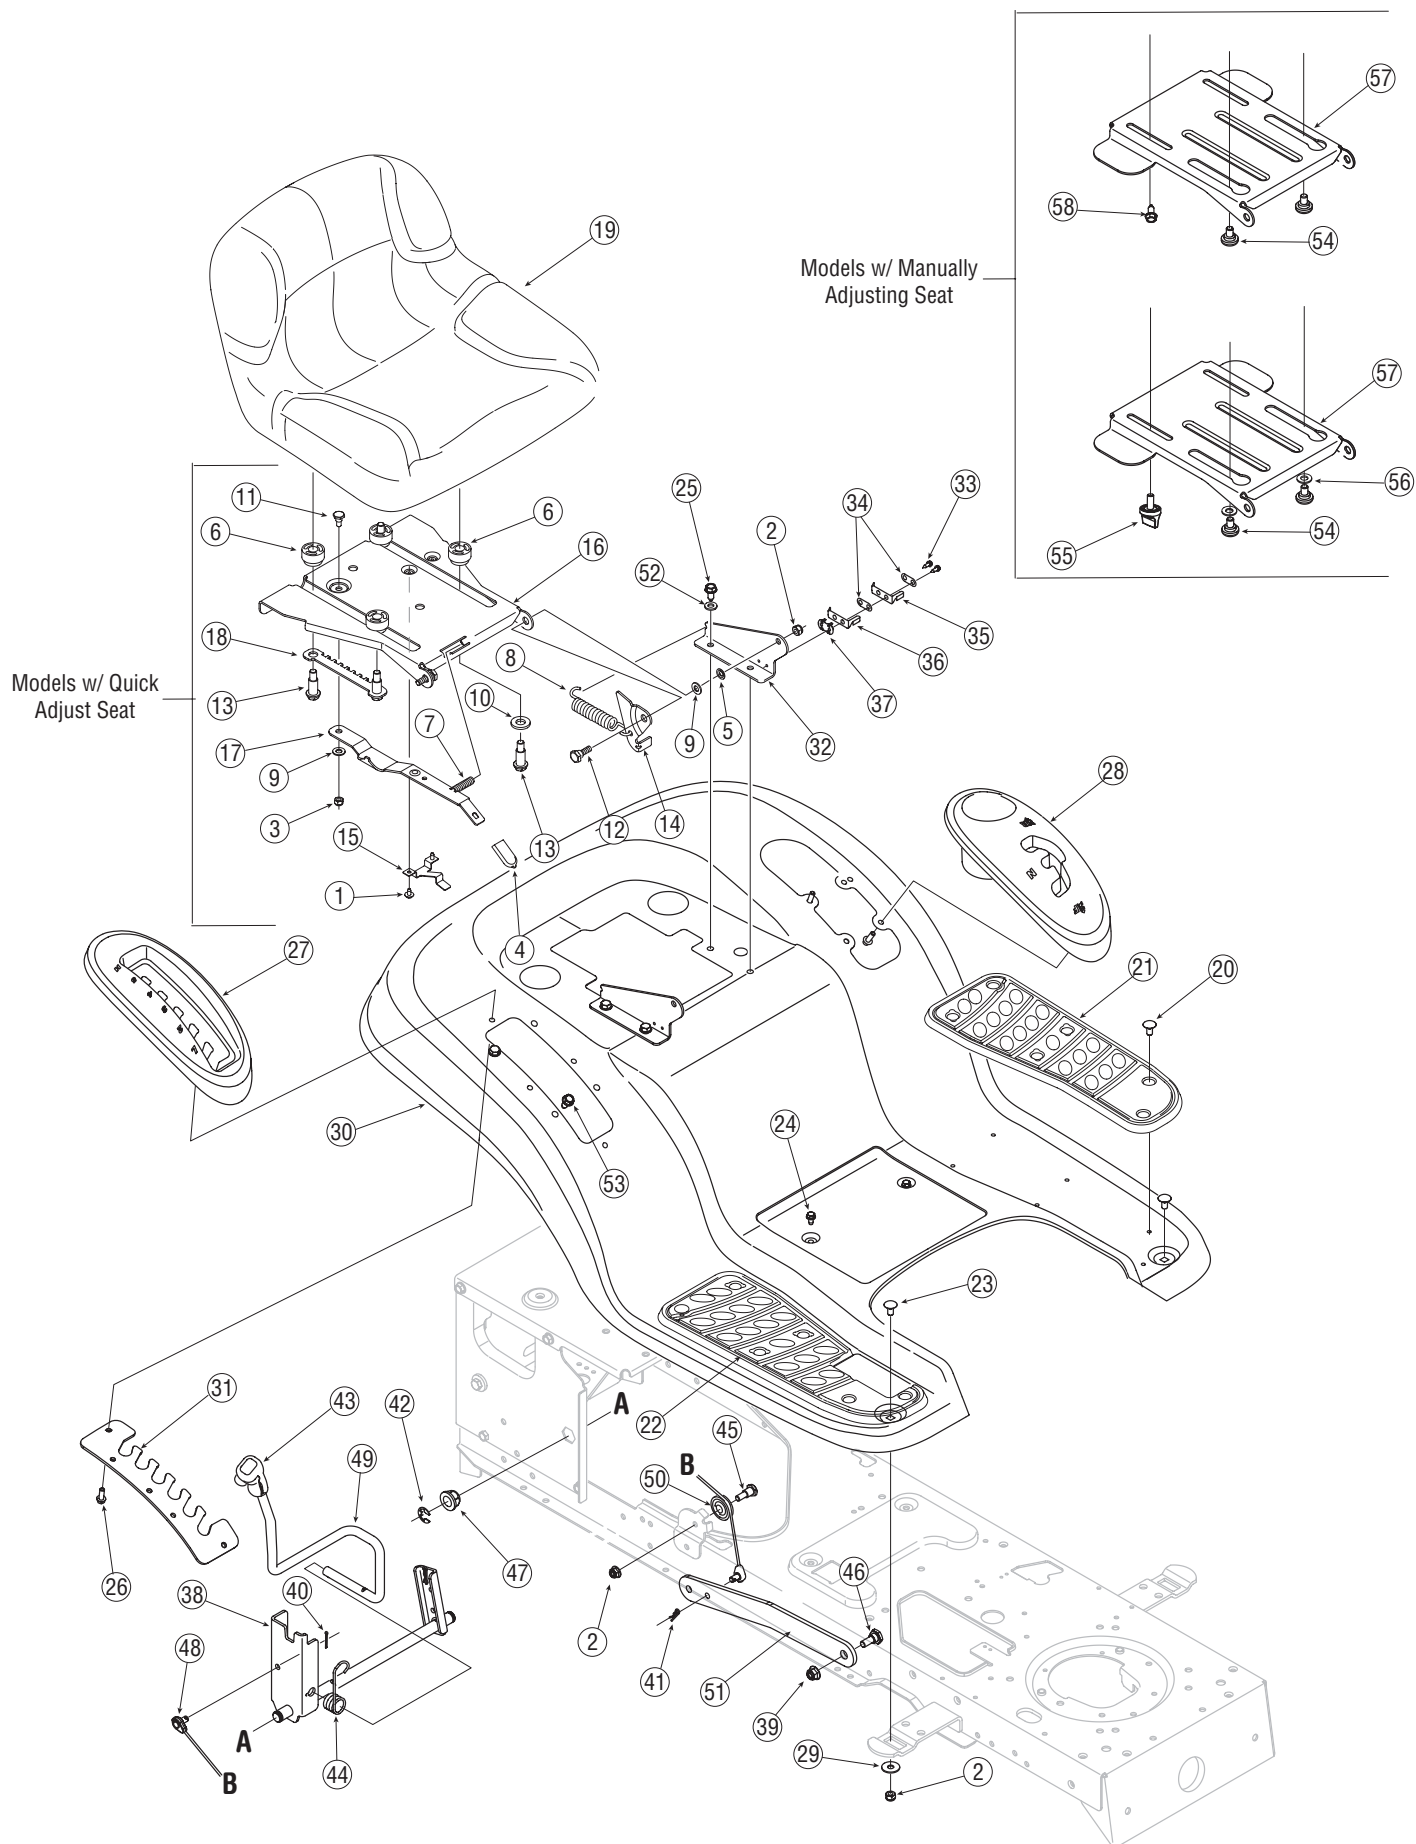

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-1268†	Screw, #10-16 x.375	30	783-04333A	Fender
2	712-04063	Nut, Flange Lock, 5/16-18, GrF	31	783-0677B	Adjust. Brkt., Lift
3	712-04064†	Nut, Flange Lock, 1/4-20	32	783-1489B	Mounting Bracket, Seat
4	720-0309A†	Seat Adjuster Grip	33	710-0227	Screw, #8-18 x.50
5	726-0201†	Nut, Speed,.3125 ID	34	726-0279	Plate, Insulator
6	731-04074†	Spacer	35	725-1303	Spring Switch, Outer
7	732-0499†	Compression Spring,.41 x 1.5	36	725-1439	Spring Switch, Inner
8	732-1184	Spring, Extension,.84 Dia. x 4.6	37	726-0278	Plate, Insulator Boss
9	736-0275†	Wash, Flat,.344 x.688 x.065	38	683-04079	Shaft Assembly, Lift
10	736-3019†	Wash, Flat,.531x 1.062 x.134	39	712-04065	Nut, Flange Lock, 3/8-16, GrF
11	738-0137A†	Screw, Shld, .340 x.285, 1/4-20	40	714-0104	Pin, Cotter,.072 Dia. x 1.13
12	738-0296	Screw, Shoulder,.437 x.268	41	714-0111	Pin, Cotter, 3/32, 1.0
13	738-0966A†	Screw, Should,.50 x.925, 3/8-16	42	716-0106A	Ring, E Type,.625 Dia.
14	783-0209D	Seat Bracket, Lift	43	720-0311	Grip, Handle, 1/2
15	783-0611†	Seat Stop	44	732-0874	Spring, Torsion
16	783-0738C†	Seat Pivot Bracket	45	738-0138A	Screw, 5/16-18 x.620 Gr2
17	783-0739A†	Seat Adjustment Lever	46	738-0380	Screw, Shld,.50 x.27
18	783-0753†	Seat Adjustment Selector	47	741-0225	Bearing, Hex Flange
19	757-04036	Medium Back Seat	48	746-0968	Cable, Lift, 16.16
20	726-3046	Ratchet Clip	49	747-04155	Handle, Lift
21	735-0657	LH Foot Pad, Rubber	50	756-1154	Pulley, Roller
22	735-0656	RH Foot Pad,Rubber	51	783-0678A	Arm, Lift- LH & RH
23	710-0451	Bolt, Carriage, 5/16-18,.75, Gr1	52	736-0607	Lock Washer, 5/16
24	710-0599	Screw, 1/4-20, 0.500	53	710-0726	Screw, 5/16-12
25	710-0604A	Screw, 5/16-18, 0.625	54	738-04012A†	Shoulder Screw
26	710-0895	Screw, 1/4-15, 0.750	55	720-04061†	Knob, 3/8-16
27	731-1990	Cover, Lift Lever	56	736-0300†	Flat Washer, .406 x .875 x .059
28	731-2104C	Cover, w/ Cup Holder	57	783-04081A†	Seat Pivot Bracket, Manual Adj.
29	736-3078	Washer, Flat,.344 x 1.0 x.063	58	710-0870†	Hex Head Washer Screw, 3/8-16


† If Equipped

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

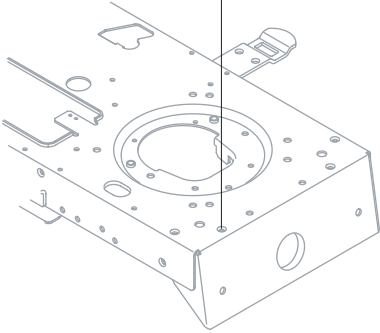

Ref. No.	Part No.	Description
1	710-04095	Hex Screw, 3/8-16, 1.00, Gr5
2	710-0514	Hex Screw, 3/8-16, 1.00, Gr5
3	710-0643	Hex Screw, 5/16-18, 1.00, Gr5
4	711-1408	Link, Drag, RH
5	711-1409A	Link, Drag, LH
6	712-0214	Nut, Hex Lock, 3/8-24
7	712-04065	Nut, Flange Lock, 3/8-16, Grf
8	712-0459	Nut, Flange Lock, 7/16-20
9	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
10	712-0240	Nut, Jam, 7/16-20, Gr2
11	717-1550E	Gear, Steering, 11/90 Ratio
12	717-1554	Gear, Pinion, Steering
13	723-0448A	Ball Joint, 7/16-20, Lock
14	736-3004	Washer, Flat, .406 x .875 x .105
15	736-3084	Washer, Flat, .51 x 1.12 x .06
16	710-1260A	Screw, 5/16-18, 0.750
17	738-04154	Spacer, Shoulder, .38 x 1.00 x .31
18	738-1001A	Shaft, Steering, .625 OD x 24.25
19	741-0475	Plastic Bushing .380 ID
20	738-0143	Screw, Shoulder, .498 x .340
21	783-0726E	Pivot Bracket, Support RH
22	783-0727D	Pivot Bracket, Support LH
23	783-0728	Pivot Bracket, Bar
24	631-04008	Steering Wheel
25	731-04681	Steering Wheel Cap
26	738-04128	Shoulder Screw, .5 x 2.380, 3/8-16
27	734-2290A	Deluxe Hub Cap
28	736-0316	Flat Washer, .78 x 1.589 x .06
29	714-04039	Cotter Pin, 5/32 x 1.25
30	719-04105	Cast Iron Pivot Bar
31	731-04693	Hub Cap
32	638-04003	LH Axle Assembly, .750
33	638-04004	RH Axle Assembly, .750
34	711-0332	Pin, Clevis, .50 x .78
35	714-04023	Cotter Pin, Internal, .080 x 1.5625
36	783-0720A	Adjustment Bracket, Front
37	741-0656A	Hex Flange Bearing
38	726-04035	Push Nut
39	712-0431	Flange Lock Nut, 3/8-16
40	634-04087	Wheel Assembly Complete, 15 x 6
	734-04040	Tire Only 15 x 6 x 6
	634-04081	Rim Only w/ Valve Stem


Model 60TP

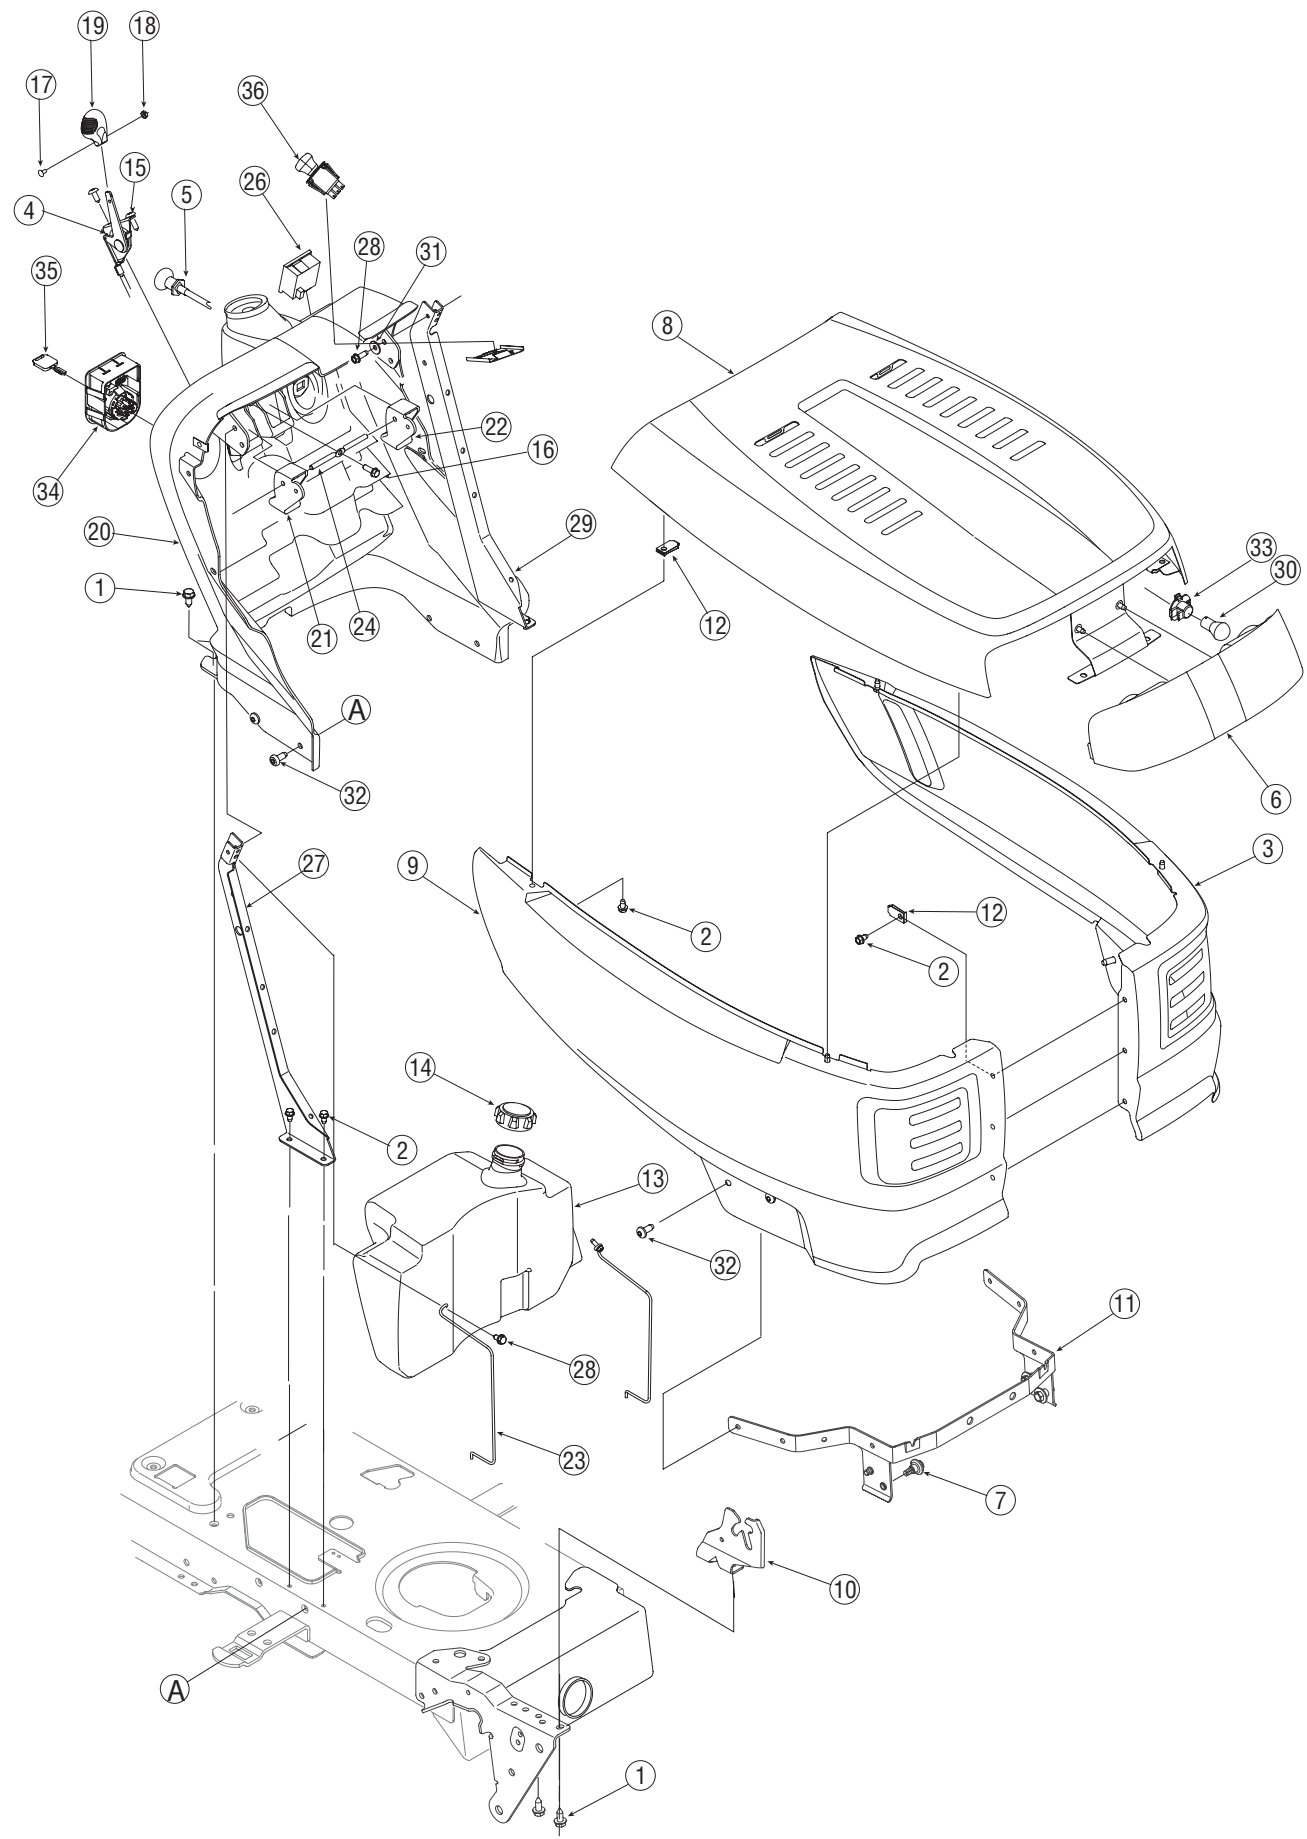

Ref. No.	Part No.	Description
1	710-0726	Screw, 5/16-12 x.750
2	710-0599	Self-tapping Screw, 1/4-20 x.5
3	783-04829	Side Panel - LH
4	746-1100	Throttle Control
5	746-1085A	Choke Control
6	731-05357	Headlight Lens
7	738-04091	Shoulder Screw,.43 x.29
8	783-04827	Hood, T Style
9	783-04828	Side Panel - RH
10	783-04840	Pivot Bracket - RH
	783-04841	Pivot Bracket - LH
11	783-04606A	Grill Pivot Bracket
12	712-0185	Speed Nut
13	751-10283	Fuel Tank, Three Gallon
14	751-0603	Fuel Cap
15	710-1017	Screw, 1/4-14 x.625
16	710-0895	Self-tapping Screw, 1/4-15 x.75
17	710-3217	Truss Phillips Screw, #8-32 x.375
18	712-0142	Hex Nut, #8-32
19	731-1857	Throttle Control Knob

Ref. No.	Part No.	Description
20	731-05005B	Dash Panel
21	731-04215	Cruise Control Button
22	731-04217	Parking Brake Button
23	747-04161	Tank Support Rod
24	747-1196	Brake/Cruise Pivot Rod
25	629-04083†	Headlight Wire Harness
26	725-04036B	Systems Ind. Monitor w/ Hr. Meter
27	783-04908	RH Dash Support Plate
28	710-0642	Self-tapping Screw, 1/4-20 x.75
29	783-04909	LH Dash Support Plate
30	725-0963	Lamp
31	736-0270	Bell Washer,.265 x.75 x.062
32	710-1611B	Screw, 5/16-18 x.75
33	725-1649	Headlight Socket
34	725-04227A	Ignition Switch
35	725-1745	Ignition Key w/ plastic cover
	725-1744	Ignition Key w/o plastic cover
36	725-1752	Electric PTO Switch
—	725-04336†	Wire Harness

† Not Shown

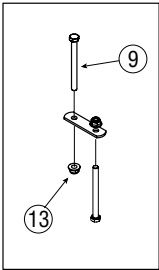

Left Hand Transmission Bolt Mounting


Ref. No.	Part No.	Description
1	17840	Mounting Bracket, Transaxle
2	725-04039	Switch, Interlock
3	17962	Plate, Switch
4	647-04020	Lever Assembly, Shift
5	710-0607	Screw, 5/16-18, 0.500
6	710-0726	Screw, 5/16-12, 0.750
7	710-0809	Screw, 1/4-20, 1.250
8	710-1007	Screw, Sems, 3/8-16, 1.500
9	710-1266	Screw, 5/16-18, 3.50, Gr5
10	710-3144	Screw, 3/8-16, 2.00, Gr5
11	711-0736	Adjustment Ferrule 1/4-20 x 1.
12	712-0241	Nut, Hex, 3/8-24, Gr5
13	712-04063	Nut, Flange Lock, 5/16-18, GrF
14	712-0431	Nut, Flange Lock, 3/8-16, GrF
15	712-0700	Nut, Flange, 9/16-18, Gr2
16	714-0104	Pin, Cotter,.072 Dia. x 1.13
17	714-0111	Pin, Cotter, 3/32, 1.0
18	714-0209	Cotter Pin, Internal,.125 Dia.
19	714-0470	Pin, Cotter, 1/8 x 1.25
20	718-0758A	Pulley Hub, 5/8 Spline
21	720-04028	Knob, Shift
22	723-3018	Ball Joint
23	731-04602	Sleeve,.758 x.821 x 3.3125
24	731-04604	Sleeve,.758 x.821 x 2.4375
25	732-0384	Spring, Extension,.62 Dia x 6.12
26	732-0525	Spring Clip, Shifter
27	732-0716C	Spring, Extension,.59 OD x 4.00
28	732-0963	Spring, Extension,.50 Dia x 6.37
29	736-0169	Washer, Lock, 3/8
30	710-0224	Screw, #10-16,.50
31	738-0372B	Spacer, Shoulder, 1.00 x.38 x.38
32	747-04146A	Rod, Shift
33	747-04164	Rod, Brake
34	747-1127	Idler Rod, Adjustable, 3/8
35	748-0334	Spacer,.68
36	750-0566A	Spacer,.260 x.372 x 1.030
37	754-0467	Belt, V-Type
38	754-0468	Belt, V-Type
39	756-04002	Pulley, V-Type, 7.25 Dia.
40	756-04224	Idler Pulley, Flat 2.75 OD
41	783-04283	Bracket, Shift

Ref. No.	Part No.	Description
42	783-04360	Bracket, Shift, F-N-R
43	783-04442	Idler Bracket, Center Double
44	647-0031B	Control Assembly, Brake
45	647-0032A	Control Assembly, Speed
46	683-0266	Pedal Assembly
47	710-0650	Screw, 5/16-18, 0.875
48	710-1260A	Screw,5/16-18, 0.750
49	710-1611B	Screw, 5/16-18, 0.750
50	711-04159B	Pin, 3/8-16 x 2.68
51	731-2290A	Hub Cap
52	732-0335	Spring, Compression,.405 x 1.17
53	732-0955	Spring, Extension,.50 OD x 1.41
54	732-0963	Spring, Extension,.50 OD x 6.37
55	735-0662	Pad
56	735-3049	Pad, Brake
57	736-0187	Washer, Flat,.64 x 1.24 x.06, Ht
58	736-0262	Washer, Flat,.385 x.870 x.092
59	736-0300	Washer, Flat,.406 x.875 x.059
60	736-3008	Washer, Flat,.344 x.750 x.120
61	738-0155	Screw, Shoulder.437 Dia x.162
62	738-0380	Screw, Shoulder,.50 x.27 Lg,
63	741-0225	Bearing, Hex Flange
64	741-3065B	Split Bearing, Hex Flange
65	747-04093	Rod, Brake Lock
66	747-04096	Rod, Cruise Control
67	748-04039B	Latch, Cruise Control
68	783-0732A	Bracket, Lockout
69	783-0773A	Ped, Brake
70	783-04612	Bracket, Steering Support
71	618-04034	Transmission, Single Speed
72	683-04055A	Bracket Assembly, Torque
73	683-04130	Bracket, Idler
74	710-0227	Screw, #8-18 x.50
75	710-0514	Screw, 3/8-16, 1.00
76	710-0604A	Screw, 5/16-18,.625
77	710-1315	Screw, 3/8-16, 1.250
78	712-0130	Nut, Lock, 3/8-16, Nylon
79	725-1644	Switch Spring, Short
80	726-0320	Plate, Insulator
81	750-04294	Spacer, Shoulder
82	756-04209	Pulley, V-Type, 3.06

Continued on next page

Model 60TP


Ref. No.	Part No.	Description
83	656-04015	Pulley Ass'y, Variable Speed
84	683-04129	Bracket, Pulley
85	710-0627	Screw, 5/16-24,.750
86	710-1652	Screw, 1/4-20,.625
87	718-04012	Cup, Bearing
88	736-0362	Washer, Flat
89	741-0600	Ball Bearing
90	736-0119	Lock Washer, 5/16
91	736-0242	Washer, Bell,.340 x.872 x.060
92	712-04065	Nut, Flange Lock, 3/8-16, GrF
93	714-0507	Pin, Cotter, 3/32 x .750
94	736-0430	Flat Washer,.350 x 1.59 x.062
95	634-0177	Wheel Assy Comp, 20 x 10 x 8
	734-1873	Tire Only 20 x 10 x 8
	634-0222	Rim Only w/ Valve Stem
96	736-3010	Flat Washer, .407 x .812 x .135
97	712-3004A	Nut, Flange Lock, 5/16-18, Gr 5

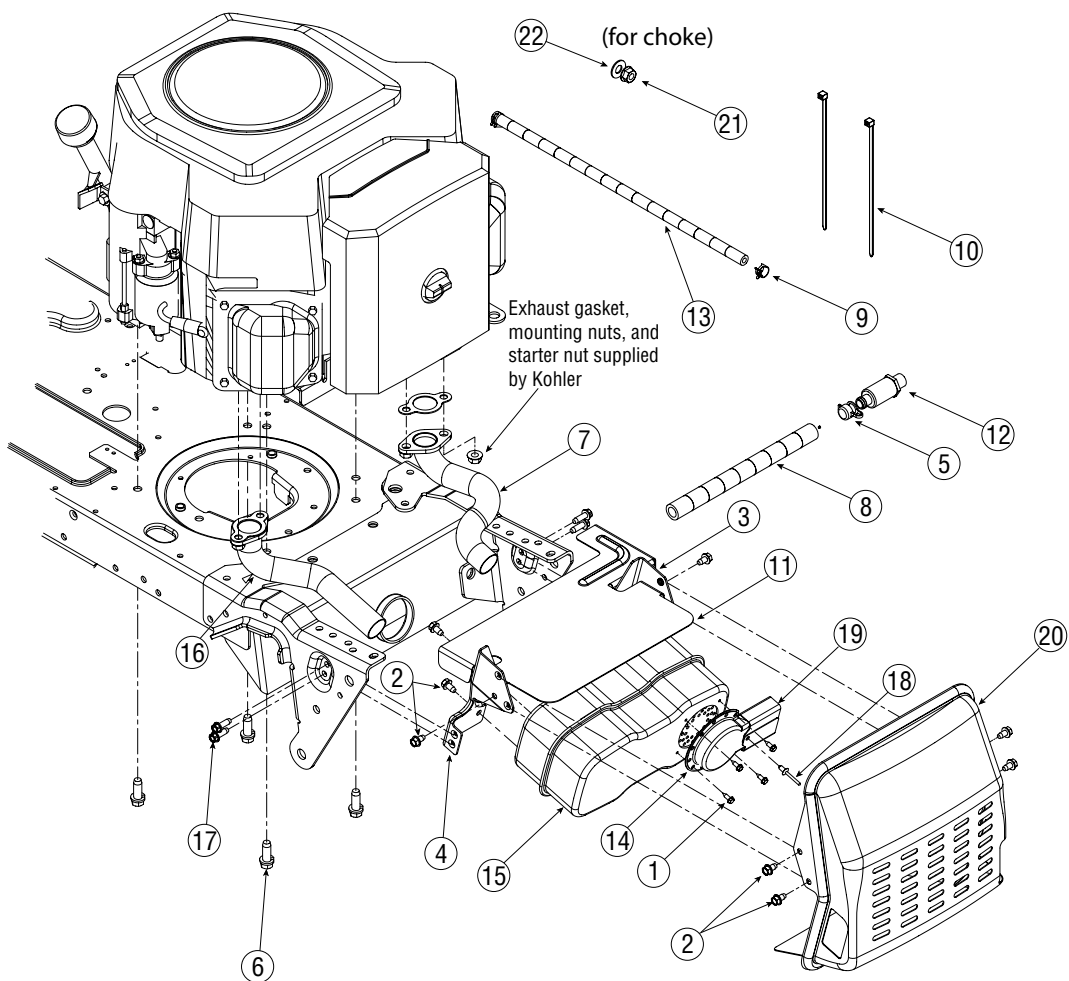

Ref. No.	Part No.	Description
1	710-0227	AB Screw #8-18 x 0.5
2	710-0599	TT Screw 1/4-20 x 0.5
3	783-04573	LH Muffler Bracket
4	783-04574	RH Muffler Bracket
5	751-3142	Oil Drain Cap
6	710-0654A	TT Screw 3/8-16 x 1.00
7	751-10007	Exhaust Pipe - LH
8	751-3141	Oil Drain Extension Hose
9	726-0205	Hose Clamp
10	725-0157	Cable Tie
11	783-04783	Twin Heat Shield


Ref. No.	Part No.	Description
12	751-3140	Oil Drain Valve
13	751-10349	Fuel Line Hose
14	751-0564B	Muffler Deflector
15	751-10161	Muffler
16	751-10006	Exhaust Pipe - RH
17	710-0642	Screw, 1/4-20, x .750
18	728-04000	Pop Rivet
19	751-10353	Long Muffler Deflector
20	683-04256	Muffler Shield
21	712-3005	Flange Lock Nut, 3/8-16
22	736-0300	Flat Washer, .406 x .875 x .059

Model 60TP

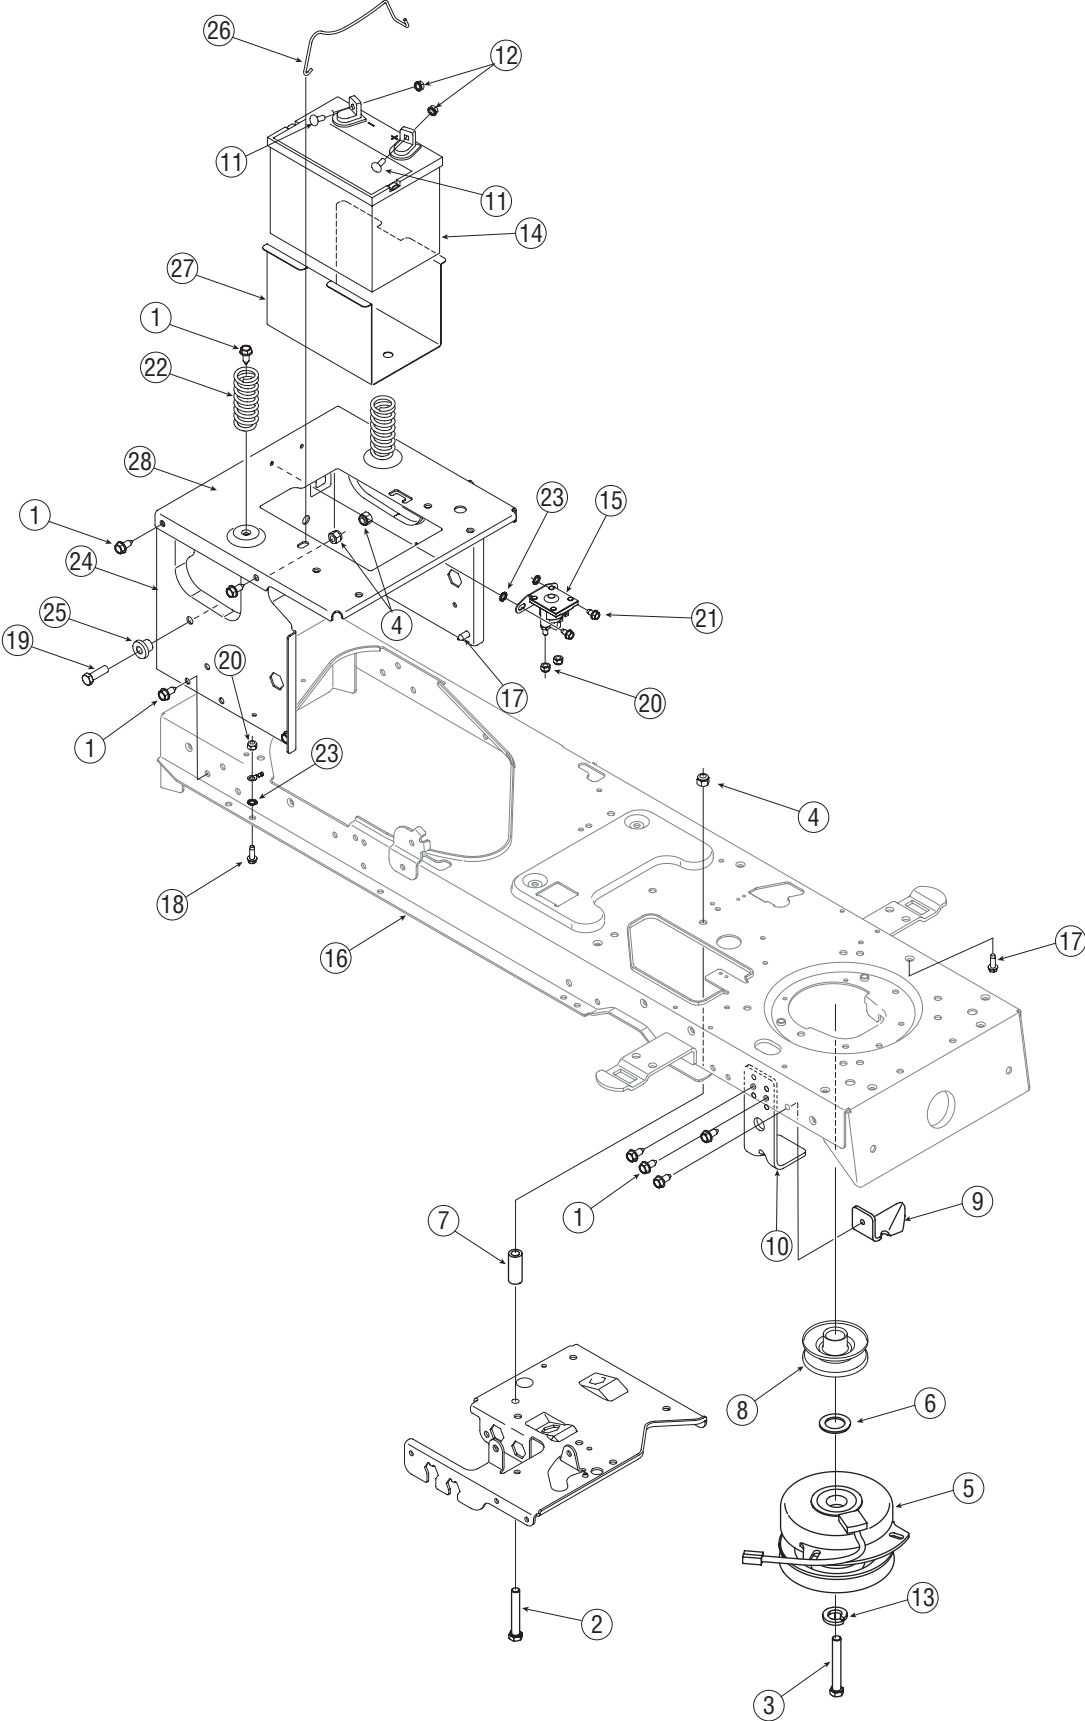

Ref. No.	Part No.	Description
1	710-0726	Screw, 5/16-12, 0.75
2	710-0859	Screw, 3/8-16, 2.50, Gr5
3	710-04379A	Screw, 7/16-20, 3.50, Gr5, Lock
4	712-04065	Nut, Flange Lock, 3/8-16, GrF
5	717-04174	PTO Clutch, Electric
6	736-0277	Washer, Flat, 1.031 x 1.620 x.095
7	748-0415B	Spacer,.385 ID x.635 OD x 1.54
8	756-0639A	Pulley, Engine, 3.56 Diameter
9	783-04419B	Clutch Bracket
10	783-04467	Deck Bracket, Up-Stop
11	710-0703	Screw, Carriage, 1/4-20,.75, Gr5
12	712-0271	Nut, Sems, 1/4-20
13	736-0171	Lock Washer, 7/16
14	725-1750A	Battery, 235 CCA
15	725-1426A	Solenoid, 12V, 100 Amp
16	683-04173	Frame Assembly, Lower
17	710-0607	Screw, 5/16-18, 0.500
18	710-0642	Screw, 1/4-20, 0.750
19	710-3005	Screw, 3/8-16, 1.25, Gr5
20	712-04064	Nut, Flange Lock, 1/4-20, GrF
21	710-0599	Screw, 1/4-20, 0.50
22	732-04035	Spring, Compr., 1.28 OD x 3.125
23	736-0222	Washer, Lock, 1/4, External
24	783-04809	Frame, Upper
25	738-04058	Spacer, Shoulder,.38 x 1.0 x.70
26	747-04121A	Hold Rod, Battery
27	783-0349	Battery Tray
28	783-04329A	Seat Bracket, Frame

Model 60TP

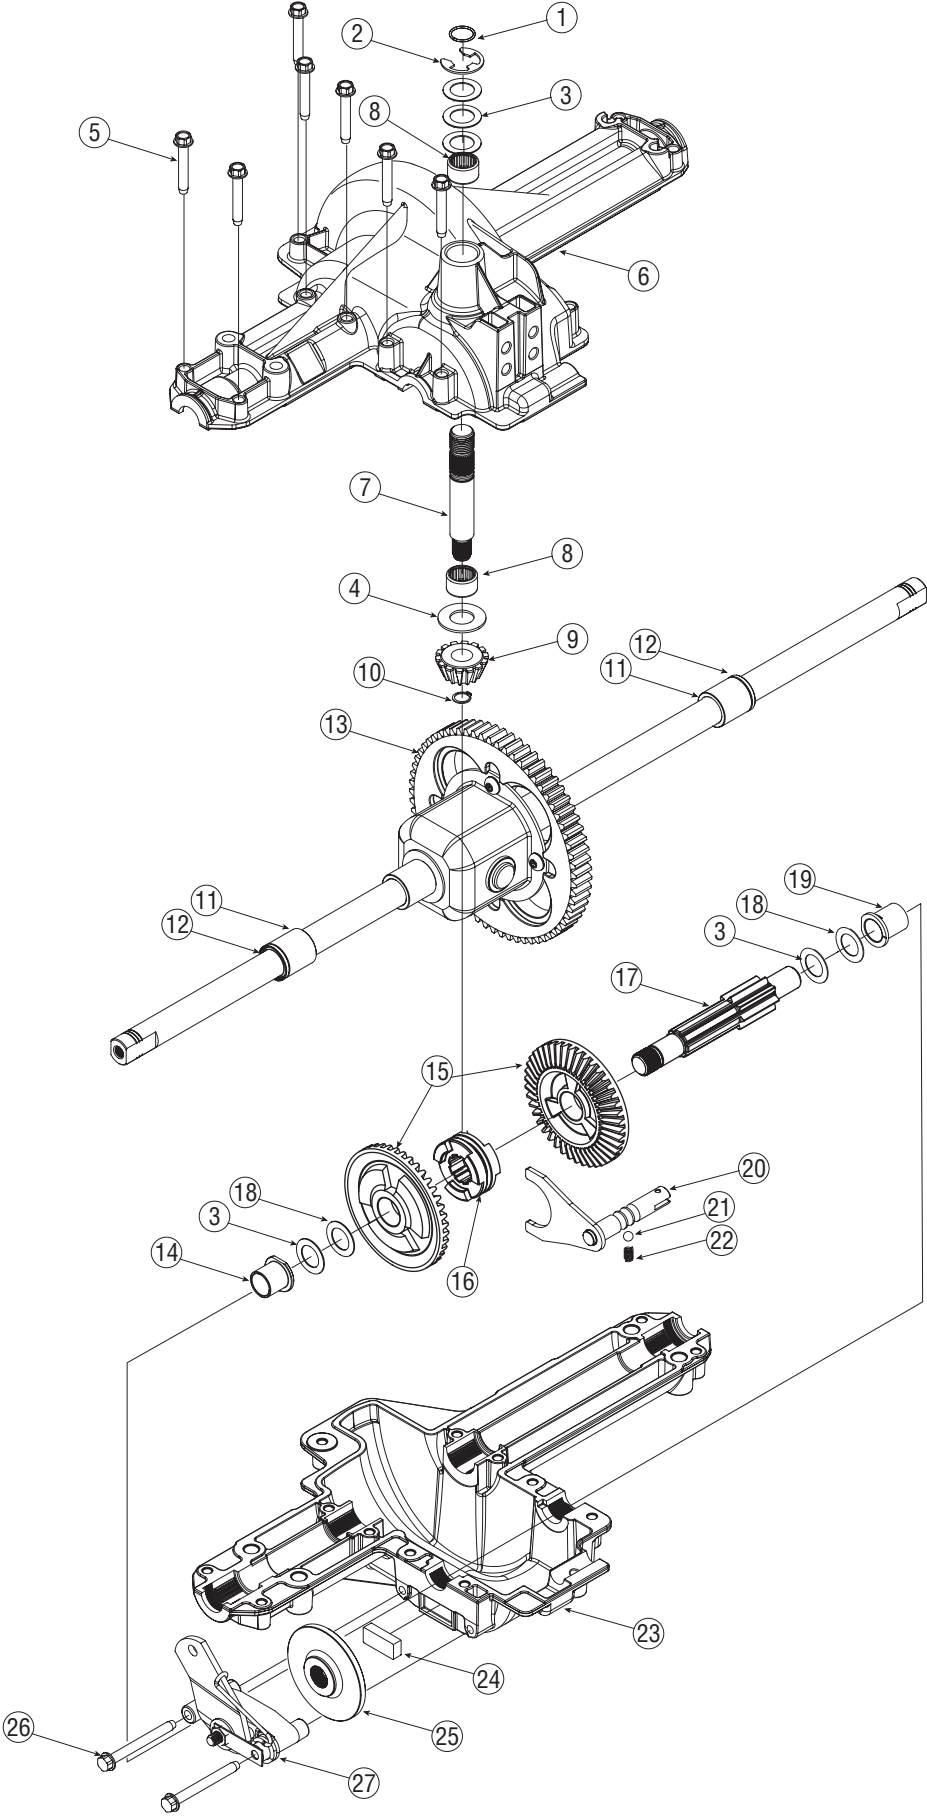

Ref. No.	Part No.	Description
1	732-0614	Ring, Wire
2	716-0231	Ring, E Type,.750
3	736-0336*	Flat Washer, 5/8 x 1.0 x.030
	736-0337*	Flat Washer, 5/8 x 1.0 x.040
	736-0349*	Flat Washer, 5/8 x 1.0 x.020
4	736-0335	Washer, Thrust.635 x 1.26 x.06
5	710-1325	Self-tapping Screw, 1/4-20 x 1.625
6	719-04017	Upper Housing
7	711-1109	Input Shaft
8	741-0335	Needle Bearing,.625 x.813 x.495
9	717-1464	14-tooth Bevel Pinion
10	716-0108	Retaining Ring,.437
11	741-0340	Sleeve Bearing,.75 x1.0 x 1.0
12	721-0338	Seal,.75 x 1.0 x.125
13	618-04041	Differential Assembly
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	717-04056	42-tooth Bevel Gear
16	718-04045	Clutch Collar
17	711-04134	Drive Shaft
18	736-0495*	Thrust Washer, 1.0 x.632 x.0
	736-0494*	Flat Washer,.632 x 1.00 x.035
19	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
20	611-0011	Detent Shaft Assembly
21	741-0862	Detent Ball
22	732-0863	Compression Spring
23	719-04018	Lower Housing
24	717-0678	Brake Puck
25	761-0202	Brake Disc
26	710-1206	Self-tapping Screw, 1/4-20 x 2.375
27	661-0001	Brake Assembly
—	737-0148	Grease (19 oz.)

* Use applicable flat washer (ref. #'s 3 or 18) in this application allowing .0150/.0020 in. end-play

NOTE: If rebuilding the upper housing, include two ounces (2 oz.) of Unirex® N3 grease (Part No. 737-0289) in the input shaft cavity.

Model 60TP

