



SECTION 9: PARTS LIST FOR LT-1855H

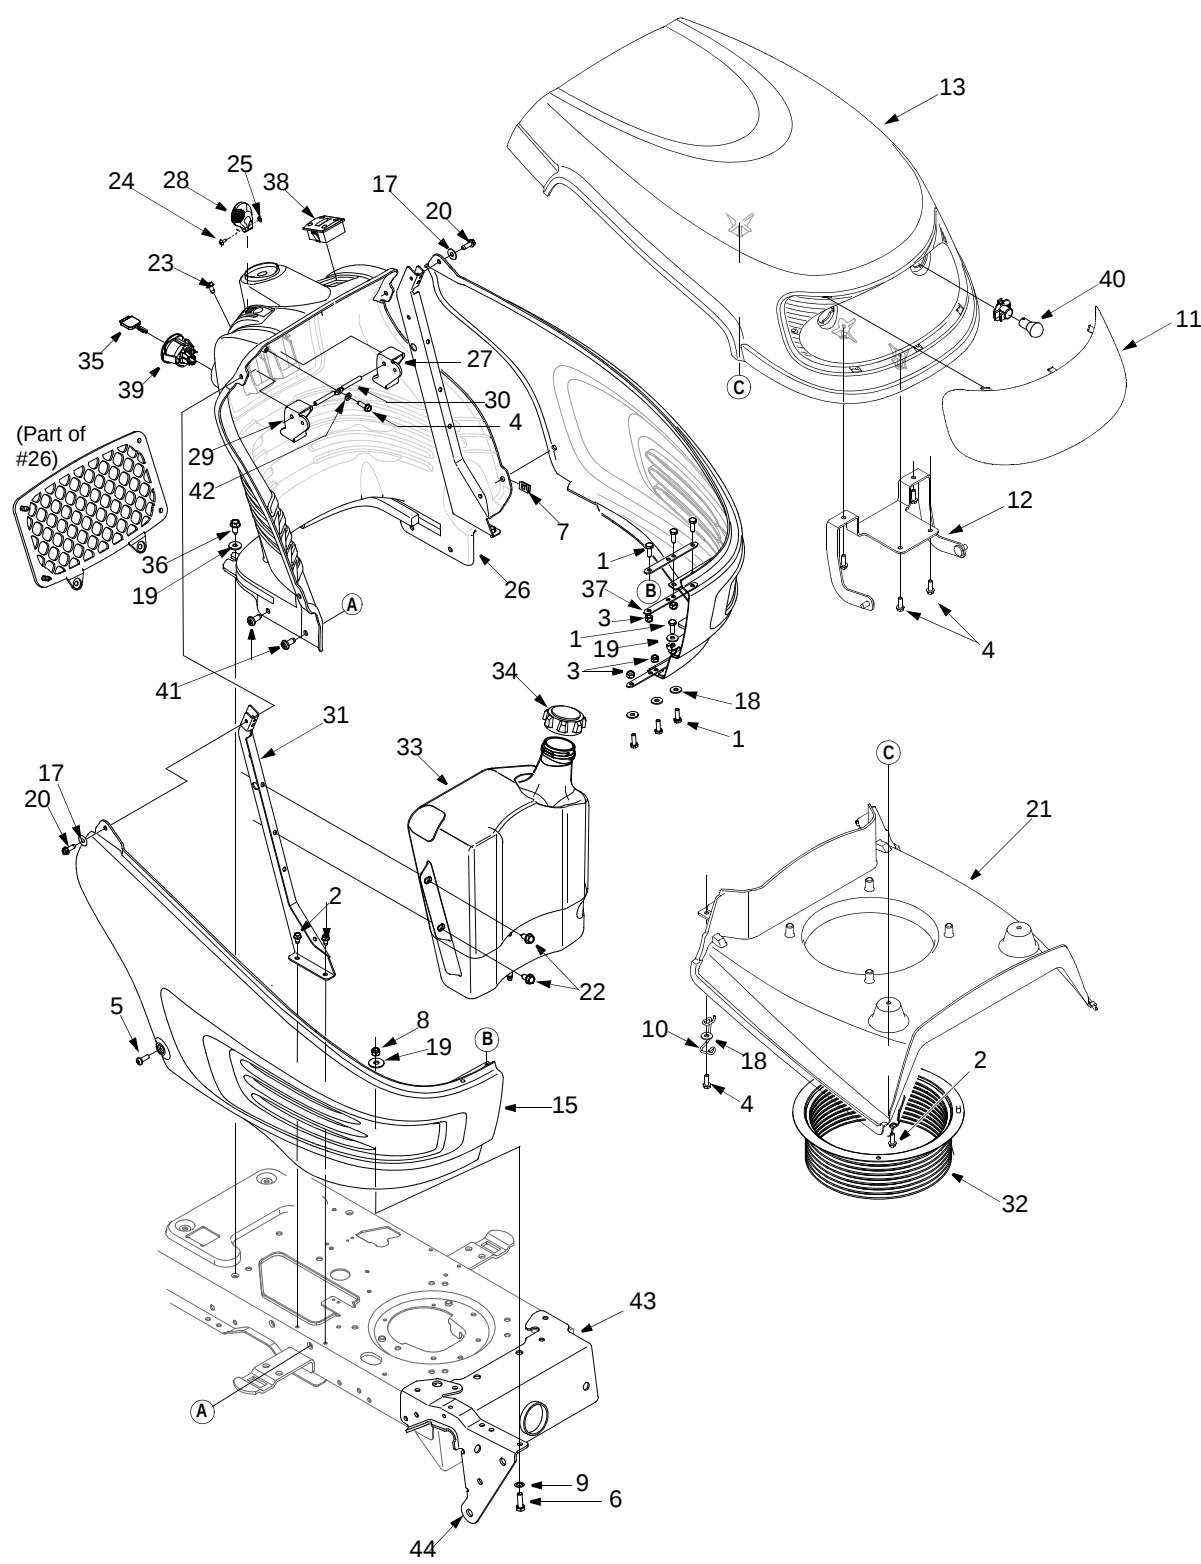

Model LT-1855H

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-3015	Hex Cap Screw, 1/4-20 x .75	26	631-04035A	Dash Panel, 4-style w/ Cargo Net
2	710-0599	Self-tapping Screw, 1/4-20 x .5	27	731-04214	Parking Brake Button
3	712-0324	Lock Nut, 1/4-20	28	731-1857	Throttle Control Lever
4	710-0895	Self-tapping Screw, 1/4-15 x .75	29	731-04213	Cruise Control Button
5	710-0924	Pan Phillips Screw, 1/4-20 x .75	30	747-1155	Brake/Cruise Pivot Rod
6	710-0376	Hex Cap Screw, 5/16-18 x 1.0	31	783-04285	Dash Support Plate RH
7	712-0292	U-type Speed Nut, 1/4-20		783-04323	Dash Support Plate LH
8	712-0429	Lock Nut, 5/16-18	32	731-2232	Intake Bellow
9	726-0201	Speed Nut	33	751-0659C	Fuel Tank, 2-gallon
10	747-2127	Hood Latch Rod	34	751-0603	Fuel Cap
11	731-2286	Head Light Lens	35	725-1745	Ignition Key w/ plastic cover
12	683-0305	Hood Bracket Assembly		725-1744	Ignition Key w/o plastic cover
13	731-2283A	Hood	36	710-0726	Self-tapping Screw, 5/16-18 x .75
14	731-2327A	LH Side Panel	37	783-1000A	Grille Support Bracket
15	731-2328A	RH Side Panel	38	725-04036	Systems Indicator Monitor
16	736-0329	Lock Washer, 1/4	39	725-1741	Ignition Switch
17	736-0342	Flat Washer, .283 x .75 x .030	40	625-0051	Headlight Assembly
18	736-0173	Flat Washer, .28 x .74 x .063	41	710-1611B	Self-tapping Screw, 5/16-18 x .75
19	736-3078	Flat Washer, .349 x 1.0 x .063	42	736-0142	Flat Washer
20	710-0809	Self-Tapping Screw, 1/4-20 x 1.25	43	783-0728	Pivot Bar Bracket
21	731-2284	Hood Plenum w/o Intake Bellow	44	783-0726B	Pivot Bracket Support RH
22	710-0604A	Self-Tapping Screw, 5/16-18 x .625		783-0727A	Pivot Bracket Support LH (not shown)
23	710-1017	Torx Self-Tapping Screw, 1/4-14 x .625	—	629-04083	Headlight Wire Harness
24	710-3217	Torx Screw, #8-32 x .375	—	629-1071	Tractor Wire Harness
25	712-0142	Hex Nut, 8-32			


Model LT-1855H

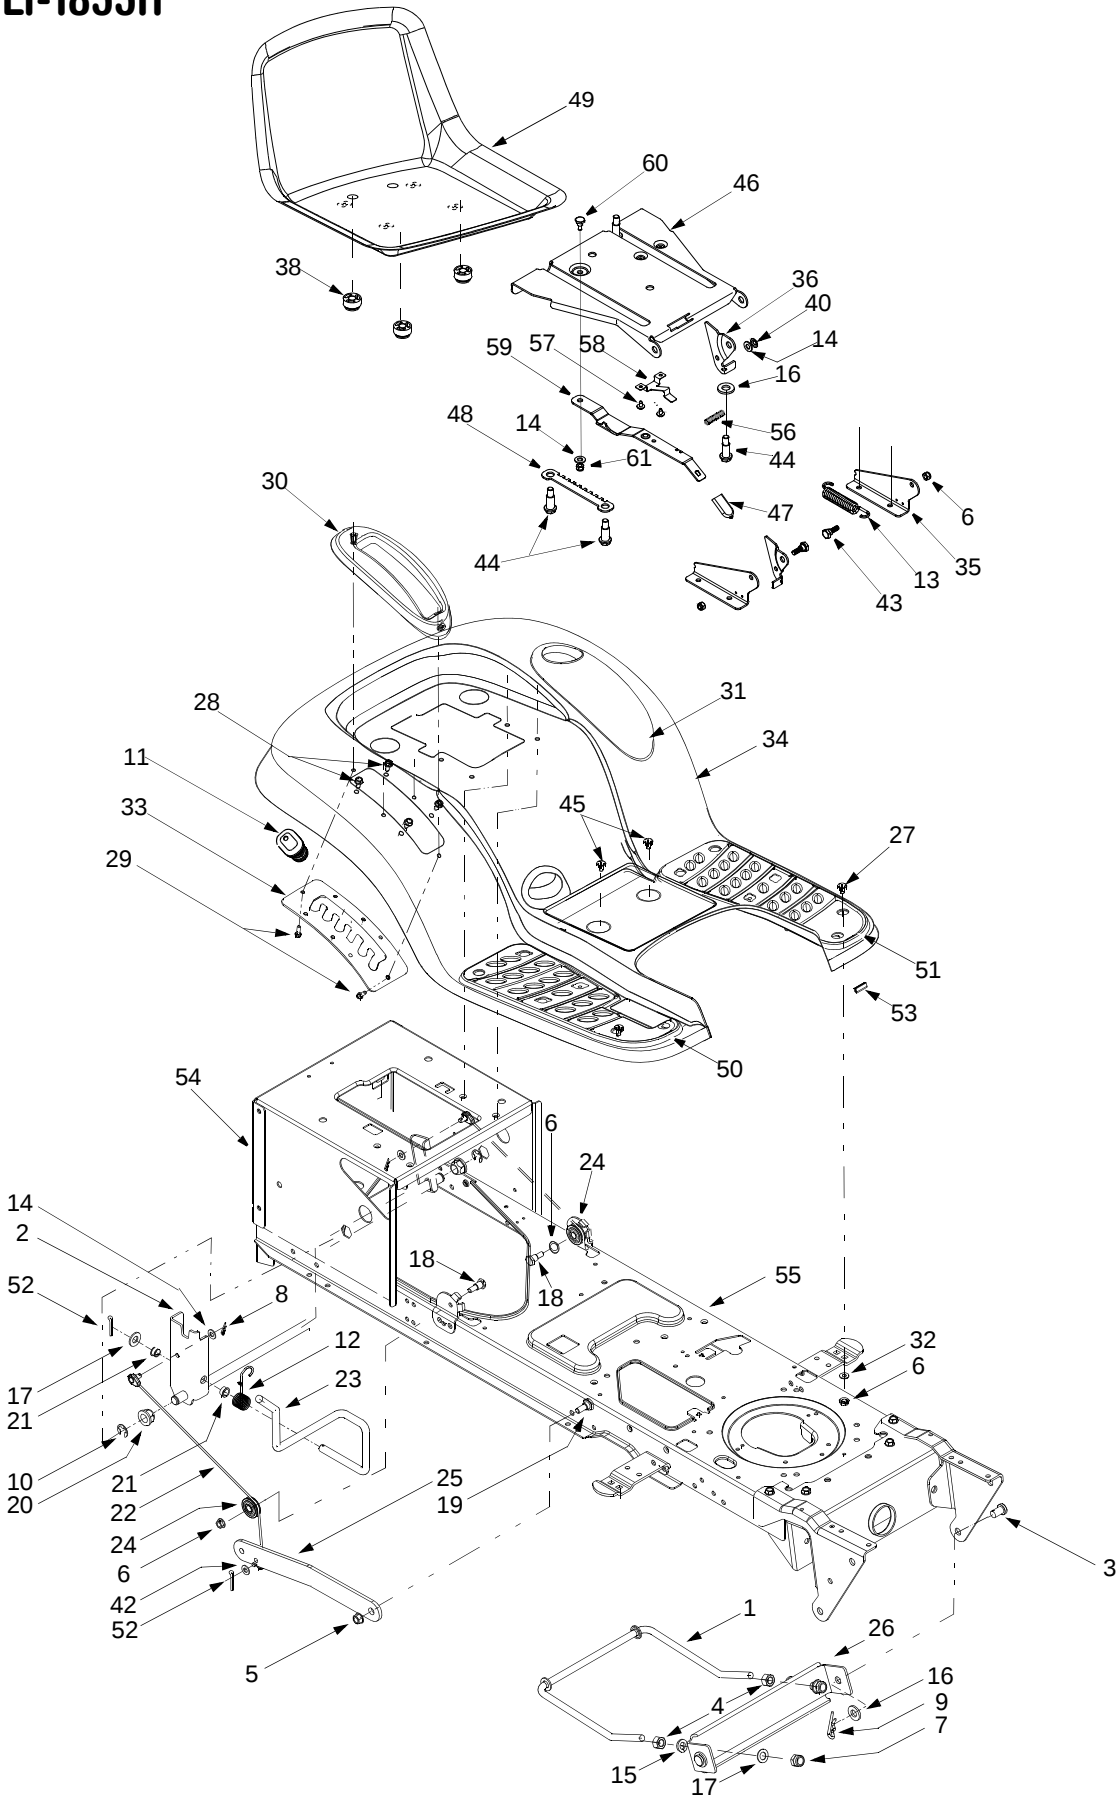

Model LT-1855H

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	747-1130B	Deck Stabilizer Rod	32	736-3078	Flat Washer, .349 x 1.0 x .063
2	683-0197B	Lift Shaft Assembly	33	783-0677	Lift Adjustment Bracket
3	711-0332	Clevis Pin, .5 x .78	34	783-04333	Fender
4	712-3083	Lock Nut, 1/2-13	35	783-1489	Seat Mounting Bracket
5	712-0130	Lock Nut, 3/8-16	36	783-0209C	Lift Bracket: Seat
6	712-0429	Lock Nut, 5/16-18	37	712-3027	Hex Flange Lock Nut, 1/4-20
7	712-3083	Hex Nut, 1/2-13	38	731-04074	Spacer
8	714-0104	Internal Cotter Pin	39	738-04012	Shoulder Screw 3/8-16
9	714-04023	Internal Cotter Pin	40	726-0201	Speed Nut
10	716-0106A	E-Ring	41	736-0175	Spring Washer, .265 x .562 x .025
11	720-0311	Handle Grip: Deck Lift Lever	42	736-0204	Flat Washer, .344 x .62 x .03
12	732-0874	Torsion Spring	43	738-0296	Shoulder Screw
13	732-1184	Extension Spring	44	738-0966	Shoulder Screw, .50 x .925, 3/8-16
14	736-0275	Flat Washer, 5/16	45	710-0599	Self-Tapping Screw 1/4-20 x 0.5"
15	736-0921	Lock Washer, 1/2	46	783-0738A	Seat Pivot Bracket
16	736-3019	Flat Washer, .31 x 1.062 x .134	47	720-0309A	Adjustment Grip: Seat
17	736-3084	Flat Washer, .51 x 1.12 x .06	48	783-0753	Seat Adjustment Selector
18	738-0138A	Hex Cap Screw, 5/16-18 x .62	49	757-04014A	Medium Back Seat, Black
19	738-0143	Shoulder Screw, 3/8-16	50	735-0656	RH Foot Pad
20	741-0225	Hex Flange Bearing	51	735-0657	LH Foot Pad
21	741-0715	Snap Flange Bearing		726-3046	Foot Pad Clips (Not Shown)
22	746-0968	Lift Cable, 16.16	52	714-0111	Cotter Pin
23	747-1111A	Lift Handle	53	731-0511	Trim Strip
24	756-1154	Roller Pulley	54	783-1031A	Hitch Plate
25	783-0678A	Arm Lift	55	683-0304C	Lower Frame Assembly
26	783-0720A	Deck Stabilizer Bracket	56	732-0499	Compression Spring
27	710-0260A	Carriage Bolt, 5/16 x .62	57	710-1268	B Screw #10-16
28	710-0604A	Self-Tapping Screw, 5/16-18 x .625	58	783-0611	Seat Stop
29	710-0895	Self-Tapping Screw, 1/4-15 x .75	59	783-0739	Seat Adj. Lever
30	731-1990	Lift Lever Cover	60	738-0137A	Shoulder Screw
31	731-1993	Cover w/ Cup Holder	61	712-0324	Lock Nut


Model LT-1855H

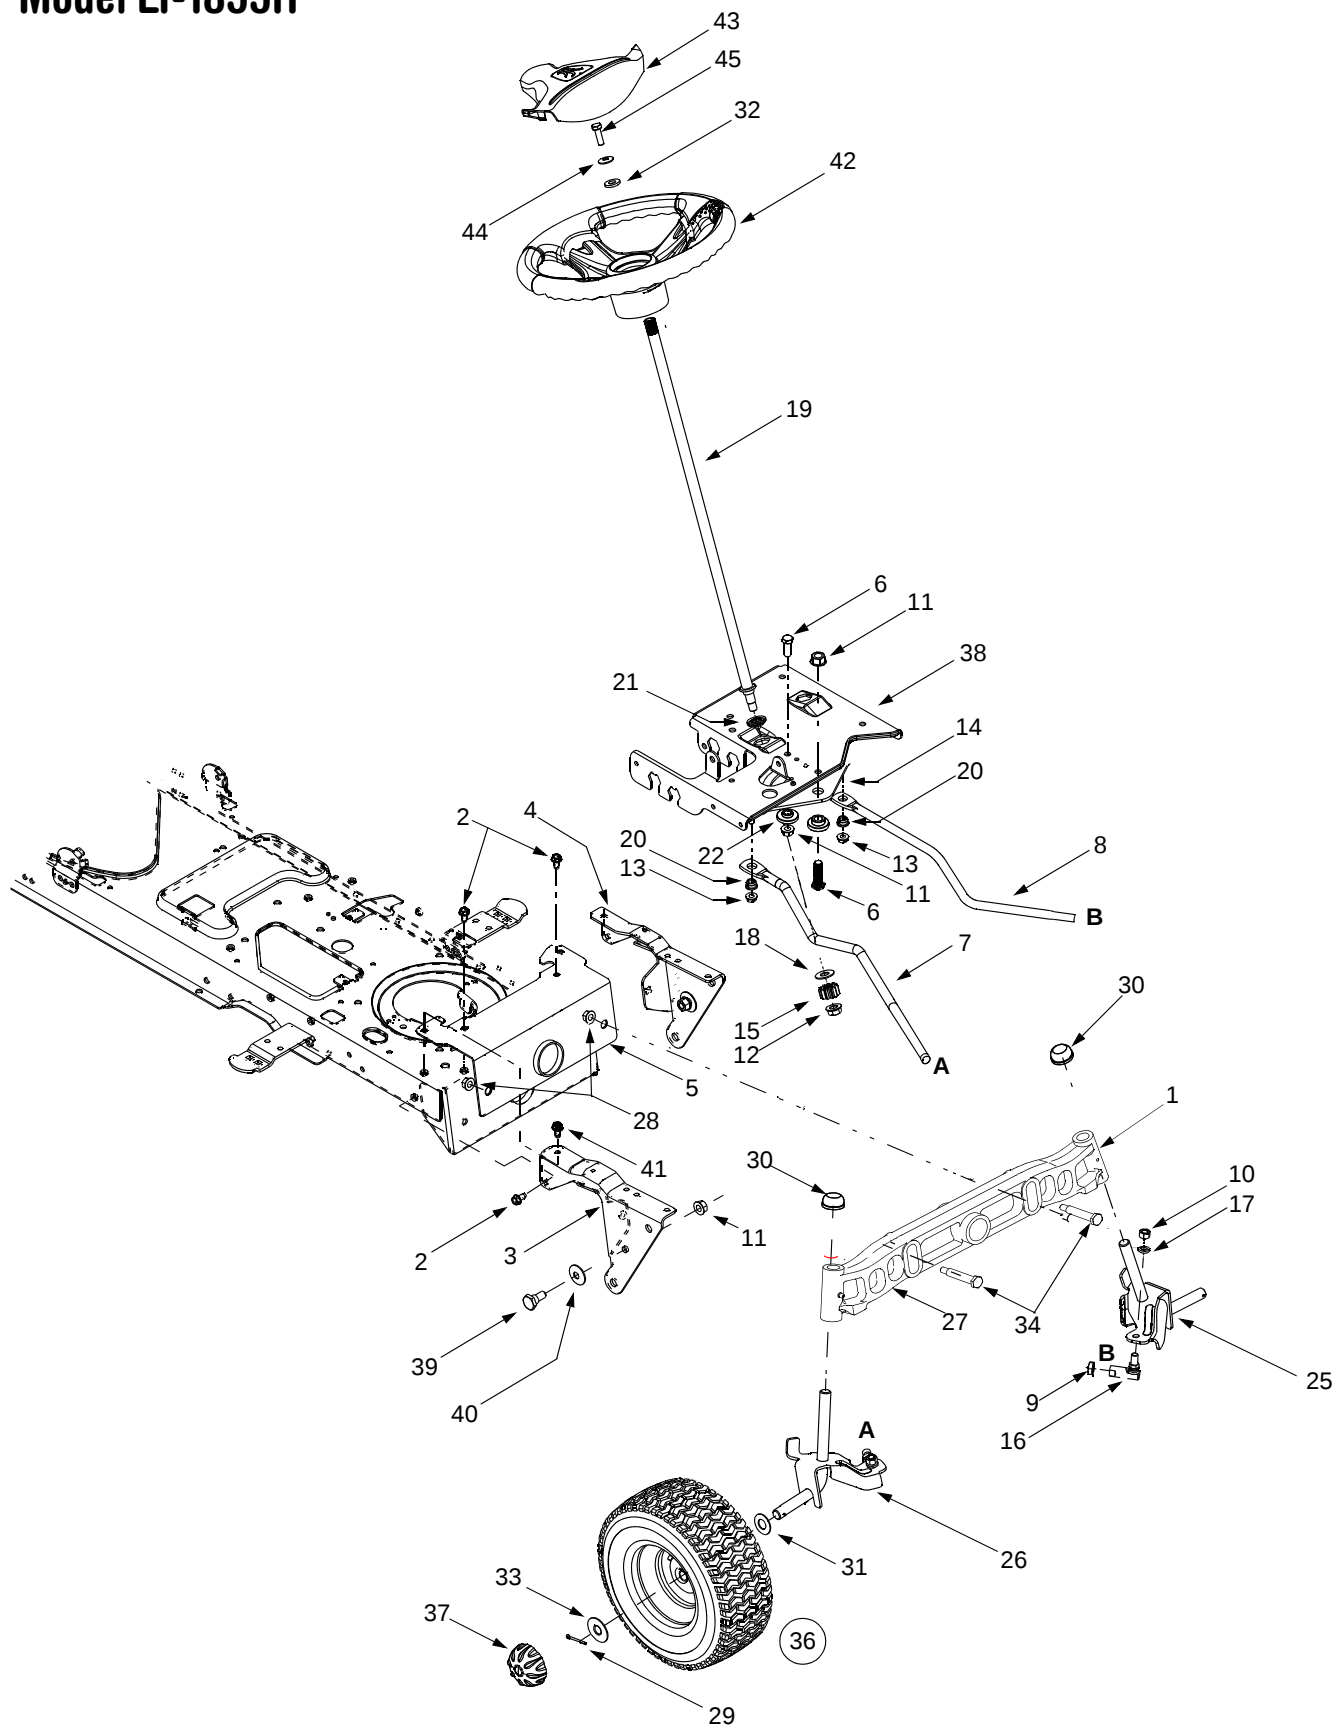

Model LT-1855H

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	719-0525C	Pivot Bar: Axle	26	683-04004	RH Axle Assembly, .750 Diameter
2	710-0604A	Self-tapping Screw, 16-18 x .625	27	719-0525C	Steel Pivot Bar
3	783-0726B	RH Pivot Support Bracket	28	712-0130	Lock Nut, 3/8-16
4	783-0727A	LH Pivot Support Bracket	29	714-0162	Cotter Pin
5	783-0728	Pivot Bar Bracket	30	726-0214	Push Cap, .625
6	710-0723	Hex Cap Screw, 3/8-16 x 1.25 (Grade 5)	31	736-0316	Flat Washer, .64 x 1.0 x .12
7	711-1408	RH Drag Link	32	736-3004	Flat Washer, .406 x .875 x .105
8	711-1409A	LH Drag Link	33	736-0285	Flat Washer, .635 x 1.589 x .06
9	712-0240	Jam Nut, 7/16-20	34	738-1011	Shoulder Screw, .5 x 2.2, 3/8-16
10	712-0214	Hex Nut, 3/8-24	36	634-04099	Wheel Assembly
11	712-0130	Lock Nut, 3/8-16	—	634-04091	Rim Assembly Only
12	712-0459	Flange Lock Nut, 7/16-20	—	734-0255	Air Valve (Not Shown)
13	712-0429	Lock Nut, 5/16-18	—	734-1731	Tire Only, Square Shoulder
14	717-1550E	Steering Gear, 11/90 Ratio	—	737-0224	Grease Fitting (Not Shown)
15	717-1554	Steering Pinion Gear	—	741-3032	Ball Bearing (Not Shown)
16	723-0448A	Ball Joint, 7/16-20	37	734-2290A	Deluxe Hub Cap
18	736-3084	Flat Washer, .51 x 1.12 x .06	38	783-0653F	Steering Support Bracket
19	738-1001A	Steering Shaft, .625 OD x 24.4	39	738-0143	Shoulder Screw, 3/8-16
20	741-0475	Plastic Bushing, .38 ID	40	736-0331	Bell Washer, .39 x 1.13 x .062
21	741-0656	Hex Flange Bearing, 5/8	41	710-1260A	Self-tapping Screw, 5/16-18 x .75
22	738-0372B	Shoulder Spacer, .38 ID	42	631-04008	Steering Wheel, Soft Grip, Three Spoke
23	631-0027	Standard Steering Wheel, 13.25	43	731-04065	Steering Wheel Cap, Round
24	731-0220	Steering Wheel Cap, Round	45	710-0643	Hex Bolt, 5/16-18 X 1
25	683-04003	LH Axle Assembly, .750 Diameter			

Model LT-1855H

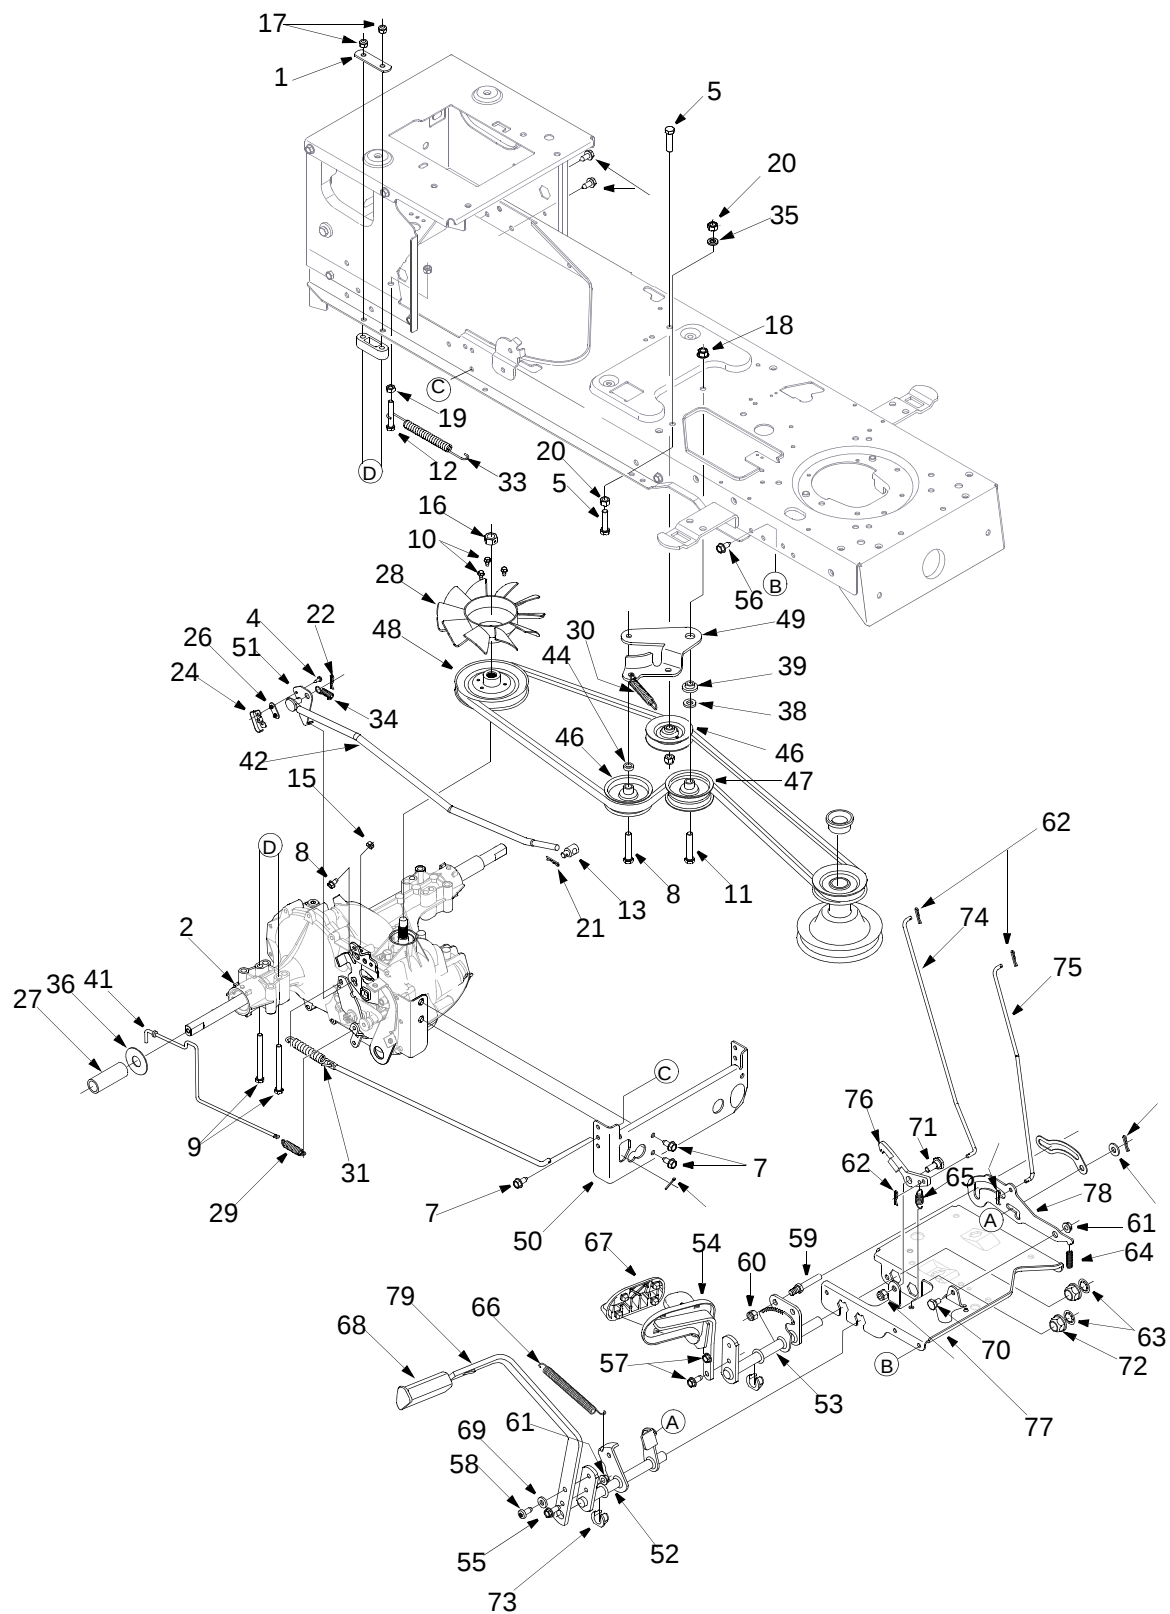

Model LT-1855H

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	17840	Mounting Bracket: Transaxle	41	747-1149	Bypass Rod
2	618-0319	Transmission: Hydrostatic	42	747-1151	Control Rod
3	629-0949A	Harness Assembly	43	748-0334	Spacer: Transaxle
4	710-0227	AB Screw #8-18 x 0.5	44	750-0535	Spacer
5	710-0344	Hex Bolt 3/8-16 x 1.5	45	754-0349	V Belt
6	710-0599	TT Screw 1/4-20 x 0.5	46	756-0116	Idler Pulley
7	710-0726	AB Screw 5/16-12 x 0.75	47	756-0981A	Flat Idler Pulley
8	710-1007	TT Sems Screw 3/8-16 x 1.5	48	756-1166	Input Pulley
9	710-1266	Hex Bolt 5/16-18 x 3.5	49	783-04442	Idler Bracket: Center Double
10	710-3007	Carriage Screw	50	783-0810B	Torq Bracket
11	710-3011	Hex Bolt 3/8-16 x 2.25	51	783-1019	Bracket: Actuator
12	710-3103	Hex Bolt 5/16-18 x 2.0	52	647-0031C	Control Assembly: Brake
13	711-0832	Ferrule	53	647-0049A	Control Assembly: Hydrostatic
14	712-0130	Hex Lock Nut 3/8-16	54	683-0267C	Pedal Assembly
15	712-0291	Hex Lock Nut 1/4-20	55	710-0650	TT Screw 5/16-18 x 0.875
16	712-0333	Hex Nut 1/2-20	56	710-0726	AB Screw 5/16-12 x 0.75
17	712-0429	Hex Lock Nut 5/16-18	57	710-1260A	LD Screw 5/16-18 x 0.75
18	712-0431	Flanged Lock Nut 3/8-16	58	710-1611B	TT Screw 5/16-18 x 0.75
19	712-3010	Hex Nut 5/16-18	59	711-04159	Pin
20	712-3017	Hex Nut 3/8-16	60	712-0130	Hex Lock Nut
21	714-0104	Cotter Pin	61	712-3004A	Flange Lock Nut 5/16-18
22	714-0111	Cotter Pin	62	714-0104	Cotter Pin
23	725-0157	Cable Tie (not shown)	63	726-04028	Push Nut
24	725-1644	Switch	64	732-0335	Compression Spring
25	726-0154	Cable Tie (not shown)	65	732-0955	Extension Spring
26	726-0320	Plate: Insulator Nut	66	732-0963	Extension Spring
27	731-04682	Sleve: 0.758 x 0.821 x 1.5	67	735-0662	Control Pedal
28	731-1449A	Fan: Blade	68	735-3049	Brake Control Pedal
29	732-0209	Extension Spring	69	736-3008	Flat Washer
30	732-0429A	Extension Spring	70	738-0155	Shoulder Screw
31	732-0716	Extension Spring	71	738-0380	Shoulder Screw
32	732-0729	Wire Ring	72	741-0225	Hex Flange Bearing
33	732-0994	Extension Spring	73	741-3065B	Hex Flange Bearing
34	732-3118	Extension Spring	74	747-04093	Control Rod: Brake Lock
35	736-0169	Lock Washer	75	747-04096	Cruise Control Rod
36	736-0866	Flat Washer	76	748-04039A	Cruise Latch
37	736-0921	Lock Washer	77	783-0653F	Support Bracket: Steering
38	736-3010	Flat Washer	78	783-0663D	Lockout Bracket
39	738-0372B	Shoulder Spacer	79	783-0773A	Brake Pedal
40	747-04139	Brake Rod			


This exploded view diagram illustrates the assembly of a mechanical device, likely a pump or motor. The components are numbered as follows:

- 1**: Main housing or base plate.
- 2**: A bracket or support arm.
- 3**: A long, thin rod or shaft.
- 4**: A small pin or screw.
- 5**: A vertical rod or shaft.
- 6**: A small component, possibly a seal or gasket.
- 7**: A small pin or screw.
- 8**: A small component, possibly a seal or gasket.
- 9**: A small pin or screw.
- 10**: A small pin or screw.
- 11**: A small pin or screw.
- 12**: A small component, possibly a seal or gasket.
- 13**: A long, thin rod or shaft.
- 14**: A coiled spring.
- 15**: A small pin or screw.
- 16**: A small component, possibly a seal or gasket.
- 17**: A small pin or screw.
- 18**: A small pin or screw.
- 19**: A small pin or screw.
- 20**: A small pin or screw.
- 21**: A small pin or screw.
- 22**: A small pin or screw.
- 23**: A small pin or screw.
- 24**: A small pin or screw.
- 25**: A long, thin rod or shaft.
- 26**: A small component, possibly a seal or gasket.
- 27**: A small pin or screw.
- 28**: A small pin or screw.
- 29**: A small pin or screw.
- 30**: A small pin or screw.
- 31**: A small pin or screw.
- 32**: A small pin or screw.
- 33**: A small pin or screw.
- 34**: A small pin or screw.
- 35**: A small pin or screw.
- 36**: A small pin or screw.
- 37**: A small pin or screw.
- 38**: A small pin or screw.
- 39**: A small pin or screw.
- 40**: A small pin or screw.
- 41**: A small pin or screw.
- 42**: A small pin or screw.
- 43**: A small pin or screw.
- 44**: A small pin or screw.
- 45**: A small pin or screw.
- 46**: A small pin or screw.
- 47**: A small pin or screw.
- 48**: A small pin or screw.
- 49**: A small pin or screw.
- 50**: A small pin or screw.
- 51**: A small pin or screw.
- 52**: A small pin or screw.
- 53**: A small pin or screw.
- 54**: A small pin or screw.
- 55**: A small pin or screw.
- 56**: A small pin or screw.
- 57**: A small pin or screw.
- 58**: A small pin or screw.
- 59**: A small pin or screw.
- 60**: A small pin or screw.
- 61**: A small pin or screw.
- 62**: A small pin or screw.
- 63**: A small pin or screw.
- 64**: A small pin or screw.
- 65**: A small pin or screw.
- 66**: A small pin or screw.
- 67**: A small pin or screw.
- 68**: A small pin or screw.
- 69**: A small pin or screw.

Model LT-1855H


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	647-0064	PTO Engage Lever Assembly	36	736-0407	Bell Washer, .45 x 1.0 x .062
2	683-0450	PTO Engage Plate Assembly	37	712-0459	Flange Lock Nut, 7/16-20
3	710-0276	Carriage Screw, 5/16-18 x 1.00	38	783-04329	Seat Bracket: Frame
4	710-0520	Hex Cap Screw 3/8-16 x 1.5	39	783-0349	Battery Tray
5	710-0831	Hex Cap Screw, 3/8-16 x 5.5	40	725-1426	Solenoid, 12-Volt, 100 Amp
6	710-0726	AB Screw 5/16-12 x 0.75	41	710-0599	Self Tapping Screw, 1/4-20 x .5
7	712-0229	Push Nut, 3/8	42	736-0222	Lock Washer, 1/4
9	712-3004A	Flange Lock Nut, 5/16-18	43	683-0304C	Lower Frame Assembly
10	712-3010	Hex Nut, 5/16-18	44	725-1706A	12-volt Battery, 270 CCA
11	714-0470	Cotter Pin, 1/8 x 1.25	45	710-0751	Hex Cap Screw, 1/4-20 x .62
12	726-0201	Speed Nut, .3125	46	712-0271	Hex Sems Nut, 1/4-20
13	731-2111A	PTO Knob	47	712-3044	Wing Nut, 1/4-20
14	732-1170	Extension Spring, .75 x 6.75	48	732-1165	Extension Spring, .50 x 5.0
15	732-0991A	Belt Guard	49	710-3180	Hex Cap Screw, 5/16-18 x 1.75
17	736-0119	Lock Washer, 5/16	50	750-0596	Spacer Cup
18	736-0140	Flat Washer, .385 x .62 x .063	51	710-3029	Hex Head Cap Screw, 7/16-20 x 1.25
19	736-0275	Flat Washer, 5/16	52	736-0171	Lock Washer, 7/16
21	736-0242	Bell Washer	53	736-0322	Flat Washer, .450 x 1.25
22	736-3039	Flat Washer	54	756-0983B	Engine Pulley, 3.56 OD x 5.56
23	738-0372B	Shoulder Spacer, .380	55	754-0497	V Belt
24	741-0708	Hex Split Flange Bearing, .5	56	783-0653F	Steering Support Bracket
25	747-1112D	PTO Engage Handle	57	711-1044	Keeper Pin, 5/16 x 4.75
26	747-1286A	Belt Keeper Rod	58	725-1657A	Switch
27	748-0415A	Spacer, 3/8 x 1.54	59	17962	Switch Plate
28	756-0627B	Idler Pulley, 3.5	60	710-0224	Screw, #10-16 x .5
29	750-0956	Spacer	61	732-1013	Belt Guard
30	783-0744A	Engagement Stop	63	747-04121A	Battery Hold-Down Rod
31	783-0891B	Deck Stop	66	756-1208	Idler Pulley
32	710-0604A	Self Tapping Screw, 5/16-18 x .625	67	712-0130	Hex Lock Nut 3/8-16
33	732-04035	Compression Spring, 1.28 x 3.125	68	710-0642	TT Screw 1/4-20 x 0.75
34	712-0324	Lock Nut 1/4-20	69	738-0143	Shoulder Screw
35	738-1020	Shoulder Screw, .625 x .5, 7/16-20			

Model LT-1855H

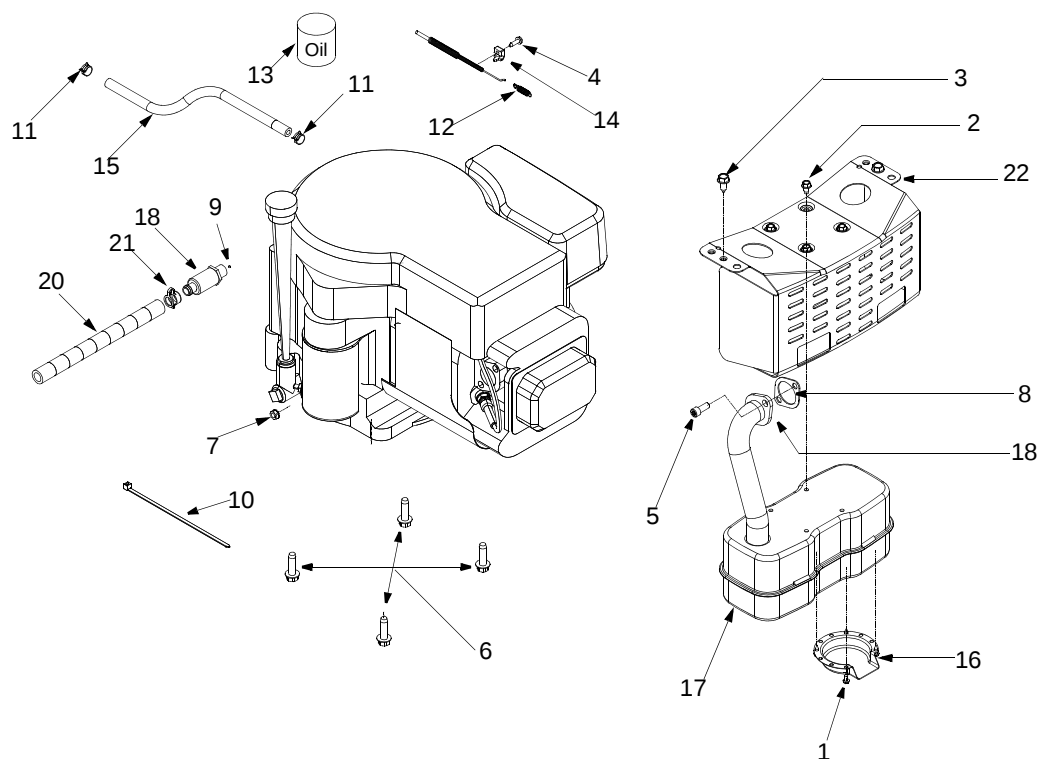


Ref. No.	Part No.	Description
1	710-0227	AB Screw #8-18 x 0.5
2	710-0599	TT Screw 1/4-20 x 0.5
3	710-0726	AB Screw 5/16-12 x 0.5
4	710-1237	T screw #10-32 x 0.625
5	710-1314A	Socket Head Screw 5/16-18 x .750
6	710-1315	TT Screw 3/8-16 x 1.25
7	712-0271	Sems Nut
8	721-0208	Exhaust Gasket
9	721-0331	Sealant: Loctite™
10	725-0157	Cable Tie
11	726-0205	Hose Clamp
12	732-0966	Extension Spring
13	737-0169	SAE 30W Oil
14	751B213146	Throttle Clamp
15	751-0535	Fuel Line Hose
16	751-0564A	Muffler Deflector
17	751-0617A	Muffler
18	751-0619A	Exhaust Pipe
19	751-3140	Oil Drain
20	751-3141	Oil Drain Hose extension
21	751-3142	Oil Drain Cap
22	783-0615C	Muffler Bracket

Model LT-1855H

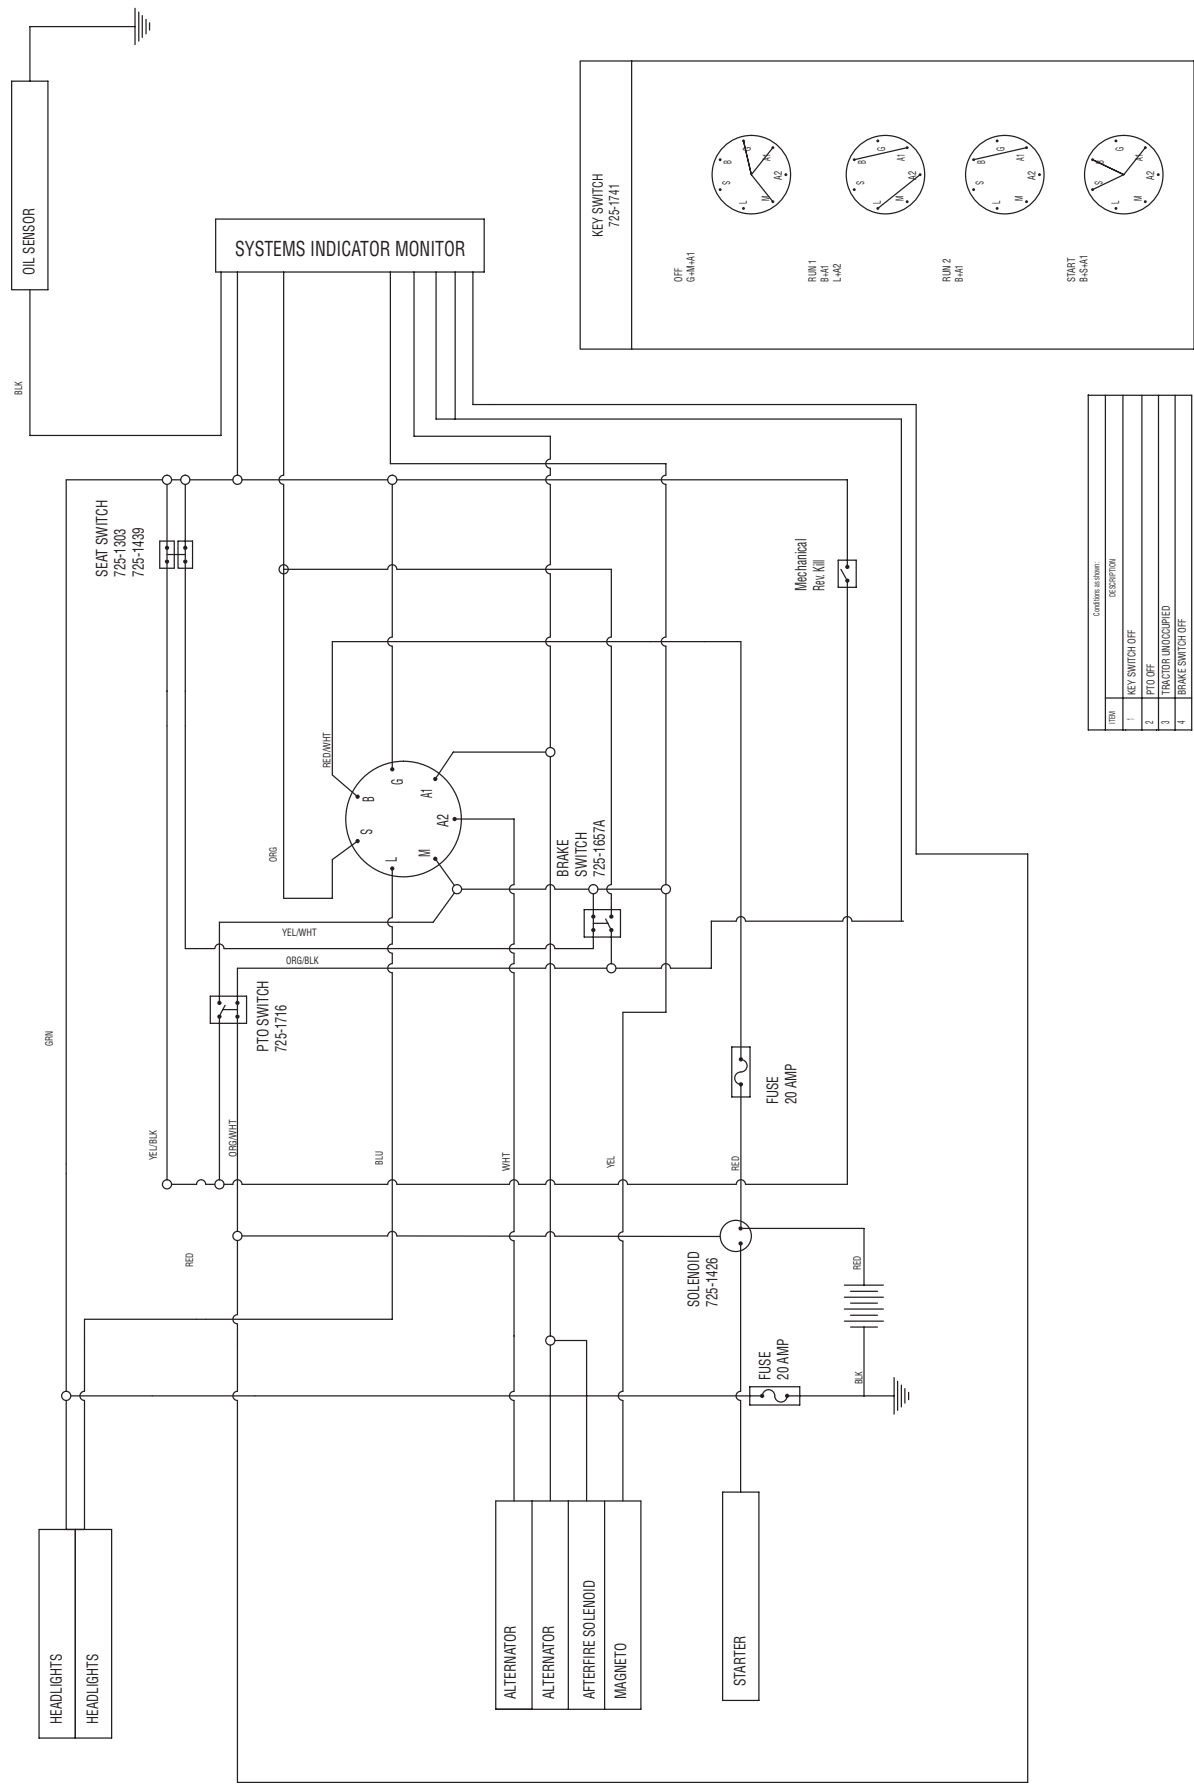

Model LT-1855H

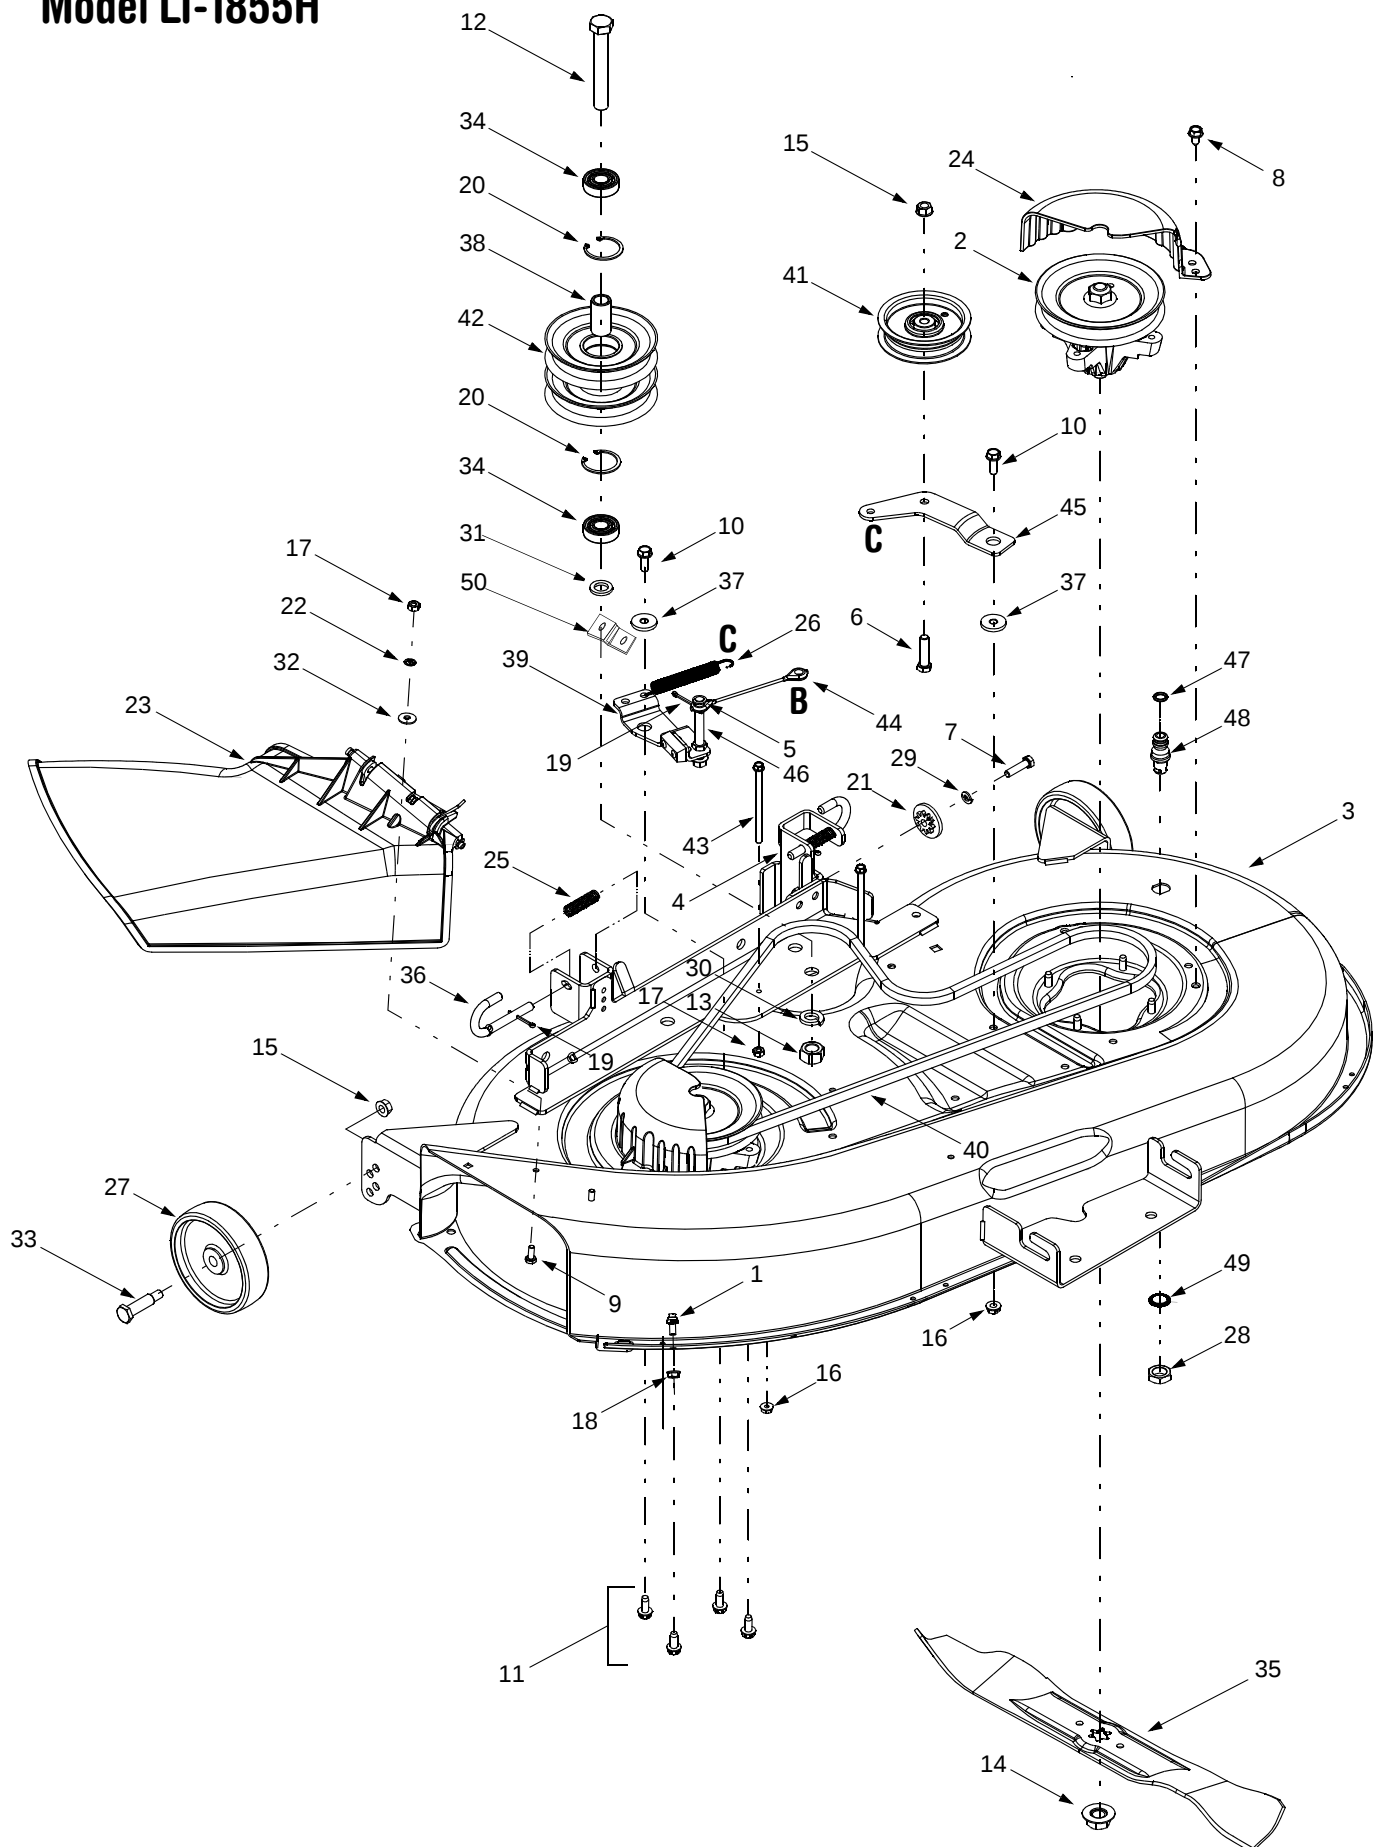

Model LT-1855H

Ref. No.	Part No.	Description
1	711-04069	Grass Catcher Pin, 1/4-20
2	618-0574	Spindle Assembly, 5.75 Dia. w/ Fitting
	756-0980	Pulley Only
3	683-04051A	42-inch Deck Shell
4	683-0254	Deck Adjustment Bracket w/ Weld Nut
5	736-0140	Flat Washer, .385 x .62 x .063
6	710-0520	Hex Cap Screw, 1/4-20 x 1.5
7	710-0528	Hex Cap Screw, 5/16-18 x 1.25
8	710-0726	Self-Tapping Screw, 5/16-12 x .75
9	710-0751	Hex Cap Screw, 1/4-20 x .62
10	710-1238	Hex Head Washer Screw, 5/16-18 x .875
11	710-0650	Self-Tapping Screw, 5/16-18 x .875
12	710-3151	Hex Cap Screw, 5/8-18 x .875
13	712-0337	Hex Nut, 5/8-18
14	712-0417A	Hex Flange Nut, 5/8-18
15	712-0431	Flange Nut, 3/8-16
16	712-0429	Lock Nut, 5/16-18
17	712-3006	Hex Nut, 1/4-20
18	712-0324	Hex Lock Nut, 1/4-20
19	714-0470	Cotter Pin, 1/8 x 1.25
20	716-3020	Internal Snap Ring
21	717-04074	Deck Adjustment Gear
22	726-0233	Push Nut, .25 x .5
23	731-1032B	Side Discharge Chute Assembly
24	731-2486	Belt Cover
25	732-0306A	Compression Spring, .406 x .531 x 1.75
26	732-0470A	Extension Spring, .50 x 4.74
27	734-0973	Deck Wheel, 5 x 1.38
28	712-0641	Hex Nut, M-16 x 1.5
29	736-0119	Lock Washer, 5/16
30	736-0158	Lock Washer, 5/8
31	736-0162	Flat Washer, .64 x 1.0 x .12
32	736-0270	Bell Washer, .265 x .75 x .062
33	738-0373	Shoulder Screw, .498 x 1.53
34	741-0524	Bearing, .625 x 1.574 x .470
35	742-0616A	Three-in-one Blade, Star Center, 21.23"
36	747-1116	Deck Release Pin
37	748-0331	Shoulder Spacer, .625 x .324
38	750-0932A	Spacer, .635 x .88 x 1.72
39	683-0440	Deck Brake Assembly
40	754-0498	Deck Belt
41	756-0627B	Idler Pulley, 3.5
42	756-1202	Double Pulley, 5.0
43	710-1830	Self-Tapping Screw, 1/4-20 x 4.0
44	746-0970	Brake Cable, 5.05
45	783-1291	Idler Bracket
46	711-1534	Pin, 3/8-16, 3/8 x 3.27
48	737-04003B	Water Nozzle
—	721-04041	Water Nozzle Adapter (not shown)
49	736-0760	Lock Washer, 17 x 23.8 x 1.95