


Models LT942H & LT946H

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-3015	Hex Cap Screw, 1/4-20 x.75	25	712-0142	Hex Nut, 8-32
2	710-0599	Self-tapping Screw, 1/4-20 x.5	26	631-04151	Dash Panel, 4-style w/ Cargo Net
3	712-04064	Flange Lock Nut, 1/4-20	27	731-04213	Parking Brake Button
4	710-0895	Self-tapping Screw, 1/4-15 x.75	28	731-1857	Throttle Control Lever
5	710-0924	Pan Phillips Screw, 1/4-20 x.75	29	731-04214	Cruise Control Button
6	710-0376	Hex Cap Screw, 5/16-18 x 1.0	30	747-1155	Brake/Cruise Pivot Rod
7	712-0292	U-type Speed Nut, 1/4-20	31	783-04285B	Dash Support Plate RH
8	712-04063	Flange Lock Nut, 5/16-18		783-04323B	Dash Support Plate LH
9	726-0201	Speed Nut	32	725-1649	Lamp Socket
10	747-2127	Hood Latch Rod	33	751-0658E	Fuel Tank, 3-gallon
11	731-2286	Head Light Lens	34	751-0603	Fuel Cap
12	683-0305	Hood Bracket Assembly	35	725-1745	Ignition Key w/ plastic cover
13	731-2283A	Hood		725-1744	Ignition Key w/o plastic cover
14	731-2307B	LH Side Panel	36	710-0726	Self-tapping Screw, 5/16-18 x.75
15	731-2308B	RH Side Panel	37	747-04301	Side Panel Support
16	710-0642	Screw, 1/4-20 x.750	38	725-04036A	Systems Indicator Monitor
17	736-0342	Flat Washer,.283 x.75 x.030	39	725-04227	Ignition Switch
18	736-0173	Flat Washer,.28 x.74 x.063	40	725-0963	Miniature Lamp, 12V
19	736-3078	Flat Washer,.349 x 1.0 x.063	41	710-1611B	Self-tapping Screw, 5/16-18 x.75
20	746-1085A	Choke Control	42	736-0142	Flat Washer
21	731-2284	Hood Plenum w/o Intake Bellow	—	629-04083	Headlight Wire Harness
22	746-1086	Throttle Control/Cable	—	629-04105	Tractor Wire Harness
23	710-1017	Torx Self-Tapping Screw, 1/4-14 x.625	—	629-04144	Jumper Wire Harness
24	710-3217	Torx Screw, #8-32 x.375			


Models LT942H & LT946H

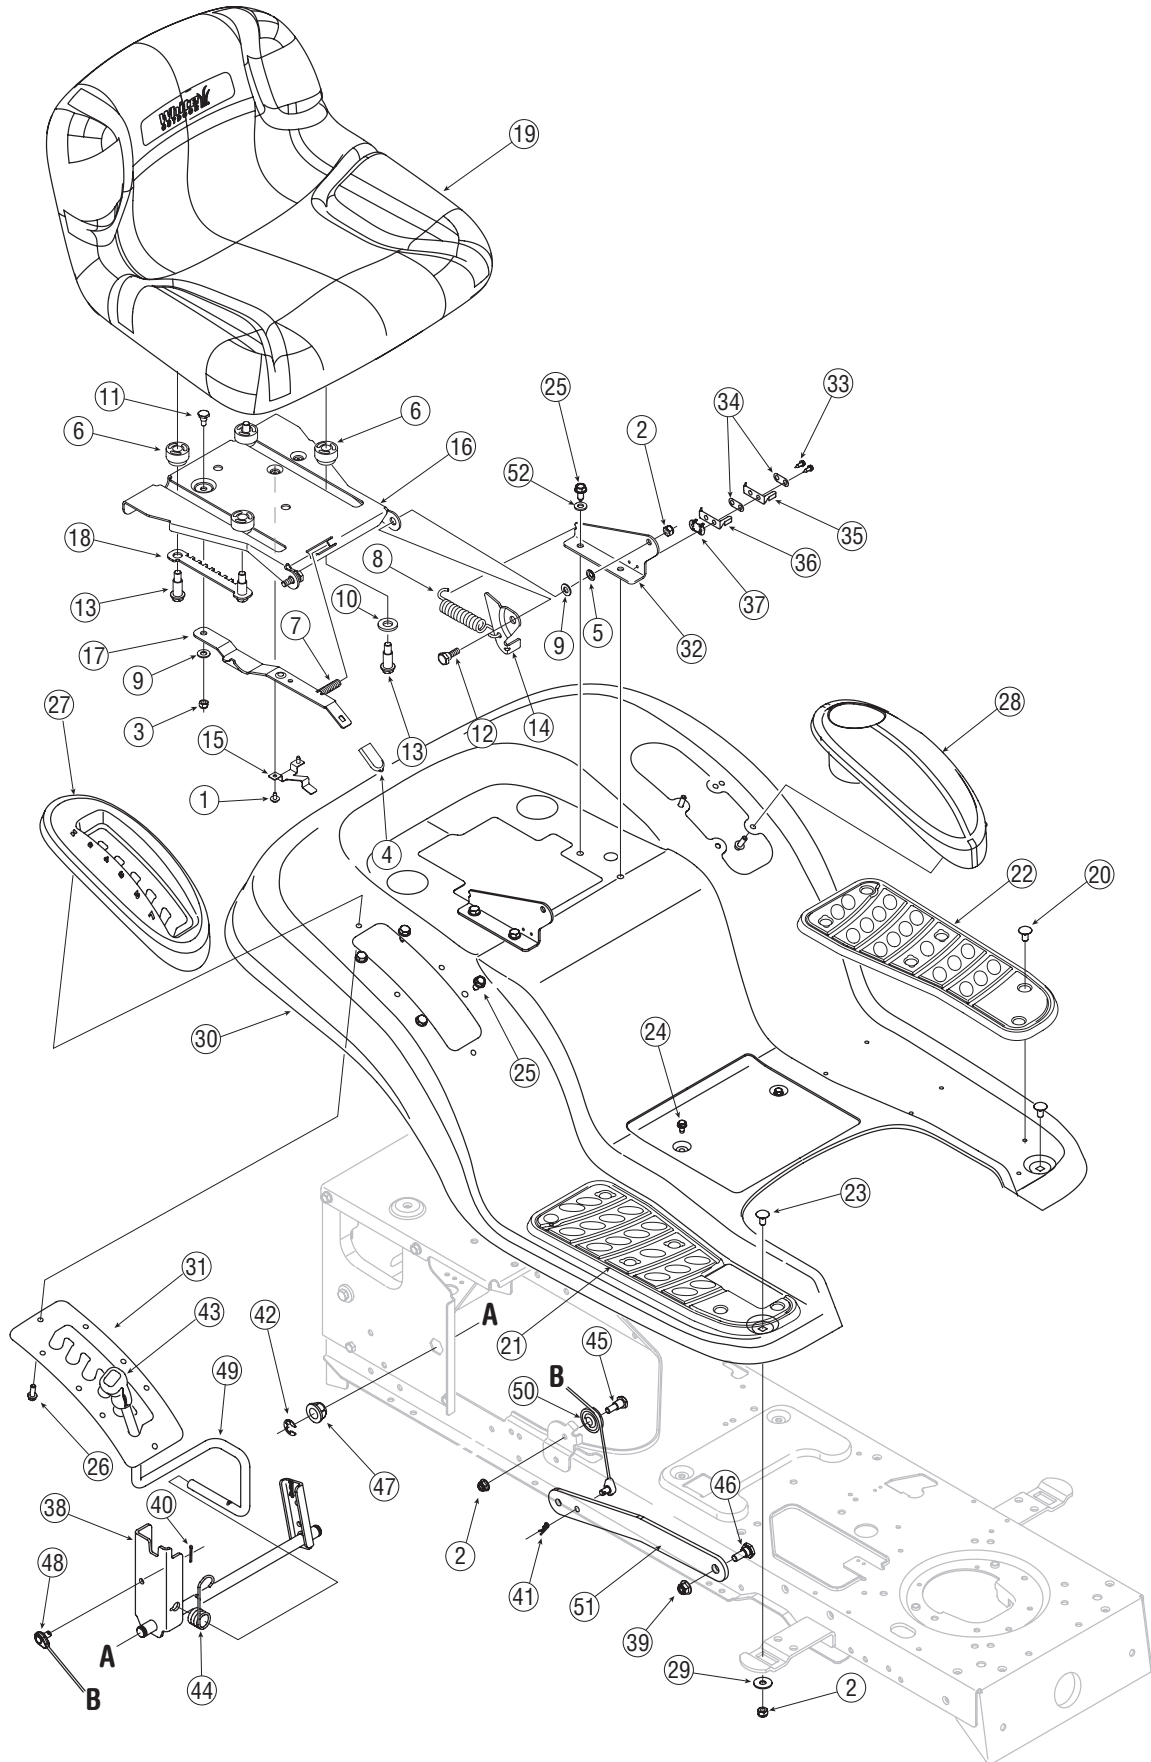

Models LT942H & LT946H

REF. NO.	PART NO.	DESCRIPTION
1	710-1268	Screw, #10-16 x.375
2	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon
3	712-3027	Nut, Flange Lock, 1/4-20
4	720-0309A	Seat Adjuster Grip
5	726-0201	Nut, Speed,.3125 ID
6	731-04074	Spacer
7	732-0499	Compression Spring,.41 x 1.5
8	732-1184	Spring, Extension,.84 Dia. x 4.6
9	736-0275	Wash, Flat,.344 x.688 x.065
10	736-3019	Wash, Flat,.531x 1.062 x.134
11	738-0137A	Screw, Shoulder,.340 x.285,1/4-20
12	738-0296	Screw, Shoulder,.437 x.268, 5/16-18
13	738-0966	Screw, Shoulder,.50 x.925, 3/8-16
14	783-0209C	Seat Bracket, Lift
15	783-0611	Seat Stop
16	783-0738B	Seat Pivot Bracket
17	783-0739A	Seat Adjustment Lever
18	783-0753	Seat Adjustment Selector
19	757-04014A	Medium Back Seat, Black
20	726-3046	Ratchet Clip
21	735-0656	RH Foot Pad, Rubber
22	735-0657	LH Foot Pad, Rubber
23	710-0260A	Bolt, Carriage, 5/16-18,.62, Gr1
24	710-0599	Screw, 1/4-20, 0.500
25	710-0726	Screw, 5/16-12, 0.750
26	710-0895	Screw, 1/4-15, 0.750
27	731-1990	Cover, Lift Lever
28	731-1993A	Cover, w/ Cup Holder
29	736-3078	Washer, Flat,.344 x 1.0 x.063
30	783-04333A	Fender
31	783-0677	Adjustment Bracket, Lift
32	783-1489A	Mounting Bracket, Seat
33	710-0227	Screw, #8-18 x.50
34	726-0279	Plate, Insulator
35	725-1303	Spring Switch, Outer
36	725-1439	Spring Switch, Inner
37	726-0278	Plate, Insulator Boss
38	683-04079	Shaft Assembly, Lift
39	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon
40	714-0104	Pin, Cotter,.072 Dia. x 1.13
41	714-0111	Pin, Cotter, 3/32, 1.0
42	716-0106A	Ring, E Type,.625 Dia.
43	720-0311	Grip, Handle, 1/2
44	732-0874	Spring, Torsion
45	738-0138A	Screw, 5/16-18 x.620 Gr2
46	738-04130	Screw, Shld,.625 x.165, 3/8-16 (LT942H)
	738-0380	Screw, Shld,.50 x.27, 3/8-16 (LT946H)
47	741-0225	Bearing, Hex Flange
48	746-0968	Cable, Lift, 16.16
49	747-04155	Handle, Lift
50	756-1154	Pulley, Roller
51	783-04711	Arm, Lift - LH (LT942H)
	783-04494	Arm, Lift - RH (LT942H)
	783-0678A	Arm, Lift (LT946H)
52	736-0607	Lock Washer, 5/16

Models LT942H & LT946H

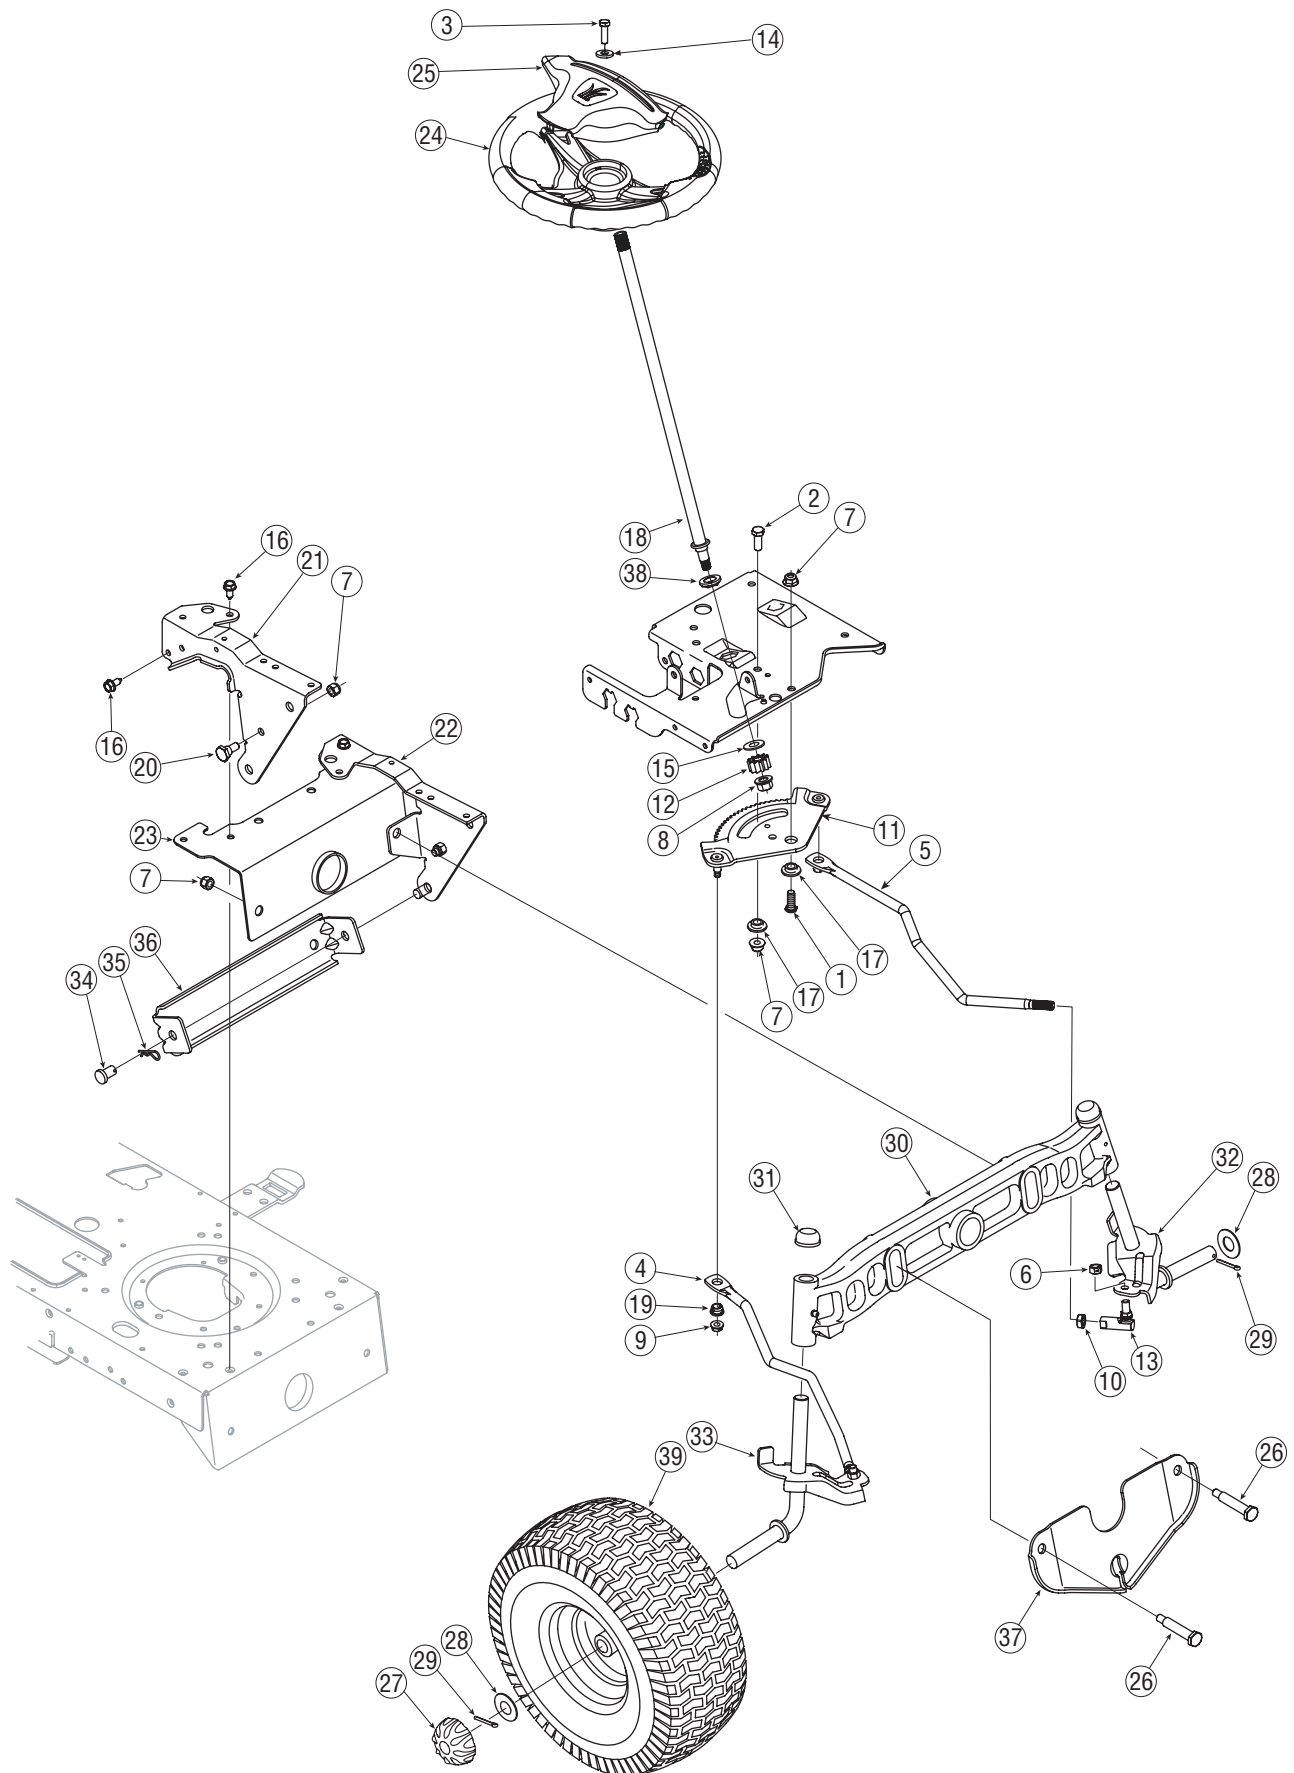


Models LT942H & LT946H

REF. NO.	PART NO.	DESCRIPTION
1	710-04095	Hex Screw, 3/8-16, 1.00, Gr5
2	710-0514	Hex Screw, 3/8-16, 1.00, Gr5
3	710-0643	Hex Screw, 5/16-18, 1.00, Gr5
4	711-1408	Link, Drag, RH
5	711-1409A	Link, Drag, LH
6	712-0214	Nut, Hex Lock, 3/8-24
7	712-04065	Nut, Flange Lock, 3/8-16, Grf, Nylon
8	712-0459	Nut, Flange Lock, 7/16-20
9	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
10	712-0240	Nut, Jam, 7/16-20, Gr2
11	717-1550E	Gear, Steering, 11/90 Ratio
12	717-1554	Gear, Pinion, Steering
13	723-0448A	Ball Joint, 7/16-20, Lock
14	736-3004	Washer, Flat,.406 x.875 x.105
15	736-3084	Washer, Flat,.51 x 1.12 x.06
16	710-0726	Screw, 5/16-12, 0.750
17	738-04154	Spacer, Shoulder,.38 x 1.00 x.31
18	738-1001A	Shaft, Steering,.625 OD x 24.25 Lg
19	741-0475	Plastic Bushing.380 ID
20	738-0143	Screw, Shoulder,.498 x.340, 3/8-16
21	783-0726D	Pivot Bracket, Support RH
22	783-0727C	Pivot Bracket, Support LH
23	783-0728	Pivot Bracket, Bar
24	631-04008	Steering Wheel, 3 Spoke, Soft Grip
25	731-04065	Steering Wheel Cover
26	738-04128	Shlder Screw,.5 x 2.380, 3/8-16 (LT942H)
	738-1011A	Shlder Screw,.5 x 2.2, 3/8-16 (LT946H)
27	731-2290A	Deluxe Hub Cap
28	736-0316	Flat Washer,.78 x 1.589 x.06
29	714-04039	Cotter Pin, 5/32 x 1.25
30	719-04105	Cast Iron Pivot Bar
31	726-0341	Push Cap
32	638-04006	LH Axle Assembly,.750 (LT942H)
	638-04003	LH Axle Assembly,.750 (LT946H)
33	638-04005	RH Axle Assembly,.750 (LT942H)
	638-04004	RH Axle Assembly,.750 (LT946H)
34	711-0332	Pin, Clevis,.50 x.78 (LT946H)
35	714-04023	Cotter Pin, Inter,.080 x 1.5625 (LT946H)
36	783-0720A	Front Adjustment Bracket (LT946H)
37	783-04568	Deck Hanger Bracket, Front (LT942H)
38	741-0656A	Hex Flange Bearing
39	634-04087	Wheel Assembly Complete, 15 x 6
	734-04040	Tire Only 15 x 6 x 6
	634-04081	Rim Only w/ Valve Stem

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Models LT942H & LT946H

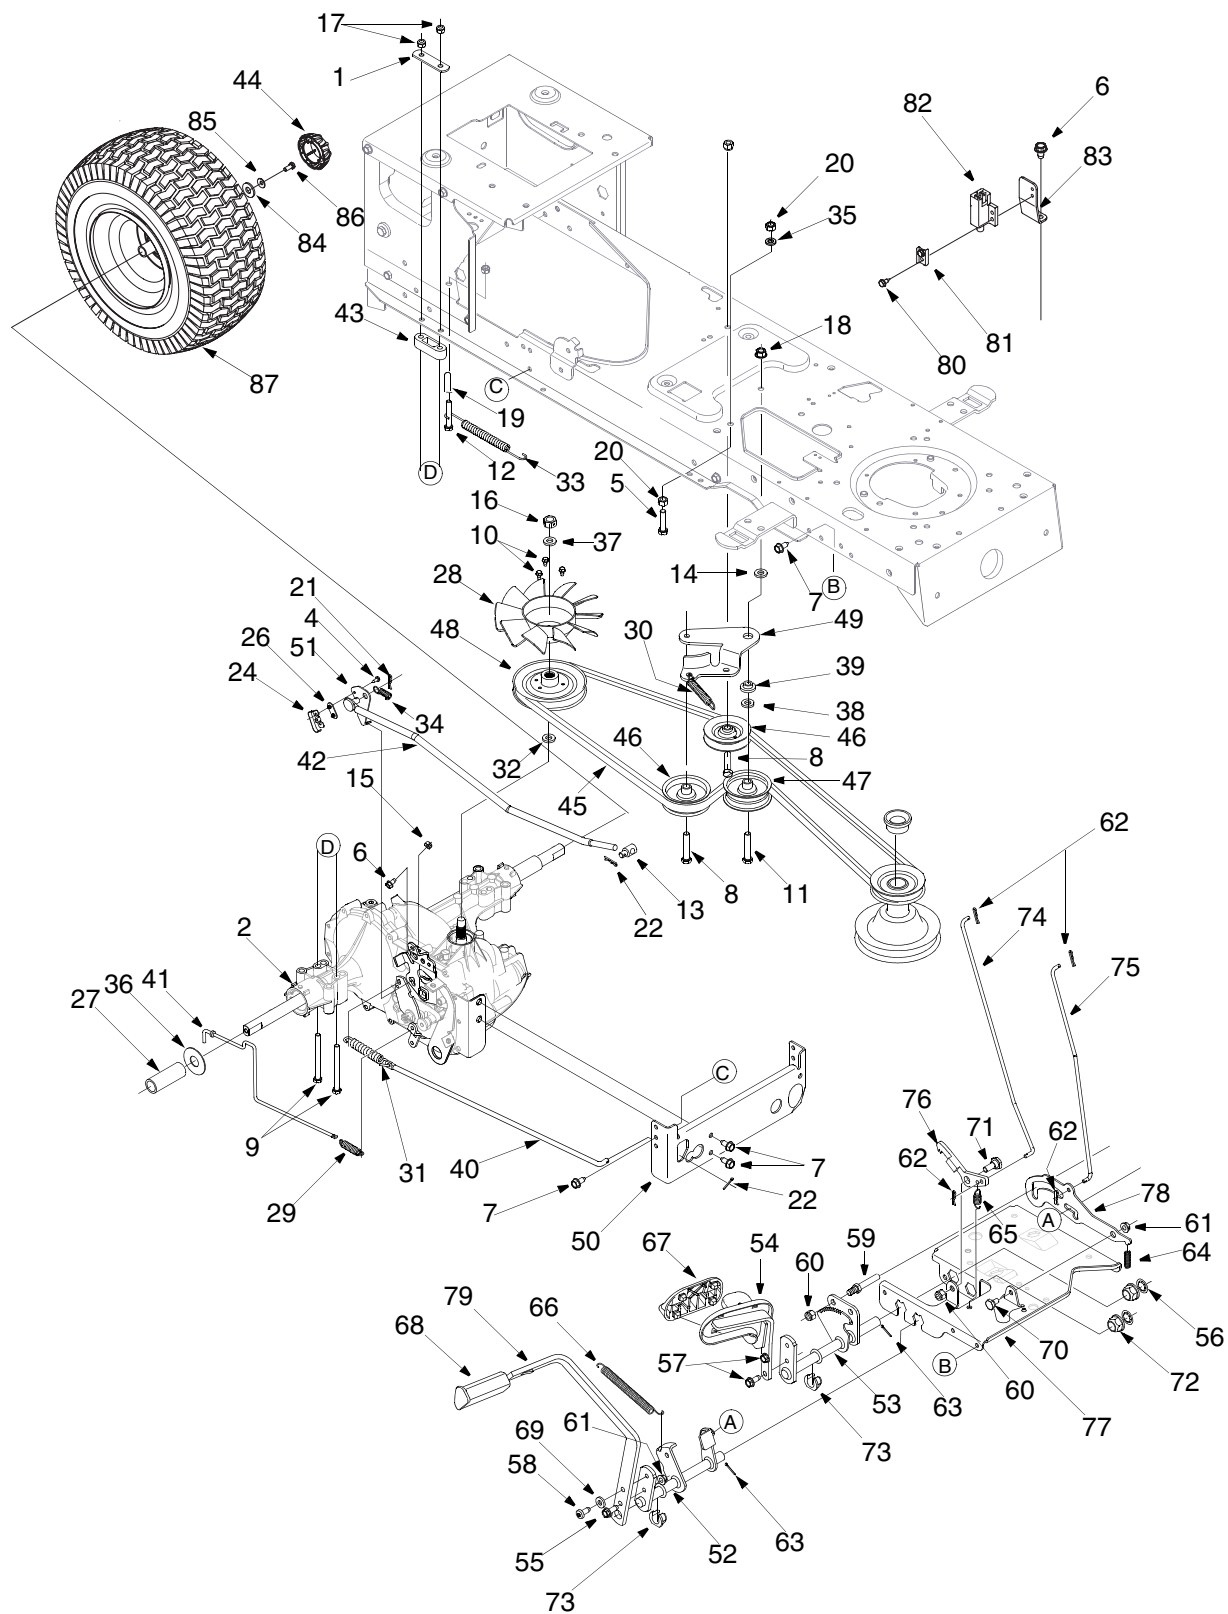

Models LT942H & LT946H

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	17840	Transmission Mounting Bracket	46	756-0116A	Idler Pulley
2	618-0319	Hydrostatic Transmission	47	756-0981B	Flat Idler Pulley
3	629-0949A	Harness Assembly (Not Shown)	48	756-04111	Input Pulley
4	710-0227	AB Screw #8-18 x 0.5	49	783-04442	Idler Bracket
5	710-0344	Hex Bolt 3/8-16 x 1.5	50	783-0810B	Torq Bracket
6	710-0599	TT Screw 1/4-20 x 0.5	51	783-1019	Actuator Bracket
7	710-0726	AB Screw 5/16-12 x 0.75	52	647-0031B	Brake Control Assembly
8	710-0502A	TT Sems Screw 3/8-16 x 1.250	53	647-0049A	Hydrostatic Control Assembly
9	710-1266	Hex Bolt 5/16-18 x 3.5	54	683-0267C	Pedal Assembly
10	710-3007	Carriage Screw	55	710-0650	TT Screw 5/16-18 x 0.875
11	710-3011	Hex Bolt 3/8-16 x 2.25	56	736-0187	Flat Washer, .64 x 1.24 x .06
12	710-0809	Screw, 1/4-20 x 1.250	57	710-1260A	LD Screw 5/16-18 x 0.75
13	711-0832	Ferrule	58	710-1611B	TT Screw 5/16-18 x 0.75
14	736-0320	Flat Washer, .38 x 1.38 x .125	59	711-04159B	Pin
15	712-0291	Hex Lock Nut 1/4-20	60	712-04065	Flange Lock Nut, 3/8-16
16	712-3066	Hex Nut, 1/2-20	61	712-3004A	Flange Lock Nut, 5/16-18
17	712-04063	Flange Lock Nut, 5/16-18	62	714-0104	Cotter Pin
18	712-0431	Flanged Lock Nut 3/8-16	63	714-0111	Cotter Pin
19	750-0566A	Spacer, .260 x .372 x 1.030 Lg	64	732-0335	Compression Spring
20	712-3017	Hex Nut 3/8-16	65	732-0955	Extension Spring
21	714-0104	Cotter Pin	66	732-0963	Extension Spring
22	714-0111	Cotter Pin	67	735-0662	Control Pedal
23	725-0157	Cable Tie (not shown)	68	735-3049	Brake Control Pedal
24	725-1644	Switch	69	736-3008	Flat Washer
25	726-0154	Cable Tie (Not shown)	70	738-0155	Shoulder Screw
26	726-0320	Insulator Nut Plate	71	738-0380	Shoulder Screw
27	731-04682	Sleeve, 0.758 x 0.821 x 1.5	72	741-0225	Hex Flange Bearing
28	731-1449A	Blade Fan	73	741-3065B	Hex Flange Bearing
29	732-0209	Extension Spring	74	747-04093	Brake Lock Control Rod
30	732-0429A	Extension Spring	75	747-04096	Cruise Control Rod
31	732-0716	Extension Spring	76	748-04039B	Cruise Latch
32	732-0729	Wire Ring	77	783-04612	Steering Support Bracket
33	732-0994	Extension Spring	78	683-04185	Lockout Bracket
34	732-3118	Extension Spring	79	783-0773A	Brake Pedal
35	736-0169	Lock Washer	80	710-0224	Screw, #10-16 x .500
36	736-0866	Flat Washer	81	17962	Switch Plate
37	736-0921	Lock Washer	82	725-04039	Interlock Switch
38	736-3010	Flat Washer	83	783-04707	Parking Brake Switch Bracket
39	738-0372B	Shoulder Spacer	84	736-0430	Flat Washer, .350 x 1.59 x .062
40	747-04139	Brake Rod	85	736-0242	Bell Washer, .340 x .872 x .060
41	747-1149	Bypass Rod	86	710-0627	Screw, 5/16-24 x .750
42	747-1151	Control Rod	87	634-0177	Wheel Complete, 20 x 10 x 8
43	748-0334	Transaxle Spacer		734-1873	Tire Only, 20 x 10 x 8
44	731-2290A	Hub Cap		634-0070	Rim Only
45	754-0461	V Belt, A x 78" Lg			

Model LT942H

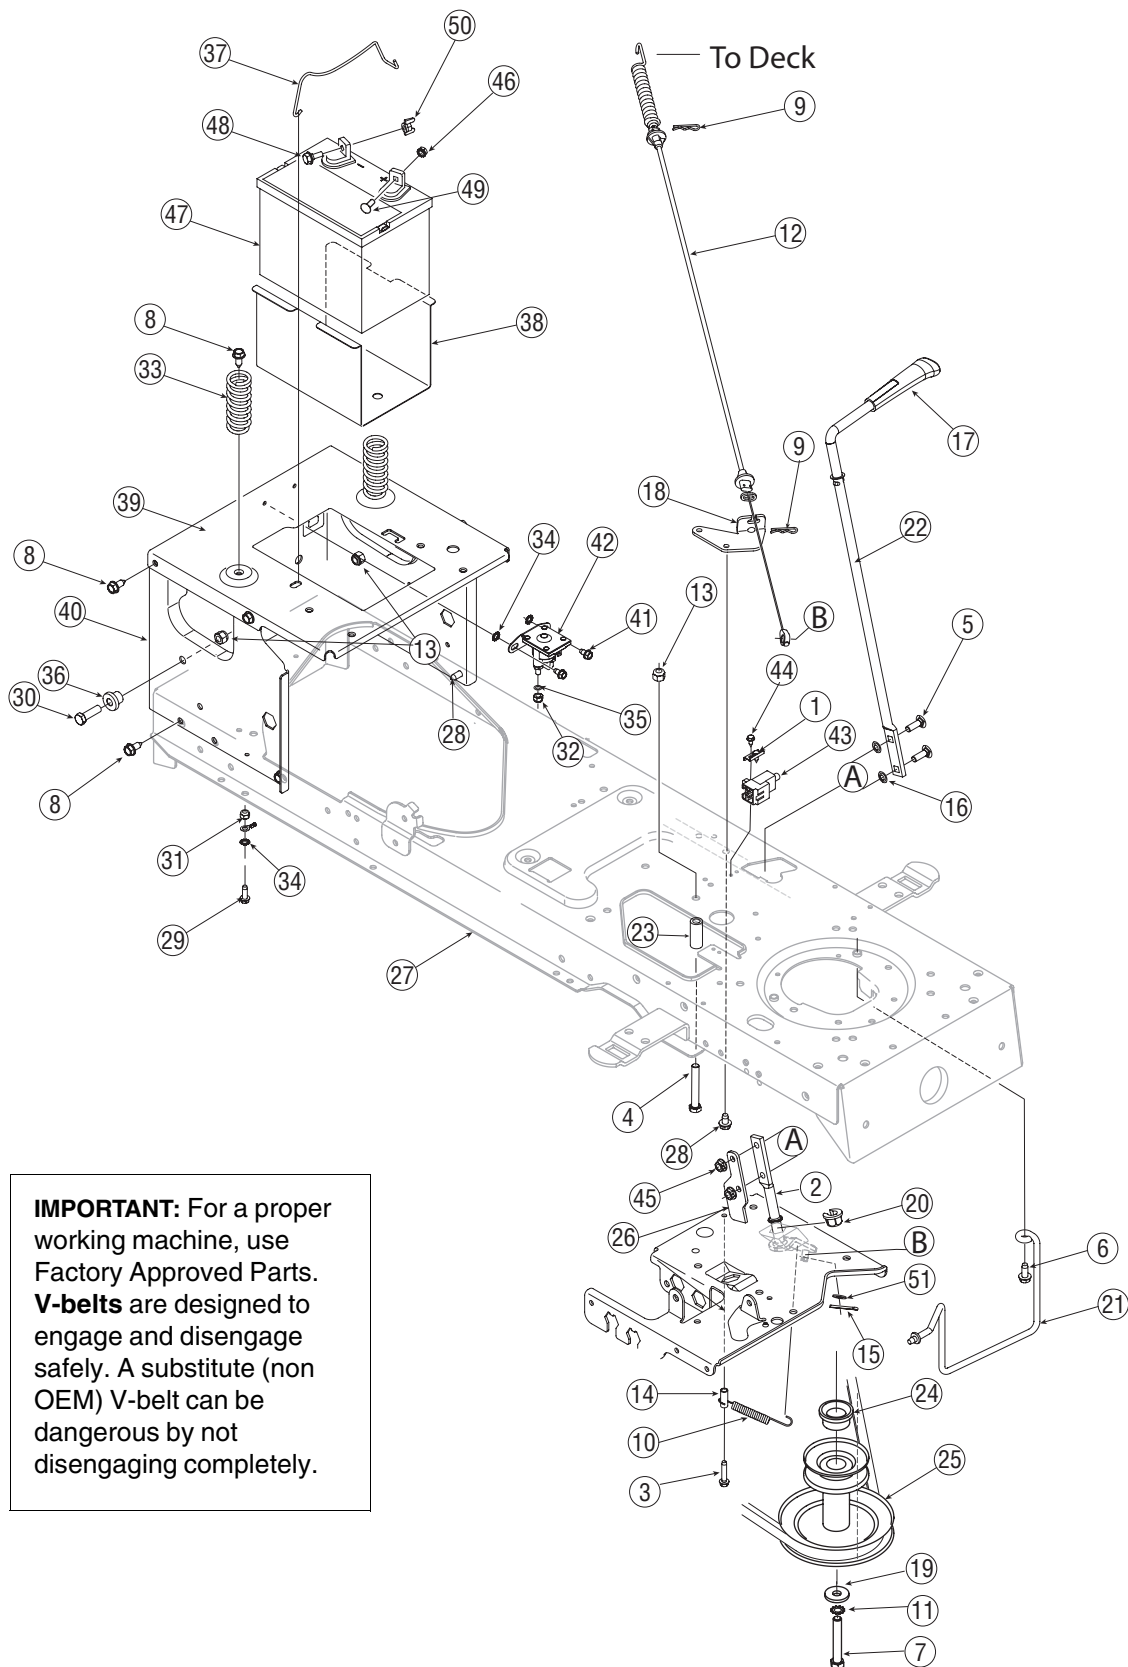


IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Model LT942H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17962	Plate, Switch	27	683-04173	Frame Assembly, Lower
2	647-04036	Lever Assembly, Engagement	28	710-0607	Screw, 5/16-18, 0.500
3	710-0809	Screw, 1/4-20 x 1.250	29	710-0642	Screw, 1/4-20, 0.750
4	710-0859	Screw, 3/8-16, 2.50	30	710-3005	Screw, 3/8-16, 1.25, Gr5
5	710-0276	Screw, Carriage, 5/16-18, 1.00	31	712-04064	Nut, Flange Lock, 1/4-20, GrF, Nylon
6	710-1260A	Screw, 5/16-18 x.750	32	712-3006	Nut, Hex, 1/4-20, Gr5
7	710-3157A	Screw, 7/16-20, 3.25, Gr5	33	732-04035	Spring, Compression, 1.28 OD x 3.125
8	710-0726	Screw, 5/16-12, 0.750	34	736-0222	Washer, Lock, 1/4, External
9	714-0145	Click Pin	35	736-0329	Washer, Lock, 1/4
10	732-04248	Extension Spring,.38OD x 3.9LG	36	738-04058	Spacer, Shoulder,.38 x 1.0 x.70
11	736-0171	Lock Washer, 7/16	37	747-04121A	Hold Rod, Battery
12	746-04092	Deck Engagement Cable	38	783-0349	Battery Tray
13	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon	39	783-04329A	Seat Bracket, Frame
14	750-0566A	Spacer,.260 x.372 x 1.030LG	40	783-04375A	Frame, Upper
15	714-0470	Pin, Cotter, 1/8 x 1.25	41	710-0599	Screw, 1/4-20, 0.50
16	726-0201	Nut, Speed,.3125 ID	42	725-1426	Solenoid, 12V, 100 Amp
17	731-2111A	Knob, PTO	43	725-04039	Switch, Interlock
18	783-04590	Cable Bracket	44	710-0224	Screw, #10-16,.50
19	736-0322	Washer, Flat,.450 x1.250 x.164	45	712-3004A	Nut, Flange, Lock Nut, 5/16-18
20	741-0708	Bearing, Flange, Hex Split.500 ID	46	712-0271	Nut, Sems, 1/4-20
21	747-04307	Keeper Rod, Belt	47	725-1750A	Battery, 235 CCA
22	747-1112D	Engagement Handle, Deck	48	738-1132	Screw, Shoulder,.250 x.15, 1/4-20
23	748-0415B	Spacer,.385 ID x.635 OD x 1.54	49	710-0703	Screw, Carriage, 1/4-20,.75
24	750-0956	Spacer, 1.010 x 1.400 x.825	50	712-3087	Nut, Wing, 1/4-20
25	756-04067A	Pulley, Engine, 3.56 x 6.12 Diameter	51	736-0275	Flat Washer,.344 x.688 x.065
26	783-0744A	Stop Bracket, Engagement			

Model LT946H

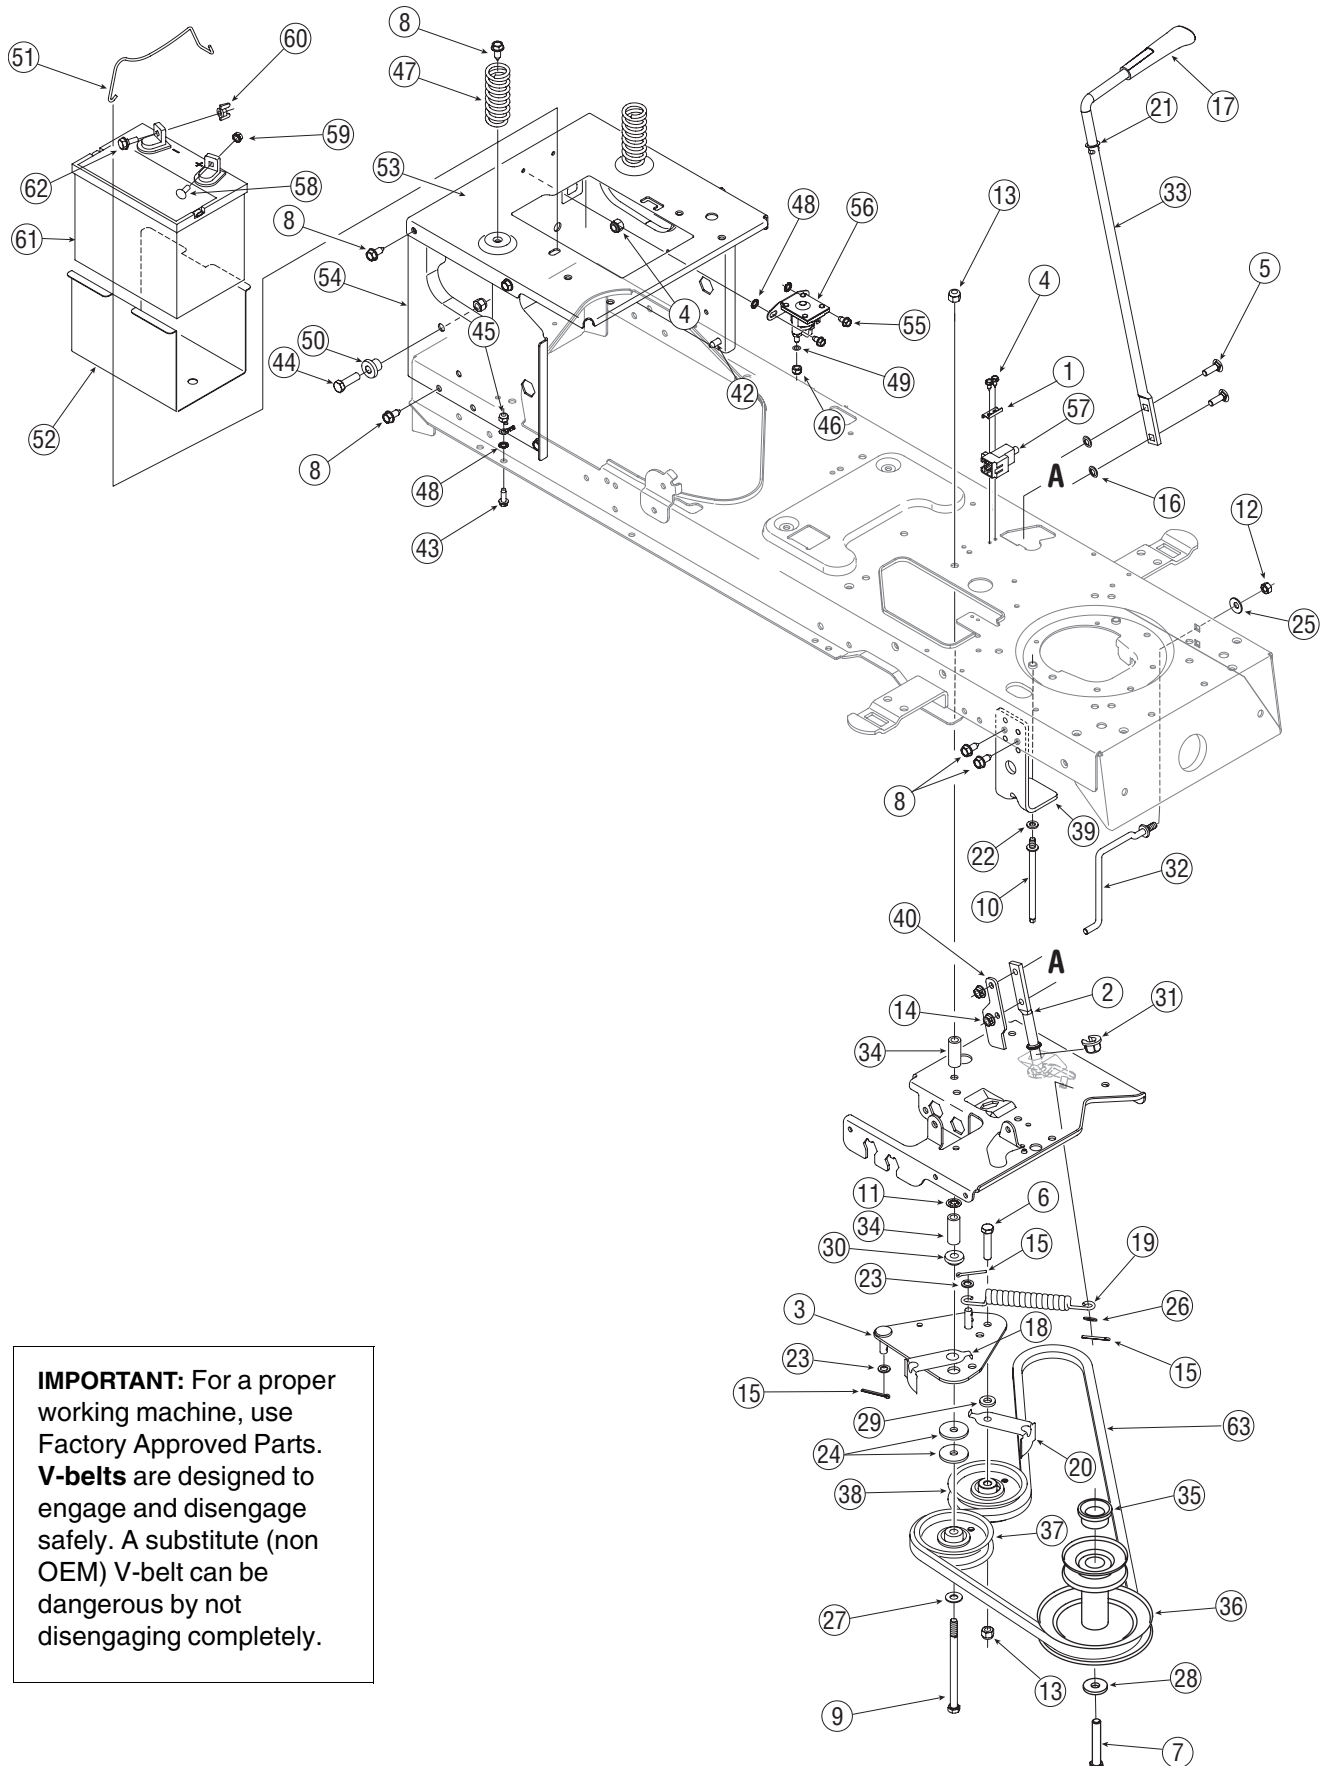


IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Model LT946H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17962	Plate, Switch	33	747-1112D	Engagement Handle, Deck
2	647-0064	Lever Assembly, Engagement	34	748-0415B	Spacer, .385 ID x.635 OD x 1.54
3	683-0302	Plate Assembly, Engagement	35	750-0956	Spacer, 1.010 x 1.400 x.825
4	710-0224	Screw, #10-16, 0.500	36	756-04143	Pulley, Engine, 3.56 x 6.12 Diameter
5	710-0276	Screw, Carriage, 5/16-18, 1.00	37	756-0487	Pulley, Idler, V-type 5/8 x 4.0 Diameter
6	710-0347	Screw, 3/8-16, 1.75, Gr5	38	756-0627D	Pulley, Idler, 3.50 Diameter
7	710-04377	Screw, 7/16-20, 2.75, Gr5	39	783-04467	Stop Bracket, Deck-Up
8	710-0726	Screw, 5/16-12, 0.750	40	783-0744A	Stop Bracket, Engagement
9	710-0831	Screw, 3/8-16, 5.50, Gr5	41	683-04173	Frame Assembly, Lower
10	711-1044	Pin, Belt Guard, 5/16 x 4.75	42	710-0607	Screw, 5/16-18, 0.500
11	712-0229	Nut, Push, 3/8	43	710-0642	Screw, 1/4-20, 0.750
12	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon	44	710-3005	Screw, 3/8-16, 1.25, Gr5
13	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon	45	712-04064	Nut, Flange Lock, 1/4-20, GrF, Nylon
14	712-3004A	Nut, Flange Lock, 5/16-18, Gr5	46	712-3006	Nut, Hex, 1/4-20, Gr5
15	714-0470	Pin, Cotter, 1/8 x 1.25	47	732-04035	Spring, Compression, 1.28 OD x 3.125
16	726-0201	Nut, Speed, .3125 ID	48	736-0222	Washer, Lock, 1/4, External
17	731-2111A	Knob, PTO	49	736-0329	Washer, Lock, 1/4
18	732-04245A	Belt Guard	50	738-04058	Spacer, Shoulder, .38 x 1.0 x.70
19	732-0944	Spring, Extension, .75 OD x 6.75	51	747-04121A	Hold Rod, Battery
20	732-1013	Belt Guard	52	783-0349	Battery Tray
21	736-0108	Washer, Flat, .510 x.750 x.033	53	783-04329A	Seat Bracket, Frame
22	736-0119	Washer, Lock, 5/16	54	783-04375A	Frame, Upper
23	736-0140	Washer, Flat, .385 x.62 x.063	55	710-0599	Screw, 1/4-20, 0.50
24	736-0227	Washer, Flat, .390 x 1.500 x.134	56	725-1426	Solenoid, 12V, 100 Amp
25	736-0242	Washer, Bell, .340 x.872 x.060	57	725-04039	Switch, Interlock
26	736-0275	Washer, Flat, .344 x.688 x.065	58	710-0703	Screw, Carriage, 1/4-20, .75, Gr5
27	736-0300	Washer, Flat, .406 x.875 x.059	59	712-0271	Nut, Sems, 1/4-20
28	736-0322	Washer, Flat, .450 x1.250 x.164	60	712-3087	Nut, Wing, 1/4-20
29	736-3010	Washer, Flat, .407 x.812 x.135	61	725-1750A	Battery, 235 CCA
30	738-0372B	Spacer, Shldr, 1.00 x.38 x.38	62	738-1132	Screw, Shoulder, .250 x.150, 1/4-20
31	741-0708	Bearing, Flange, Hex Split.500 ID	63	754-04064	V-Belt, PTO
32	747-04355	Keeper Rod, Belt			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Model LT942H

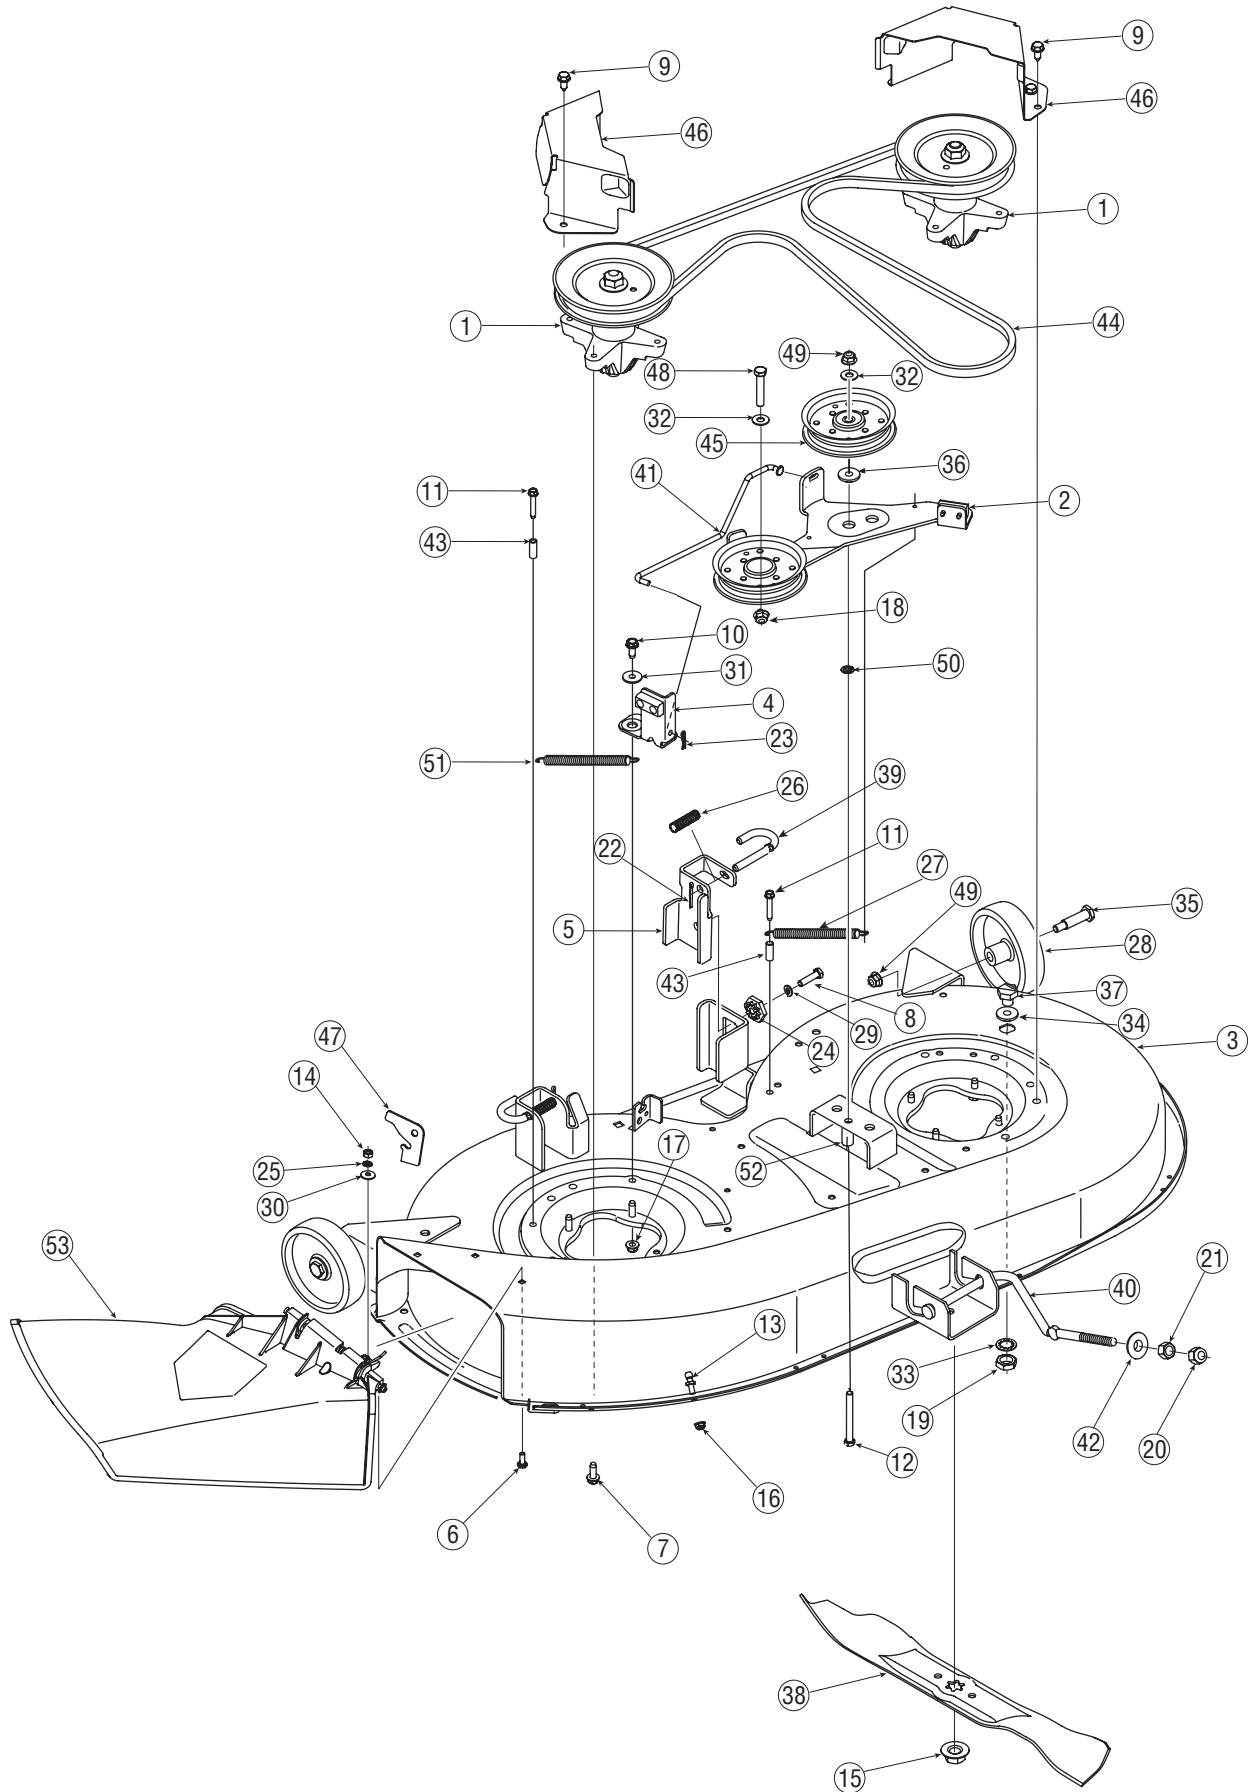


Model LT942H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	618-0624	Pulley/ Spindle Assembly	28	734-0973	Deck Wheel
2	683-04138	Deck Brake Assembly	29	736-0119	Lock Washer, 5/16
3	683-04162	42" Deck Assembly	30	736-0270	Bell Washer,.265 x.75 x.062
4	683-04167	Deck Brake Assembly	31	736-0289	Shoulder Bushing,.320 ID x.135 Lg.
5	683-0254B	Deck Hanger Bracket Assembly	32	736-0267	Flat Washer,.385 x.87 x.06
6	710-0751	Screw, 1/4-20 x.620	33	736-0225	Lock Washer, 5/8
7	710-0650	Screw, 5/16-18 x.875	34	736-0187	Flat Washer,.64 x 1.24 x.06
8	710-0528	Screw, 5/16-18 x 1.25	35	738-0373	Shoulder Screw,.498 x 1.53 x 3/8-16
9	710-0726	Screw, 5/16-12 x.750	36	738-04162	Shoulder Spacer,.8540 x.200
10	710-1260A	Screw, 5/16-18 x.750	37	738-04146	Plug
11	710-0778	Screw, 1/4-20 x 1.500	38	742-0616A	Blade, 21.23", Star 3-in-One
12	710-3085	Screw, 3/8-16 x 3.50	39	747-1116	Deck Release Handle Rod
13	711-04069	Grass catcher Pin	40	747-04269A	Front Deck Adjustment Rod
14	712-3006	Hex Nut, 1/4-20	41	747-04379	Brake Control Rod
15	712-0417A	Flange Nut, 5/8-18	42	748-04069	Deck Lift Pivot Cup
16	712-04064	Flange Lock Nut, 1/4-20	43	750-0566A	Spacer,.260 x.372 x 1.030 Lg.
17	712-04063	Flange Lock Nut, 5/16-18	44	754-04060B	V-Belt, 96.3 Lg.
18	712-04065	Flange Lock Nut, 3/8-16	45	756-04129	Idler Pulley, 4.25" Dia.
19	712-0641	Hex Nut, M16-1.5	46	783-04327	Belt Cover
20	712-3083	Hex Lock Nut, 1/2-13	47	783-1025	Chute Stop
21	712-0206	Hex Nut, 1/2-13	48	710-3144	Screw, 3/8-16 x 2.00
22	714-0470	Cotter Pin, 1/8 x 1.25	49	712-0431	Flange Lock Nut, 3/8-16
23	714-0104	Cotter Pin,.072 Dia. x 1.13 Lg.	50	712-0229	Push Nut, 3/8
24	717-04074	Deck Adjustment Gear	51	732-04287	Extension Spring,.500 Dia. x 6.375 Lg
25	726-0233	Push Nut,.25 ID x.50 OD	52	750-04446	Spacer, 3/8 ID x.68 OD x 1.46 Lg
26	732-0306A	Compression Spring,.531 OD x 1.75 Lg.	53	731-1032B	Discharge Chute
27	732-0308A	Extension Spring,.50 Dia. x 6.37 Lg.			

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. **NOT** all parts listed above and pictured on the previous page are standard equipment.

Model LT946H

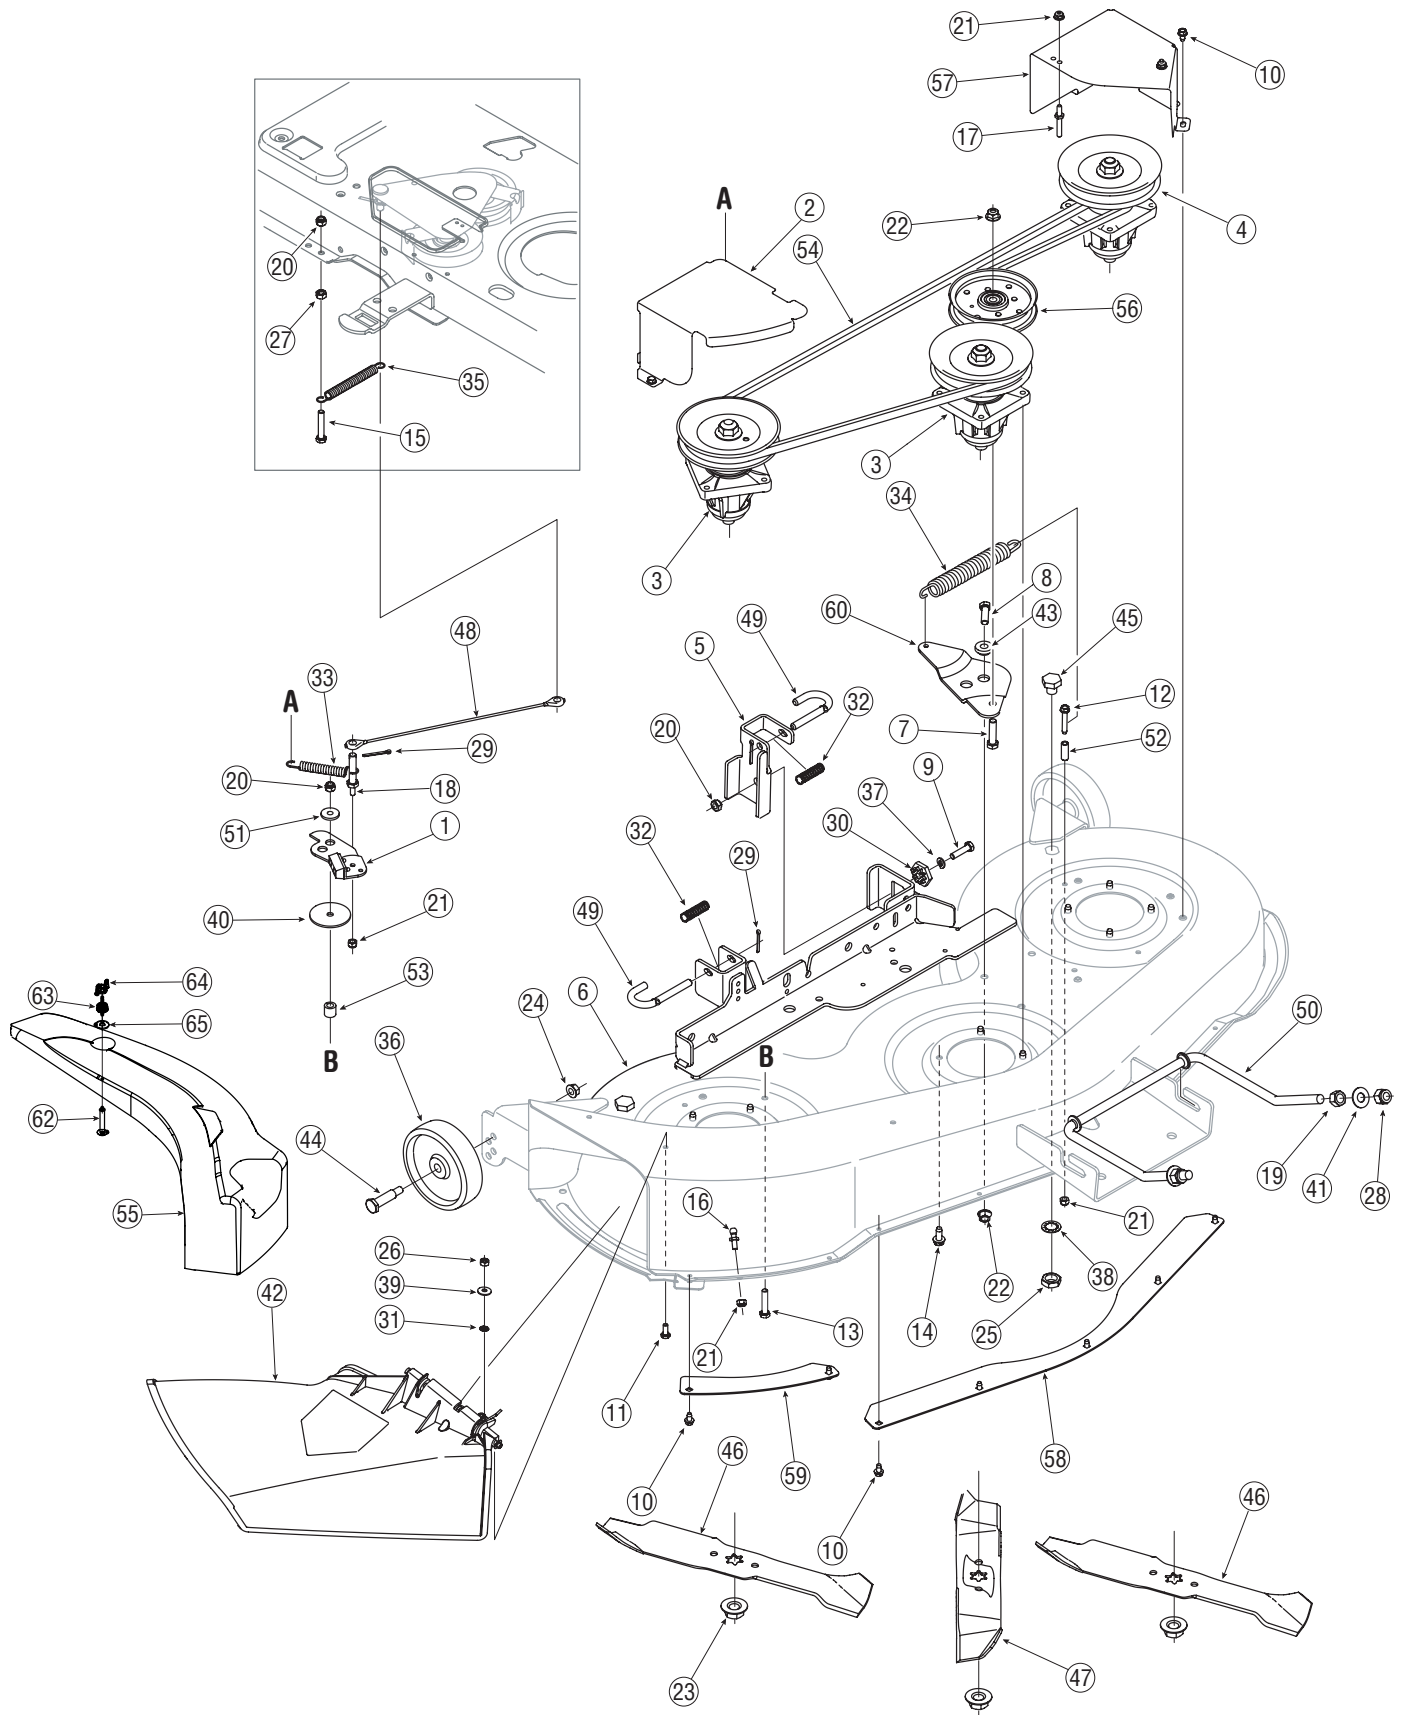


Model LT946H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17116	Brake Assembly, Deck	34	732-0594A	Spring, Extension,.91 Dia x 7.33
2	17258D	RH Belt Cover, Deck 46"	35	732-1165	Spring, Extension,.50 Dia x 5.0
3	618-0240A	Spindle Assembly, 5.00 Dia.	36	734-0973	Wheel, Deck 5.0 x 1.38
4	618-04134B	Spindle Ass'y, Double Pulley	37	736-0119	Washer, Lock, 5/16
5	683-0254B	Hanger Bracket Assembly	38	736-0225	Washer, Lock, 5/8
6	683-04104A	Deck Weldment	39	736-0270	Washer, Bell,.265 x.75 x.062
7	710-0344	Screw, 3/8-16, 1.50, Gr5	40	736-0418A	Washer, Flat,.34 x 2.25 x.10
8	710-0514	Screw, 3/8-16, 1.00, Gr5	41	736-3084	Washer, Flat,.51 x 1.12 x.06
9	710-0528	Screw, 5/16-18, 1.25, Gr5	42	731-1032B	Chute Assembly
10	710-0599	Screw, 1/4-20, 0.500	43	738-0347	Spacer, Shoulder,.625 ID x.169
11	710-0751	Screw, 1/4-20,.620, Gr5	44	738-0373	Spacer, Shoulder,.498 x 1.53, 3/8-16
12	710-0778	Screw, 1/4-20, 1.500	45	738-04146	Plug, Screw, M16 x 1.5
13	710-0805	Screw, 5/16-18, 1.50, Gr5	46	742-0611A	Blade, 16.28", Star 3-in-One
14	710-1260A	Screw, Ld, 5/16-18, 0.750	47	742-0612A	Blade, 14.88", Star 3-in-One
15	710-3180	Screw, 5/16-18, 1.75, Gr5	48	746-1107	Cable, 12.00"
16	711-04069	Pin, Grass catcher, 1/4-20	49	747-1116	Rod, Deck Release
17	711-0993	Belt Guard Pin 1/4 Dia x 1.43	50	747-1130B	Rod, Deck
18	711-1554	Pin, 1/4-20, 3/8 x 2.0	51	748-0234	Shoulder Spacer
19	712-0206	Nut, Hex, 1/2-13, Gr5	52	750-0566A	Spacer,.260 x.372 x 1.030
20	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon	53	750-1320	Spacer,.375 x.63 x.595
21	712-04064	Nut, Flange Lock, 1/4-20, GrF, Nylon	54	754-0349	Belt, V-Type, Poly
22	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon	55	731-1636	Mulch Plug
23	712-0417A	Nut, Flange, 5/8-18	56	756-04129	Pulley, Idler, 4.25" Dia.
24	712-0431	Nut, Flange Lock, 3/8-16, GrF	57	783-1348B	Belt Cover, LH
25	712-0641	Nut, Hex, M16-1.5	58	783-0141	Deck Skirt, Center
26	712-3006	Nut, Hex, 1/4-20, Gr5	59	783-0142	Deck Skirt, RH
27	712-3010	Nut, Hex, 5/16-18, Gr5	60	783-04641	Bracket, Idler
28	712-3083	Nut, Hex Lock, 1/2-13, Gr8, Nylon	61	783-1025	Stop, Chute
29	714-0470	Pin, Cot, 1/8 x 1.25	62	710-0578	Screw, 1/4-20 x 1.500
30	717-04074	Adjustment Gear, Deck	63	712-3006	Hex Nut, 1/4-20
31	726-0233	Nut, Push,.25 ID x.50 OD	64	712-3087	Wing Nut, 1/4-20
32	732-0306A	Spring, Compression,.531 OD x 1.75	65	736-0173	Flat Washer,.28 x.74 x.063
33	732-0429A	Spring, Extension,.50 Dia x 3.97			

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.


NOTE: Tractor features vary by model. **NOT** all parts listed above and pictured on the previous page are standard equipment.

Models LT942H & LT946H

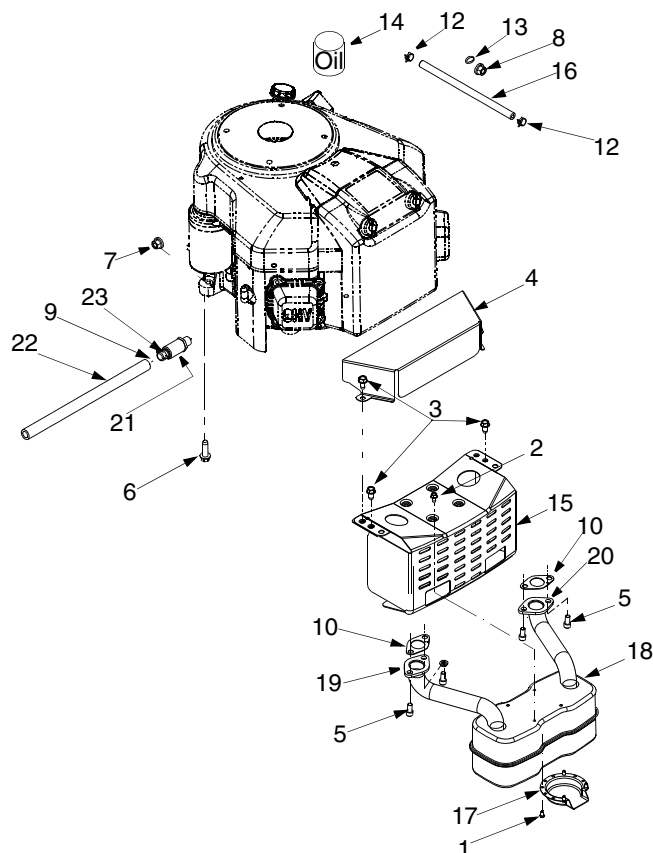


Ref. No.	Part No.	Description
1	710-0227	AB Screw 38-18 x 0.5
2	710-0599	TT Screw 1/4-20 x 0.5
3	710-0726	AB Screw 5/16-20 x 0.75
4	783-0625C	Heat Shield
5	710-1314A	Socket Hd. Scr. 5/16-18 x 0.75
6	710-1315	TT Screw 3/8-16 x 1.25
7	712-0271	Sems Nut
8	712-3017	Hex Nut
9	721-0331	Pipe Sealant
10	721-0460	Exhaust Gasket
11	725-0157	Cable Tie(Not Shown)
12	726-0205	Hose Clamp
13	736-0300	Flat Washer
14	737-0169	Oil: SAE 30W
15	783-0615D	Muffler Bracket
16	751-0535	Fuel Line Hose
17	751-0564A	Deflector: Muffler
18	751-0616A	Dual Inlet Muffler
19	751-0814A	Exhaust Pipe RH
20	751-0813A	Exhaust Pipe LH
21	751-3140	Oil Drain
22	751-3141	Oil Drain Extension Hose
23	751-3142	Oil Drain Cap

Models LT942H & LT946H

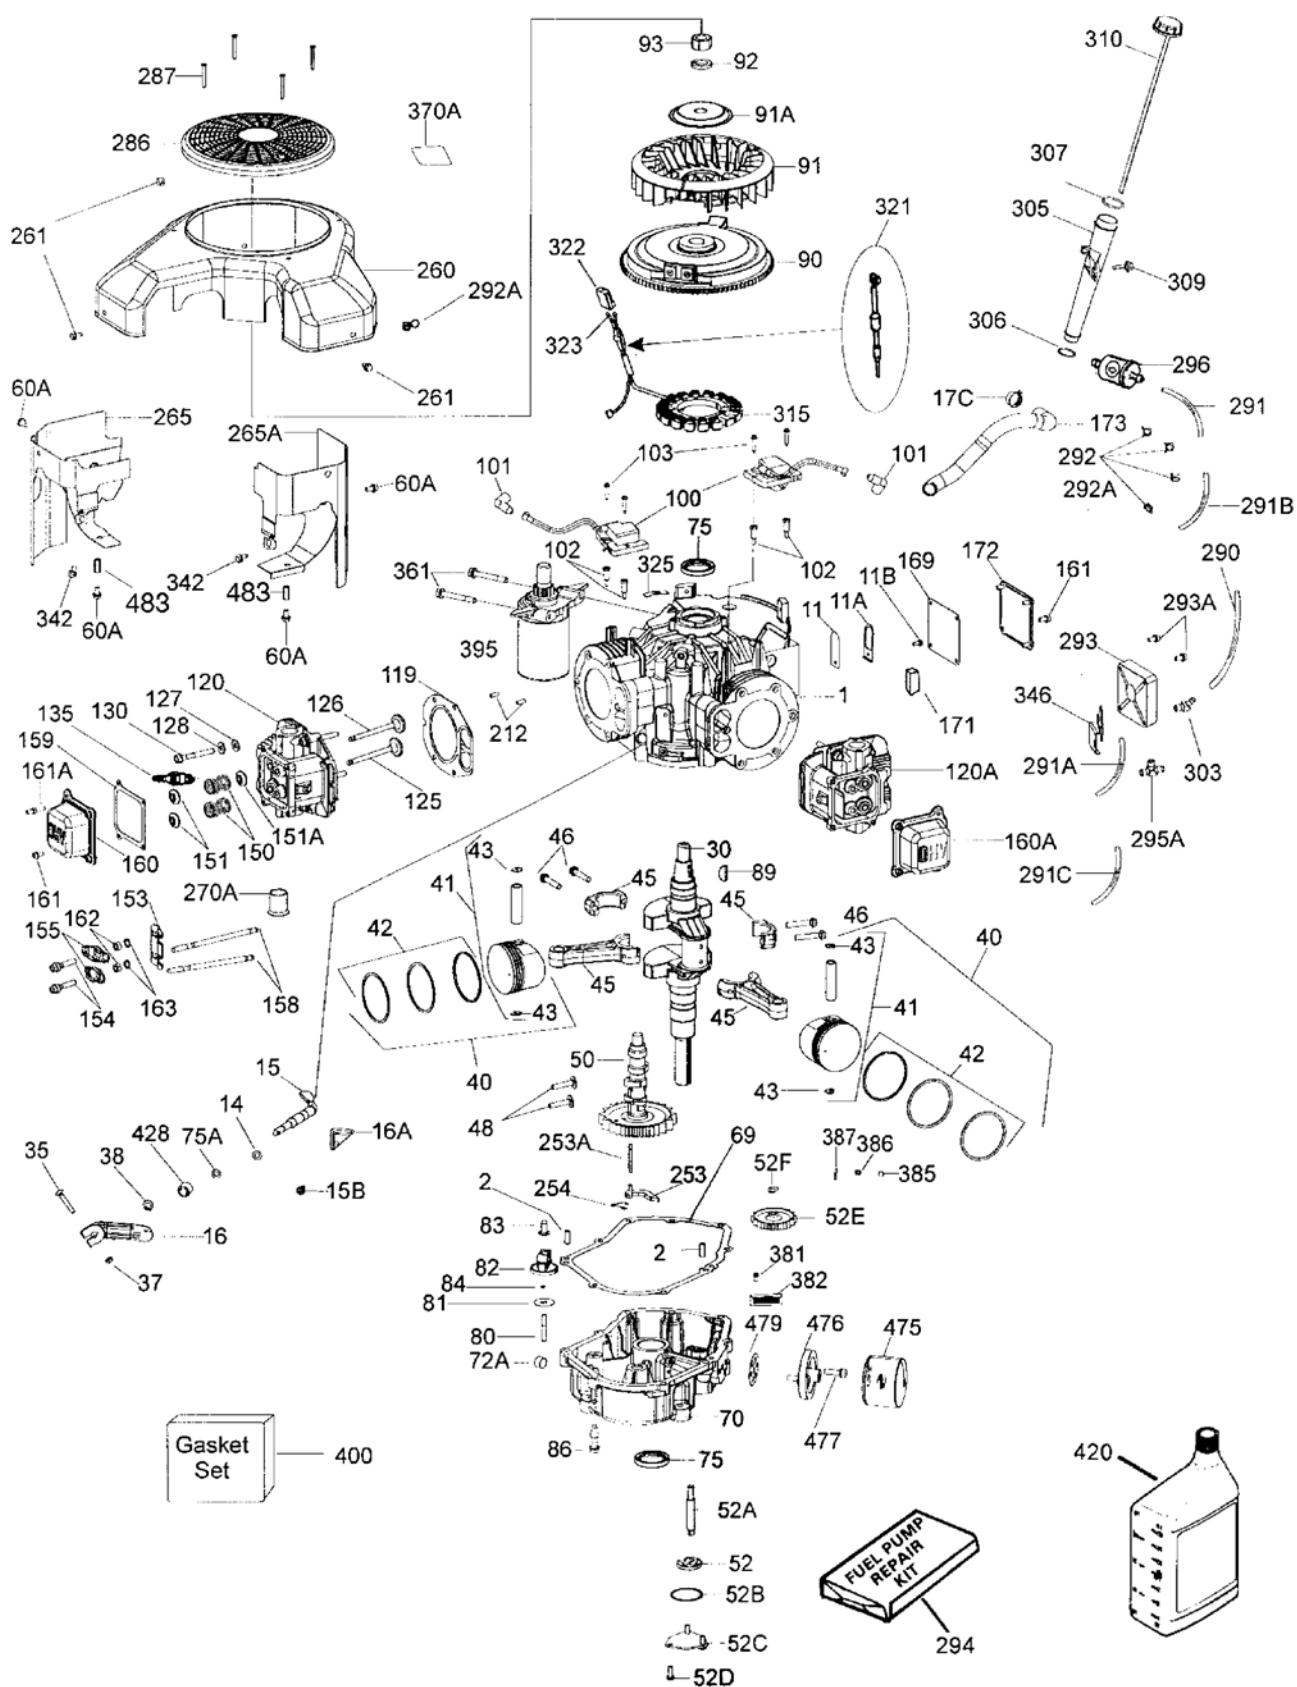

Models LT942H & LT946H

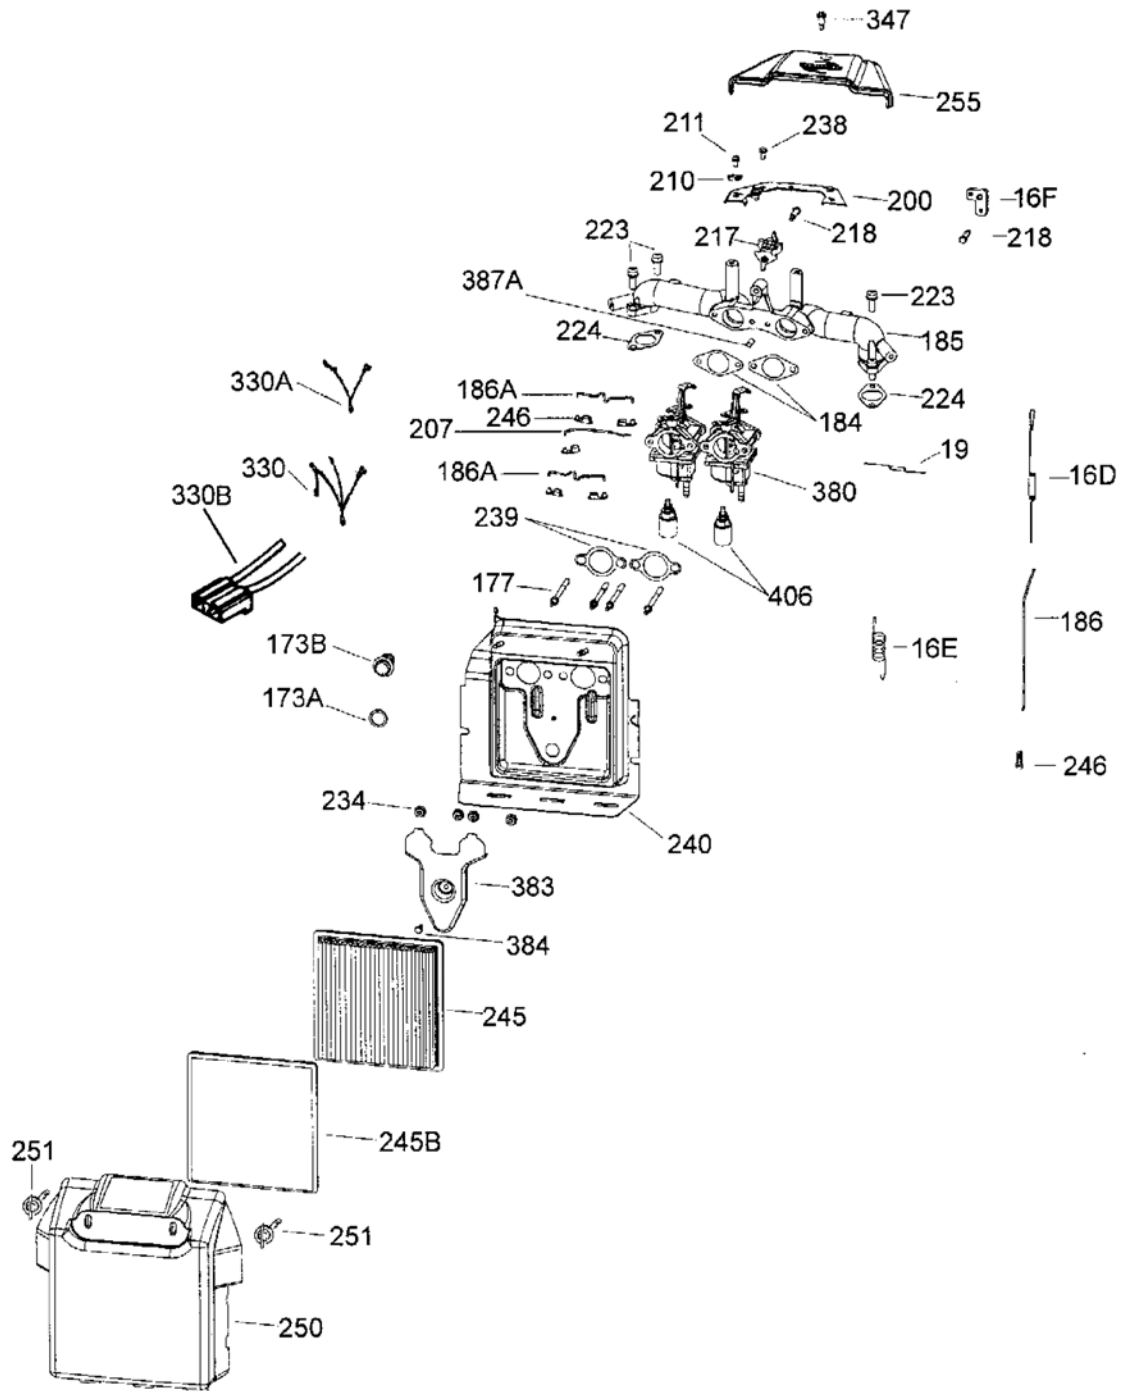


Models LT942H & LT946H

Ref.	Part Number	Description	Ref.	Part Number	Description
2	TC-27652	Dowel Pin	83	TC-35322	Governor Spool
11	TC-36302	Check Valve	84	TC-29193	Retaining Ring
11A	TC-36303	Breather Plate	86	TC-651064	Screw, 5/16-18 x 1-15/32"
11B	TC-650902	Screw, 10-32 x 7/16"	89	TC-650592	Flywheel Key
14	TC-37363	Washer	90	TC-611254	Flywheel (Incl. 91 & 91A)
15	TC-37364	Governor Rod	91	TC-611241	Flywheel Fan
15B	TC-650738	Screw, 1/4-20 x 5/8"	91A	TC-611242	Flywheel Retainer
16	TC-37413	Governor Lever	92	TC-651082	Belleville Washer
16A	TC-37414	Governor Spring Bracket	93	TC-650594	Flywheel Nut
16D	TC-37415	Governor Spring, Hi-speed	100	TC-37395	Solid State Ignition (Incl. 101)
16E	TC-37417	Governor Idle Spring	101	TC-610118	Spark Plug Cover
16F	TC-37418	Bell Crank Lever	102	TC-651024	Solid State Mounting Stud
17C	TC-37429	Breather Tube Clamp	103	TC-651007	Screw, T-15 10-24 x 15/16"
19	TC-37416	Throttle Spring	119	TC-37388	Cylinder Head Gasket
30	TC-37371	Crankshaft	120	TC-37387	Cylinder Head, Opp. Breather Side
35	TC-651069	Screw, Carriage 1/4-20 x 1-1/2"	120A	TC-37389	Cylinder Head, Breather Side
37	TC-650456	Lock Nut, 1/4-20	125	TC-36934	Exhaust Valve (Std.)
38	TC-37365	Retaining Ring	126	TC-36935	Intake Valve (Std)
40	TC-40040	Piston, Pin & Ring Set (Std.)	127	TC-650691	Flat Washer
40	TC-40041	Piston, Pin & Ring Set (.010"OS)	128	TC-650690	Belleville Washer
41	TC-40038	Piston & Pin Ass'y. (Std.) (Incl. 43)	130	TC-650697A	Screw, 5/16-18 x 2-1/2" (Head Mount)
41	TC-40039	Piston & Pin Ass'y. (.010"OS) (Incl. 43)	135	TC-34645	Spark Plug (RN4C)
42	TC-40013	Ring Set (Std.)	150	TC-33507	Valve Spring
42	TC-40014	Ring Set (.010"OS)	151	TC-33508	Valve Keeper Retainer & Cap Set
43	TC-27888	Piston Pin Retaining Ring	151A	TC-35862	Valve Seal
45	TC-37372	Connecting Rod Ass'y. (Incl. 46)	153	TC-37390	Push Rod Guide
46	TC-651063	Connecting Rod Bolt	154	TC-650945	Rocker Arm Stud
48	TC-37373	Valve Lifter	155	TC-35950	Rocker Arm
50	TC-37374	Camshaft (MCR)	158	TC-37391	Push Rod
52	TC-37305	Oil Pump Ass'y.	159	TC-35952	Rocker Arm Cover Gasket
52A	TC-37382	Oil Pump Shaft	160	TC-35953A	Rocker Arm Cover, Opp. Breather Side
52B	TC-36333	"O" Ring	160A	TC-37392	Rocker Arm Cover, Breather Side
52C	TC-36334	Oil Pump Cover (Incl. 52B)	161	TC-30063	Screw, T-30 1/4-20 x 1/2"
52D	TC-650888	Screw, T-30 1/4-20 x 43/64"	161A	TC-651034	Stud, Valve Cover Mounting
52E	TC-37383	Oil Pump Gear	162	TC-650947	Rocker Arm Jam Nut, 5/16-24
52F	TC-37384	Oil Pump Gear Retaining Ring	163	TC-650890	Internal Lock Washer, 5/16"
60A	TC-650773	Screw, 1/4-20 x 1/2"	169	TC-37367	Valve Cover Gasket
69	TC-37377	Mounting Flange Gasket	171	TC-37366	Breather Element
70	TC-37378	Mounting Flange (Incl. 72, 72A, 75, 80, 381-387)	172	TC-37368	Valve Cover
72C	TC-37651	Oil Drain Valve	173	TC-37393	Breather Tube
75	TC-36301	Oil Seal (1 in Ref 1, 1 in Ref 70)	173A	TC-37410	Breather Tube Grommet
75A	TC-37369	Oil Seal (Governor Shaft)	173B	TC-37409	Breather Tube Fitting
80	TC-37379	Governor Shaft	177	TC-651067	Carburetor Mounting Stud
81	TC-37381	Washer (Governor Shaft)	184	TC-36352	Carburetor to Intake Pipe Gasket
82	TC-37380	Governor Gear Ass'y.	185	TC-37396	Intake Pipe (Incl. 387A)

Models LT942H & LT946H


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
186	TC-37404	Governor Link	305	TC-36349	Oil Fill Tube
186A	TC-37405	Choke Link	306	TC-37401	O-Ring (Oil Fill, Bottom)
200	TC-37400	Control Bracket	307	TC-35499	O-Ring Oil Fill, Top)
207	TC-37406	Throttle Link	309	TC-650974	Screw, 1/4-20 x 57/64"
210	TC-27793	Conduit Clip	310	TC-37421	Dipstick
211	TC-28942	Screw, 10-32 x 3/8"	313A	TC-36674	Spacer
212	TC-37370	Bushing	314	TC-651007	Screw, T-15, 10-24 x 15/16"
217	TC-37419	Control Lever	315	TC-611292	Alternator Coil (16 Amp)
218	TC-651070	Screw, 10-32 x 1-1/4"			(Incl. 322-323B)
223	TC-650971	Screw, T-30 5/16-18 x 7/8"	319	TC-651015	Screw, 1/4-20 x 1-1/8"
224	TC-33515A	Intake Pipe Gasket (Pipe to Head)	320	TC-611184	Regulator (16 Amp)
234	TC-650928	Lock Nut, 1/4-20	322	TC-611281	Connector Body
238	TC-650902	Screw, 10-32 x 7/16"	323	TC-611276	Terminal
239	TC-36358	Air Cleaner Gasket	323A	TC-611277	Terminal
240	TC-37691	Air Cleaner Body Ass'y. (Incl. 239)	323B	TC-611282	Terminal
245	TC-37360	Air Cleaner Filter (Paper)	325	TC-36342	Wire Clip
245B	TC-37361	Air Cleaner Pre-Filter (Poly)	330	TC-37739	Fuel Solenoid Wire Assembly (R & G)
246	TC-37407	Connector Bushing Link	330A	TC-37403	Fuel Solenoid Wire Assembly (Black)
250	TC-37690	Air Cleaner Cover	342	TC-651031	Screw, 1/4-20 x 9/16" (Ref. 240 & 265)
251	TC-37689	Wing Nut, 1/4-20 x 1-19/32"	346	TC-36413	Fuel Pump Bracket
253	TC-37376	Compression Release Weight	347	TC-650898A	Screw, 10-32 x 27/32"
253A	TC-37424	Compression Release Pin	361	TC-651065	Screw, 5/16-18 x 2-3/8"
254	TC-37375	Compression Release Spring	370A	TC-35274	Lubrication Decal
255	TC-37420	Control Cover	380	TC-640221	Carburetor (Incl. 184 & 428)
260	TC-37398	Blower Housing (Red)	381	TC-650767	Screw, 8-32 x 27/64"
261	TC-650737	Screw, 1/4-20 x 1/2"	382	TC-36931	Oil Strainer Screen
265	TC-37627	Cylinder Head Cover, Opp. Breather	383	TC-37411	Carburetor Baffle
265A	TC-37628	Cylinder Head Cover, Breather Side	384	TC-30200	Screw, 10-24 x 9/16" Self Tap
270A	TC-35829A	Exhaust Port Liner	385	TC-570673	Ball
286	TC-37394	Flywheel Screen	386	TC-36329	Pressure Release Spring
287	TC-651066	Screw, T-20 8-18 x 1-15/32"	387	TC-37652	Cotter Pin
290	TC-30962	Fuel Line (16.75")	387A	TC-37397	Roll Pin
291	TC-29774	Fuel Line (8-1/4")	395	TC-37284	Electric Starter Motor (12 Volt)
291A	TC-29774	Fuel Line (8-1/4")	400	TC-37423	Gasket Set
291C	TC-34357	Fuel Line (6.75")	406	TC-611221	Fuel Shut-Off Solenoid
292	TC-26460	Fuel Line Clamp	428	TC-37362	Spacer
292A	TC-37399	Fuel Line Retainer	475	TC-36563	Oil Filter
293	TC-35787	Pulse Pump	476	TC-36929	Oil Filter Adaptor (Incl. 479)
293A	TC-650931	Screw, 8-32 x 1-1/2"	477	TC-650378	Screw, T-30 5/16-18 x 1 3/32"
295A	TC-37422	Fuel Fitting	479	TC-36930	Oil Filter Adaptor Gasket
296	TC-37768	Fuel Filter (Incl. 292)	483	TC-37629	Cylinder Wrap Spacer
303	TC-32958	Pulse Pump/Fuel Fitting			

Models LT942H & LT946H

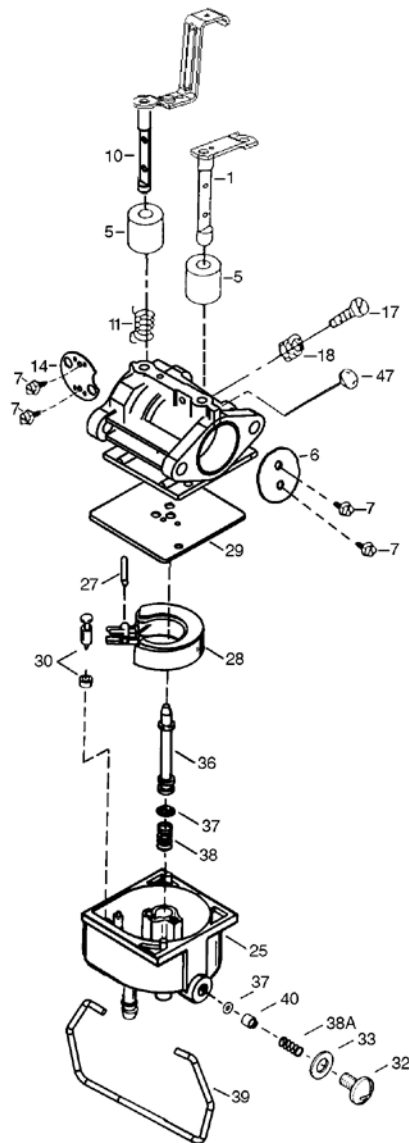

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
—	TC-640221	Carburetor (Incl. 184 of Engine Parts List)	27	TC-632544	Float Shaft
1	TC-640216	Throttle Shaft & Lever Assembly	28	TC-632543	Float
5	TC-640037	Dust Seal	29	TC-640047	Float Bowl to Body Gasket
6	TC-640038	Throttle Shutter	30	TC-632709	Inlet Needle & Seat
7	TC-650506	Throttle & Choke Shutter Screws	32	TC-640041	Bowl Drain Screw
10	TC-640217	Choke Shaft & Lever Assembly	33	TC-640042	Bowl Drain Washer
11	TC-632785	Choke Return Spring	36	TC-640067	Main Nozzle Tube
14	TC-640177	Choke Shutter	37	TC-632547	O-ring
17	TC-651025	Throttle Crack Screw/ Idle Speed Screw	38	TC-632545	Spring, Main Nozzle Tube
18	TC-630766	Tension Spring	38A	TC-36918	Spring
25	TC-640220	Float Bowl Assembly	39	TC-640218A	Float Bowl Retainer
25A	TC-730649	Float Bowl Repair Kit	40	TC-640219	Main Fuel Jet
			47	TC-630748	Welch Plug, Idle Mixing Well

Models LT942H & LT946H

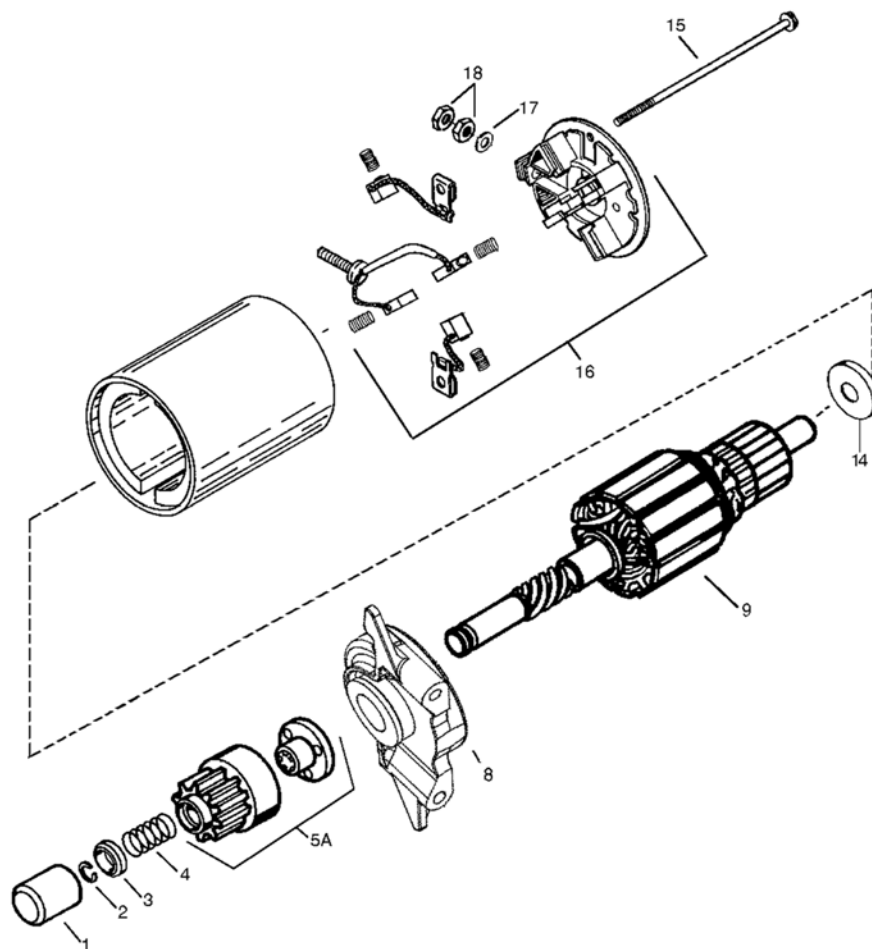

REF. NO.	PART NO.	DESCRIPTION
—	TC-6 : 5 ; 7	Electric Starter (12 Volt)
1	TC-33841	Dust Cover
2	TC-33842	Retainer Ring
3	TC-33843	Spring Retainer
4	TC-33854	Anti-drift Spring
5A	TC-36853	Gear & Nut (Incl. 2)
8	TC-37354	Drive End Cap Assembly
9	TC-37355	Armature
14	TC-35897	Thrust Washer
15	TC-36856	Case Bolt
16	TC-37356	End Cap & Brush Card Ass'y (Incl. 14, 17 & 18)
17	TC-650168	Washer
18	TC-650864	Nut