



SECTION 12: PARTS LIST FOR MODELS T604G & T604H

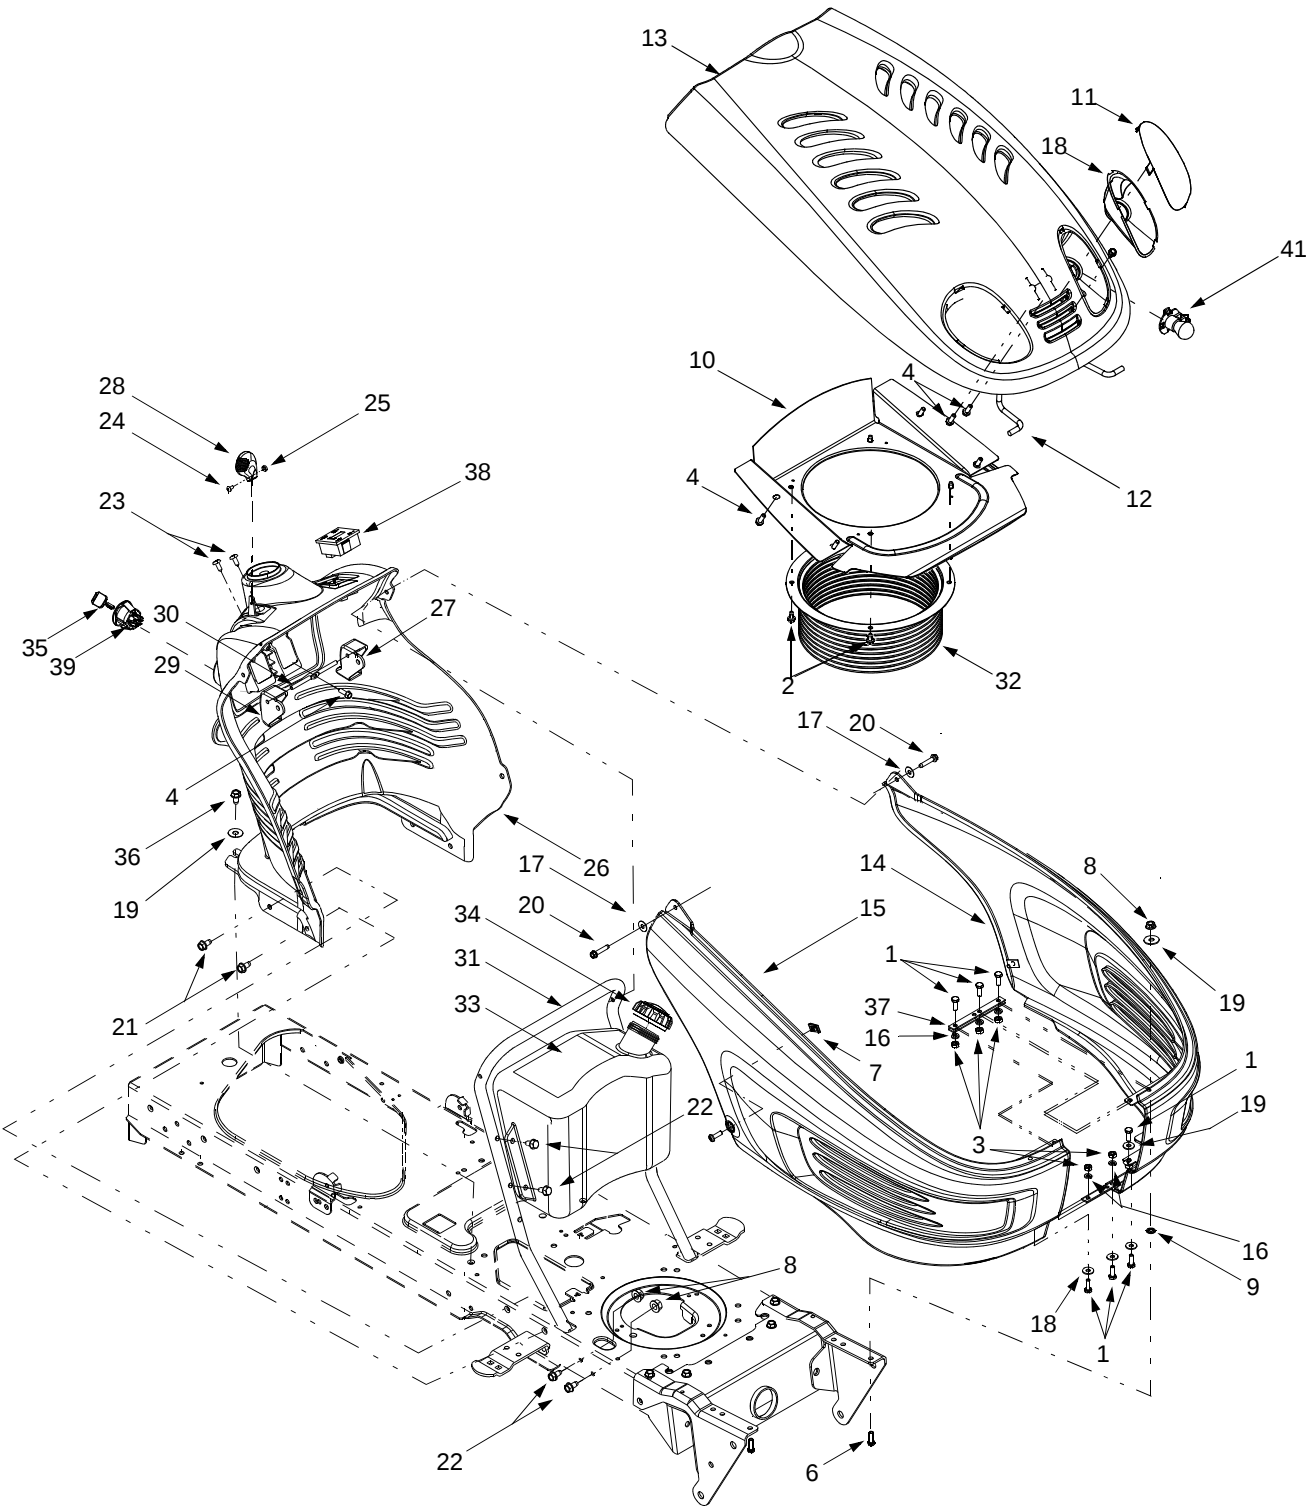

Models T604G & T604H

REF. NO.	PART NO.	DESCRIPTION
1	710-3015	Hex Cap Screw, 1/4-20 x .75
2	710-0599	Self-tapping Screw, 1/4-20 x .5
3	712-3006	Hex Nut, 1/4-20
4	710-0895	Self-tapping Screw, 1/4-15 x .75
5	710-0924	Pan Phillips Screw, 1/4-20 x .75
6	710-0376	Hex Cap Screw, 5/16-18 x 1.0
7	712-0292	U-type Speed Nut, 1/4-20
8	712-3004A	Flange Lock Nut, 5/16-18
9	726-0201	Speed Nut
10	783-0808A	Hood Heat Shield
11	731-1978	RH Headlight Lens
	731-1979	LH Headlight Lens
12	747-1132A	Hood Support Rod
13	731-1980A	Hood
14	731-1981C	LH Side Panel
15	731-1982C	RH Side Panel
16	736-0329	Lock Washer, 1/4
17	736-0342	Flat Washer, .283 x .75 x .030
18	731-1995	RH Headlight Reflector
	731-1996	LH Headlight Reflector
19	736-3078	Flat Washer, .349 x 1.0 x .063
20	710-0809	Self-tapping Screw, 1/4-20 x 1.25
21	710-1611B	Self-tapping Screw, 5/16-18 x .75
22	710-0604A	Self-tapping Screw, 5/16-18 x .625
23	710-1017	Torx Self-tapping Screw, 1/4-14 x .625
24	710-3217	Torx Screw, #8-32 x .375
25	712-0142	Hex Nut, 8-32
26	731-0069C	Dash Panel
27	731-0072	Parking Brake Button
28	731-1857	Throttle Control Lever
29	731-2106	Cruise Control Button
30	747-1155	Brake/Cruise Pivot Rod
31	749-1087A	Dash Support Tube
32	731-2234	Intake Bellow
33	751-0658D	Fuel Tank, 3-gallon
34	751-0603	Fuel Cap
35	725-1745	Ignition Key w/ plastic cover
	725-1744	Ignition Key w/o plastic cover
36	710-0726	Self-tapping Screw, 5/16-18 x .75
37	783-1000A	Grille Support Bracket
38	725-1758	Systems Indicator Monitor, Ammeter
39	725-1741	Ignition Switch
40	625-0051	Headlight Assembly
—	629-0469B	Headlight Wire Harness
—	629-1072	Tractor Wire Harness


Models T604G & T604H

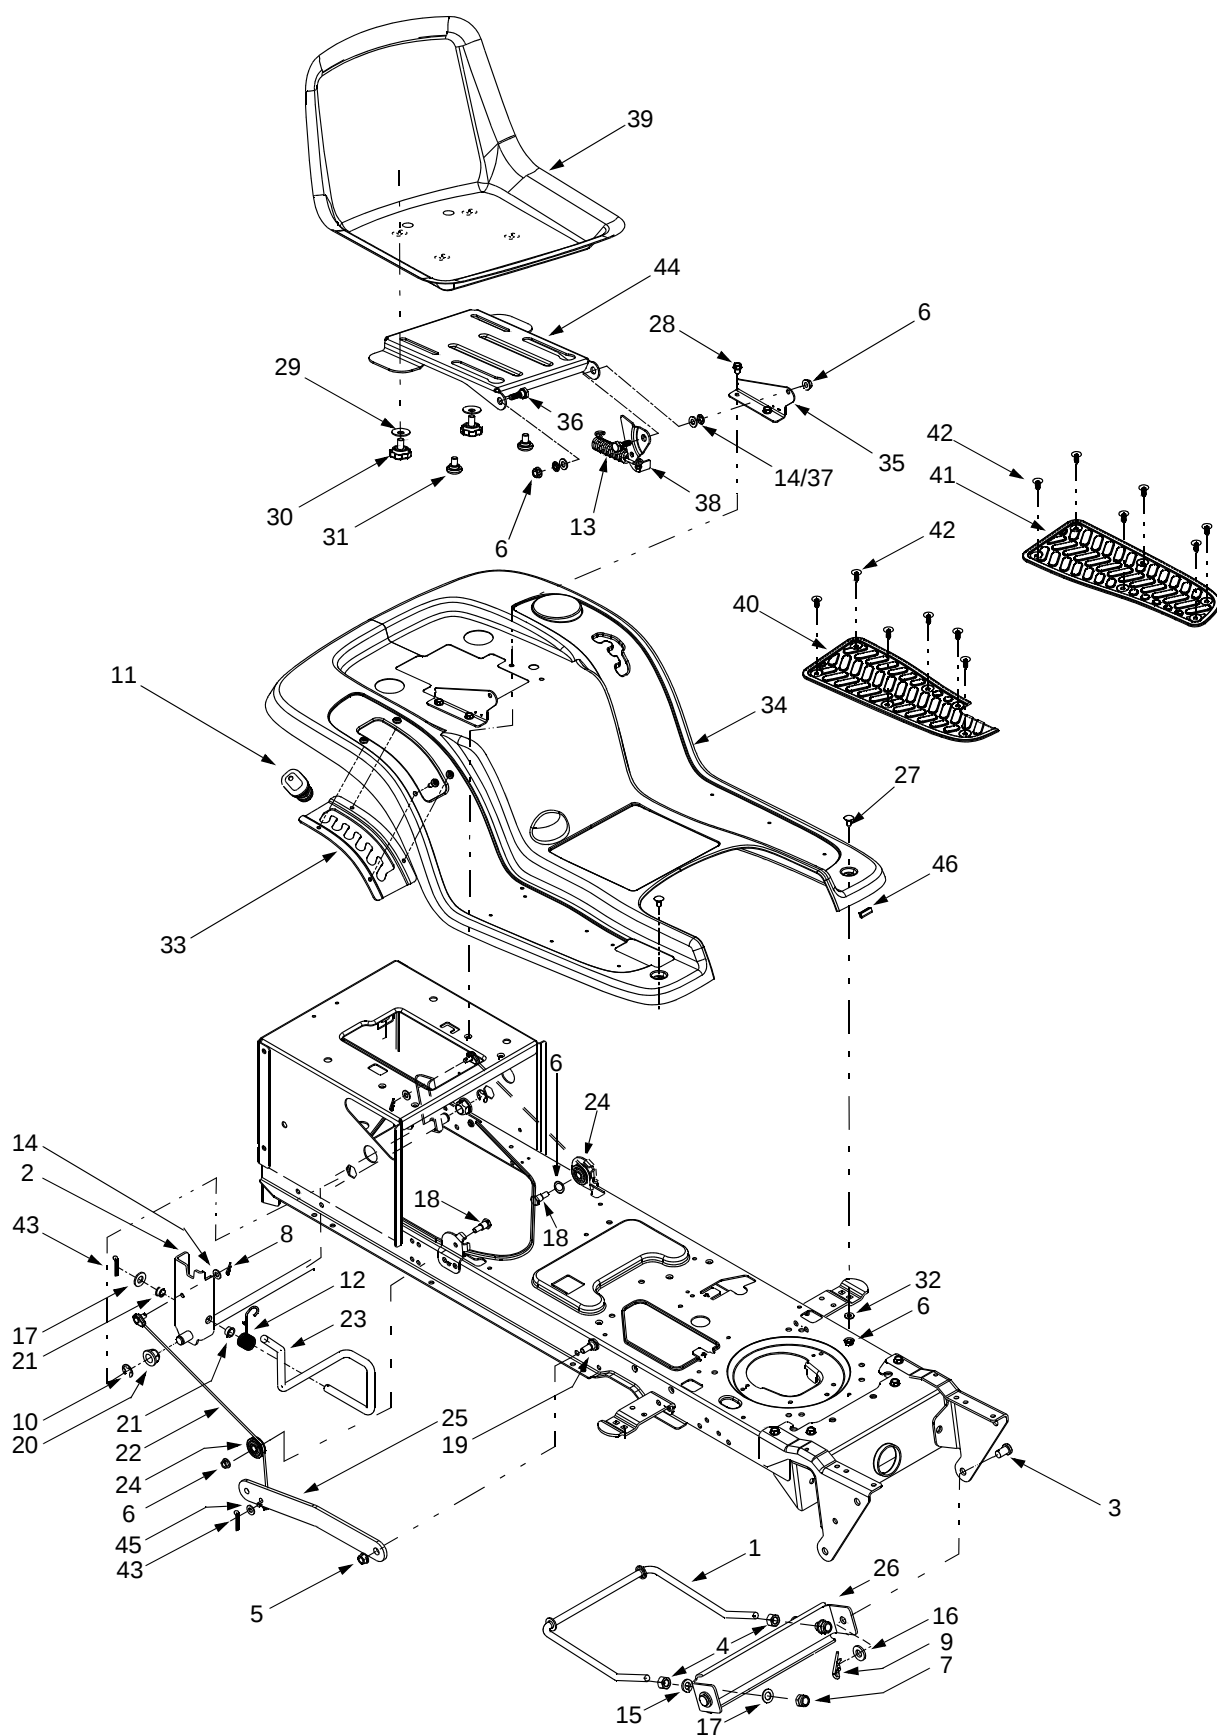

Models T604G & T604H

REF. NO.	PART NO.	DESCRIPTION
1	747-1130B	Deck Stabilizer Rod
2	683-0197B	Lift Shaft Assembly
3	711-0332	Clevis Pin, .5 x .78
4	712-0206	Hex Nut, 1/2-13
5	712-0431	Flange Lock Nut, 3/8-16
6	712-3004A	Flange Lock Nut, 5/16-18
7	712-3083	Hex Nut, 1/2-13
8	714-0104	Internal Cotter Pin
9	714-0145	Internal Cotter Pin
10	716-0106	E-ring
11	720-0311	Handle Grip
12	732-0874	Torsion Spring
13	732-1184	Extension Spring, .84 x 4.6
14	736-0275	Flat Washer, 5/16
15	736-0921	Lock Washer, 1/2
16	736-3019	Flat Washer, .531 x 1.062 x .134
17	736-3084	Flat Washer, .51 x 1.12 x .06
18	738-0138A	Hex Cap Screw, 5/16-18 x .62
19	738-0143	Shoulder Screw, 3/8-16
20	741-0225	Hex Flange Bearing
21	741-0715	Snap Flange Bearing
22	746-0968	Lift Cable, 16.16 (T604G)
	746-1144	Lift Cable, 15.62 (T604H)
23	747-1111A	Lift Handle
24	756-1154	Roller Pulley
25	783-0678A	Arm Lift
26	783-0720A	Deck Stabilizer Bracket
27	710-0260A	Carriage Bolt, 5/16 x .62
28	710-0604A	Self-tapping Screw, 5/16-18 x .625
29	736-0331	Bell Washer, .390 x 1.13 x .062
30	720-04009	Knob, 3/8-16
31	738-04012	Shoulder Screw
32	736-3078	Flat Washer, .349 x 1.0 x .063
33	783-1010	Lift Adjustment Bracket
34	783-0840A	Fender
35	783-1489	Seat Mounting Bracket
36	738-0296	Shoulder Screw
37	726-0201	Speed Clip
38	783-0209A	Seat Lift Bracket
39	757-04011	Medium Back Seat, Yellow
40	735-0672	RH Foot Pad, Rubber
41	735-0673	LH Foot Pad, Rubber
42	726-3046	Foot Pad Clips
43	714-0111	Cotter Pin
44	783-04081	Seat Pivot Bracket
45	736-0204	Flat Washer, .344 x .62
46	731-0511	Trim Strip


Models T604G & T604H

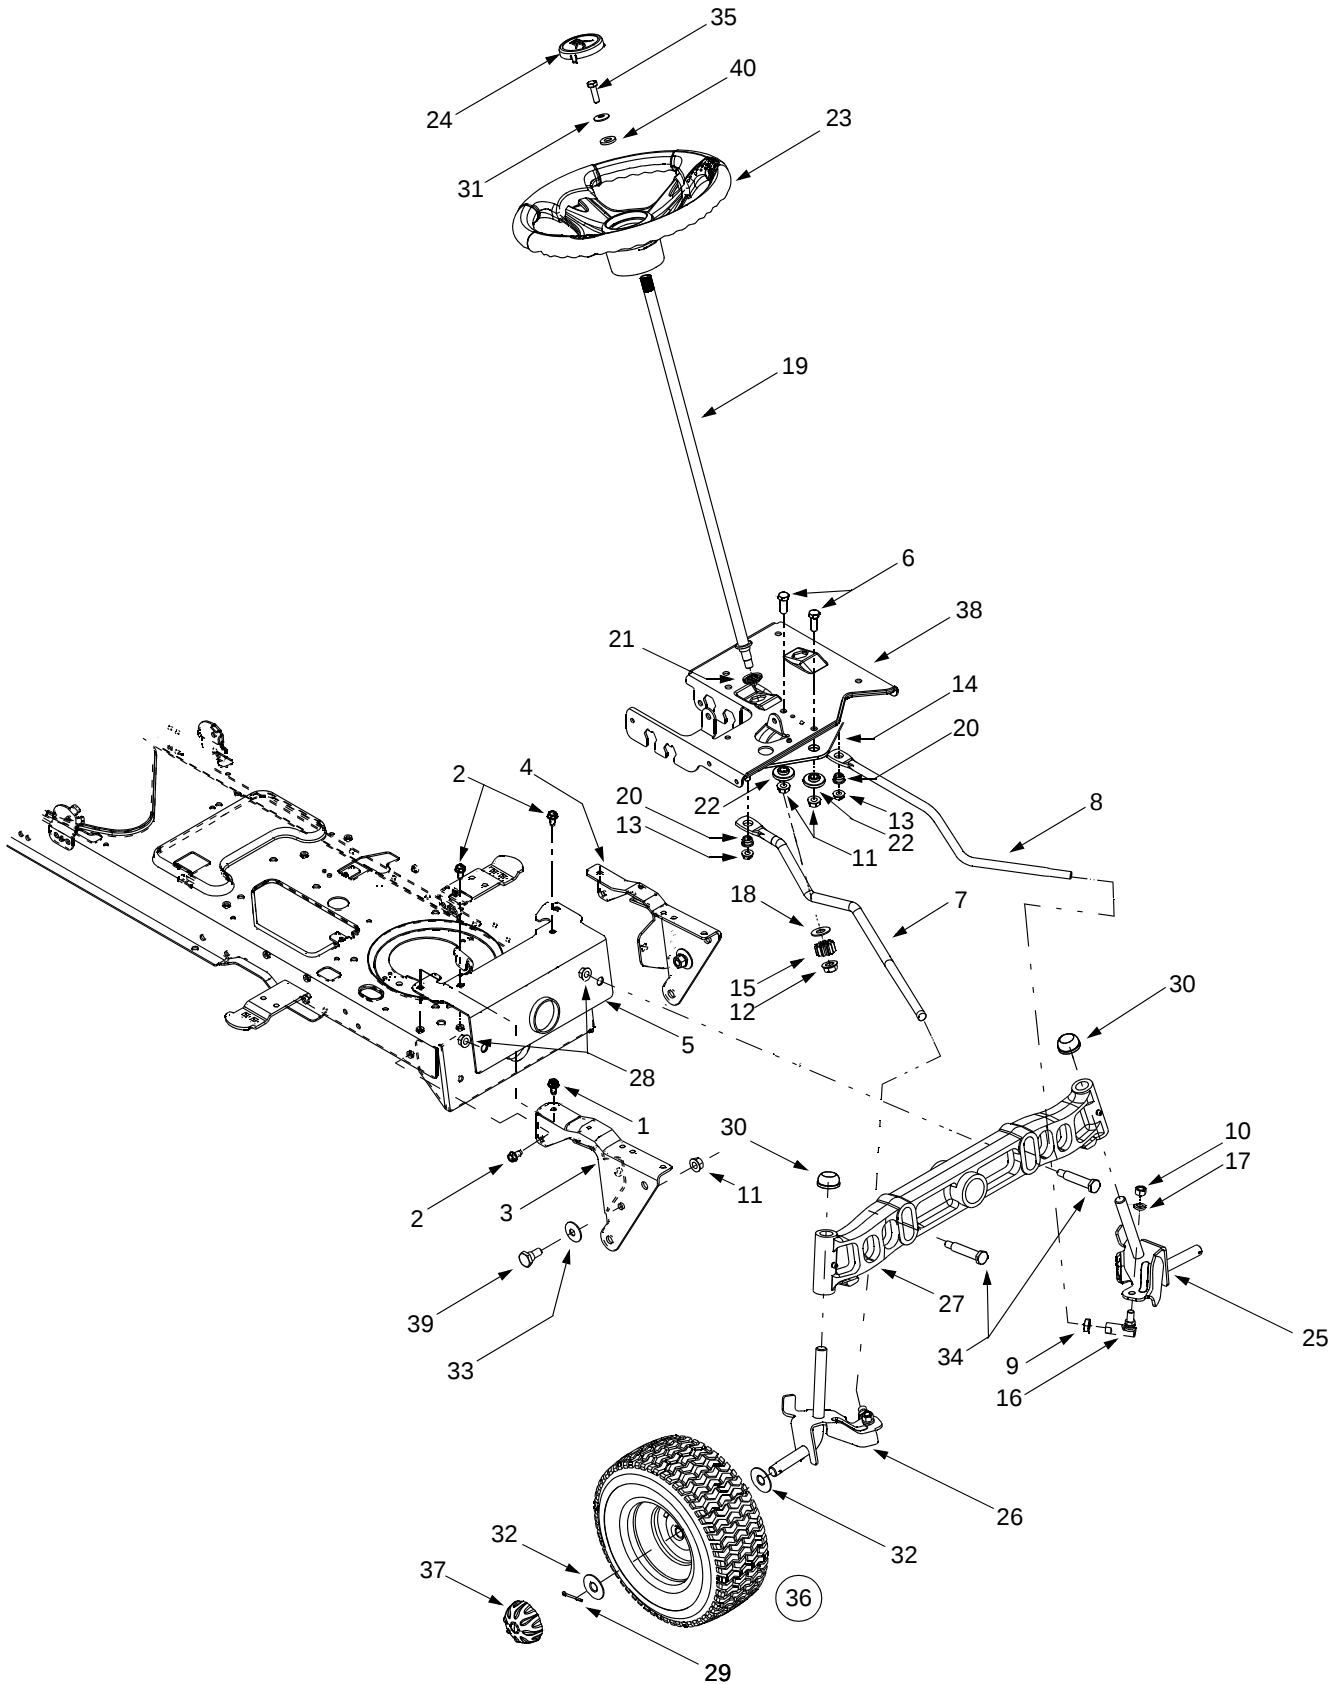

Models T604G & T604H

REF. NO.	PART NO.	DESCRIPTION
1	710-1260A	Self-tapping Screw, 5/16-18 x .75
2	710-0604A	Self-tapping Screw, 16-18 x .625
3	783-0726B	RH Pivot Support Bracket
4	783-0727A	LH Pivot Support Bracket
5	783-0728	Pivot Bar Bracket
6	710-0514	Hex Cap Screw, 3/8-16 x 1 (Grade 5)
7	711-1408	RH Drag Link
8	711-1409A	LH Drag Link
9	712-0240	Jam Nut, 7/16-20 (Grade 2)
10	712-0241	Hex Nut, 3/8-24 (Grade 2)
11	712-0431	Flange Lock Nut, 3/8-16
12	712-0459	Flange Lock Nut, 7/16-20
13	712-3004A	Flange Lock Nut, 5/16-18
14	717-1550D	Steering Gear, 11/90 Ratio
15	717-1554	Steering Pinion Gear
16	723-0448A	Ball Joint, 7/16-20
17	736-0169	Lock Washer, 3/8
18	736-3084	Flat Washer, .51 x 1.12 x .06
19	738-1001A	Steering Shaft, .625 OD x 24.4
20	741-0475	Plastic Bushing, .38 ID
21	741-0656	Hex Flange Bearing, 5/8
22	738-0372B	Shoulder Spacer, .38 ID
23	631-04008	Steering Wheel, Soft Grip, Three Spoke
24	731-04040	Steering Wheel Cover
25	638-0019A	LH Axle Assembly, .625 Dia.(Model T604G)
	638-0021	LH Axle Assembly .625 / .750 Dia.(Model T604H)
26	638-0020A	RH Axle Assembly, .625 Dia.(Model T604G)
	638-0022	RH Axle Assembly .625 / .750 Dia. (Model T604H)
27	719-0399B	Cast Iron Pivot Bar w/ Fittings, .625 (Model T604G)
	719-0525B	Cast Iron Pivot Bar w/ Fittings, .75 (Model T604H)
28	712-0431	Flange Lock Nut, 3/8-16
29	714-0162	Cotter Pin
30	726-0214	Push Cap, .625 (Model T604G)
	726-0341	Push Cap, .750 (Model T604H)
31	736-0242	Bell Washer, .34 x .872
32	736-0285	Flat Washer, .635 x 1.589 x .06
33	736-0331	Bell Washer, .39 x 1.13 x .062
34	738-1011	Shoulder Screw, .5 x 2.2, 3/8-16
35	710-0643	Hex Bolt, 5/16-18 X 1
36	634-0105A	Wheel Assembly Complete, 15 x 6 x 6
—	634-0172	Rim Only
—	734-0255	Air Valve (Not Shown)
—	734-1731	Tire Only, Square Shoulder
—	741-0487A	Flange Bearing (Not Shown)
—	741-0706	Flange Bearing w/ Fitting (Not Shown)
37	731-2290A	Hub Cap
38	783-0653F	Steering Support Bracket
39	738-0143	Shoulder Screw, 3/8-16
40	736-3004	Flat Washer, .406 x .875 x .105

Models T604G & T604H

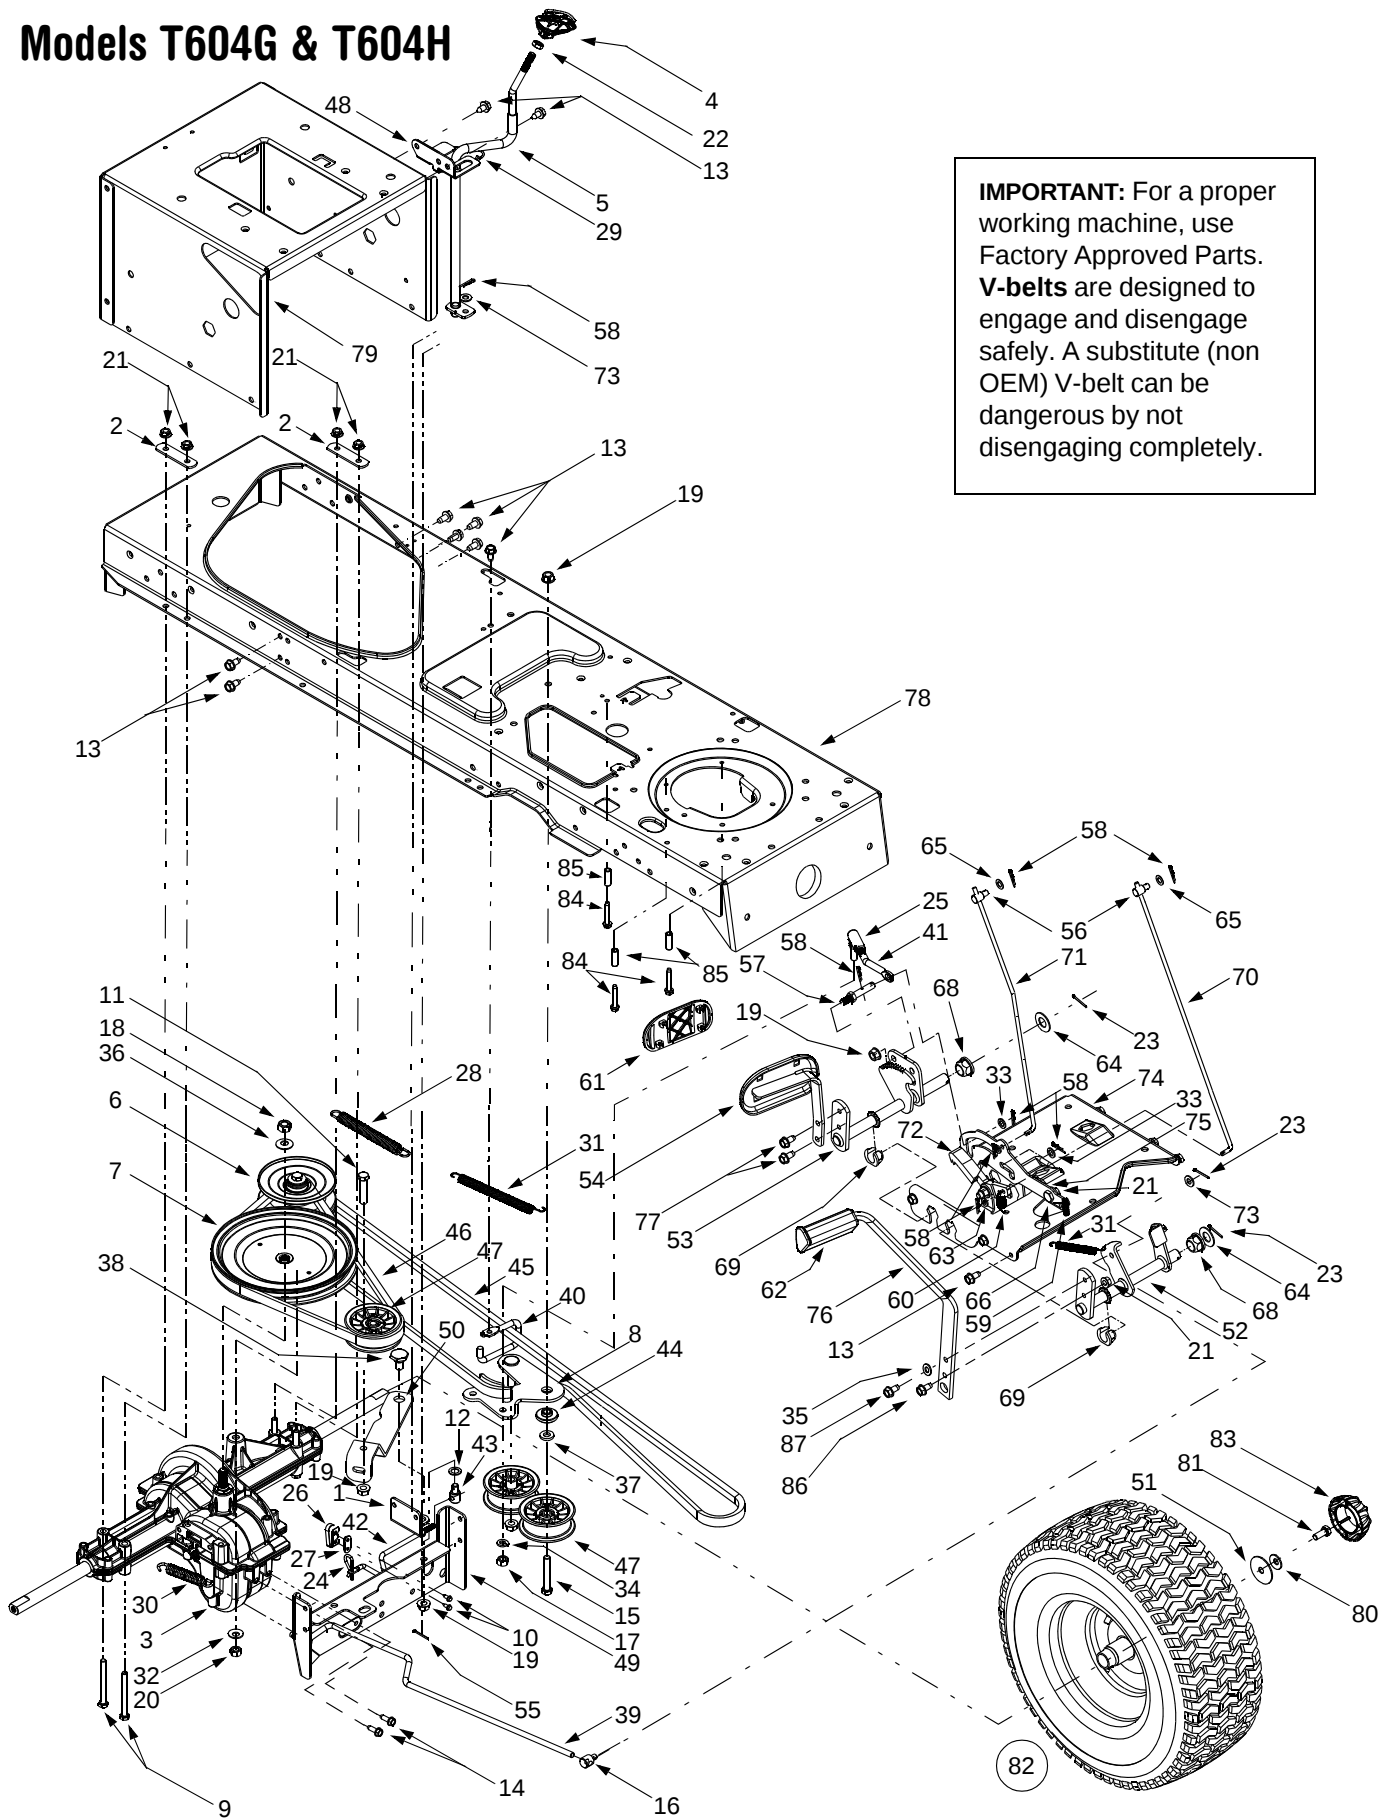


IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Models T604G & T604H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	783-1015	Shift Lever Support	46	754-0468	Upper Drive Belt
2	17840	Transaxle Mounting Bracket	47	756-0981A	Flat Idler, 2.75 OD
3	618-0551A	Single-speed Transmission Assembly	48	783-1016B	Speed Control Rod Bracket
4	631-0009A	Shifter Knob	49	783-0667B	Transmission Torque Bracket
5	647-0045	Shift Lever	50	783-0669	Idler Bracket
6	656-0048	Variable-speed Pulley Assembly	51	736-0430	Flat Washer, .350 x 1.59 x .062
7	656-0051A	Transmission Pulley, 8.5 x .5-36	52	647-0031	Brake Control Assembly
8	683-0251	Double-idler Bracket	53	647-0032	Speed Control Assembly
9	710-0176	Hex Cap Screw, 5/16-18 x 2.75	54	683-0266	Drive Pedal Assembly
10	710-0227	Self-tapping Screw, #8-18 x .5	55	714-0470	Cotter Pin, 1/8 x 1.25
11	710-0347	Hex Cap Screw, 3/8-16 x 1.75	56	711-0736	Ferrule, 1/4-20
12	736-0272	Flat Washer, .51 x 1.0 x .060	57	711-1363	Pin, 3/8-16 x 2.43
13	710-0604A	Self-tapping Screw, 5/16-18 x .625	58	714-0104	Cotter Pin
14	710-0642	Self-tapping Screw, 1/4-20 x .75	59	732-0437	Compression Spring, .34 OD x 1.0
15	710-3011	Hex Cap Screw, 3/8-16 x 2.25	60	732-0955	Extension Spring, .50 OD x 1.41
16	711-0677	Ferrule, 5/16-18	61	735-0662	Drive Pedal Pad
17	712-0241	Hex Nut, 3/8-24	62	735-3049	Brake Pedal Pad
18	712-0378	Hex Nut, 7/16-20	63	736-0142	Flat Washer, .281 x .5 x .063
19	712-0431	Flange Lock Nut, 3/8-16	64	736-0187	Flat Washer, .64 x 1.24 x .06
20	712-3017	Hex Nut, 3/8-16	65	736-0204	Flat Washer, .344 x .062 x .03
21	712-3004A	Flange Lock Nut, 5/16-18	66	738-0155	Shoulder Screw, .437 x 1.62
22	712-3008	Jam Nut, 3/8-16	67	738-0507B	Shoulder Screw, .5 x .434
23	714-0111	Cotter Pin	68	741-0225	Hex Flange Bearing
24	714-0209	Internal Cotter Pin	69	741-3065A	Split Hex Flange Bearing
25	723-3018	Ball Joint	70	747-1137	Cruise Control Rod
26	725-1644	Short Spring Switch	71	747-1138	Brake Lock Control Rod
27	726-0320	Insulator Nut Plate	72	748-0413	Cruise Latch
28	732-0384	Extension Spring, .62 Dia. x 6.12	73	736-0275	Flat Washer, .344 x .688 x .065
29	732-0525	Compression Spring Clip	74	783-0653F	Steering Support Bracket
30	732-0716	Extension Spring, .59 OD x 4	75	783-0732	Drive Lockout Bracket
31	732-0963	Extension Spring, .50 Dia. x 6.37 (hooks to flange, 783-0650, in frame)	76	783-0773	Brake Pedal
32	736-0105	Bell Washer, .401 x .87 x .063	77	710-1260A	Self-tapping Screw, 5/16-18 x .75
33	736-0140	Flat Washer, .385 x .62 x .063	78	683-0304C	Lower Frame Assembly
34	736-0169	Lock Washer, 3/8	79	783-1031A	Hitch Plate
35	736-3008	Flat Washer, .344 x .750 x .120	80	736-0242	Bell Washer, .34 x .872
36	736-0407	Bell Washer, .45 x 1.0 x .602	81	710-0627	Hex Cap Screw, 5/16-24 x .75
37	736-3010	Flat Washer, .407 x .812 x .135	82	634-0104	Wheel Assembly Complete
38	738-0322	Shoulder Screw, .625 x .217		634-0070	20 x 8 x 8 Square Shoulder
39	747-1122	Brake Rod		734-0255	Rim Assembly Only
40	747-1123A	Belt Guard		734-1730	Air Valve (Not Shown)
41	747-1127	Idler Adjustment Rod, 3/8			Tire Only, 20 x 8 x 8, Square Shoulder
42	747-0047A	Shift Rod	83	731-2290A	Deluxe Hub Cap (Ref. 51 Required)
43	711-0736	Adjustment Ferrule, 1/4-20 x 1.0	84	710-0809	Self-tapping Screw, 1/4-20 x 1.25
44	738-0372A	Shoulder Spacer, .38 ID	85	750-0566A	Spacer
45	754-0467	Lower Drive Belt	86	710-0650	Self-tapping Screw, 5/16-18 x .875
			87	710-1611B	Self-tapping Screw, 5/16-18 x .75

Models T604G & T604H

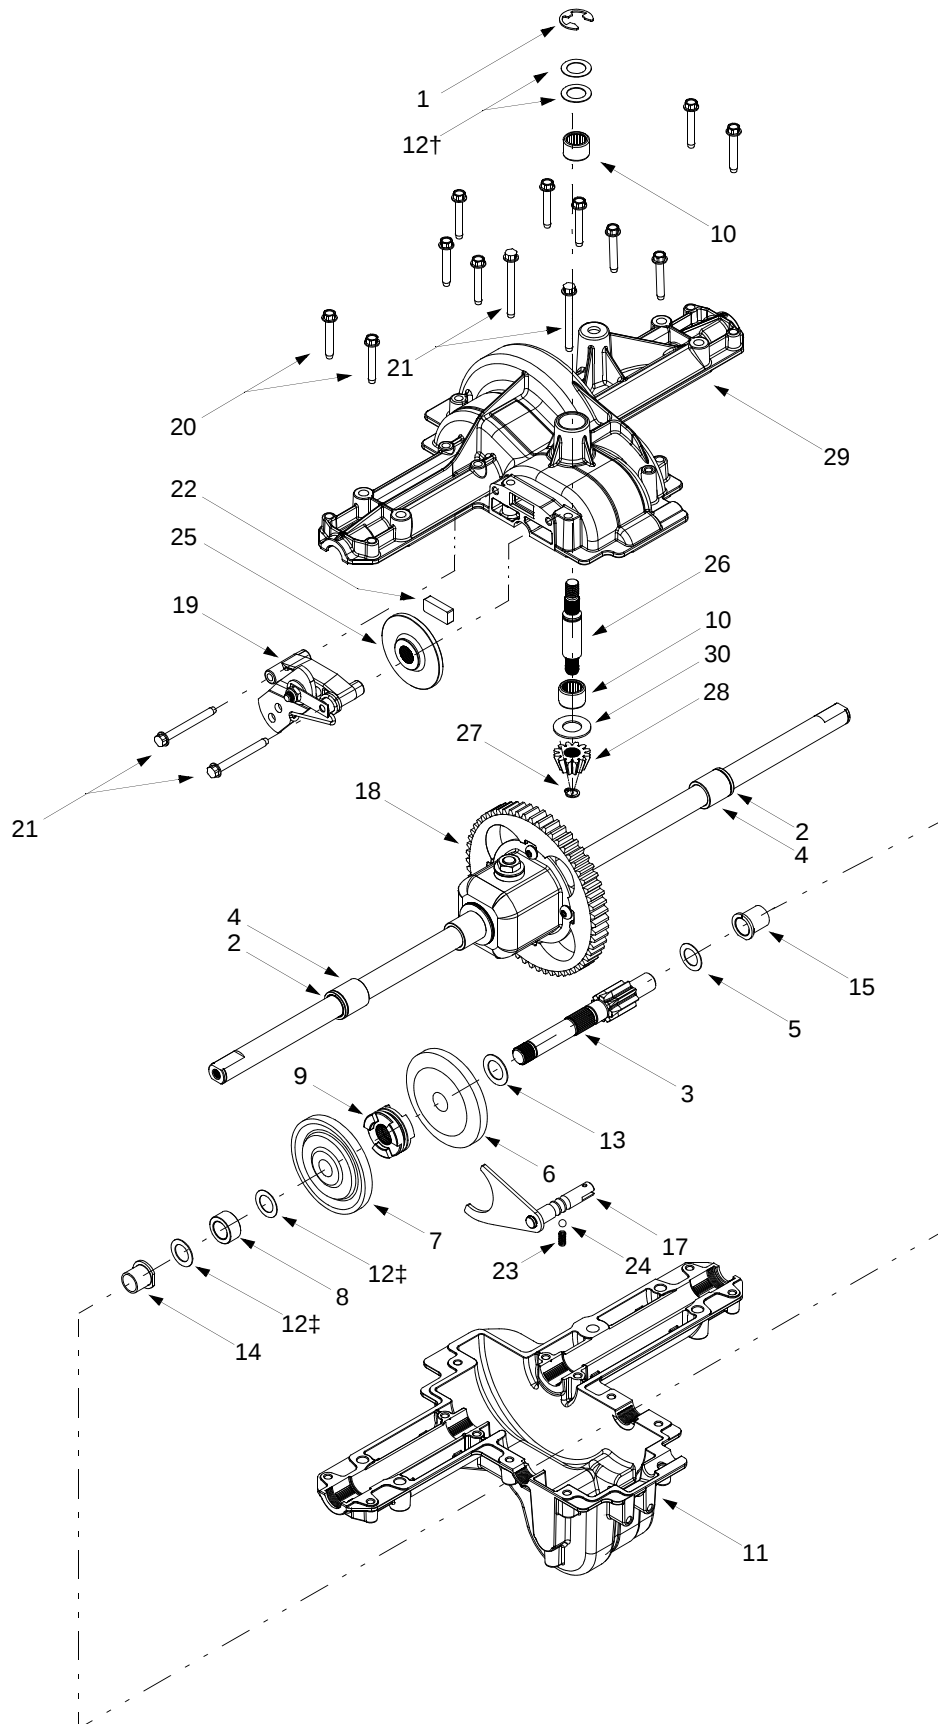


Models T604G & T604H

REF. NO.	PART NO.	DESCRIPTION
1	716-0231	E-ring, .75
2	721-0338	Seal, .75 x 1.0 x .125
3	711-1431	Drive Shaft
4	741-0340	Sleeve Bearing, .75 x 1.0 x 1.0
5	736-0495	Thrust Washer, 1.0 x .632 x .0
6	717-1362	42-tooth Bevel Gear
7	717-1363	42-tooth Bevel Gear
8	750-1234	Spacer, .633 x 1.0 x .513
9	718-0228	Clutch Collar
10	741-0335	Needle Bearing, .625 x .813 x .495
11	719-0394	Lower Housing
12	736-0336	Flat Washer, 5/8 x 1.0 x .030
	736-0337	Flat Washer, 5/8 x 1.0 x .040
	736-0349	Flat Washer, 5/8 x 1.0 x .020
13	736-0519	Flat Washer, .70 x 1.125 x .031
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
16	750-1238	Spacer, .635 x 1.0 x .27
17	611-0133	Detent Shaft Assembly
18	618-0424	Differential Assembly
19	661-0006	Brake Assembly
20	710-1325	Self-tapping Screw, 1/4-20 x 1.625
21	710-1206	Self-tapping Screw, 1/4-20 x 2.375
22	717-0678	Brake Pad
23	732-0863	Compression Spring
24	741-0862	Detent Ball
25	761-0202	Brake Disc
26	711-1430	Input Shaft
27	716-0108	Retaining Ring, .437
28	717-1464	14-tooth Bevel Pinion
29	719-0580	Upper Housing
30	736-0335	Thrust Washer, .635 x 1.25 x .042

†Use applicable flat washer in this application allowing .036/.018 in. end-play.

‡Use applicable flat washer in this application allowing .010/.005 in. end-play.

Models T604G & T604H

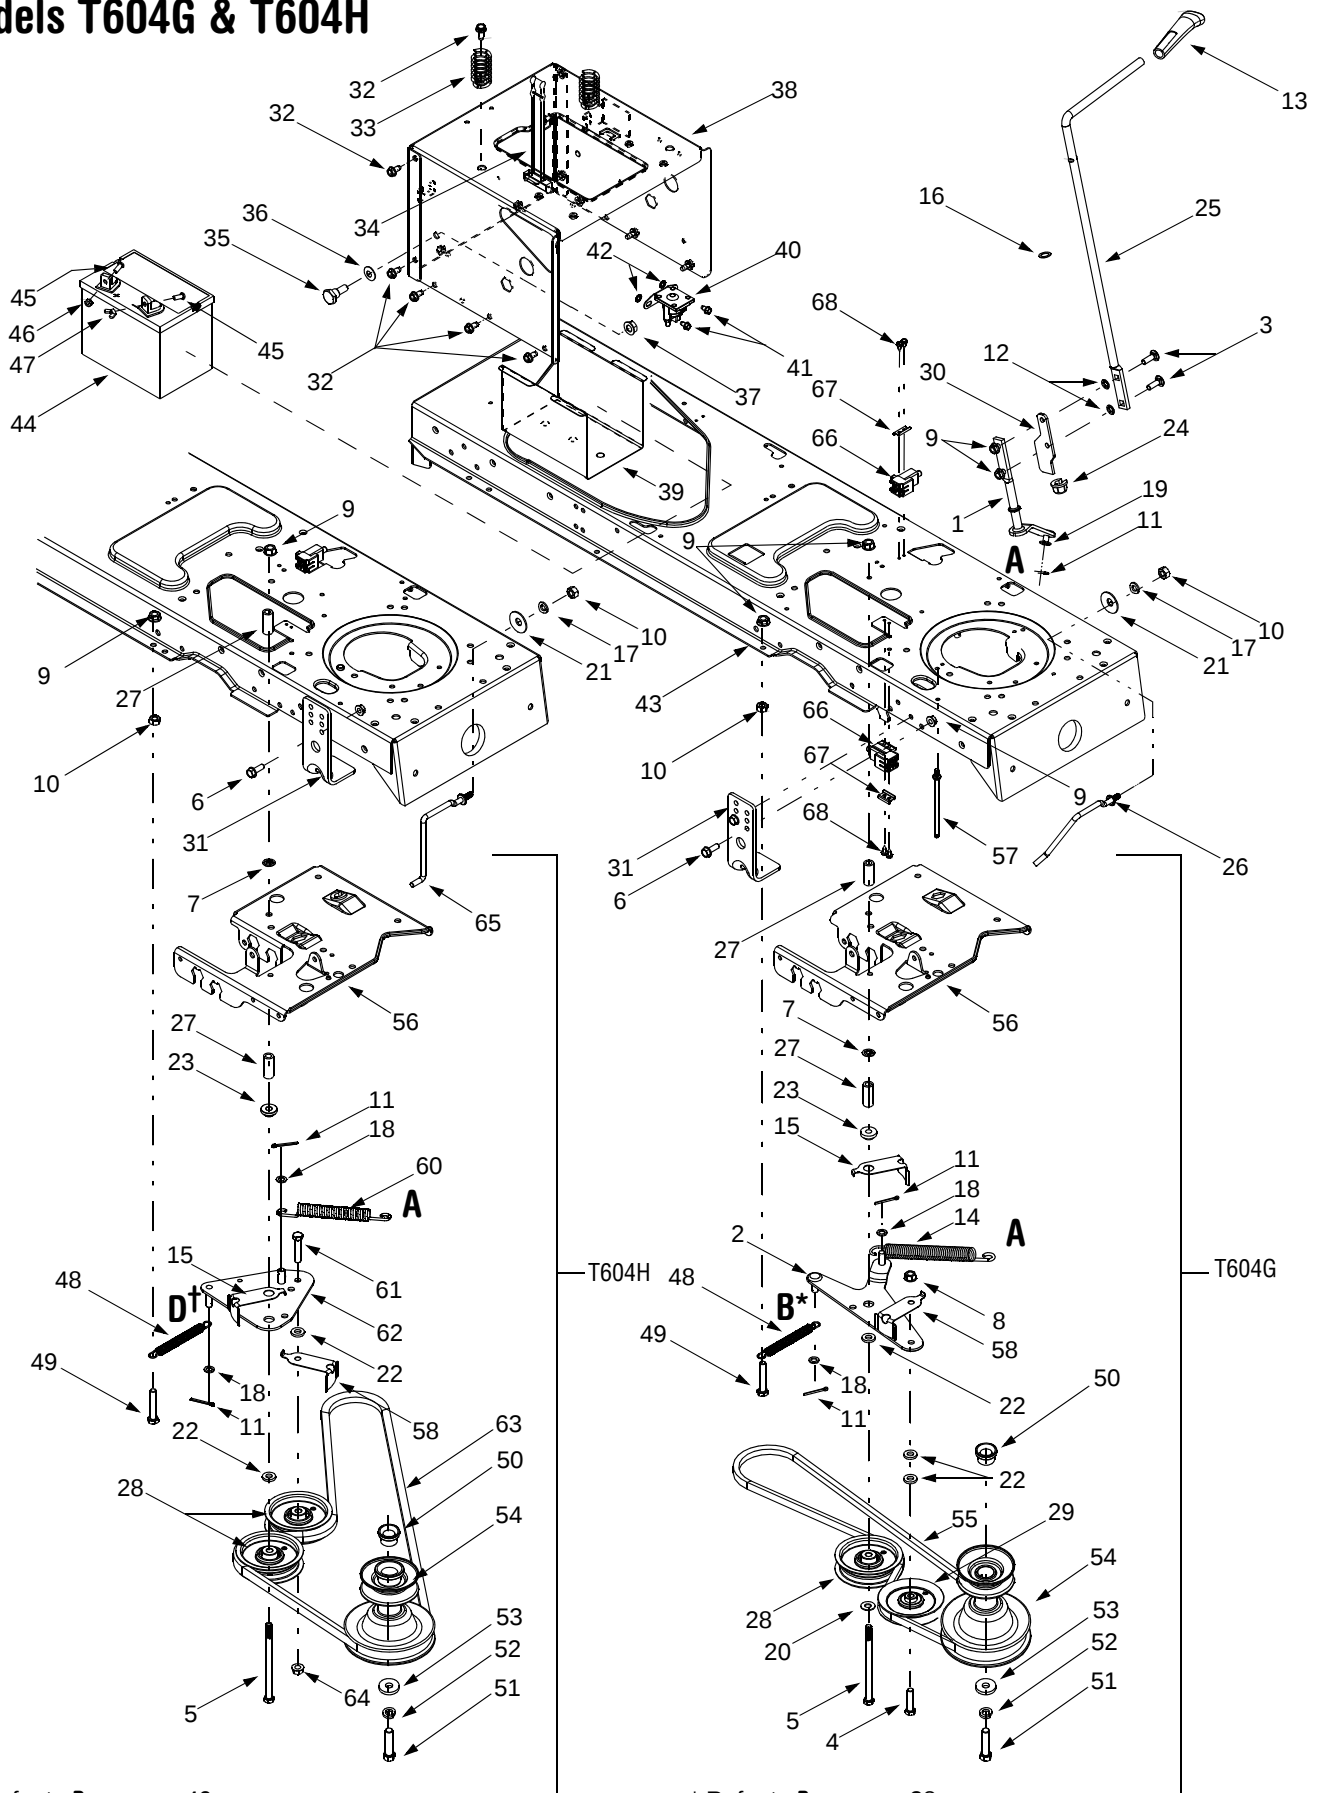

† Refer to **D** on page 40.

* Refer to **B** on page 38.

Models T604G & T604H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	647-0064	PTO Engage Lever Assembly	35	738-1020	Shoulder Screw, .625 x .5, 7/16-20
2	683-0450	PTO Engage Plate Assembly	36	736-0407	Bell Washer, .45 x 1.0 x .062
3	710-0276	Carriage Screw, 5/16-18 x 1.00	37	712-0459	Flange Lock Nut, 7/16-20
4	710-0520	Hex Cap Screw, 3/8-16 x 1.5	38	783-1031A	Hitch Plate
5	710-0831	Hex Cap Screw, 3/8-16 x 5.5	39	783-0349	Battery Tray
6	710-1238	Hex Head Washer Screw, 5/16-18 x .875	40	725-1426	Solenoid, 12-Volt, 100 Amp
7	712-0229	Push Nut, 3/8	41	710-0599	Self Tapping Screw, 1/4-20 x .5
8	712-0431	Flange Lock Nut, 3/8-16	42	736-0222	Lock Washer, 1/4
9	712-3004A	Flange Lock Nut, 5/16-18	43	683-0304C	Lower Frame Assembly
10	712-3010	Hex Nut, 5/16-18	44	725-1706	12-volt Battery, 270 CCA
11	714-0470	Cotter Pin, 1/8 x 1.25	45	710-0751	Hex Cap Screw, 1/4-20 x .62
12	726-0201	Speed Nut, .3125	46	712-0271	Hex Sems Nut, 1/4-20
13	731-2111A	PTO Knob	47	712-3044	Wing Nut, 1/4-20
14	732-1170	Extension Spring, .75 x 6.75	48	732-1165	Extension Spring, .50 x 5.0
15	732-0991A	Belt Guard	49	710-3180	Hex Cap Screw, 5/16-18 x 1.75
16	736-0108	Flat Washer, .510 x .750 x .033	50	750-0956	Spacer Cup
17	736-0119	Lock Washer, 5/16	51	710-3029	Hex Head Cap Screw, 7/16-20 x 1.25
18	736-0140	Flat Washer, .385 x .62 x .063	52	736-0171	Lock Washer, 7/16
19	736-0275	Flat Washer, 5/16	53	736-0322	Flat Washer, .450 x 1.25
20	736-0300	Flat Washer, .406 x .875 x .059	54	756-0982B	Engine Pulley, 3.56 OD x 5.56
21	736-0331	Bell Washer, .39 x 1.13 x .062	55	754-0497	PTO Belt (Model T604G)
22	736-3010	Flat Washer, .407 x .812 x .135	56	783-0653F	Steering Support Bracket
23	738-0372B	Shoulder Spacer, .380	57	711-1044	Keeper Pin, 5/16 x 4.75
24	741-0708	Hex Split Flange Bearing, .5	58	732-1013	Belt Guard
25	747-1112D	PTO Engagement Handle	59	710-3025	Hex Cap Screw, 5/16-18 x .625
26	747-1286A	Belt Keeper Rod	60	732-0944	Extension Spring, .75 x 6.75
27	748-0415B	Spacer, 3/8 x 1.54	61	710-0347	Hex Cap Screw, 3/8-16 x 1.75
28	756-0627B	Idler Pulley, 3.5	62	683-0302	PTO Engagement Plate Assembly
29	756-1208	Idler Pulley, 4.0	63	754-0486A	PTO Belt (Model T604H)
30	783-0744A	Engagement Stop	64	712-0431	Flange Lock Nut, 3/8-16
31	783-0891B	Deck Stop	65	747-1243	Belt Keeper Rod
32	710-0604A	Self Tapping Screw, 5/16-18 x .625	66	725-1657A	Switch
33	732-04035	Compression Spring, 1.28 x 3.125	67	17962	Switch Plate
34	723-0444	Battery Strap	68	710-0224	Screw, #10-16 x .5


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674


Powder Black: 0637

Model T604G

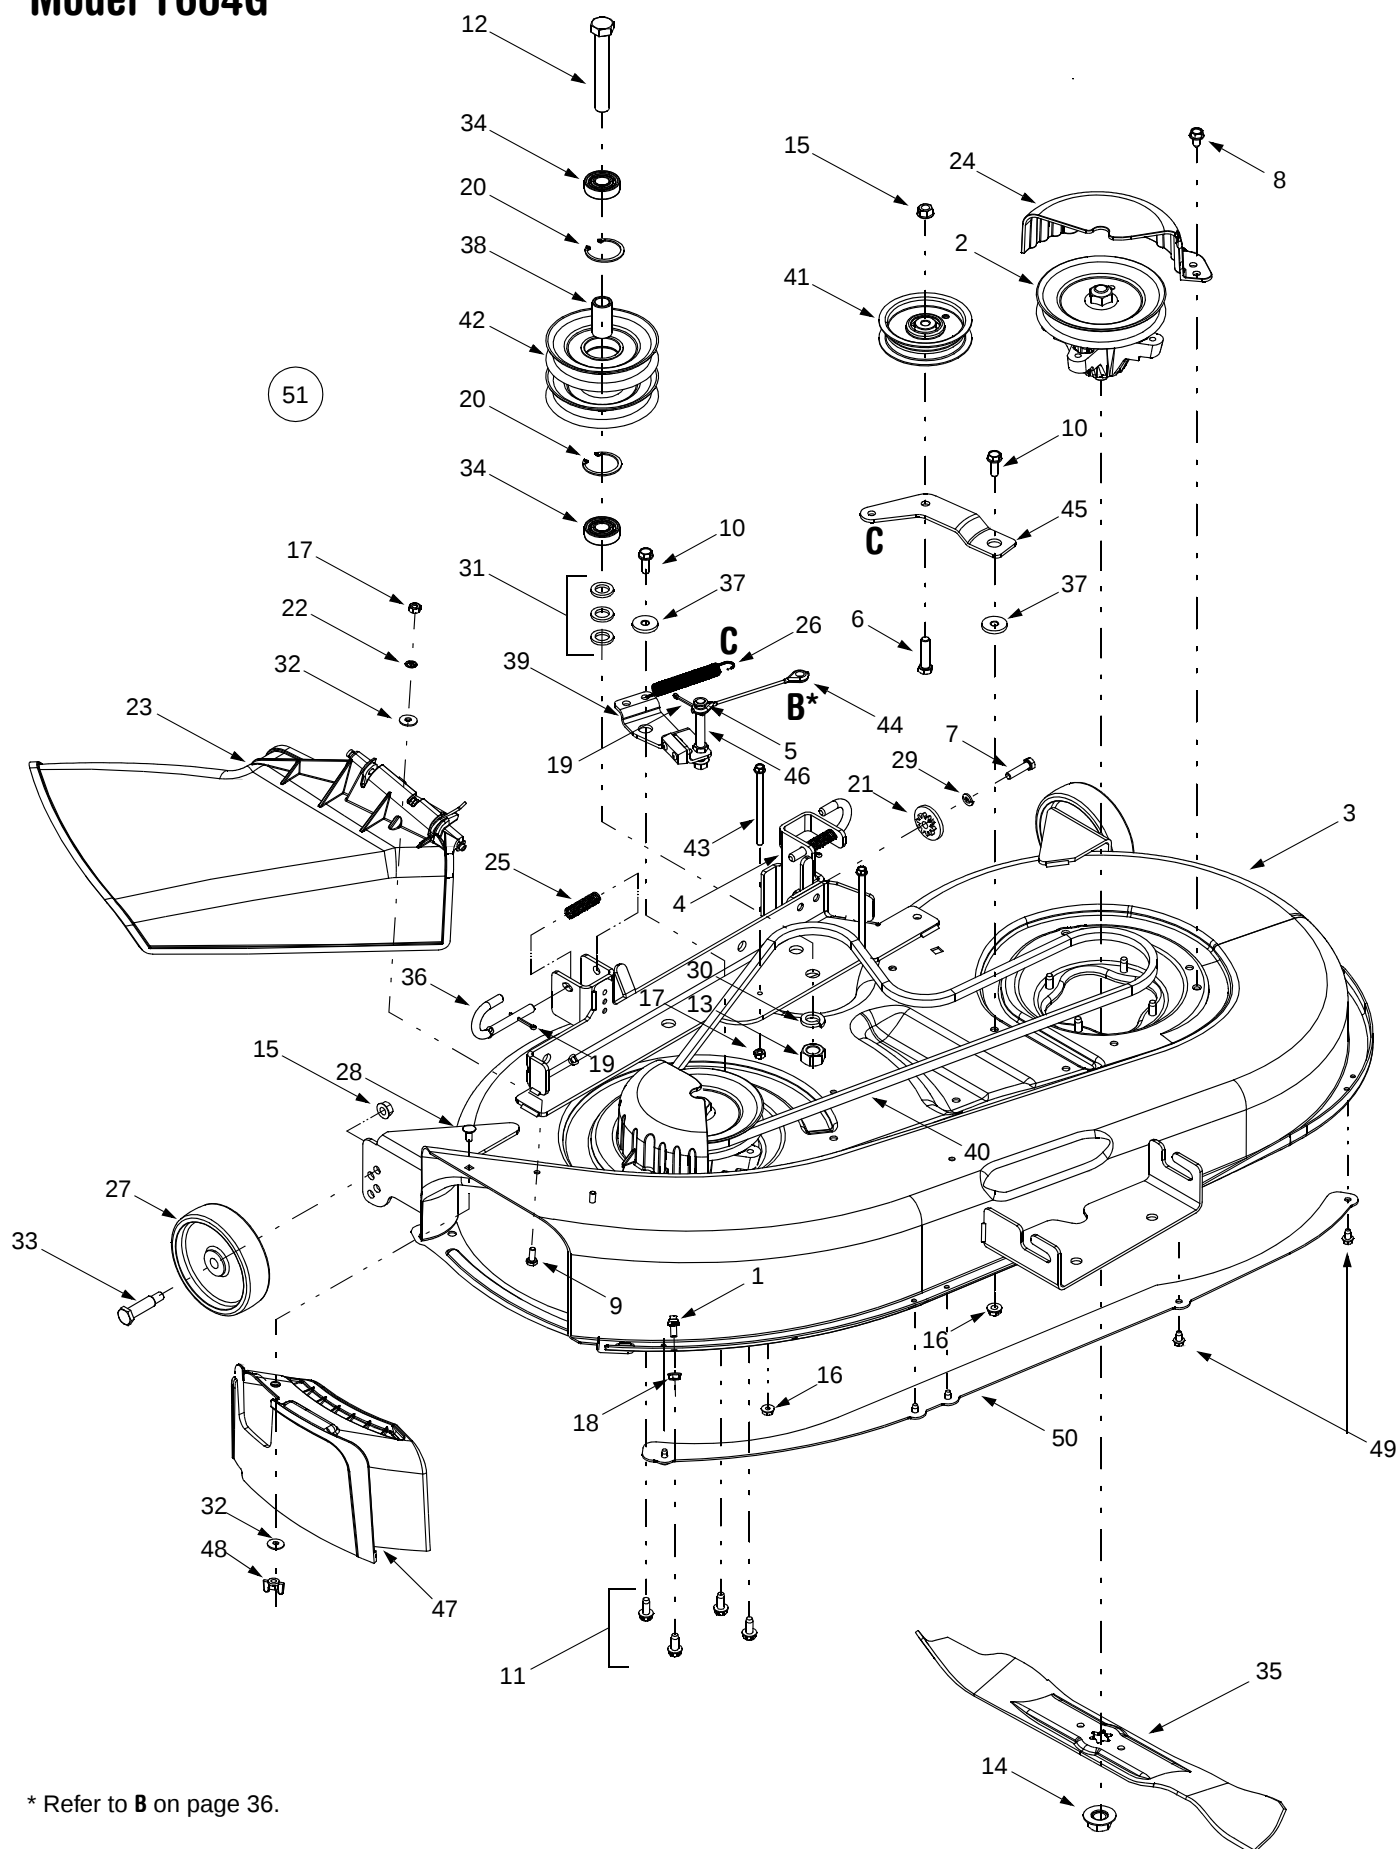

REF. NO.	PART NO.	DESCRIPTION
1	711-04069	Grass Catcher Pin, 1/4-20
2	618-0574	Spindle Assembly, 5.75 Dia. w/ Fitting
	756-0980	Pulley Only
3	683-0198F	42-inch Deck Shell
4	683-0254	Deck Adjustment Bracket w/ Weld Nut
5	736-0140	Flat Washer, .385 x .62 x .063
6	710-0520	Hex Cap Screw, 1/4-20 x 1.5
7	710-0528	Hex Cap Screw, 5/16-18 x 1.25
8	710-0726	Self-tapping Screw, 5/16-12 x .75
9	710-0751	Hex Cap Screw, 1/4-20 x .62
10	710-1238	Hex Head Washer Screw, 5/16-18 x .875
11	710-0650	Self-tapping Screw, 5/16-18 x .875
12	710-3151	Hex Cap Screw, 5/8-18 x .875
13	712-0337	Hex Nut, 5/8-18
14	712-0417A	Hex Flange Nut, 5/8-18
15	712-0431	Flange Lock Nut, 3/8-16
16	712-3004A	Flange Lock Nut, 5/16-18
17	712-3006	Hex Nut, 1/4-20
18	712-3027	Hex Flange Lock Nut, 1/4-20
19	714-0470	Cotter Pin, 1/8 x 1.25
20	716-3020	Internal Snap Ring
21	717-1553B	Deck Adjustment Gear
22	726-0233	Push Nut, .25 x .5
23	731-1032B	Side Discharge Chute Assembly
24	731-2486	Belt Cover
25	732-0306	Compression Spring, .406 x .531 x 1.75
26	732-0470A	Extension Spring, .50 x 4.74
27	734-0973	Deck Wheel, 5 x 1.38
28	710-0134	Carriage Screw, 1/4-20 x .5
29	736-0119	Lock Washer, 5/16
30	736-0158	Lock Washer, 5/8
31	736-0162	Flat Washer, .64 x 1.0 x .12
32	736-0270	Bell Washer, .265 x .75 x .062
33	738-0373	Shoulder Screw, .498 x 1.53
34	741-0524	Bearing, .625 x 1.574 x .470
35	742-0616A	Three-in-one Blade, Star Center, 21.23"
36	747-1116	Deck Release Pin
37	748-0331	Shoulder Spacer, .625 x .324
38	750-0932A	Spacer, .635 x .88 x 1.72
39	683-0440	Deck Brake Assembly
40	754-0498	Deck Belt
41	756-0627B	Idler Pulley, 3.5
42	756-1202	Double Pulley, 5.0
43	710-1830	Self-tapping Screw, 1/4-20 x 4.0
44	746-0970	Brake Cable, 5.05
45	783-1291	Idler Bracket
46	711-1534	Pin, 3/8-16, 3/8 x 3.27
47	731-2363	Mulch Plug
48	712-3087	Wing Nut
49	710-0599	Self-tapping Screw, 1/4-20 x .5
50	783-1146A	Deck Skirt
51	753-0894	Deck Assembly Complete, Manual PTO (w/o Mulch Kit)

Model T604H

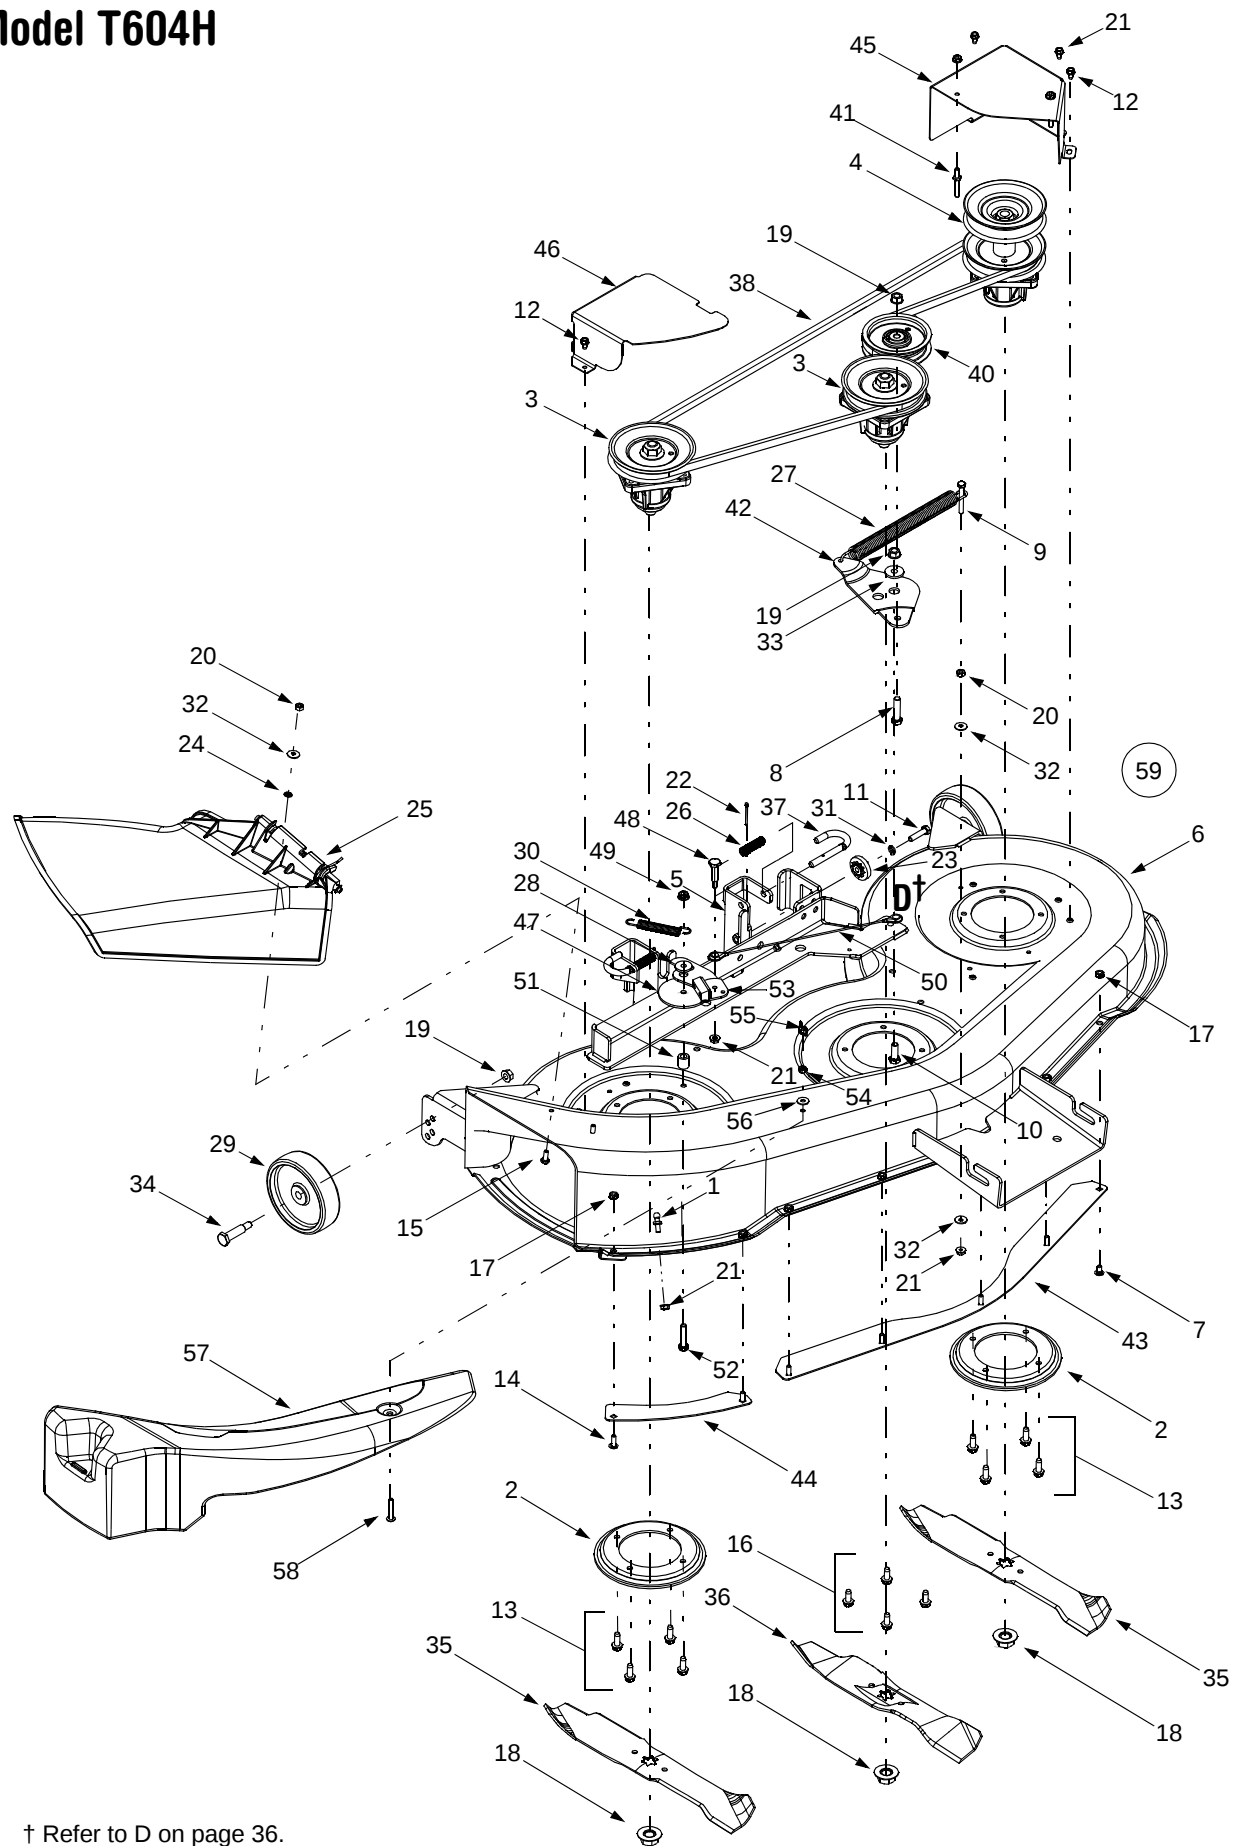

† Refer to D on page 36.

* Can also use 918-0596 in place of
618-0595

Model T604H


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	711-04069	Retainer Hook	30	732-0429A	Extension Spring, .5 x 3.97
2	17982	Spindle Reinforcement Plate	31	736-0119	Lock Washer, 5/16
3	618-0430A	Spindle Assembly, 5.0 Dia.	32	736-0270	Bell Washer, .265 x .75 x .062
	756-1187	Pulley Only	33	738-0347	Shoulder Spacer, .625 x 1.16
4	618-0595	Double Pulley Spindle Assembly	34	738-0373	Shoulder Screw
	756-1214	Double Pulley Only	35	742-0611	Three-in-one Blade, Star Center, 16.28"
5	683-0254	Deck Adjustment Bracket Assembly	36	742-0612	Three-in-one Blade, Star Center, 14.88"
6	683-0199C	46-inch Deck Shell	37	747-1116	Deck Release Pin
7	710-0167	Carriage Screw, 1/4-20 x .50	38	754-0349	Deck Belt, Poly
8	710-0344	Hex Cap Screw, 3/8-16 x 1.5	39	738-3056	Shoulder Screw, 1/2-2.5
9	710-0501	Hex Cap Screw, 1/4-20 x 2.0	40	756-0627B	Idler Pulley, 3.5
10	710-0514	Hex Cap Screw, 3/8-16 x 1.0	41	711-0993	Belt Guard Pin
11	710-0528	Hex Cap Screw, 5/8-18 x 1.25	42	783-0139A	Idler Bracket
12	710-0599	Self-tapping Screw, 1/4-20 x .5	43	783-0141	Center Deck Skirt
13	710-0650	Self-tapping Screw, 15/16-18 x .875	44	783-0142	RH Deck Skirt
14	710-0703	Hex Screw, 1/4-20 x .75	45	783-1348	LH Belt Cover
15	710-0751	Hex Cap Screw, 1/4-20 x .62	46	17258C	RH Belt Cover
16	710-1260A	Self-tapping Screw, 5/16-18 x .75	47	736-0416	Flat Washer, .320 x 3.0 x .125
17	712-0271	Hex Sems Nut, 1/4-20	48	738-0572	Shoulder Screw, .374 x 1.16
18	712-0417A	Hex Flange Nut, 5/8-18	49	712-3004A	Hex Nut, 5/16-18
19	712-0431	Flange Lock Nut, 3/8-16	50	746-1107	Bracket Cable, 12"
20	712-3006	Hex Nut, 1/4-20	51	750-0807	Spacer, .385 x .625 x .70
21	712-3027	Hex Flange Lock Nut, 1/4-20	52	710-0805	Hex Cap Screw, 5/16-18 x 1.5
22	714-0470	Cotter Pin, 1/8 x 1.25	53	17116	Deck Brake Assembly
23	717-1553A	Deck Adjustment Gear	54	712-3006	Hex Nut, 1/4-20
24	726-0233	Push Nut, .25 x .5	55	712-3087	Wing Nut, 1/4-20
25	731-1032B	Side Discharge Chute Assembly	56	736-0173	Flat Washer, .28 x .74 x .063
26	732-0306	Compression Spring, .406 x .531 x 1.75	57	731-1636	Mulch Plug
27	732-0594A	Extension Spring, .91 x 7.3	58	710-0578	Screw, 1/4-20 x 1.5
28	748-0324	Shoulder Spacer	59	753-0872	Deck Assembly Complete, Manual PTO
29	734-0973	Deck Wheel, 5 x 1.38			(w/o Mulch Kit)

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665
Yard-Man Yellow: 0674
Powder Black: 0637

Models T604G & T604H

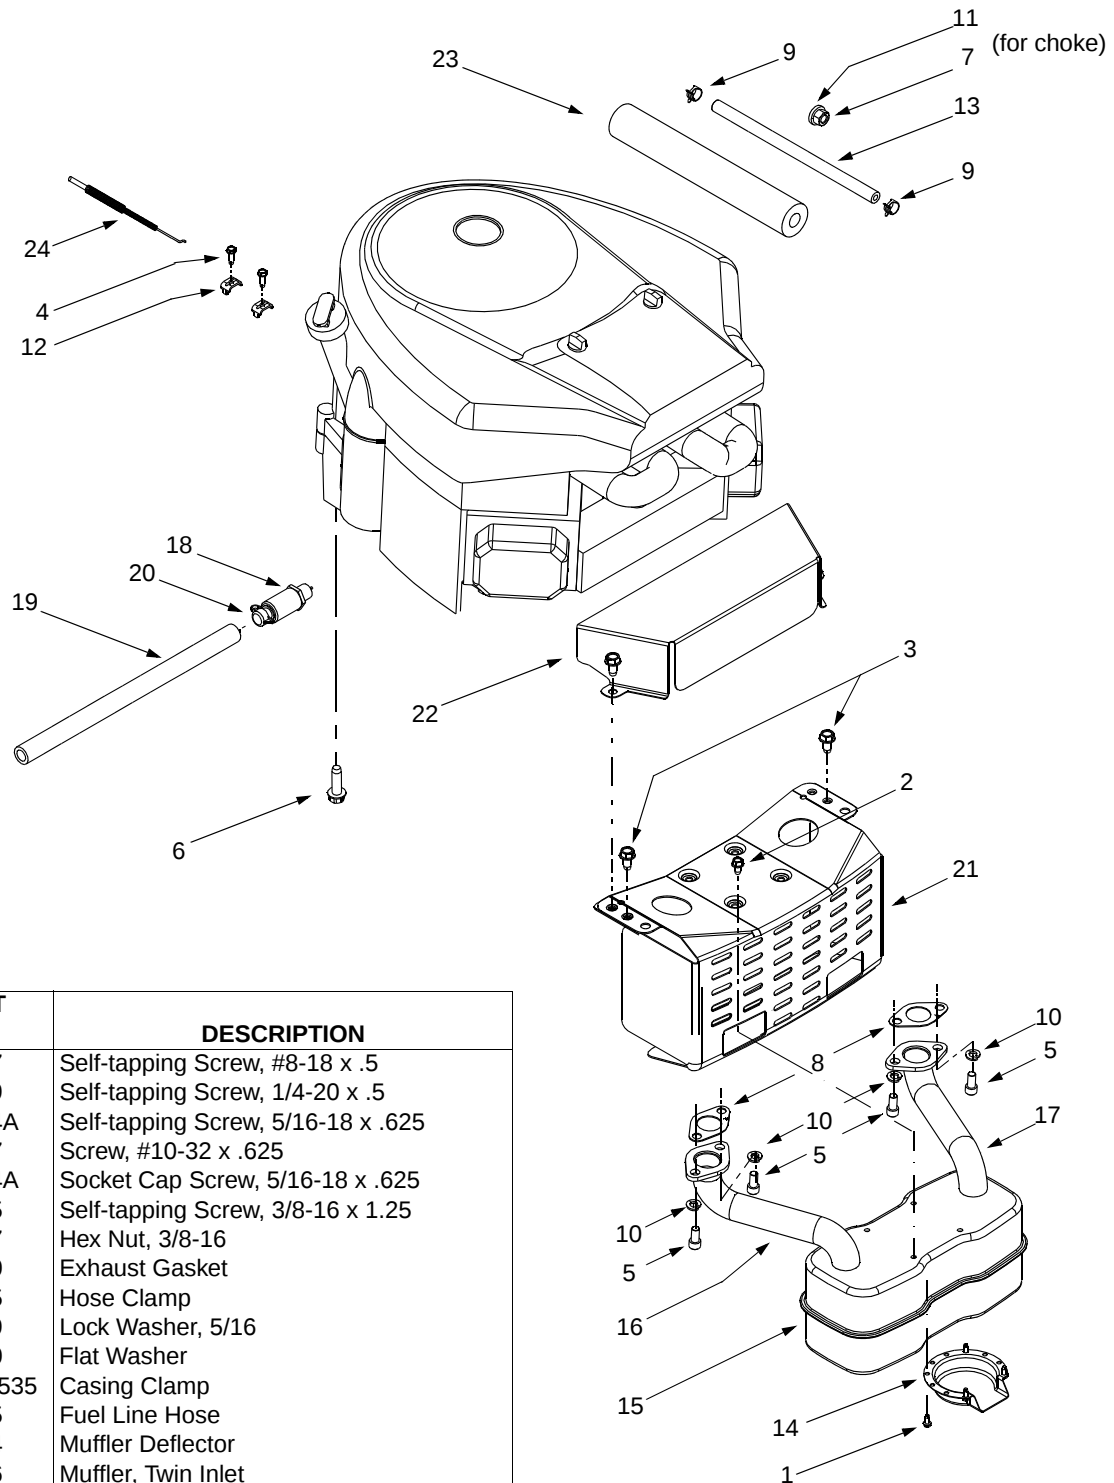

REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Self-tapping Screw, #8-18 x .5
2	710-0599	Self-tapping Screw, 1/4-20 x .5
3	710-0604A	Self-tapping Screw, 5/16-18 x .625
4	710-1237	Screw, #10-32 x .625
5	710-1314A	Socket Cap Screw, 5/16-18 x .625
6	710-1315	Self-tapping Screw, 3/8-16 x 1.25
7	712-3017	Hex Nut, 3/8-16
8	721-0460	Exhaust Gasket
9	726-0205	Hose Clamp
10	736-0119	Lock Washer, 5/16
11	736-0300	Flat Washer
12	751B221535	Casing Clamp
13	751-0535	Fuel Line Hose
14	751-0564	Muffler Deflector
15	751-0616	Muffler, Twin Inlet
16	751-0650	RH Exhaust Pipe
17	751-0651	LH Exhaust Pipe
18	751-3140	Oil Drain Valve
19	751-3141	Oil Drain Hose
20	751-3142	Oil Drain Cap
21	783-0615B	Muffler Heat Shield
22	783-0625C	Engine Heat Shield
23	722-0263	Foam (fits over fuel line)
24	746-1086	Throttle Cable

Models T604G & T604H

