


SECTION 12: PARTS LIST

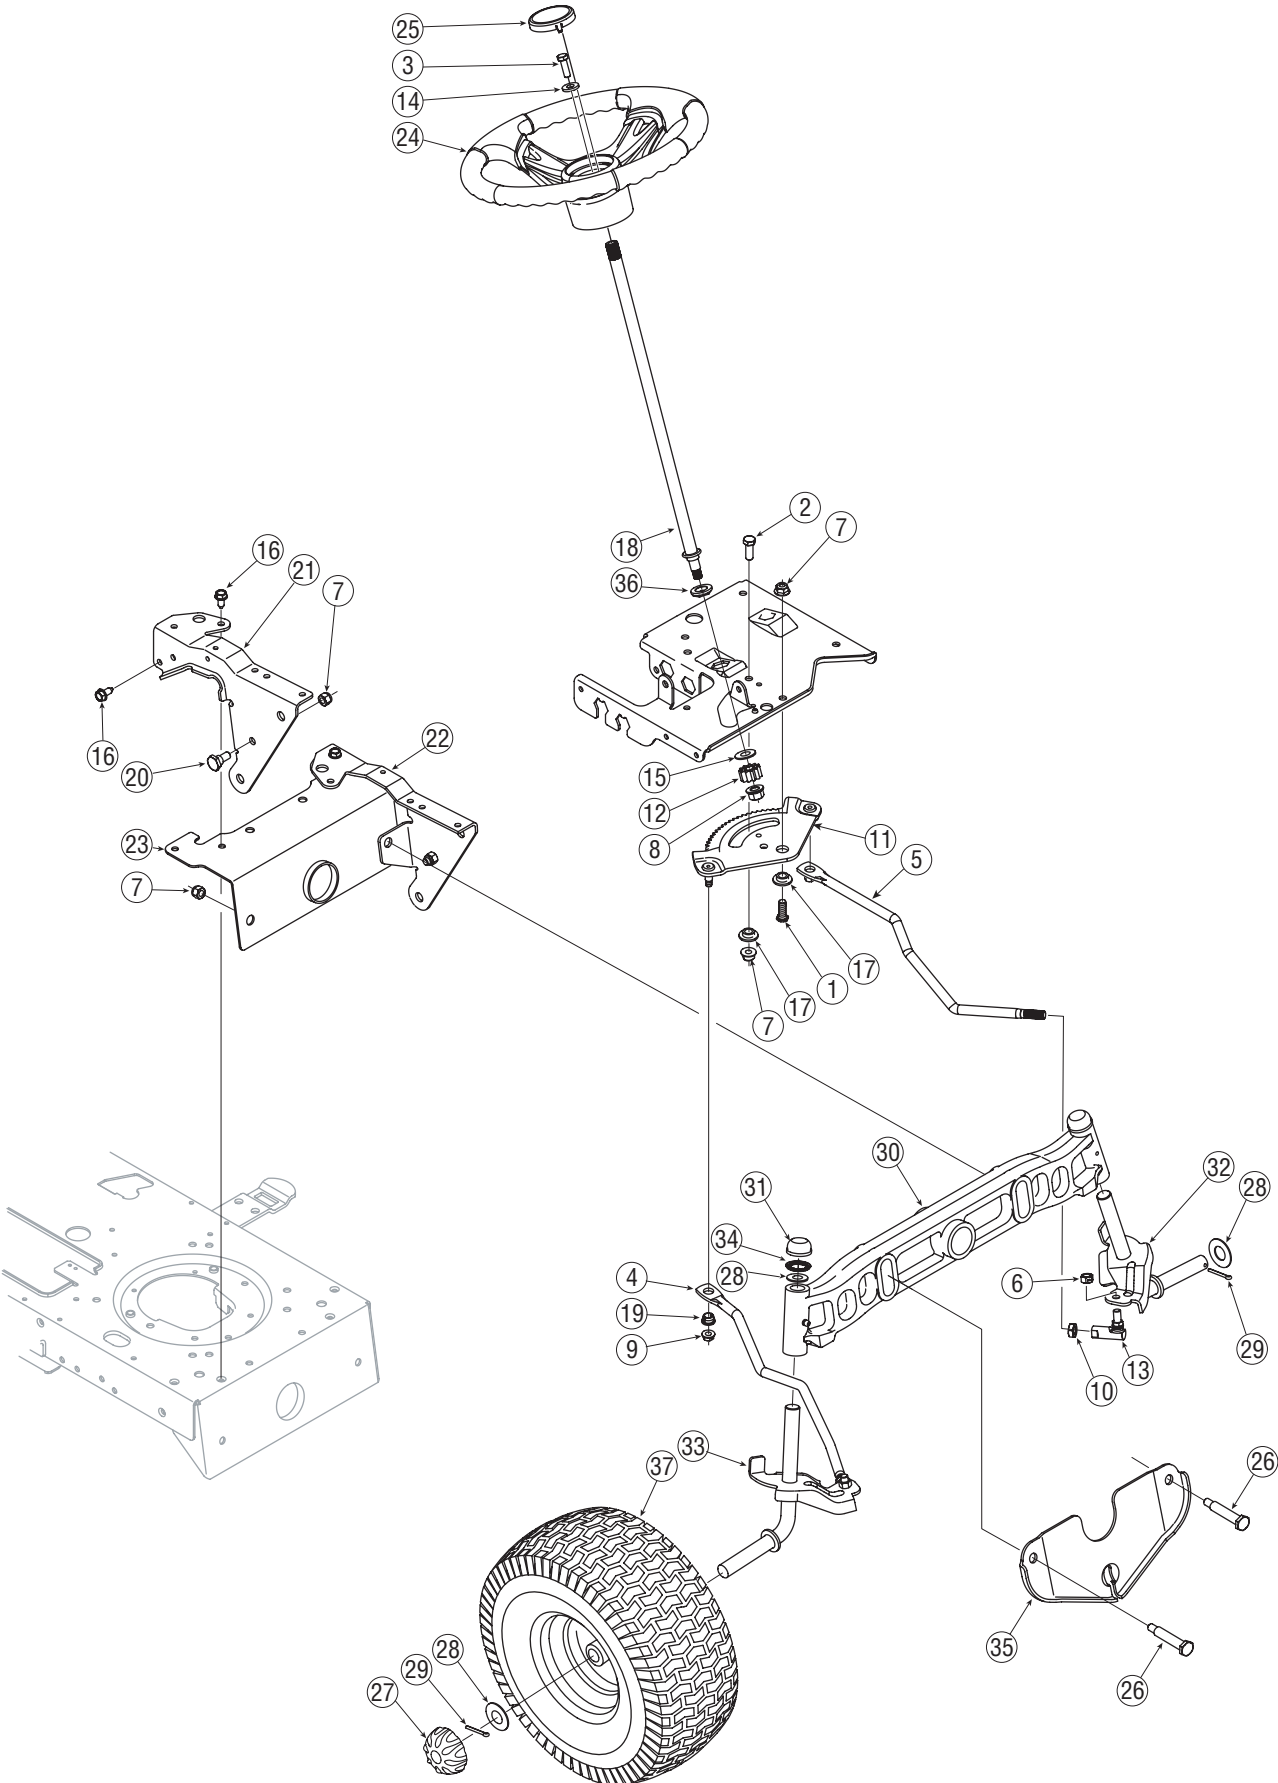


Models J609 & T609

REF. NO.	PART NO.	DESCRIPTION
1	710-04095	Hex Screw, 3/8-16, 1.00, Gr5
2	710-0514	Hex Screw, 3/8-16, 1.00, Gr5
3	710-0643	Hex Screw, 5/16-18, 1.00, Gr5
4	711-1408	Link, Drag, RH
5	711-1409A	Link, Drag, LH
6	712-0214	Nut, Hex Lock, 3/8-24
7	712-04065	Nut, Flange Lock, 3/8-16, Grf, Nylon
8	712-0459	Nut, Flange Lock, 7/16-20
9	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
10	712-0240	Nut, Jam, 7/16-20, Gr2
11	717-1550E	Gear, Steering, 11/90 Ratio
12	717-1554	Gear, Pinion, Steering
13	723-0448A	Ball Joint, 7/16-20, Lock
14	736-3004	Washer, Flat,.406 x.875 x.105
15	736-3084	Washer, Flat,.51 x 1.12 x.06
16	710-0726	Screw, 5/16-12, 0.750
17	738-04154	Spacer, Shoulder,.38 x 1.00 x.31
18	738-1001A	Shaft, Steering,.625 OD x 24.25 Lg
19	741-0475	Plastic Bushing.380 ID
20	738-0143	Screw, Shoulder,.498 x.340, 3/8-16
21	783-0726D	Pivot Bracket, Support RH
22	783-0727C	Pivot Bracket, Support LH
23	783-0728	Pivot Bracket, Bar
24	631-04008	Steering Wheel, 3 Spoke, Soft Grip
	631-04028	Steering Wheel, 3 Spoke, Standard Grip
25	731-04681	Steering Wheel Cap
26	738-04128	Shoulder Screw,.5 x 2.380, 3/8-16
27	734-2290A	Deluxe Hub Cap
28	736-0316	Flat Washer,.78 x 1.589 x.06
29	714-04039	Cotter Pin, 5/32 x 1.25
30	719-04105	Cast Iron Pivot Bar
31	731-04693	Hub Cap
32	638-04006	LH Axle Assembly,.750
33	638-04005	RH Axle Assembly,.750
34	726-04035	Push Nut
35	783-04568	Deck Hanger Bracket, Front
36	741-0656A	Hex Flange Bearing
37	634-04086	Wheel Assembly Complete, 15 x 6
	734-1731	Tire Only 15 x 6 x 6
	634-04081	Rim Only w/ Valve Stem

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models J609 & T609

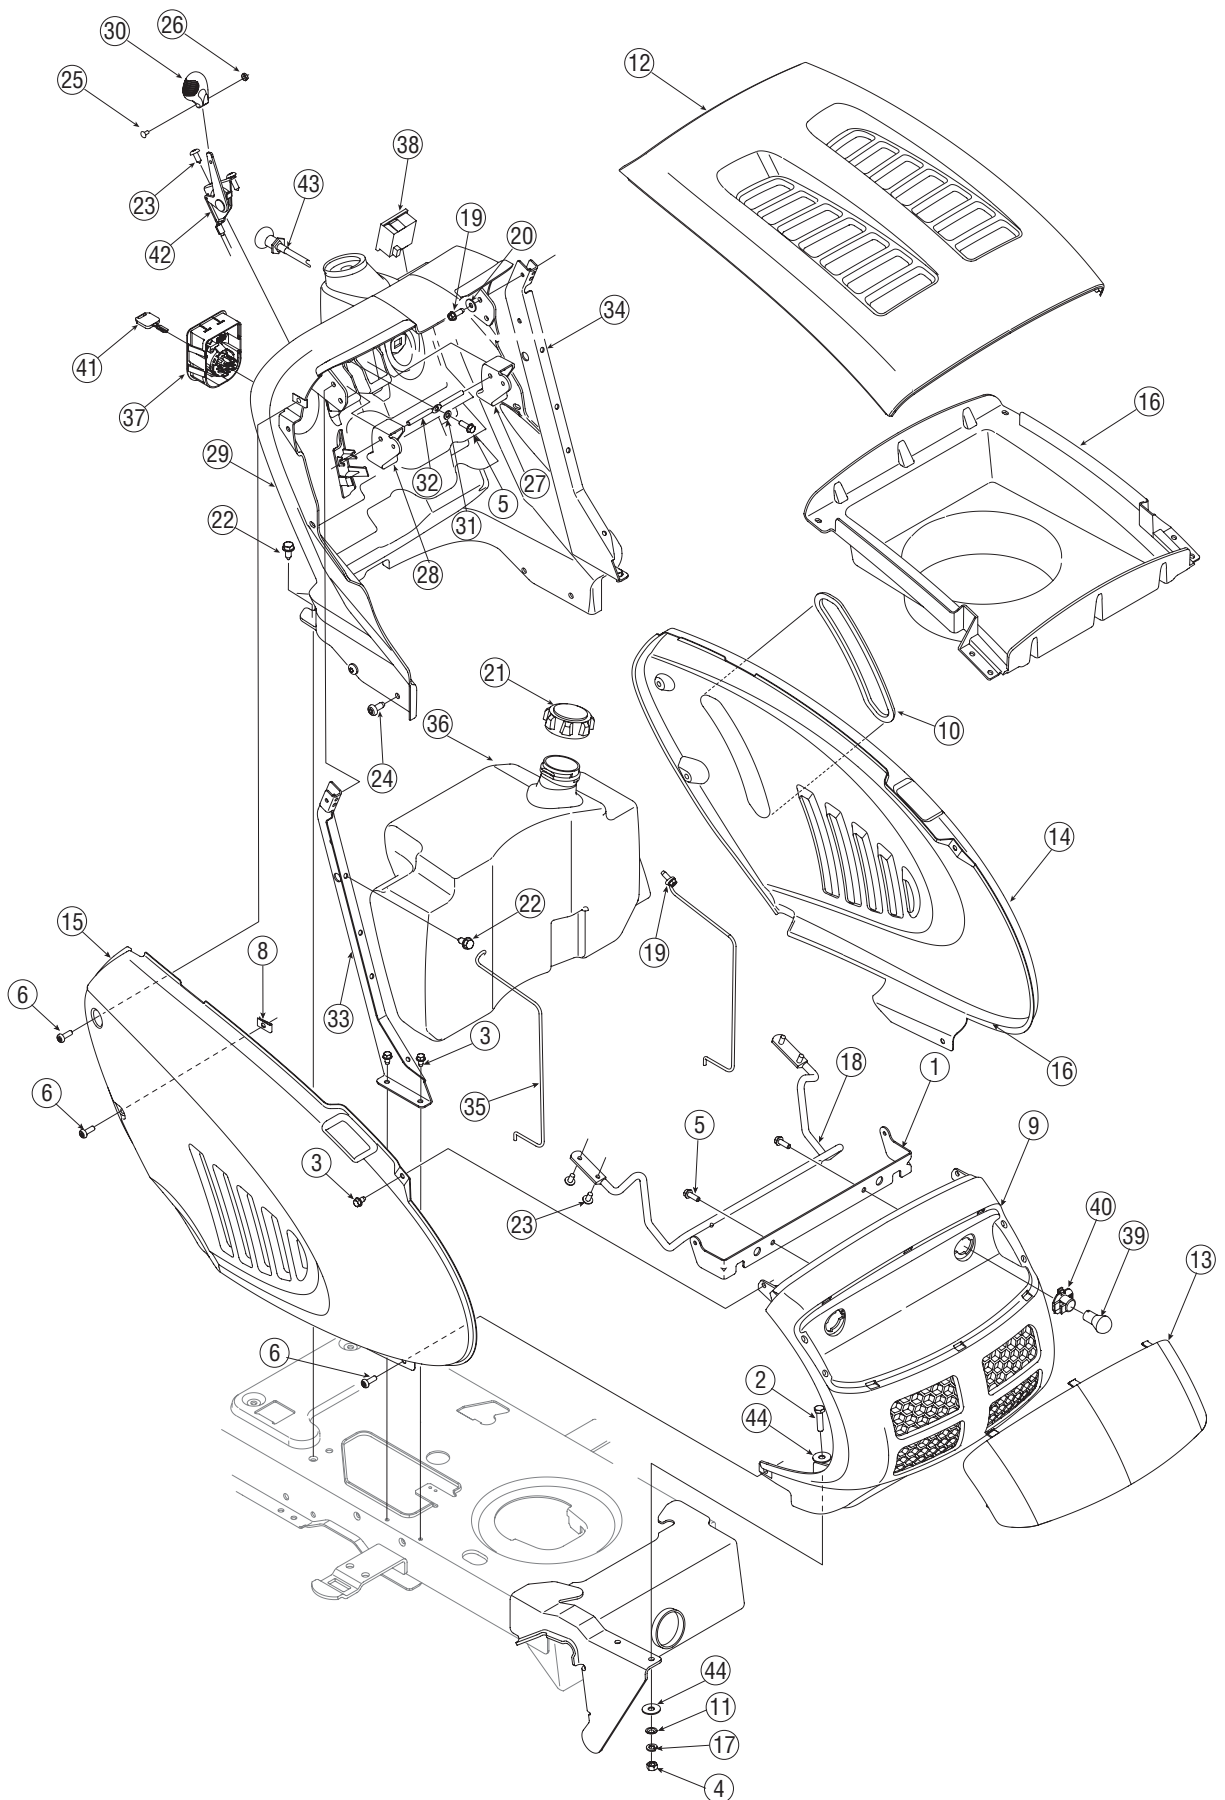


Models J609 & T609

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	783-1346	Bracket, Grill Support	26	712-0142	Nut, Hex, #8-32
2	710-0528	Screw, 5/16-18 x 1.25	27	731-04728	Brake Lever
3	710-0599	Screw, 1/4-20, 0.500	28	731-04729	Cruise Control Lever
4	712-3010	Hex Nut, 5/16-18	29	731-05001	Dash Panel
5	710-0895	Screw, 1/4-15, 0.750	30	731-1857	Control Knob
6	710-0924	Screw, Machine, 1/4-20, 0.750	31	736-0142	Washer, Flat,.281 x.50 x.063
7	725-0157	Cable Tie (Not Shown)	32	747-1196	Rod, Brake / Cruise Pivot
8	712-0292	Nut, Clip, 1/4-20	33	783-04285A	Support Plate, Dash, RH
9	731-04960	Grill, 9 Style	34	783-04323A	Support Plate, Dash, LH
10	735-04019	Panel Seal	35	747-04158	Fuel Tank Support - RH
11	726-0201	Nut, Speed,.3125 ID		747-04161	Fuel Tank Support - LH
12	783-0783	Hood	36	751-3213A	Fuel Tank, 3 Gal.
13	731-2637	Lens	37	725-04227	Ignition Switch Module
14	783-04200	Side Panel, LH	38	725-04156	Ammeter
15	783-0784A	Side Panel, RH	39	725-0963	Miniature Lamp, 12V
16	731-2269A	Plenum, Bronco (Model J609)	40	725-1649	Socket, Lamp
	731-2270A	Plenum, Super Bronco (Model T609)	41	725-1744	Key, Ignition
17	736-0119	Washer, Lock, 5/16		725-1745	Key w/ Plastic Cover, Ignition
18	747-2138	Hinge Rod	42	746-1086	Throttle Cable, 39", Super Bronco
19	710-0642	Screw, 1/4-20 x.75		746-1084	Throttle/Choke Cable, Bronco
20	736-0270	Washer, Bell,.265 x.75 x.062	43	746-04132	Choke Knob w/ Cable, 37.5" Super Bronco
21	751-0603	Fuel Cap	44	736-3078	Washer, Flat,.344 x 1.0 x.063
22	710-0726	Screw, 5/16-12, 0.750	45	731-1999	Choke Plug (Not Shown), Bronco
23	710-1017	Screw, 1/4-14, 0.625	—	629-04083	Headlight Wire Harness
24	710-1611B	Screw, 5/16-18, 0.750	—	629-04103	Tractor Wire Harness
25	710-3217	Screw, Machine, #8-32, 0.375	—	629-04144	Jumper Wire Harness

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models J609 & T609

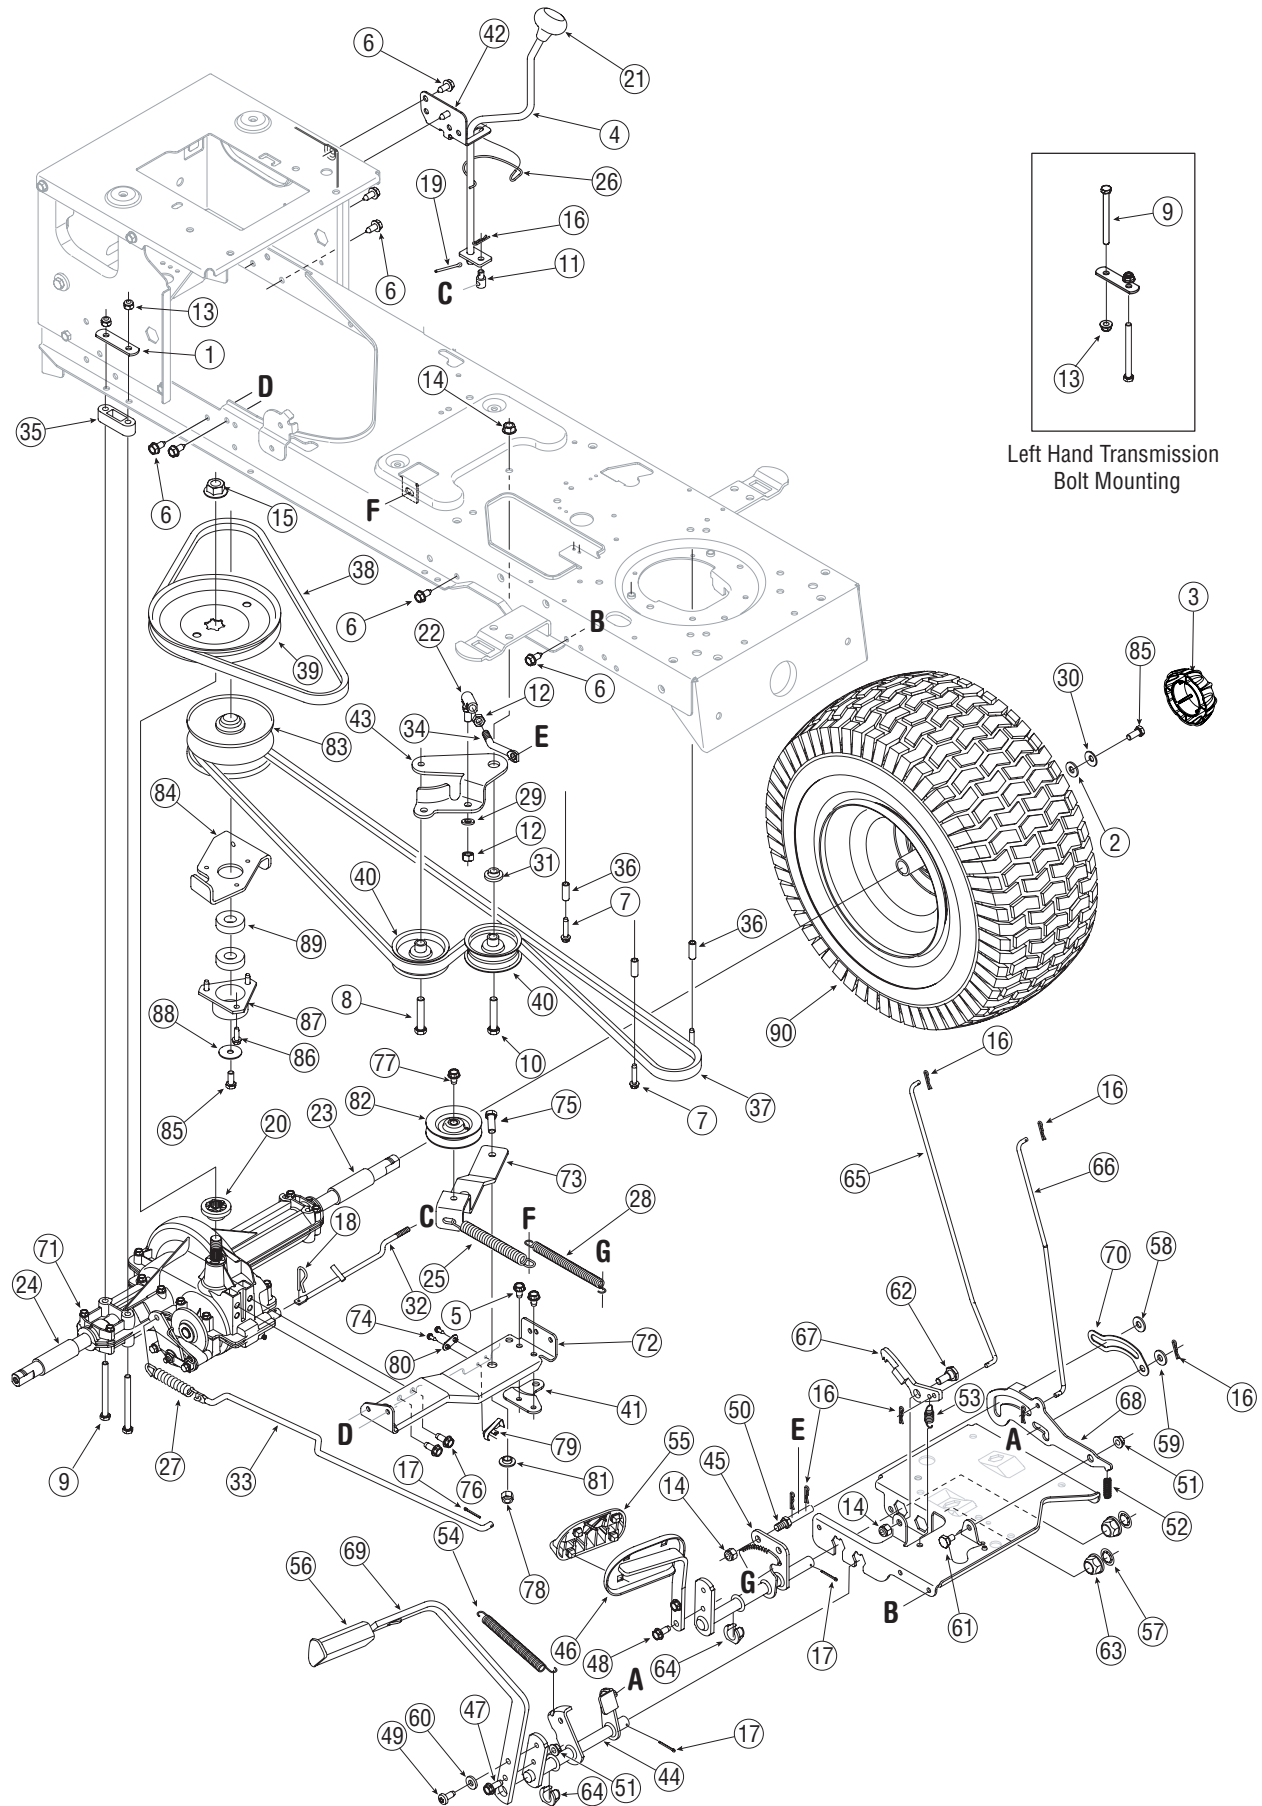


Models J609 & T609

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17840	Mounting Bracket, Transaxle	47	710-0650	Screw, 5/16-18, 0.875
2	736-0430	Flat Washer,.350 x 1.59 x.062	48	710-1260A	Screw,5/16-18, 0.750
3	731-2290A	Hub Cap	49	710-1611B	Screw, 5/16-18, 0.750
4	647-04020	Lever Assembly, Shift	50	711-04159B	Pin, 3/8-16 x 2.68
5	710-0607	Screw, 5/16-18, 0.500	51	712-3004A	Nut, Flange Lock, 5/16-18, Gr5
6	710-0726	Screw, 5/16-12, 0.750	52	732-0335	Spring, Compression,.405 x 1.17
7	710-0809	Screw, 1/4-20, 1.250	53	732-0955	Spring, Extension,.50 OD x 1.41
8	710-1007	Screw, Sems, 3/8-16, 1.500	54	732-0963	Spring, Extension,.50 OD x 6.37
9	710-1266	Screw, 5/16-18, 3.50, Gr5	55	735-0662	Pad
10	710-3144	Screw, 3/8-16, 2.00, Gr5	56	735-3049	Pad, Brake
11	711-0736	Adjustment Ferrule 1/4-20 x 1.	57	736-0187	Washer, Flat,.64 x 1.24 x.06, Ht
12	712-0241	Nut, Hex, 3/8-24, Gr5	58	736-0262	Washer, Flat,.385 x.870 x.092
13	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon	59	736-0300	Washer, Flat,.406 x.875 x.059
14	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon	60	736-3008	Washer, Flat,.344 x.750 x.120
15	712-0700	Nut, Flange, 9/16-18, Gr2	61	738-0155	Screw, Shoulder.437 Dia x.162
16	714-0104	Pin, Cotter,.072 Dia. x 1.13	62	738-0380	Screw, Shoulder,.50 x.27 Lg, 3/8-16
17	714-0111	Pin, Cotter, 3/32, 1.0	63	741-0225	Bearing, Hex Flange
18	714-0209	Cotter Pin, Internal,.125 Dia.	64	741-3065B	Split Bearing, Hex Flange
19	714-0470	Pin, Cotter, 1/8 x 1.25	65	747-04093	Rod, Brake
20	718-0758A	Pulley Hub, 5/8 Spline	66	747-04096	Rod, Cruise Control
21	720-04028	Knob, Shift	67	748-04039B	Latch, Cruise Control
22	723-3018	Ball Joint	68	683-04186	Bracket, Lockout
23	731-04602	Sleeve,.758 x.821 x 3.3125	69	783-0773A	Ped, Brake
24	731-04604	Sleeve,.758 x.821 x 2.4375	70	783-0780B	Bracket, Neutral Return
25	732-0384	Spring, Extension,.62 Dia x 6.12	71	618-04034	Transmission, Single Speed
26	732-0525	Spring Clip, Shifter	72	683-04055A	Bracket Assembly, Torque
27	732-0716	Spring, Extension,.59 OD x 4.00	73	683-04130	Bracket, Idler
28	732-0963	Spring, Extension,.50 Dia x 6.37	74	710-0227	Screw, #8-18 x.50
29	736-0169	Washer, Lock, 3/8	75	710-0514	Screw, 3/8-16, 1.00
30	736-0242	Washer, Bell,.340 x.872 x.060	76	710-0604A	Screw, 5/16-18,.625
31	738-0372B	Spacer, Shoulder, 1.00 x.38 x.38	77	710-1315	Screw, 3/8-16, 1.250
32	747-04146	Rod, Shift	78	712-0130	Nut, Lock, 3/8-16, Nylon
33	747-04164	Rod, Brake	79	725-1644	Switch Spring, Short
34	747-1127	Idler Rod, Adjustable, 3/8	80	726-0320	Plate, Insulator
35	748-0334	Spacer,.68	81	750-04294	Spacer, Shoulder
36	750-0566A	Spacer,.260 x.372 x 1.030	82	756-0116A	Pulley, V-Type, 3.06
37	754-0467	Belt, V-Type	83	656-04015	Pulley Assembly, Variable Speed
38	754-0468	Belt, V-Type	84	683-04129	Bracket, Pulley
39	756-04002	Pulley, V-Type, 7.25 Dia.	85	710-0627	Screw, 5/16-24,.750
40	756-0981B	Idler Pulley, Flat 2.75 OD	86	710-0642	Screw, 1/4-20,.750
41	783-04283	Bracket, Shift	87	718-04012	Cup, Bearing
42	783-04360	Bracket, Shift, F-N-R	88	736-0362	Washer, Flat
43	783-04442	Idler Bracket, Center Double	89	741-0600	Ball Bearing
44	647-0031B	Control Assembly, Brake	90	634-0104	Wheel Assembly Complete, 20 x 8 x 8
45	647-0032A	Control Assembly, Speed		734-1730	Tire Only 20 x 8 x 8
46	683-0266	Pedal Assembly		634-0070	Rim Only w/ Valve Stem

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models J609 & T609

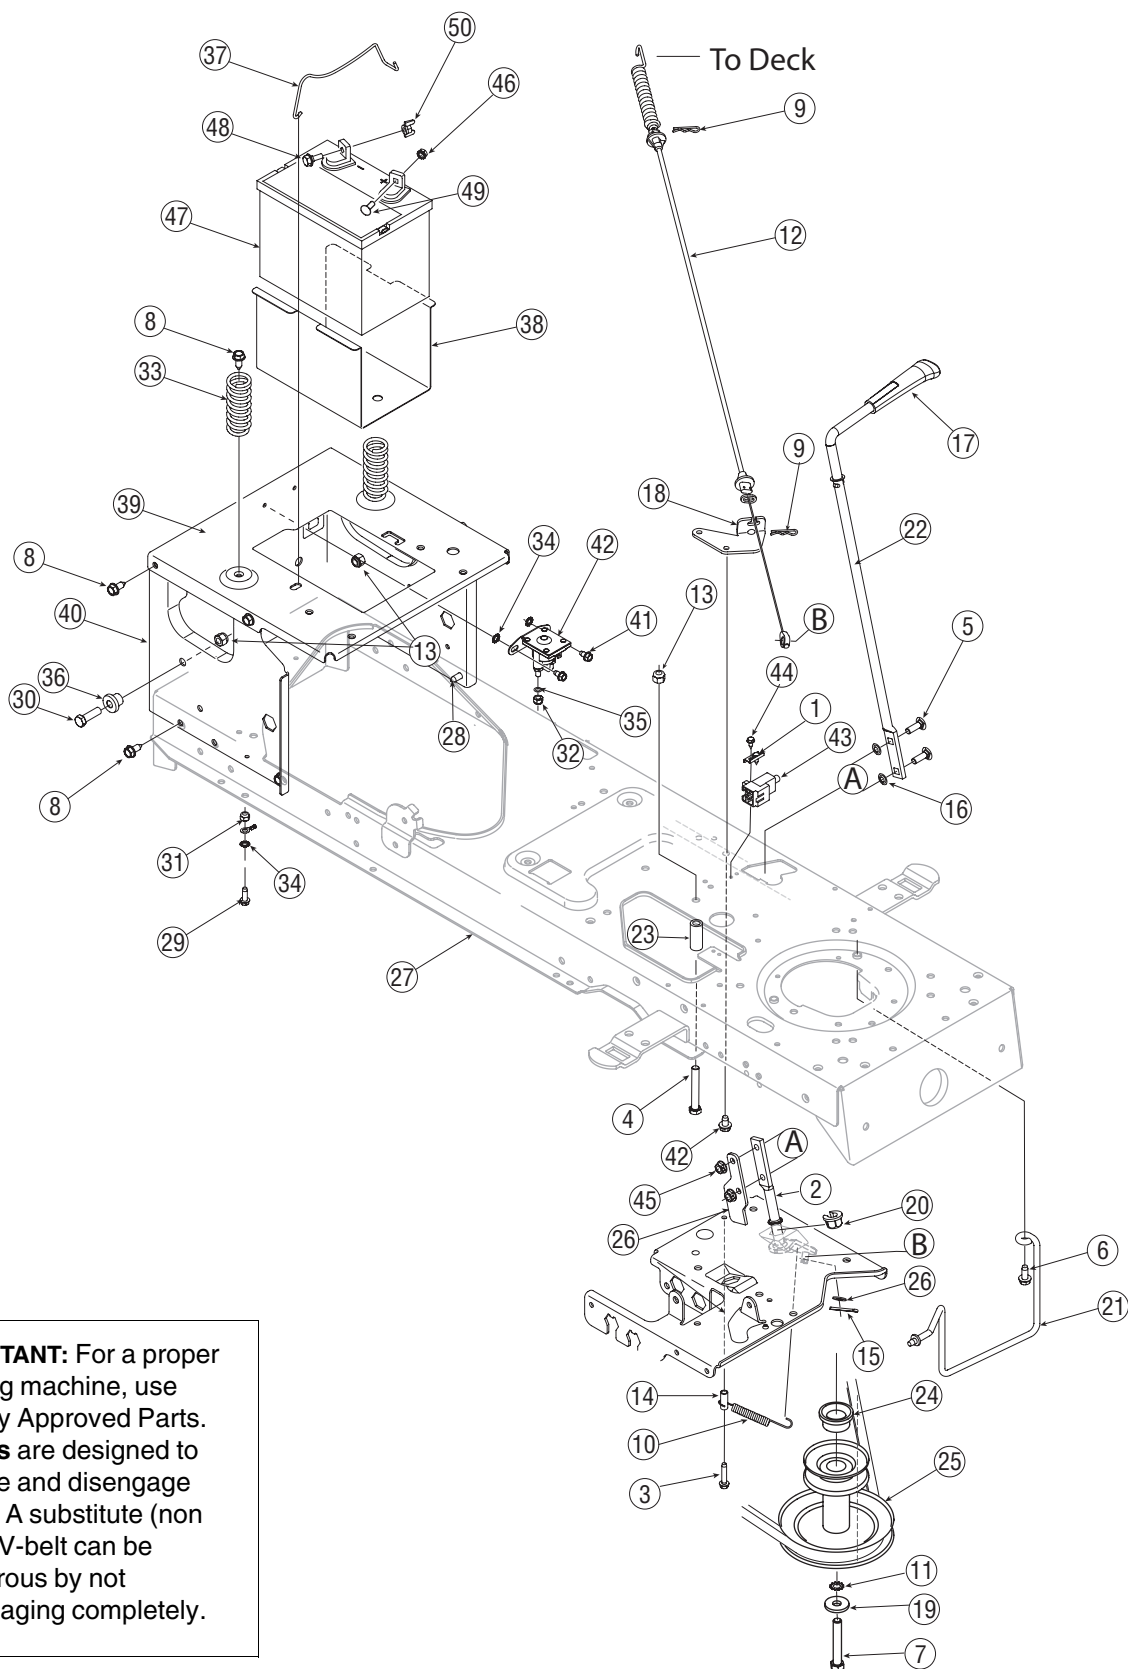


IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Models J609 & T609

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17962	Plate, Switch	27	683-04173	Frame Assembly, Lower
2	647-04036	Lever Assembly, Engagement	28	710-0607	Screw, 5/16-18, 0.500
3	710-0809	Screw, 1/4-20 x 1.250	29	710-0642	Screw, 1/4-20, 0.750
4	710-0859	Screw, 3/8-16, 2.50	30	710-3005	Screw, 3/8-16, 1.25, Gr5
5	710-0276	Screw, Carriage, 5/16-18, 1.00	31	712-04064	Nut, Flange Lock, 1/4-20, GrF, Nylon
6	710-1260A	Screw, 5/16-18 x.750	32	712-3006	Nut, Hex, 1/4-20, Gr5
7	710-3157A	Screw, 7/16-20, 3.25, Gr5	33	732-04035	Spring, Compression, 1.28 OD x 3.125
8	710-0726	Screw, 5/16-12, 0.750	34	736-0222	Washer, Lock, 1/4, External
9	714-0145	Click Pin	35	736-0329	Washer, Lock, 1/4
10	732-04248	Extension Spring,.38OD x 3.9LG	36	738-04058	Spacer, Shoulder,.38 x 1.0 x.70
11	736-0171	Lock Washer, 7/16	37	747-04121A	Hold Rod, Battery
12	746-04092	Deck Engagement Cable	38	783-0349	Battery Tray
13	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon	39	783-04329A	Seat Bracket, Frame
14	750-0566A	Spacer,.260 x.372 x 1.030LG	40	783-04375A	Frame, Upper
15	714-0470	Pin, Cotter, 1/8 x 1.25	41	710-0599	Screw, 1/4-20, 0.50
16	726-0201	Nut, Speed,.3125 ID	42	725-1426	Solenoid, 12V, 100 Amp
17	731-2111A	Knob, PTO	43	725-04039	Switch, Interlock
18	783-04590	Cable Bracket	44	710-0224	Screw, #10-16,.50
19	736-0322	Washer, Flat,.450 x1.250 x.164	45	712-04063	Nut, Flange, Lock Nut, 5/16-18
20	741-0708	Bearing, Flange, Hex Split.500 ID	46	712-0271	Nut, Sems, 1/4-20
21	747-04307	Keeper Rod, Belt	47	725-1750A	Battery, 235 CCA, Super Bronco
22	747-1112D	Engagement Handle, Deck		725-1737A	Battery, 190 CCA, Bronco
23	748-0415B	Spacer,.385 ID x.635 OD x 1.54	48	738-1132	Screw, Shoulder,.250 x.15, 1/4-20
24	750-0956	Spacer, 1.010 x 1.400 x.825	49	710-0703	Screw, Carriage, 1/4-20,.75
25	756-04064A	Pulley, Engine, 3.39 x 6.12 Diameter	50	712-3087	Nut, Wing, 1/4-20
26	783-0744A	Stop Bracket, Engagement			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models J609 & T609

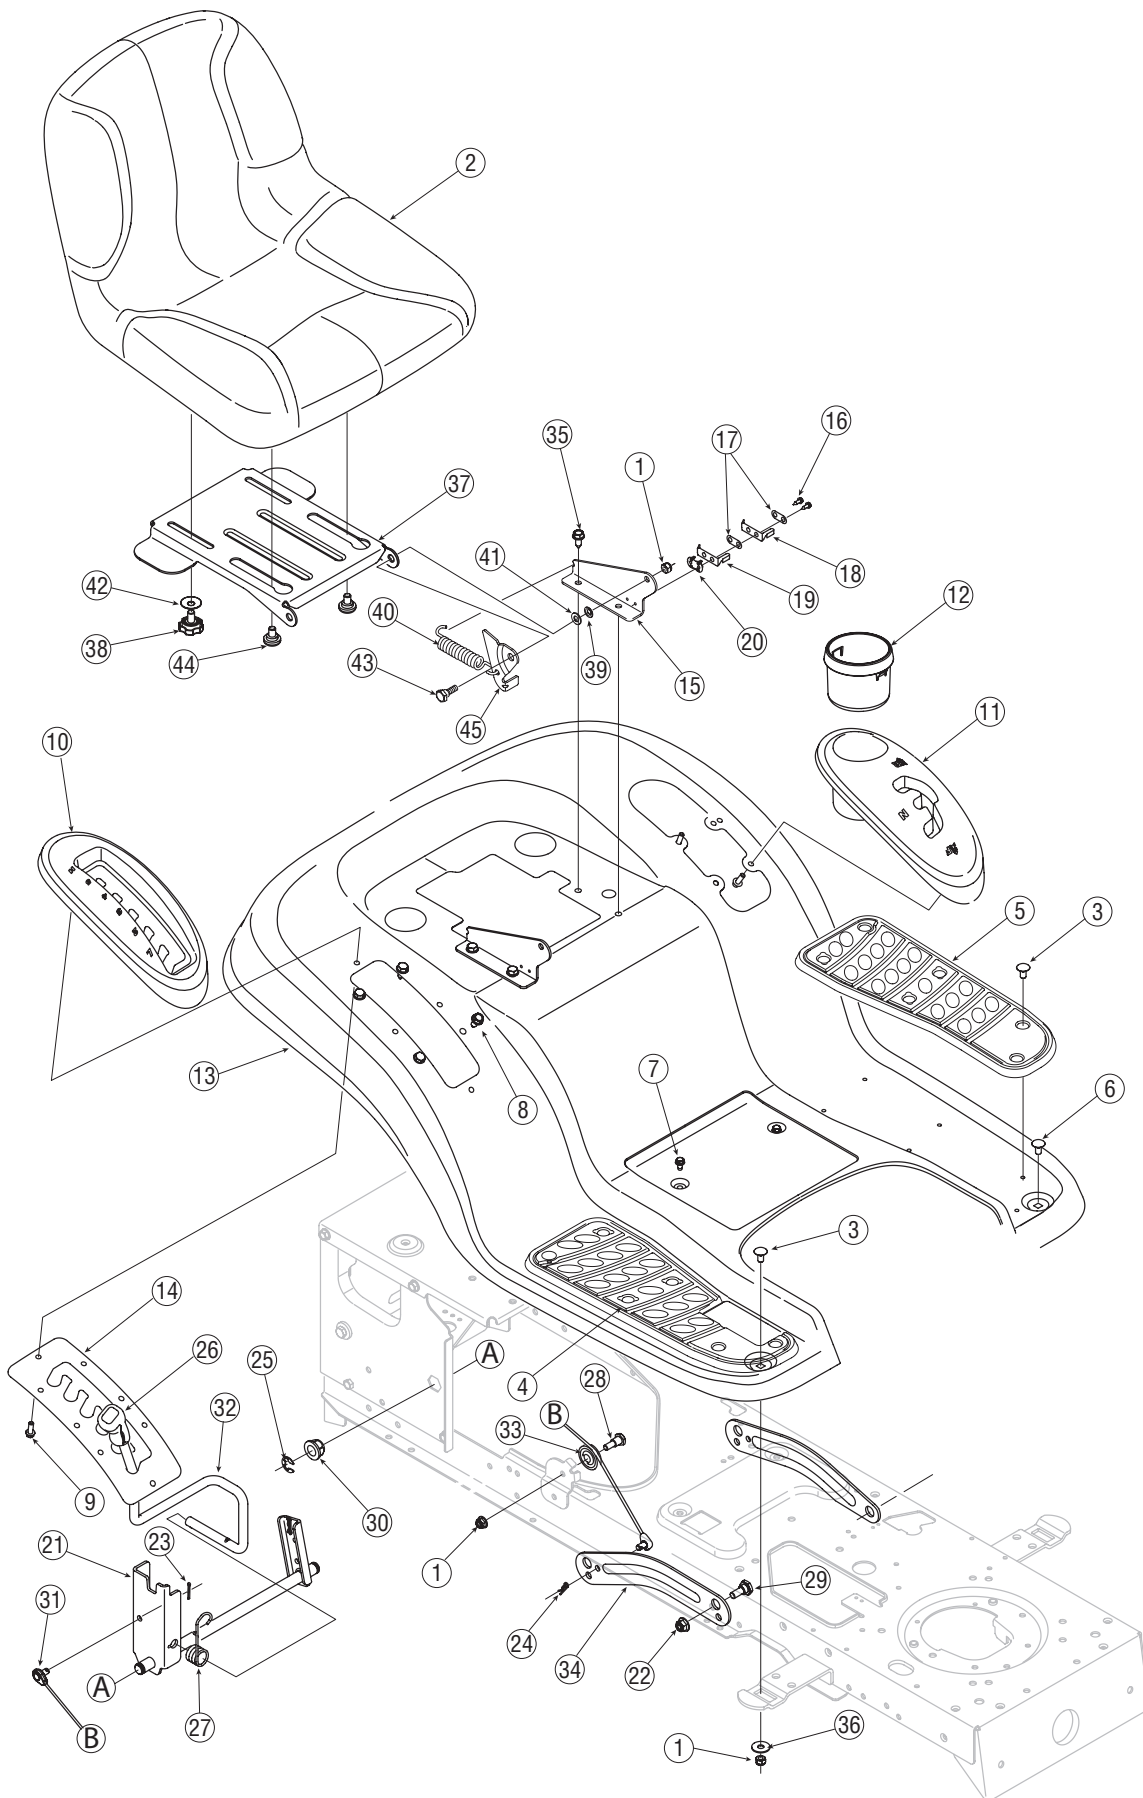


Models J609 & T609

REF. NO.	PART NO.	DESCRIPTION
1	712-04063	Nut, Flange Lock, 5/16-18, GrF, Nylon
2	757-04009A	Medium Back Seat, Super Bronco
	757-04001	Low Back Seat, Bronco
3	726-3046	Ratchet Clip
4	735-0656	RH Foot Pad, Rubber, Super Bronco
	735-0672	RH Foot Pad, Bronco
5	735-0657	LH Foot Pad, Rubber, Super Bronco
	735-0673	LH Foot Pad, Bronco
6	710-0260A	Bolt, Carriage, 5/16-18,.62, Gr1
7	710-0599	Screw, 1/4-20, 0.500
8	710-0726	Screw, 5/16-12, 0.750, Super Bronco
	710-1611B	Screw, 5/16-18 x.750, Bronco
9	710-0895	Screw, 1/4-15, 0.750, Super Bronco Only
10	731-1990	Cover, Lift Lever, Super Bronco Only
11	731-2104C	Cover, w/ Cup Holder, Super Bronco Only
12	731-04591A	Cup Holder, Bronco Only
13	783-04333A	Fender, Super Bronco
	783-04314A	Fender, Bronco
14	783-0677	Deck Lift Plate, Super Bronco
	783-1010A	Deck Lift Plate, Bronco
15	783-1489A	Mounting Bracket, Seat
16	710-0227	Screw, #8-18 x.50
17	726-0279	Plate, Insulator
18	725-1303	Spring Switch, Outer
19	725-1439	Spring Switch, Inner
20	726-0278	Plate, Insulator Boss
21	683-04079	Shaft Assembly, Lift
22	712-04065	Nut, Flange Lock, 3/8-16, GrF, Nylon
23	714-0104	Pin, Cotter,.072 Dia. X. 1.13
24	714-0111	Pin, Cotter, 3/32, 1.0
25	716-0106A	Ring, E Type,.625 Dia.
26	720-0311	Grip, Handle, 1/2
27	732-0874	Spring, Torsion
28	738-0138A	Screw, 5/16-18 x.620 Gr2
29	738-04130	Screw, Shoulder,.625 x.165, 3/8-16
30	741-0225	Bearing, Hex Flange
31	746-0968	Cable, Lift, 16.16
32	747-04155	Handle, Lift
33	756-1154	Pulley, Roller
34	783-04494	Arm, Lift - RH
	783-04711	Arm, Lift - LH
35	710-0726	Screw, 5/16-12, 0.750
36	736-3078	Washer, Flat,.344 x 1.0 x.063
37	783-04081A	Seat Pivot Bracket
38	720-04009	Knob, 3/8-16
39	726-0201	Nut, Speed,.3125 ID
40	732-1184	Spring, Extension,.84 Dia. x 4.6
41	736-0275	Washer, Flat,.344 x.688 x.065
42	736-0101	Washer, Flat,.406 x 1.00 x.030
43	738-0296	Screw, Shoulder,.437 x.268, 5/16-18
44	738-04012	Shoulder Screw
45	783-0209C	Seat Bracket, Lift

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models J609 & T609

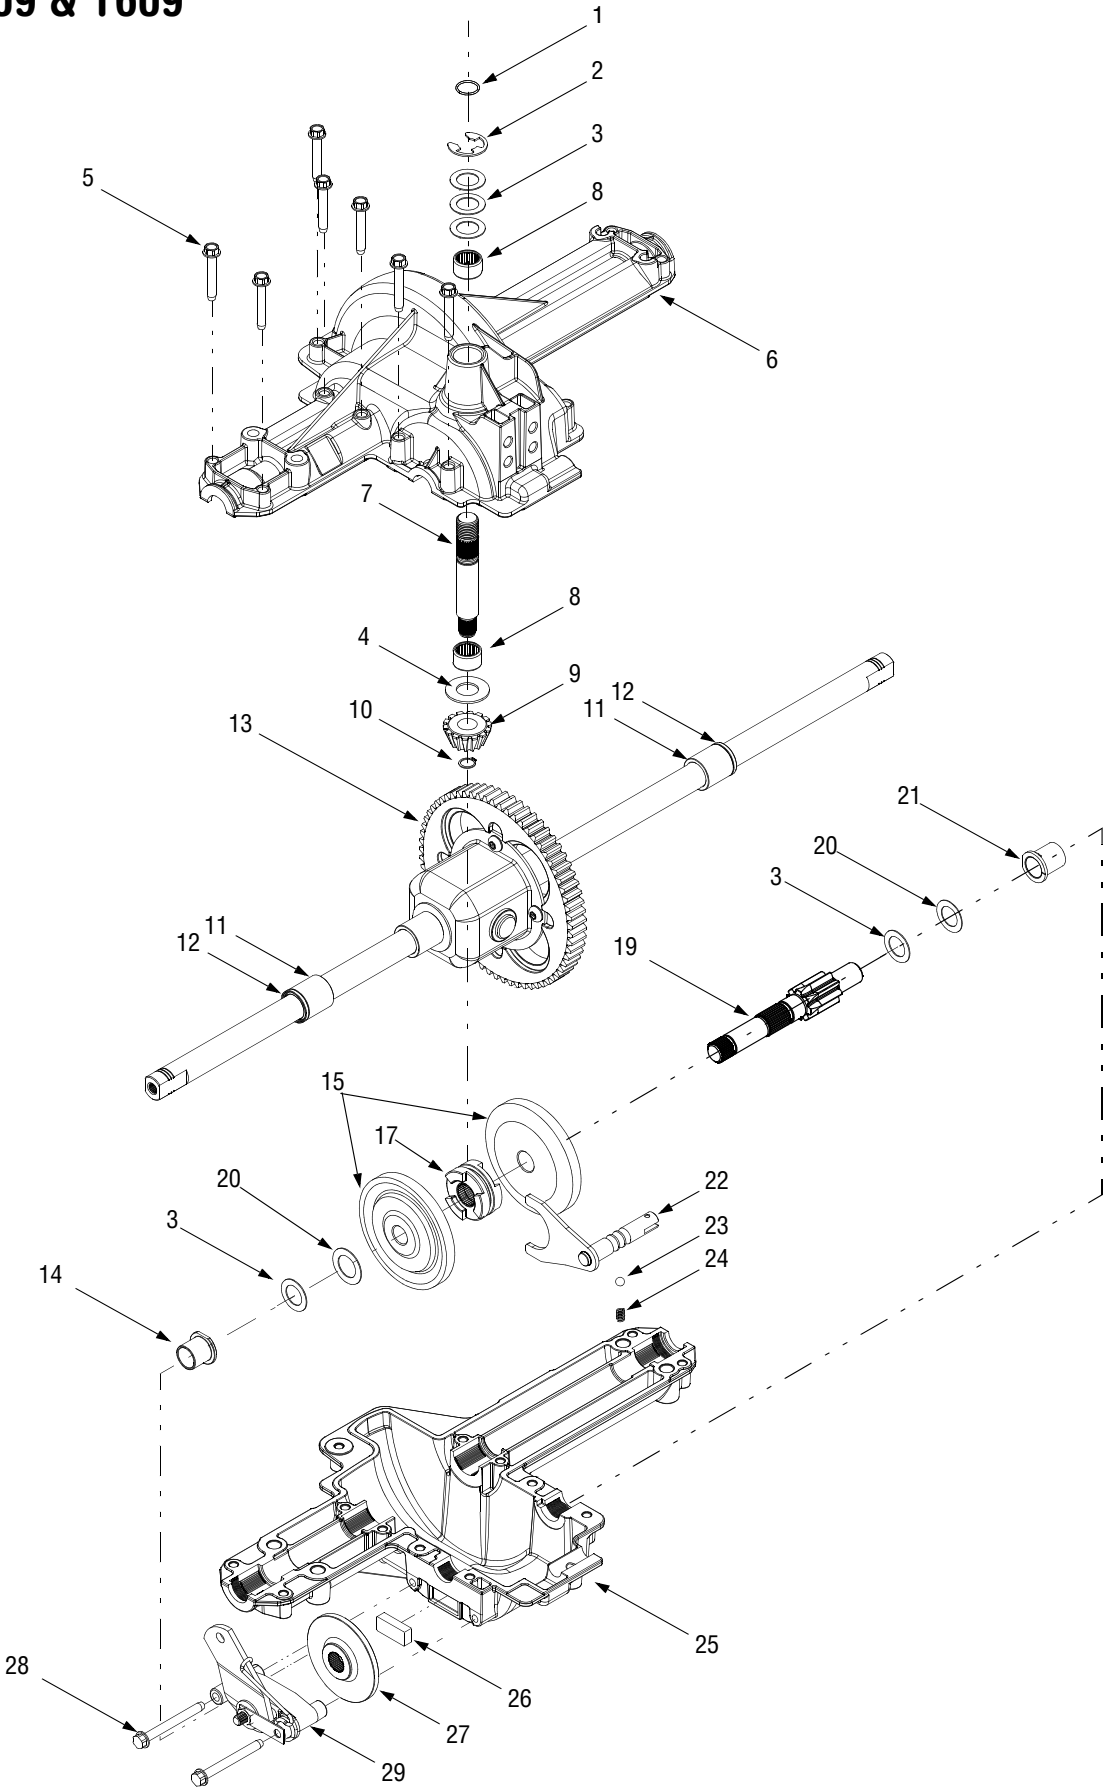


Models J609 & T609

REF. NO.	PART NO.	DESCRIPTION
1	732-0614	Ring, Wire
2	716-0231	Ring, E Type,.750
3	736-0336*	Flat Washer, 5/8 x 1.0 x.030
	736-0337*	Flat Washer, 5/8 x 1.0 x.040
	736-0349*	Flat Washer, 5/8 x 1.0 x.020
4	736-0335	Washer, Thrust.635 x 1.26 x.06
5	710-1325	Self-tapping Screw, 1/4-20 x 1.625
6	719-04017	Upper Housing
7	711-1109	Input Shaft
8	741-0335	Needle Bearing,.625 x.813 x.495
9	717-1464	14-tooth Bevel Pinion
10	716-0108	Retaining Ring,.437
11	741-0340	Sleeve Bearing,.75 x 1.0 x 1.0
12	721-0338	Seal,.75 x 1.0 x.125
13	618-04041	Differential Assembly
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	717-04056	42-tooth Bevel Gear
17	718-04045	Clutch Collar
19	711-04134	Drive Shaft
20	736-0495*	Thrust Washer, 1.0 x.632 x.0
	736-0494*	Flat Washer,.632 x 1.00 x.035
21	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
22	611-0011	Detent Shaft Assembly
23	741-0862	Detent Ball
24	732-0863	Compression Spring
25	719-04018	Lower Housing
26	717-0678	Brake Puck
27	761-0202	Brake Disc
28	710-1206	Self-tapping Screw, 1/4-20 x 2.375
29	661-0001	Brake Assembly
—	737-0148	Grease (19 oz.)

*Use applicable washers (ref. no.'s 3 or 20) in this application allowing .0150/.0020 in. end-play.

NOTE: If rebuilding the upper housing, include two ounces (2 oz.) of Unirex[®] N3 grease (Part No. 737-0289) in the input shaft cavity.

Models J609 & T609

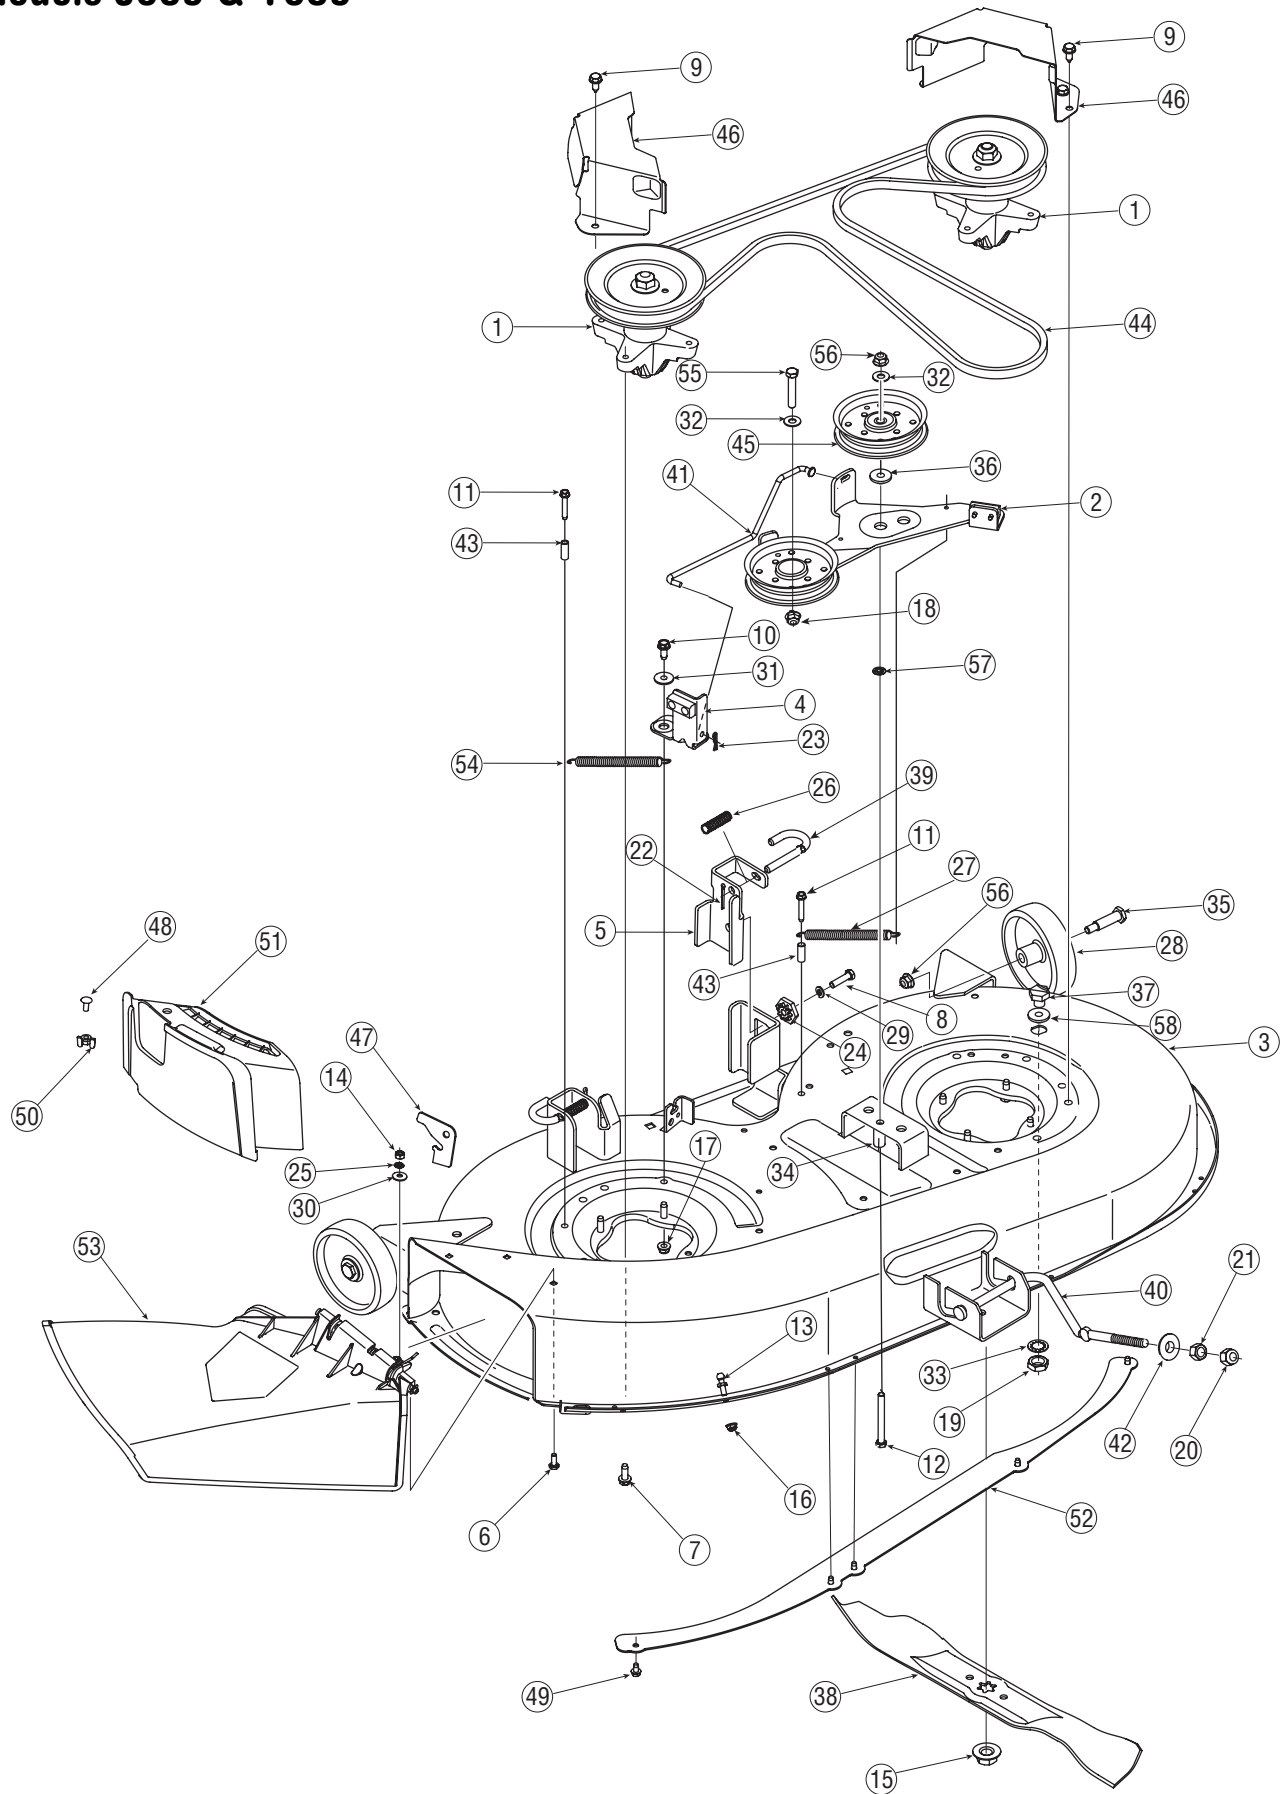

Models J609 & T609


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	618-0624	Pulley/ Spindle Assembly	30	736-0270	Bell Washer, .265 x .75 x .062
2	683-04138	Deck Brake Assembly	31	736-0289	Shoulder Bushing, .320 ID x .135 Lg.
3	683-04162	42" Deck Assembly	32	736-0267	Flat Washer, .385 x .87 x .06
4	683-04167	Deck Brake Assembly	33	736-0225	Lock Washer, 5/8
5	683-0254B	Deck Hanger Bracket Assembly	34	750-04446	Spacer, 3/8 ID x .68 OD x 1.46 Lg
6	710-0751	Screw, 1/4-20 x .620	35	738-0373	Shoulder Screw, .498 x 1.53 x 3/8-16
7	710-0650	Screw, 5/16-18 x .875	36	738-04162	Shoulder Spacer, .8540 x .200
8	710-0528	Screw, 5/16-18 x 1.25	37	738-04146	Plug
9	710-0726	Screw, 5/16-12 x .750	38	742-0616A	Blade, 21.23", Star 3-in-One
10	710-1260A	Screw, 5/16-18 x .750	39	747-1116	Deck Release Handle Rod
11	710-0778	Screw, 1/4-20 x 1.500	40	747-04269A	Front Deck Adjustment Rod
12	710-3085	Screw, 3/8-16 x 3.50	41	747-04379	Brake Control Rod
13	711-04069	Grass catcher Pin	42	748-04069	Deck Lift Pivot Cup
14	712-3006	Hex Nut, 1/4-20	43	750-0566A	Spacer, .260 x .372 x 1.030 Lg.
15	712-0417A	Flange Nut, 5/8-18	44	754-04060B	V-Belt, 96.3 Lg.
16	712-04064	Flange Lock Nut, 1/4-20	45	756-04129	Idler Pulley, 4.25" Dia.
17	712-04063	Flange Lock Nut, 5/16-18	46	783-04327	Belt Cover
18	712-04065	Flange Lock Nut, 3/8-16	47	783-1025	Chute Stop
19	712-0641	Hex Nut, M16-1.5	48	710-0134†	Carriage Screw, 1/4-20 x .62
20	712-3083	Hex Lock Nut, 1/2-13	49	710-0599†	Screw, 1/4-20 x .500
21	712-0206	Hex Nut, 1/2-13	50	712-3087†	Wing Nut, 1/4-20
22	714-0470	Cotter Pin, 1/8 x 1.25	51	731-2363†	Mulch Plug
23	714-0104	Cotter Pin, .072 Dia. x 1.13 Lg.	52	783-1146A†	Deck Skirt
24	717-04074	Deck Adjustment Gear	53	731-1032B	Discharge Chute
25	726-0233	Push Nut, .25 ID x .50 OD	54	732-04287	Extension Spring, .500 Dia. x 6.375 Lg
26	732-0306A	Compression Spring, .531 OD x 1.75 Lg.	55	710-3144	Screw, 3/8-16 x 2.00
27	732-0308A	Extension Spring, .50 Dia. x 6.37 Lg.	56	712-0431	Flange Lock Nut, 3/8-16
28	734-0973	Deck Wheel	57	712-0229	Push Nut, 3/8
29	736-0119	Lock Washer, 5/16	58	736-0187	Flat Washer, .64 x 1.24 x .06

† If Equipped

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.


NOTE: Tractor features vary by model. **NOT** all parts listed above and pictured on the previous page are standard equipment.

Model J609

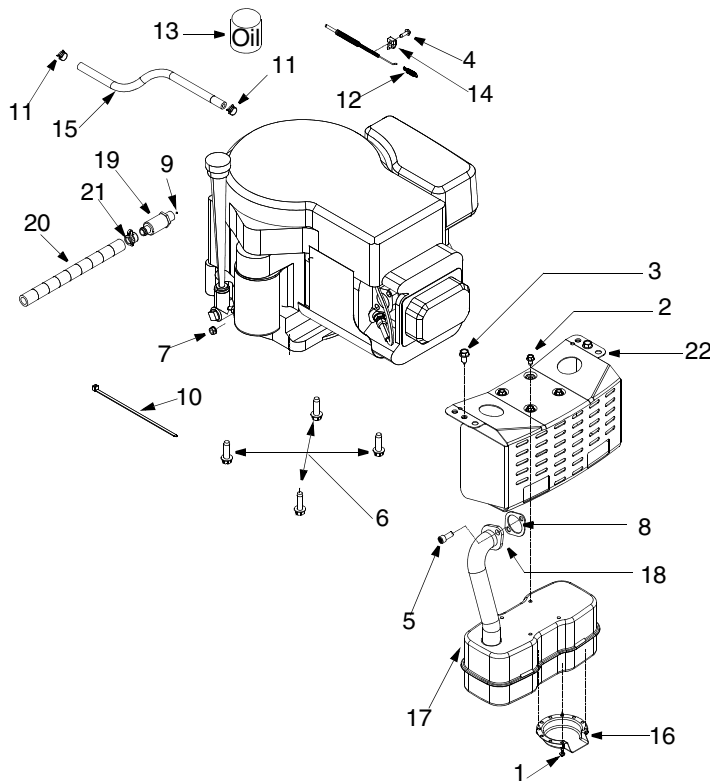

Ref. No.	Part No.	Description
1	710-0227	AB Screw #8-18 x 0.5
2	710-0599	TT Screw 1/4-20 x 0.5
3	710-0726	AB Screw 5/16-12 x 0.5
4	710-1237	T screw #10-32 x 0.625
5	710-1314A	Socket Hd Scr. 5/16-18 x.750
6	710-1315	TT Screw 3/8-16 x 1.25
7	712-0271	Sems Nut
8	721-0208	Exhaust Gasket
9	721-0331	Sealant: Loctite™
10	725-0157	Cable Tie
11	726-0205	Hose Clamp
12	732-0966	Extension Spring
13	737-0169	SAE 30W Oil
14	751B213146	Throttle Clamp
15	751-0535	Fuel Line Hose
16	751-0564A	Muffler Deflector
17	751-0617A	Muffler
18	751-0619A	Exhaust Pipe
19	751-3140	Oil Drain
20	751-3141	Oil Drain Extension Hose
21	751-3142	Oil Drain Cap
22	783-0615D	Muffler Bracket

Model T609

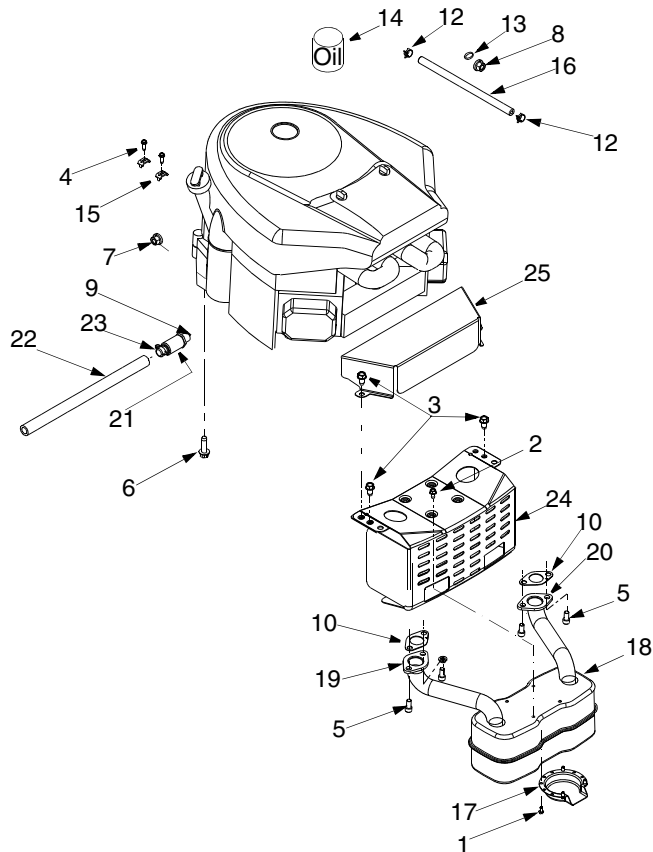

Ref. No.	Part No.	Description
1	710-0227	AB Screw 38-18 x 0.5
2	710-0599	TT Screw 1/4-20 x 0.5
3	710-0726	AB Screw 5/16-20 x 0.75
4	710-1237	T Screw #10-32 x 0.625
5	710-1314A	Socket Hd. Scr. 5/16-18 x 0.75
6	710-1315	TT Screw 3/8-16 x 1.25
7	712-0271	Sems Nut
8	712-3017	Hex Nut
9	721-0331	Pipe Sealant
10	721-0460	Exhaust Gasket
11	725-0157	Cable Tie(not shown)
12	726-0205	Hose Clamp
13	736-0300	Flat Washer
14	737-0169	Oil: SAE 30W
15	751B221535	Clamp: Casing
16	751-0535	Fuel Line Hose
17	751-0564A	Deflector: Muffler
18	751-0616A	Dual Inlet Muffler
19	751-0650B	Exhaust Pipe RH
20	751-0651B	Exhaust Pipe LH
21	751-3140	Oil Drain
22	751-3141	Oil Drain Extension Hose
23	751-3142	Oil Drain Cap
24	783-0615D	Muffler Bracket
25	783-0625C	Heat Shield