



MODELS 807 & 808

B&S OHV V-Twin

Kohler (for choke)

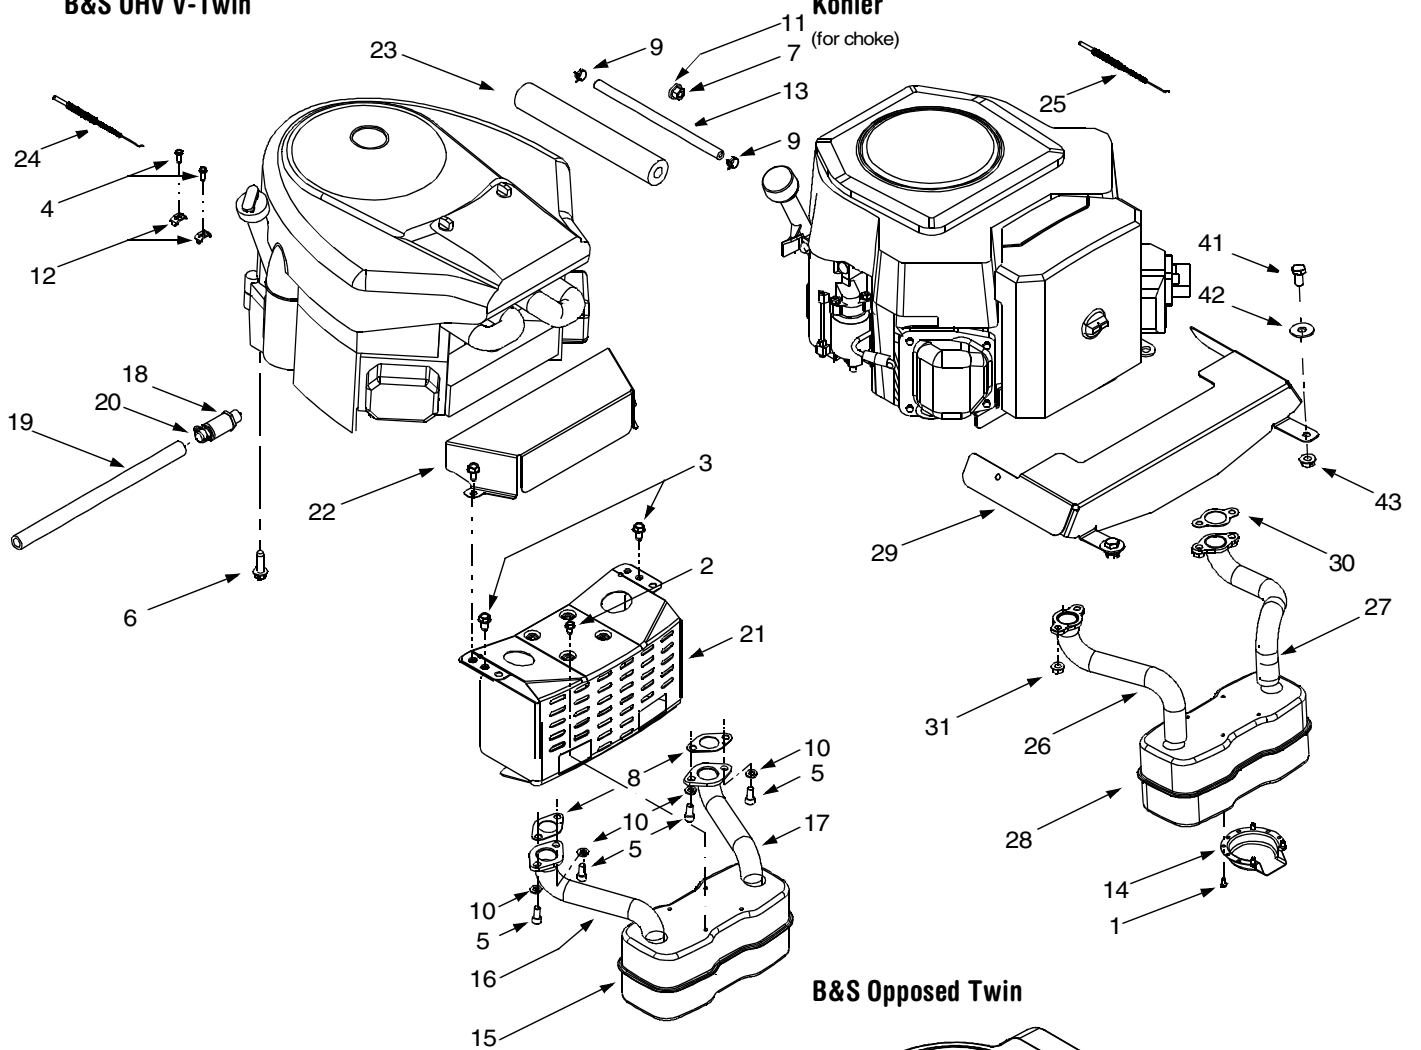

B&S Opposed Twin

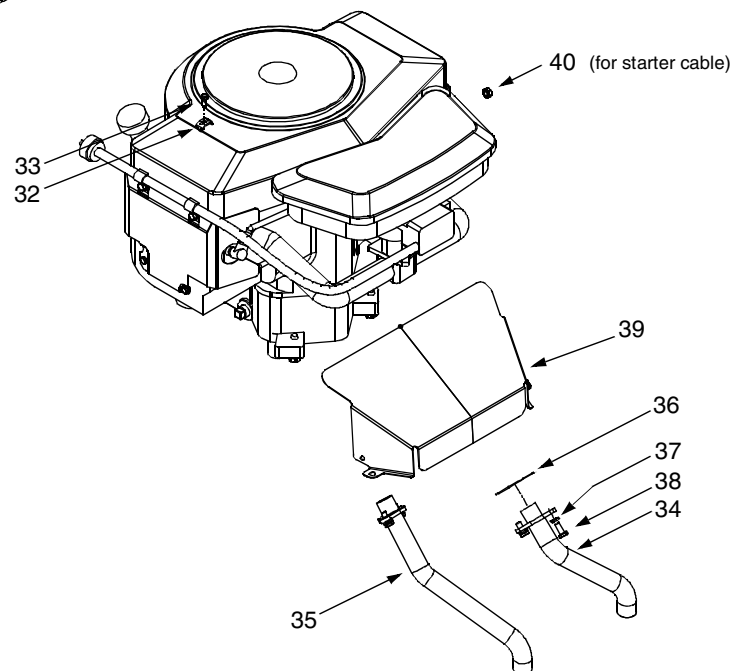


Models 807 & 808

REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Self-tapping Screw, #8-18 x .5
2	710-0599	Self-tapping Screw, 1/4-20 x .5
3	710-0604A	Self-tapping Screw, 5/16-18 x .625
4	710-1237	Screw, #10-32 x .625 (B&S OHV V-Twin)
5	710-1314A	Socket Cap Screw, 5/16-18 x .625
6	710-1315	Self-tapping Screw, 3/8-16 x 1.25
7	712-3017	Hex Nut, 3/8-16
8	721-0460	Exhaust Gasket (B&S OHV V-Twin)
9	726-0205	Hose Clamp
10	736-0119	Lock Washer, 5/16
11	736-0300	Flat Washer
12	751B221535	Casing Clamp (B&S OHV V-Twin)
13	751-0535	Fuel Line Hose
14	751-0564	Muffler Deflector
15	751-0616	Muffler, Twin Inlet (B&S OHV V-Twin & Opposed Twin)
16	751-0650	RH Exhaust Pipe (B&S OHV V-Twin)
17	751-0651	LH Exhaust Pipe (B&S OHV V-Twin)
18	751-3140	Oil Drain Valve
19	751-3141	Oil Drain Hose
20	751-3142	Oil Drain Cap
21	783-0615B	Muffler Heat Shield
22	783-0625C	Engine Heat Shield (B&S OHV V-Twin)
23	722-0263	Foam (fits over fuel line)
24	746-1086	Throttle Cable (B&S OHV V-Twin & Opposed Twin)
25	746-1100	Throttle Cable (Kohler)
26	751-0645	RH Exhaust Pipe (Kohler)
27	751-0644A	LH Exhaust Pipe (Kohler)
28	751-0805	Muffler, Twin Inlet (Kohler)
29	783-0881	Engine Heat Shield (Kohler)
30	721-0377	Exhaust Gasket (Kohler)
31	712-3086	Flange Nut, M8 x 1.25-6 (Kohler)
32	726-0272	Clamp, 9/16 (B&S Opposed Twin)
33	712-0779A	Screw, #10-16 x .5 (B&S Opposed Twin)
34	751-0623	LH Exhaust Pipe (B&S Opposed Twin)
35	751-0624	RH Exhaust Pipe (B&S Opposed Twin)
36	721-0346	Exhaust Gasket (B&S Opposed Twin)
37	736-0329	Lock Washer, 1/4 (B&S Opposed Twin)
38	710-0751	Hex Screw, 1/4-20 x .620 (B&S Opposed Twin)
39	783-0357B	Heat Shield (B&S Opposed Twin)
40	712-0271	Hex Sems Nut, 1/4-20 (B&S Opposed Twin)
41	710-3025	Hex Cap Screw, 5/6-18 x .625 (Kohler)
42	736-3078	Flat Washer, .349 x 1.0 x .063 (Kohler)
43	712-3004A	Flange Lock Nut, 5/16-18 (Kohler)

NOTE: Engine accessory parts are applicable to all model 807 and 808 Garden Tractors except where otherwise noted.

Models 807 & 808

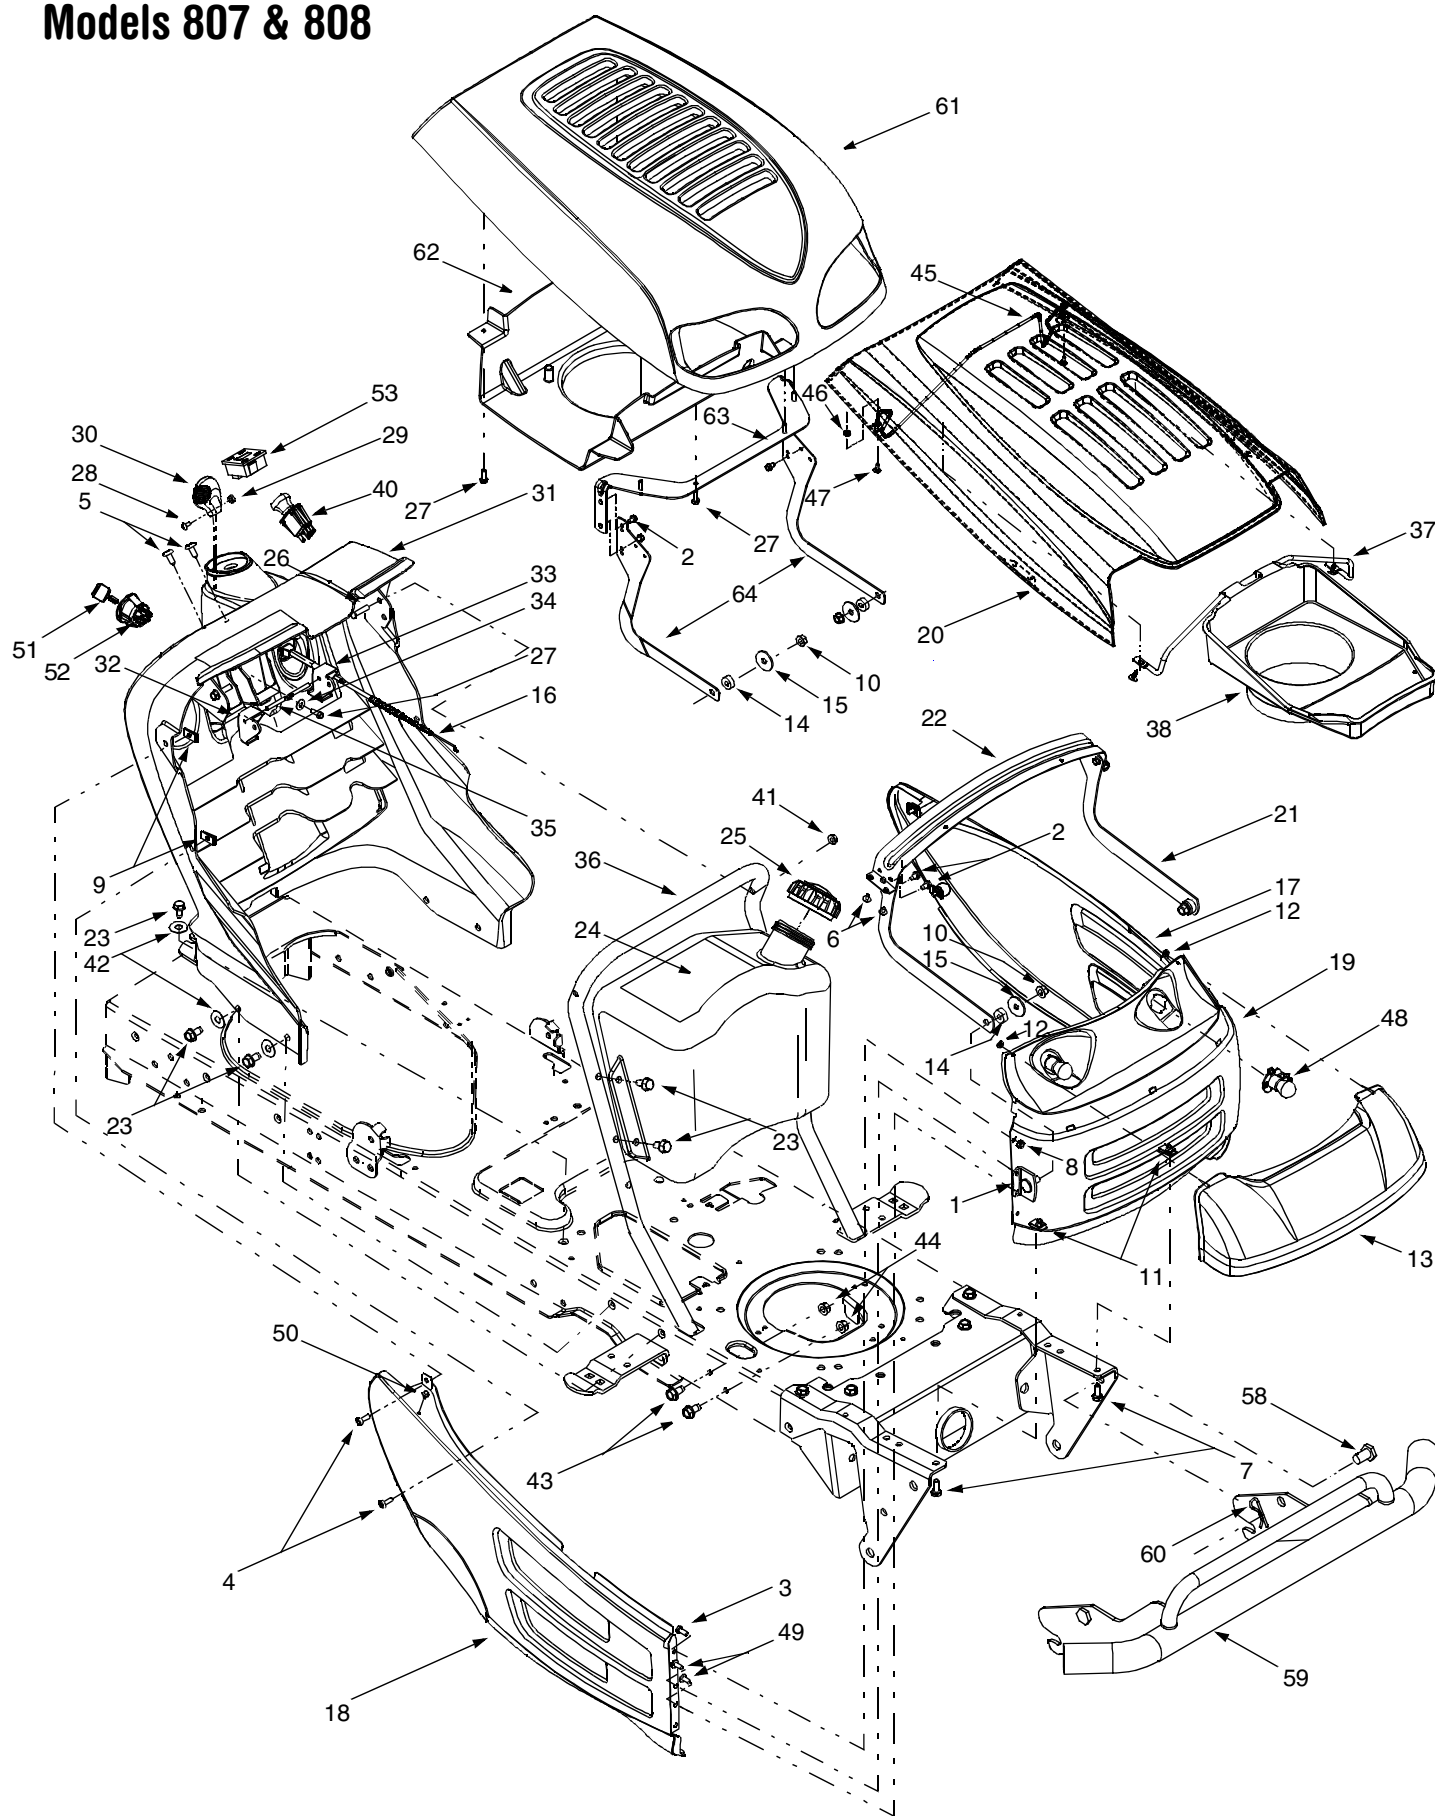


Models 807 & 808

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	683-0195	Bracket Assembly (8-style)	38	731-2247A	Hood Plenum (Models with B&S OHV V-Twin)
2	710-0599	Self-tapping Screw, 1/4-20 x .5		731-2248	Hood Plenum (Models with B&S Opposed Twin)
3	710-0751	Hex Cap Screw, 1/4-20 x .62		N/A	Hood Plenum (Models with Kohler)
4	710-0924	Phillips Pan Screw, 1/4-20 x .75	39	726-3046	Ratchet Clip
5	710-1017	Truss Phillips Screw, 1/4-20 x .625	40	725-1752	Electric PTO Switch
6	710-1268	Screw, #10-16 x .375	41	712-3027	Hex Flange Lock Nut, 1/4-20
7	710-0376	Hex Cap Screw, 5/16-18 x 1.0	42	736-3078	Flat Washer, .349 x 1.0 x .063
8	712-0271	Hex Sems Nut, 1/4-20	43	710-1238	Screw, 5/16-18 x .875 (Grade 5)
9	712-0292	U-type Speed Nut, 1/4-20	44	712-3004A	Hex Nut, 5/16-18
10	712-0431	Flange Lock Nut, 3/8-16	45	747-1215A	Hood Latch
11	726-0211	U-nut, 5/16-18	46	712-0272	Hex Sems Nut, #10-32
12	726-0293	Retainer Nut, 3/8	47	710-0473	Machine Screw, #10-24
13	731-1854A	Headlight Lens (8-style)	48	625-0051	Headlight Assembly
14	735-0126	Rubber Washer, .87 x .33	49	710-0896	Hex Index Washer Screw, 1/4-14 x .0625
15	736-3036	Flat Washer, .406 x 1.5 x 11GA	50	735-0199A	Rubber Bumper
16	746-1085	Choke Knob/Cable (Models with either B&S Twin)	51	725-1745	Ignition Key w/ plastic cover
	746-1088	Choke Knob/Cable (Models with Kohler)		725-1744	Ignition Key w/o plastic cover
17	783-0475A	LH Side Panel (8-style)	52	725-1741	Ignition Switch
18	783-0476B	RH Side Panel (8-style)	53	725-1976	Systems Indicator Monitor w/ Hour Meter
19	783-0477A	Grill (8-style)		725-1758	Systems Indicator Monitor w/ Ammeter
20	783-0478A	Hood (8-style)	58	711-0332	Clevis Pin, .50 x .78
21	783-1309	Hood Hinge Bracket	59	768-0010A	Bumper Assembly
22	783-0553A	Hood Support Bracket	60	714-0145	Internal Cotter Pin
23	710-0604A	Self-tapping Screw, 5/16-18 x .625	61	731-2300	Hood, Red (7-Style)
24	751-0658B	Fuel Tank, Three Gallon		731-2301	Hood, Green (7-Style)
	751-0659A	Fuel Tank, Two Gallon (Shown)		731-2302	Hood, Black (7-Style)
25	751-0603	Fuel Cap (Fits Either Tank)		731-2303	Hood, Charcoal Grey (7-Style)
26	710-0809	Self-tapping Screw, 1/4-20 x 1.25	62	731-2306	Hood Plenum
27	710-0895	Self-tapping Screw, 1/4-15 x .75	63	783-1034	Hood Bracket (7-Style)
28	710-3217	Truss Phillips Screw, #8-32 x .375	64	783-1495	Hood Side Bracket (7-Style)
29	712-0142	Hex Nut, #8-32	—	629-0309	Headlight Wire Harness
30	731-1857	Throttle Control Knob		629-1067	Tractor Wire Harness (Models with Hour Meter & Electric PTO)
31	731-2225C	Dash Panel (Models w/ Electric PTO)		629-1068	Tractor Wire Harness (Models with Ammeter & Electric PTO)
	731-2122C	Dash Panel (Models w/ Manual PTO)	—	629-1071	Tractor Wire Harness (Models with Hour Meter & Manual PTO)
32	731-2226	Cruise Control Button	—	629-1072	Tractor Wire Harness (Models with Ammeter & Manual PTO)
	731-2228	Cruise Cover (Models w/o Cruise Control)			
33	731-2227	Parking Brake Button			
34	736-0142	Flat Washer, 9/32 x 1/2 x 1/16			
35	747-1196	Brake/Cruise Pivot Rod			
36	749-1087A	Dash Support Tube			
37	747-1184	Hood Plenum Support Rod			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 807 & 808

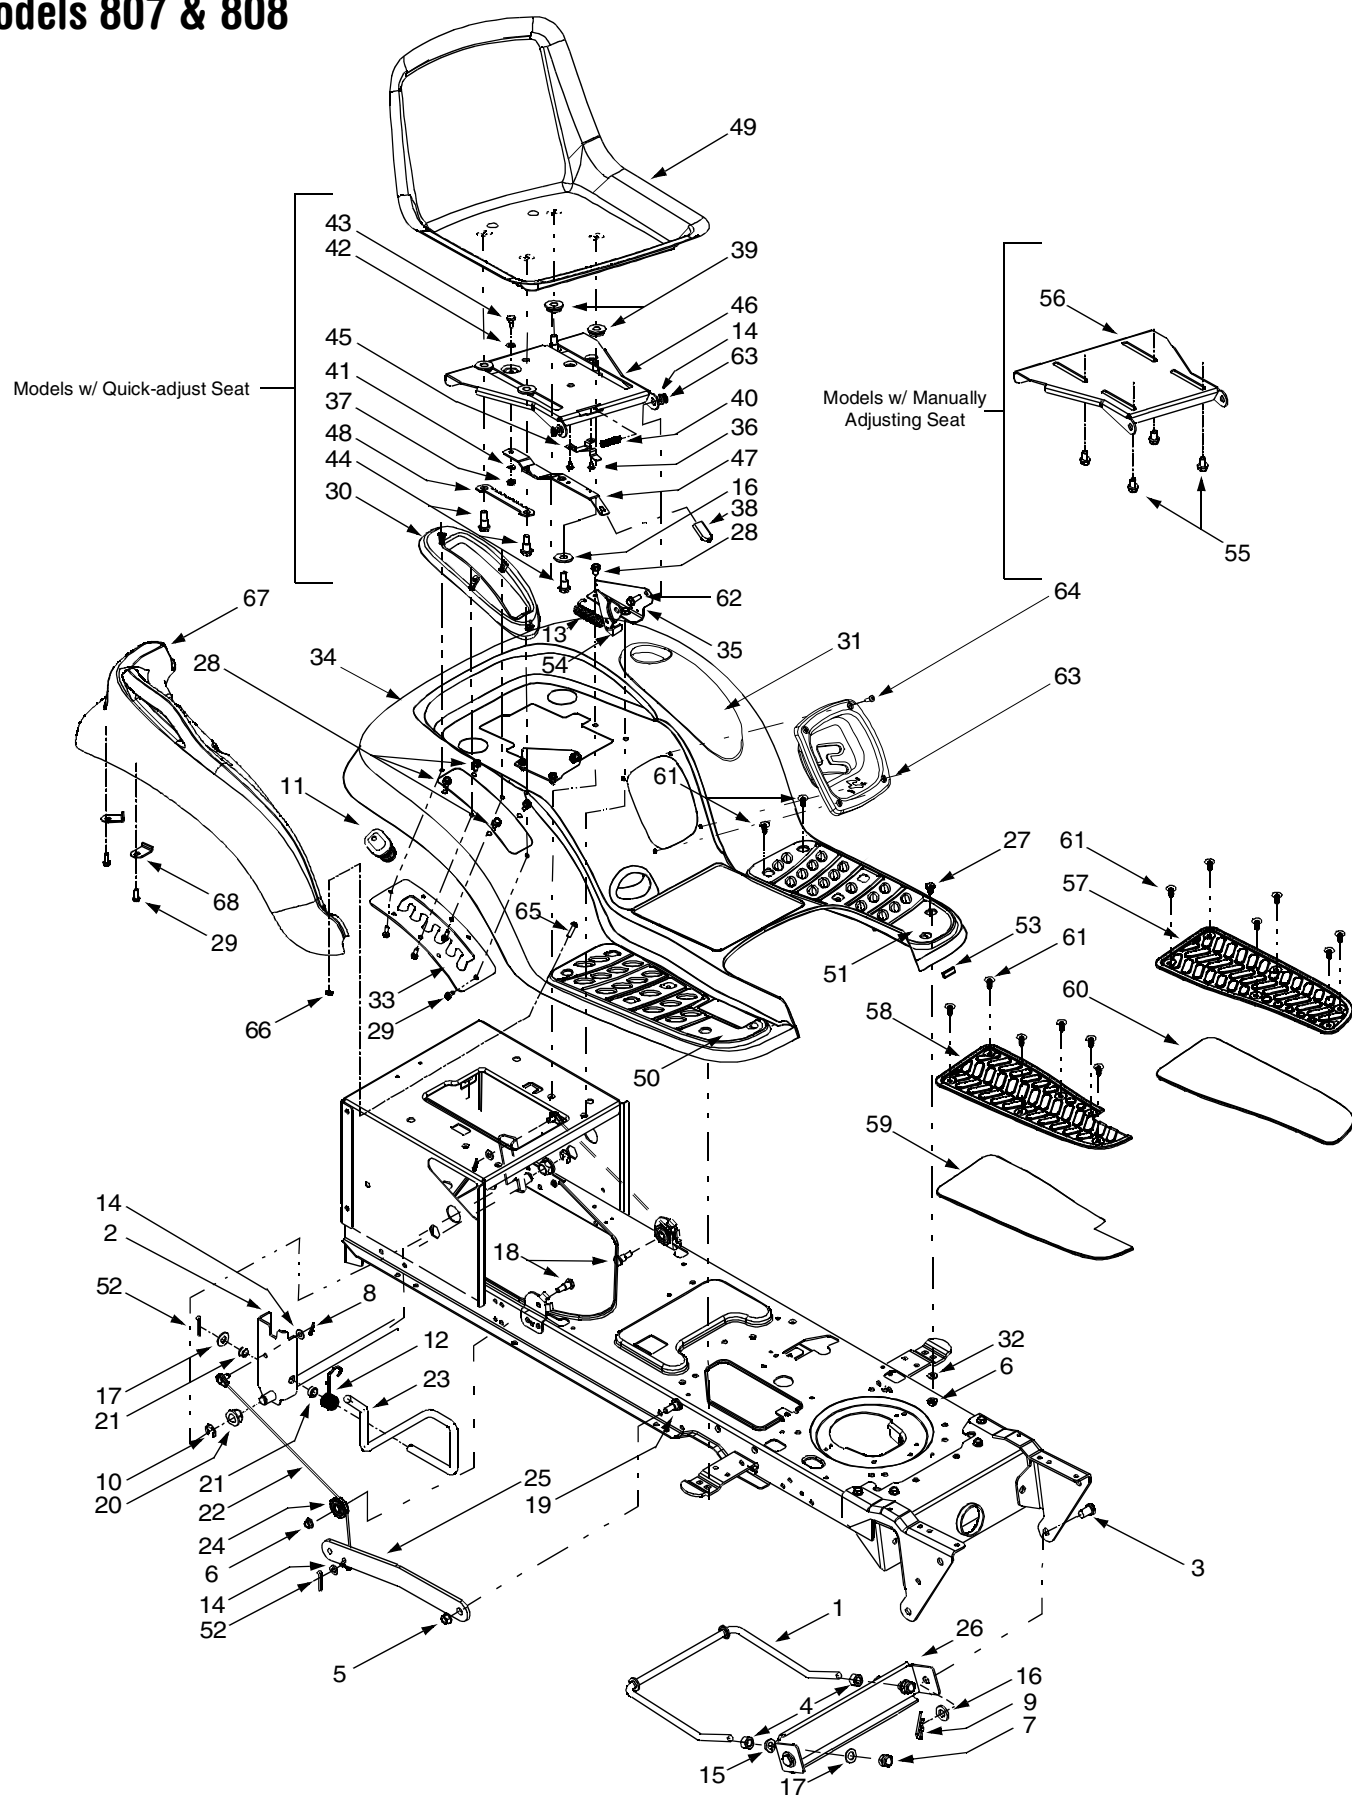

Models 807 & 808


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	747-1130B	Deck Stabilizer Rod (For 46-inch Deck)	35	783-1489	Seat Mounting Bracket
	747-1324	Deck Stabilizer Rod (For 54-inch Deck)	36	710-1268	Screw, #10-16 x .375
2	683-0197B	Lift Shaft Assembly(For 46-inch Deck)	37	712-3027	Hex Flange Lock Nut, 1/4-20
	683-0462	Lift Shaft Assembly(For 54-inch Deck)	38	720-0309A	Seat Adjuster Grip
3	711-0332	Clevis Pin, .5 x .78	39	731-1989	Spacer
4	712-0206	Hex Nut, 1/2-13	40	732-0499	Compression Spring, .41 x 1.5
5	712-0431	Flange Lock Nut, 3/8-16	41	736-0175	Spring Washer, .265 x .562 x .025
6	712-3004A	Flange Lock Nut, 5/16-18	42	736-0204	Flat Washer, .344 x .62 x .03
7	712-3083	Hex Nut, 1/2-13	43	738-0137A	Shoulder Screw, .340 x .285, 1/4-20
8	714-0104	Internal Cotter Pin	44	738-1007	Shoulder Screw, .50 x .50, 3/8-16
9	714-0145	Internal Cotter Pin	45	783-0611	Seat Stop
10	716-0106	E-ring	46	783-0738	Seat Pivot Bracket
11	720-0311	Handle Grip	47	783-0739	Seat Adjustment Lever
12	732-0874	Torsion Spring	48	783-0753	Seat Adjustment Selector
13	732-1184	Extension Spring, .84 x 4.6	49	757-0348A	High Back Seat, Black
14	736-0275	Flat Washer, 5/16		757-0350	High Back Seat w/ Drain Holes, Black
15	736-0921	Lock Washer, 1/2		757-0360A	Medium Back Seat, Black
16	736-3019	Flat Washer, .31 x 1.062 x .134	50	735-0656	RH Foot Pad, Rubber (4-Style Fender)
17	736-3084	Flat Washer, .51 x 1.12 x .06	51	735-0657	LH Foot Pad, Rubber (4-Style Fender)
18	738-0138A	Hex Cap Screw, 5/16-18 x .62	52	714-0111	Cotter Pin
19	738-0143	Shoulder Screw, 3/8-16	53	731-0511	Trim Strip
20	741-0225	Hex Flange Bearing	54	783-0209A	Seat Lift Bracket
21	741-0715	Snap Flange Bearing	55	710-0870	Hex Head Washer Screw, 3/8-16 x .625
22	746-0968	Lift Cable, 16.16	56	783-0740	Seat Pivot Bracket, Manually Adjusted
23	747-1111A	Lift Handle	57	735-0672	RH Foot Pad, Rubber (7-Style Fender)
24	756-1154	Roller Pulley	58	735-0673	LH Foot Pad, Rubber (7-Style Fender)
25	783-0678A	Arm Lift	59	723-0484	RH Foot Pad, Grit (7-Style Fender)
26	783-0720A	Deck Stabilizer Bracket	60	735-0483	LH Foot Pad, Grit (7-Style Fender)
27	710-0260A	Carriage Bolt, 5/16 x .62	61	726-3046	Ratchet Clip
28	710-0604A	Self-tapping Screw, 5/16-18 x .625	62	738-0296	Shoulder Screw, .437 x .286
29	710-0895	Self-tapping Screw, 1/4-15 x .75	63	731-2480	Shift Cover
30	731-1990	Lift Lever Cover	64	710-0642	Self-tapping Screw, 1/4-20 x .75
31	731-1993	Cover w/ Cup Holder	65	710-0166A	Screw, 1/4-20 x 1.0
32	736-3078	Flat Washer, .349 x 1.0 x .063	66	712-0271	Hex Sems Nut, 1/4-20
33	783-0677	Lift Adjustment Bracket	67	731-2618	RH Fender Flare
34	783-1280	Fender, 4-Style† (Shown)		731-2619	LH Fender Flare (Not Shown)
	783-0841A	Fender, 7-Style‡	68	783-1478	Fender Clips

† Models equipped with a 4-style fender can accept fender flares, the lift lever cover and cover w/ cup holder (Ref. 67, 30 & 31).

‡ Models equipped with a 7-style fender **cannot** accept fender flares, the lift lever cover and cover w/ cup holder (Ref. 67, 30 & 31).

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Models 807 & 808

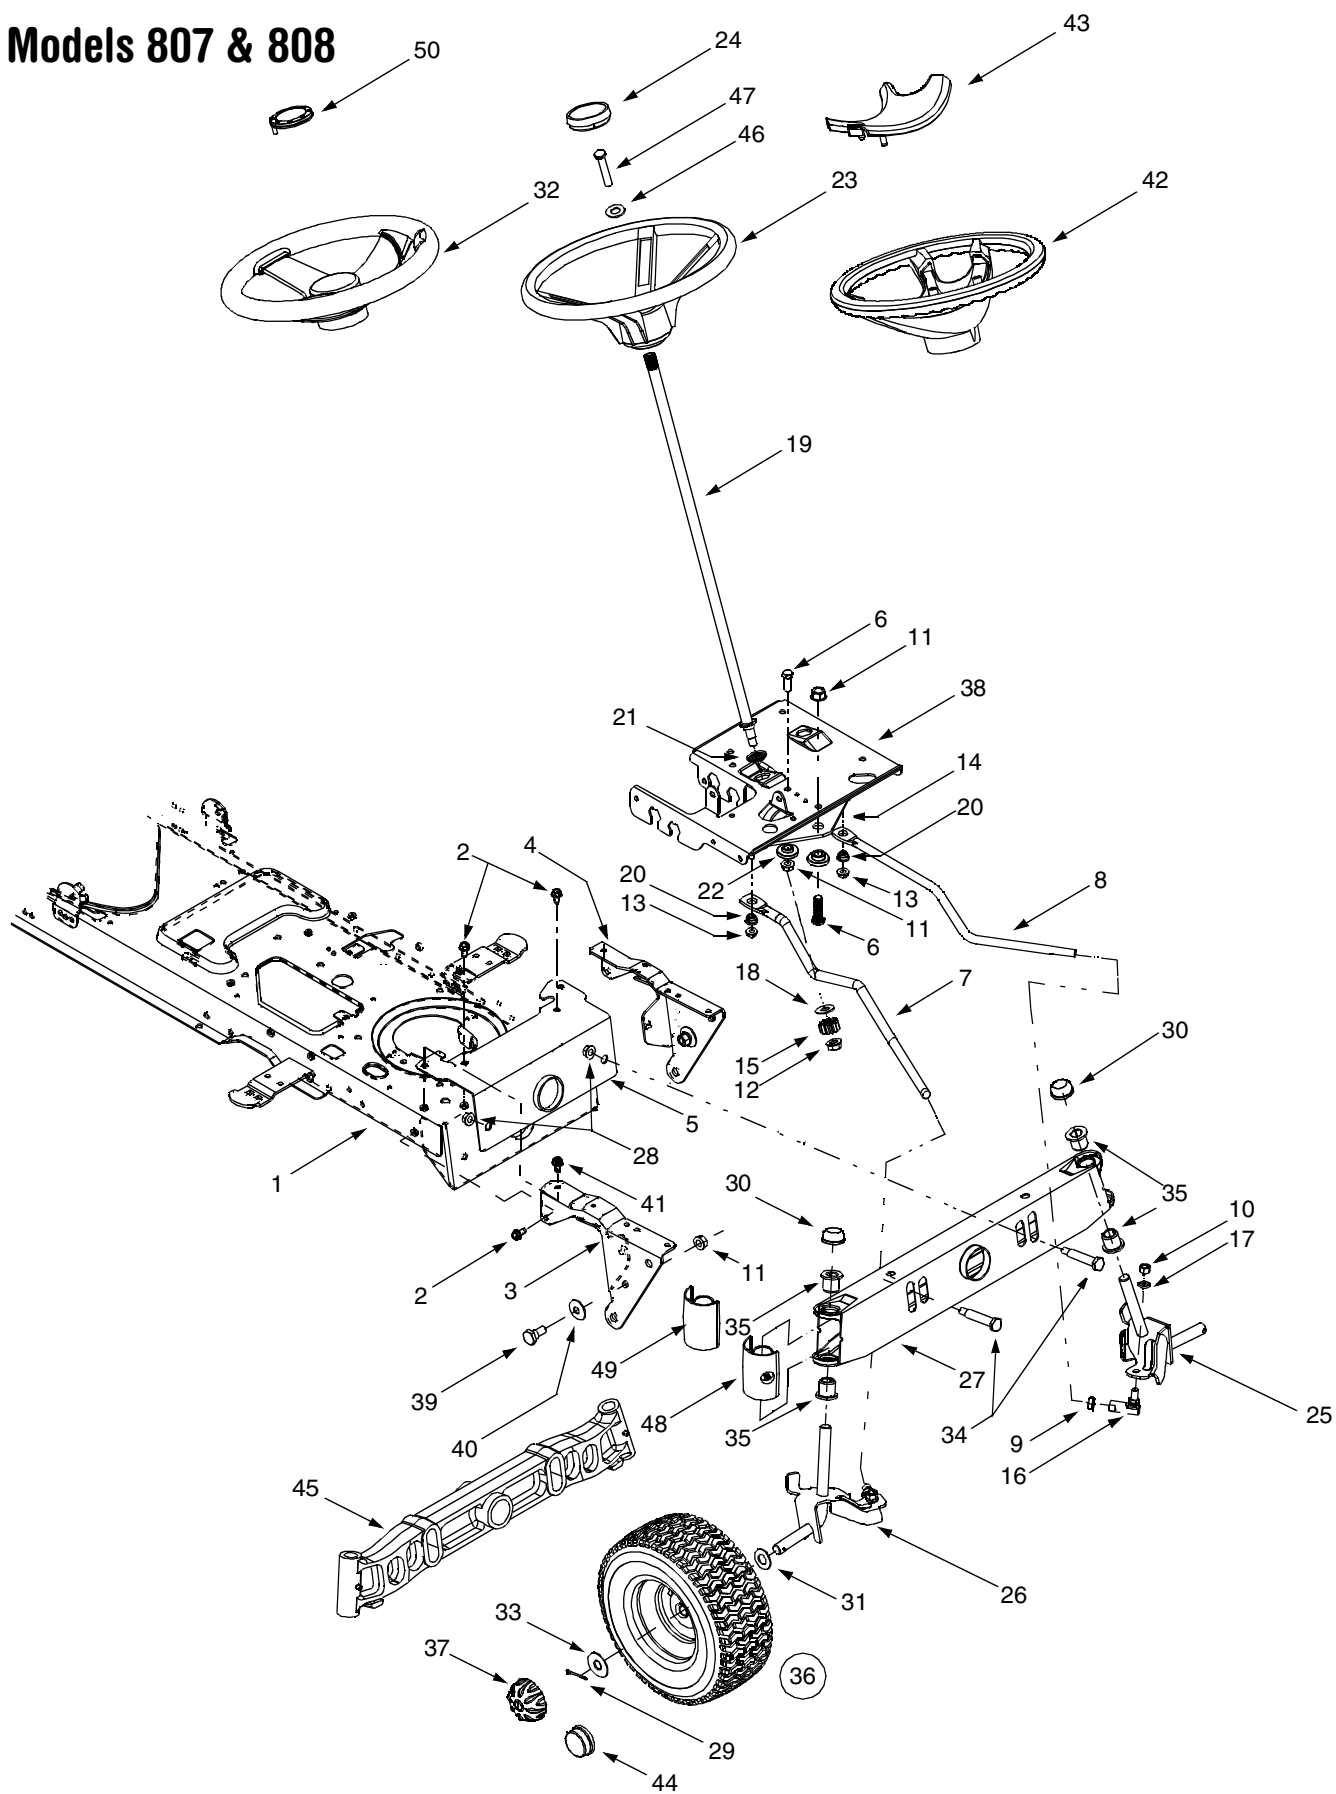

REF. NO.	PART NO.	DESCRIPTION
2	710-0604A	Self-tapping Screw, 16-18 x .625
3	783-0726B	RH Pivot Support Bracket
4	783-0727A	LH Pivot Support Bracket
5	783-0728	Pivot Bar Bracket
6	710-0723	Hex Cap Screw, 3/8-16 x 1.25 (Grade 5)
7	711-1408	RH Drag Link
8	711-1655	LH Drag Link
9	712-0240	Jam Nut, 7/16-20 (Grade 2)
10	712-0241	Hex Nut, 3/8-24 (Grade 2)
11	712-0431	Flange Lock Nut, 3/8-16
12	712-0459	Flange Lock Nut, 7/16-20
13	712-3004A	Flange Lock Nut, 5/16-18
14	717-1550D	Steering Gear, 11/90 Ratio
15	717-1554	Steering Pinion Gear
16	723-0448A	Ball Joint, 7/16-20
17	736-0169	Lock Washer, 3/8
18	736-3084	Flat Washer, .51 x 1.12 x .06
19	738-1001A	Steering Shaft, .625 OD x 24.4
20	741-0475	Plastic Bushing, .38 ID
21	741-0656	Hex Flange Bearing, 5/8
22	738-0372B	Shoulder Spacer, .38 ID
23	631-0027	Standard Steering Wheel, 13.25
24	731-0220	Steering Wheel Cap, Round
25	638-0017	LH Axle Assembly, .75 Diameter
26	638-0018	RH Axle Assembly, .75 Diameter
27	683-0128A	Steel Pivot Bar
28	712-0431	Flange Lock Nut, 3/8-16
29	714-0470	Cotter Pin
30	726-0341	Push Cap, .75
31	736-0316	Flat Washer, .78 x 1.589 x .06
32	731-2624	Steering Wheel, Soft Grip, Three Spoke
33	736-0285	Flat Washer, .635 x 1.589 x .06
34	738-1011	Shoulder Screw, .5 x 2.2, 3/8-16
35	741-0660	Flange Bearing, .76 ID x .937 OD
36	634-0183	Wheel Assembly, 16 x 6.5 x 8
		Square Shoulder
	634-0182	Rim Assembly Only
	734-0255	Air Valve (Not Shown)
	734-1727	Tire Only, Square Shoulder
37	734-2290	Deluxe Hub Cap (Ref. 33 Required)
38	783-0653E	Steering Support Bracket
39	738-0143	Shoulder Screw, 3/8-16
40	736-0331	Bell Washer, .39 x 1.13 x .062
41	710-1260A	Self-tapping Screw, 5/16-18 x .75
42	731-1869	Deluxe Steering Wheel
43	731-1904	Steering Wheel Cap, w/ Icon
44	731-0484A	Standard Hub Cap (Ref. 33 Not Necessary)
45	719-0525B	Cast Iron Pivot Bar
46	736-0242	Bell Washer, .34 x .872
47	710-0643	Hex Bolt, 5/16-18 X 1
48	731-1291A	Pivot Bar End Cap w/ Fitting
49	731-1649	Pivot Bar End Cap w/o Fitting
50	731-2625	Steering Wheel Cap, Round

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 807 & 808

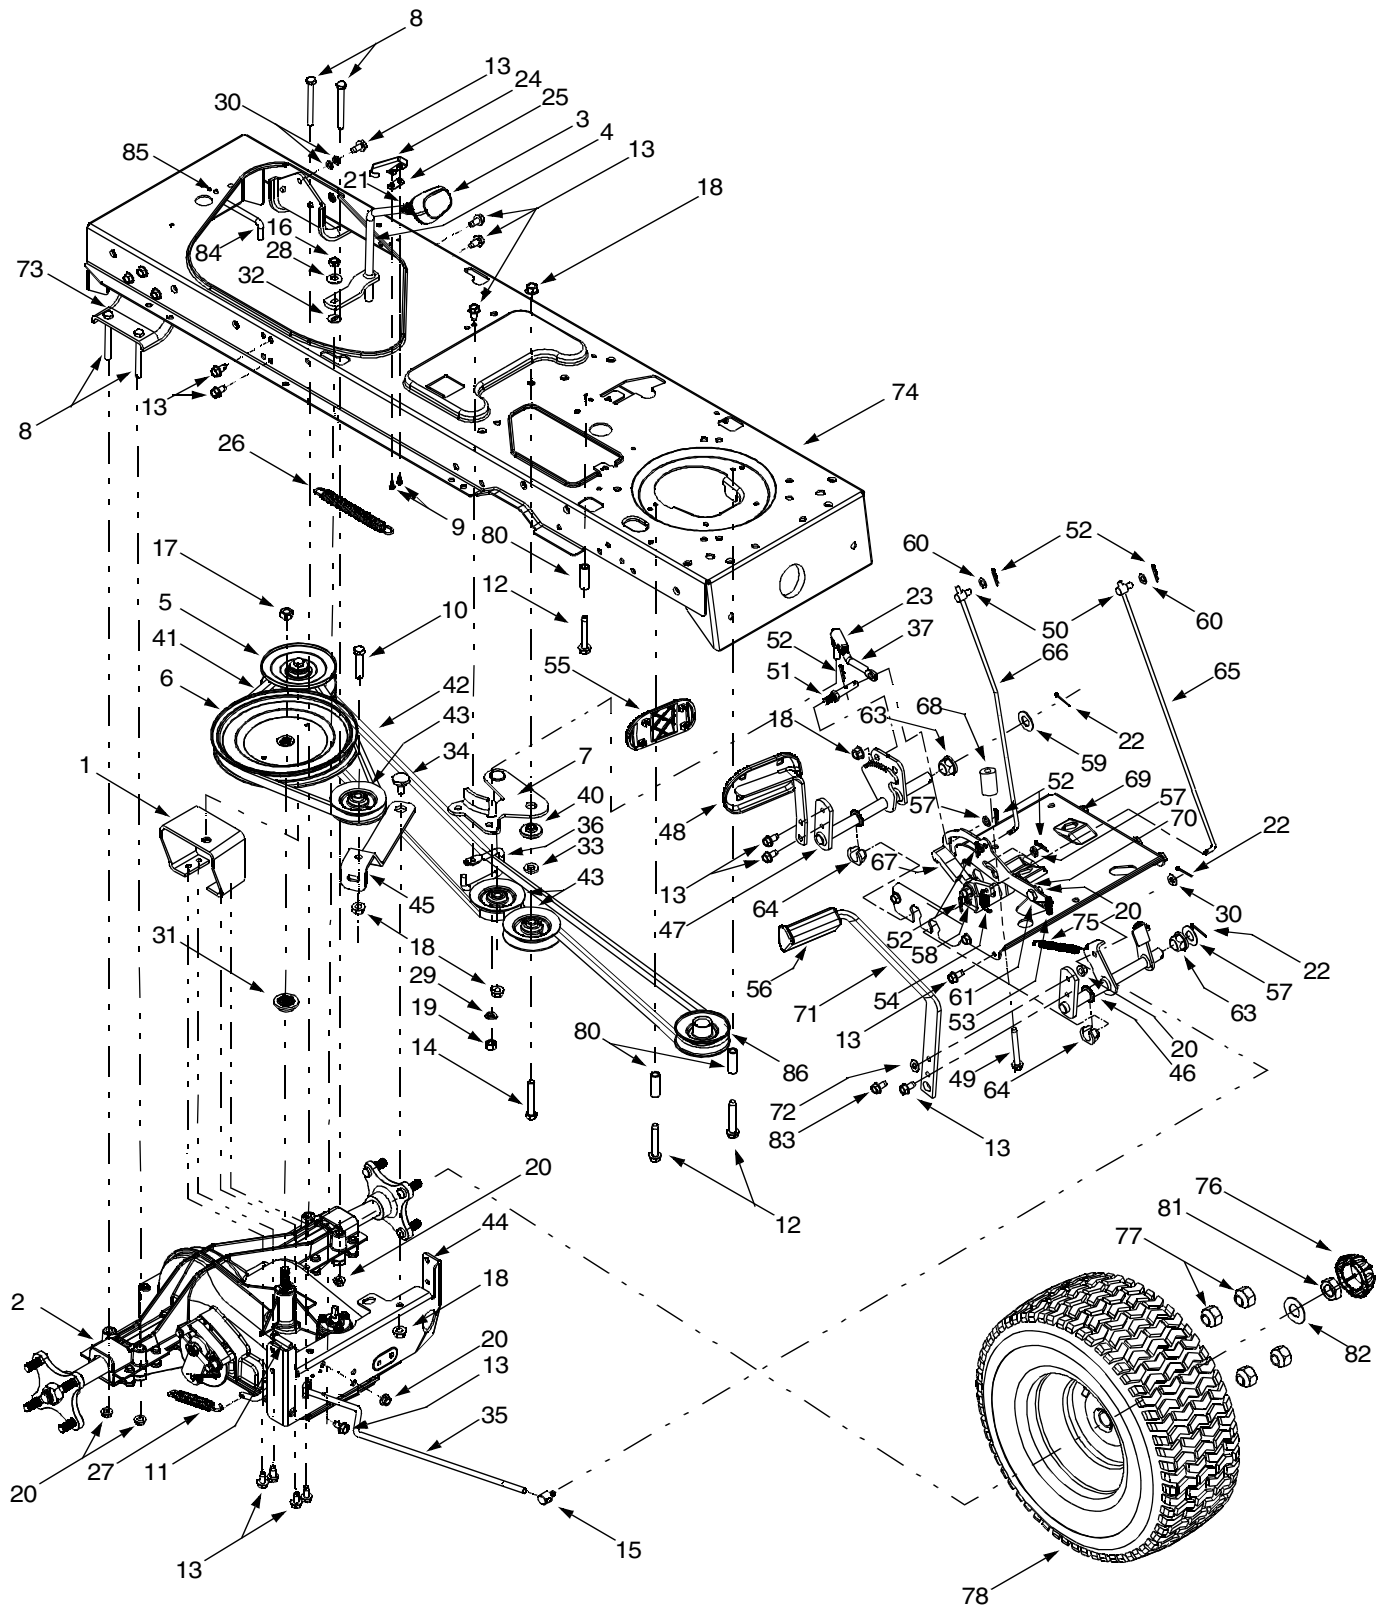


Models 807 & 808

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	618-0375	Variable-speed Bracket Assembly	46	647-0031	Brake Control Shaft Assembly
2	618-0376	Two-speed Transmission Assembly	47	647-0032	Speed Control Shaft Assembly
3	631-0009A	Shifter Knob	48	683-0266	Drive Pedal Assembly
4	647-0037	Shift Lever	49	710-1135	Self Tapping Screw, 5/16-18 x 2.5
5	656-0050	Variable-speed Pulley Assembly	50	711-0736	Ferrule, 1/4-20
6	756-0665	Transmission Pulley, 8.5	51	711-1363	Pin, 3/8-16 x 2.43
7	683-0251	Double-idler Bracket	52	714-0104	Cotter Pin
8	710-0176	Hex Cap Screw, 5/16-18 x 2.75	53	732-0437	Compression Spring, .34 OD x 1.0
9	710-0227	Self Tapping Screw, #8-18 x .5	54	732-0955	Extension Spring, .5 OD x 1.41
10	710-0347	Hex Cap Screw, 3/8-16 x 1.75	55	735-0662	Drive Pedal Pad
11	710-0805	Hex Cap Screw, 5/16-18 x 1.5	56	735-3049	Brake Pedal Pad
12	710-0809	Self-tapping Screw, 1/4-20 x 1.25	57	736-0140	Flat Washer, .281 x .5 x .0625
13	710-0604A	Self Tapping Screw, 5/16-18 x .625	58	736-0142	Flat Washer, 9/32 x 1/2 x 1/16
14	710-3011	Hex Cap Screw, 3/8-16 x 2.25	59	736-0187	Flat Washer, .64 x 1.24 x .06
15	711-0677	Ferrule, 5/16 x .312 Dia.	60	736-0204	Flat Washer, .344 x .062 x .03
16	712-0181	Hex Jam Nut, 3/8-16	61	738-0155	Shoulder Screw, .437 x 1.62
17	712-0702	Hex Flange Nut, 7/16-20	62	738-0507B	Shoulder Screw, .5 x .434
18	712-0431	Flange Lock Nut, 3/8-16	63	741-0225	Hex Flange Bearing
19	712-0798	Hex Nut, 3/8-16	64	741-3065B	Split Hex Flange Bearing
20	712-3004A	Flange Lock Nut, 5/16-18	65	747-1137	Cruise Control Rod
21	712-3008	Hex Jam Nut, 3/8-16	66	747-1138	Brake Lock Control Rod
22	714-0111	Cotter Pin	67	748-0413	Cruise Latch
23	723-3018	Ball Joint, 3/8-24	68	748-0415B	Spacer, 5/16 x 1.54
24	725-1713	Spring Switch	69	783-0653E	Steering Support Bracket
25	726-0320	Insulator Nut Plate	70	783-0732	Drive Lockout Bracket
26	732-0384	Extension Spring, .62 Dia. x 6.12	71	783-0773	Brake Pedal
27	732-0716	Extension Spring, .59 OD x 4.0	72	736-3008	Flat Washer, .344 x .750 x .120
28	736-0105	Bell Washer, .401 x .870 x .063	73	783-0693	Axle Bracket
29	736-0169	Lock Washer, 3/8	74	683-0304A	Lower Frame Assembly
30	736-0275	Flat Washer, 5/16	75	732-0963	Extension Spring, .5 OD x 6.37
31	718-0771	Pulley Hub, 1/2 Spline	76	731-2290	Hub Cap
32	736-0642	Flat Washer, .44 x .75 x .06	77	712-3050	Lug Nut, 7/16-14
33	736-3010	Flat Washer, .407 x .812 x .135	78	634-0132	Wheel Assembly Complete, 23 x 9.5 x 12
34	738-0322	Shoulder Screw, .625 Dia. x .21		634-3178	Rim Only
35	747-1122	Brake Rod		734-0255	Air Valve
36	747-1123A	Belt Guard		734-1728	Tire Only, Square Shoulder
37	747-1127	Idler Adjustment Rod, 3/8	79	750-0768	Split Spacer, .25 x .37 x 1.32
38	710-1026	Self-tapping Screw, 1/4-20 x 1.75	80	750-0566A	Spacer, .372 x .26 x 1.03
39	747-1185	Transmission Belt Guard Rod	81	712-3026	Jam Nut, 3/4-16
40	738-0372B	Shoulder Spacer, .380 ID	82	736-0316	Flat Washer, .78 x 1.59 x .06
41	754-0468	Variable-speed Belt	83	710-1260A	Hex Screw, 5/16-18 x .75
42	754-0467	Drive Belt	84	747-1185	Transmission Belt Guard Rod
43	756-0981A	Flat Idler, 2.75 OD	85	710-0599	Self Tapping Screw, 1/4-20 x .5
44	783-0667A	Transmission Torque Bracket	86	756-0639B	Engine Pulley, 3.56"
45	783-0669	Idler Bracket			

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 807 & 808

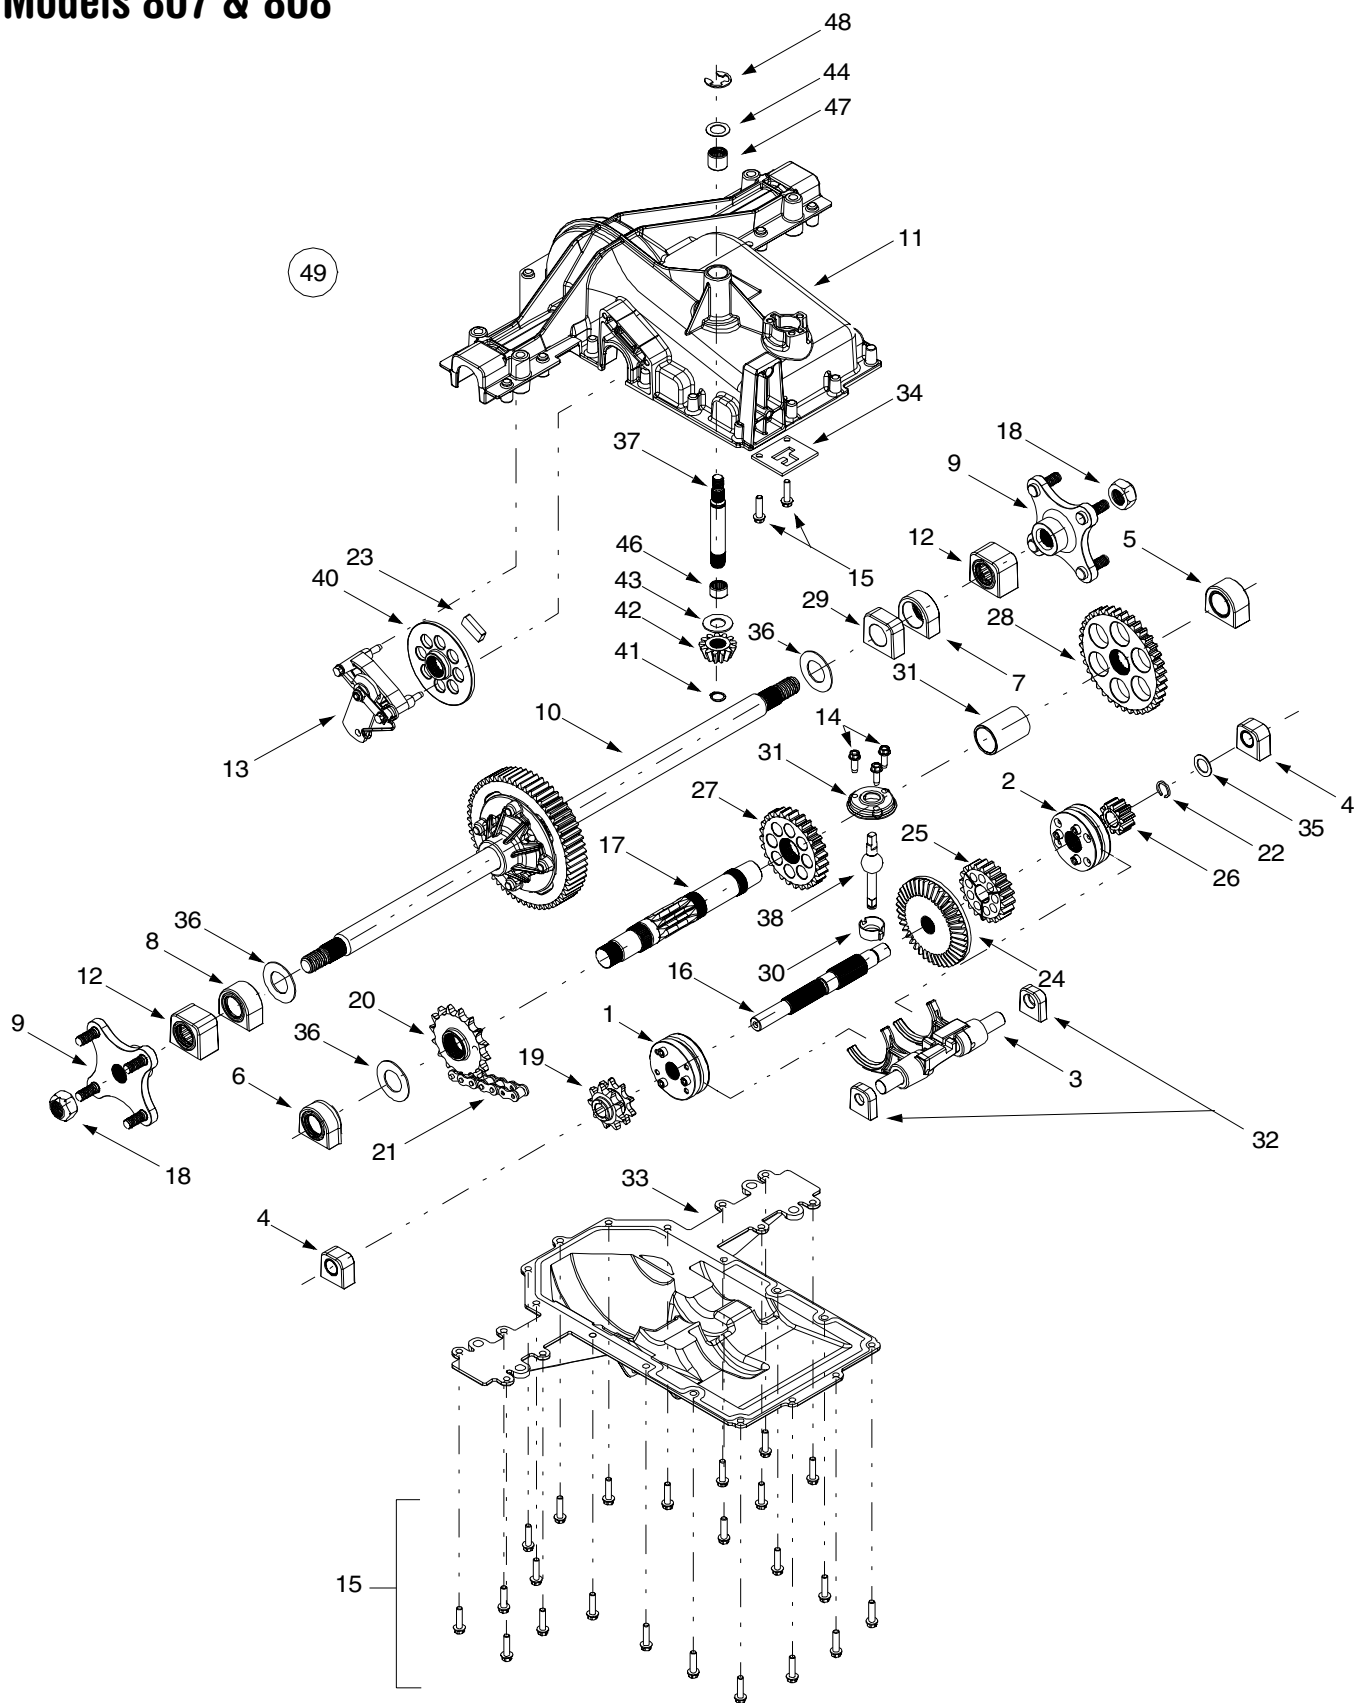


Models 807 & 808

REF. NO.	PART NO.	DESCRIPTION
1	618-0225	Reverse Collar Assembly
2	618-0226	Hi-Lo Collar Assembly
3	618-0227A	Shift Fork Assembly
4	618-0284	Detent Block Assembly
5	618-0285	Output Bearing Block Assembly
6	618-0286	Output Seal Bearing Block Assembly
7	618-0287	Inboard Sealed Axle Block Assembly
8	618-0302	Inboard Sealed Axle Block Assembly
9	618-0365	Wheel Hub Assembly
10	618-0368	Differential Axle Assembly
11	719-0379A	Upper Housing
12	641-0002A	Axle Bearing Block Assembly
13	661-0012	Brake Assembly
14	710-0642	Self-tapping Screw, 1/4-20 x .75
15	710-0788	Self-tapping Screw, 1/4-20 x 1.0
16	711-1051A	Drive Shaft
17	711-1216	Output Shaft
18	712-1329	Nut, 3/4-16
19	713-0446	9-tooth Sprocket
20	713-0447	16-tooth Sprocket
21	713-0448	22-link Chain, .625
22	716-0131	External Snap Ring
23	717-0678	Brake Pad
24	717-1438	41-tooth Bevel Gear
25	717-1439	20-tooth Spur Gear
26	717-1440	10-tooth Spur Gear
27	717-1441	27-tooth Spur Gear
28	717-1442	37-tooth Spur Gear
29	718-0500	Inner Axle Bearing Block
30	718-0504	Shifter Insert
31	718-0505	Shifter Cover
32	718-0537	Shifter Bearing Block
33	719-0385	Lower Housing
34	718-0540	Lockout Plate
35	736-0337	Flat Washer, 5/8 x 1.0
36	736-3046A	Flat Washer, 1.01 x 1.86 x .060
37	711-1235	Input Shaft
38	747-1140	Shift Lever
39	750-1033A	Spacer, 1.13 x 1.38 x 1.968
40	761-0215	Disc Brake
41	716-0114	Retaining Ring, .56
42	717-1463	13-tooth Bevel Gear
43	736-0335	Flat Washer
44	736-0337	Flat Washer, 5/8 x 1.0 x .040
46	741-0335	Needle Bearing
47	741-0696	Needle Bearing
48	716-0231	E-ring, .75
49	618-0376	Transmission Assembly Complete

NOTE: Transmission has a grease capacity of 32 oz. Order part number 737-0148.

NOTE: Upon reassembling transmission input shaft for any reason, refill its cavity with approximately 2/3 oz. of grease. Order part number 737-0289.

Models 807 & 808 (w/ Electric PTO)

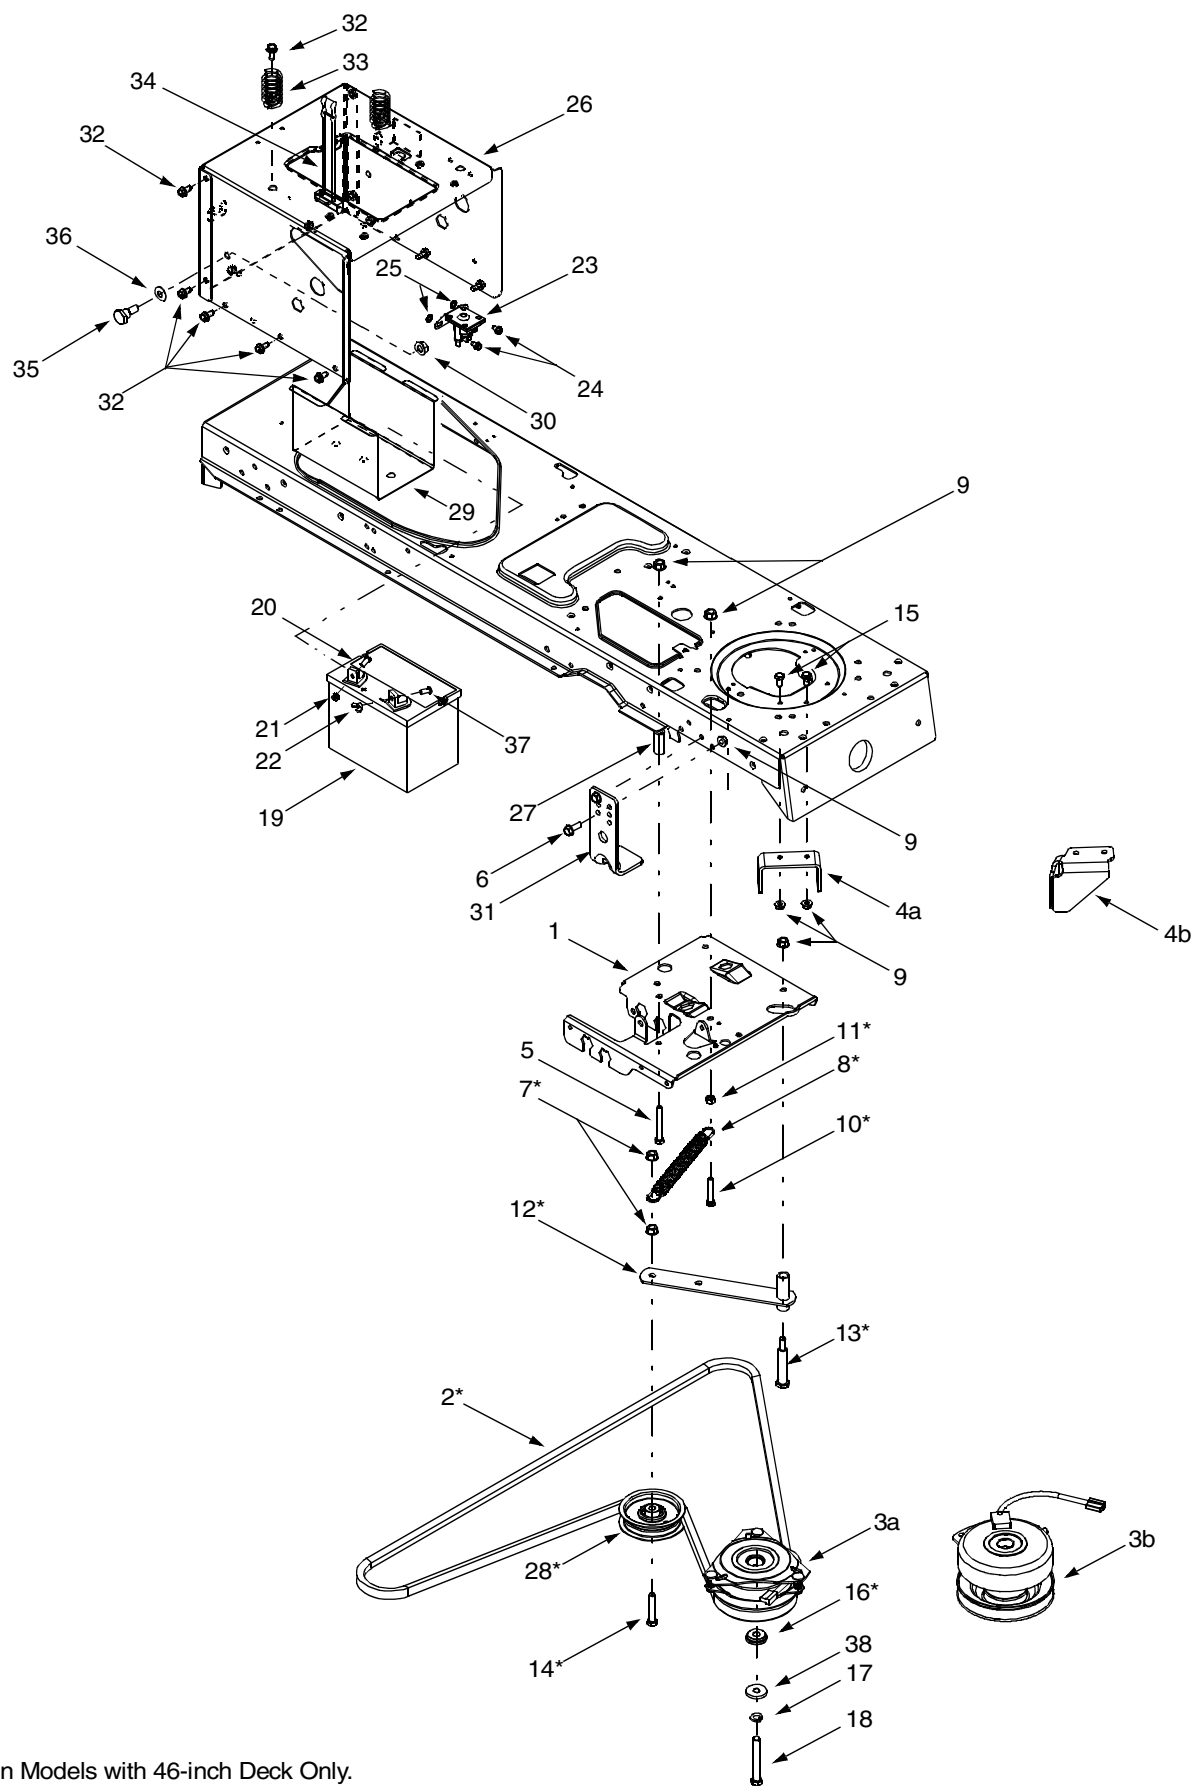

* Found on Models with 46-inch Deck Only.


Models 807 & 808

REF. NO.	PART NO.	DESCRIPTION
1	783-0653E	Steering Support Bracket
2	754-0476	PTO Belt (Models w/ 46-inch Deck)
	N/A	PTO Belt (Models w/ 54-inch Deck)
3a	717-1709	Electric PTO Clutch (Models w/ 46-inch Deck)
3b	717-1774	Electric PTO Clutch (Models w/ 54-inch Deck)
4a	783-1003	PTO Clutch Anti-rotation Bracket (Models w/ 46-inch Deck)
4b	783-1487	PTO Clutch Anti-rotation Bracket (Models w/ 54-inch Deck)
5	710-0859	Hex Cap Screw, 3/8-16 x 2.5
6	710-1238	Hex Head Washer Screw, 5/16-18 x .875
7	712-0431	Flange Lock Nut, 3/8-16
8	732-0978	Extension Spring, .62 x 5.62
9	712-3004A	Flange Lock Nut, 5/16-18
10	710-3180	Hex Cap Screw, 5/16-18 x 1.75
11	712-3010	Hex Nut, 5/16-18
12	683-0294	Idler Bracket Assembly
13	738-3056	Shoulder Screw, 1/2 x 2.5
14	710-3144	Hex Cap Screw, 3/8-16 x 2.0
15	710-3025	Hex Cap Screw, 5/16-18 x .625
16	738-0785	Shoulder Spacer, 1.38 x .445 x .36
17	736-0171	Lock Washer, 7/16
18	710-3157	Hex Cap Screw, 7/16-20 x 3.25 (Grade 5)
19	725-1706	12-volt Battery, 270 CCA
20	710-0751	Hex Cap Screw, 1/4-20 x .62
21	712-0271	Hex Sems Nut, 1/4-20
22	712-3087	Wing Nut, 1/4-20
23	725-1426	Solenoid, 12-Volt, 100 Amp
24	710-0599	Self Tapping Screw, 1/4-20 x .5
25	736-0222	Lock Washer, 1/4
26	783-1033A	Hitch Plate
27	748-0415B	Spacer, 3/8 x 1.54
28	756-0627B	Idler Pulley, 3.5
29	783-0349	Battery Tray
30	712-0459	Flange Lock Nut, 7/16-20
31	783-0891B	Deck Stop
32	710-0604A	Self Tapping Screw, 5/16-18 x .625
33	732-3080	Compression Spring, 1.28 x 3.5
34	723-0444	Battery Strap
35	738-1020	Shoulder Screw, .625 x .5, 7/16-20
36	736-0407	Bell Washer, .45 x 1.0 x .062
37	738-1132	Shoulder Screw, 1/4-20, .25 x .15
38	736-0322	Flat Washer, .45 x 1.25 x .164

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. *NOT* all parts listed above and pictured on the previous page are standard equipment.

Models 807 & 808 (w/ Manual PTO)

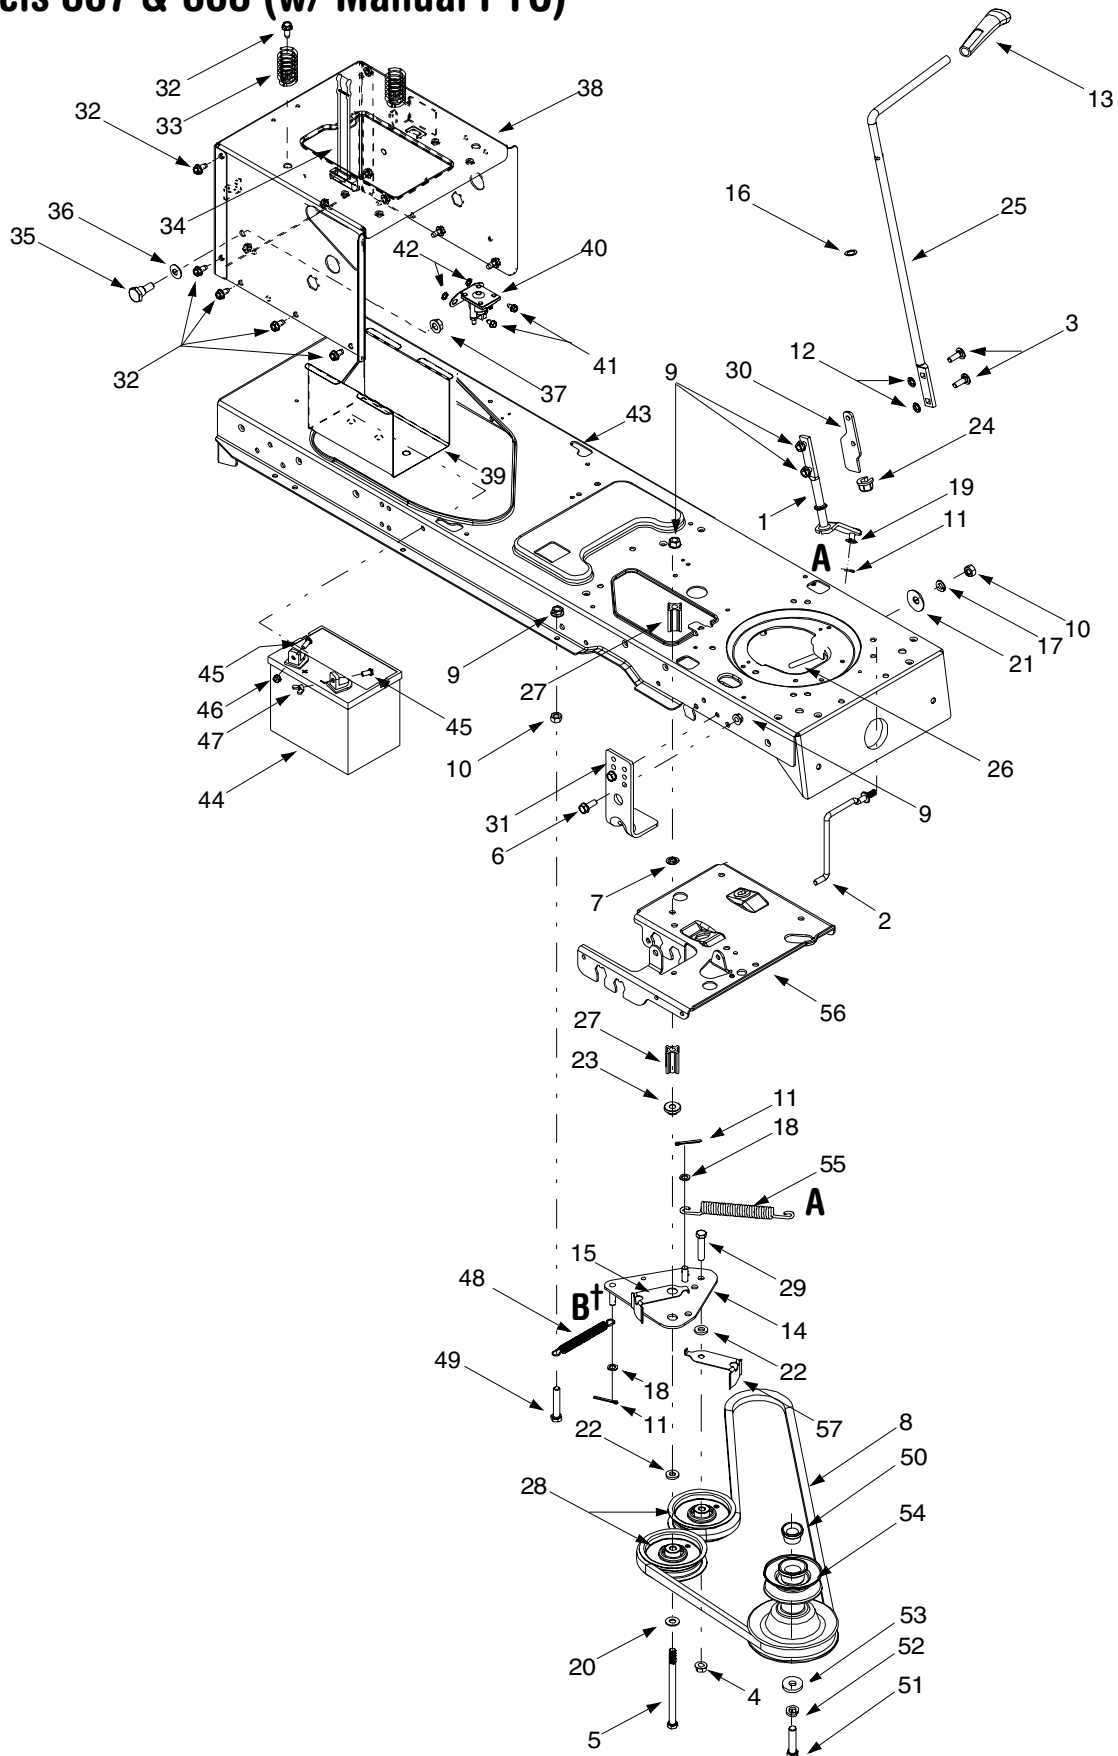

† Refer to **B** on page 44 and page 46.



Models 807 & 808

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	647-0064	PTO Engagement Lever Assembly	29	710-0347	Hex Cap Screw, 3/8-16 x 1.75
2	747-1243	Belt Keeper Rod	30	783-0744A	Engagement Stop
3	710-0276	Carriage Screw, 5/16-18 x 1.00	31	783-0891B	Deck Stop
4	712-0431	Flange Lock Nut, 3/8-16	32	710-0604A	Self Tapping Screw, 5/16-18 x .625
5	710-0831	Hex Cap Screw, 3/8-16 x 5.5	33	732-3080	Compression Spring, 1.28 x 3.5
6	710-1238	Hex Head Washer Screw, 5/16-18 x .875	34	723-0444	Battery Strap
7	712-0229	Push Nut, 3/8	35	738-1020	Shoulder Screw, .625 x .5, 7/16-20
8	754-0487	PTO Belt (Models w/ 46-inch deck)	36	736-0407	Bell Washer, .45 x 1.0 x .062
	N/A	PTO Belt (Models w/ 54-inch deck)	37	712-0459	Flange Lock Nut, 7/16-20
9	712-3004A	Flange Lock Nut, 5/16-18	38	783-1031A	Hitch Plate
10	712-3010	Hex Nut, 5/16-18	39	783-0349	Battery Tray
11	714-0470	Cotter Pin, 1/8 x 1.25	40	725-1426	Solenoid, 12-Volt, 100 Amp
12	726-0201	Speed Nut, .3125	41	710-0599	Self Tapping Screw, 1/4-20 x .5
13	731-2111A	PTO Knob	42	736-0222	Lock Washer, 1/4
14	683-0438	PTO Engagement Plate Assembly	43	683-0304	Lower Frame Assembly
15	732-0991A	Belt Guard	44	725-1706	12-volt Battery, 270 CCA
16	736-0108	Flat Washer, .510 x .750 x .033	45	710-0751	Hex Cap Screw, 1/4-20 x .62
17	736-0119	Lock Washer, 5/16	46	712-0271	Hex Sems Nut, 1/4-20
18	736-0140	Flat Washer, .385 x .62 x .063	47	712-3044	Wing Nut, 1/4-20
19	736-0275	Flat Washer, 5/16	48	732-1165	Extension Spring, .50 x 5.0
20	736-0300	Flat Washer, .406 x .875 x .059	49	710-3180	Hex Cap Screw, 5/16-18 x 1.75
21	736-0331	Bell Washer, .39 x 1.13 x .062	50	750-0596	Spacer Cup
22	736-3010	Flat Washer, .407 x .812 x .135	51	710-3029	Hex Head Cap Screw, 7/16-20 x 1.25
23	738-0372A	Shoulder Spacer, .380	52	736-0171	Lock Washer, 7/16
24	741-0708	Hex Split Flange Bearing, .5	53	736-0322	Flat Washer, .450 x 1.25
25	747-1112D	PTO Engagement Handle	54	756-0982B	Engine Pulley, 3.56 OD x 5.56
26	747-1286	Belt Keeper Rod	55	732-0944	Extension Spring, .75 x 6.75
27	748-0415A	Spacer, 3/8 x 1.54	56	783-0653E	Steering Support Bracket
28	756-0627B	Idler Pulley, 3.5	57	732-1013	Belt Guard

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 807 & 808

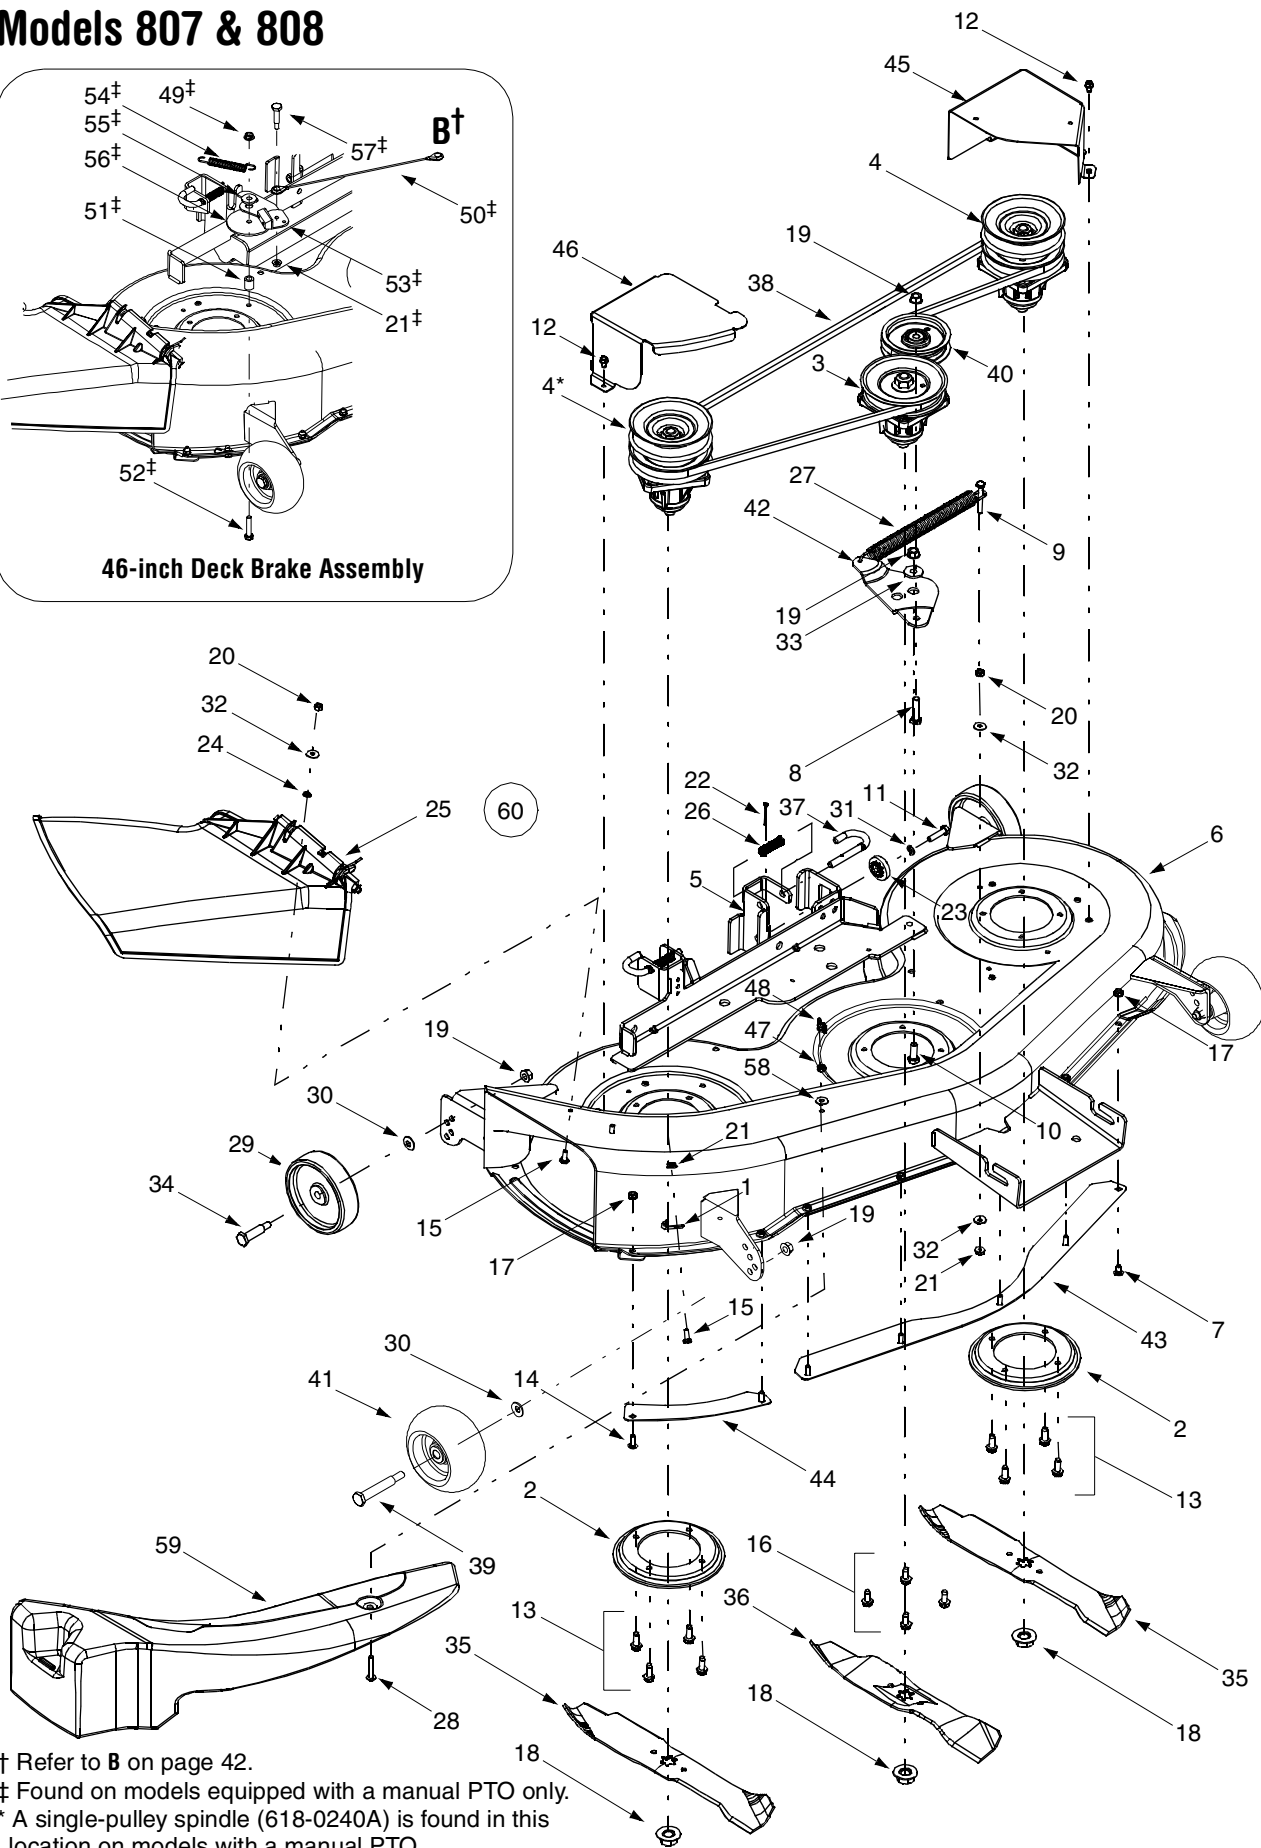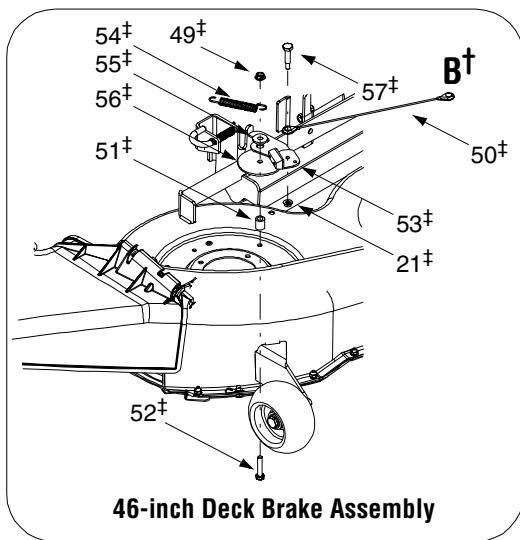

† Refer to B on page 42.

‡ Found on models equipped with a manual PTO only.

* A single-pulley spindle (618-0240A) is found in this location on models with a manual PTO.


Models 807 & 808

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	16606	Retainer Hook	32	736-0270	Bell Washer, .265 x .75 x .062
2	17982	Spindle Reinforcement Plate	33	738-0347	Shoulder Spacer, .625 x 1.16
3	618-0240A	Spindle Assembly, 5.0 Dia.	34	738-0373	Shoulder Screw
	756-1187	Pulley Only	35	742-0611	Three-in-one Blade, Star Center, 16.28"
4	618-0241	Double Pulley Spindle Assembly	36	742-0612	Three-in-one Blade, Star Center, 14.88"
	756-0603	Double Pulley Only	37	747-1116	Deck Release Pin
5	683-0254	Deck Adjustment Bracket Assembly	38	754-0349	Deck Belt, Poly
6	683-0199C	46-inch Deck Shell	39	738-3056	Shoulder Screw, 1/2-2.5
7	710-0167	Carriage Screw, 1/4-20 x .50	40	756-0627B	Idler Pulley, 3.5
8	710-0344	Hex Cap Screw, 3/8-16 x 1.5	41	734-3058B	Deck Wheel, 5.0
9	710-0501	Hex Cap Screw, 1/4-20 x 2.0	42	783-0139A	Idler Bracket
10	710-0514	Hex Cap Screw, 3/8-16 x 1.0	43	783-0141	Center Deck Skirt
11	710-0528	Hex Cap Screw, 5/8-18 x 1.25	44	783-0142	RH Deck Skirt
12	710-0599	Self-tapping Screw, 1/4-20 x .5	45	783-0747	LH Belt Cover
13	710-0650	Self-tapping Screw, 15/16-18 x .875	46	783-0805A	RH Belt Cover
14	710-0703	Hex Screw, 1/4-20 x .75	47	712-3006	Hex Nut, 1/4-20
15	710-0751	Hex Cap Screw, 1/4-20 x .62	48	712-3087	Wing Nut, 1/4-20
16	710-1260A	Self-tapping Screw, 5/16-18 x .75	49	712-3004A	Hex Nut, 5/16-18
17	712-0271	Hex Sems Nut, 1/4-20	50	746-1107	Bracket Cable, 12"
18	712-0417A	Hex Flange Nut, 5/8-18	51	750-0807	Spacer, .385 x .625 x .70
19	712-0431	Flange Lock Nut, 3/8-16	52	710-0805	Hex Cap Screw, 5/16-18 x 1.5
20	712-3006	Hex Nut, 1/4-20	53	17116	Deck Brake Assembly
21	712-3027	Hex Flange Lock Nut, 1/4-20	54	732-0429A	Extension Spring, .5 x 3.97
22	714-0470	Cotter Pin, 1/8 x 1.25	55	748-0324	Shoulder Spacer
23	717-1553A	Deck Adjustment Gear	56	736-0416	Flat Washer, .320 x 3.0 x .125
24	726-0233	Push Nut, .25 x .5	57	738-0572	Shoulder Screw, .374 x 1.16
25	731-1032B	Side Discharge Chute Assembly	58	736-0173	Flat Washer, .28 x .74 x .063
26	732-0306	Compression Spring, .406 x .531 x 1.75	59	731-1636	Mulch Plug
27	732-0594A	Extension Spring, .91 x 7.3	60	753-0876	Deck Assembly Complete, Manual PTO (w/o Mulch Kit)
28	710-0578	Screw, 1/4-20 x 1.5		753-0875	Deck Assembly Complete, Electric PTO (w/o Mulch Kit)
29	734-0973	Deck Wheel, 5 x 1.38			
30	736-0105	Bell Washer, .401 x .87 x .063			
31	736-0119	Lock Washer, 5/16			

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Models 807 & 808

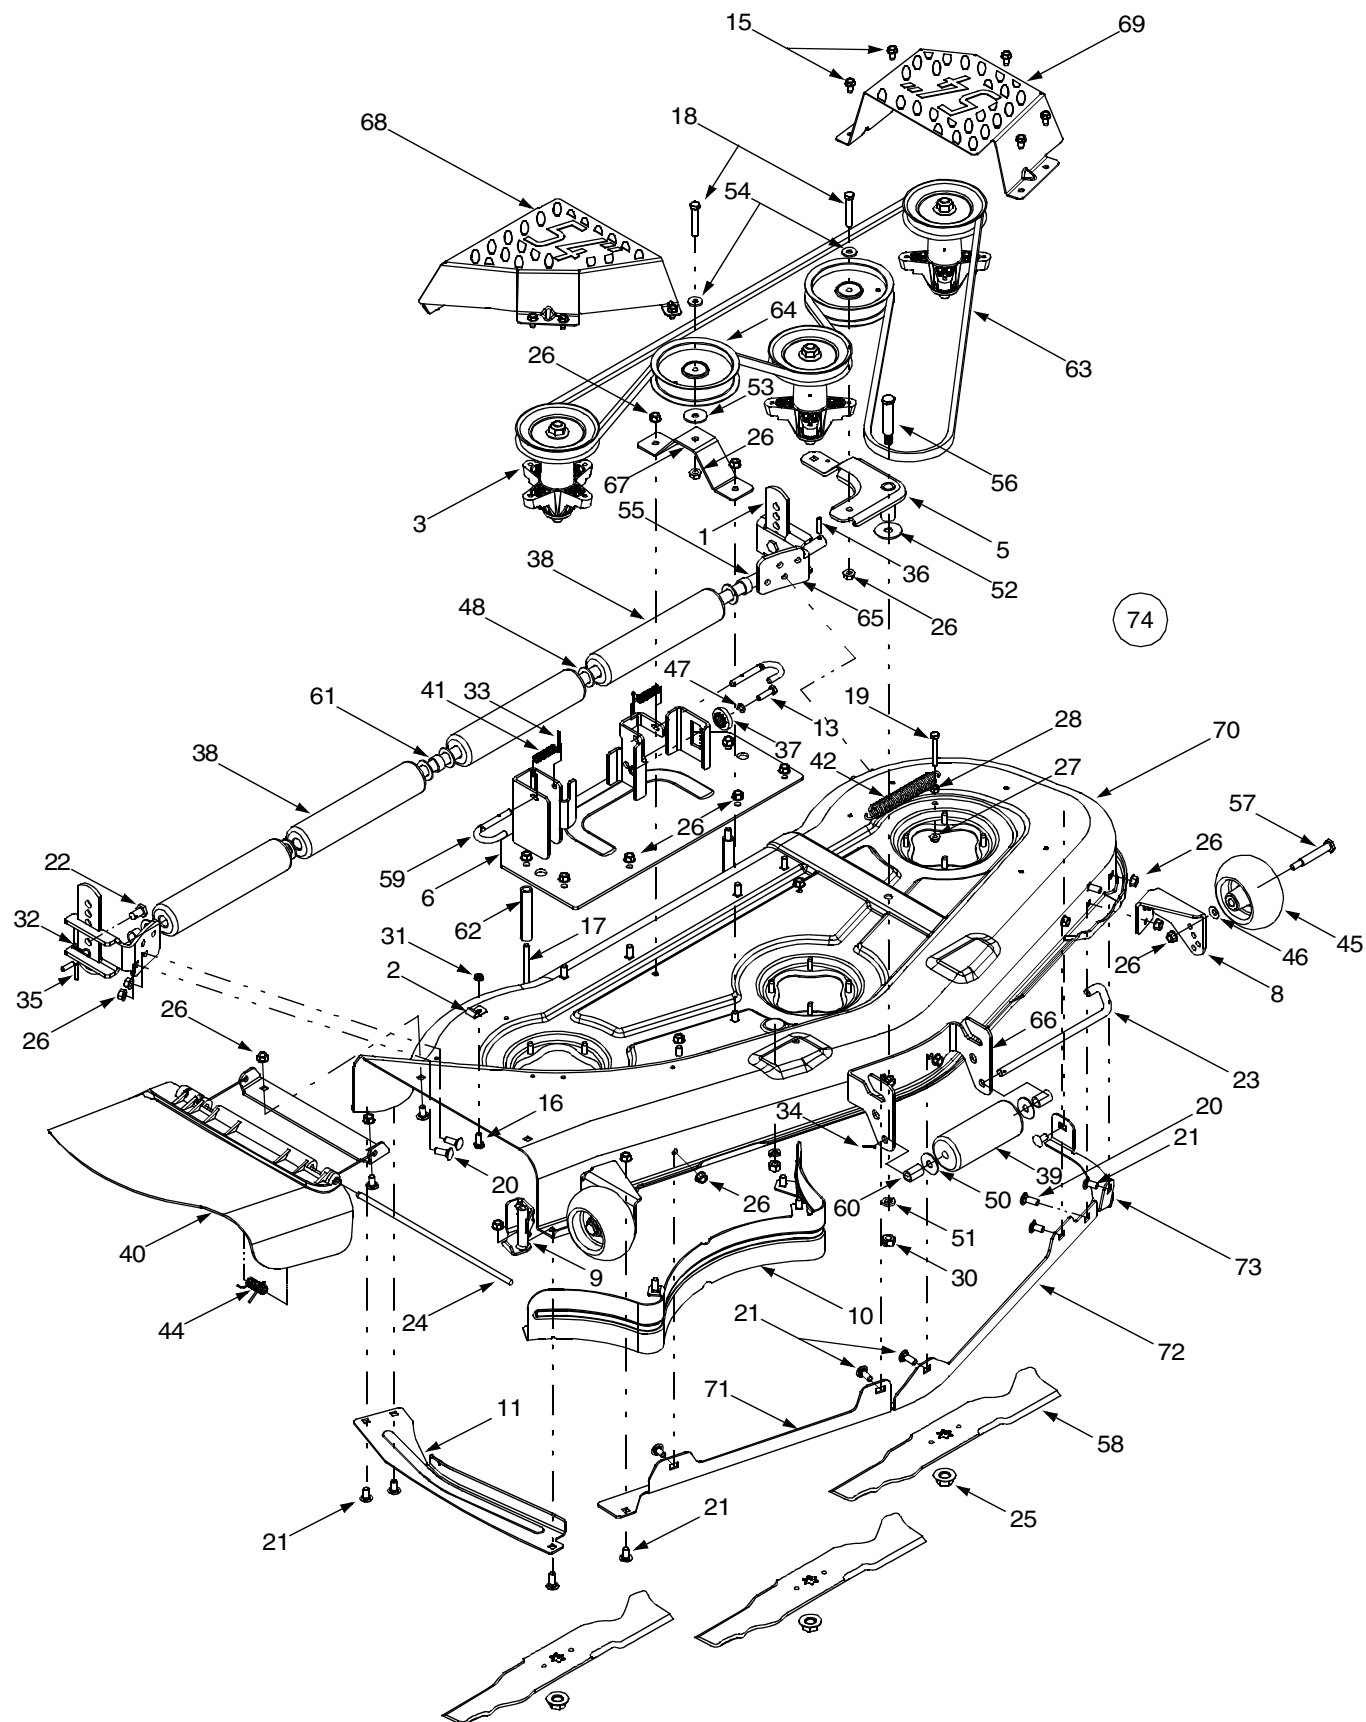

Models 807 & 808

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	12650	Bracket, Adjustment, Height	38	731-0335	Roller, Deck
2	16606	Bracket, Hook, Retainer	39	731-3005	Front Roller
3	618-0671	Spindle Assembly, Pulley, 5.39 Dia x .5625	40	731-3131A	Deflector, Chute
4	683-0254	Bracket Assembly, Deck, Hanger LH	41	732-0306	Spring, Compression, .406 x .531 x 1.75
5	683-0459	Idlr Assembly, 54"	42	732-0459	Spring, Extension, .94 Dia x 6.74
6	683-0608	Bracket Assembly, Lift, 54"	43	732-0934	Spring, Extension, 1.15 Dia x 5.99
7	683-0609	Bracket Assembly, LH-Front	44	732-3070	Torsion Spring .44 I.d. x 2.10
8	683-0610	Bracket Assembly, RH-Front	45	734-3058B	Deck Wheel, 5" Dia.
9	683-0617	Stop Assembly, Chute	46	736-0105	Washer, Bell, .375 x .870 x .063
10	703-2093	Baffle, RR, Inner	47	736-0119	Washer, Lock, 5/16, Regular Duty
11	703-2392	Bracket	48	736-0134	Flat Washer, .812 ID x 1.38 OD x .1
12	703-3511	Guard, Finger	49	736-0171	Washer, Lock, 7/16, Regular Duty
13	710-0528	Hex Screw, 5/16-18, 1.25, Gr5,	50	736-0208	Flat Washer, .51 ID x 1.5 OD x .07
14	710-0602	Screw, Self-tapping, 5/16-18, 1.000	51	736-0921	Washer, Lock, 1/2, Regular Duty
15	710-0604A	Screw, Self-tapping, 5/16-18, 0.625	52	736-3027	Flat Washer, .531 x 1.75 x .090
16	710-0751	Hex Screw, 1/4-20, .620, Gr5,	53	736-3039	Flat Washer .406 ID X 1.5 x 11ga
17	710-1644	Screw, Carriage, 3/8-16, Gr5, 5.00	54	736-3072	Washer, Flat .38 ID x .93 OD x .110
18	710-3011	Hex Screw, 3/8-16, 2.25, Gr5,	55	738-0295	Shoulder Screw, .750 x .47.12
19	710-3073	Hex Screw, 5/16-18, 2.25, Gr5,	56	738-1229	Shoulder Screw, 5/8 Dia x 2.50 .
20	710-3168	Bolt, Carriage, 3/8-16 x 1.0	57	738-3056	Shoulder Screw, 1/2 Dia x 2.50 .
21	710-3178	Short Neck Carriage Bolt 3/8-16 x .75	58	742-0677	Blade, 18.50"
22	711-0332	Pin, Clevis, .50 Dia x .78	59	747-1116	Deck Release Handle Rod, .375 Dia
23	711-1737	Pin, Roller, .5" Dia x 10.06 .	60	750-0151	Spacer .550 ID x .755 OD x 1.1
24	711-1762	Pin, Hinge, Dia .375 x 14.06	61	750-0212	Spacer, .82 ID x 1.00 OD x .53
25	712-0417A	Nut, Hex Flange, 5/8-18	62	750-3213	Spacer, .405 x .75 x 3.875
26	712-0431	Nut, Flange Lock, 3/8-16	63	754-0642	Belt, V-Type, B Section
27	712-3004A	Nut, Flange Lock, 5/16-18, Gr5	64	756-3105	Pulley, Idler, 5.0 Dia.
28	712-3010	Nut, Hex, 5/16-18, Gr5	65	783-1453	Bracket, Mounting, 54" Roller
29	712-3019	Nut, Hex, 7/16-14, Gr2	66	783-1454	Bracket, Roller, Front
30	712-3022	Nut, Hex Lock, 1/2-13	67	783-1455	Bracket, Idler
31	712-3027	Nut, 1/4-20, Hexflg, Lock	68	783-1470	Cover, Spindle RH
32	714-0145	Pin, Click, .092 x 1.64	69	783-1471	Cover, Spindle LH
33	714-0470	Pin, Cotter, 1/8 x 1.25	70	783-1479	Deck Shell Assembly, 54"
34	714-3004	Pin, Cotter, 3/32 x 1.25	71	783-1482	RH Skirt
35	715-0108	Pin, Sprg, 1/4 Dia x 1.00	72	783-1483	LH Skirt
36	715-0246	Pin, Spring, 3/16 x 1.25	73	783-1484	LH Extension Skirt
37	717-1553A	Adjustment, Deck, Gear	74	753-04000	54-inch Deck Assembly Complete

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.