



Models D604G and U604H

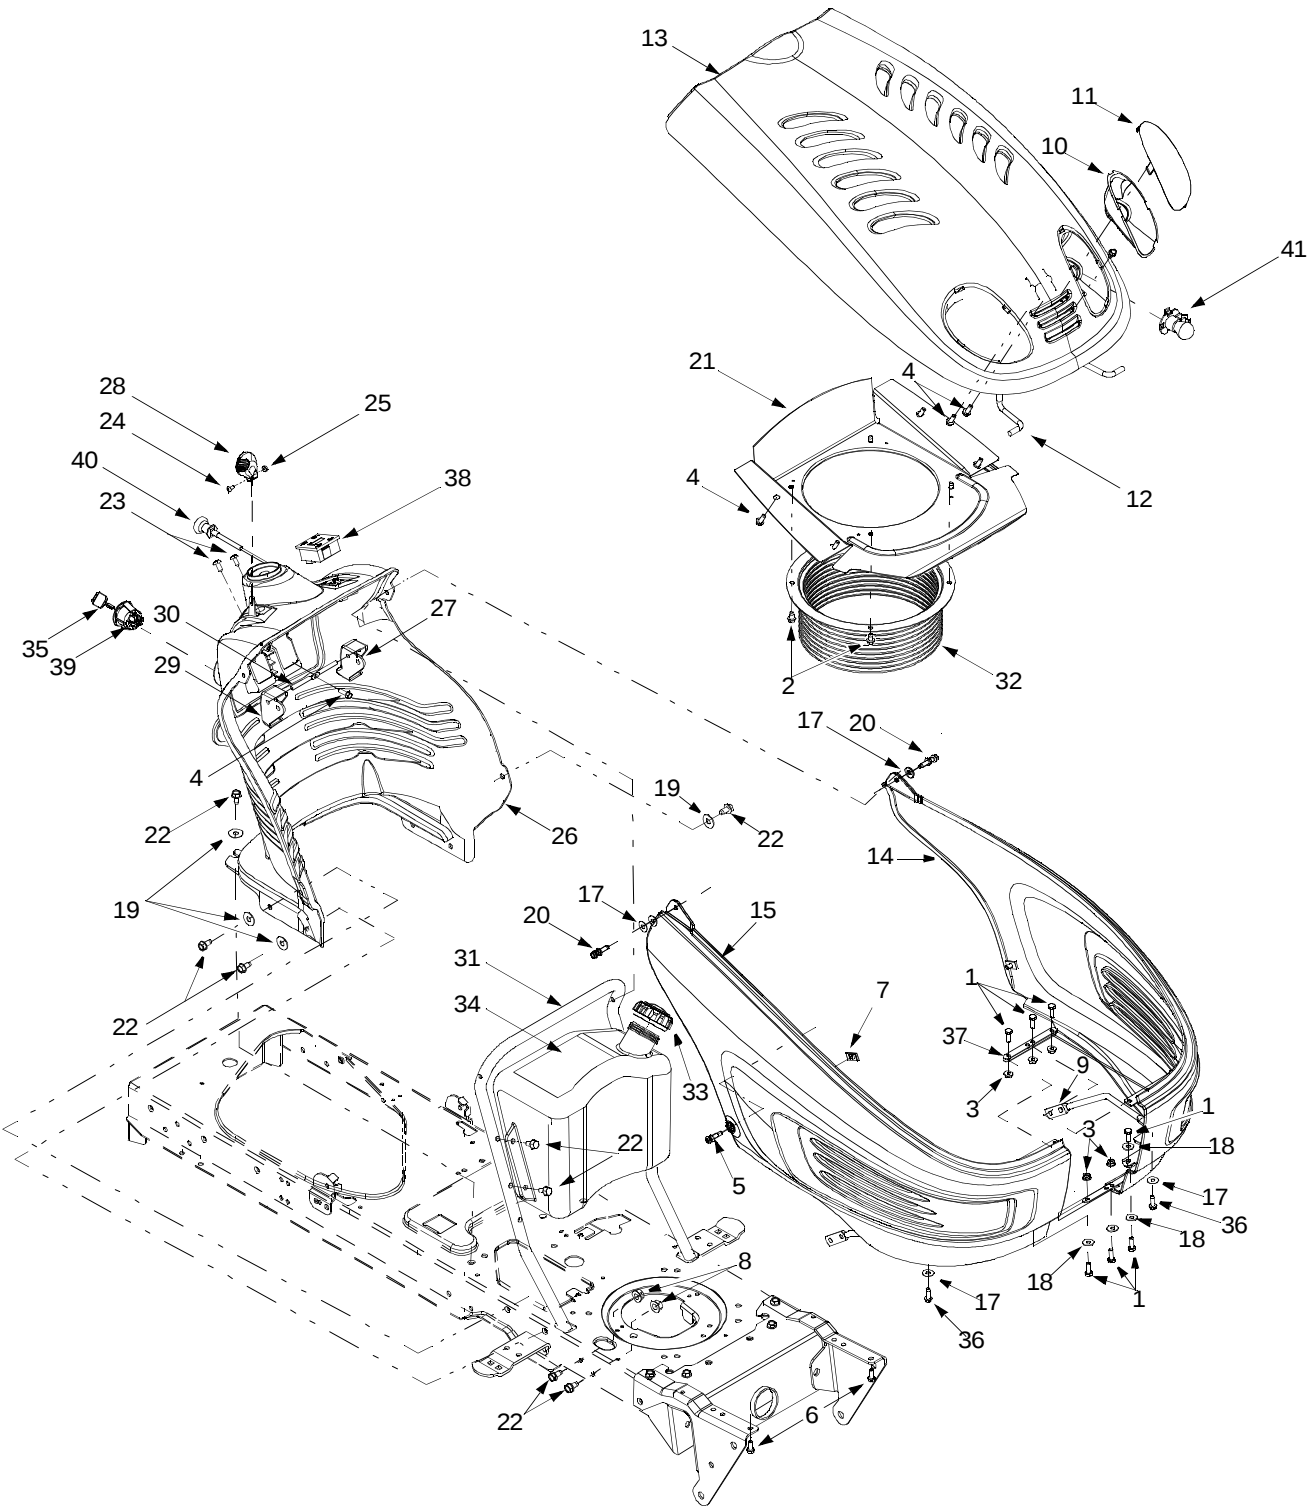

Models D604G and U604H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	710-3015	Hex Cap Screw, 1/4-20 x .75	23.	710-1017	Torx TTScrew, 1/4-14 x .625
2.	710-0599	Self-tapping Screw, 1/4-20 x .5	24.	710-3217	Torx Screw, #8-32 x .375
3.	712-3027	Hex Flange Lock Nut, 1/4-20	25.	712-0142	Hex Nut, 8-32
4.	710-0895	Self-tapping Screw, 1/4-15 x .75	26.	731-0071C	Dash Panel: 4-style
5.	710-0924	Pan Phillips Screw, 1/4-20 x .75	27.	731-0072	Parking Brake Button
6.	710-0528	Hex Cap Screw, 5/16-18 x 1.25	28.	731-1857	Throttle Control Lever
7.	712-0292	U-type Speed Nut, 1/4-20	29.	731-2106	Cruise Control Button
8.	712-3004A	Flange Lock Nut, 5/16-18	30.	747-1155	Brake/Cruise Pivot Rod
9.	747-1303	Rod LH: 4 Style	31.	749-1087A	Dash Support Tube
	747-1304	Rod RH: 4 Style	32.	731-2232	Intake Bellow
10.	731-1995	RH Headlight Reflector	33.	751-0603	Fuel Cap
	731-1996	LH Headlight Reflector	34.	751-0659A	Fuel Tank: 2-gallon
11.	731-1978	RH Headlight Lens		751-0658C	Fuel Tank: 3-gallon (Model U604H)
	731-1979	LH Headlight Lens	35.	725-1745	Ignition Key w/ plastic cover
12.	747-1132A	Hood Support Rod		725-1744	Ignition Key w/o plastic cover
13.	731-1980A	Hood	36.	710-0642	TT Screw 1/4-20 x 0.5
14.	731-1981B	LH Side Panel	37.	783-1000A	Grille Support Bracket
15.	731-1982B	RH Side Panel	38.	725-1976	Systems Indicator Monitor
17.	736-0342	Flat Washer, .283 x .75 x .030	39.	725-1741	Ignition Switch
18.	736-0173	Flat Washer, .28 x .74 x .063	40.	746-1088	Choke Knob/Cable (Model U604H)
19.	736-3078	Flat Washer, .349 x 1.0 x .063	41.	625-0051	Headlight Assembly
20.	710-0809	Self-tapping Screw, 1/4-20 x 1.25		629-0469A	Headlight Wire Harness (Not Shown)
21.	783-0808A	Hood Heat Shield		629-1071	Tractor Wire Harness (Not Shown)
22.	710-0604A	Self-tapping Screw, 5/16-18 x .625			


Models D604G and U604H

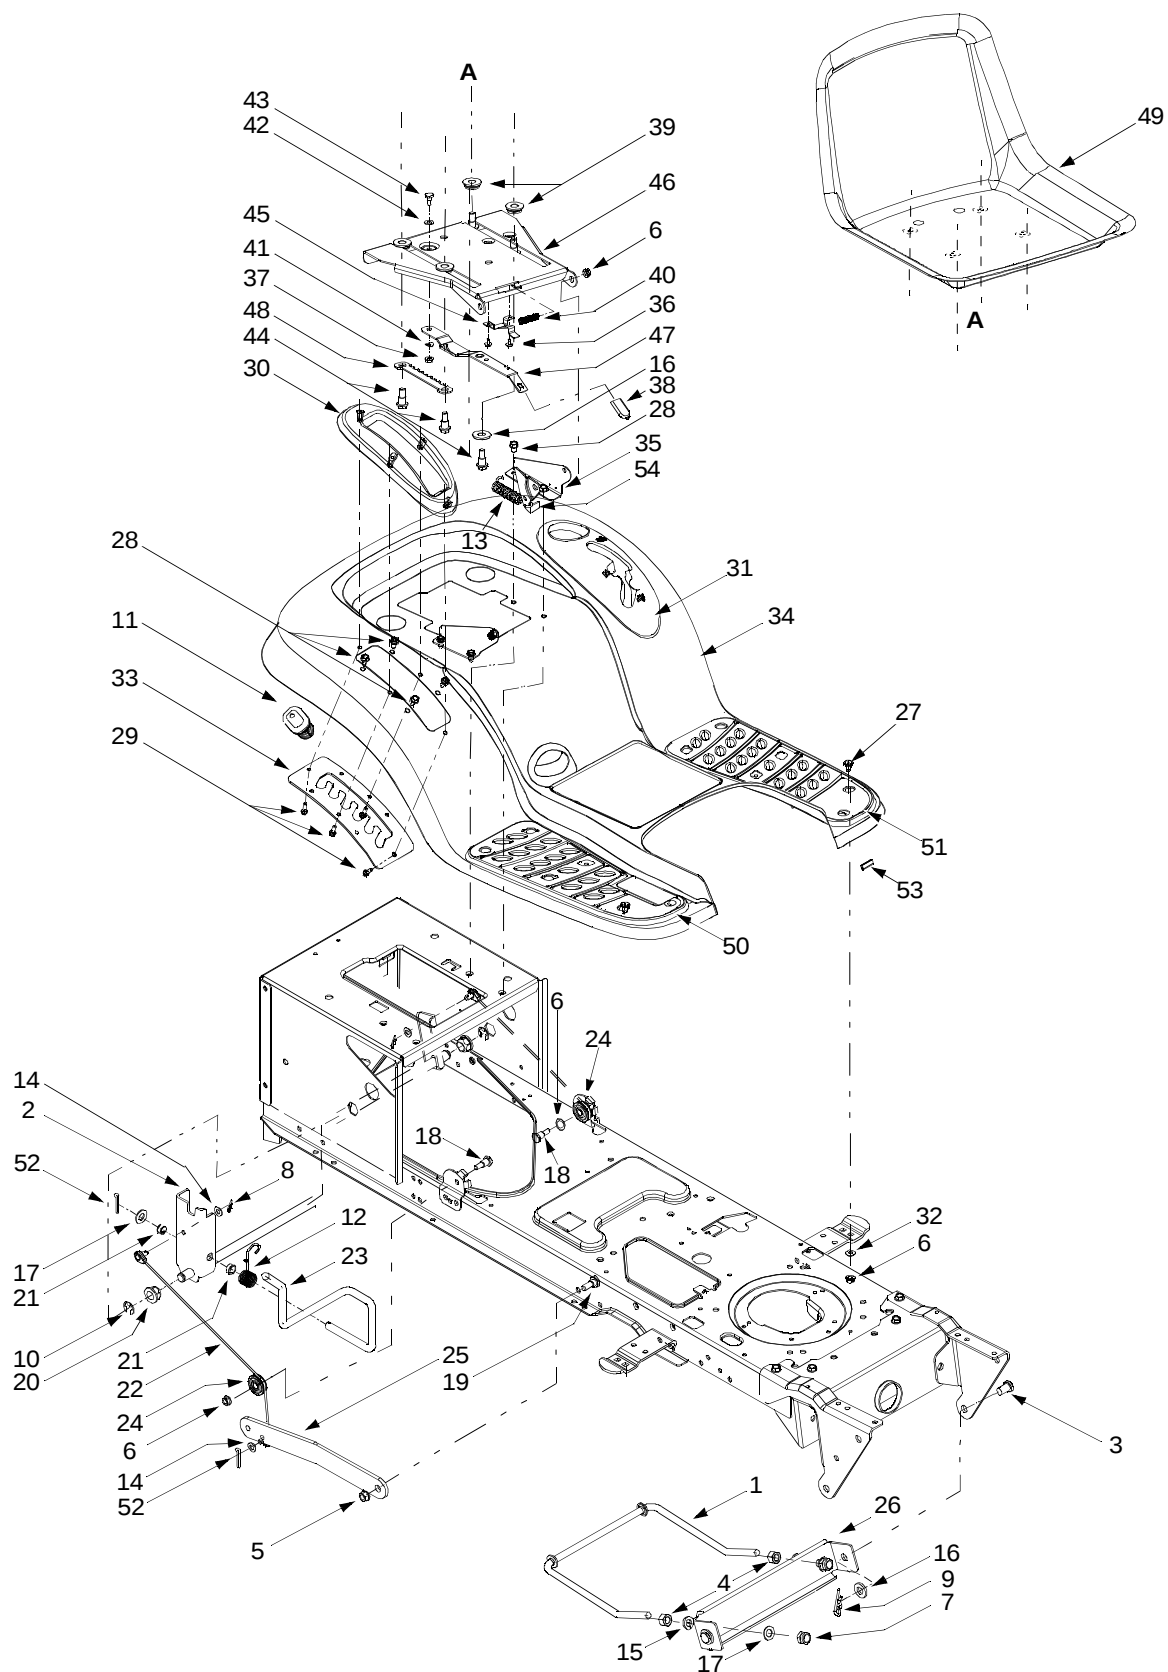

Models D604G & U604H

REF. NO.	PART NO.	DESCRIPTION
1	747-1130	Deck Stabilizer Rod
2	683-0197	Lift Shaft Assembly
3	711-0332	Clevis Pin, .5 x .78
4	712-0206	Hex Nut, 1/2-13
5	712-0431	Flange Lock Nut, 3/8-16
6	712-3004A	Flange Lock Nut, 5/16-18
7	712-3083	Hex Nut, 1/2-13
8	714-0104	Internal Cotter Pin
9	714-0145	Internal Cotter Pin
10	716-0106	E-ring
11	720-0311	Handle Grip
12	732-0874	Torsion Spring
13	732-1027	Extension Spring, .872 x 3.4
14	736-0275	Flat Washer, 5/16
15	736-0921	Lock Washer, 1/2
16	736-3019	Flat Washer, .31 x 1.062 x .134
17	736-3084	Flat Washer, .51 x 1.12 x .06
18	738-0138A	Hex Cap Screw, 5/16-18 x .62
19	738-0143	Shoulder Screw, 3/8-16
20	741-0225	Hex Flange Bearing
21	741-0715	Snap Flange Bearing
22	746-0968	Lift Cable, 16.16
23	747-1111A	Lift Handle
24	756-1154	Roller Pulley
25	783-0678A	Arm Lift
26	783-0720A	Deck Stabilizer Bracket
27	710-0260A	Carriage Bolt, 5/16 x .62
28	710-0604A	Self-tapping Screw, 5/16-18 x .625
29	710-0895	Self-tapping Screw, 1/4-15 x .75
30	731-1990	Lift Lever Cover
31	731-2104B	Shift Lever Cover w/ Cup Holder
32	736-3078	Flat Washer, .349 x 1.0 x .063
33	783-0677	Lift Adjustment Bracket
34	783-1279	Fender
35	783-1489	Seat Mounting Bracket
36	710-1268	Screw, #10-16 x .375
37	712-3027	Hex Flange Lock Nut, 1/4-20
38	720-0309A	Seat Adjuster Grip
39	731-1989	Spacer
40	732-0499	Compression Spring, .41 x 1.5
41	736-0175	Spring Washer, .265 x .562 x .025
42	736-0204	Flat Washer, .344 x .62 x .03
43	738-0137A	Shoulder Screw, .340 x .285, 1/4-20
44	738-1007	Shoulder Screw, .50 x .50, 3/8-16
45	783-0611	Seat Stop
46	783-0738	Seat Pivot Bracket
47	783-0739	Seat Adjustment Lever
48	783-0753	Seat Adjustment Selector
49	757-0365A	Medium Back Seat, Yellow
50	735-0656	RH Foot Pad
51	735-0657	LH Foot Pad
	726-3046	Foot Pad Clips (Not Shown)
52	714-0111	Cotter Pin
53	731-0511	Trim Strip
54	783-0209	Seat Lift Bracket


Models D604G and U604H

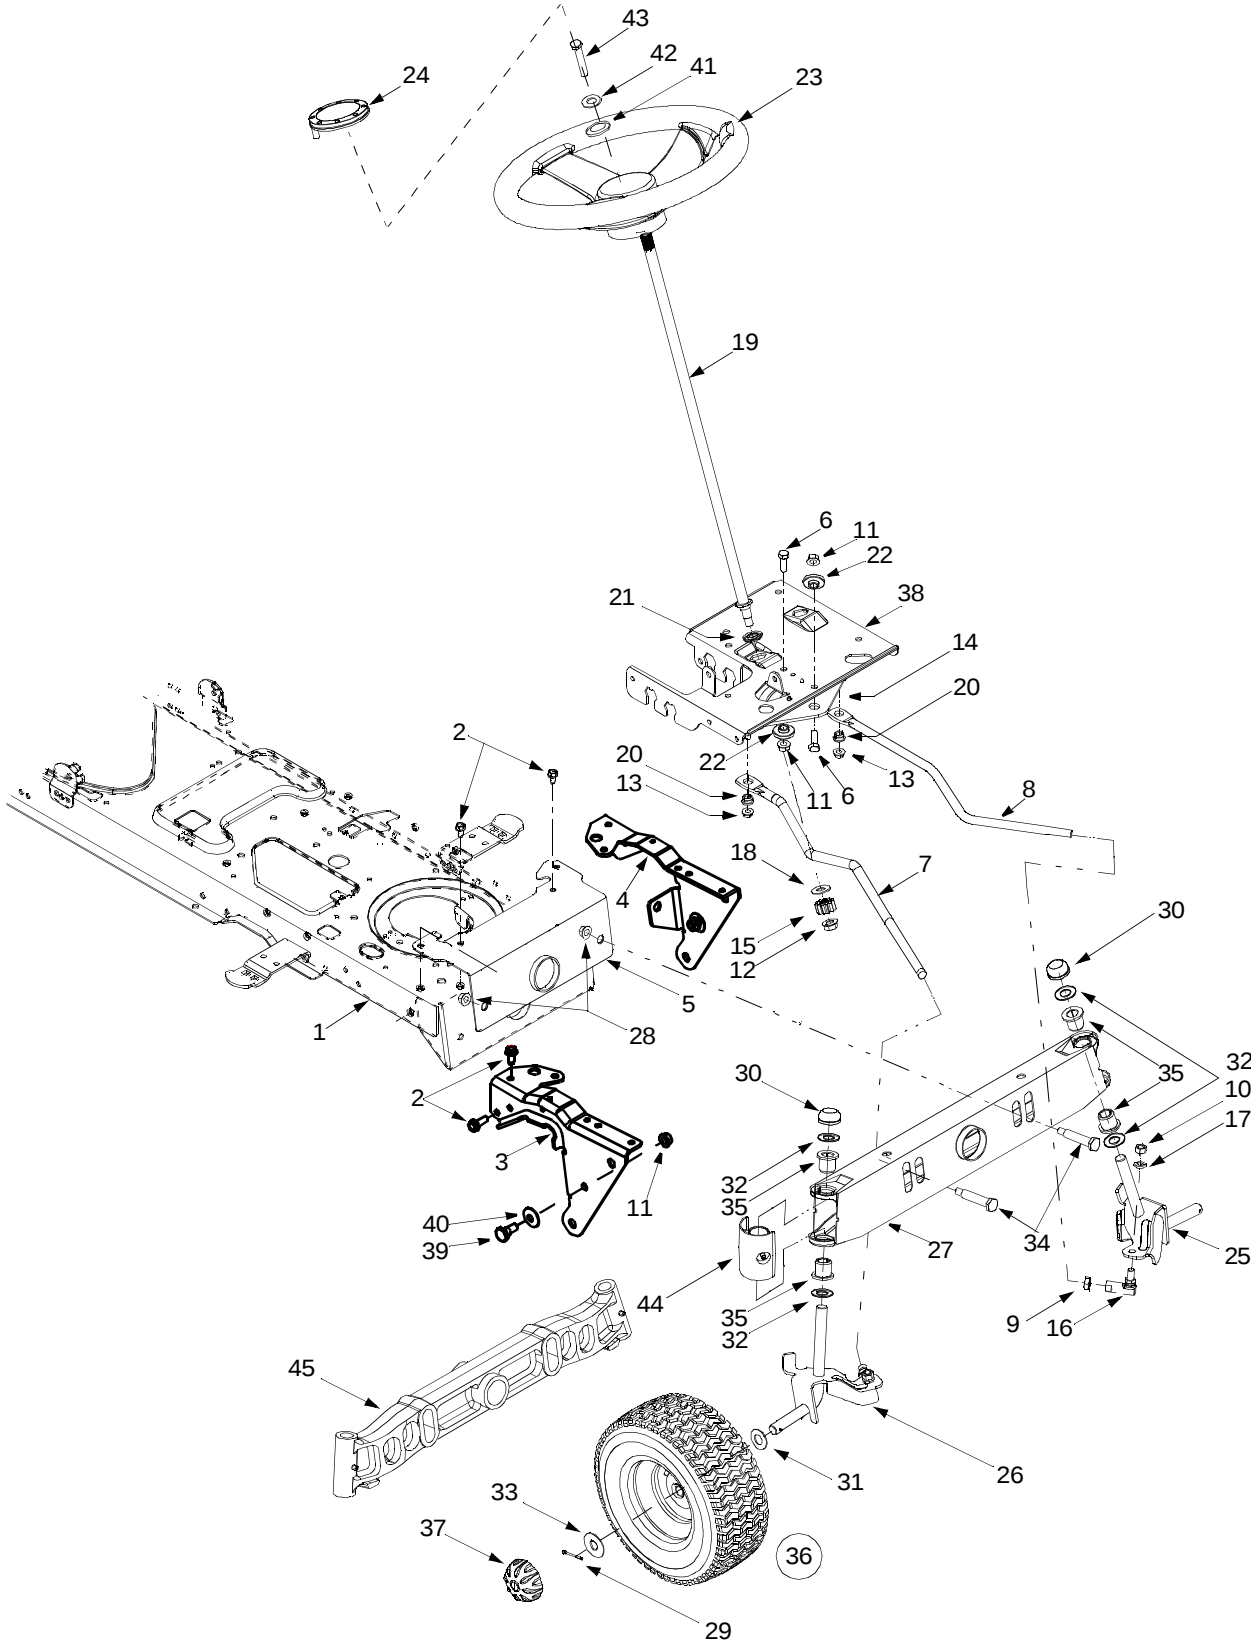

Models D604G & U604H

REF. NO.	PART NO.	DESCRIPTION
1	683-0304A	Lower Frame Assembly
2	710-1260A	LD Screw, 5/16-18 x 0.75
3	783-0726B	RH Pivot Support Bracket
4	783-0727A	LH Pivot Support Bracket
5	783-0728	Pivot Bar Bracket
6	710-0723	Hex Cap Screw, 3/8-16 x 1 (Grade 5)
7	711-1408	RH Drag Link
8	711-1655	LH Drag Link
9	712-0240	Jam Nut, 7/16-20 (Grade 2)
10	712-0241	Hex Nut, 3/8-24 (Grade 2)
11	712-0431	Flange Lock Nut, 3/8-16
12	712-0459	Flange Lock Nut, 7/16-20
13	712-3004A	Flange Lock Nut, 5/16-18
14	717-1550C	Steering Gear, 11/90 Ratio
15	717-1554	Steering Pinion Gear
16	723-0448A	Ball Joint, 7/16-20
17	736-0169	Lock Washer, 3/8
18	736-3084	Flat Washer, .51 x 1.12 x .06
19	738-1001A	Steering Shaft, .625 OD x 24.4
20	741-0475	Plastic Bushing, .38 ID
21	741-0656	Hex Flange Bearing, 5/8
22	738-0372B	Shoulder Spacer, .38 ID
23	731-2624	Steering Wheel
24	731-2625	Steering Wheel Cap, w/ Icon
25	638-0019A	LH Axle Assembly, .625 Diameter
26	638-0020A	RH Axle Assembly, .625 Diameter
27	683-0128A	Pivot Bar
28	712-0431	Flange Lock Nut, 3/8-16
29	714-0162	Cotter Pin
30	726-0214	Push Cap, .625
31	736-0162	Flat Washer, .64 x 1.0 x .12
32	736-0187	Flat Washer, .64 x 1.24 x .06
33	736-0285	Flat Washer, .635 x 1.589 x .06
34	738-1011	Shoulder Screw, .5 x 2.2, 3/8-16
35	741-0659	Flange Bearing, .632 ID x .937 OD
36	634-0105A	Wheel Assembly Complete, 15 x 6 x 6
	634-0172	Rim Only w/ Plastic Bearing
	734-0255	Air Valve (Not Shown)
	734-1731	Tire Only, Square Shoulder
37	734-2290A	Hub Cap
38	783-0653D	Steering Support Bracket
39	738-0143	Shoulder Screw, 3/8-16
40	736-0331	Bell Washer, .39 x 1.13 x .062
41	736-3004	Flat Washer
42	736-0242	Bell Washer, .34 x .872
43	710-0643	Hex Bolt, 5/16-18 X 1
44	731-1291A	Pivot Bar End Cap
45	719-0399B	Cast Iron Pivot Bar w/ Fittings, .625 (if so equipped)

Models D604G and U604H

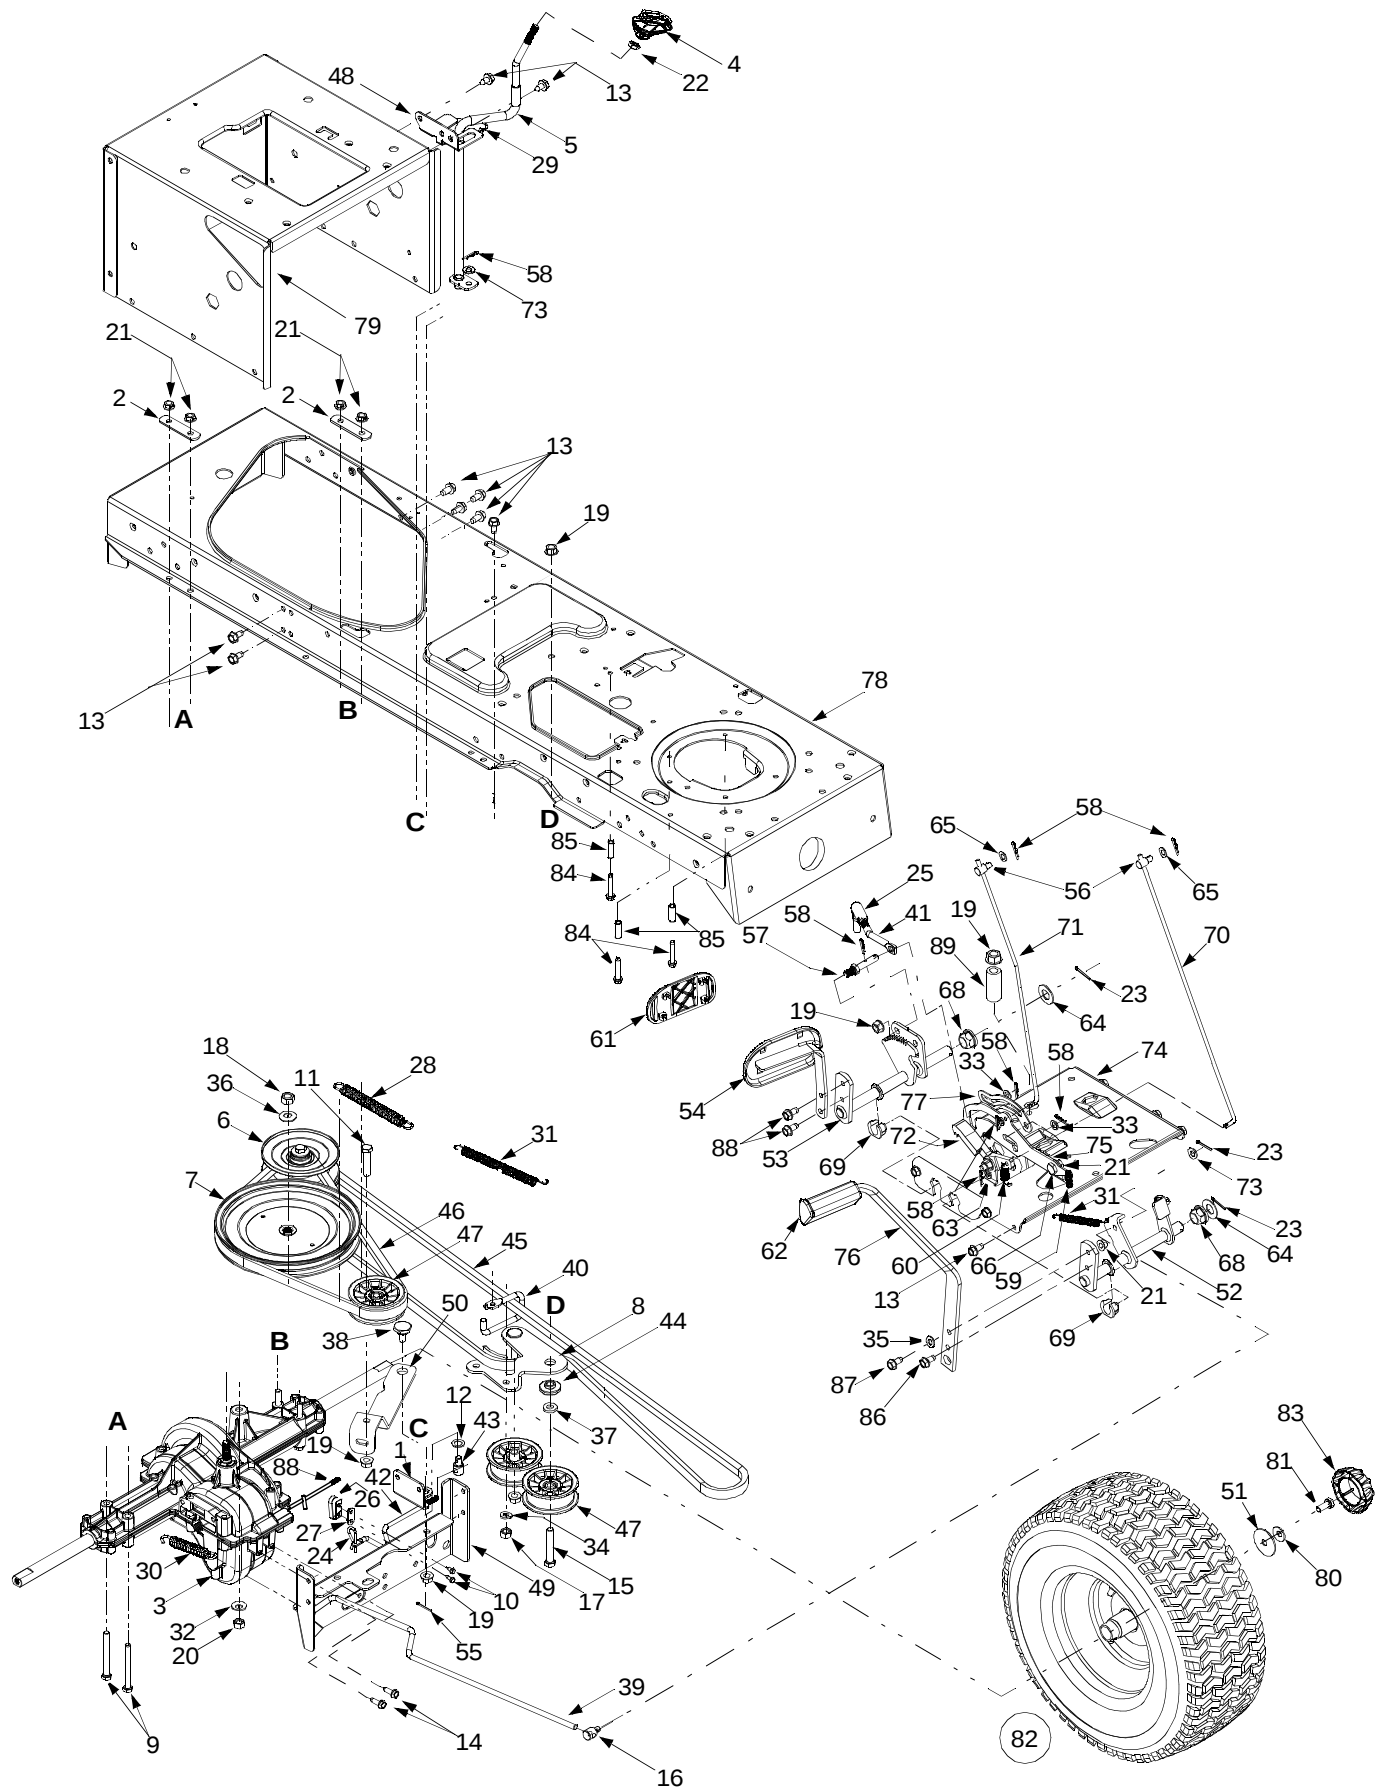

Models D604G & U604H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	783-1015	Shift Lever Support	47	756-0981A	Flat Idler, 2.75 OD
2	17840	Transaxle Mounting Bracket	48	783-1016B	Speed Control Rod Bracket
3	618-0551	Single-speed Transmission Assembly	49	783-0667B	Transmission Torque Bracket
4	631-0009A	Shifter Knob	50	783-0669	Idler Bracket
5	647-0045	Shift Lever	51	736-0430	Flat Washer, .350 x 1.59 x .062
6	656-0048	Variable-speed Pulley Assembly	52	647-0031	Brake Control Assembly
7	656-0051A	Transmission Pulley, 8.5 x .5-36	53	647-0032	Speed Control Assembly
8	683-0251	Double-idler Bracket	54	683-0266	Drive Pedal Assembly
9	710-0176	Hex Cap Screw, 5/16-18 x 2.75	55	714-0470	Cotter Pin, 1/8 x 1.25
10	710-0227	Self-tapping Screw, #8-18 x .5	56	711-0736	Ferrule, 1/4-20
11	710-0347	Hex Cap Screw, 3/8-16 x 1.75	57	711-1363	Pin, 3/8-16 x 2.43
12	736-0272	Flat Washer, .51 x 1.0 x .060	58	714-0104	Cotter Pin
13	710-0604A	Self-tapping Screw, 5/16-18 x .625	59	732-0437	Compression Spring, .34 OD x 1.0
14	710-0642	Self-tapping Screw, 1/4-20 x .75	60	732-0955	Extension Spring, .50 OD x 1.41
15	710-3011	Hex Cap Screw, 3/8-16 x 2.25	61	735-0662	Drive Pedal Pad
16	711-0677	Ferrule, 5/16-18	62	735-3049	Brake Pedal Pad
17	712-0241	Hex Nut, 3/8-24	63	736-0142	Flat Washer, .281 x .5 x .063
18	712-0378	Hex Nut, 7/16-20	64	736-0187	Flat Washer, .64 x 1.24 x .06
19	712-0431	Flange Lock Nut, 3/8-16	65	736-0204	Flat Washer, .344 x .062 x .03
20	712-3017	Hex Nut, 3/8-16	66	738-0155	Shoulder Screw, .437 x 1.62
21	712-3004A	Flange Lock Nut, 5/16-18	67	738-0507B	Shoulder Screw, .5 x .434
22	712-3008	Jam Nut, 3/8-16	68	741-0225	Hex Flange Bearing
23	714-0111	Cotter Pin	69	741-3065A	Split Hex Flange Bearing
24	714-0149B	Internal Cotter Pin	70	747-1137	Cruise Control Rod
25	723-3018	Ball Joint	71	747-1138	Brake Lock Control Rod
26	725-1644	Short Spring Switch	72	748-0413	Cruise Latch
27	726-0320	Insulator Nut Plate	73	736-0275	Flat Washer, .344 x .688 x .065
28	732-0384	Extension Spring, .62 Dia. x 6.12	74	783-0653D	Steering Support Bracket
29	732-0525	Compression Spring Clip	75	783-0732	Drive Lock-out Bracket
30	732-0716	Extension Spring, .59 OD x 4	76	783-0773	Brake Pedal
31	732-0963	Extension Spring, .50 Dia. x 6.37 (hooks to flange, 783-0650, in frame)	77	783-0780A	Neutral Return Bracket
32	736-0105	Bell Washer, .401 x .87 x .063	78	683-0304	Lower Frame Assembly
33	736-0140	Flat Washer, .385 x .62 x .063	79	783-1031A	Hitch Plate
34	736-0169	Lock Washer, 3/8	80	736-0242	Bell Washer, .34 x .872
35	736-3008	Flat Washer, .344 x .750 x .120	81	710-0627	Hex Cap Screw, 5/16-24 x .75
36	736-0407	Bell Washer, .45 x 1.0 x .602	82	634-0105A	Wheel Assembly (Model D604G)
37	736-3010	Flat Washer, .407 x .812 x .135		634-0177	Wheel Assembly (Model U604H)
38	738-0322	Shoulder Screw, .625 x .217		634-0070	Rim Only
39	747-1122	Brake Rod		734-0255	Air Valve (Not Shown)
40	747-1123A	Belt Guard		734-1730	Tire Only, 20 x 8 x 8, Square Shoulder
41	747-1127	Idler Adjustment Rod, 3/8	83	734-2290A	Hub Cap
42	747-0047A	Shift Rod	84	710-0809	Self-tapping Screw, 1/4-20 x 1.25
43	711-0736	Adjustment Ferrule, 1/4-20 x 1.0	85	750-0556A	Spacer
44	738-0372B	Shoulder Spacer, .38 ID	86	710-0650	Self-tapping Screw, 5/16-18 x .875
45	754-0467	Lower Drive Belt	87	710-1260A	Self-tapping Screw, 5/16-18 x .75
46	754-0468	Upper Drive Belt	88	747-1285	Shift Rod
			89	748-0415B	Spacer


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674

Powder Black: 0637


Models D604G and U604H

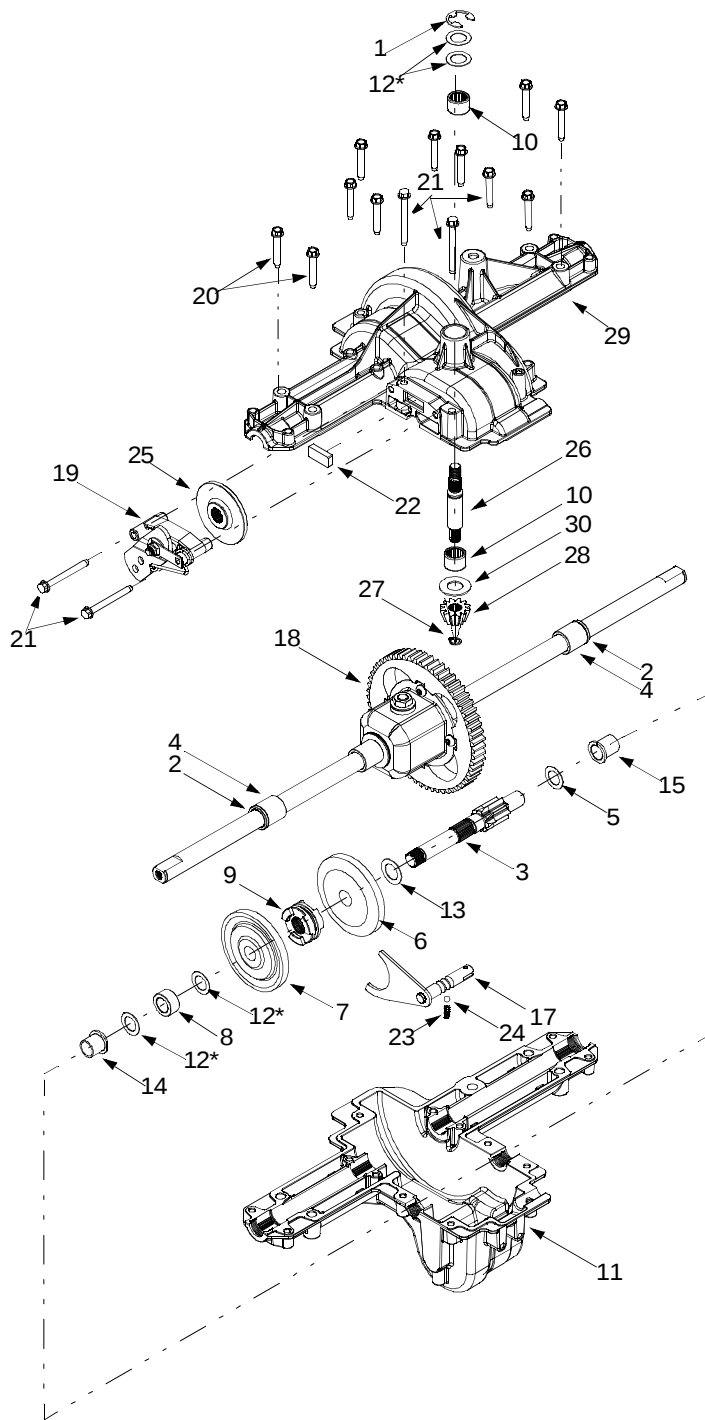

REF. NO.	PART NO.	DESCRIPTION
1	716-0231	E-Ring, .75
2	721-0338	Seal, .75 x 1.0 x .125
3	711-1431	Drive Shaft
4	741-0340	Sleeve Bearing, .75 x .1.0 x 1.0
5	736-0495	Thrust Washer, 1.0 x .632 x .0
6	717-1362	42-Tooth Bevel Gear
7	717-1363	42-Tooth Bevel Gear
8	750-1234	Spacer, .633 x 1.0 x .513
9	718-0228	Clutch Collar
10	741-0525	Needle Bearing, .625 x .875
11	719-0394	Lower Housing
12a	736-0336	Flat Washer, 5/8 x 1.0 x .030*
12b	736-0337	Flat Washer, 5/8 x 1.0 x .040*
12c	736-0349	Flat Washer, 5/8 x 1.0 x .020*
13	736-0519	Flat Washer, .70 x 1.125 x .031
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
16	750-1238	Spacer, .635 x 1.0 x .27
17	611-0133	Detent Shaft Assembly
18	618-0424	Differential Assembly
19	661-0006	Brake Assembly
20	710-1325	Self-tapping Screw, 1/4-20 x 1.625
21	710-1206	Self-tapping Screw, 1/4-20 x 2.375
22	717-0678	Brake Pad
23	732-0863	Compression Spring
24	741-0862	Detent Ball
25	761-0202	Brake Disc
26	711-1430	Input Shaft
27	716-0108	Retaining Ring, .437
28	717-1464	14-Tooth Bevel Pinion
29	719-0391A	Upper Housing
30	736-0723	Thrust Washer, .635 x 1.25 x .042

*Use applicable flat washer (12a, 12b or 12c) in this application allowing proper end-play as instructed in MTD's Service Manual.


Models D604G and U604H

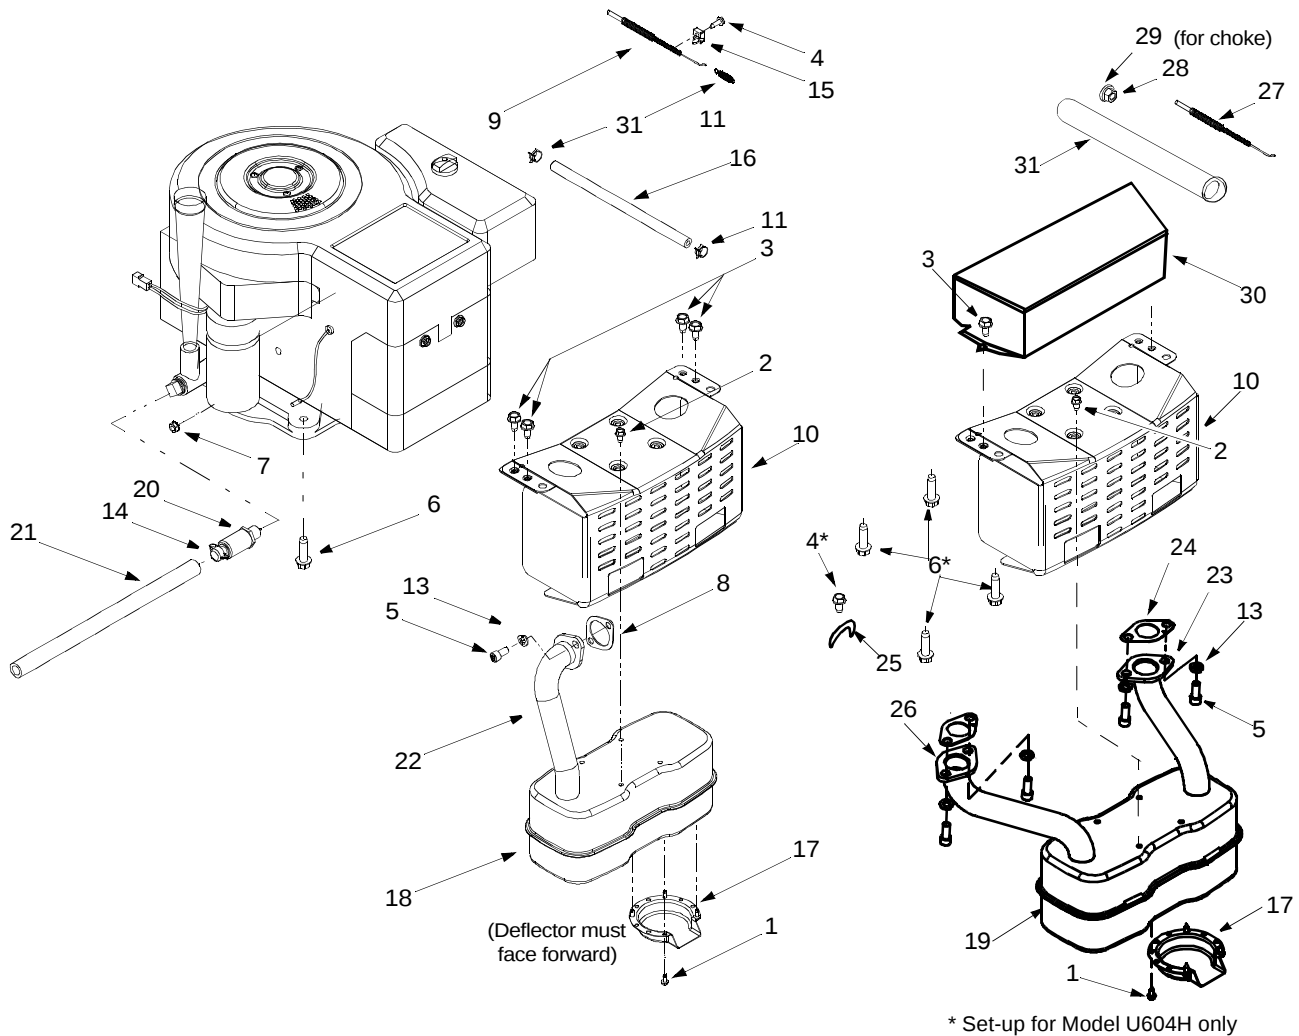

NOTE: Engine accessory parts are applicable to both model D604G and U604H except where otherwise noted.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Self-tapping Screw, #8-18 x .5	17	751-0564	Muffler Deflector
2	710-0599	Self-tapping Screw, 1/4-20 x .5	18	751-0617	Muffler
3	710-0604A	Self-tapping Screw, 5/16-18 x .625	19	751-0616	Muffler (Model U604H)
4	710-1237	Screw, #10-32 x .625 (Model D604G)	20	751-3140	Oil Drain Valve
5	710-1314A	Socket Cap Screw, (Model D604G)	21	751-3141	Oil Drain Hose
6	710-1315	Self-tapping Screw (Model D604G)	22	751-0619	Exhaust Pipe (Model D604G)
7	712-0271	Sems Nut, 1/4-20 (Model D604G)	23	751-0651	Exhaust Pipe LH (Model U604H)
8	721-0208	Exhaust Gasket (Model D604G)	24	721-0460	Exhaust Gasket (Model U604H)
9	746-1084	Throttle Cable (Model D604G)	25	751B221535	Casing Clamp (Model U604H)
10	783-0615B	Muffler Heat Shield	26	751-0650	Exhaust Pipe RH (Model U604H)
11	726-0205	Hose Clamp	27	746-1087	Throttle Cable (Model U604H)
12	732-0966	Extension Spring, 1.25 (Model D604G)	28	712-3017	Hex Nut, 3/8-16 (Model U604H)
13	736-0119	Lock Washer, 5/16 (Model D604G)	29	736-0300	Flat Washer (Model U604H)
14	751-3142	Oil Drain Cap	30	783-0625C	Heat Shield (Model U604H)
15	751B213146	Casing Clamp (Model D604G)	31	722-0263	Foam Cover: Fuel Line (Model U604H)
16	751-0535	Fuel Line Hose			

Models D604G and U604H

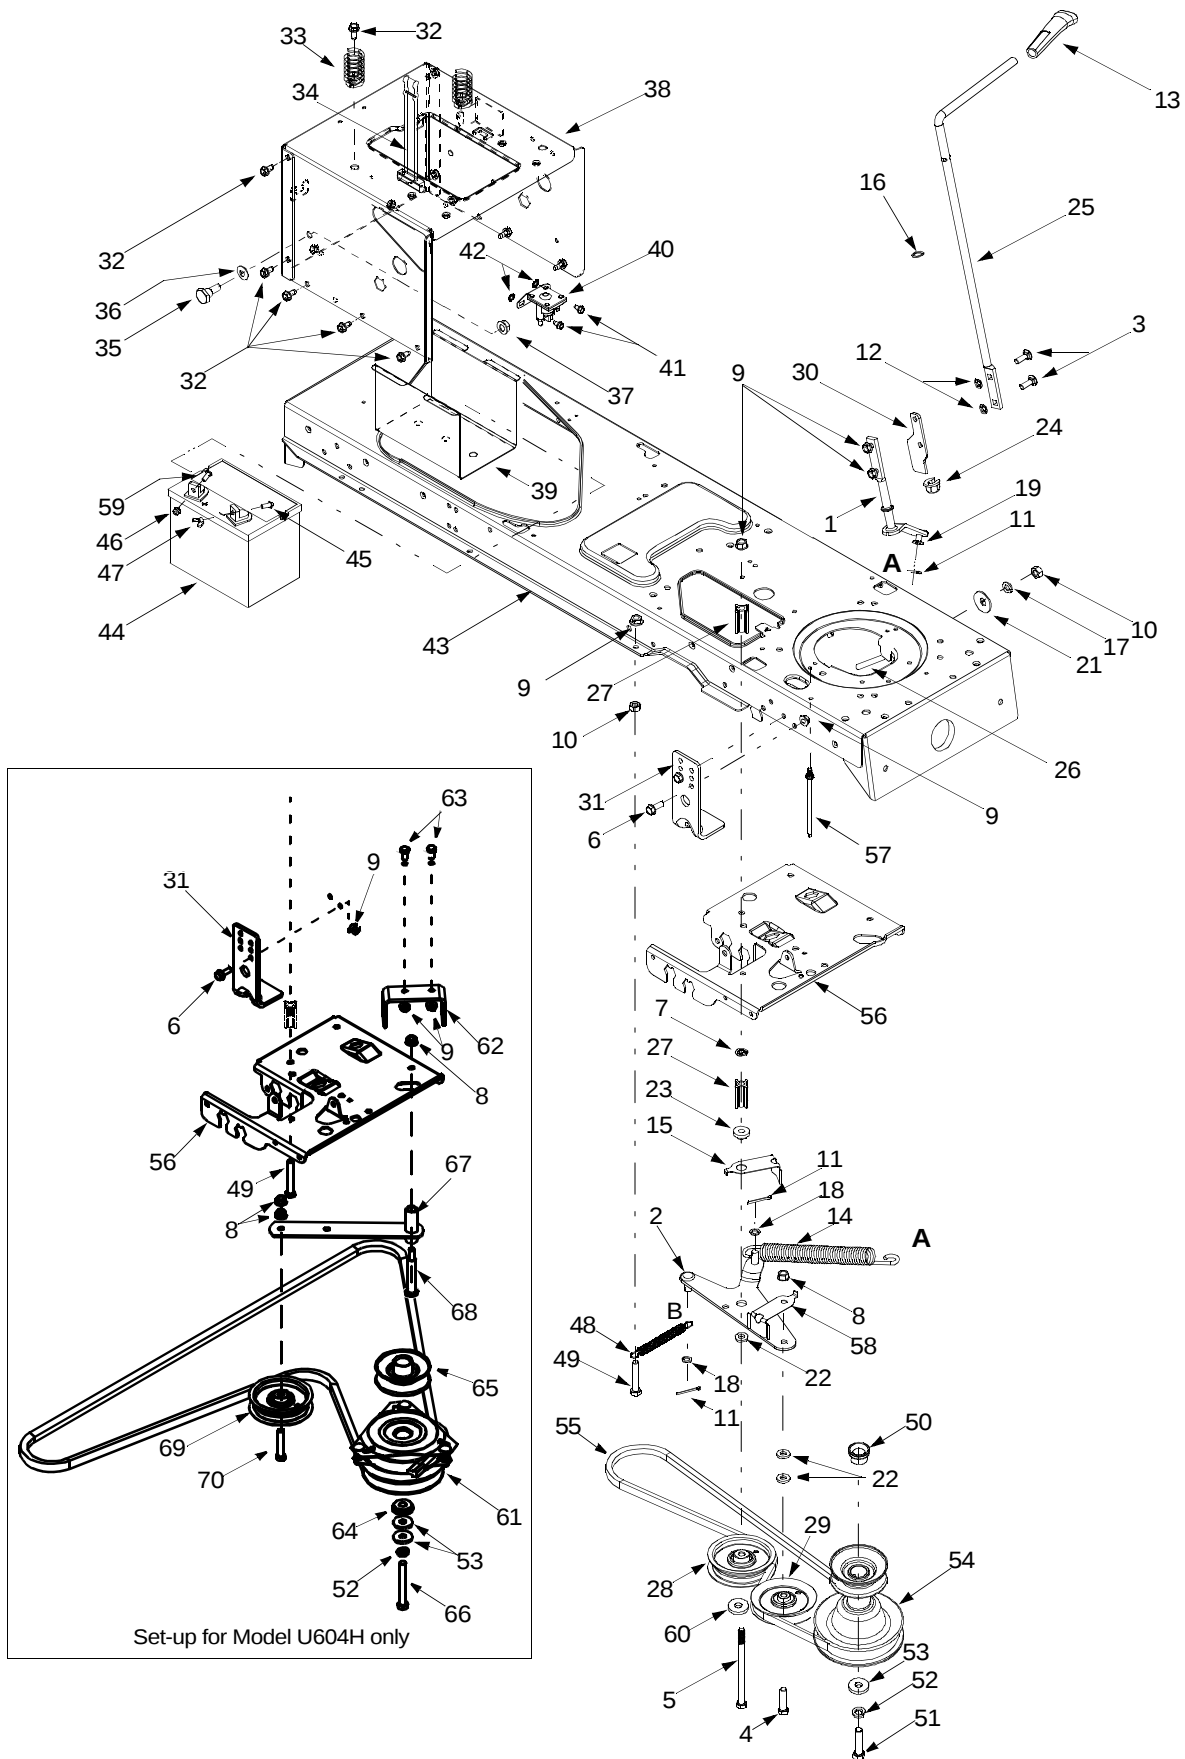

Models D604G & U604H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	647-0064	PTO Engage Lever Assembly	36	736-0407	Bell Washer, .45 x 1.0 x .062
2	683-0450	PTO Engage Plate Assembly	37	712-0459	Flange Lock Nut, 7/16-20
3	710-0276	Carriage Screw, 5/16-18 x 1.00	38	783-1031A	Hitch Plate
4	710-0520	Hex Cap Screw, 3/8-16 x 1.5	39	783-0349	Battery Tray
5	710-0831	Hex Cap Screw, 3/8-16 x 5.5	40	725-1426	Solenoid, 12-Volt, 100 Amp
6	710-1238	Hex Head Washer Screw, 5/16-18 x .875	41	710-0599	Self-tapping Screw, 1/4-20 x .5
7	712-0229	Push Nut, 3/8	42	736-0222	Lock Washer, 1/4
8	712-0431	Flange Lock Nut, 3/8-16	43	683-0304	Lower Frame Assembly
9	712-3004A	Flange Lock Nut, 5/16-18	44	725-1706	12-Volt Battery, 270 CCA
10	712-3010	Hex Nut, 5/16-18	45	738-1132	Shoulder Screw 1/4-20
11	714-0470	Cotter Pin, 1/8 x 1.25	46	712-0271	Hex Sems Nut, 1/4-20
12	726-0201	Speed Nut, .3125	47	712-3087	Wing Nut, 1/4-20
13	731-2111A	PTO Knob	48	732-1165	Extension Spring, .50 x 5.0
14	732-1170	Extension Spring, .75 x 6.75	49	710-3180	Hex Cap Screw, 5/16-18 x 1.75
15	732-0991A	Belt Guard	50	750-0596	Spacer Cup
16	736-0108	Flat Washer, .510 x .750 x .033	51	710-3029	Hex Head Cap Screw, 7/16-20 x 1.25
17	736-0119	Lock Washer, 5/16	52	736-0171	Lock Washer, 7/16
18	736-0140	Flat Washer, .385 x .62 x .063	53	736-0322	Flat Washer, .450 x 1.25
19	736-0275	Flat Washer, 5/16	54	756-0982B	Engine Pulley, 3.56 OD x 5.56
20	736-3000	Flat Washer, .406 x .875 x .059	55	754-0497	PTO Belt
21	736-0331	Bell Washer, .39 x 1.13 x .062	56	783-0653D	Steering Support Bracket
22	736-3039	Flat Washer, .407 x .812 x .135	57	711-1044	Keeper Pin, 5/16 x 4.75
23	738-0372B	Shoulder Spacer, .380	58	732-1013	Belt Guard
24	741-0708	Hex Split Flange Bearing, .5	59	710-0703	Screw 1/4-20 x 0.75
25	747-1112D	PTO Engagement Handle	60	736-0300	Flat Washer
26	747-1286A	Belt Keeper Rod	61	717-1708	Electric Clutch PTO
27	748-0415B	Spacer, 3/8 x 1.54	62	783-1003	Clutch Bracket
28	756-0627B	Idler Pulley, 3.5	63	710-3025	Hex Screw 5/16-18 x 0.625
29	756-1208	Idler Pulley, 4.0	64	738-0785	Shoulder Spacer
30	783-0744A	Engagement Stop	65	756-0639A	Engine Pulley
31	783-0891B	Deck Stop	66	710-3157	Hex Screw 7/16-20 X 3.25
32	710-0604A	Self-tapping Screw, 5/16-18 x .625	67	683-0297	Idler Bracket Assembly
33	732-3080A	Compression Spring, 1.28 x 3.5	68	738-3056	Shoulder Screw
34	723-0444	Battery Strap	69	756-0627B	Idler Pulley
35	738-1020	Shoulder Screw, .625 x .5, 7/16-20	70	710-3144	Hex Screw 3/8-16 x 2.0


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674

Powder Black: 0637


Model D604G

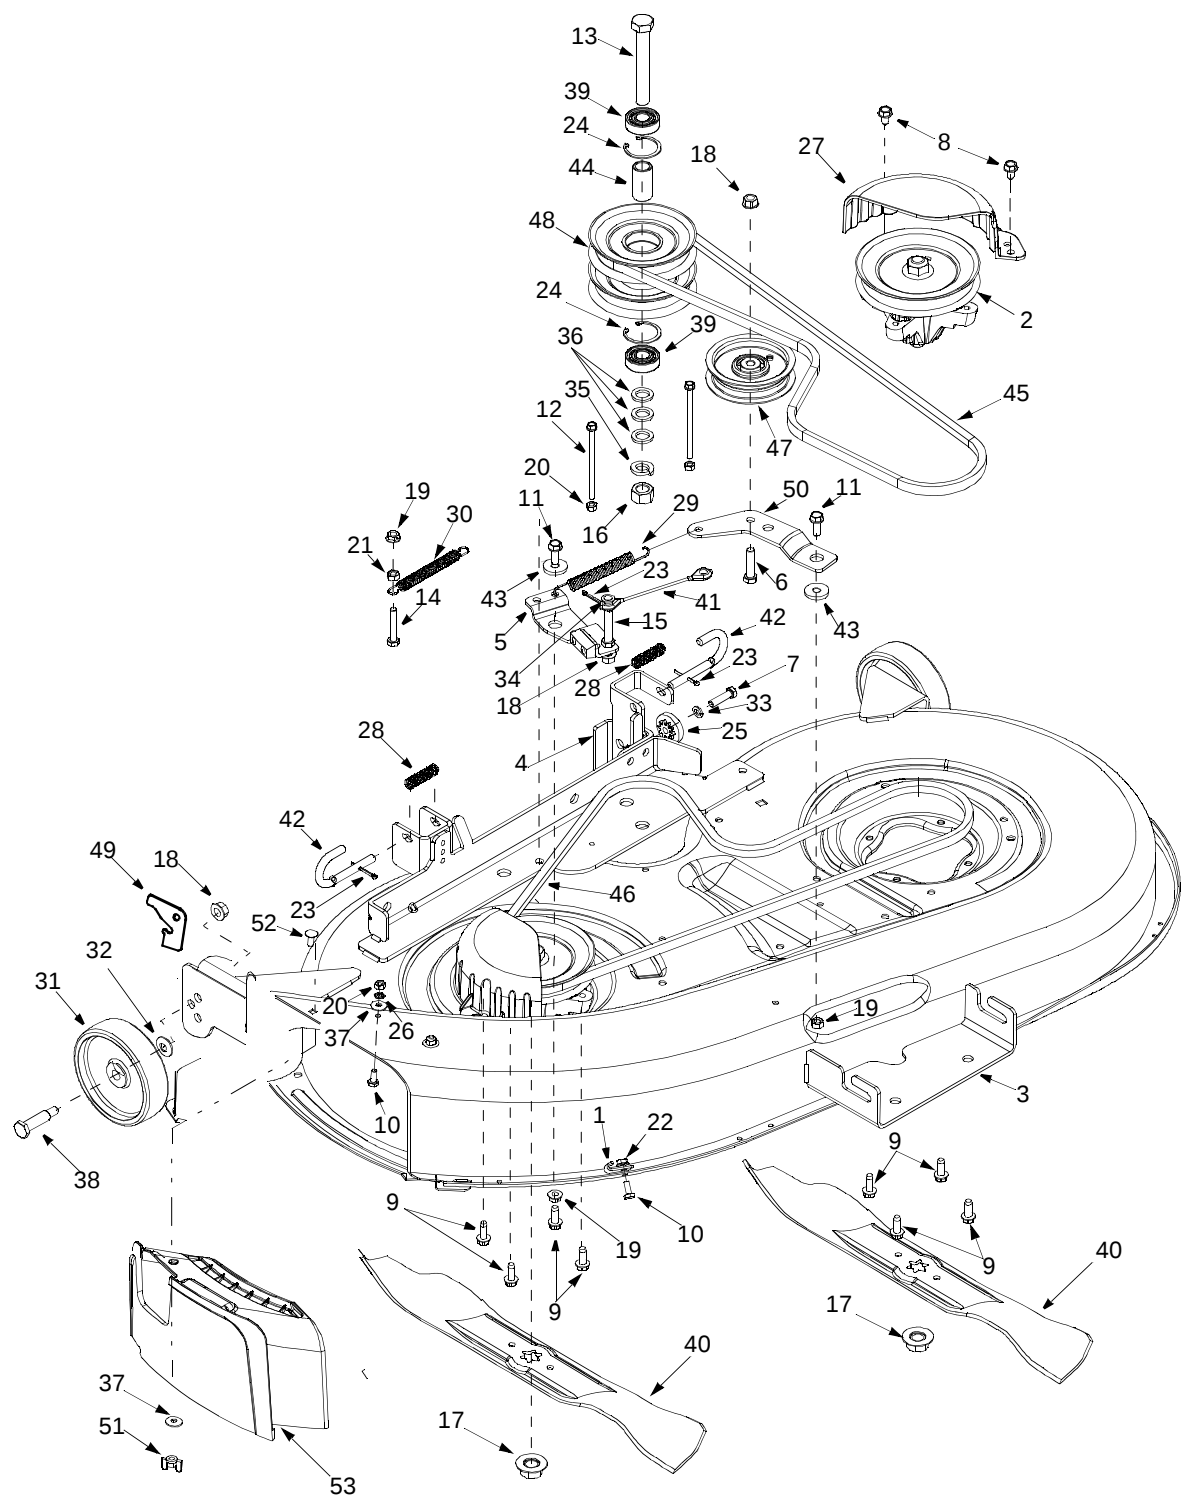

Model D604G

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	16606	Bracket: Retainer Hook	28.	732-0306	Compression Spring
2.	618-0565	Spindle Assembly: Pulley	29.	732-0470A	Extension Spring
3.	683-0198E	Deck Assembly	30.	732-1165	Extension Spring
4.	683-0254	Deck Hanger Bracket LH	31.	734-0973	Deck Wheel
5.	683-0440	Brake Assembly: deck	32.	736-0105	Bell Washer
6.	710-0520	Hex Screw 3/8-16 x 1.5	33.	736-0119	Lock Washer
7.	710-0528	Hex Screw 5/16-18 x 1.25	34.	736-0140	Flat Washer
8.	710-0604A	TT Screw 5/16-18 x 0.625	35.	736-0158	Lock Washer
9.	710-0650	TT Screw 5/16-18 x 0.875	36.	736-0162	Flat Washer
10.	710-0751	Hex Screw 1/4-20 x 0.620	37.	736-0270	Bell Washer
11.	710-1238	Hex Washer Head Screw	38.	738-0373	Sholder Spacer
12.	710-1830	TT Screw 1/4-20 x 4.0	39.	741-0524	Bearing
13.	710-3151	Hex Screw 5/8-18 x 4.25	40.	742-0616	Blade
14.	710-3180	Hex Screw 5/16-18 x 1.75	41.	746-0970	Brake Cable
15.	711-1534	Pin	42.	747-1116	Deck Release Rod
16.	712-0337	Hex Nut 5/8-18	43.	748-0331	Shoulder Spacer
17.	712-0417A	Flange Nut 5/8-18	44.	750-0932A	Spacer
18.	712-0431	Flange Lock Nut	45.	754-0497	V-Belt
19.	712-3004A	Flange Lock Nut	46.	754-0498	V-Belt
20.	712-3006	Hex Nut 1/4-20	47.	756-0627B	Idler Pulley
21.	712-3010	Hex Nut 5/16-18	48.	756-1202	Double Pulley
22.	712-3027	Lock Nut 1/4-20	49.	783-1025	Chute Stop
23.	714-0470	Cotter Pin	50.	783-1291	Idler Bracket
24.	716-3020	Snap Ring	51.	712-3087	Wing Nut
25.	717-1553A	Gear: Deck Adjustment	52.	710-0134	Carriage Screw
26.	726-0233	Push Nut	53.	731-2363	Mulch Plug
27.	731-2486	Belt Cover			

Model U604H

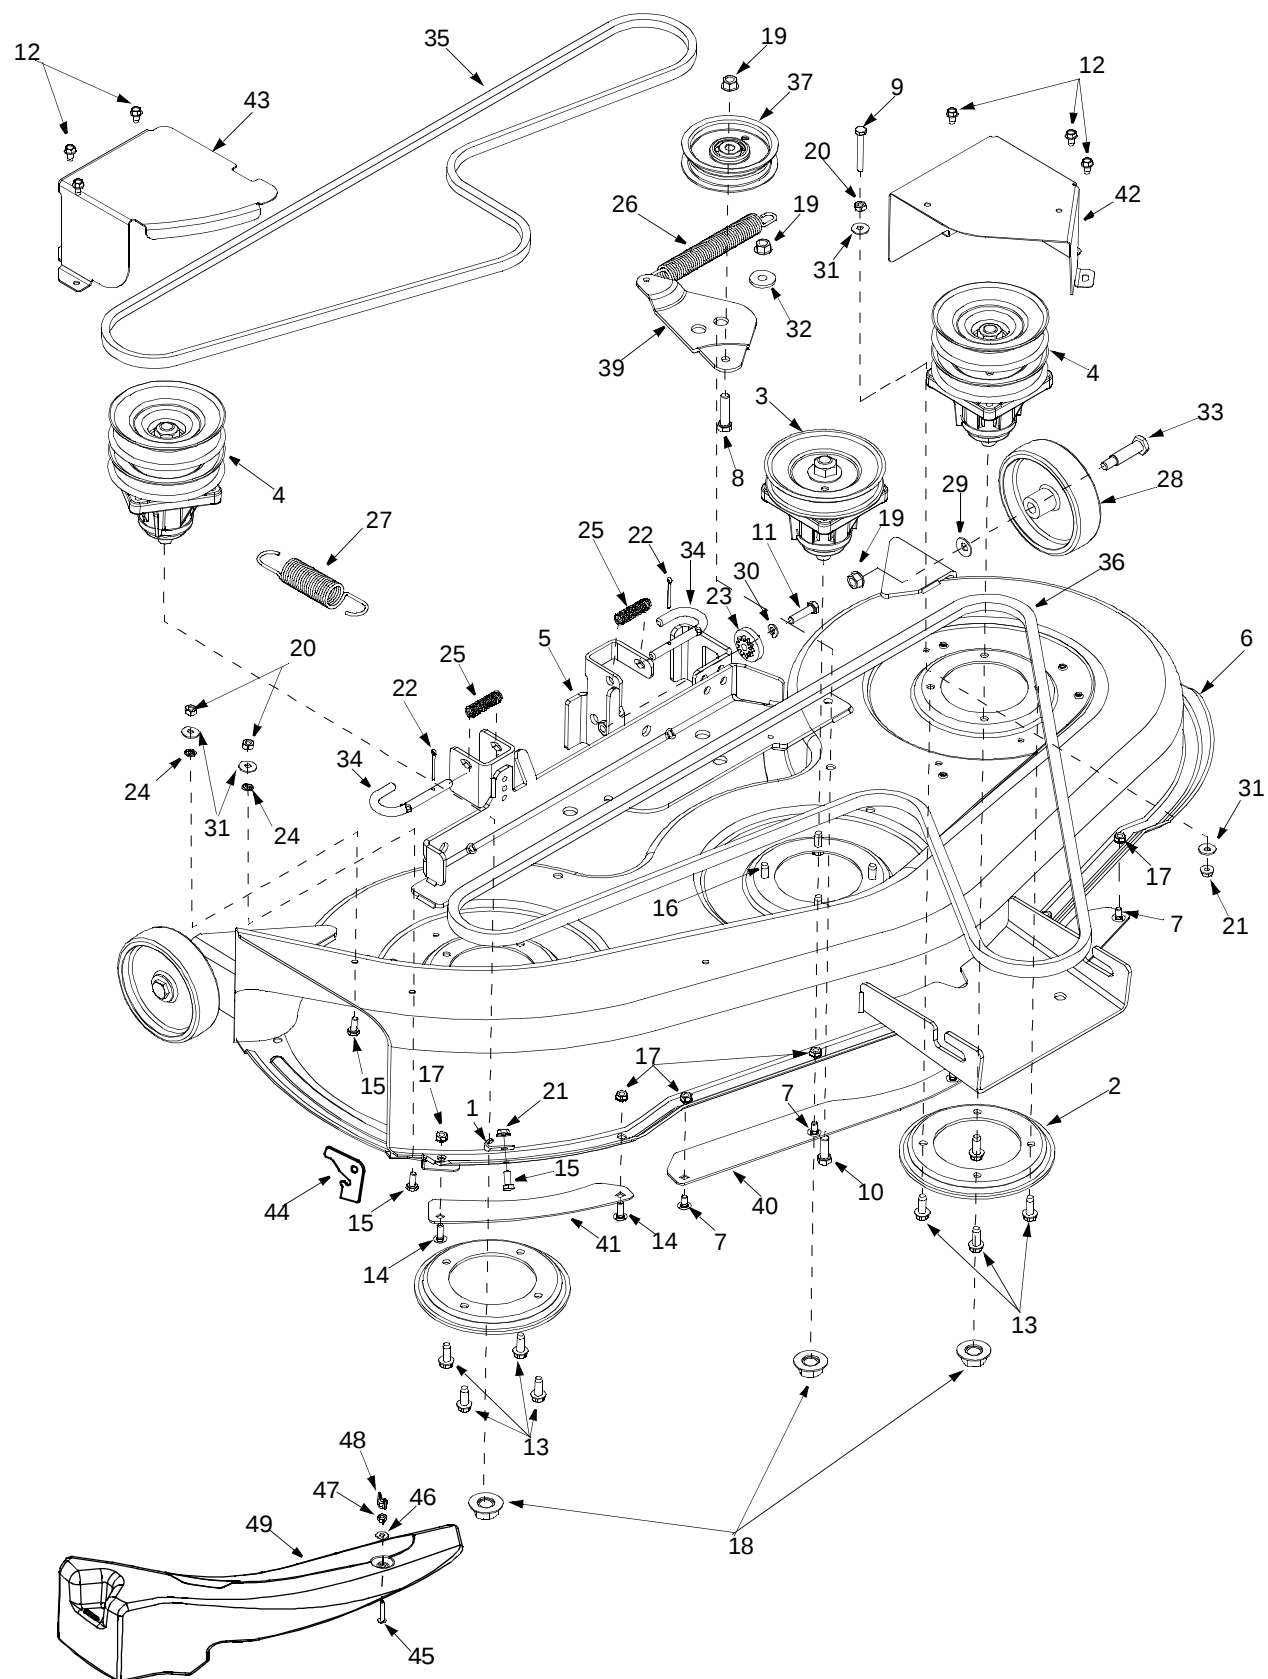

Model U604H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	16606	Retainer hook: bracket	25.	732-0306	Compression Spring
2.	17982	Spindle Plate	26.	732-0594A	Extension Spring
3.	618-0240A	Spindle Assembly	27.	732-0934	Extension Spring
4.	618-0241	Spindle Assembly: double Pulley	28.	734-0973	Deck Wheel
5.	683-0254	Deck Hager Bracket Assembly LH	29.	736-0105	Bell Washer
6.	683-0265C	Deck Assembly	30.	736-0119	Lock Washer
7.	710-0167	Carriage Screw 1/4-20 x 0.50	31.	736-0270	Bell Washer
8.	710-0344	Hex Screw 3/8-16 x 1.5	32.	738-0347	Shoulder Spacer
9.	710-0501	Hex Screw 1/4-20 x 2.0	33.	738-0373	Shoulder Screw
10.	710-0514	Hex Screw 3/8-16 x 1.0	34.	747-1116	Deck Release Handle
11.	710-0528	Hex Screw 5/16-18 x 1.25	35.	754-0349	V-Belt
12.	710-0599	TT Screw 1/4-20 x 0.5	36.	754-0474	V-Belt
13.	710-0650	TT Screw 5/16-18 x 0.875	37.	756-0627B	Idler Pulley
14.	710-0703	Carriage Screw 1/4-20 x 0.75	39.	783-0139A	Idler Bracket
15.	710-0751	Hex Screw 1/4-20 x 0.620	40.	783-0141	Deck Skirt: Center
16.	710-1260A	LD Screw 5/16-18 x 0.75	41.	783-0142	Deck Skirt RH
17.	712-0271	Sems Nut 1/4-20	42.	783-0747	Belt Cover LH
18.	712-0417A	Flange Nut	43.	783-0805A	Belt Cover RH
19.	712-0431	Lock Nut 3/8-16	44.	783-1025	Chute Stop
20.	712-3006	Hex Nut 1/4-20	45.	710-0578	Machine Screw
21.	712-3027	Lock Nut 1/4-20	46.	736-0173	Flat Washer
22.	714-0470	Cotter Pin	47.	712-3006	Hex Nut
23.	717-1553A	Gear Adjustment	48.	712-3087	Wing Nut
24.	726-0233	Push Nut	49.	731-1636	Mulch Plug