




Operator's Manual

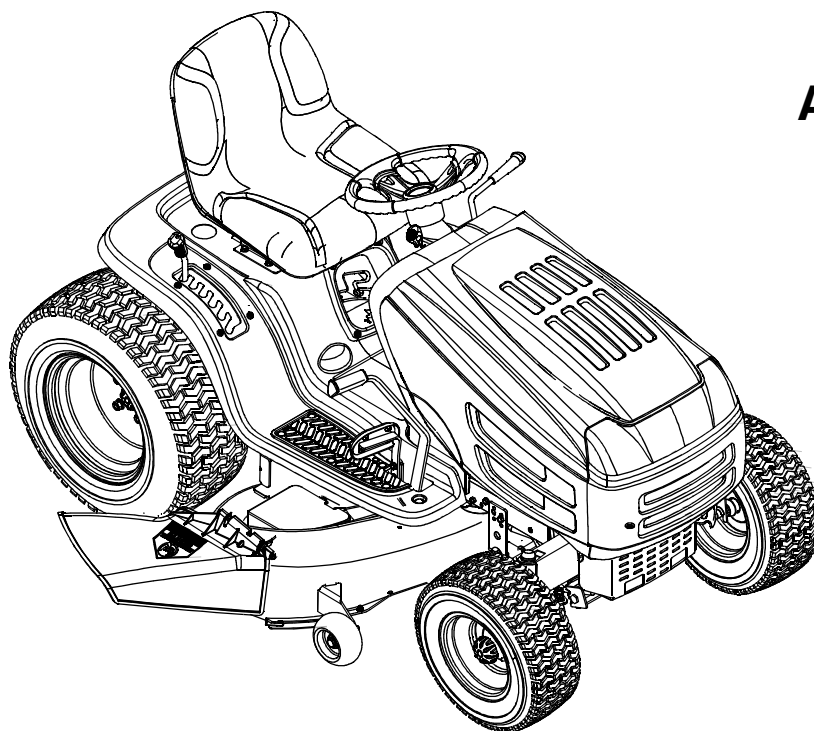

Auto Drive Garden Tractor

Models G808H &
Q808H

IMPORTANT: Read safety rules and instructions carefully before operating equipment.


Warning: This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator. In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester for the muffler is available through your nearest engine authorized service dealer or contact the service department, P.O. Box 361131 Cleveland, Ohio 44136-0019.

Troy-Bilt LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

PRINTED IN U.S.A.

FORM NO. 769-00591
(12/2002)


MODELS G808H & Q808H

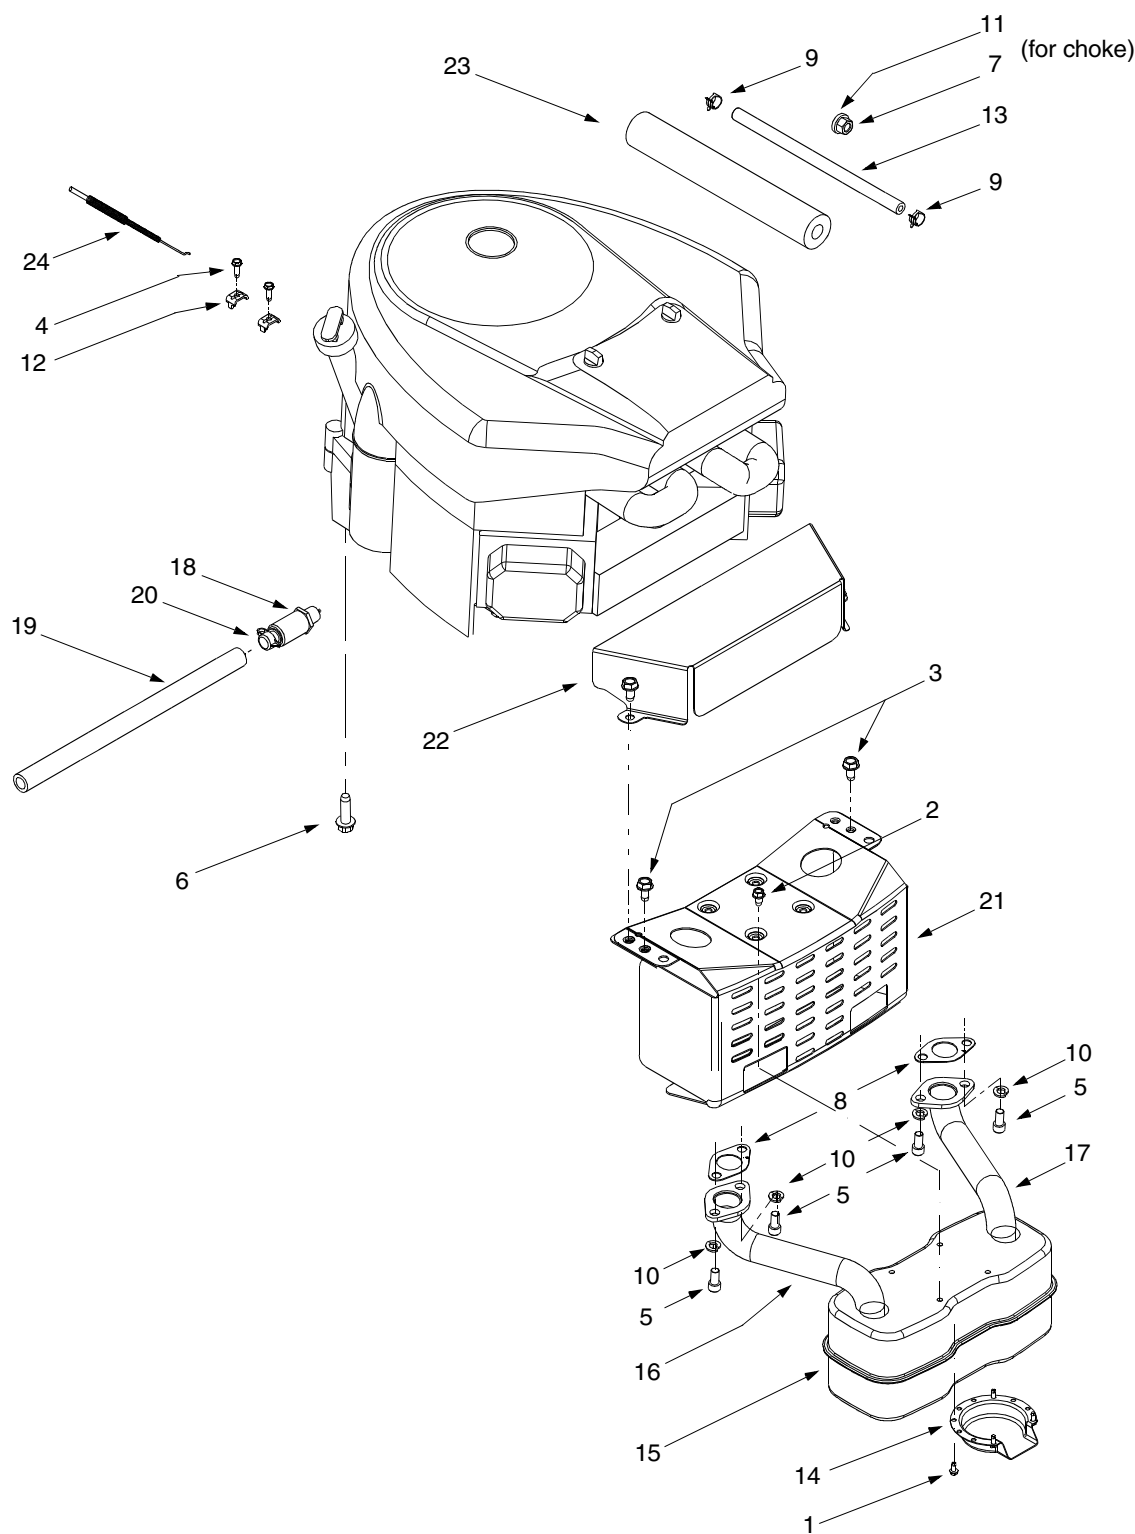

Models G808H & Q808H

REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Self-tapping Screw, #8-18 x .5
2	710-0599	Self-tapping Screw, 1/4-20 x .5
3	710-0726	AB Screw, 5/16-12 x .75
4	710-1237	Screw, #10-32 x .625
5	710-1314A	Socket Cap Screw, 5/16-18 x .625
6	710-1315	Self-tapping Screw, 3/8-16 x 1.25
7	712-3017	Hex Nut, 3/8-16
8	721-0460	Exhaust Gasket
9	726-0205	Hose Clamp
10	736-0119	Lock Washer, 5/16
11	736-0300	Flat Washer
12	751B221535	Casing Clamp
13	751-0535	Fuel Line Hose
14	751-0564	Muffler Deflector
15	751-0616	Muffler, Twin Inlet
16	751-0650	RH Exhaust Pipe
17	751-0651	LH Exhaust Pipe
18	751-3140	Oil Drain Valve
19	751-3141	Oil Drain Hose
20	751-3142	Oil Drain Cap
21	783-0615B	Muffler Heat Shield
22	783-0625C	Engine Heat Shield
23	722-0263	Foam (fits over fuel line)
24	746-1086	Throttle Cable


Models G808H & Q808H

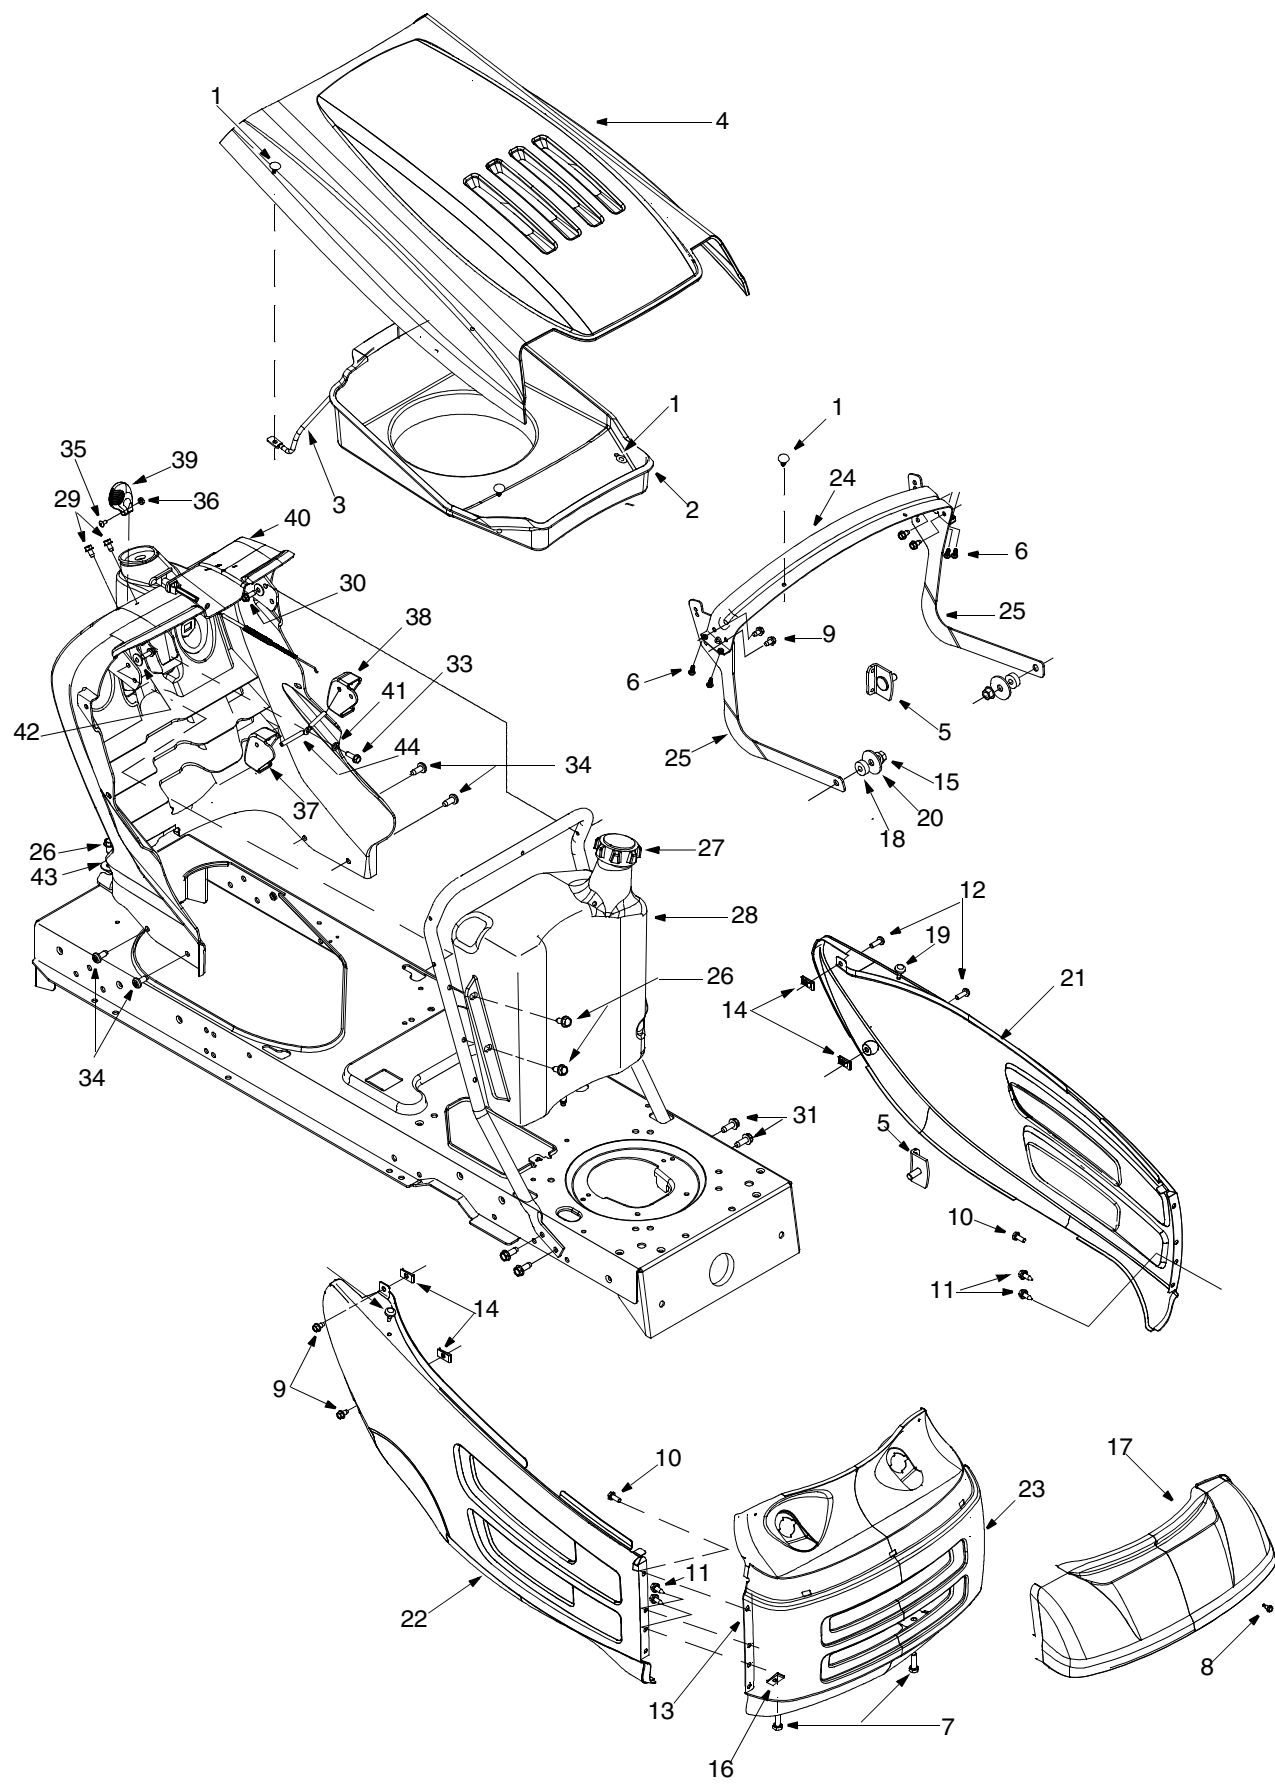

Models G808H & Q808H

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	726-3046	Ratchet Clip	24.	783-0553A	Support Bracket: Hood
2.	731-2247A	Hood Shield	25.	783-1495	Hinge Bracket: Hood
3.	747-1184	Support Rod: Air Duct	26.	710-0726	AB Screw 5/16-20 x 0.750
4.	783-0478A	Hood: 8 Style	27.	751-0603	Fuel Cap
5.	683-0195	Bracket Assembly	28.	751-06580	Fuel Tank
6.	710-0351	Pan Head B Screw #10-16 x 0.5	29.	710-0599	TT Screw 1/4-20 x 0.5
7.	710-0376	Hex Screw 5/16-18 x 1.0	30.	710-0642	TT SCrew 1/4-20 x 0.75
8.	710-0456	Hex Screw #10-16 x 0.5	31.	710-0650	TT Screw 5/16-18 x 0.875
9.	710-0599	TT Screw 1/4-20 x 0.5	33.	710-0895	Hi-lo Screw 1/4-15 x 0.75
10.	710-0751	Hex Screw 1/4-20 x 0.620	34.	710-1611B	TT Screw 5/16-18 x 0.75
11.	710-0896	AB Screw 1/4-14 x 0.625	35.	710-3217	Machine Screw #8-32 x 0.375
12.	710-0924	Machine Screw 1/4-20 x 0.75	36.	712-0142	Nut 8-32
13.	712-0271	Sems Nut	37.	731-04215	Cruise Lever
14.	712-0292	Nut: Clip	38.	731-04217	Brake Lever
15.	712-0431	Flange Lock Nut	39.	731-1857	Control Knob
16.	726-0211	U-Nut 5/16-18	40.	731-2122C	Dash Panel
17.	731-1854A	Lens: 8 Style	41.	736-0142	Flat Washer
18.	735-0126	Rubber Washer	42.	736-0270	Bell Washer
19.	735-0199A	Rubber Bumper	43.	736-3078	Flat Washer
20.	736-3039	Flat Washer	44.	747-1196	Bent Rod: Lever
21.	783-0475B	LH Panel: SD, 8 Style	45.	749-1087C	Support Tube: Dash
22.	783-0476C	RH Panel: SD, 8 Style	—	629-0469A	Headlight Wire Harness
23.	783-0477A	Grill: 8 Style	—	629-1067	Tractor Wire Harness


Models G808H & Q808H

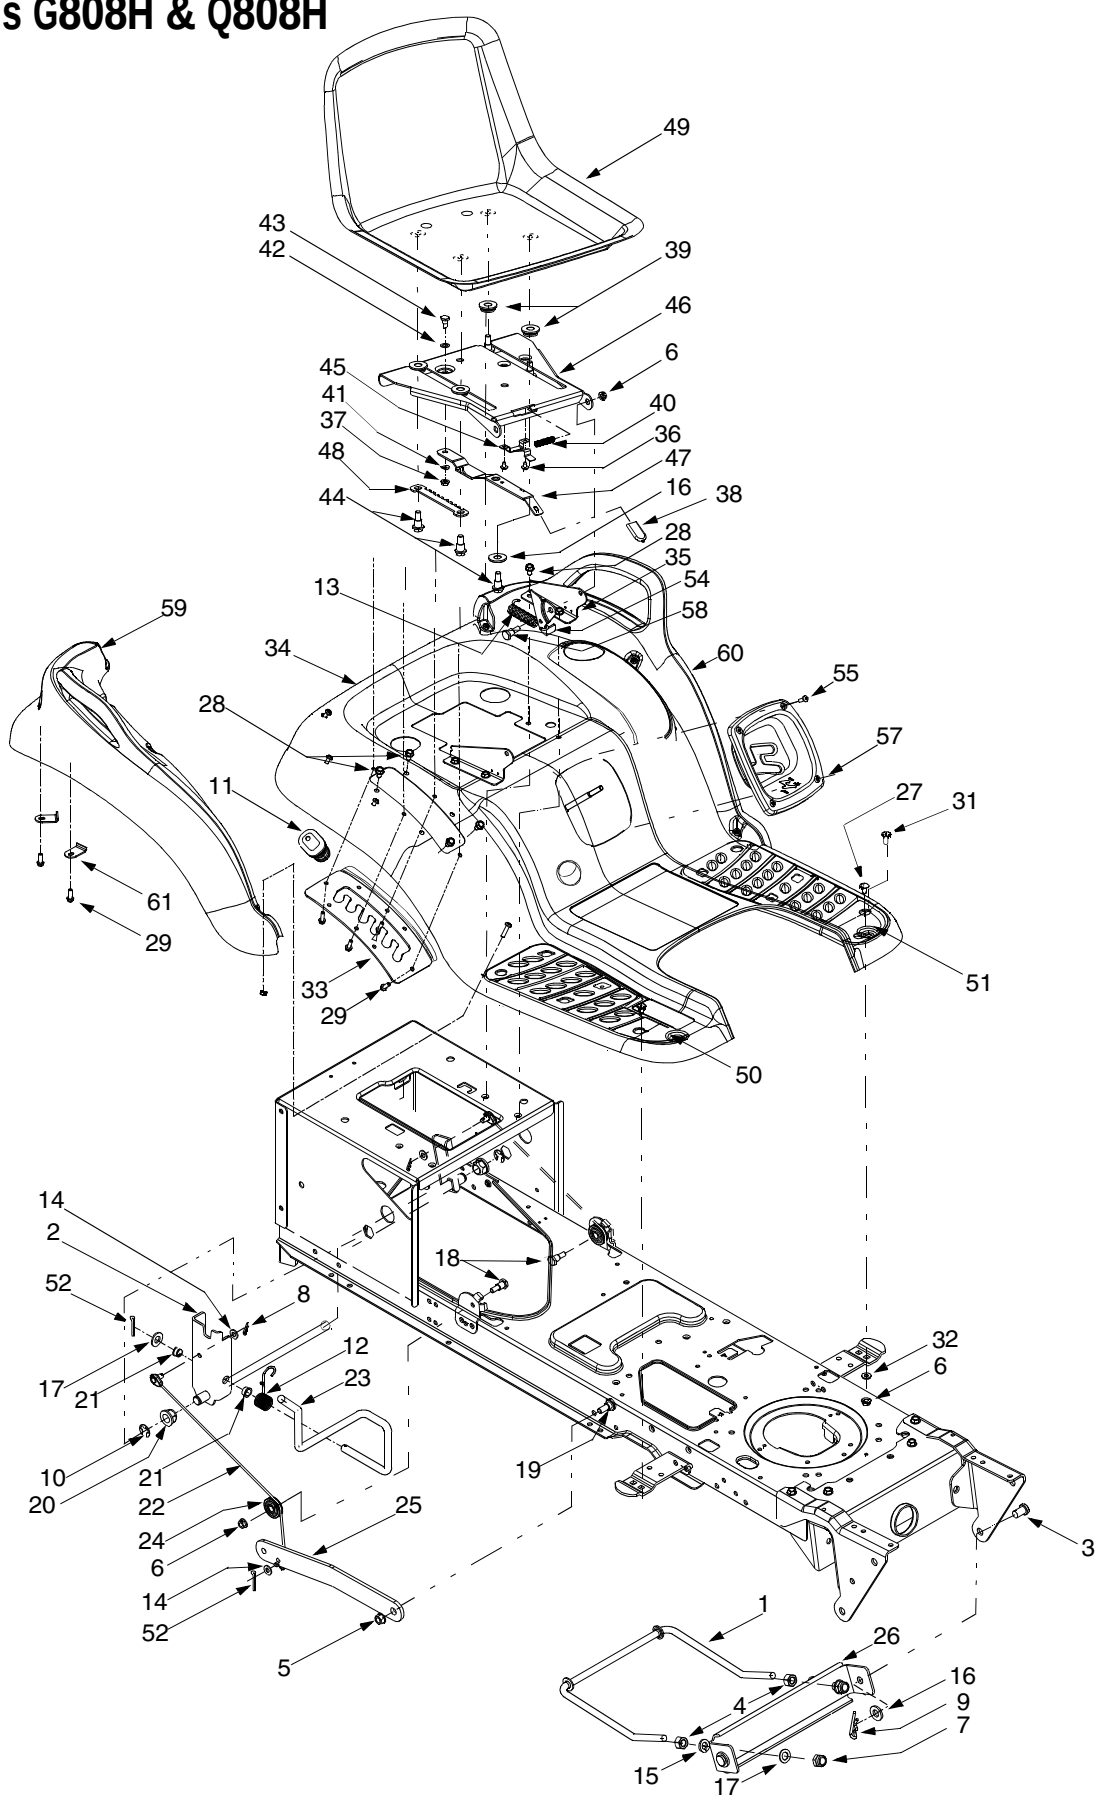

Models G808H & Q808H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	747-1130B	Deck Stabilizer Rod (Model Z809H)	31	731-1993	Cover w/ Cup Holder
	747-1324	Deck Stabilizer Rod (Model Z809K)	32	736-3078	Flat Washer, .349 x 1.0 x .063
2	683-0197B	Lift Shaft Assembly (Model Z809H)	33	783-0677	Lift Adjustment Bracket
	683-0462	Lift Shaft Assembly (Model Z809K)	34	783-1280	Fender
3	711-0332	Clevis Pin, .5 x .78	35	783-1489	Seat Mounting Bracket
4	712-0206	Hex Nut, 1/2-13	36	710-1268	Screw, #10-16 x .375
5	712-0431	Flange Lock Nut, 3/8-16	37	712-3027	Hex Flange Lock Nut, 1/4-20
6	712-3004A	Flange Lock Nut, 5/16-18	38	720-0309A	Seat Adjuster Grip
7	712-3083	Hex Nut, 1/2-13	39	731-1989	Spacer
8	714-0104	Internal Cotter Pin	40	732-0499	Compression Spring, .41 x 1.5
9	714-0145	Internal Cotter Pin	41	736-0175	Spring Washer, .265 x .562 x .025
10	716-0106	E-Ring	42	736-0204	Flat Washer, .344 x .62 x .03
11	720-0311	Handle Grip	43	738-0137A	Shoulder Screw, .340 x .285, 1/4-20
12	732-0874	Torsion Spring	44	738-1007	Shoulder Screw, .50 x .50, 3/8-16
13	732-1184	Extension Spring, .84 x 4.6	45	783-0611	Seat Stop
14	736-0275	Flat Washer, 5/16	46	783-0738	Seat Pivot Bracket
15	736-0921	Lock Washer, 1/2	47	783-0739	Seat Adjustment Lever
16	736-3019	Flat Washer, .31 x 1.062 x .134	48	783-0753	Seat Adjustment Selector
17	736-3084	Flat Washer, .51 x 1.12 x .06	49	757-04010	High Back Seat, Black
18	738-0138A	Hex Cap Screw, 5/16-18 x .62	50	735-0656	RH Foot Pad
19	738-0143	Shoulder Screw, 3/8-16	51	735-0657	LH Foot Pad
20	741-0225	Hex Flange Bearing	—	726-3046	Foot Pad Clips
21	741-0715	Snap Flange Bearing	52	714-0111	Cotter Pin
22	746-0968	Lift Cable, 16.16	54	783-0209A	LH Seat Lift Bracket
23	747-1111A	Lift Handle	—	17239A	RH Seat Lift Bracket
24	756-1154	Roller Pulley	55	710-0924	Phillips Pan Screw, 1/4-20 x .75
25	783-0678A	Arm Lift	56	712-0292	U-type Speed Nut, 1/4-20
26	783-0720A	Deck Stabilizer Bracket	57	731-2480	Shift Lever Cover
27	710-0260A	Carriage Bolt, 5/16 x .62	58	738-0296	Shoulder Screw, .437 x .286
28	710-0726	AB Screw, 5/16-12 x .75	59	731-2618	RH Fender Flare
29	710-0895	Self-tapping Screw, 1/4-15 x .75	60	731-2619	LH Fender Flare
30	731-1990	Lift Lever Cover	61	783-1478	Fender Clips


Models G808H & Q808H

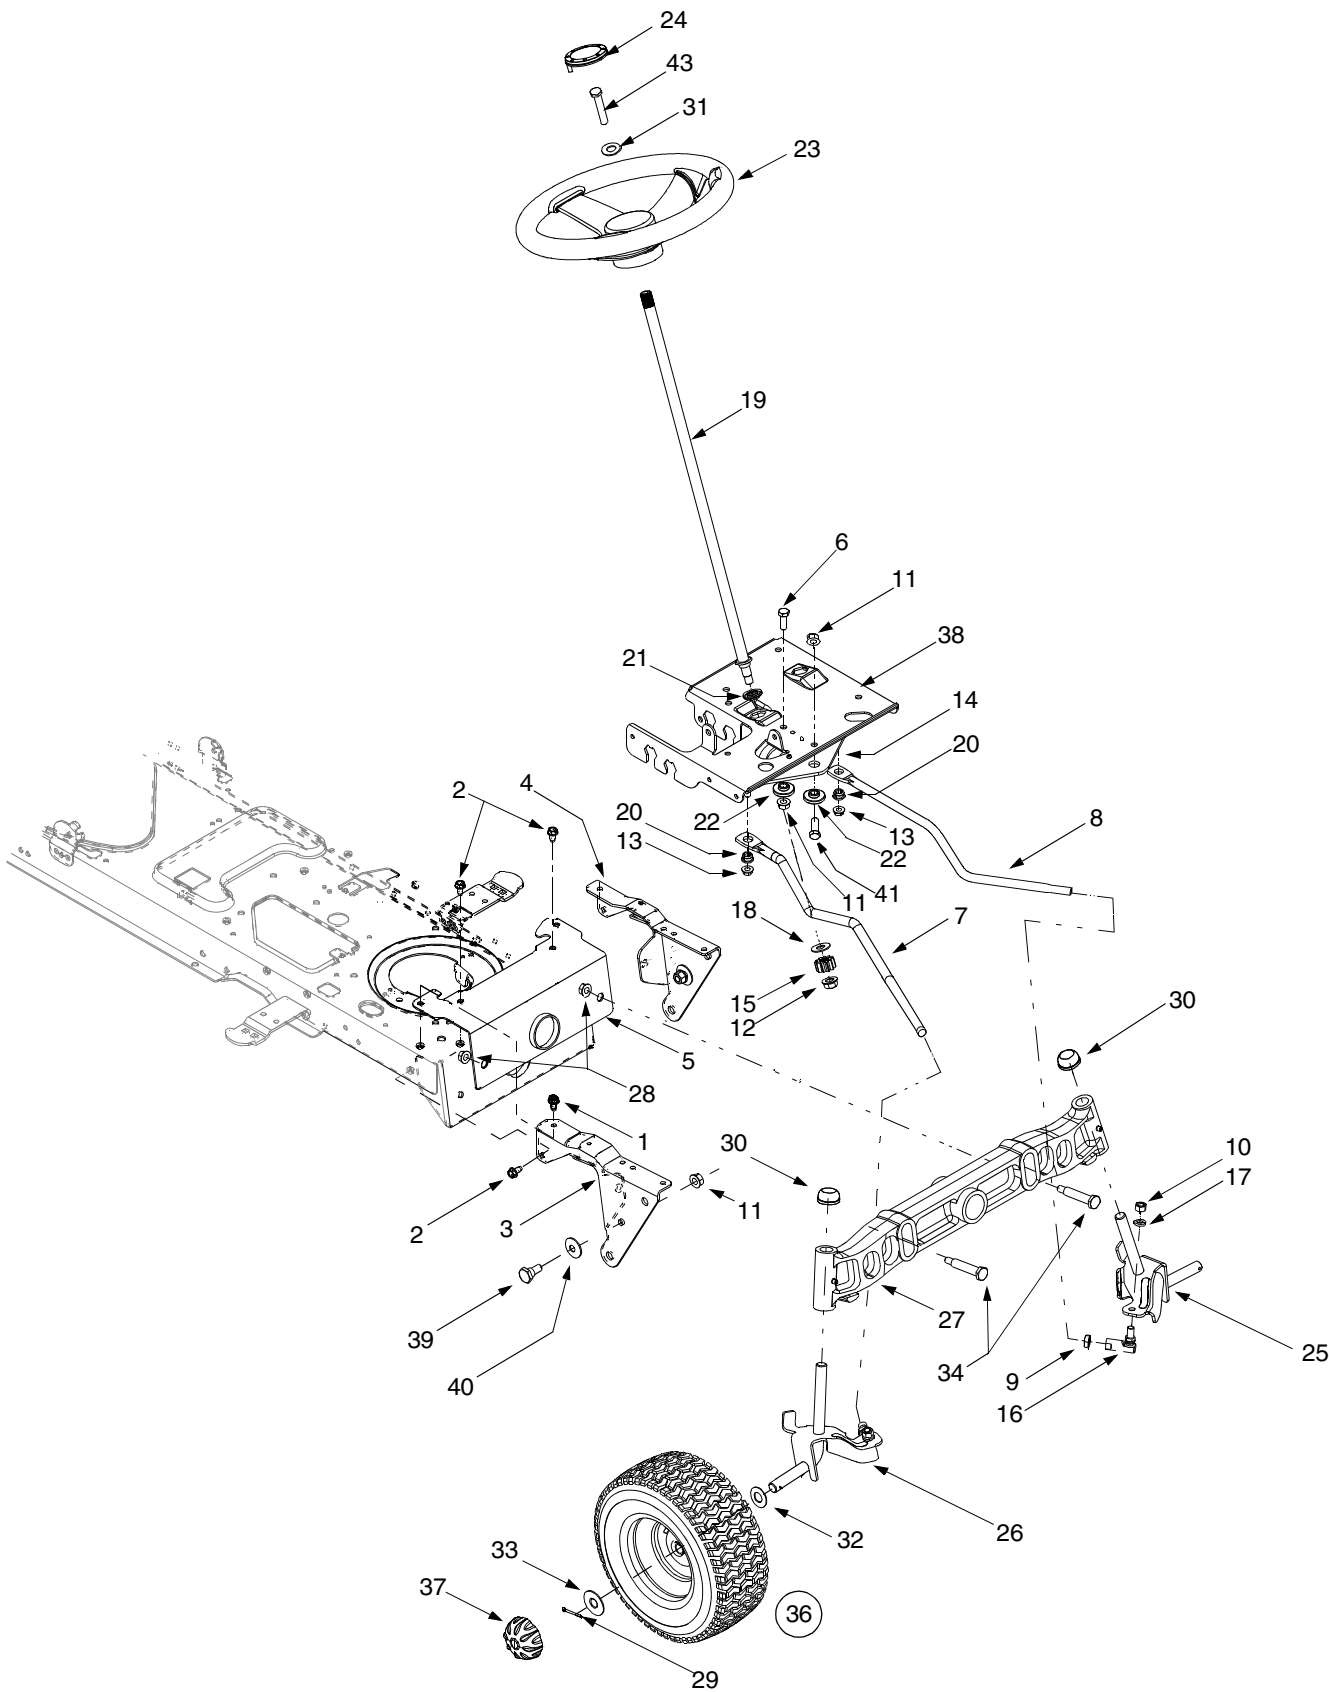

Models G808H & Q808H

REF. NO.	PART NO.	DESCRIPTION
1	710-1260A	Self-tapping Screw, 5/16-18 x .75
2	710-0604A	Self-tapping Screw, 16-18 x .625
3	783-0726B	RH Pivot Support Bracket
4	783-0727A	LH Pivot Support Bracket
5	783-0728	Pivot Bar Bracket
6	710-0514	Hex Cap Screw, 3/8-16 x 1 (Grade 5)
7	711-1408	RH Drag Link
8	711-1409A	LH Drag Link
9	712-0240	Jam Nut, 7/16-20 (Grade 2)
10	712-0241	Hex Nut, 3/8-24 (Grade 2)
11	712-0431	Flange Lock Nut, 3/8-16
12	712-0459	Flange Lock Nut, 7/16-20
13	712-3004A	Flange Lock Nut, 5/16-18
14	717-1550D	Steering Gear, 11/90 Ratio
15	717-1554	Steering Pinion Gear
16	723-0448A	Ball Joint, 7/16-20
17	736-0169	Lock Washer, 3/8
18	736-3084	Flat Washer, .51 x 1.12 x .06
19	738-1001A	Steering Shaft, .625 OD x 24.4
20	741-0475	Plastic Bushing, .38 ID
21	741-0656	Hex Flange Bearing, 5/8
22	738-0372B	Shoulder Spacer, .38 ID
23	731-2624	Steering Wheel, Soft Grip, Three Spoke
24	731-2625	Steering Wheel Cap, Round
25	638-0017	LH Axle Assembly, .75 Diameter
26	638-0018	RH Axle Assembly, .75 Diameter
27	719-0525B	Cast Iron Pivot Bar w/ Fittings, .75
28	712-0431	Flange Lock Nut, 3/8-16
29	714-0162	Cotter Pin
30	726-0341	Push Cap, .750
31	736-0242	Bell Washer, .34 x .872
32	736-0316	Flat Washer, .78 x 1.59 x .06
33	736-0285	Flat Washer, .635 x 1.589 x .06
34	738-1011	Shoulder Screw, .5 x 2.2, 3/8-16
35	710-0643	Hex Bolt, 5/16-18 X 1
36	634-0183	Wheel Assembly Complete, 16 x 6.5 x 8
	634-0182	Rim Only w/ Plastic Bearing
	734-0255	Air Valve (Not Shown)
	734-1727	Tire Only, Square Shoulder
37	734-2290	Hub Cap
38	783-0653E	Steering Support Bracket
39	738-0143	Shoulder Screw, 3/8-16
40	736-0331	Bell Washer, .39 x 1.13 x .062
41	710-04095	Hex Bolt 3/8-16 x 1.0 Special

Models G808H & Q808H

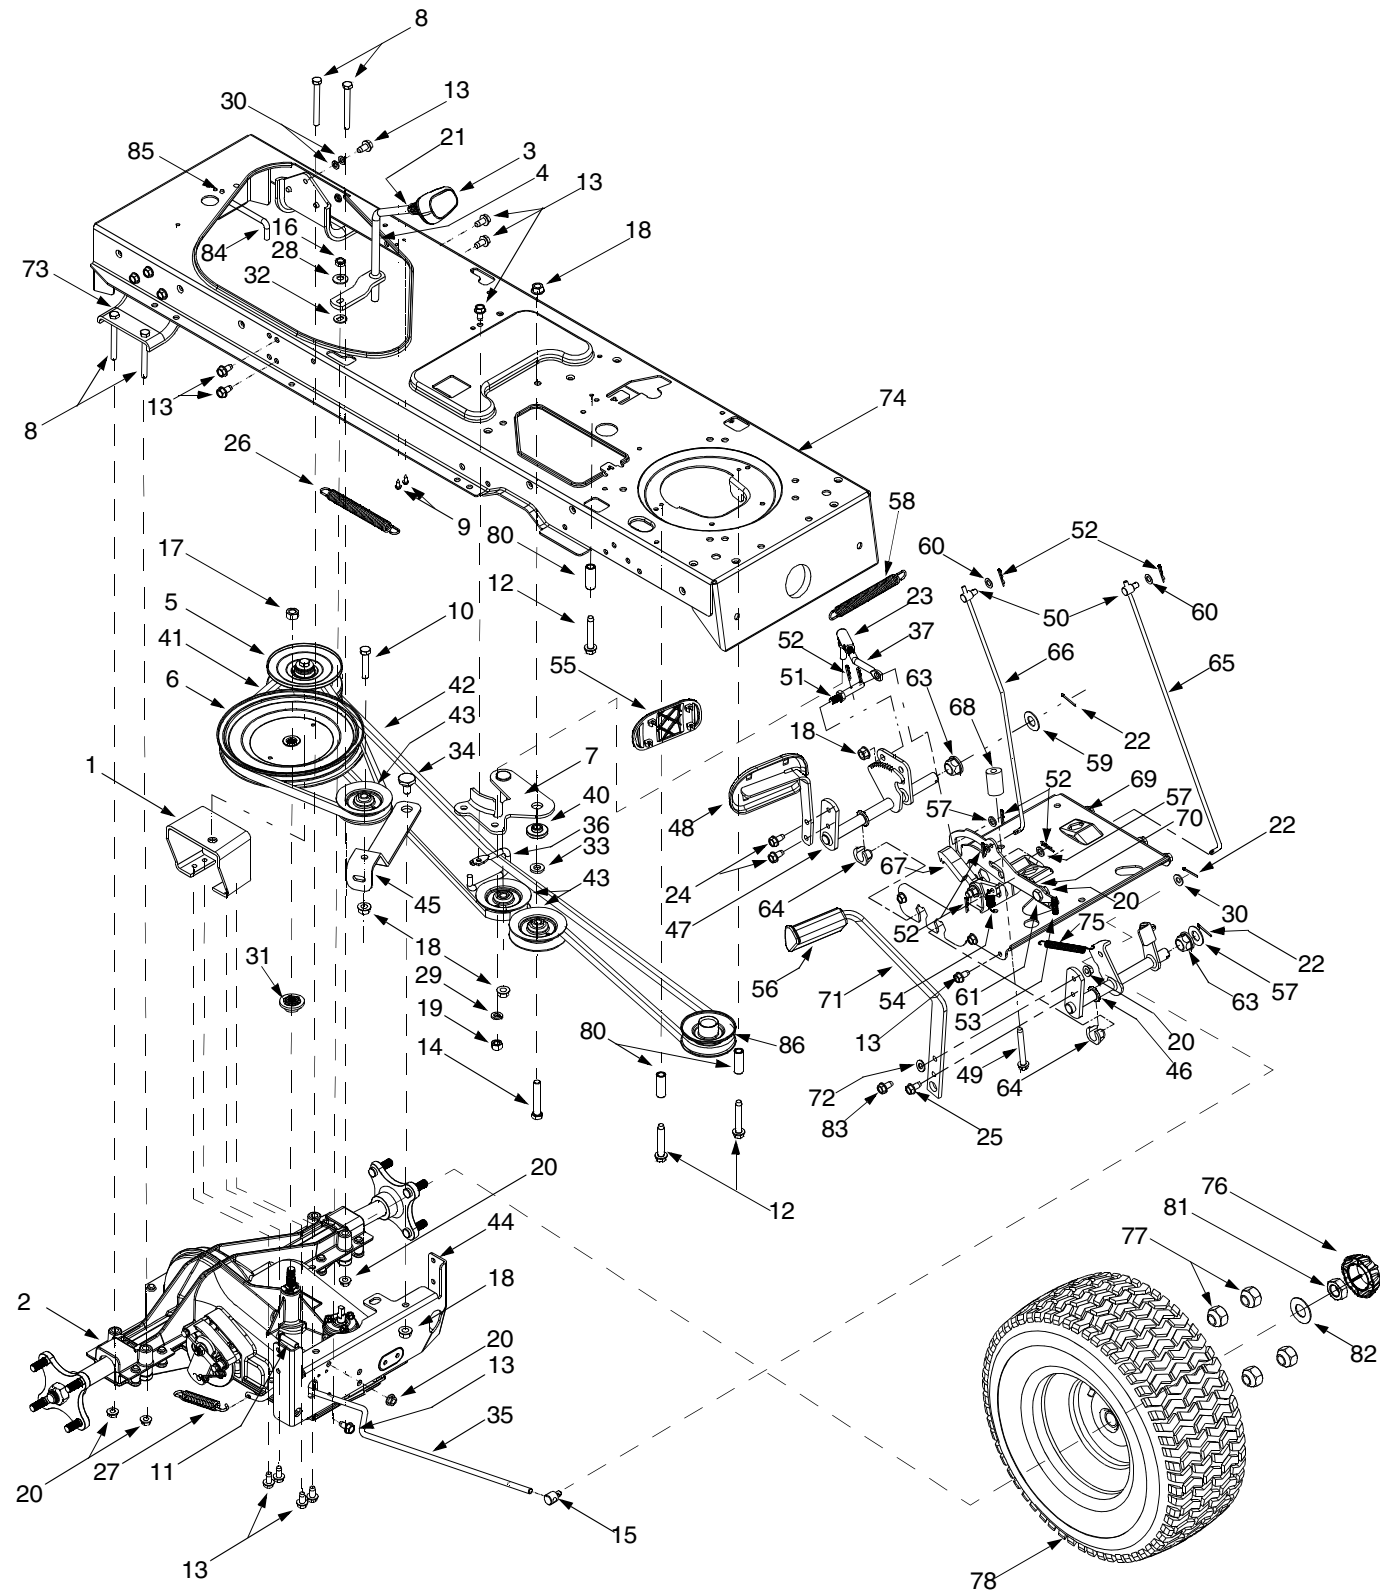


Models G808H & Q808H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	618-0375	Variable-speed Bracket Assembly	45	783-0669	Idler Bracket
2	618-0376	Two-speed Transmission Assembly	46	647-0031B	Brake Control Shaft Assembly
3	631-0009A	Shifter Knob	47	647-0032	Speed Control Shaft Assembly
4	647-0037	Shift Lever	48	683-0266	Drive Pedal Assembly
5	656-0050	Variable-speed Pulley Assembly	49	710-1135	Self Tapping Screw, 5/16-18 x 2.5
6	756-0665	Transmission Pulley, 8.5	50	711-0736	Ferrule, 1/4-20
7	683-0251	Double-Idler Bracket	51	711-1363	Pin, 3/8-16 x 2.43
8	710-0176	Hex Cap Screw, 5/16-18 x 2.75	52	714-0104	Cotter Pin
9	710-0227	Self Tapping Screw, #8-18 x .5	53	732-0437	Compression Spring, .34 OD x 1.0
10	710-0347	Hex Cap Screw, 3/8-16 x 1.75	54	732-0955	Extension Spring, .5 OD x 1.41
11	710-0805	Hex Cap Screw, 5/16-18 x 1.5	55	735-0662	Drive Pedal Pad
12	710-0809	Self-tapping Screw, 1/4-20 x 1.25	56	735-3049	Brake Pedal Pad
13	710-0726	AB Screw, 5/16-12 x .75	57	736-0140	Flat Washer, .281 x .5 x .0625
14	710-3011	Hex Cap Screw, 3/8-16 x 2.25	59	736-0187	Flat Washer, .64 x 1.24 x .06
15	711-0677	Ferrule, 5/16 x .312 Dia.	60	736-0204	Flat Washer, .344 x .062 x .03
16	712-0181	Hex Jam Nut, 3/8-16	61	738-0155	Shoulder Screw, .437 x 1.62
17	712-0702	Hex Flange Nut, 7/16-20	62	738-0507B	Shoulder Screw, .5 x .434
18	712-0431	Flange Lock Nut, 3/8-16	63	741-0225	Hex Flange Bearing
19	712-0798	Hex Nut, 3/8-16	64	741-3065B	Split Hex Flange Bearing
20	712-3004A	Flange Lock Nut, 5/16-18	65	747-04096	Cruise Control Rod
21	712-3008	Hex Jam Nut, 3/8-16	66	747-04093	Brake Lock Control Rod
22	714-0111	Cotter Pin	67	748-0413	Cruise Latch
23	723-3018	Ball Joint, 3/8-24	68	748-0415B	Spacer, 5/16 x 1.54
24	710-1260A	LD Screw 5/16-18 x 0.75	69	783-0653F	Steering Support Bracket
25	710-0650	TT Screw 5/16-18 x 0.875	70	783-0732	Drive Lockout Bracket
26	732-0384	Extension Spring, .62 Dia. x 6.12	71	783-0773	Brake Pedal
27	732-0716	Extension Spring, .59 OD x 4.0	72	736-3008	Flat Washer, .344 x .750 x .120
28	736-0105	Bell Washer, .401 x .870 x .063	73	783-0693	Axle Bracket
29	736-0169	Lock Washer, 3/8	74	683-0304A	Lower Frame Assembly
30	736-0275	Flat Washer, 5/16	75	732-0963	Extension Spring, .5 OD x 6.37
31	718-0771	Pulley Hub, 1/2 Spline	76	731-2290	Hub Cap
32	736-0642	Flat Washer, .44 x .75 x .06	77	712-3050	Lug Nut, 7/16-14
33	736-3010	Flat Washer, .407 x .812 x .135	78	634-0132	Wheel Assembly Complete, 23 x 9.5 x 12
34	738-0322	Shoulder Screw, .625 Dia. x .21		634-0182	Rim Only
35	747-1122	Brake Rod		734-0255	Air Valve
36	747-1123A	Belt Guard		734-1728	Tire Only, Square Shoulder
37	747-1127	Idler Adjustment Rod, 3/8	79	750-0768	Split Spacer, .25 x .37 x 1.32
38	710-1026	Self-tapping Screw, 1/4-20 x 1.75	80	750-0566A	Spacer, .372 x .26 x 1.03
39	747-1185	Transmission Belt Guard Rod	81	712-3026	Jam Nut, 3/4-16
40	738-0372B	Shoulder Spacer, .380 ID	82	736-0316	Flat Washer, .78 x 1.59 x .06
41	754-0468	Variable-speed Belt	83	710-1611B	TT Screw, 5/16-18 x .75
42	754-0467	Drive Belt	84	747-1185	Transmission Belt Guard Rod
43	756-0981A	Flat Idler, 2.75 OD	85	710-0599	Self Tapping Screw, 1/4-20 x .5
44	783-0667B	Transmission Torque Bracket	86	756-0639A	Engine Pulley, 3.56"

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Models G808H & Q808H

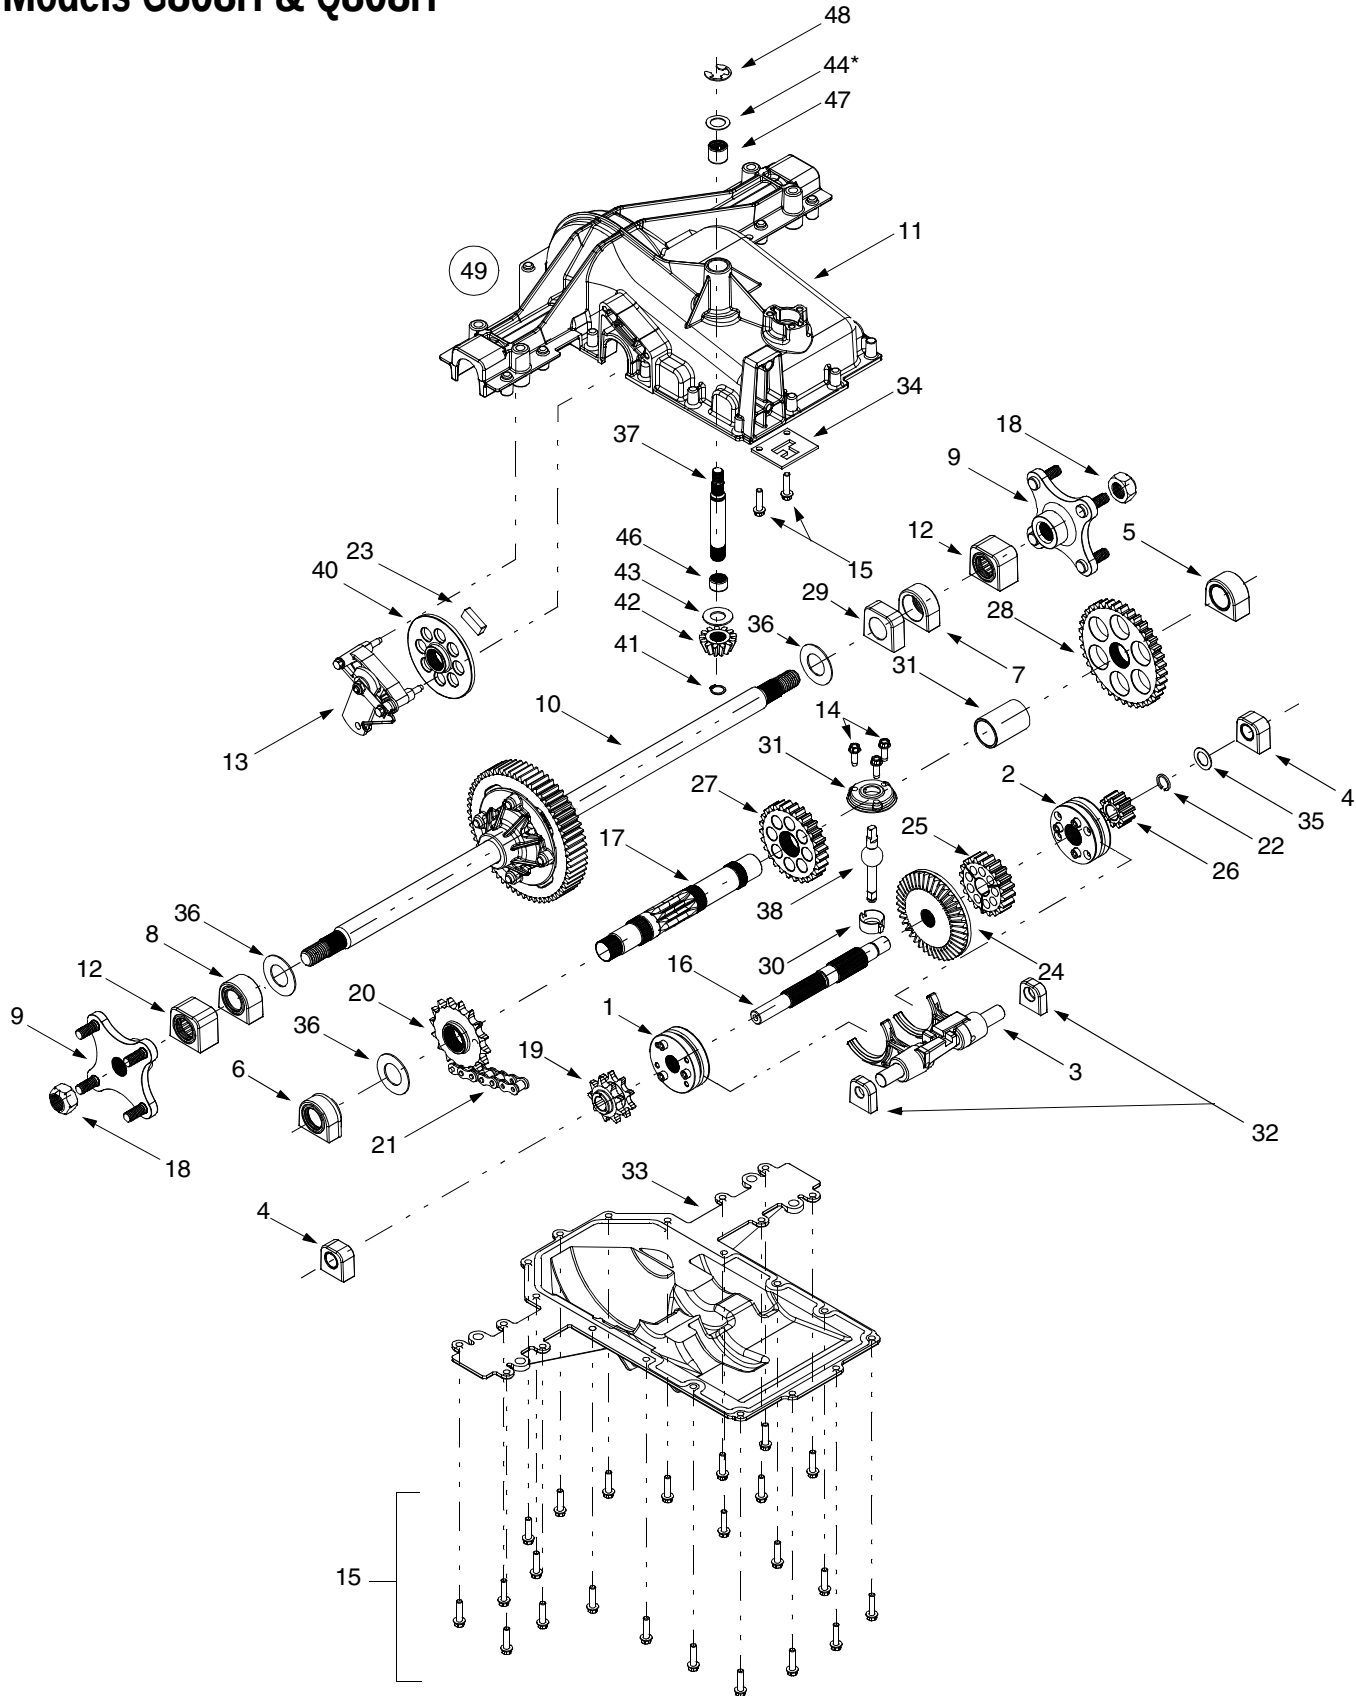

Models G808H & Q808H


REF. NO.	PART NO.	DESCRIPTION
1	618-0225	Reverse Collar Assembly
2	618-0226	Hi-Lo Collar Assembly
3	618-0227A	Shift Fork Assembly
4	618-0284	Detent Block Assembly
5	618-0285	Output Bearing Block Assembly
6	618-0286	Output Seal Bearing Block Assembly
7	618-0287	Inboard Sealed Axle Block Assembly
8	618-0302	Inboard Sealed Axle Block Assembly
9	618-0365	Wheel Hub Assembly
10	618-0368	Differential Axle Assembly
11	719-0379A	Upper Housing
12	641-0002A	Axle Bearing Block Assembly
13	661-0012	Brake Assembly
14	710-0642	Self-tapping Screw, 1/4-20 x .75
15	710-0788	Self-tapping Screw, 1/4-20 x 1.0
16	711-1051A	Drive Shaft
17	711-1216	Output Shaft
18	712-1329	Nut, 3/4-16
19	713-0446	9-tooth Sprocket
20	713-0447	16-tooth Sprocket
21	713-0448	22-link Chain, .625
22	716-0131	External Snap Ring
23	717-0678	Brake Pad
24	717-1438	41-tooth Bevel Gear
25	717-1439	20-tooth Spur Gear
26	717-1440	10-tooth Spur Gear
27	717-1441	27-tooth Spur Gear
28	717-1442	37-tooth Spur Gear
29	718-0500	Inner Axle Bearing Block
30	718-0504	Shifter Insert
31	718-0505	Shifter Cover
32	718-0537	Shifter Bearing Block
33	719-0385	Lower Housing
34	718-0540	Lockout Plate
35	736-0337	Flat Washer, 5/8 x 1.0
36	736-3046A	Flat Washer, 1.01 x 1.86 x .060
37	711-1235	Input Shaft
38	747-1140	Shift Lever
39	750-1033A	Spacer, 1.13 x 1.38 x 1.968
40	761-0215	Disc Brake
41	716-0114	Retaining Ring, .56
42	717-1463	13-tooth Bevel Gear
43	736-0335	Flat Washer
44	736-0336	Flat Washer, 5/8 x 1.0 x .030*
	736-0337	Flat Washer, 5/8 x 1.0 x .040*
	736-0349	Flat Washer, 5/8 x 1.0 x .020*
46	741-0335	Needle Bearing
47	741-0696	Needle Bearing
48	716-0231	E-ring, .75
49	618-0376	Transmission Assembly Complete

NOTE: Transmission has a grease capacity of 32 oz. Order part number 737-0148.

NOTE: Upon reassembling transmission input shaft for any reason, refill its cavity with approximately 2/3 oz. of grease. Order part number 737-0289.

*Use applicable flat washer (12a, 12b or 12c) in this application allowing proper end-play as instructed in Service Manual.

Models G808H & Q808H

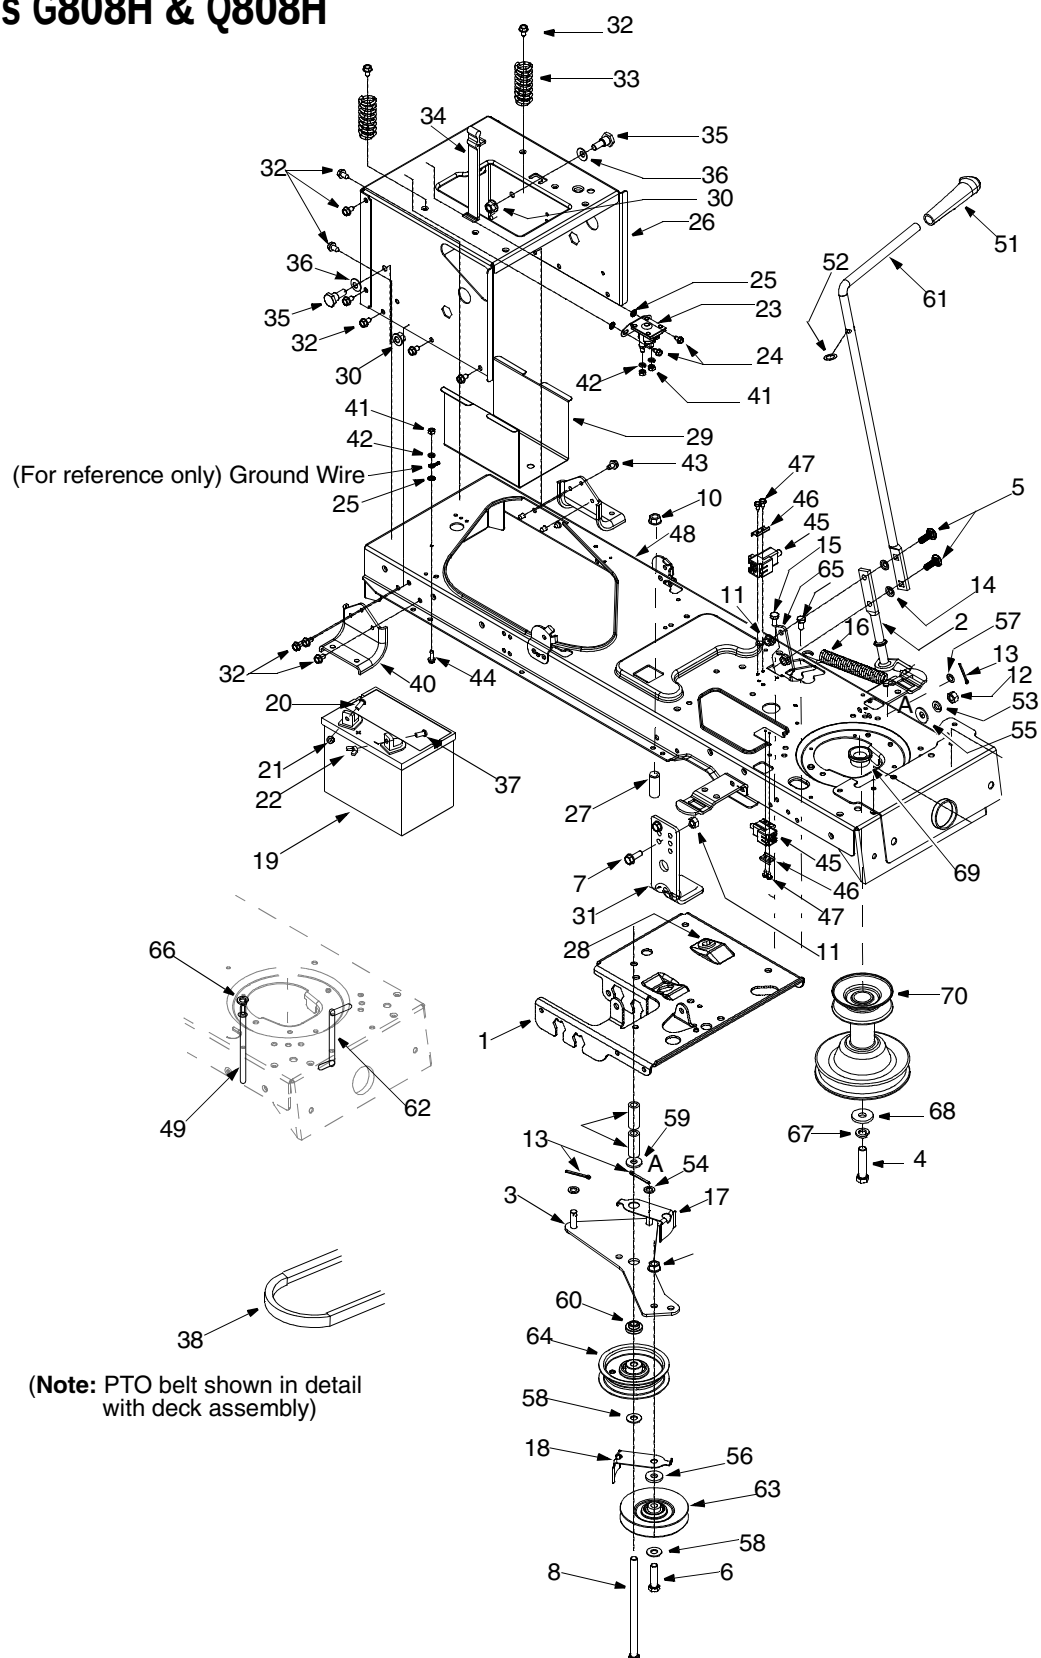


Models G808H & Q808H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	783-0653E	Steering Support Bracket	36.	736-0407	Bell Washer, .45 x 1.0 x .062
2.	647-0064	PTO Lever Engagement Assembly	37.	738-1132	Shoulder Screw
3.	683-04060	Engagement Plate Assembly	38.	754-0228	PTO Belt (shown on next page)
4.	710-1002	Hex Bolt 7/16-20 x 2.0	40.	783-0693	Axle Bracket
5.	710-0276	Carriage Screw 5/16-18 x 1.0	41.	712-3006	Hex Nut 1/4-20
6.	710-0344	Hex Screw 3/8-16 x 1.5	42.	736-0329	Lock Washer
7.	710-1238	Hex Head Washer Screw, 5/16-18 x .875	43.	710-0607	TT Screw 5/16-18 x 0.5
8.	710-3261	Hex Screw 3/8-16 x 7.0	44.	710-0642	TT Screw 1/4-20 x 0.75
10.	712-0431	Flange Lock Nut	45.	725-1657A	Switch
11.	712-3004A	Flange Lock Nut	46.	17962	Switch Plate
12.	712-3010	Hex Nut	47.	710-0224	AB Screw #10-16 x 0.5
13.	714-0470	Cotter Pin	48.	683-0304C	Lower Frame Assembly
14.	726-0201	Speed Nut	49.	711-1428	Belt Guard Pin
15.	710-3025	Hex Cap Screw 5/16-18 x .625	50.	712-0229	Push Nut Retainer
16.	732-0944	Extension Spring	51.	731-2111A	PTO Knob
17.	732-0991A	Belt Guard	52.	736-0108	Flat Washer
18.	732-1013	Belt Guard	53.	736-0119	Lock Washer
19.	725-1706	12 V Battery	54.	736-0140	Flat Washer
20.	710-0751	Hex Cap Screw, 1/4-20 x .62	55.	736-0242	Bell Washer
21.	712-0271	Hex Sems Nut, 1/4-20	56.	736-0258	Flat Washer
22.	712-3087	Wing Nut, 1/4-20	57.	736-0275	Flat Washer
23.	725-1426	Solenoid, 12-Volt, 100 Amp	58.	736-0300	Flat Washer
24.	710-0599	Self Tapping Screw, 1/4-20 x .5	59.	736-3072	Flat Washer
25.	736-0222	Lock Washer, 1/4	60.	738-0372B	Shoulder Spacer
26.	783-1033A	Hitch Plate	61.	747-1112D	Deck Engagement Handle
27.	748-0415B	Spacer	62.	747-1243	Belt Keeper Rod
28.	741-0708	Hex Split Flange Bearing	63.	756-0487	Idler Pulley
29.	783-0349	Battery Tray	64.	756-0627B	Idler Pulley
30.	712-0459	Flange Lock Nut, 7/16-20	65.	783-0744A	Bracket
31.	783-0891B	Deck Stop	66.	736-0119	Lock Washer
32.	710-0604A	Self Tapping Screw, 5/16-18 x .625	67.	736-0171	Lock Washer
33.	732-3080	Compression Spring, 1.28 x 3.5	68.	736-0322	Flat Washer
34.	723-0444	Battery Strap	69.	750-0956	Spacer
35.	738-1020	Shoulder Screw, .625 x .5, 7/16-20	70.	756-1182A	Engine Pulley

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Model G808H & Q808H

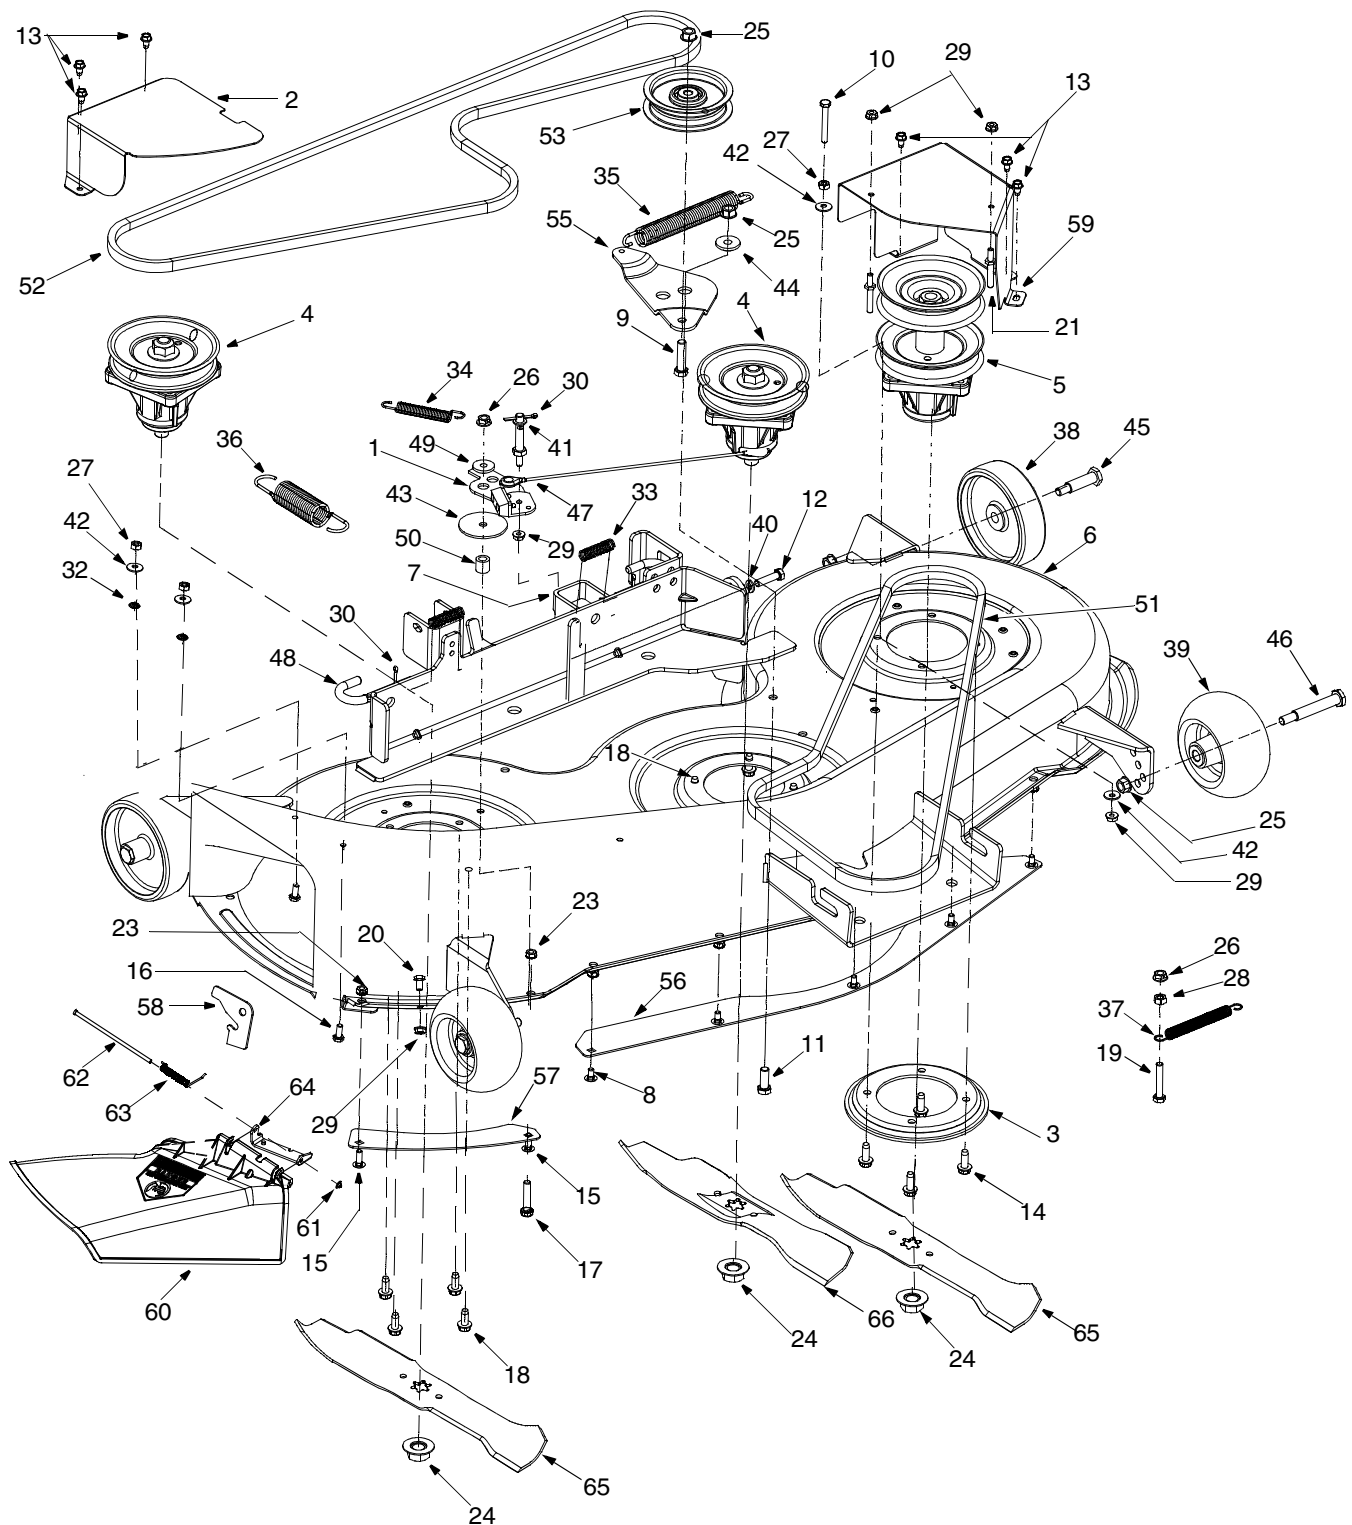

Model G808H & Q808H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	17116	Brake Assembly: Deck	33.	732-0306	Compression Spring, .406 x .531 x 1.75
2.	17258C	Deck Belt Cover	34.	732-0429A	Extension Spring
3.	17982	Spindle Reinforcement Plate	35.	732-0594A	Extension Spring, .91 x 7.3
4.	618-0430A	Spindle Assembly, 5.0 Dia.	36.	732-0934	Extension Spring
	756-1187	Pulley Only	37.	732-1165	Extension Spring
5.	618-0595	Double Pulley Spindle Assembly	38.	734-0973	Deck Wheel
	756-0603	Double Pulley Only	39.	734-3058B	Deck Wheel
6.	683-0199C	SD Deck Assembly: 46 inch	40.	736-0119	Lock Washer, 5/16
7.	683-0254	Deck Adjustment Bracket Assembly	41.	736-0140	Flat Washer
8.	710-0167	Carriage Screw, 1/4-20 x .50	42.	736-0270	Bell Washer, .265 x .75 x .062
9.	710-0344	Hex Cap Screw, 3/8-16 x 1.5	43.	736-0418A	Flat Washer
10.	710-0501	Hex Cap Screw, 1/4-20 x 2.0	44.	738-0347	Shoulder Spacer
11.	710-0514	Hex Cap Screw, 3/8-16 x 1.0	45.	738-0373	Shoulder Screw
12.	710-0528	Hex Cap Screw, 5/8-18 x 1.25	46.	738-3056	Shoulder Screw
13.	710-0599	Self-tapping Screw, 1/4-20 x .5	47.	746-1107	Bracket Cable
14.	710-0650	Self-tapping Screw, 15/16-18 x .875	48.	747-1116	Deck Release Pin
15.	710-0703	Hex Screw, 1/4-20 x .75	49.	748-0234	Shoulder Spacer
16.	710-0751	Hex Cap Screw, 1/4-20 x .62	50.	750-1320	Spacer
17.	710-0805	Hex Bolt 5/16-18 x 1.5	51.	754-0228	V-Belt
18.	710-1260A	Self-tapping Screw, 5/16-18 x .75	52.	754-0349	Deck Belt, Poly
19.	710-3180	Hex Bolt 5/16-18 x 1.75	53.	756-0627B	Idler Pulley, 3.5
20.	711-04069	Grasscatcher Pin	55.	783-0139A	Idler Bracket
21.	711-0993	Belt Guard Pin	56.	783-0141	Center Deck Skirt
22.	711-1554	Pin	57.	783-0142	RH Deck Skirt
23.	712-0271	Hex Sems Nut, 1/4-20	58.	783-1025	Chute Stop
24.	712-0417A	Hex Flange Nut, 5/8-18	59.	783-1347A	LH Belt Cover
25.	712-0431	Flange Lock Nut, 3/8-16	60.	731-1032B	Chute Deflector: Side Discharge
26.	712-3004A	Flange Lock Nut	61.	726-0106	Speed Nut
27.	712-3006	Hex Nut, 1/4-20	62.	711-0792	Hinge Pin
28.	712-3010	Hex Nut 5/16-18	63.	703-1693A	Mounting Bracket
29.	712-3027	Hex Flange Lock Nut, 1/4-20	64.	732-0602	Torsion Spring
30.	714-0470	Cotter Pin, 1/8 x 1.25	65.	742-0611	Blade: 16.28" Star
31.	717-1553B	Deck Adjustment Gear	66.	742-0612	Blade: 14.88" Star
32.	726-0233	Push Nut. .25 x .5			

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Safety & Decorative Labels

