




Illustrated Parts List

AutoDrive™ Lawn Tractor
Model M604F

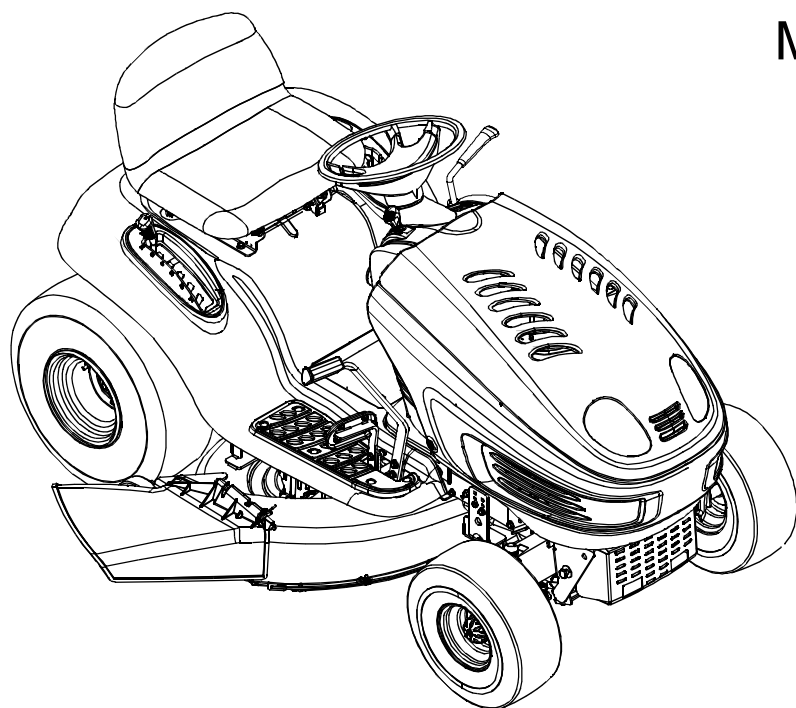

IMPORTANT: READ SAFETY RULES AND INSTRUCTIONS CAREFULLY

Warning: This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator. In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester for the muffler is available through your nearest engine authorized service dealer or contact the service department, P.O. Box 361131 Cleveland, Ohio 44136-0019.


MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

PRINTED IN U.S.A.

FORM NO. 769-00374
(06/2002)

SECTION 12: MODEL M604F PARTS LIST

B&S OHV Single

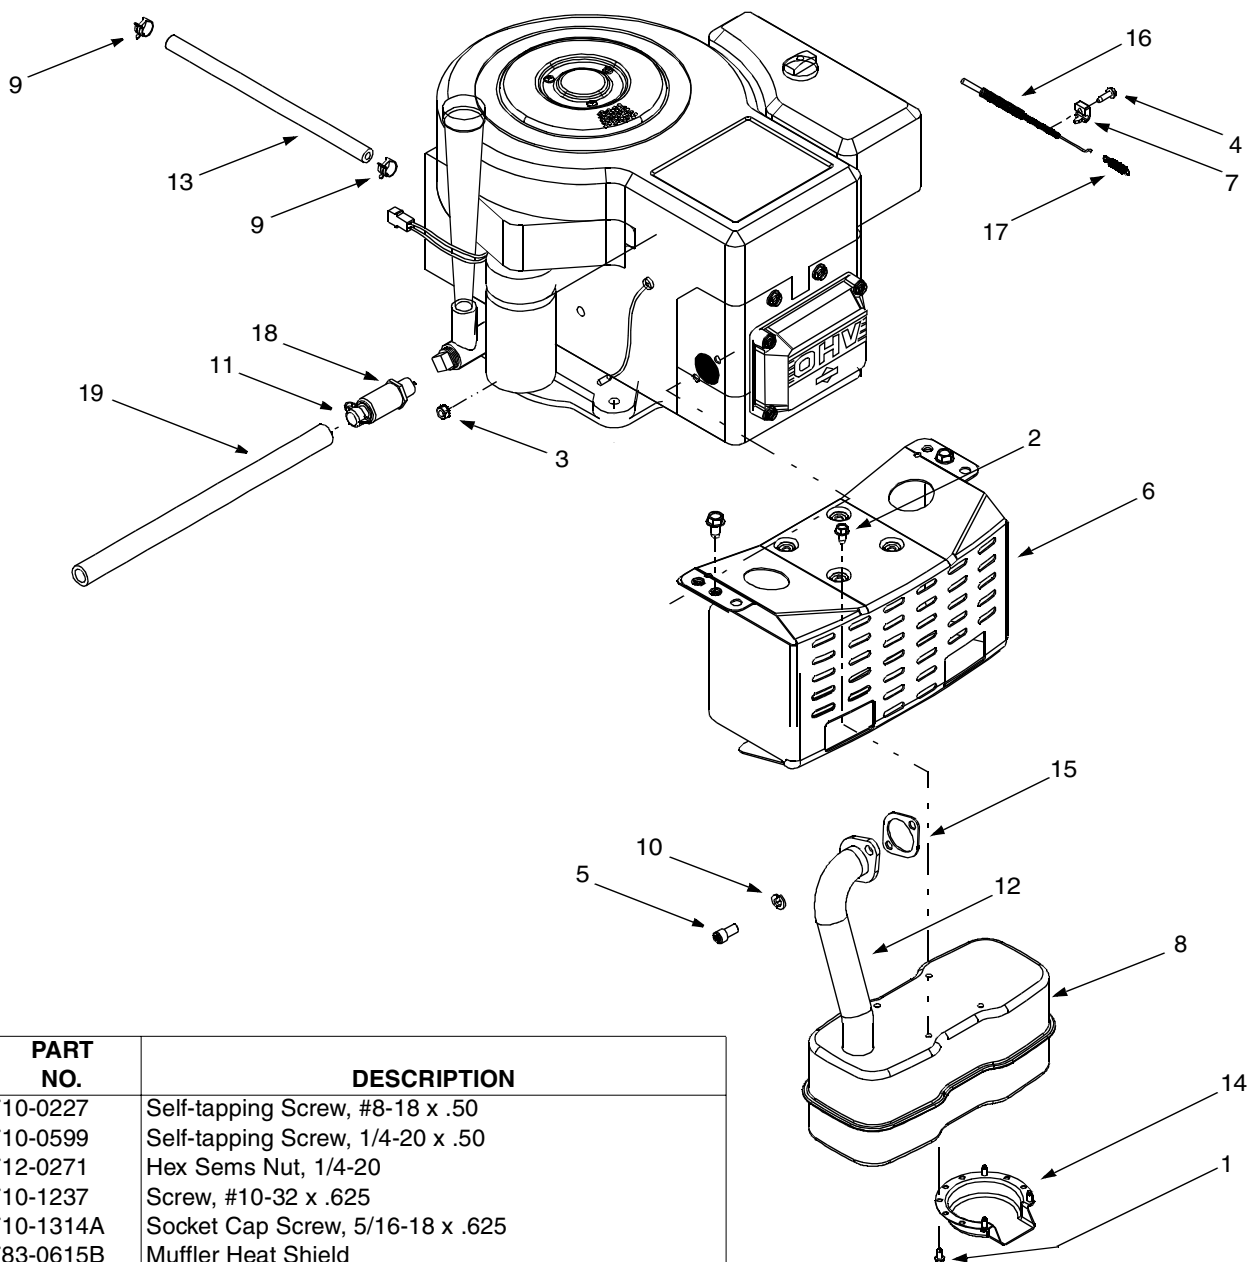

REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Self-tapping Screw, #8-18 x .50
2	710-0599	Self-tapping Screw, 1/4-20 x .50
3	712-0271	Hex Sems Nut, 1/4-20
4	710-1237	Screw, #10-32 x .625
5	710-1314A	Socket Cap Screw, 5/16-18 x .625
6	783-0615B	Muffler Heat Shield
7	751B213146	Casing Clamp
8	751-0617	Muffler, Single Inlet
9	726-0205	Hose Clamp
10	736-0119	Lock Washer, 5/16
11	751-3142	Oil Drain Cap
12	751-0619	Exhaust Pipe
13	751-0535	Fuel Line Hose
14	751-0564	Muffler Deflector
15	721-0208	Exhaust Gasket
16	746-1084	Throttle Cable
17	732-0966	Extension Spring, .275 x 1.25
18	751-3140	Oil Drain Valve
19	751-3141	Oil Drain Hose


This technical drawing is an exploded view of a vehicle headlight assembly. It shows the following components and their assembly relationships:

- 13**: The main headlight housing, shown at an angle.
- 11**: A lens or cover for the side light.
- 43**: A mounting bracket or ring for the side light.
- 40**: A small fastener or pin.
- 21**: A mounting bracket for the main headlight.
- 4**: A mounting bracket or ring for the main headlight.
- 12**: A mounting bracket or ring for the main headlight.
- 2**: A mounting bracket or ring for the main headlight.
- 32**: A mounting bracket or ring for the main headlight.
- 28**: A small fastener or pin.
- 24**: A small fastener or pin.
- 25**: A small fastener or pin.
- 41**: A small fastener or pin.
- 38**: A small fastener or pin.
- 23**: A small fastener or pin.
- 35**: A small fastener or pin.
- 39**: A small fastener or pin.
- 30**: A small fastener or pin.
- 29**: A small fastener or pin.
- 27**: A small fastener or pin.
- 4**: A mounting bracket or ring for the main headlight.
- 22**: A small fastener or pin.
- 19**: A small fastener or pin.
- 17**: A small fastener or pin.
- 26**: A small fastener or pin.
- 20**: A small fastener or pin.
- 34**: A small fastener or pin.
- 31**: A small fastener or pin.
- 33**: A small fastener or pin.
- 22**: A small fastener or pin.
- 42**: A small fastener or pin.
- 8**: A small fastener or pin.
- 6**: A small fastener or pin.
- 17**: A small fastener or pin.
- 20**: A small fastener or pin.
- 14**: A small fastener or pin.
- 15**: A small fastener or pin.
- 1**: A small fastener or pin.
- 37**: A small fastener or pin.
- 16**: A small fastener or pin.
- 7**: A small fastener or pin.
- 41**: A small fastener or pin.
- 3**: A small fastener or pin.
- 19**: A small fastener or pin.
- 1**: A small fastener or pin.
- 36**: A small fastener or pin.
- 16**: A small fastener or pin.
- 9**: A small fastener or pin.
- 18**: A small fastener or pin.
- 1**: A small fastener or pin.

Model M604F

REF. NO.	PART NO.	DESCRIPTION
1	710-3015	Hex Cap Screw, 1/4-20 x .75
2	710-0599	Self-tapping Screw, 1/4-20 x .5
3	712-3006	Hex Nut, 1/4-20
4	710-0895	Self-tapping Screw, 1/4-15 x .75
5	710-0924	Pan Phillips Screw, 1/4-20 x .75
6	710-0528	Hex Cap Screw, 5/16-18 x 1.25
7	712-0292	U-type Speed Nut, 1/4-20
8	712-3004A	Flange Lock Nut, 5/16-18
9	726-0201	Speed Nut
10	747-2127	Hood Latch Rod
11	731-1978	RH Head Light Lens
	731-1979	LH Head Light Lens
12	747-1132A	Hood Support Rod
13	731-1980A	Hood
14	731-1981B	LH Side Panel
15	731-1982B	RH Side Panel
16	736-0329	Lock Washer, 1/4
17	736-0342	Flat Washer, .283 x .75 x .030
18	736-0173	Flat Washer, .28 x .74 x .063
19	736-3078	Flat Washer, .349 x 1.0 x .063
20	710-0809	Self-tapping Screw, 1/4-20 x 1.25
21	783-0808A	Hood Heat Shield w/o Intake Bellow
22	710-0604A	Self-tapping Screw, 5/16-18 x .625
23	710-1017	Torx Self-tapping Screw, 1/4-14 x .625
24	710-3217	Torx Screw, #8-32 x .375
25	712-0142	Hex Nut, 8-32
26	731-0069C	Dash Panel, 4-style
27	731-0072	Parking Brake Button
28	731-1857	Throttle Control Lever
29	731-2106	Cruise Control Button
30	747-1155	Brake/Cruise Pivot Rod
31	749-1087A	Dash Support Tube
32	731-2232	Intake Bellow
33	751-0659C	Fuel Tank, 2-gallon
34	751-0603	Fuel Cap
35	725-1745	Ignition Key w/ plastic cover
	725-1744	Ignition Key w/o plastic cover
36	731-2272	Heat Shield
37	783-1000A	Grille Support Bracket
38	725-1758	Systems Indicator Monitor /Ammeter
39	725-1741	Ignition Switch
40	625-0051	Headlight Assembly
41	747-1303	LH Rod
42	747-1304	RH Rod
43	731-1995	RH Headlight Reflector
44	731-1996	LH Headlight Reflector
—	629-0469A	Headlight Wire Harness
—	629-1072	Tractor Wire Harness


Model M604F

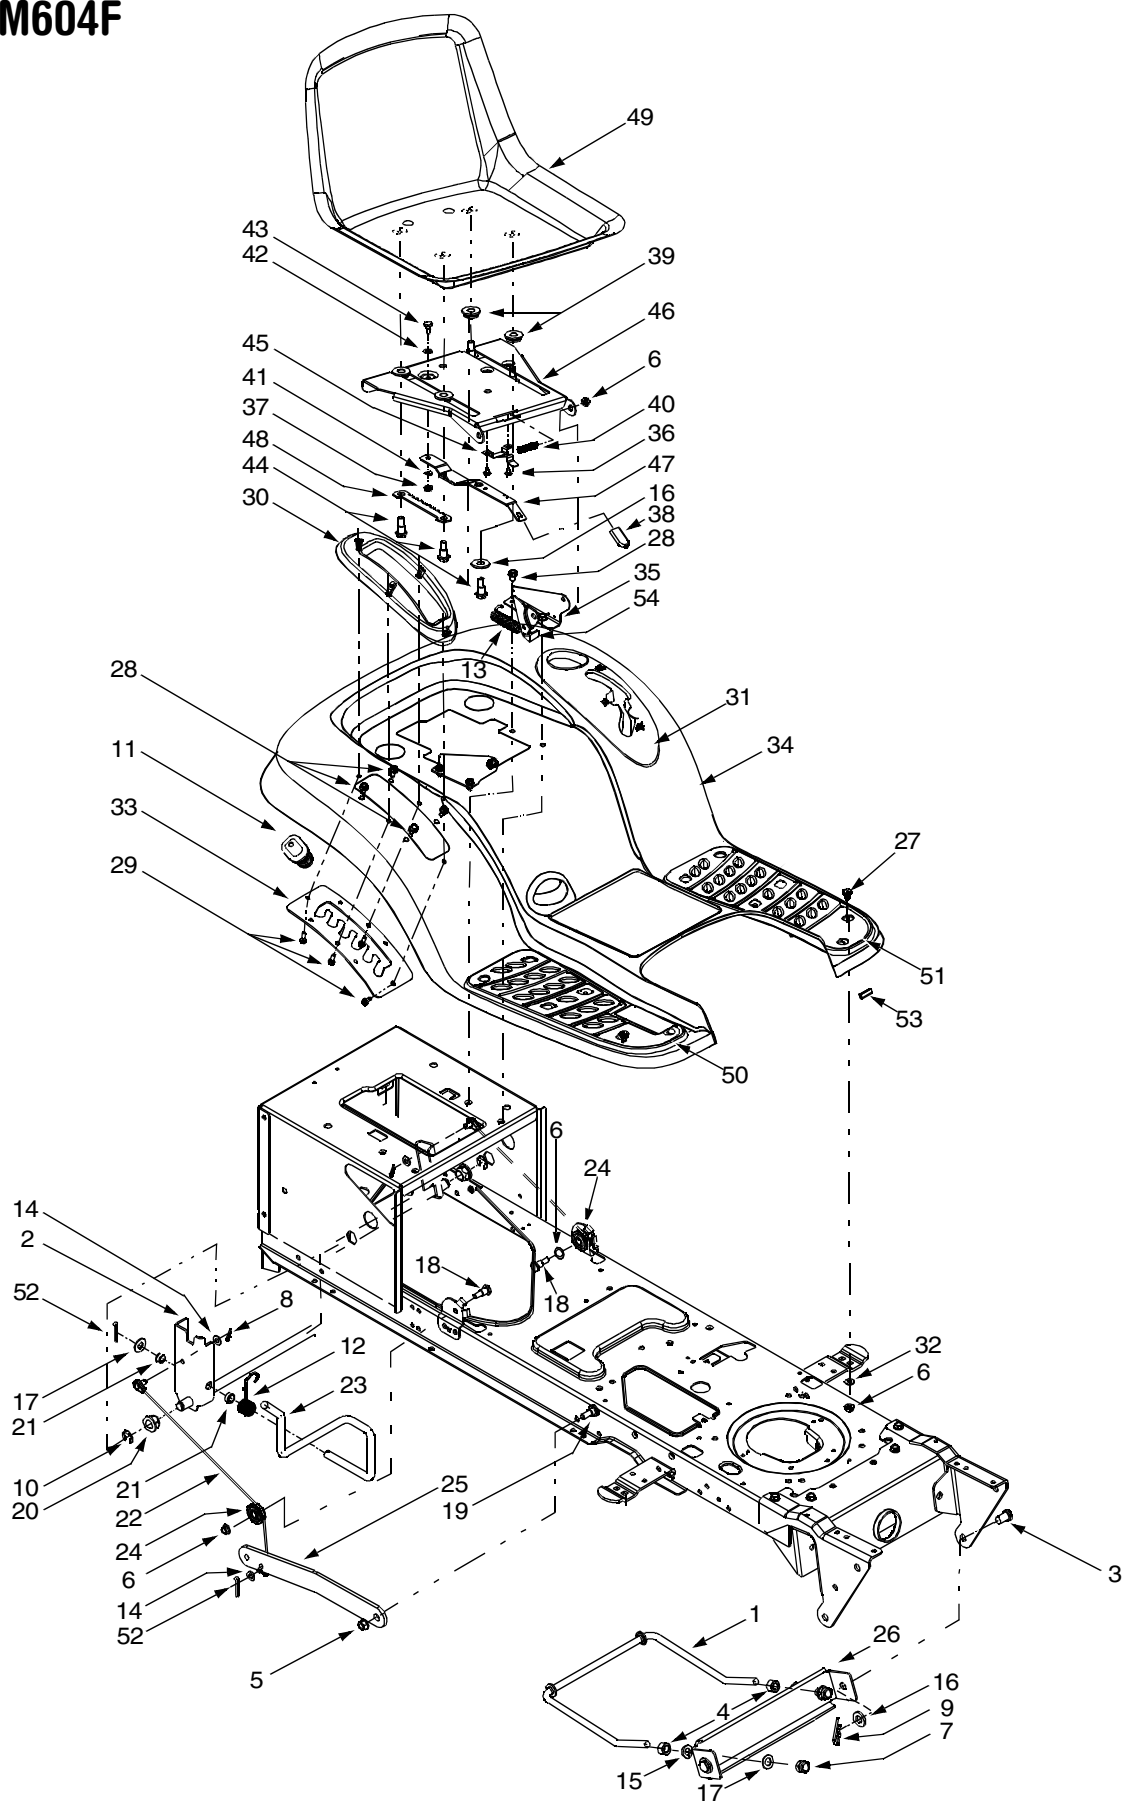

Model M604F


REF. NO.	PART NO.	DESCRIPTION
1	747-1130	Deck Stabilizer Rod
2	683-0197	Lift Shaft Assembly
3	711-0332	Clevis Pin, .5 x .78
4	712-0206	Hex Nut, 1/2-13
5	712-0431	Flange Lock Nut, 3/8-16
6	712-3004A	Flange Lock Nut, 5/16-18
7	712-3083	Hex Nut, 1/2-13
8	714-0104	Internal Cotter Pin
9	714-0145	Internal Cotter Pin
10	716-0106	E-ring
11	720-0311	Handle Grip
12	732-0874	Torsion Spring
13	732-1027	Extension Spring, .872 x 3.4
14	736-0275	Flat Washer, 5/16
15	736-0921	Lock Washer, 1/2
16	736-3019	Flat Washer, .31 x 1.062 x .134
17	736-3084	Flat Washer, .51 x 1.12 x .06
18	738-0138A	Hex Cap Screw, 5/16-18 x .62
19	738-0143	Shoulder Screw, 3/8-16
20	741-0225	Hex Flange Bearing
21	741-0715	Snap Flange Bearing
22	746-0968	Lift Cable, 16.16
23	747-1111A	Lift Handle
24	756-1154	Roller Pulley
25	783-0678A	Arm Lift
26	783-0720A	Deck Stabilizer Bracket
27	710-0260A	Carriage Bolt, 5/16 x .62
28	710-0604A	Self-tapping Screw, 5/16-18 x .625
29	710-0895	Self-tapping Screw, 1/4-15 x .75
30	731-1990	Lift Lever Cover
31	731-2104A	Shift Cover w/ Cup Holder
32	736-3078	Flat Washer, .349 x 1.0 x .063
33	783-0677	Lift Adjustment Bracket
34	783-1279	Fender
35	783-1489	Seat Mounting Bracket
36	710-1268	Screw, #10-16 x .375
37	712-3027	Hex Flange Lock Nut, 1/4-20
38	720-0309A	Seat Adjuster Grip
39	731-1989	Spacer
40	732-0499	Compression Spring, .41 x 1.5
41	736-0175	Spring Washer, .265 x .562 x .025
42	736-0204	Flat Washer, .344 x .62 x .03
43	738-0137A	Shoulder Screw, .340 x .285, 1/4-20
44	738-1007	Shoulder Screw, .50 x .50, 3/8-16
45	783-0611	Seat Stop
46	783-0738	Seat Pivot Bracket
47	783-0739	Seat Adjustment Lever
48	783-0753	Seat Adjustment Selector
49	757-0365A	Medium Back Seat, Yellow
50	735-0656	RH Foot Pad
51	735-0657	LH Foot Pad
	726-3046	Foot Pad Clips (Not Shown)
52	714-0111	Cotter Pin
53	731-0511	Trim Strip
54	783-0209	Seat Lift Bracket

Model M604F

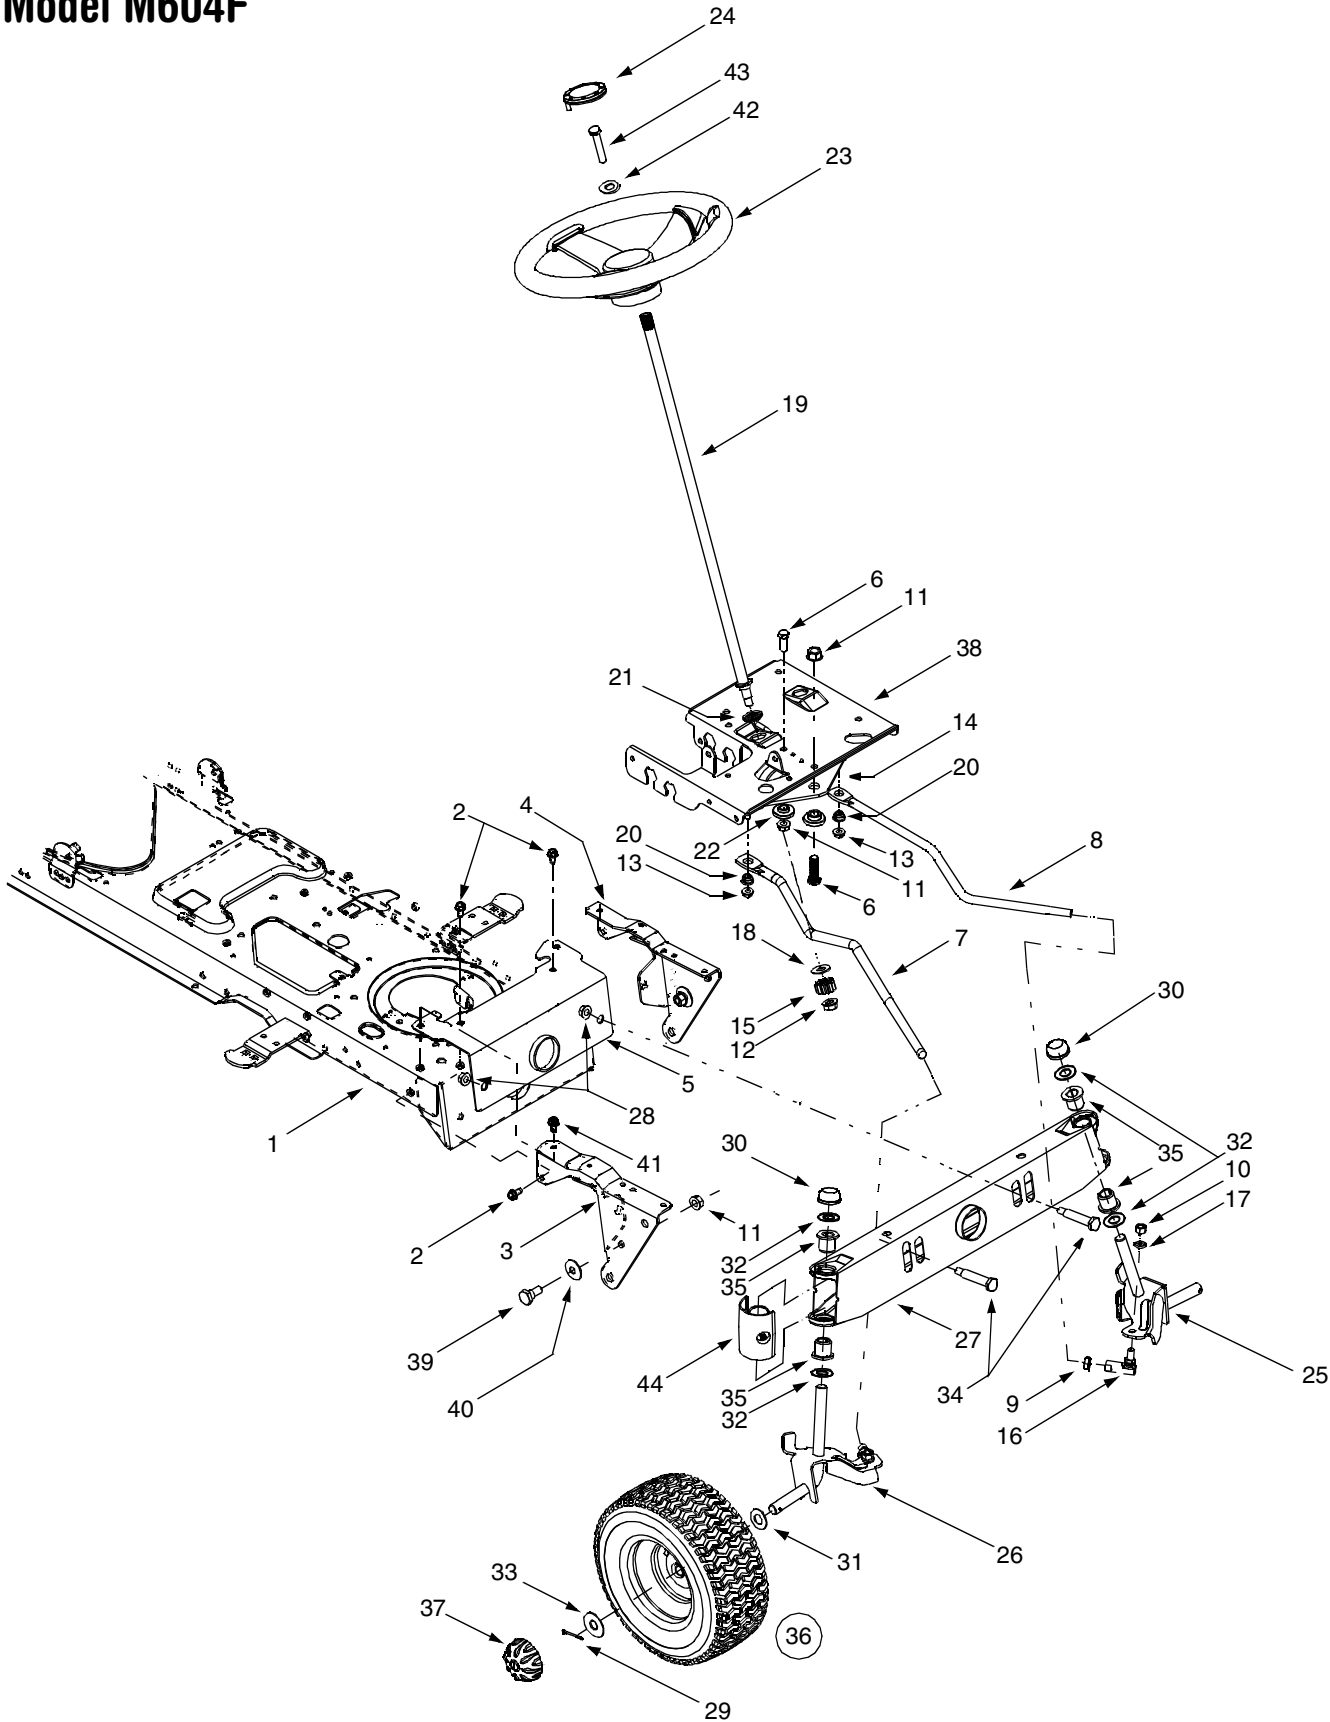

REF. NO.	PART NO.	DESCRIPTION
2	710-0604A	Self-tapping Screw, 16-18 x .625
3	783-0726A	RH Pivot Support Bracket
4	783-0727	LH Pivot Support Bracket
5	783-0728	Pivot Bar Bracket
6	710-0723	Hex Cap Screw, 3/8-16 x 1.25 (Grade 5)
7	711-1408	RH Drag Link
8	711-1655	LH Drag Link
9	712-0240	Jam Nut, 7/16-20 (Grade 2)
10	712-0241	Hex Nut, 3/8-24 (Grade 2)
11	712-0431	Flange Lock Nut, 3/8-16
12	712-0459	Flange Lock Nut, 7/16-20
13	712-3004A	Flange Lock Nut, 5/16-18
14	717-1550D	Steering Gear, 11/90 Ratio
15	717-1554	Steering Pinion Gear
16	723-0448A	Ball Joint, 7/16-20
17	736-0169	Lock Washer, 3/8
18	736-3084	Flat Washer, .51 x 1.12 x .06
19	738-1001A	Steering Shaft, .625 OD x 24.4
20	741-0475	Plastic Bushing, .38 ID
21	741-0656	Hex Flange Bearing, 5/8
22	738-0372B	Shoulder Spacer, .38 ID
23	731-2624	Steering Wheel, Soft Grip, Three Spoke
24	731-2625	Steering Wheel Cap, Round
25	638-0019	LH Axle Assembly, .625 Diameter
26	638-0020	RH Axle Assembly, .625 Diameter
27	683-0128A	Steel Pivot Bar
28	712-0431	Flange Lock Nut, 3/8-16
29	714-0470	Cotter Pin
30	726-0214	Push Cap, .625
31	736-0162	Flat Washer, .64 x 1.0 x .12
32	736-0187	Flat Washer, .64 x 1.24 x .06
33	736-0285	Flat Washer, .635 x 1.589 x .06
34	738-1011	Shoulder Screw, .5 x 2.2, 3/8-16
35	741-0659	Flange Bearing, .632 ID x .937 OD
36	634-0105A	Wheel Assembly, 15 x 6 x 6, Square Shoulder
	634-0172	Rim Assembly Only w/ Plastic Bearing
	734-0255	Air Valve (Not Shown)
	734-1731	Tire Only, Square Shoulder
37	734-2290	Deluxe Hub Cap (Ref. 33 Required)
38	783-0653E	Steering Support Bracket
39	738-0143	Shoulder Screw, 3/8-16
40	736-0331	Bell Washer, .39 x 1.13 x .062
41	710-1260A	Self-tapping Screw, 5/16-18 x .75
42	736-0242	Bell Washer, .34 x .872
43	710-0643	Hex Bolt, 5/16-18 X 1
44	731-1291A	Pivot Bar End Cap w/ Fitting

Model M604F

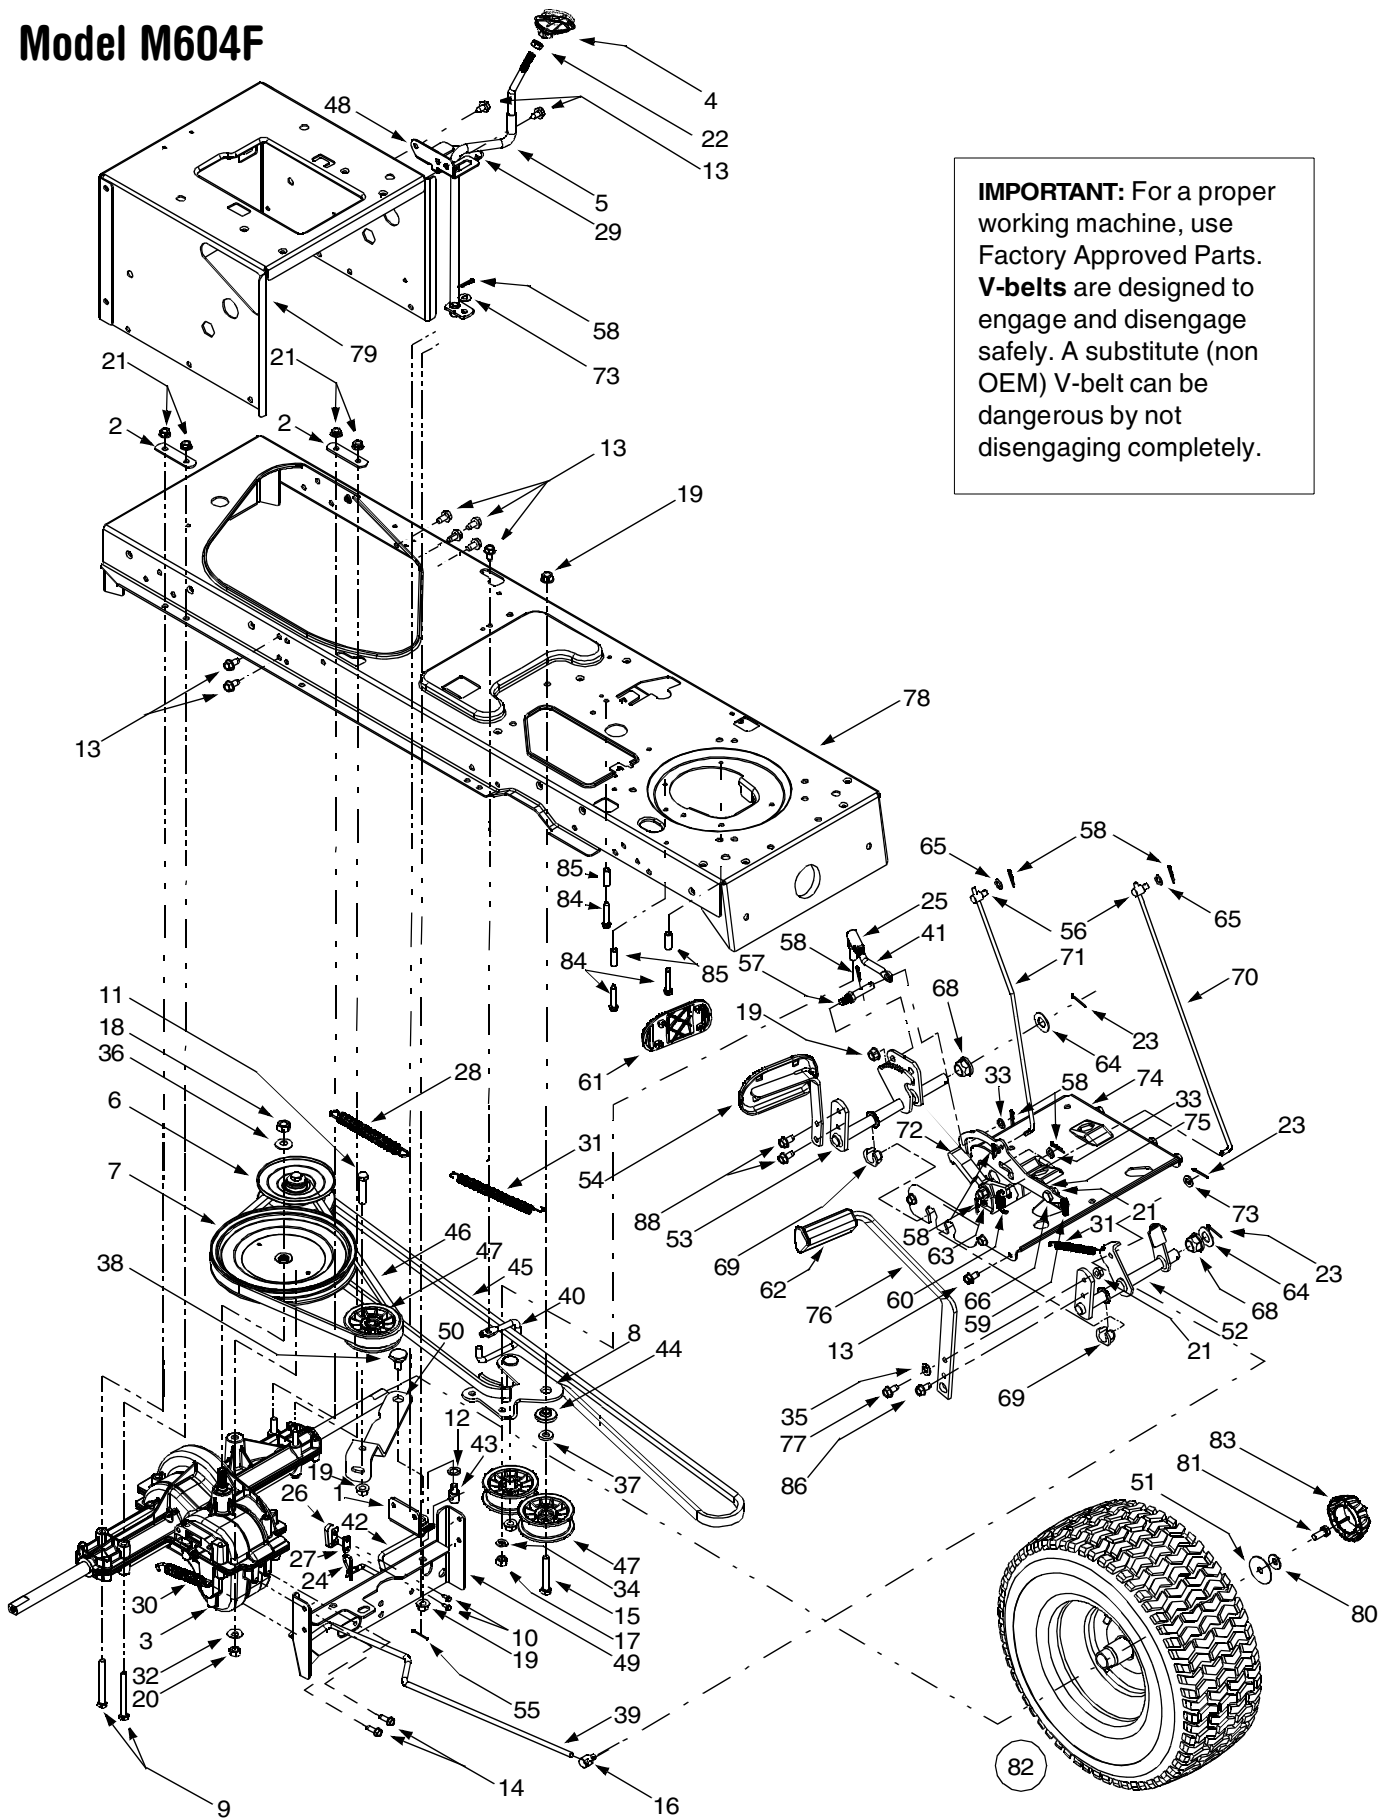

Model M604F

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	783-1015	Shift Lever Support	46	754-0468	Upper Drive Belt
2	17840	Transaxle Mounting Bracket	47	756-0981A	Flat Idler, 2.75 OD
3	618-0551	Single-speed Transmission Assembly	48	783-1016B	Speed Control Rod Bracket
4	631-0009A	Shifter Knob	49	783-0667B	Transmission Torque Bracket
5	647-0045	Shift Lever	50	783-0669	Idler Bracket
6	656-0048	Variable-speed Pulley Assembly	51	736-0430	Flat Washer, .350 x 1.59 x .062
7	656-0051A	Transmission Pulley, 8.5 x .5-36	52	647-0031	Brake Control Assembly
8	683-0251	Double-idler Bracket	53	647-0032	Speed Control Assembly
9	710-0176	Hex Cap Screw, 5/16-18 x 2.75	54	683-0266	Drive Pedal Assembly
10	710-0227	Self-tapping Screw, #8-18 x .5	55	714-0470	Cotter Pin, 1/8 x 1.25
11	710-0347	Hex Cap Screw, 3/8-16 x 1.75	56	711-0736	Ferrule, 1/4-20
12	736-0272	Flat Washer, .51 x 1.0 x .060	57	711-1363	Pin, 3/8-16 x 2.43
13	710-0604A	Self-tapping Screw, 5/16-18 x .625	58	714-0104	Cotter Pin
14	710-0642	Self-tapping Screw, 1/4-20 x .75	59	732-0437	Compression Spring, .34 OD x 1.0
15	710-3011	Hex Cap Screw, 3/8-16 x 2.25	60	732-0955	Extension Spring, .50 OD x 1.41
16	711-0677	Ferrule, 5/16-18	61	735-0662	Drive Pedal Pad
17	712-0241	Hex Nut, 3/8-24	62	735-3049	Brake Pedal Pad
18	712-0378	Hex Nut, 7/16-20	63	736-0142	Flat Washer, .281 x .5 x .063
19	712-0431	Flange Lock Nut, 3/8-16	64	736-0187	Flat Washer, .64 x 1.24 x .06
20	712-3017	Hex Nut, 3/8-16	65	736-0204	Flat Washer, .344 x .062 x .03
21	712-3004A	Flange Lock Nut, 5/16-18	66	738-0155	Shoulder Screw, .437 x 1.62
22	712-3008	Jam Nut, 3/8-16	67	738-0507B	Shoulder Screw, .5 x .434
23	714-0111	Cotter Pin	68	741-0225	Hex Flange Bearing
24	714-0149B	Internal Cotter Pin	69	741-3065A	Split Hex Flange Bearing
25	723-3018	Ball Joint	70	747-1137	Cruise Control Rod
26	725-1644	Short Spring Switch	71	747-1138	Brake Lock Control Rod
27	726-0320	Insulator Nut Plate	72	748-0413	Cruise Latch
28	732-0384	Extension Spring, .62 Dia. x 6.12	73	736-0275	Flat Washer, .344 x .688 x .065
29	732-0525	Compression Spring Clip	74	783-0653E	Steering Support Bracket
30	732-0716	Extension Spring, .59 OD x 4	75	783-0732	Drive Lockout Bracket
31	732-0963	Extension Spring, .50 Dia. x 6.37 (hooks to flange, 783-0650, in frame)	76	783-0773	Brake Pedal
32	736-0105	Bell Washer, .401 x .87 x .063	77	710-1260A	Self-tapping Screw, 5/16-18 x .75
33	736-0140	Flat Washer, .385 x .62 x .063	78	683-0304	Lower Frame Assembly
34	736-0169	Lock Washer, 3/8	79	783-1031A	Hitch Plate
35	736-3008	Flat Washer, .344 x .750 x .120	80	736-0242	Bell Washer, .34 x .872
36	736-0407	Bell Washer, .45 x 1.0 x .602	81	710-0627	Hex Cap Screw, 5/16-24 x .75
37	736-3010	Flat Washer, .407 x .812 x .135	82	634-0104	Wheel Assembly Complete
38	738-0322	Shoulder Screw, .625 x .217		634-0070	Rim Assembly Only
39	747-1122	Brake Rod		734-0255	Air Valve (Not Shown)
40	747-1123A	Belt Guard		734-1730	Tire Only, 20 x 8 x 8, Square Shoulder
41	747-1127	Idler Adjustment Rod, 3/8	83	734-2290A	Deluxe Hub Cap (Ref. 51 Required)
42	747-0047A	Shift Rod	84	710-0809	Self-tapping Screw, 1/4-20 x 1.25
43	711-0736	Adjustment Ferrule, 1/4-20 x 1.0	85	750-0566A	Spacer
44	738-0372A	Shoulder Spacer, .38 ID	86	710-0650	Self-tapping Screw, 5/16-18 x .875
45	754-0467	Lower Drive Belt			


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674

Powder Black: 0637

Model M604F

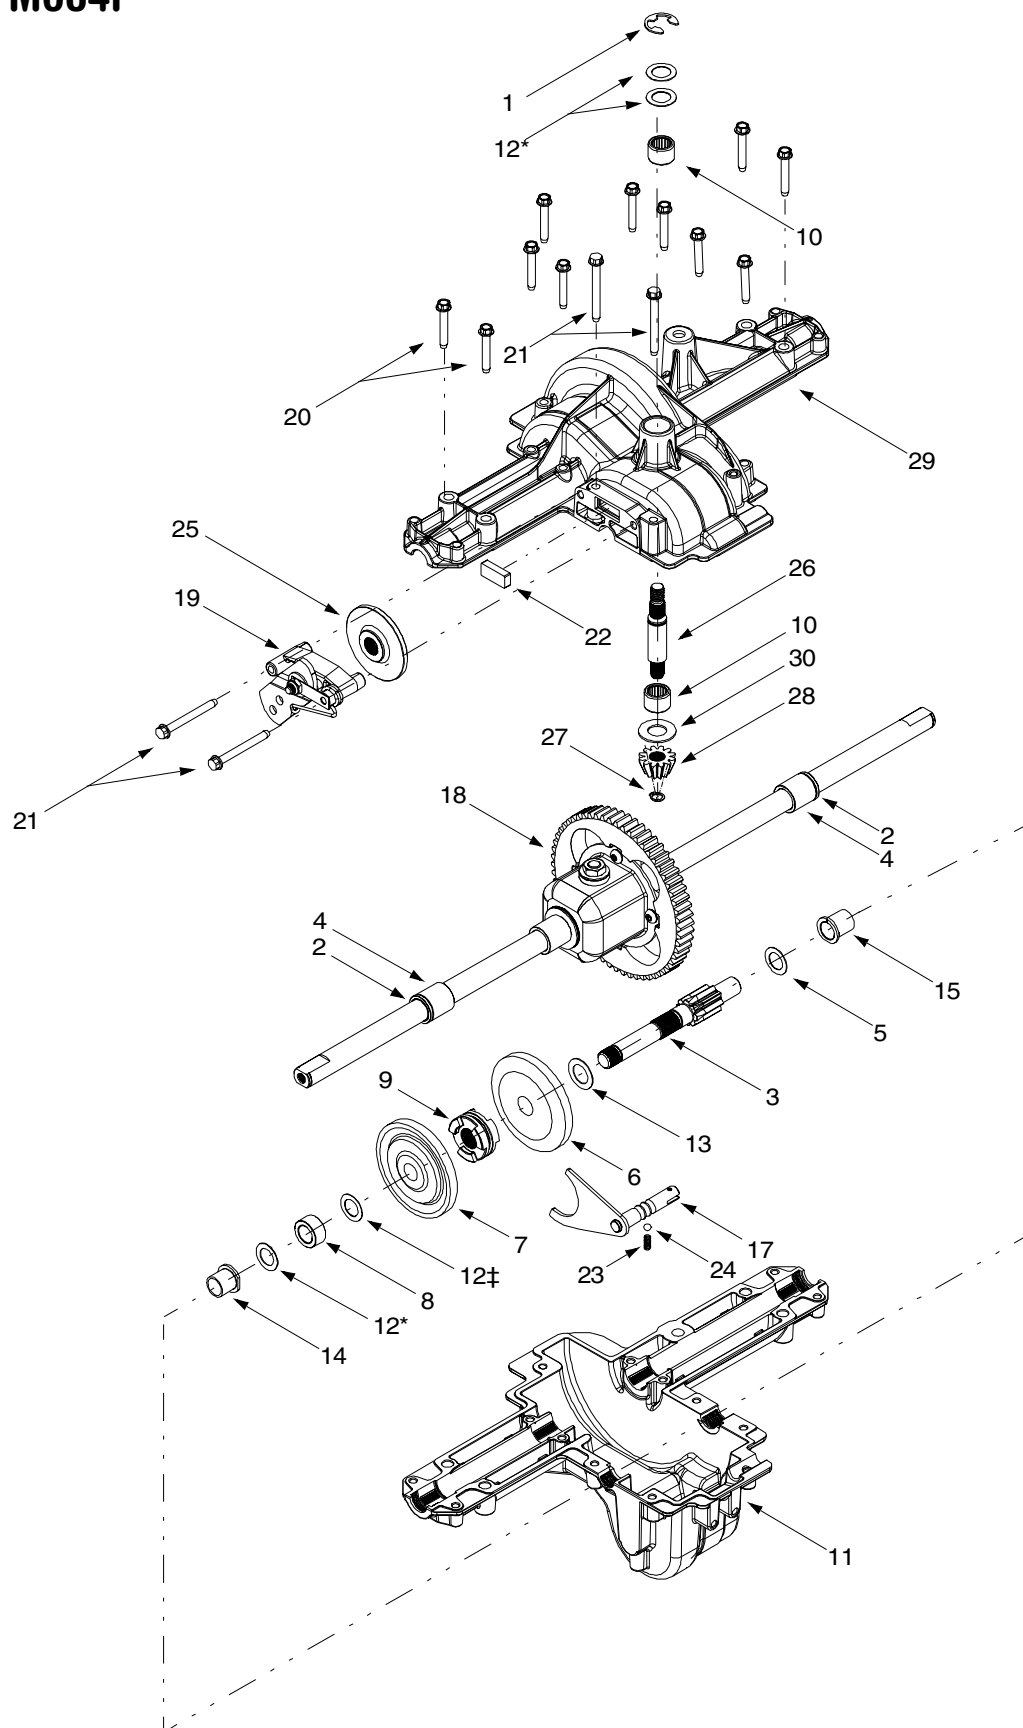


Model M604F

REF. NO.	PART NO.	DESCRIPTION
1	716-0231	E-ring, .75
2	721-0338	Seal, .75 x 1.0 x .125
3	711-1431	Drive Shaft
4	741-0340	Sleeve Bearing, .75 x 1.0 x 1.0
5	736-0495	Thrust Washer, 1.0 x .632 x .0
6	717-1362	42-tooth Bevel Gear
7	717-1363	42-tooth Bevel Gear
8	750-1234	Spacer, .633 x 1.0 x .513
9	718-0228	Clutch Collar
10	741-0525	Needle Bearing, .625 x .875
11	719-0394	Lower Housing
12	736-0336	Flat Washer, 5/8 x 1.0 x .030
	736-0337	Flat Washer, 5/8 x 1.0 x .040
	736-0349	Flat Washer, 5/8 x 1.0 x .020
13	736-0519	Flat Washer, .70 x 1.125 x .031
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
16	750-1238	Spacer, .635 x 1.0 x .27
17	611-0133	Detent Shaft Assembly
18	618-0424	Differential Assembly
19	661-0006	Brake Assembly
20	710-1325	Self-tapping Screw, 1/4-20 x 1.625
21	710-1206	Self-tapping Screw, 1/4-20 x 2.375
22	717-0678	Brake Pad
23	732-0863	Compression Spring
24	741-0862	Detent Ball
25	761-0202	Brake Disc
26	711-1430	Input Shaft
27	716-0108	Retaining Ring, .437
28	717-1464	14-tooth Bevel Pinion
29	719-0391A	Upper Housing
30	736-0723	Thrust Washer, .635 x 1.25 x .042

†Use applicable flat washer in this application allowing .036/.018 in. end-play.


‡Use applicable flat washer in this application allowing .010/.005 in. end-play.

Model M604F

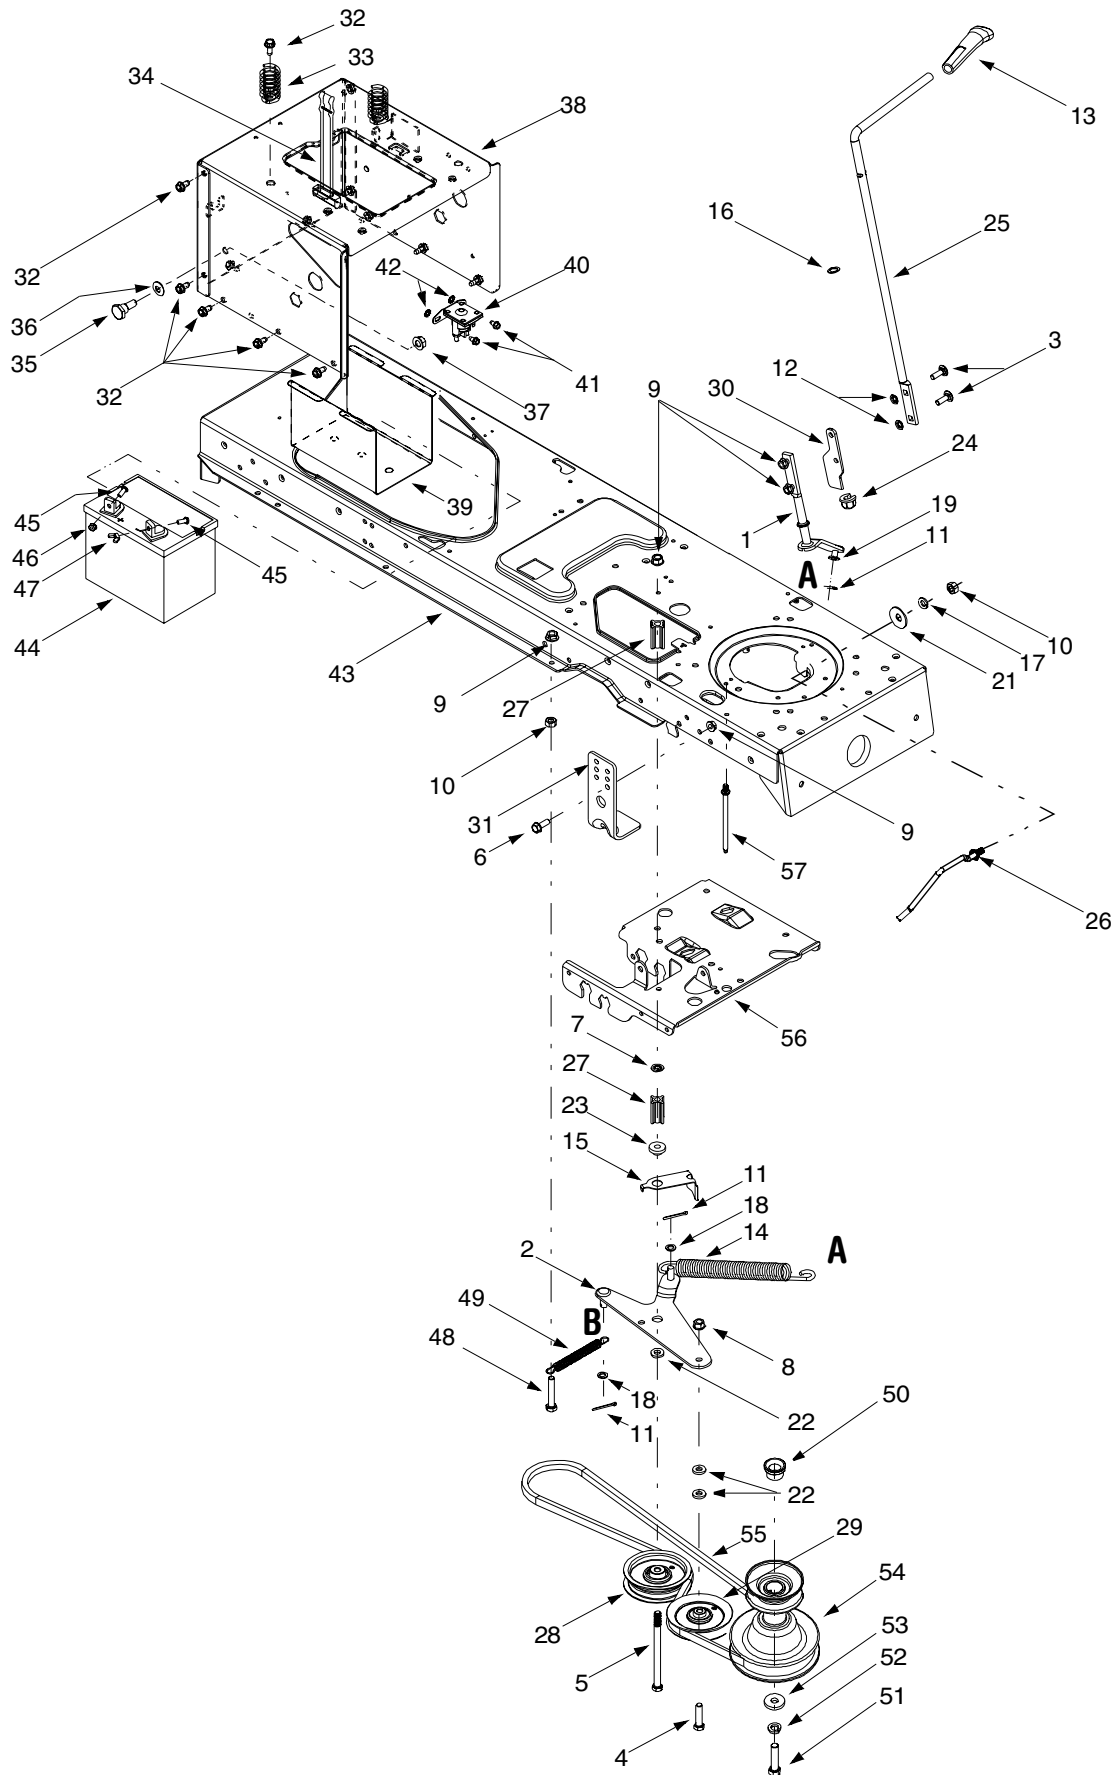

REF. NO.	PART NO.	DESCRIPTION
1	647-0064	PTO Engage Lever Assembly
2	683-0450	PTO Engage Plate Assembly
3	710-0276	Carriage Screw, 5/16-18 x 1.00
4	710-0520	Hex Cap Screw, 3/8-16 x 1.5
5	710-0831	Hex Cap Screw, 3/8-16 x 5.5
6	710-1238	Hex Head Washer Screw, 5/16-18 x .875
7	712-0229	Push Nut, 3/8
8	712-0431	Flange Lock Nut, 3/8-16
9	712-3004A	Flange Lock Nut, 5/16-18
10	712-3010	Hex Nut, 5/16-18
11	714-0470	Cotter Pin, 1/8 x 1.25
12	726-0201	Speed Nut, .3125
13	731-2111A	PTO Knob
14	732-0944	Extension Spring, .75 x 6.75
15	732-0991A	Belt Guard
16	736-0108	Flat Washer, .510 x .750 x .033
17	736-0119	Lock Washer, 5/16
18	736-0140	Flat Washer, .385 x .62 x .063
19	736-0275	Flat Washer, 5/16
20	736-3000	Flat Washer, .406 x .875 x .059
21	736-0331	Bell Washer, .39 x 1.13 x .062
22	736-3010	Flat Washer, .407 x .812 x .135
23	738-0372	Shoulder Spacer, .380
24	741-0708	Hex Split Flange Bearing, .5
25	747-1112D	PTO Engage Handle
26	747-1286	Belt Keeper Rod
27	748-0415A	Spacer, 3/8 x 1.54
28	756-0627B	Idler Pulley, 3.5
29	756-1208	Idler Pulley, 4.0
30	783-0744A	Engagement Stop
31	783-0891B	Deck Stop
32	710-0604A	Self Tapping Screw, 5/16-18 x .625
33	732-3080	Compression Spring, 1.28 x 3.5
34	723-0444	Battery Strap
35	738-1020	Shoulder Screw, .625 x .5, 7/16-20
36	736-0407	Bell Washer, .45 x 1.0 x .062
37	712-0459	Flange Lock Nut, 7/16-20
38	783-1031	Hitch Plate
39	783-0349	Battery Tray
40	725-1426	Solenoid, 12-Volt, 100 Amp
41	710-0599	Self Tapping Screw, 1/4-20 x .5
42	736-0222	Lock Washer, 1/4
43	683-0304A	Lower Frame Assembly
44	725-1706	12-volt Battery, 270 CCA
45	710-0751	Hex Cap Screw, 1/4-20 x .62
46	712-0271	Hex Sems Nut, 1/4-20
47	712-3044	Wing Nut, 1/4-20
48	732-1165	Extension Spring, .50 x 5.0
49	710-3180	Hex Cap Screw, 5/16-18 x 1.75
50	750-0596	Spacer Cup
51	710-3029	Hex Head Cap Screw, 7/16-20 x 1.25
52	736-0171	Lock Washer, 7/16
53	736-0322	Flat Washer, .450 x 1.25
54	756-0982B	Engine Pulley, 3.56 OD x 5.56
55	754-0497	PTO Belt
56	783-0653E	Steering Support Bracket
57	711-1044	Keeper Pin, 5/16 x 4.75

Model M604F

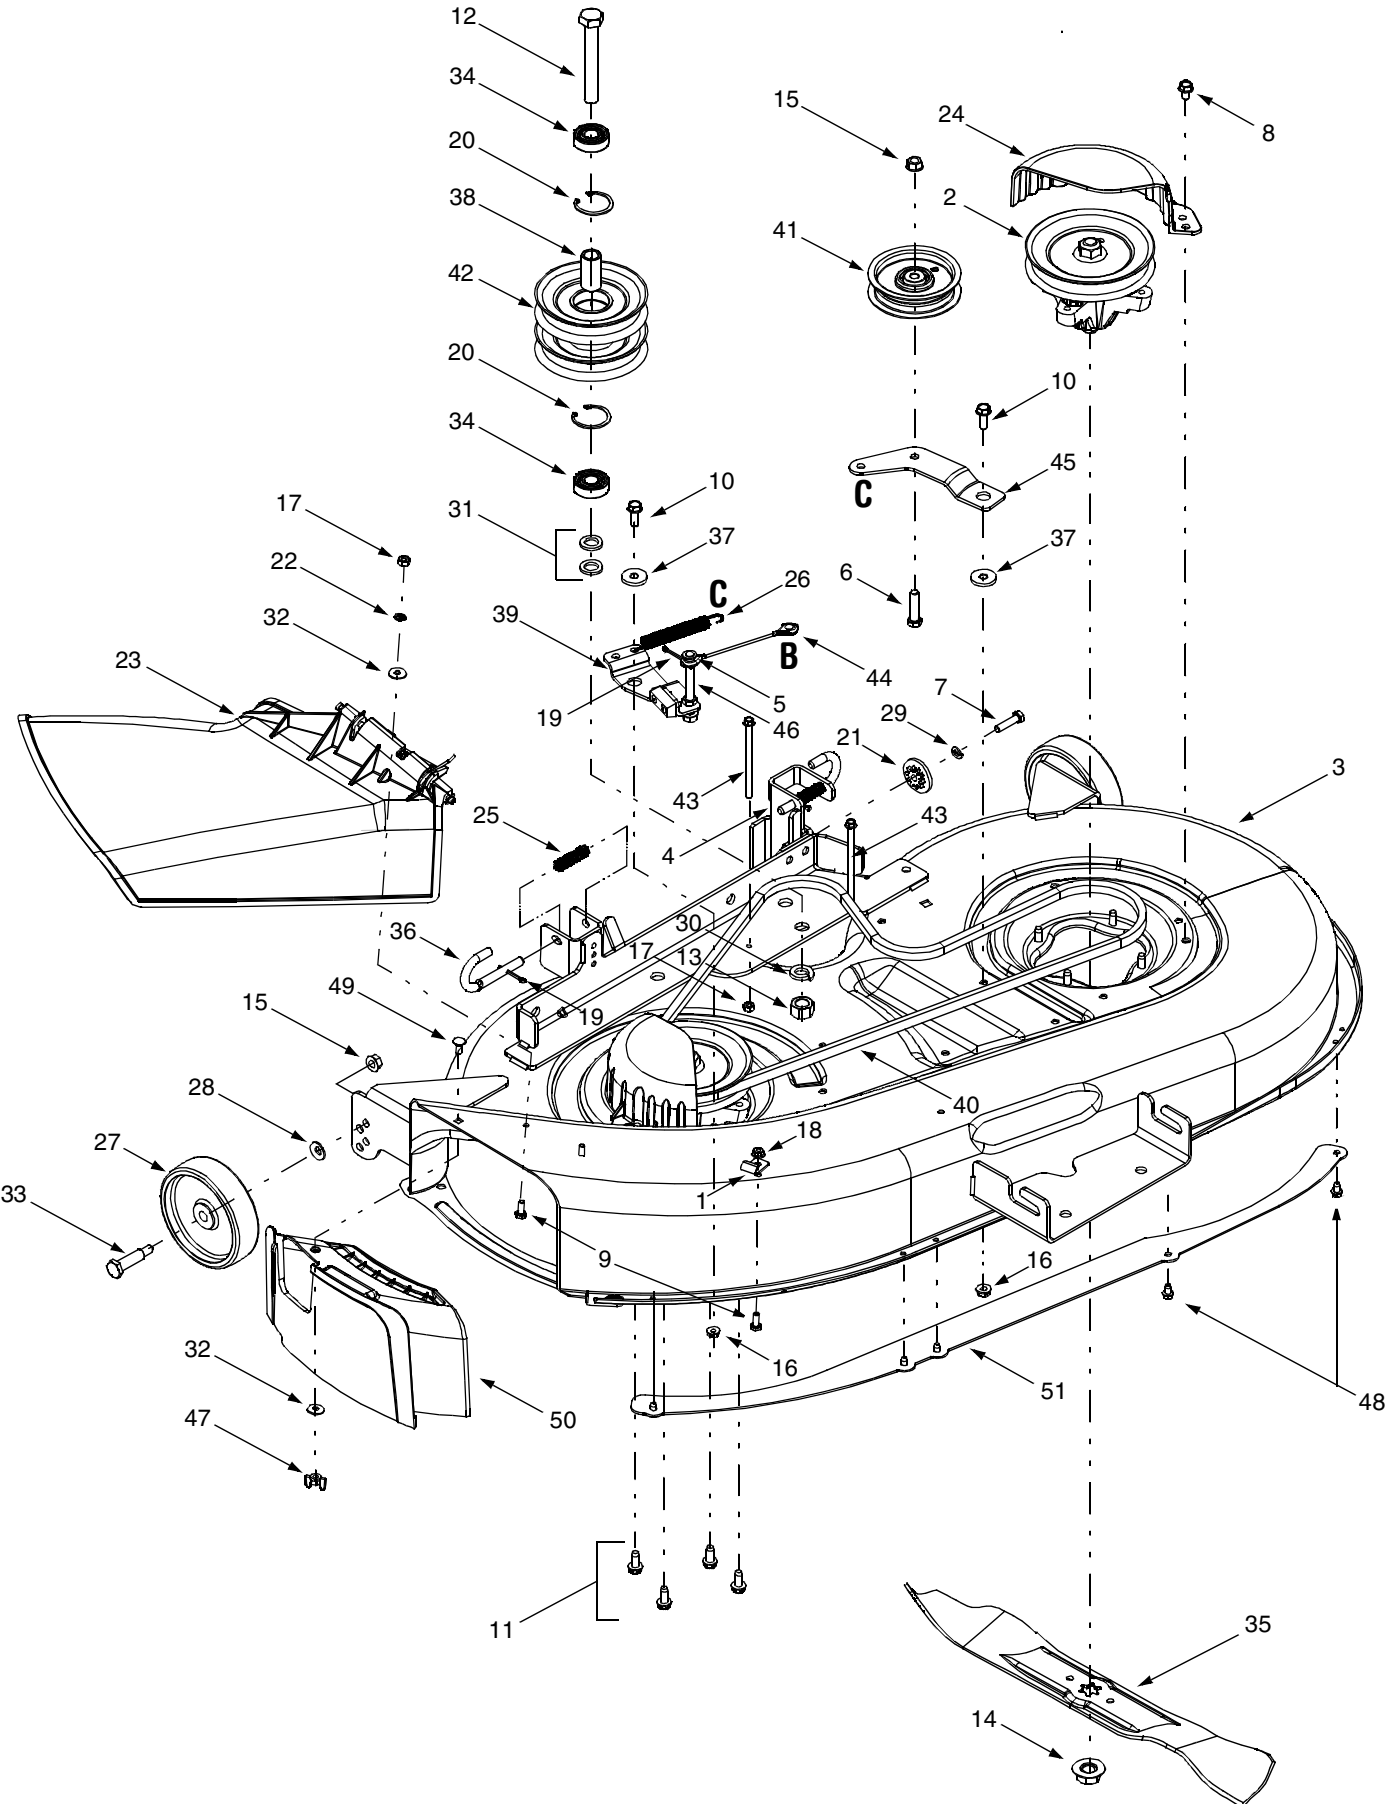

REF. NO.	PART NO.	DESCRIPTION
1	16606	Retainer Hook
2	618-0688	Spindle Assembly, 5.0 Dia.
	756-0969	Pulley Only
3	683-0250A	38-inch Deck Shell
4	683-0254	Deck Adjustment Bracket w/ Weld Nut
5	736-0140	Flat Washer, .385 x .62 x .063
6	710-0520	Hex Cap Screw, 1/4-20 x 1.5
7	710-0528	Hex Cap Screw, 5/16-18 x 1.25
8	710-0604A	Self-tapping Screw, 5/16-18 x .625
9	710-0751	Hex Cap Screw, 1/4-20 x .62
10	710-1238	Hex Head Washer Screw, 5/16-18 x .875
11	710-1260A	Self-tapping Screw, 5/16-18 x .75
12	710-3151	Hex Cap Screw, 5/8-18 x .875
13	712-0337	Hex Nut, 5/8-18
14	712-0417A	Hex Flange Nut, 5/8-18
15	712-0431	Flange Lock Nut, 3/8-16
16	712-3004A	Flange Lock Nut, 5/16-18
17	712-3006	Hex Nut, 1/4-20
18	712-3027	Hex Flange Lock Nut, 1/4-20
19	714-0470	Cotter Pin, 1/8 x 1.25
20	716-3020	Internal Snap Ring
21	717-1553B	Deck Adjustment Gear
22	726-0233	Push Nut, .25 x .5
23	731-1032B	Side Discharge Chute Assembly
24	731-2486	Belt Cover
25	732-0306	Compression Spring, .406 x .531 x 1.75
26	732-0470A	Extension Spring, .50 x 4.74
27	734-0973	Deck Wheel, 5 x 1.38
28	736-0105	Bell Washer, .401 x .87 x .063
29	736-0119	Lock Washer, 5/16
30	736-0158	Lock Washer, 5/8
31	736-0162	Flat Washer, .64 x 1.0 x .12
32	736-0270	Bell Washer, .265 x .75 x .062
33	738-0373	Shoulder Screw, .498 x 1.53
34	741-0524	Bearing, .625 x 1.574 x .470
35	742-0610	Three-in-one Blade, Star Center, 19.38"
36	747-1116	Deck Release Pin
37	748-0331	Shoulder Spacer, .625 x .324
38	750-0932A	Spacer, .635 x .88 x 1.72
39	683-0440	Deck Brake Assembly
40	754-0326	Deck Belt
41	756-0627B	Idler Pulley, 3.5
42	756-1202	Double Pulley, 5.0
43	710-1830	Self-tapping Screw, 1/4-20 x 4.0
44	746-0970	Brake Cable, 5.05
45	783-1291	Idler Bracket
46	711-1534	Pin, 3/8-16, 3/8 x 3.27
47	712-3087	Wing Nut, 1/4-20
48	710-0599	Self-tapping Screw, 1/4-20 x .5
49	710-0134	Carriage Screw, , 1/4-20 x .62
50	731-2363	Mulch Plug
51	783-1146A	Deck Skirt