



# Model Y614G

B&S OHV Single

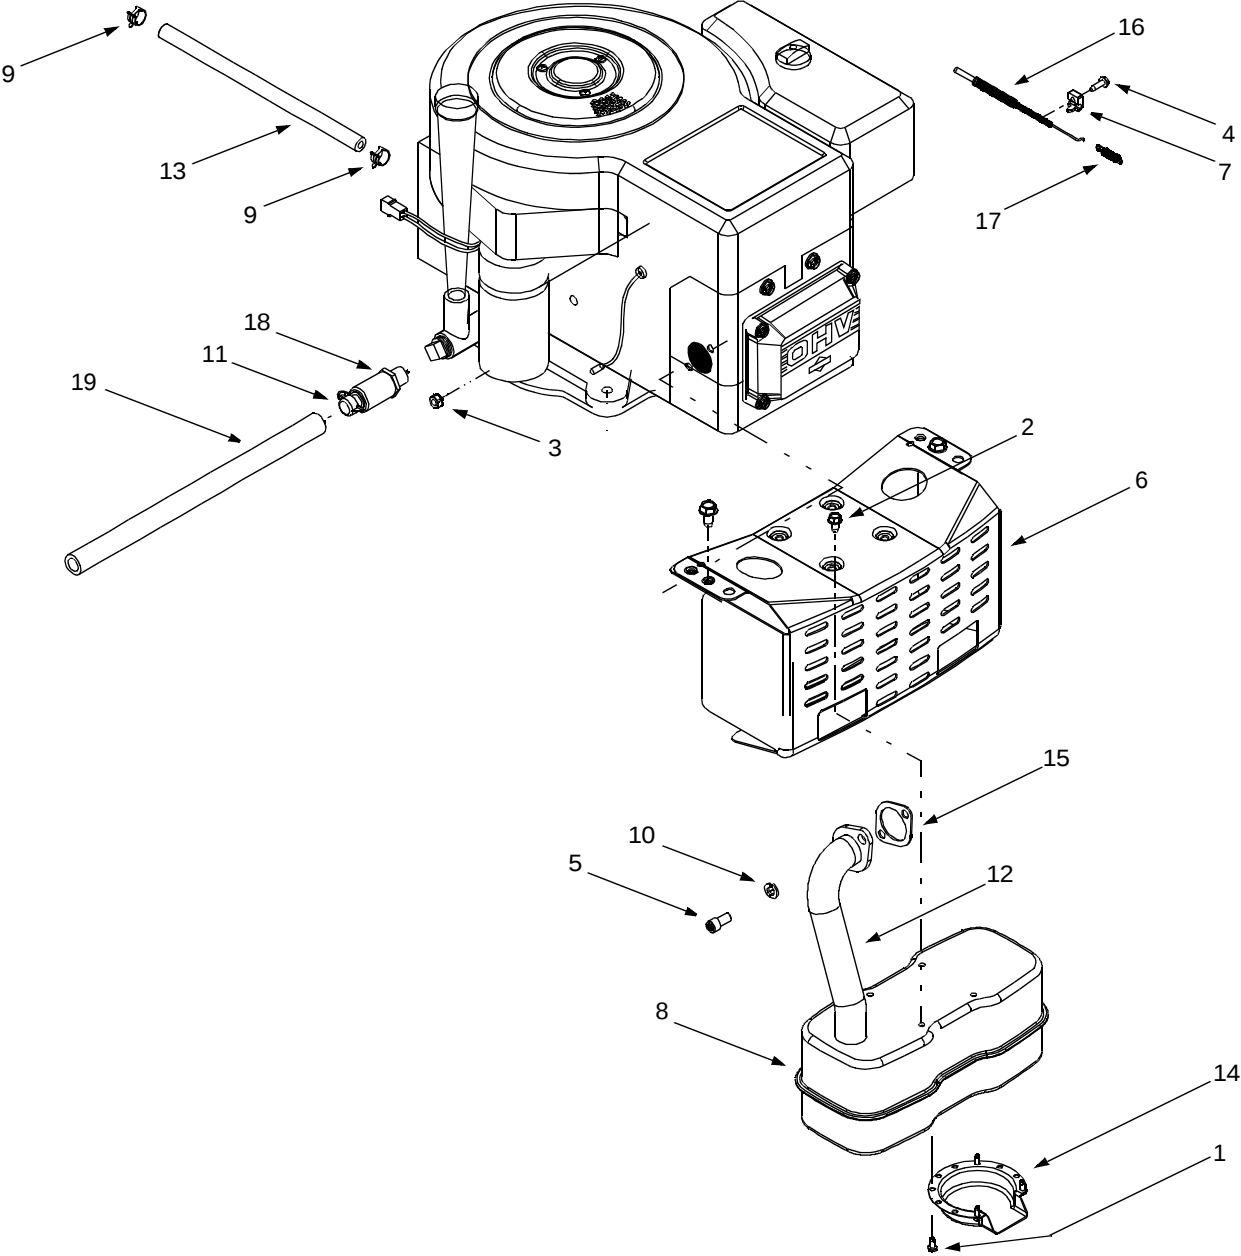


| REF.<br>NO. | PART<br>NO. | DESCRIPTION                      |
|-------------|-------------|----------------------------------|
| 1           | 710-0227    | Self-tapping Screw, #8-18 x .50  |
| 2           | 710-0599    | Self-tapping Screw, 1/4-20 x .50 |
| 3           | 712-0271    | Hex Sems Nut, 1/4-20             |
| 4           | 710-1237    | Screw, #10-32 x .625             |
| 5           | 710-1314A   | Socket Cap Screw, 5/16-18 x .625 |
| 6           | 783-0615B   | Muffler Heat Shield              |
| 7           | 751B213146  | Casing Clamp                     |
| 8           | 751-0617    | Muffler, Single Inlet            |
| 9           | 726-0205    | Hose Clamp                       |
| 10          | 736-0119    | Lock Washer, 5/16                |
| 11          | 751-3142    | Oil Drain Cap                    |
| 12          | 751-0619    | Exhaust Pipe                     |
| 13          | 751-0535    | Fuel Line Hose                   |
| 14          | 751-0564    | Muffler Deflector                |
| 15          | 721-0208    | Exhaust Gasket                   |
| 16          | 746-1084    | Throttle Cable                   |
| 17          | 732-0966    | Extension Spring, .275 x 1.25    |
| 18          | 751-3140    | Oil Drain Valve                  |
| 19          | 751-3141    | Oil Drain Hose                   |

# Model Y614G

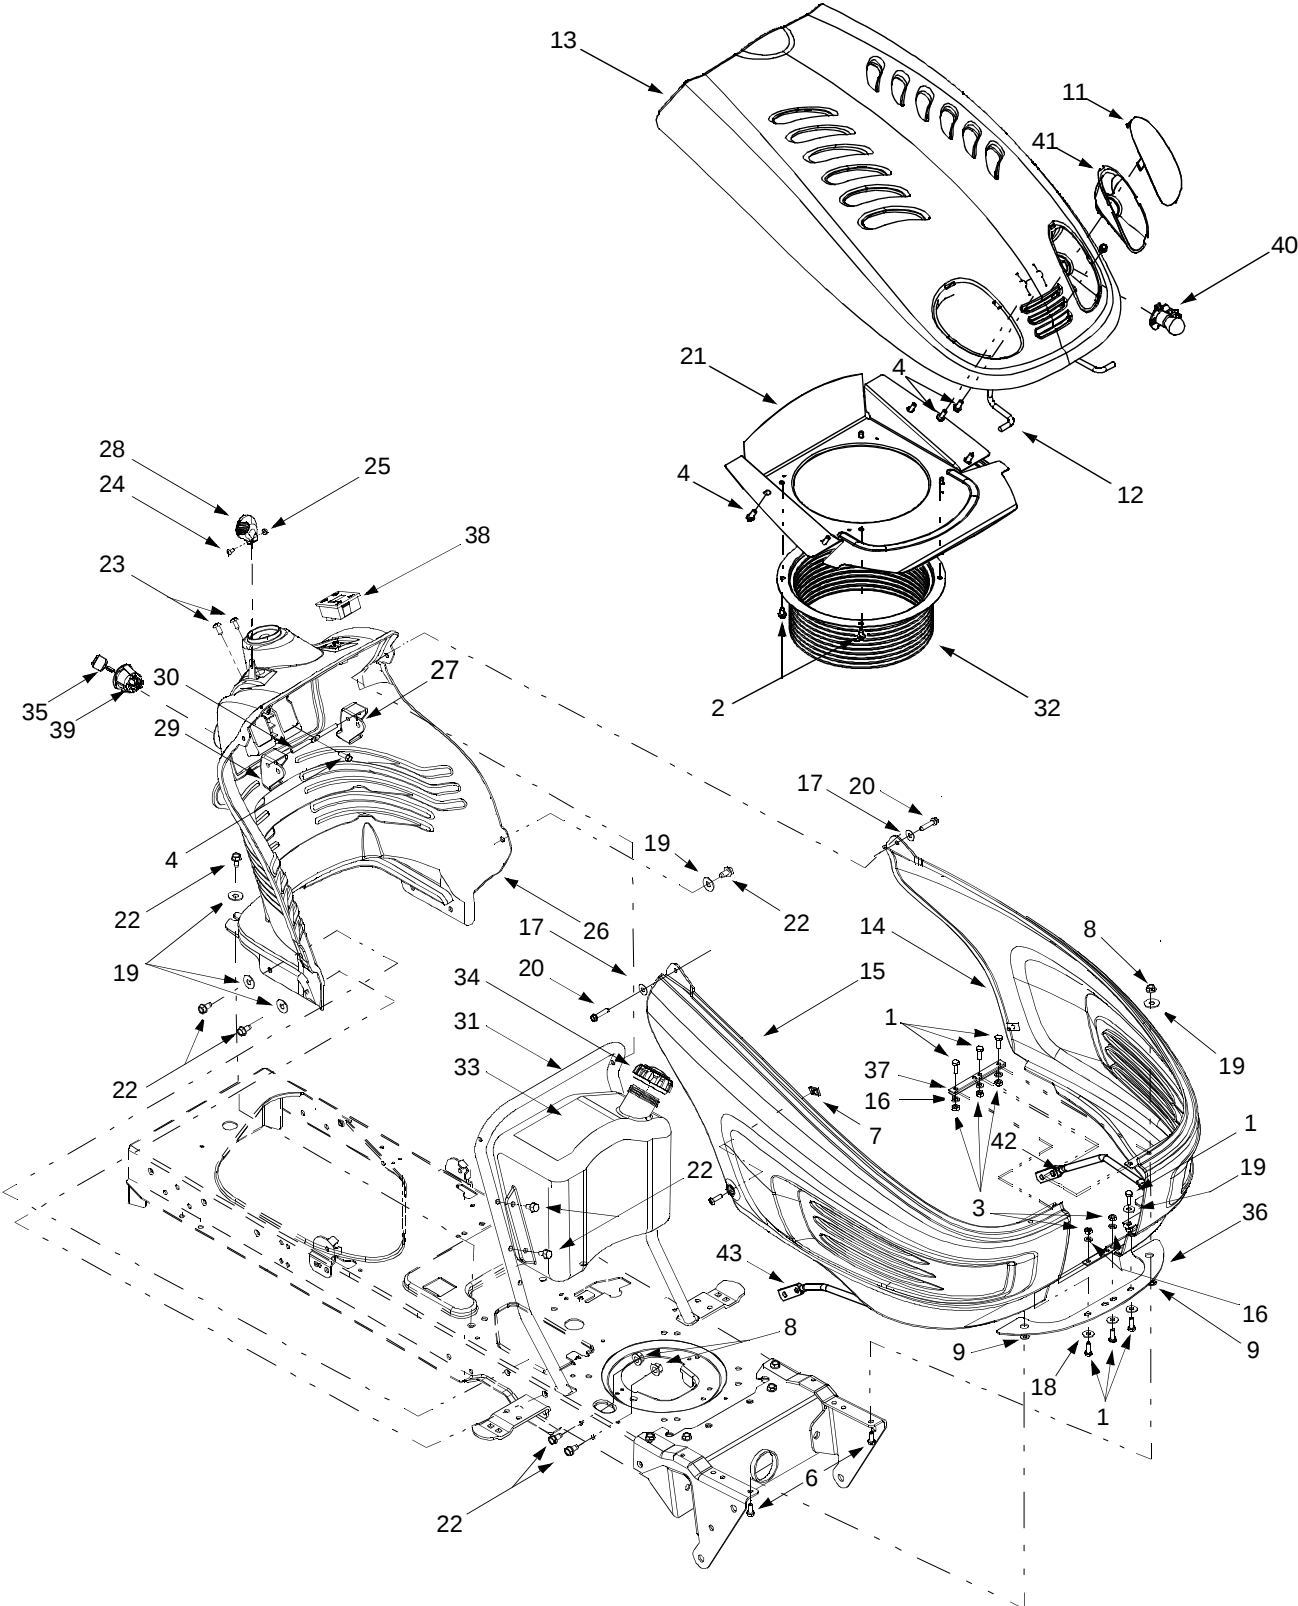


| REF.<br>NO. | PART<br>NO. | DESCRIPTION                            |
|-------------|-------------|----------------------------------------|
| 1           | 710-3015    | Hex Cap Screw, 1/4-20 x .75            |
| 2           | 710-0599    | Self-tapping Screw, 1/4-20 x .5        |
| 3           | 712-3006    | Hex Nut, 1/4-20                        |
| 4           | 710-0895    | Self-tapping Screw, 1/4-15 x .75       |
| 5           | 710-0924    | Pan Phillips Screw, 1/4-20 x .75       |
| 6           | 710-0528    | Hex Cap Screw, 5/16-18 x 1.25          |
| 7           | 712-0292    | U-type Speed Nut, 1/4-20               |
| 8           | 712-3004A   | Flange Lock Nut, 5/16-18               |
| 9           | 726-0201    | Speed Nut                              |
| 10          | 747-2127    | Hood Latch Rod                         |
| 11          | 731-1978    | RH Head Light Lens                     |
|             | 731-1979    | LH Head Light Lens                     |
| 12          | 747-1132A   | Hood Support Rod                       |
| 13          | 731-1980A   | Hood                                   |
| 14          | 731-1981B   | LH Side Panel                          |
| 15          | 731-1982B   | RH Side Panel                          |
| 16          | 736-0329    | Lock Washer, 1/4                       |
| 17          | 736-0342    | Flat Washer, .283 x .75 x .030         |
| 18          | 736-0173    | Flat Washer, .28 x .74 x .063          |
| 19          | 736-3078    | Flat Washer, .349 x 1.0 x .063         |
| 20          | 710-0809    | Self-tapping Screw, 1/4-20 x 1.25      |
| 21          | 783-0808A   | Hood Heat Shield w/o Intake Bellow     |
| 22          | 710-0604A   | Self-tapping Screw, 5/16-18 x .625     |
| 23          | 710-1017    | Torx Self-tapping Screw, 1/4-14 x .625 |
| 24          | 710-3217    | Torx Screw, #8-32 x .375               |
| 25          | 712-0142    | Hex Nut, 8-32                          |
| 26          | 731-0069C   | Dash Panel, 4-style                    |
| 27          | 731-0072    | Parking Brake Button                   |
| 28          | 731-1857    | Throttle Control Lever                 |
| 29          | 731-2106    | Cruise Control Button                  |
| 30          | 747-1155    | Brake/Cruise Pivot Rod                 |
| 31          | 749-1087A   | Dash Support Tube                      |
| 32          | 731-2232    | Intake Bellow                          |
| 33          | 751-0659B   | Fuel Tank, 2-gallon                    |
| 34          | 751-0603    | Fuel Cap                               |
| 35          | 725-1745    | Ignition Key w/ plastic cover          |
|             | 725-1744    | Ignition Key w/o plastic cover         |
| 36          | 731-2272    | Heat Shield                            |
| 37          | 783-1000A   | Grille Support Bracket                 |
| 38          | 725-1976    | Systems Indicator Monitor              |
| 39          | 725-1741    | Ignition Switch                        |
| 40          | 625-0051    | Headlight Assembly                     |
| 41          | 731-1995    | RH Headlight Reflector                 |
|             | 731-1996    | LH Headlight Reflector                 |
| 42          | 747-1303    | LH Rod                                 |
| 43          | 747-1304    | RH Rod                                 |
| —           | 629-0469A   | Headlight Wire Harness                 |
| —           | 629-1071    | Tractor Wire Harness                   |

# Model Y614G

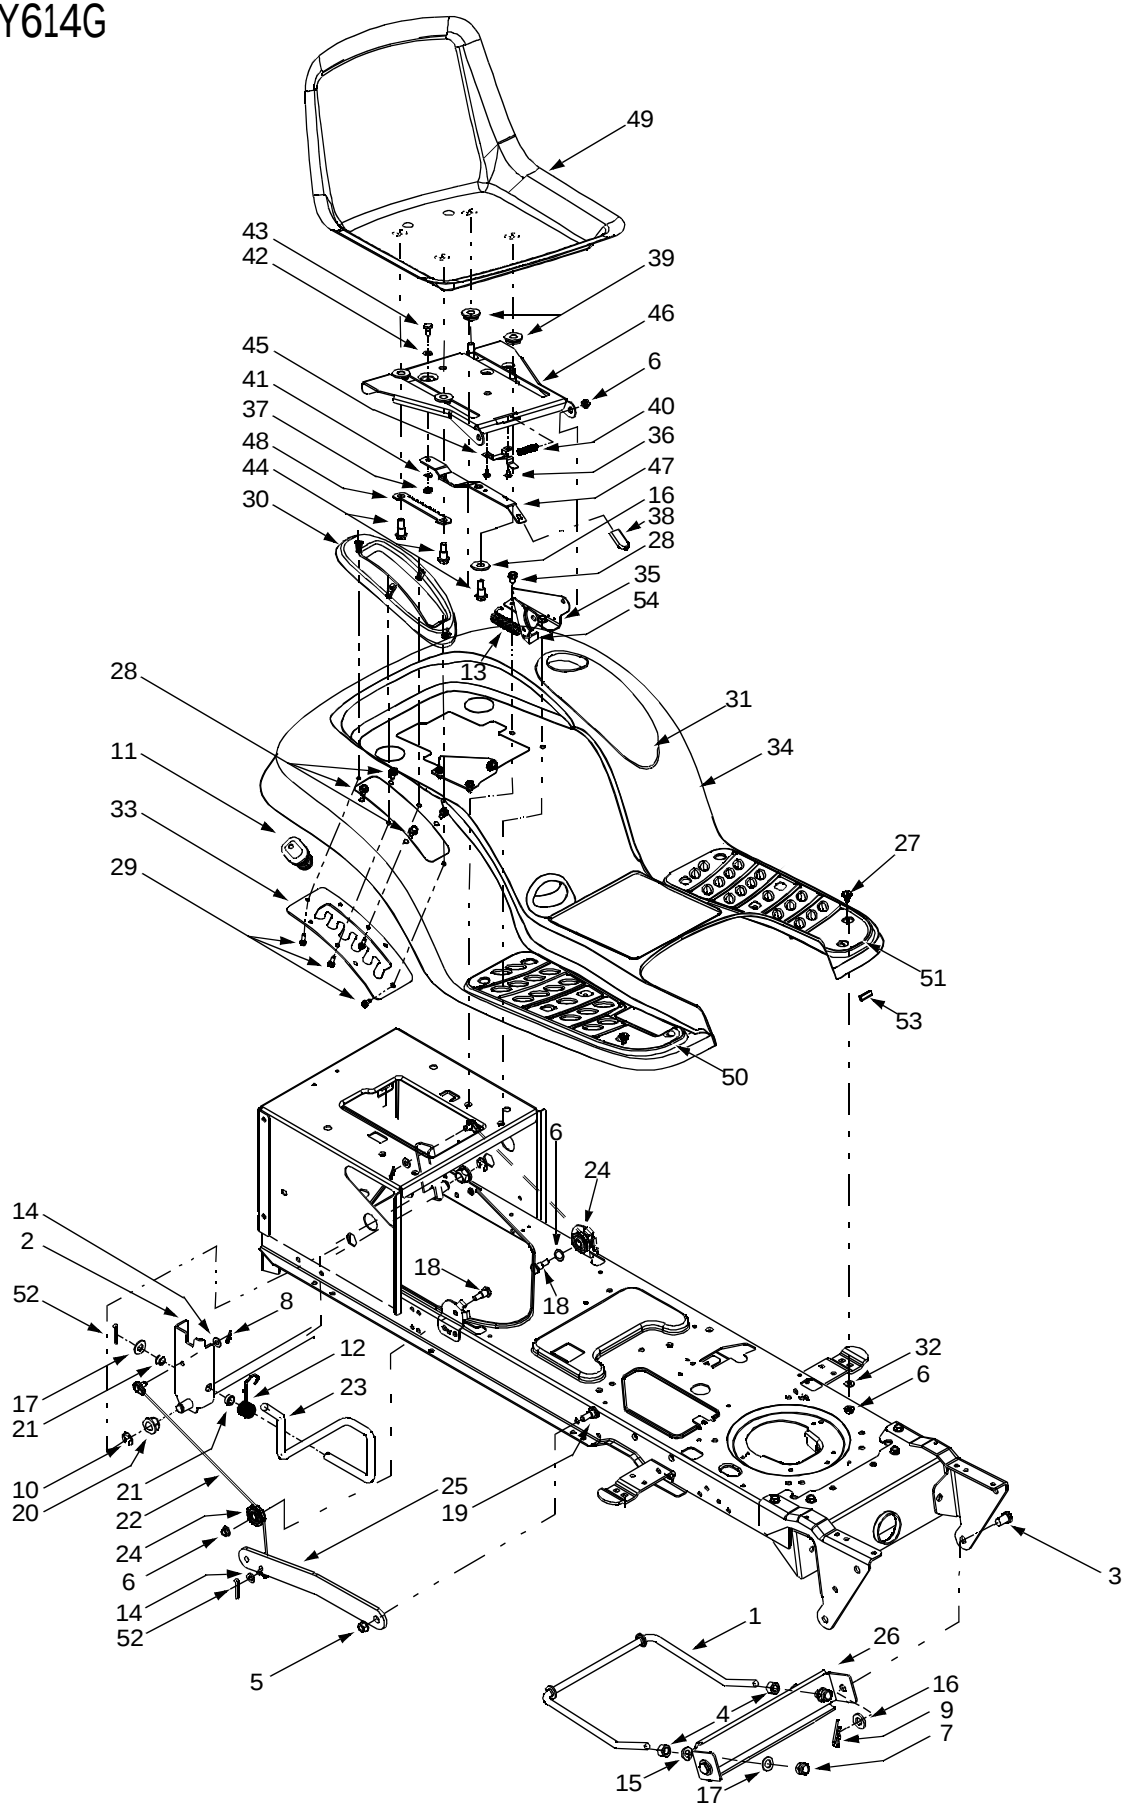


| REF.<br>NO. | PART<br>NO. | DESCRIPTION                         |
|-------------|-------------|-------------------------------------|
| 1           | 747-1130    | Deck Stabilizer Rod                 |
| 2           | 683-0197    | Lift Shaft Assembly                 |
| 3           | 711-0332    | Clevis Pin, .5 x .78                |
| 4           | 712-0206    | Hex Nut, 1/2-13                     |
| 5           | 712-0431    | Flange Lock Nut, 3/8-16             |
| 6           | 712-3004A   | Flange Lock Nut, 5/16-18            |
| 7           | 712-3083    | Hex Nut, 1/2-13                     |
| 8           | 714-0104    | Internal Cotter Pin                 |
| 9           | 714-0145    | Internal Cotter Pin                 |
| 10          | 716-0106    | E-ring                              |
| 11          | 720-0311    | Handle Grip                         |
| 12          | 732-0874    | Torsion Spring                      |
| 13          | 732-1027    | Extension Spring, .872 x 3.4        |
| 14          | 736-0275    | Flat Washer, 5/16                   |
| 15          | 736-0921    | Lock Washer, 1/2                    |
| 16          | 736-3019    | Flat Washer, .31 x 1.062 x .134     |
| 17          | 736-3084    | Flat Washer, .51 x 1.12 x .06       |
| 18          | 738-0138A   | Hex Cap Screw, 5/16-18 x .62        |
| 19          | 738-0143    | Shoulder Screw, 3/8-16              |
| 20          | 741-0225    | Hex Flange Bearing                  |
| 21          | 741-0715    | Snap Flange Bearing                 |
| 22          | 746-0968    | Lift Cable, 16.16                   |
| 23          | 747-1111A   | Lift Handle                         |
| 24          | 756-1154    | Roller Pulley                       |
| 25          | 783-0678A   | Arm Lift                            |
| 26          | 783-0720A   | Deck Stabilizer Bracket             |
| 27          | 710-0260A   | Carriage Bolt, 5/16 x .62           |
| 28          | 710-0604A   | Self-tapping Screw, 5/16-18 x .625  |
| 29          | 710-0895    | Self-tapping Screw, 1/4-15 x .75    |
| 30          | 731-1990    | Lift Lever Cover                    |
| 31          | 731-1993    | Cover w/ Cup Holder                 |
| 32          | 736-3078    | Flat Washer, .349 x 1.0 x .063      |
| 33          | 783-0677    | Lift Adjustment Bracket             |
| 34          | 783-1279    | Fender                              |
| 35          | 783-1489    | Seat Mounting Bracket               |
| 36          | 710-1268    | Screw, #10-16 x .375                |
| 37          | 712-3027    | Hex Flange Lock Nut, 1/4-20         |
| 38          | 720-0309A   | Seat Adjuster Grip                  |
| 39          | 731-1989    | Spacer                              |
| 40          | 732-0499    | Compression Spring, .41 x 1.5       |
| 41          | 736-0175    | Spring Washer, .265 x .562 x .025   |
| 42          | 736-0204    | Flat Washer, .344 x .62 x .03       |
| 43          | 738-0137A   | Shoulder Screw, .340 x .285, 1/4-20 |
| 44          | 738-1007    | Shoulder Screw, .50 x .50, 3/8-16   |
| 45          | 783-0611    | Seat Stop                           |
| 46          | 783-0738    | Seat Pivot Bracket                  |
| 47          | 783-0739    | Seat Adjustment Lever               |
| 48          | 783-0753    | Seat Adjustment Selector            |
| 49          | 757-0365A   | Medium Back Seat, Yellow            |
| 50          | 735-0656    | RH Foot Pad                         |
| 51          | 735-0657    | LH Foot Pad                         |
|             | 726-3046    | Foot Pad Clips (Not Shown)          |
| 52          | 714-0111    | Cotter Pin                          |
| 53          | 731-0511    | Trim Strip                          |
| 54          | 783-0209    | Seat Lift Bracket                   |

Model Y614G

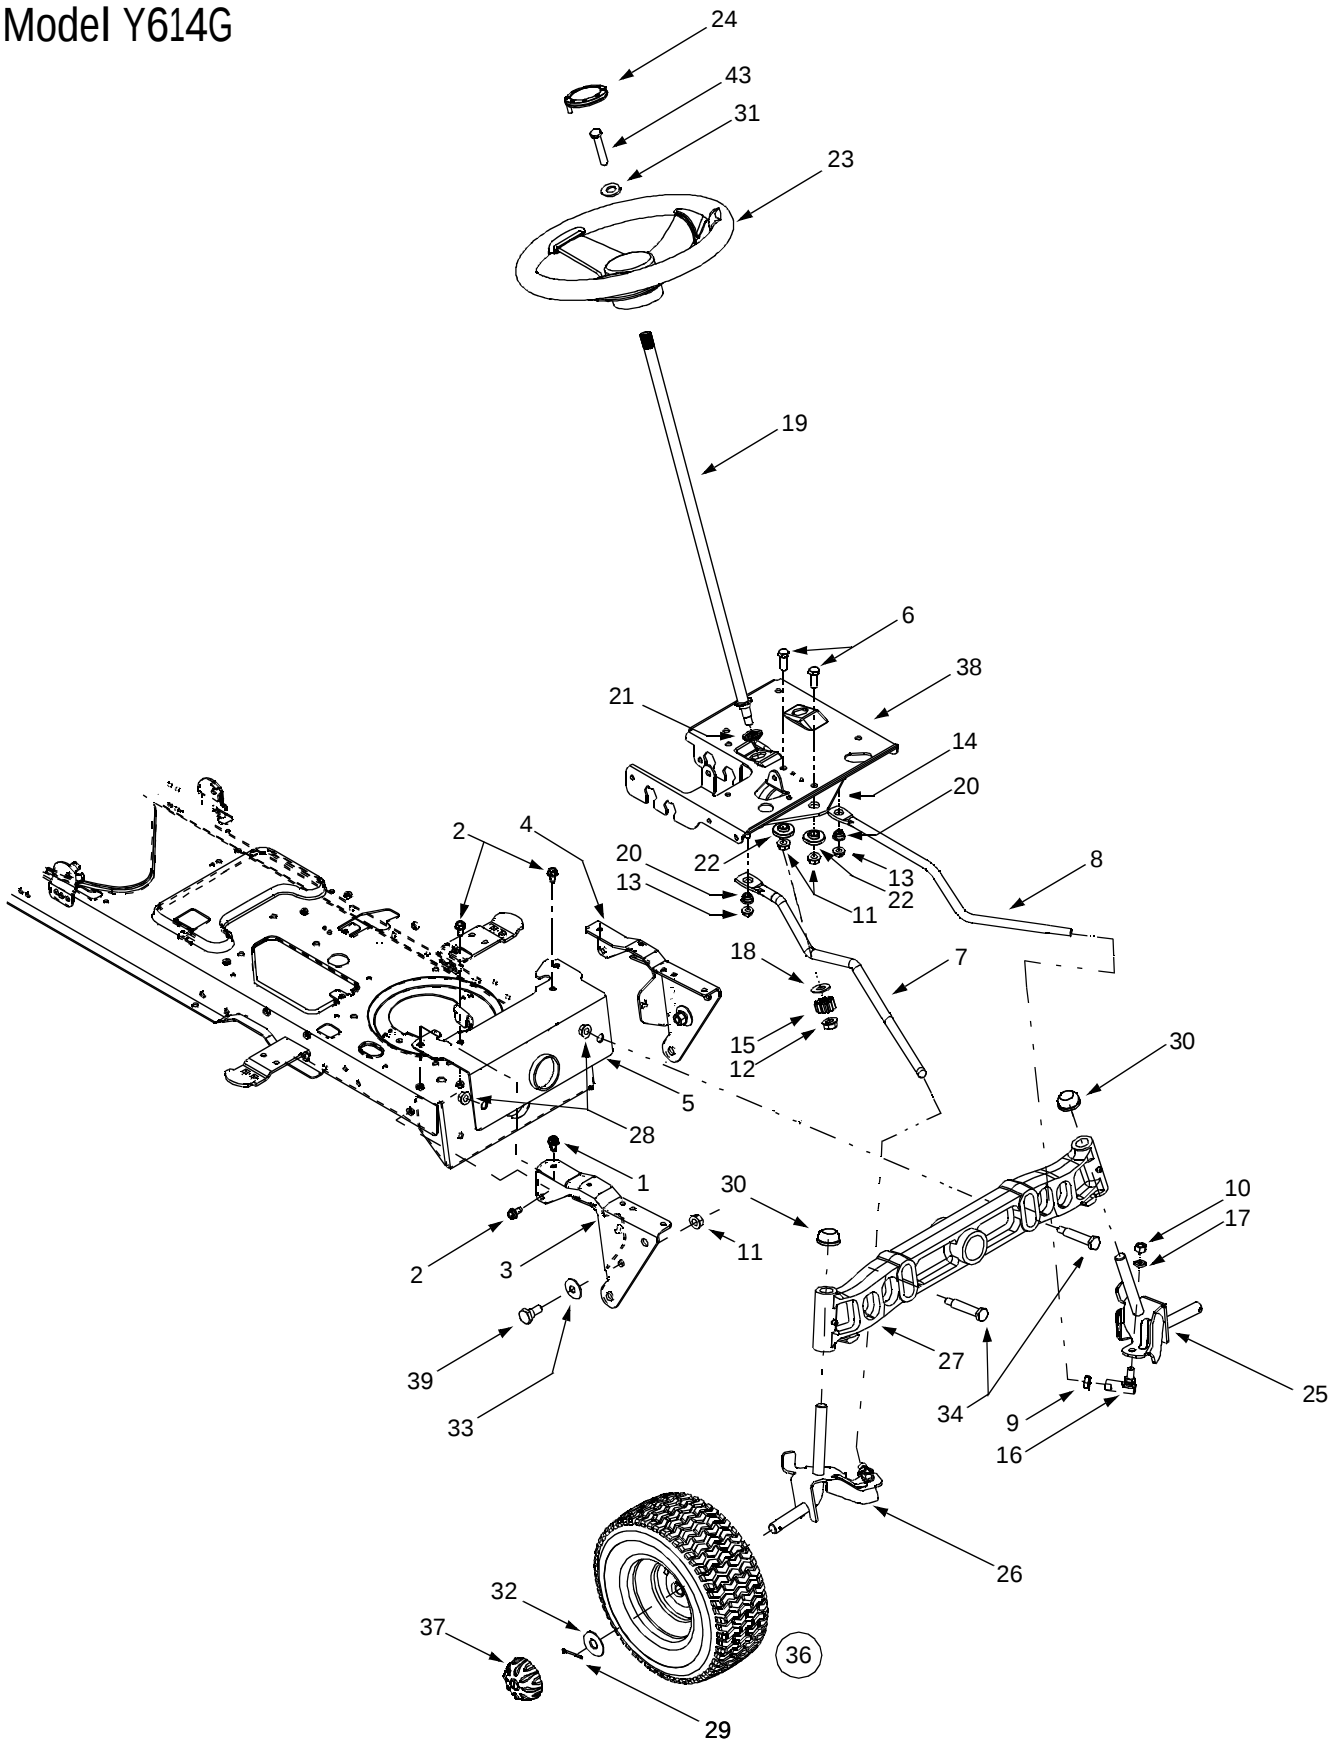

| REF.<br>NO. | PART<br>NO. | DESCRIPTION                            |
|-------------|-------------|----------------------------------------|
| 1           | 710-1260A   | Self-tapping Screw, 5/16-18 x .75      |
| 2           | 710-0604A   | Self-tapping Screw, 16-18 x .625       |
| 3           | 783-0726B   | RH Pivot Support Bracket               |
| 4           | 783-0727A   | LH Pivot Support Bracket               |
| 5           | 783-0728    | Pivot Bar Bracket                      |
| 6           | 710-0514    | Hex Cap Screw, 3/8-16 x 1 (Grade 5)    |
| 7           | 711-1408    | RH Drag Link                           |
| 8           | 711-1655    | LH Drag Link                           |
| 9           | 712-0240    | Jam Nut, 7/16-20 (Grade 2)             |
| 10          | 712-0241    | Hex Nut, 3/8-24 (Grade 2)              |
| 11          | 712-0431    | Flange Lock Nut, 3/8-16                |
| 12          | 712-0459    | Flange Lock Nut, 7/16-20               |
| 13          | 712-3004A   | Flange Lock Nut, 5/16-18               |
| 14          | 717-1550D   | Steering Gear, 11/90 Ratio             |
| 15          | 717-1554    | Steering Pinion Gear                   |
| 16          | 723-0448A   | Ball Joint, 7/16-20                    |
| 17          | 736-0169    | Lock Washer, 3/8                       |
| 18          | 736-3084    | Flat Washer, .51 x 1.12 x .06          |
| 19          | 738-1001A   | Steering Shaft, .625 OD x 24.4         |
| 20          | 741-0475    | Plastic Bushing, .38 ID                |
| 21          | 741-0656    | Hex Flange Bearing, 5/8                |
| 22          | 738-0372B   | Shoulder Spacer, .38 ID                |
| 23          | 731-2624    | Steering Wheel, Soft Grip, Three Spoke |
| 24          | 731-2625    | Steering Wheel Cap, Round              |
| 25          | 638-0019A   | LH Axle Assembly, .75 Diameter         |
| 26          | 638-0020A   | RH Axle Assembly, .75 Diameter         |
| 27          | 719-0399B   | Cast Iron Pivot Bar w/ Fittings, .75   |
| 28          | 712-0431    | Flange Lock Nut, 3/8-16                |
| 29          | 714-0162    | Cotter Pin                             |
| 30          | 726-0341    | Push Cap, .750                         |
| 31          | 736-0242    | Bell Washer, .34 x .872                |
| 32          | 736-0285    | Flat Washer, .635 x 1.589 x .06        |
| 33          | 736-0331    | Bell Washer, .39 x 1.13 x .062         |
| 34          | 738-1011    | Shoulder Screw, .5 x 2.2, 3/8-16       |
| 35          | 710-0643    | Hex Bolt, 5/16-18 X 1                  |
| 36          | 634-0105A   | Wheel Assembly Complete, 15 x 6 x 6    |
|             | 634-0172    | Rim Only w/ Plastic Bearing            |
|             | 734-0255    | Air Valve (Not Shown)                  |
|             | 734-1731    | Tire Only, Square Shoulder             |
| 37          | 734-2290    | Hub Cap                                |
| 38          | 783-0653E   | Steering Support Bracket               |
| 39          | 738-0143    | Shoulder Screw, 3/8-16                 |


# Model Y614G

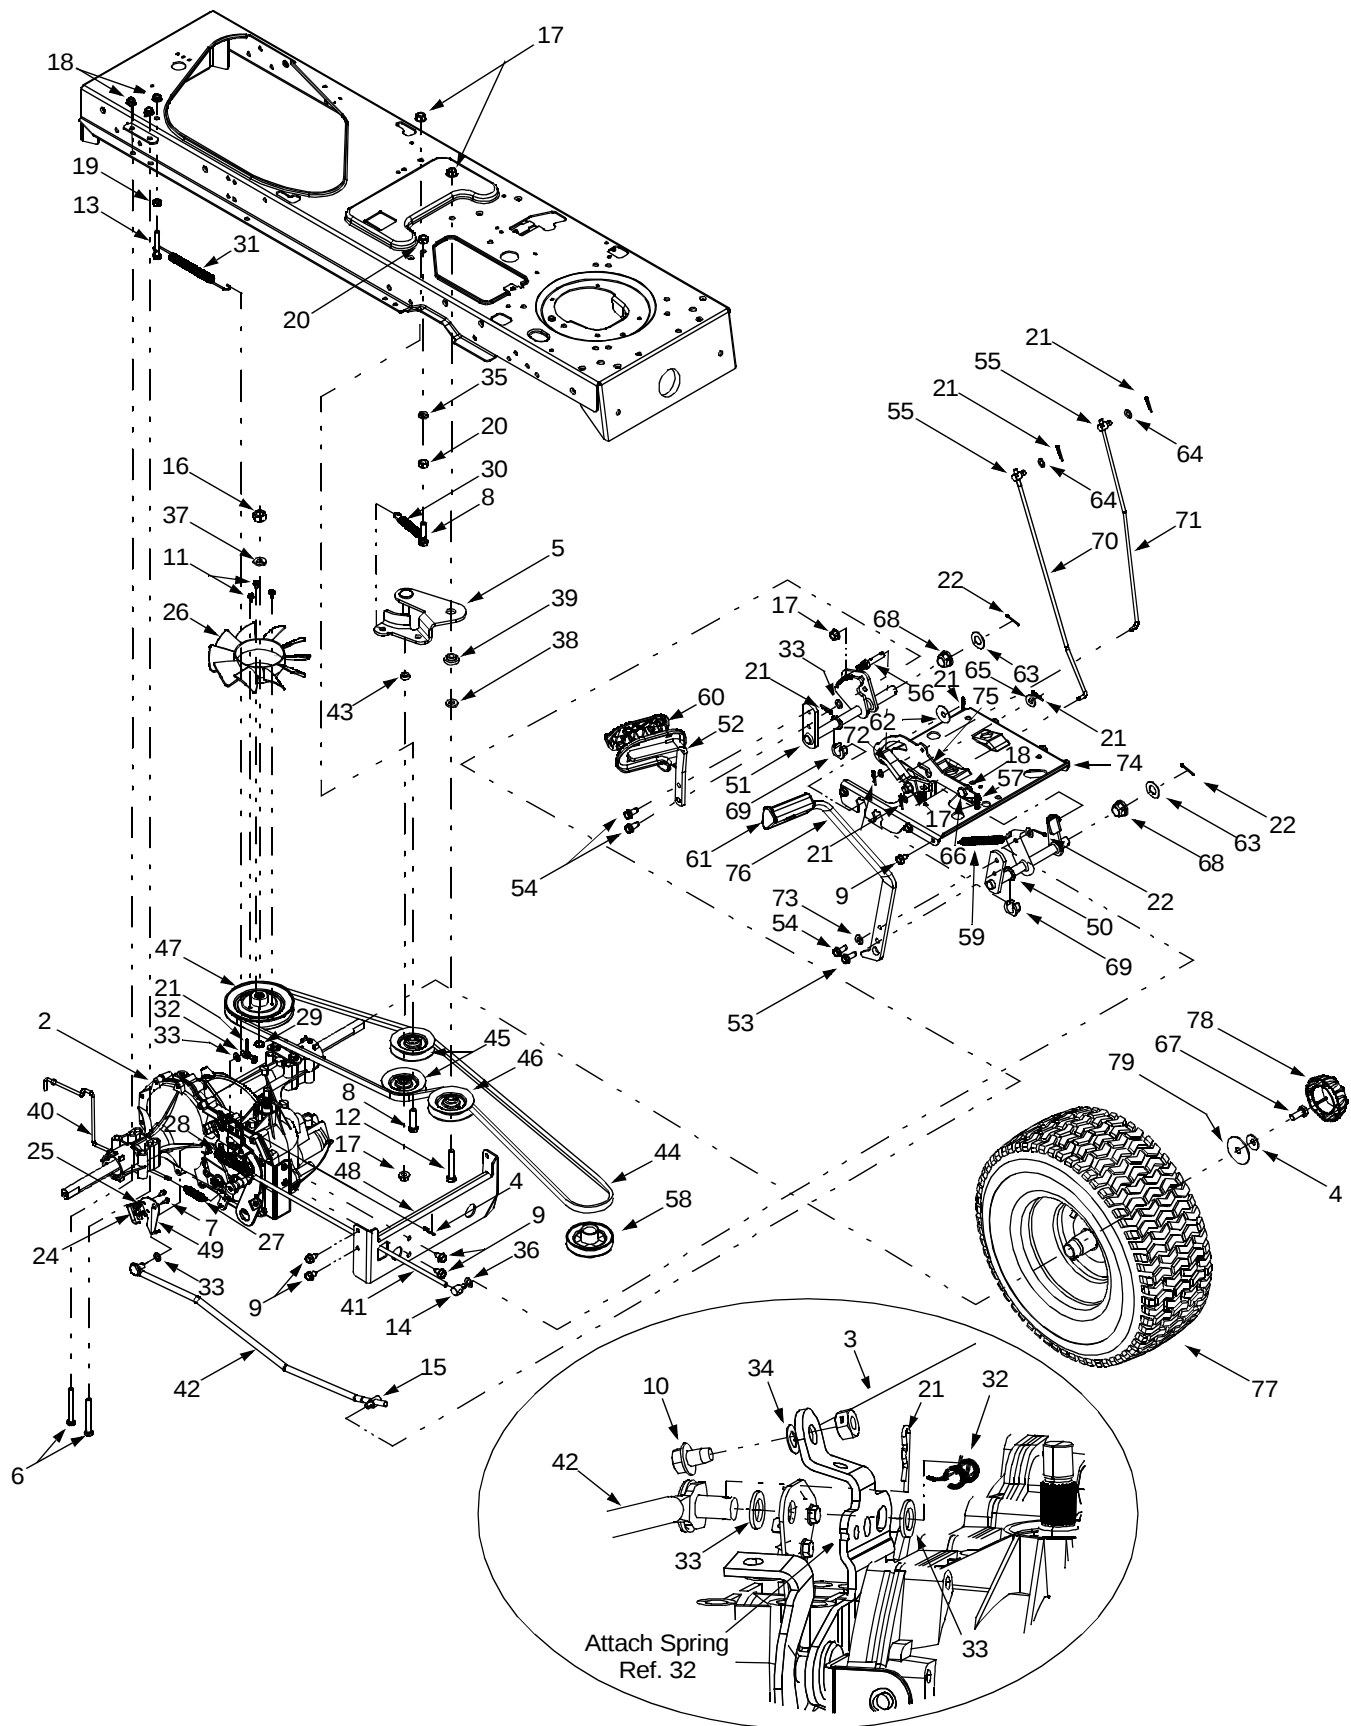

# Model Y614G

| REF. NO. | PART NO.  | DESCRIPTION                           | REF. NO. | PART NO.  | DESCRIPTION                            |
|----------|-----------|---------------------------------------|----------|-----------|----------------------------------------|
| 1        | 17840     | Transaxle Mounting Bracket            | 43       | 750-0535  | Spacer, .376 x .625 x .22              |
| 2        | 618-0319  | Hydrostatic Transmission              | 44       | 754-0349  | Drive Belt                             |
| 3        | 629-0949A | Reverse Wire Harness Adapter & Ground | 45       | 756-0116  | V-idler Pulley, 3.06                   |
| 4        | 736-0242  | Bell Washer, .34 x .872               | 46       | 756-0981A | Flat Idler Pulley, 2.75                |
| 5        | 683-0251  | Double Idler Bracket Assembly         | 47       | 756-1166  | Input Pulley, 5.0                      |
| 6        | 710-0176  | Hex Cap Screw, 5/16-18 x 2.75         | 48       | 783-0810  | Transmission Torque Bracket            |
| 7        | 710-0227  | Screw, #8-18 x .5                     | 49       | 783-1019  | Switch Actuator Bracket                |
| 8        | 710-0344  | Hex Cap Screw, 3/8-16 x 1.5           | 50       | 647-0031  | Brake Control Assembly                 |
| 9        | 710-0604A | Self-tapping Screw, 5/16-18 x .625    | 51       | 647-0049  | Drive Control Assembly                 |
| 10       | 710-0653  | Self-tapping Screw, 1/4-20 x .375     | 52       | 683-0267C | Hydro Pedal Assembly                   |
| 11       | 710-3007  | Screw, #12-24 x .375                  | 53       | 710-0650  | Self-tapping Screw, 5/16-18 x .875     |
| 12       | 710-3011  | Hex Cap Screw, 3/8-16 x 2.25          | 54       | 710-1260A | Self-tapping Screw, 5/16-18 x .75      |
| 13       | 710-3103  | Hex Cap Screw, 5/16-18 x 2.0          | 55       | 711-0736  | Ferrule, 1/4-20                        |
| 14       | 711-0677  | Ferrule, 5/16-18                      | 56       | 711-1363  | Pin, 3/8-16 x 2.43                     |
| 15       | 711-0832  | Ferrule, 3/8-24                       | 57       | 732-0335  | Compression Spring, .405 OD x 1.17     |
| 16       | 712-0333  | Hex Nut, 1/2-20                       | 58       | 756-0978A | Engine Pulley                          |
| 17       | 712-0431  | Flange Lock Nut, 3/8-16               | 59       | 732-0963  | Extension Spring, .50 OD x 6.37        |
| 18       | 712-3004A | Flange Lock Nut, 5/16-18              | 60       | 735-0662  | Drive Pedal Pad                        |
| 19       | 712-3010  | Hex Nut, 5/16-18                      | 61       | 735-3049  | Brake Pedal Pad                        |
| 20       | 712-3017  | Hex Nut, 3/8-16                       | 62       | 736-0133  | Flat Washer, .411 x 1.25 x 1.0         |
| 21       | 714-0104  | Internal Cotter Pin                   | 63       | 736-0187  | Flat Washer, .64 x 1.24 x .06          |
| 22       | 714-0111  | Cotter Pin                            | 64       | 736-0204  | Flat Washer, .344 x .062 x .03         |
| 23       | 725-0157  | Cable Tie                             | 65       | 736-3004  | Flat Washer, .406 x .875 x .105        |
| 24       | 725-1644  | Short Spring Switch                   | 66       | 738-0155  | Shoulder Screw, .437 x 1.62            |
| 25       | 726-0320  | Insulator Nut Plate                   | 67       | 710-0627  | Hex Cap Screw, 5/16-24 x .75           |
| 26       | 731-1449A | 10-inch Fan                           | 68       | 741-0225  | Hex Flange Bearing                     |
| 27       | 732-0209  | Extension Spring, .48 x 2.03          | 69       | 741-3065B | Split Hex Flange Bearing               |
| 28       | 732-0716  | Extension Spring, .59 x 4.0           | 70       | 747-1137  | Cruise Control Rod                     |
| 29       | 732-0729  | Wire Ring                             | 71       | 747-1138  | Brake Lock Control Rod                 |
| 30       | 732-0429A | Extension Spring, .5 x 3.97           | 72       | 748-0413  | Cruise Latch                           |
| 31       | 732-0994  | Extension Spring, .5 x 7.0            | 73       | 736-3008  | Flat Washer, .344 x .750 x .120        |
| 32       | 732-3118  | Extension Spring, 3/8 x 1.44          | 74       | 783-0653E | Steering Support Bracket               |
| 33       | 736-0140  | Flat Washer, .385 x .62 x .063        | 75       | 783-0663C | Drive Lockout Bracket                  |
| 34       | 736-0142  | Flat Washer, .281 x .50 x .063        | 76       | 783-0773  | Brake Pedal                            |
| 35       | 736-0169  | Lock Washer, 3/8                      | 77       | 634-0104  | Wheel Assembly Complete                |
| 36       | 736-0275  | Flat Washer, .344 x .688 x .065       |          |           | 20 x 8 x 8 Square Shoulder             |
| 37       | 736-0921  | Lock Washer, 1/2                      |          | 634-0070  | Rim Assembly Only                      |
| 38       | 736-3010  | Flat Washer, .407 x .812 x .135       |          | 734-0255  | Air Valve (Not Shown)                  |
| 39       | 738-0372B | Shoulder Spacer, .38                  |          | 734-1730  | Tire Only, 20 x 8 x 8, Square Shoulder |
| 40       | 747-1149  | Hydrostatic Bypass Rod                | 78       | 734-2290A | Deluxe Hub Cap (Ref. 79 Required)      |
| 41       | 747-1150  | Hydrostatic Brake Rod                 | 79       | 736-0430  | Flat Washer, .350 x 1.59 x .062        |
| 42       | 747-1151  | Hydrostatic Control Rod               |          |           |                                        |

# Model Y614G

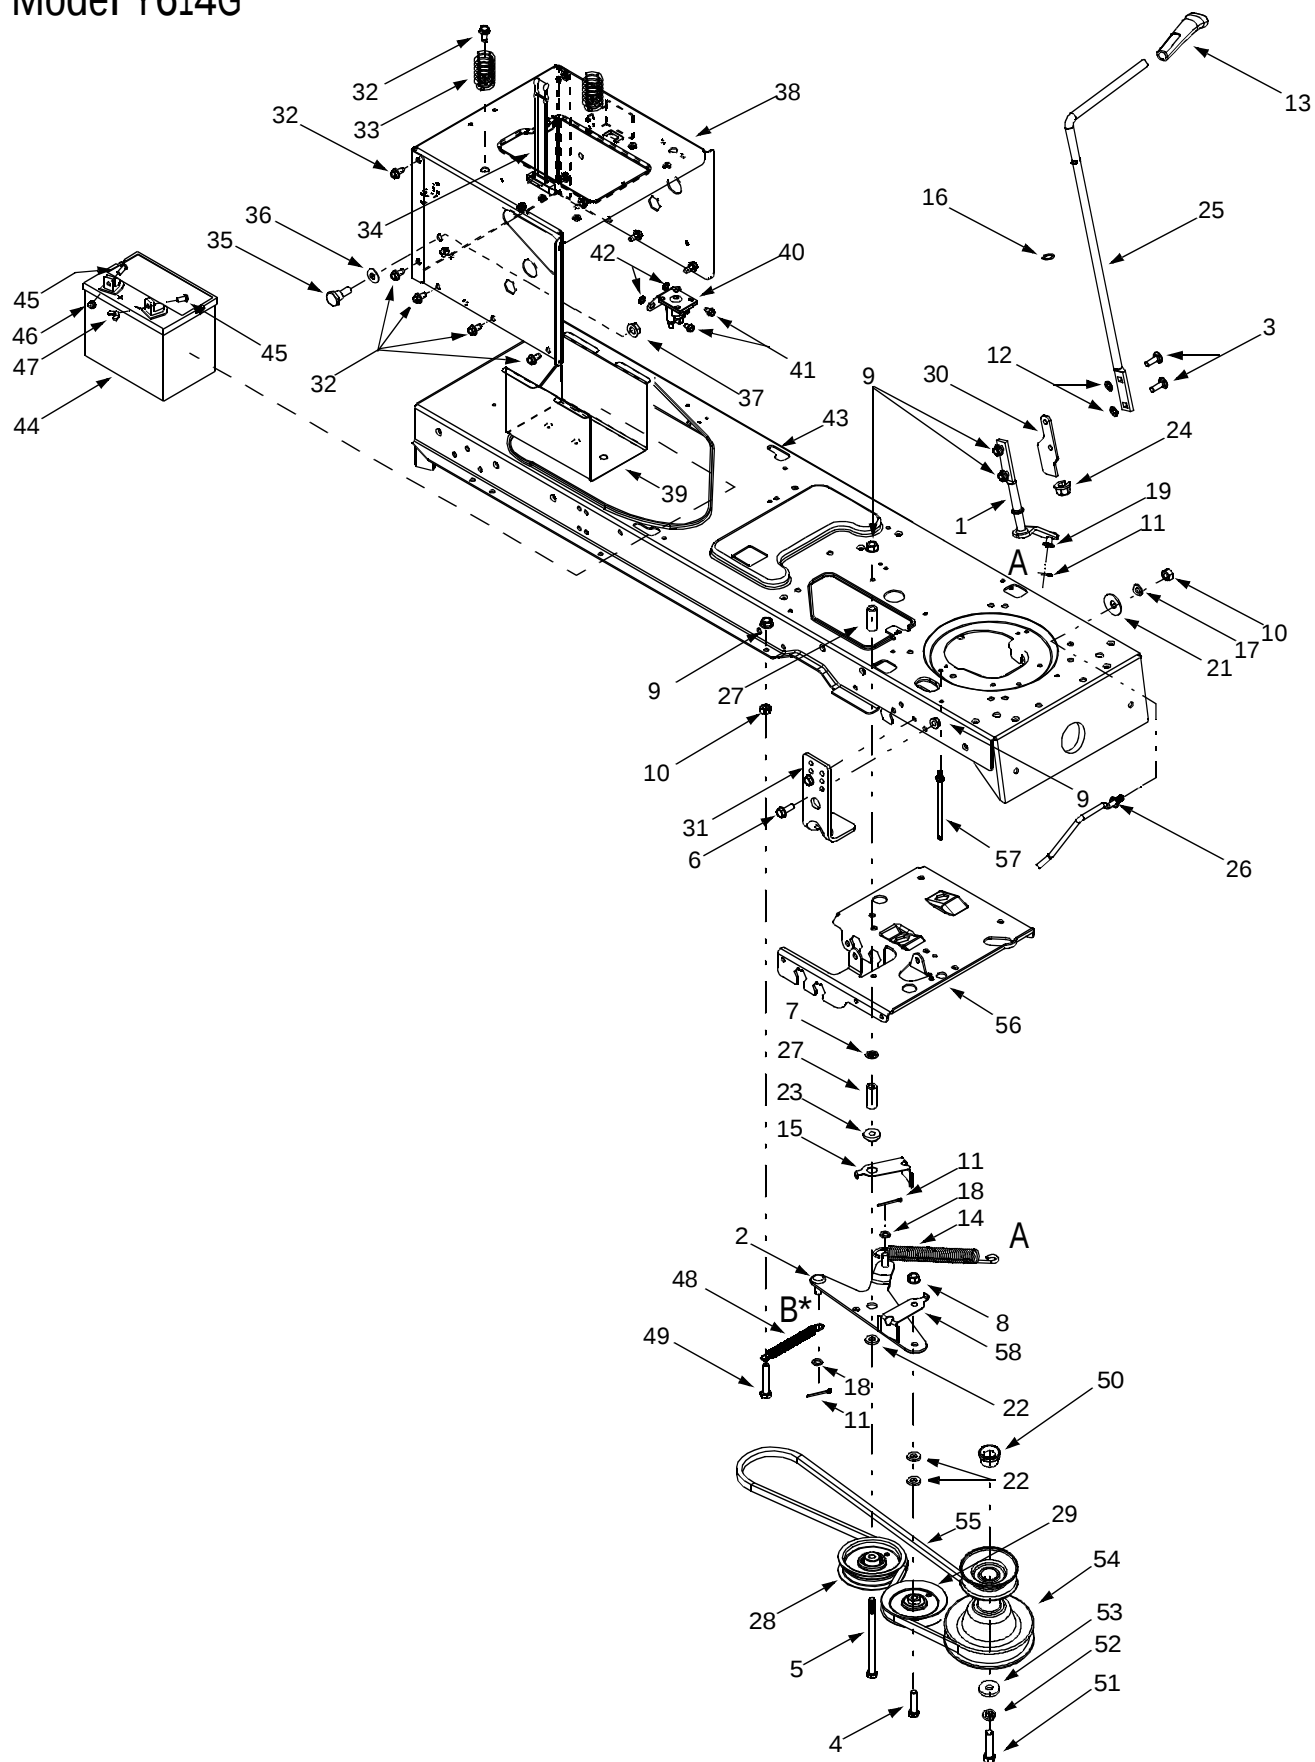


# Model Y614G

| REF. NO. | PART NO.  | DESCRIPTION                           | REF. NO. | PART NO.  | DESCRIPTION                        |
|----------|-----------|---------------------------------------|----------|-----------|------------------------------------|
| 1        | 647-0064  | PTO Engage Lever Assembly             | 30       | 783-0744A | Engagement Stop                    |
| 2        | 683-0450  | PTO Engage Plate Assembly             | 31       | 783-0891B | Deck Stop                          |
| 3        | 710-0276  | Carriage Screw, 5/16-18 x 1.00        | 32       | 710-0604A | Self Tapping Screw, 5/16-18 x .625 |
| 4        | 710-0520  | Hex Cap Screw, 3/8-16 x 1.5           | 33       | 732-3080  | Compression Spring, 1.28 x 3.5     |
| 5        | 710-0831  | Hex Cap Screw, 3/8-16 x 5.5           | 34       | 723-0444  | Battery Strap                      |
| 6        | 710-1238  | Hex Head Washer Screw, 5/16-18 x .875 | 35       | 738-1020  | Shoulder Screw, .625 x .5, 7/16-20 |
| 7        | 712-0229  | Push Nut, 3/8                         | 36       | 736-0407  | Bell Washer, .45 x 1.0 x .062      |
| 8        | 712-0431  | Flange Lock Nut, 3/8-16               | 37       | 712-0459  | Flange Lock Nut, 7/16-20           |
| 9        | 712-3004A | Flange Lock Nut, 5/16-18              | 38       | 783-1031A | Hitch Plate                        |
| 10       | 712-3010  | Hex Nut, 5/16-18                      | 39       | 783-0349  | Battery Tray                       |
| 11       | 714-0470  | Cotter Pin, 1/8 x 1.25                | 40       | 725-1426  | Solenoid, 12-Volt, 100 Amp         |
| 12       | 726-0201  | Speed Nut, .3125                      | 41       | 710-0599  | Self Tapping Screw, 1/4-20 x .5    |
| 13       | 731-2111A | PTO Knob                              | 42       | 736-0222  | Lock Washer, 1/4                   |
| 14       | 732-1170  | Extension Spring, .75 x 6.75          | 43       | 683-0304  | Lower Frame Assembly               |
| 15       | 732-0991A | Belt Guard                            | 44       | 725-1706  | 12-volt Battery, 270 CCA           |
| 16       | 736-0108  | Flat Washer, .510 x .750 x .033       | 45       | 710-0751  | Hex Cap Screw, 1/4-20 x .62        |
| 17       | 736-0119  | Lock Washer, 5/16                     | 46       | 712-0271  | Hex Sems Nut, 1/4-20               |
| 18       | 736-0140  | Flat Washer, .385 x .62 x .063        | 47       | 712-3044  | Wing Nut, 1/4-20                   |
| 19       | 736-0275  | Flat Washer, 5/16                     | 48       | 732-1165  | Extension Spring, .50 x 5.0        |
| 20       | 736-0300  | Flat Washer, .406 x .875 x .059       | 49       | 710-3180  | Hex Cap Screw, 5/16-18 x 1.75      |
| 21       | 736-0331  | Bell Washer, .39 x 1.13 x .062        | 50       | 750-0596  | Spacer Cup                         |
| 22       | 736-3010  | Flat Washer, .407 x .812 x .135       | 51       | 710-3029  | Hex Head Cap Screw, 7/16-20 x 1.25 |
| 23       | 738-0372A | Shoulder Spacer, .380                 | 52       | 736-0171  | Lock Washer, 7/16                  |
| 24       | 741-0708  | Hex Split Flange Bearing, .5          | 53       | 736-0322  | Flat Washer, .450 x 1.25           |
| 25       | 747-1112D | PTO Engagement Handle                 | 54       | 756-0983B | Engine Pulley, 3.56 OD x 5.56      |
| 26       | 747-1286  | Belt Keeper Rod                       | 55       | 754-0497  | PTO Belt                           |
| 27       | 748-0415B | Spacer, 3/8 x 1.54                    | 56       | 783-0653E | Steering Support Bracket           |
| 28       | 756-0627B | Idler Pulley, 3.5                     | 57       | 711-1044  | Keeper Pin, 5/16 x 4.75            |
| 29       | 756-1208  | Idler Pulley, 4.0                     | 58       | 732-1013  | Belt Guard                         |

**IMPORTANT:** For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

# Model Y614G

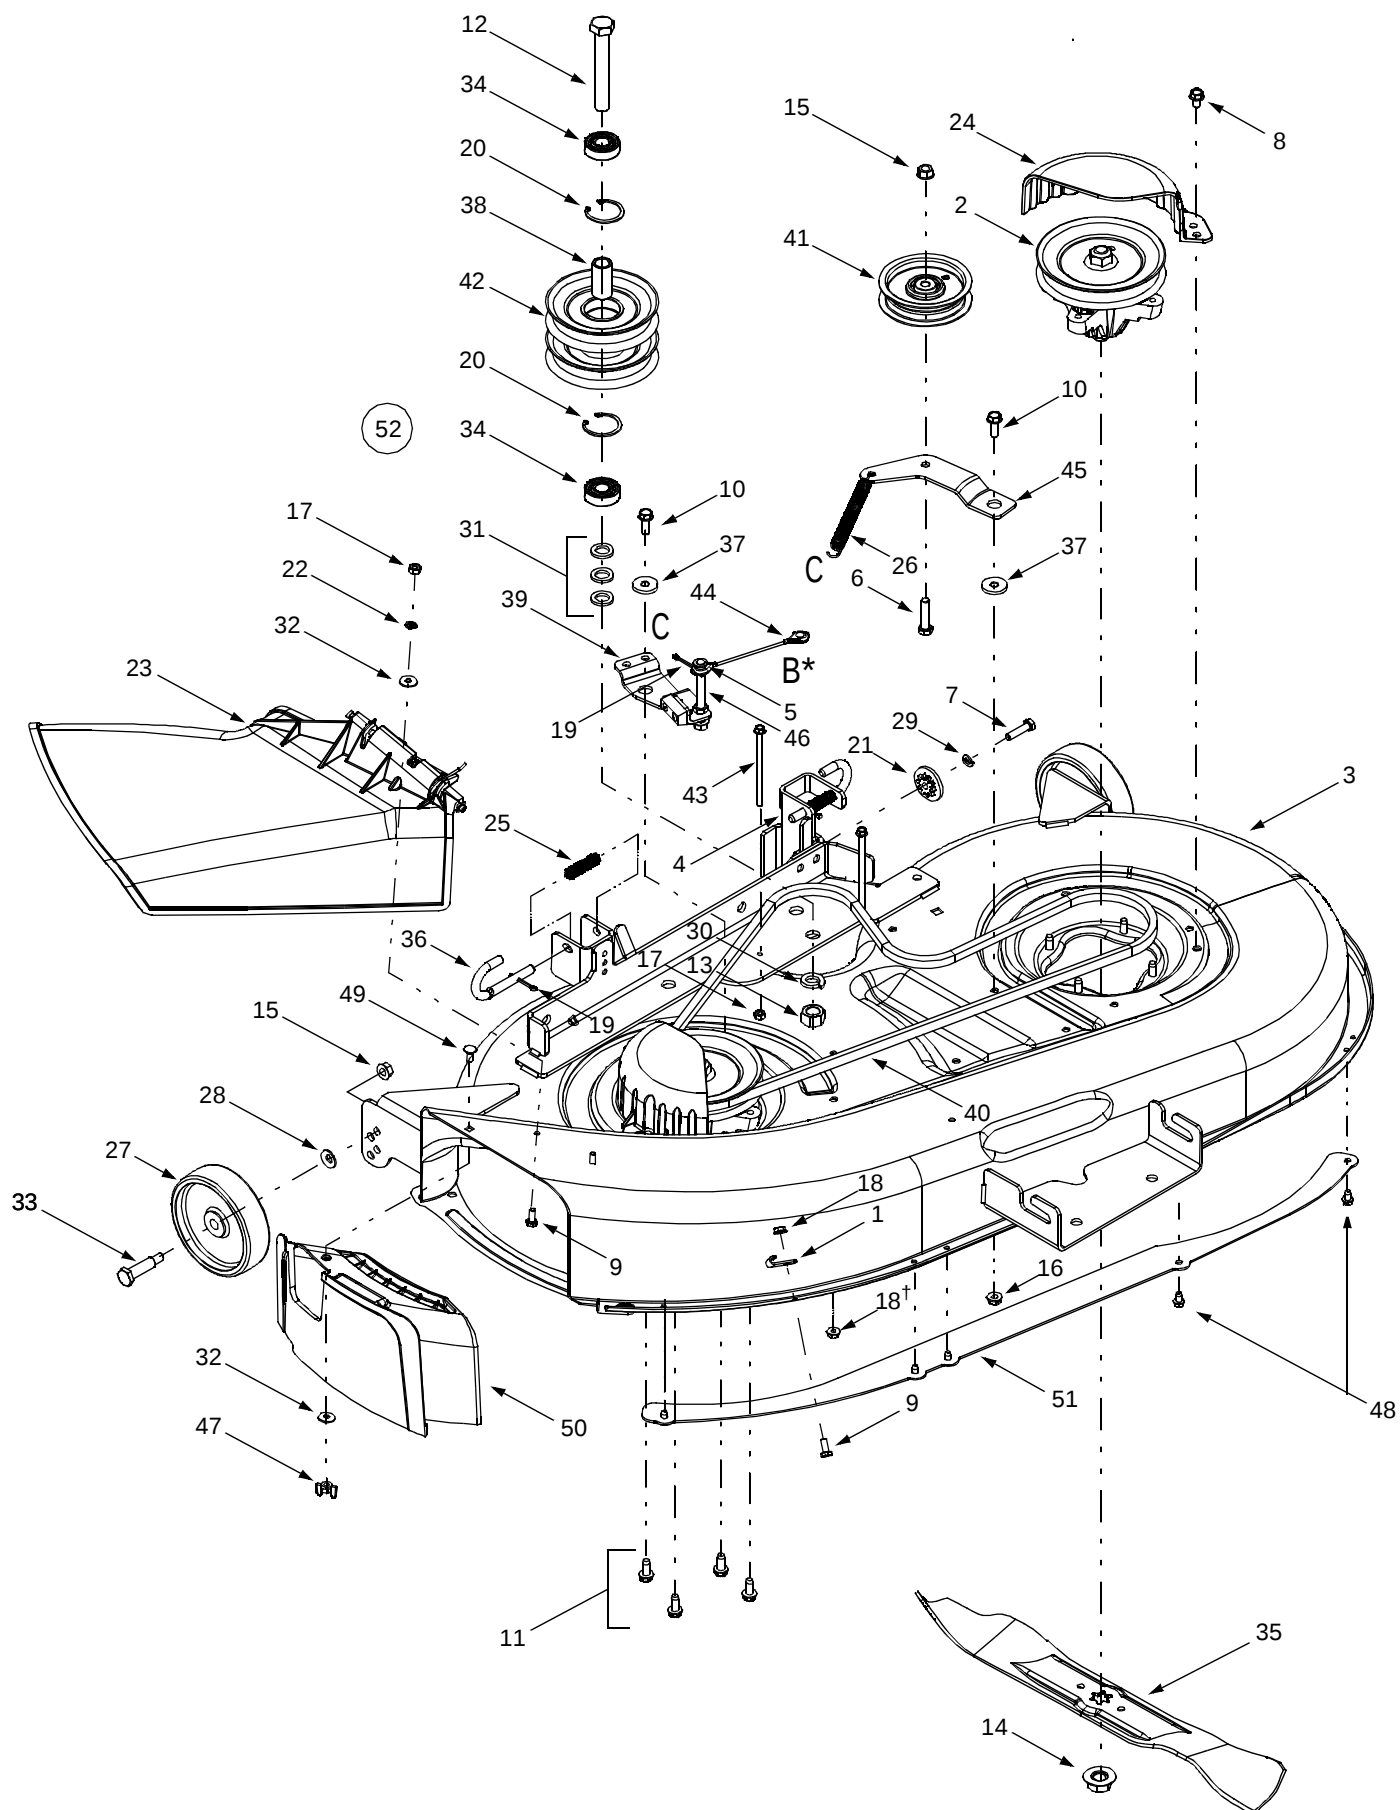

# Model Y614G

| REF. NO. | PART NO.  | DESCRIPTION                            | REF. NO. | PART NO.  | DESCRIPTION                                        |
|----------|-----------|----------------------------------------|----------|-----------|----------------------------------------------------|
| 1        | 16606     | Retainer Hook                          | 27       | 734-0973  | Deck Wheel, 5 x 1.38                               |
| 2        | 618-0565  | Spindle Assembly, 5.75 Dia.            | 28       | 736-0105  | Bell Washer, .401 x .87 x .063                     |
|          | 756-0980  | Pulley Only                            | 29       | 736-0119  | Lock Washer, 5/16                                  |
| 3        | 683-0198D | 42-inch Deck Shell                     | 30       | 736-0158  | Lock Washer, 5/8                                   |
| 4        | 683-0254  | Deck Adjustment Bracket w/ Weld Nut    | 31       | 736-0162  | Flat Washer, .64 x 1.0 x .12                       |
| 5        | 736-0140  | Flat Washer, .385 x .62 x .063         | 32       | 736-0270  | Bell Washer, .265 x .75 x .062                     |
| 6        | 710-0520  | Hex Cap Screw, 1/4-20 x 1.5            | 33       | 738-0373  | Shoulder Screw, .498 x 1.53                        |
| 7        | 710-0528  | Hex Cap Screw, 5/16-18 x 1.25          | 34       | 741-0524  | Bearing, .625 x 1.574 x .470                       |
| 8        | 710-0604A | Self-tapping Screw, 5/16-18 x .625     | 35       | 742-0616  | Three-in-one Blade, Star Center, 21.23"            |
| 9        | 710-0751  | Hex Cap Screw, 1/4-20 x .62            | 36       | 747-1116  | Deck Release Pin                                   |
| 10       | 710-1238  | Hex Head Washer Screw, 5/16-18 x .875  | 37       | 748-0331  | Shoulder Spacer, .625 x .324                       |
| 11       | 710-1260A | Self-tapping Screw, 5/16-18 x .75      | 38       | 750-0932A | Spacer, .635 x .88 x 1.72                          |
| 12       | 710-3151  | Hex Cap Screw, 5/8-18 x .875           | 39       | 683-0440  | Deck Brake Assembly                                |
| 13       | 712-0337  | Hex Nut, 5/8-18                        | 40       | 754-0498  | Deck Belt                                          |
| 14       | 712-0417A | Hex Flange Nut, 5/8-18                 | 41       | 756-0627B | Idler Pulley, 3.5                                  |
| 15       | 712-0431  | Flange Lock Nut, 3/8-16                | 42       | 756-1202  | Double Pulley, 5.0                                 |
| 16       | 712-3004A | Flange Lock Nut, 5/16-18               | 43       | 710-1830  | Self-tapping Screw, 1/4-20 x 4.0                   |
| 17       | 712-3006  | Hex Nut, 1/4-20                        | 44       | 746-0970  | Brake Cable, 5.05                                  |
| 18       | 712-3027  | Hex Flange Lock Nut, 1/4-20            | 45       | 783-1291  | Idler Bracket                                      |
| 19       | 714-0470  | Cotter Pin, 1/8 x 1.25                 | 46       | 711-1534  | Pin, 3/8-16, 3/8 x 3.27                            |
| 20       | 716-3020  | Internal Snap Ring                     | 47       | 712-3087  | Wing Nut, 1/4-20                                   |
| 21       | 717-1553A | Deck Adjustment Gear                   | 48       | 710-0599  | Self-tapping Screw, 1/4-20 x .5                    |
| 22       | 726-0233  | Push Nut, .25 x .5                     | 49       | 710-0134  | Carriage Screw, , 1/4-20 x .62                     |
| 23       | 731-1032B | Side Discharge Chute Assembly          | 50       | 731-2363  | Mulch Plug                                         |
| 24       | 731-2486  | Belt Cover                             | 51       | 783-1146A | Deck Skirt                                         |
| 25       | 732-0306  | Compression Spring, .406 x .531 x 1.75 | 52       | 753-0894  | Deck Assembly Complete, Manual PTO (w/o Mulch Kit) |
| 26       | 732-0470A | Extension Spring, .50 x 4.74           |          |           |                                                    |

**IMPORTANT:** For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.