

150 Chain Saw UT-10184-R

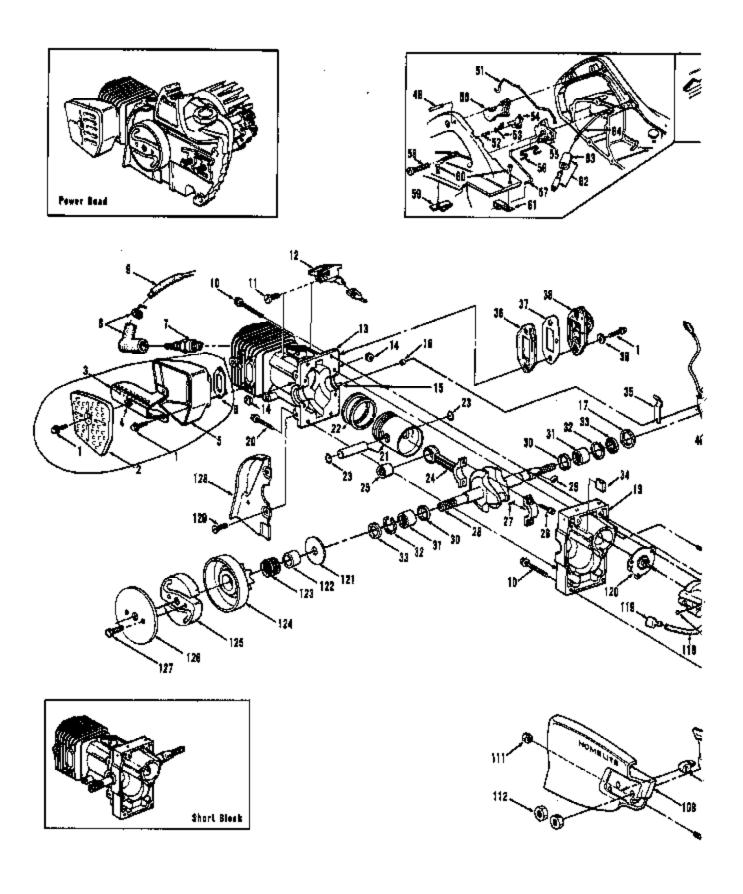

150 Chain Saw UT-10184-R Page 2 of 6

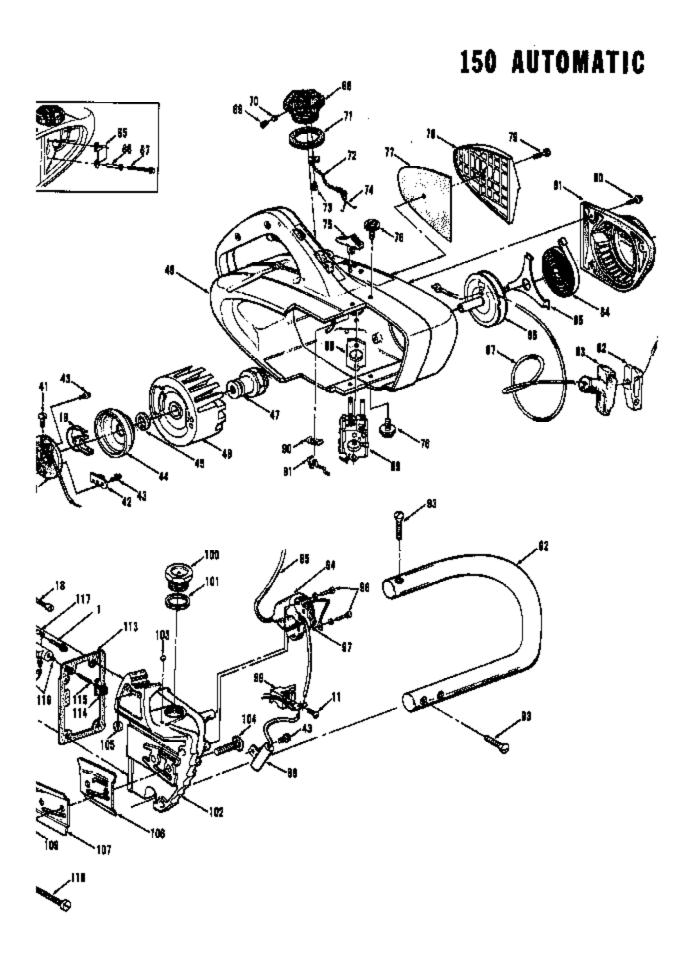


150 Chain Saw UT-10184-R Page 3 of 6



10.	Description	Part No.		No.	Description	Part No.	•
1	SCREW-hex washer hd., 8-32 g 1/2	60983	7	6.6	DEFLECTOR-Liv	88594	
2	CAP-mutfler (diffuser type)	689 55-I	1	66	BUSHING-flanged	66560	
	DAP-muffler - accessory - louver type	68547-I	1	67	SCREW-hex washer hd., 10-32 x 2	32224	
mc	ARRESTOR-Fpurk (Accessory-cotsbown)	A-88666-1 A-88664	1 1	66	CAP-fuel filler	A-69800	
1	BAFFLER-muffler Includes:	V-0000#	- .	89	Includes:	40484	
	NUT-olipob, 8 x 32	81224	ī	7D	FILTER-filter cap	49454 694 51	
	BODY-muffler	68646-I	ī	71	VALVE-sheek GASKET-fuel filler cap (note 4)	6950I	
	GABKET-muffler	68642	í	72	CHADY-bead	99905	
	BPARK PLUG	68816-8	1	18	SCREW-pan bd., 6 x 1/4 Plante	82256	
	TERMINA L-high tension lead	A-88878-A	ī	74	RETAINEN-filler cap (note 4)	89503	
	BLEEVE-wire (fibrogiass)	68625	1	75	BUTTON-oboke	68561	
	BOREW-box washer bd., 8-83 x 1-1/4	82194	4	≯ 76	SCREW-Sems ben hd., slotted, 10-24 x 5		
	SCREW-pan hd., Plastite, & s 8/8	82215	2	77	ELEMENT-air filter	88682	
	TERMINAL & INSULATION	A-69341	Ī	78	COVER-sir filter	68531-A	
	SKORT BLOCK	A-68624-C	1	79	BCREW-filter cover retaining	66685	
	Includen:			860	SCREW-hex weeker hd.	80963	
	CYLINDER & CRANKCASE (note 1)	A-88643-O	í		STARTER-complete	A-B#611-A	
	Includes:				Includes		
	NUT-hax centerlock, 8-82	81 <u>2\$</u> 3	4	91	HOUSING-starter	A-68628-A	
	PIN-dowsi	64302	1	*82	INSERT-starting rope	68937-A	
	SEA L-post	69448	1	₩ 83	ORIP-starting rope	64166-B	
	SKAL	69973	1	84	8PRING-rewind	65107	
	SUREW-Herns bez hd., 8-32 x 1	86021	4	86	RETAINER-rewind spring	68612	
	POINTS-breaker (note 2)	A-69483	1	BB	PULLRY-etarter	A-8884 B	
	BOREW-box washer hd., 6-31 x 3/4	82248	3	67	ROPE-starter, ** (42" in length)	6952B	
	PETON & PIN	A-08642	I	88	SPACER-corburetor	885\$7	
	Includes:	66608	2	88	CARBINETOR-Walbro HDC 20	A-69959	
	RING-platon	64613	2	90	8PRING-chaise	68564-A	
	RING-retaining ROD-connecting	A-8861B	î	91 92	ROD-choke HANGLE BAR	68552 A -68589-1	
	includes:	A-0002B	•	98	SCREW-bex washer bd.		
	BEARDO-peedle	6851B	1	94	COIL-ignition	82218 A-68849	
	SCREW-cap bey socket bd.	69918	ę.	61	Includes:	W-08048	
	BEAR ING-needle (set 18)	A-08511	1	25	LEAD-hi tension	88828	
	CRANKBHA FT	685D7-1	ī	••	RETAINER-poil (not shown)	68267	
	KEY-woodraff	65128	ī	949	SCREW-bex washer bd.	82248	
	BEARING-thruit	68509	2	67	CCRE-coil	A-68848	
	BEARDIO-roller	68618	2	•	Includes	11-000-10	
	RING-retaining	68814	2		RETAINER-poil (not shown)	88267	
	BEAL-shaft	68518	2	88	CONDENSER	68648	
	OOVER-vent	68990	1	8-9	BLOCK-junction	83618	
	CLAMP-hi-tention (sed	68623	1	100	CAP-oil filler	A-66567	
	GASKET-Estako	03484	1		Includes:		
	COVER-pulse	66671	1	101	GASKET-oil filler cap	68533	
	MANIFOLD-intake	A-88620-1	1	*102	TANK-oil (note 6)	A-66802-44	Ĺ
	WASHER-figt, 7/16 x 8/16 x 1/16	84103	2		tooludee		
	BOX-breaker (acte 2)	A-89593	1	10.9	HALL-stainiess steel	55217	
	Includes:			104	BOLT-guide bar, 5/18	66753	
	BRA L-post (index \$18)	69445	1	105	NUT-beg genterlook, 10-24	9120 8	
	SRAL (Index #17)	69973	1	*108	PLATE-guide bar (inner)	A-00e78	
	SCREW-pen hd. Plastite, 8 x 3/8	82215	1	+107	FLATE-guide bar (outer)	67299-A	
	TERMINAL-ground	68691		108	CCVER-drivecase	A-00014-1	
	SCREW-pan hd., 8-32 x 8/8	80671 A-68682	3 1	4.60	Discharden		
	COVER-breaker box Includes:	W-00005	-	10B	PIN-guide har adjusting	65118-1 45125-4	
	indiges: BRAL-breaker box cover	69618-A	1	110 111	SCREW-guide her adjusting NUT-hex centerlook, 10-32	65175-A 8120 6	
	ROTOR	88830	1	111	NUT-nex centertock, 10-32 NUT-hex, 5/16-18	8120 0 8119 0	
	NUT-rotor (left hand thread)	A-8861D	1	+113	GASKET-oll tank	686 89 -B	
	ENOME COVER	A-68644-1	ì	114	SCREW-otler spring	48819	
	Includes:		-	115	SPRING-check valve	66570	
	PDI-trigger	68548	1	118	BALL-check valve	50D51	
	TRIGGER-throttle	68849	ī	110	PUMP-sulpressio of (note 7)	A-69363	
	ROD-throids	6885D	1	118	LINE-oil ptok-up	68561	
	PIN-trigger latch	68641	1	119	FILTER-oil	A-66583	
	SPRING-un office (atch	68628	1	+120	PLUNGER-oil pump (note ?)	A-86683-B	
	LATOH-throttle	66535	1	121	WASHER-thrust	85084	
	BUTTON-stop switch	6888D	1	122	RACE-Inner	85748-A	
	B PR ING-a witch	88881	1	125	BEARING-roller	84184	•
	LINK-grounding switch	88818	1	134	SPROCKET & DRUM	A-65088	
	SCREW-fil.hd., 8-32 x 5/8	EB148	8	•	CLUTCH & PLATE	A-69953	
	CLAMP-bl tension lead	86439	1		Includes:		
	RIVET-tubular (steel)	86/361	2	125	CLUTCH	8838 2-1 A	L
	CONTACT	88577	1	128	PLATE-olutoh	69915	
	FILTER-No.	A-88823	1	127	SCREW-bex hd., 10-24 x 1/2, statule	88	
	Includes:	44000 -			Flas	l 82266	
	ELEMENT-felt filter (note 8)	64088-1	1	128	SHIELD-sawdust	69898	
	LINE-fuel plok-up	68562	1	129	SCREW-pan hd., Taptite, 8-32 x 5/16	82108	

* Denotes new parts

150 Chain Saw UT-10184-R Page 5 of 6

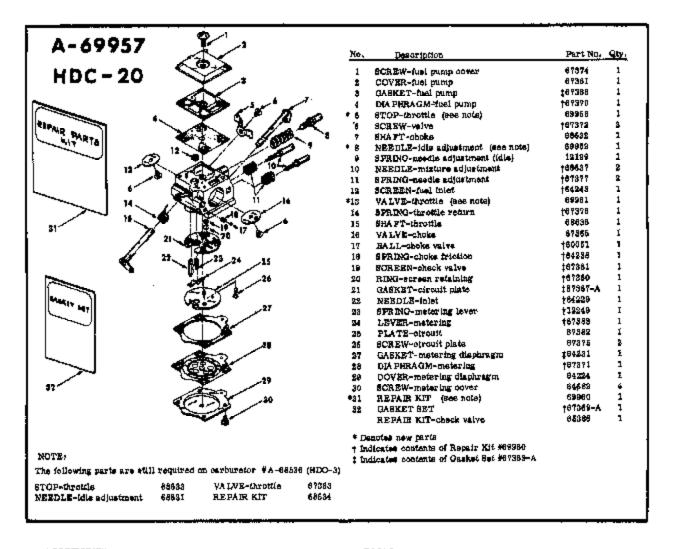

ACCESSORIES	
ARRESTOR-spark	A-88886-1
CAP-muffler - louver type	68547-1
*DECAL SET	A-69048-A
Includes: [four)	
"UHAIN CIL", "ON-OFF", "Starting	
Instructions", and "150 Automatic"	
GREASE-all temp multi purpose	24551
KIT-hand gward	A-69472
Includes:	
LOOKWASHER-interns)	88026
SOREW-slotted box hd., trimmed, 10-24 x 8/6	82249
SPACER.	69414
WASHER-cupped opting	696 76
KIT-spiked bumper	A-68866
Includer:	
2 NUTS-centerbook hex., 10-38	BIZOB
2 SCR SWB-10-32 x 1/2	60646
ROPE-starting, #4 size, 250 ft. reel	686€8
PAINT	
Paint-black, 12 oz. spray can	22772
Paint-red, 12 oz. spray can	23475
OASE-carrying	A-68988
NOTE: BLERVE-69617 to be used only on units	

prior to a/a 49411583

TOOLS	
GAGE-feeter (, 018 ptnk plantic)	28466
LOOTITE	93468-B
PLUG-Installation bearing	B3756
PULLER-magneto rotor	A-24844
Includes:	
4 NUTS-hex canterlook, 10-82	81208
4 BCREWS-hex hd. apinlook, 10-32 x 1-3/8 .	
4 WASHERS-flat, ₹10	64009-1
ecrewdriver	24541
SKIN-(.0126 black plantic)	24.80B
SPACER-plug	24 54 9
WRENCH-socket	68581
WRENCH-spanner (clutch)	A-83698-A
Includes:	
PIN-clubob spanner	28 117-A
NCTE 1 - On cylinder and crankmage A-68643, A-68643-H built prior to s/n 42411563, flarvice Memo 4912CS and Dealer Service new design to allumin bumper sheets 88517 and vent passage	see Branch (on Memo #500 ate use of
NOTE 6 - Units prior to s/n 30071001 use: breaks breaker box A-63647	er points A-68666
NOTE: 3 - Use with washer 64162 only in fuel pick	03989-A qu-
NOTE 4 - With first filler cap A-88283-B uses gas and retainer 68751	kat 68861
NOTE 5 - Units prior to s/n 23060586 use: screw	82216
NOTE 6 - Units prior to s/o 19350722 uses oil but	k A-68809-A
NOTE 7 - Units with all pump A-66686 and A-685 2 gasksts 68650-A	63-A require

Part No. Description

25488-B Loctite

Bpring-meedle

Gags-feeler

Paint-red

Paint-black

Spring-metering lever 1

12199

12249

22488

22772

23476

88508

68509

88512

* Denotes new parts

A-68511

Ring-platon

Bearing-thrust

Bearing-needle

Bearing-peedle

Qty.

1

1

2

1

68689

88841

A-68642

1

Part No. Description

•A-88520-1 Manifold-intake

1 A-68529-A Housing-starter

Bearing-roller

Ring-retaining

Red-connecting

Beal-shaft

68818

88514

88519

A-68518

25468- B	Loctite	1	A-00023-A	Housing-surrest	4	W-00000-I	Afres Wr-s park	1
A-23696-A	Wrench-spanner	1	86528	Rope-starter 44	1	66671		1
23786	Plug-installation	1	66830	Rotor	1	468837-A	Insert-starting rops	1
23717-A	Pin-clutch spanner	1	86521-A	Cover-air filter	1	68848		1
24900	Shim	1	68832	Element-uir filter	1	A-68936	Case-carrying	1
24541	Screwdriver	1	68623	Gasket-oll Riler cap	1	68956-I	Cap-muffler	1
A-24644	Puller-magneto rotor	1	68534	Deflector-air	1	68890	Cover-vent	1
24548	Spacer-plug	1	58535	Borew-Illier pover	1	*A-8904B-A	Decal Set	1
24551	Отекве	ī	66037	France-carburator	1	A-89341	Terminal & Insulation	1
55217	Ball-steinisss steel	ī	88642	Gasket-muffler	1	A-69863		1
A-58373-A	Terminal-high tension	-	66543	Condenser	1	89448		1
58753	Boit-5/16	2	68545-1	Body-muffler	ī	69451		1
60051	Ball-check valve	3	68547-1	Cap-muffler	ī	89454	Filter-filler cap	i
	Element-felt filter	1	68648	Pin-trigger	i	A-69472	Kit-hand guard	ī
64083-1		1	08549	Trigger-throttle	i	69474	Spacer	î
64124	Bearing-roller	i	68550	Red-throttle	i	69475		ī
*84155-B	Grip-starting rope	i		Button-chake	i	A-69483	Points-breaker	î
64224	Cover-metering	1	68551 68681	Spring-switch	1	A-89500	Cap-fuel filler	î
84228	Needle-inist	_			ī	8950I	Gasket-fuel filler	i
64281	Gasket-metering	1	68584-A	Spring-choke	ī	89502	Chain-bead	i
84238	Spring-choke	I	68852	Rod-choke	ī		Retainer-filler cap	1
64243	Screen-fuel iniet	1	A-88557	Cap-oil filler	_	89503	•	
84308	Pin-dowel	1	68560	Bushing-flenged	2	A-69533	Box-breaker	1
64689	Screw-metering cover		86561	Line-oil pick-up	1	89915	Plate-clutch	1
84813	Ring-retaining	2	68562	Line-fuel plok-up	1	A-69928	Filter-Arel	
A-66033	Sprocket & Drum	1	A-68864	Baffle-muffler	1	*A-69905	Clutch & Plate	1
650 6 4	Washer-thrust	1	88570	Bpring-check valve	1	A-69957	Carburstor-Walbro	1
66107	Spring-rewind	1	68576	Link-grounding	1	+69258	Stop-throttle	1
65112-1	Pin-guide bar	ĭ	68277	Contact	Í	*09969	Needle-idle adjustment	
65128	Key-woodruff	I	68580	Button-stop switch	1	*6996 0	Repair Kit	1
65175-A	Borsw-guide bar	I	*A-68883-E	Plunger-oil pump	I	*89961	Valve-throttle	Į
65386	Repair Kit	1	+08589~B	Gasket-oil tank	1	*68973	Beal	1
85748-A	Race-inner	1	68591	Terminal-ground	Ì		ING PARTS	
*67299-A	Plate-guide bar	1	A-68592	Cover-breaker box	1	*69335-A	, -	4
*67800-A	Plate-guide bar	ī	A-68598	Filter-oil	1	*69919	Borew-cap socket hd.	2
67380	Ring-screen retaining	ī	68596	Shield-sew dust	1	80571	6-32 x 3/8	3
67361	Cover-fuel pump	I	A-68599-I	Handle Bar	1	80848	10-22 x 1/2	2
67865	Valve-choke	1	*A=68609-2A	Tank-oil	1	80983	$8-32 \times 1/2$	10
67987-A	Gasket-circuit plate	1	A-68610	Nut-rotor	1	81196	Nut-5/16-18	2
67368	Carket-fuel pump	1	A-68611-A	Starter-complete	1	81208	Nut-10-32	7
67969-A	Gasket Bet	1	68612	Retainer-rewind	1	81208	Nut-10-34	1
67370	Diaphragm-fuel pump	1	68813	Block-junction	1	81228	Nut-8-32	¢
87371	Disphragm-metering	1	A-68614-I	Cover-drivecase	1	81224	Nut-8-32	1
67879	Sorew-valve	ā	68616-8	Spark Plug	1	82146	8-32 x 5/8	8
87374	Borew-fuel pump	1	68618-A	Seal-breaker box	1	82162	10-32 x 1-8/8	4
87375	Sorew-circuit plate	2	68619	Screw-ciler spring	ī	82194	8-32 x 1-1/6	4
67376	Spring-throttle	1	58628	Clamp-hi tension	ĩ	82185	8-32 x b/16	3
		3	A-88824-C	Short Block	ī	82215	6 x 3/8	3
67377 67381	Spring-needle adj. Spreen-pheck valve	1	68625	Sleeve-wire	1	82218	Screw-hox washer hd.	3
		1	88828	Spring-throttle laich	î	82324	10-32 x 2	2
67362	Plate-circuit	1		Lead-hi tension	i	82248	8-82 x 3/4	4
67363	Lever-metering		68629		1	82249	10-24 x 5/8	ī
68257	Retainer-coll	Ţ	68632	Bhaft-shoke	1	822 5 6	6 x 1/4	î
68362-1A		Í	86836	Inteh-throttle	-	82286	10-24 x 1/2	à
68484	Casket-intake	1	88638	Shaft-throttle	1	82286 83025		1
68507-1	Crankshaft	1	86837	Nesdle-mixture	-	83025 84029_1	Washer-lock	1
****	TO I	•	E 22 0 0	FIRM A BE TONG OF TOOM	7	MAILIDM-1	WE 5.70T ~₹ (()	_

Qty.

2

1

2

A-58645

A-68648

A-88649

68651

A-68665

Part No. Description

1 A-68686-1 Arrestor-spark

84009-1 Washer-#10

7/16 x 3/18 x 1/18

Rivet-tubuler

6-32 x 1

84103

86081

88021

Pulley-starter

Core-coil

Coll-ignition

Wrench-socket

Kit-spiked bumper

Qty.

1

1

1

HOMELITE TEXTRON

A-88645-C Cylinder & Crankcase 1

A-88644-1 Engine Cover

Clamp-hi tension lead 1

1

Pin-trigger (atch

Piston & Pin

2

2