


123HD60


Spare parts
Ersatzteile
Pièces détachées
Reserve onderdelen
Repuestos
Reservdelar

A


*compl 544 30 46-01

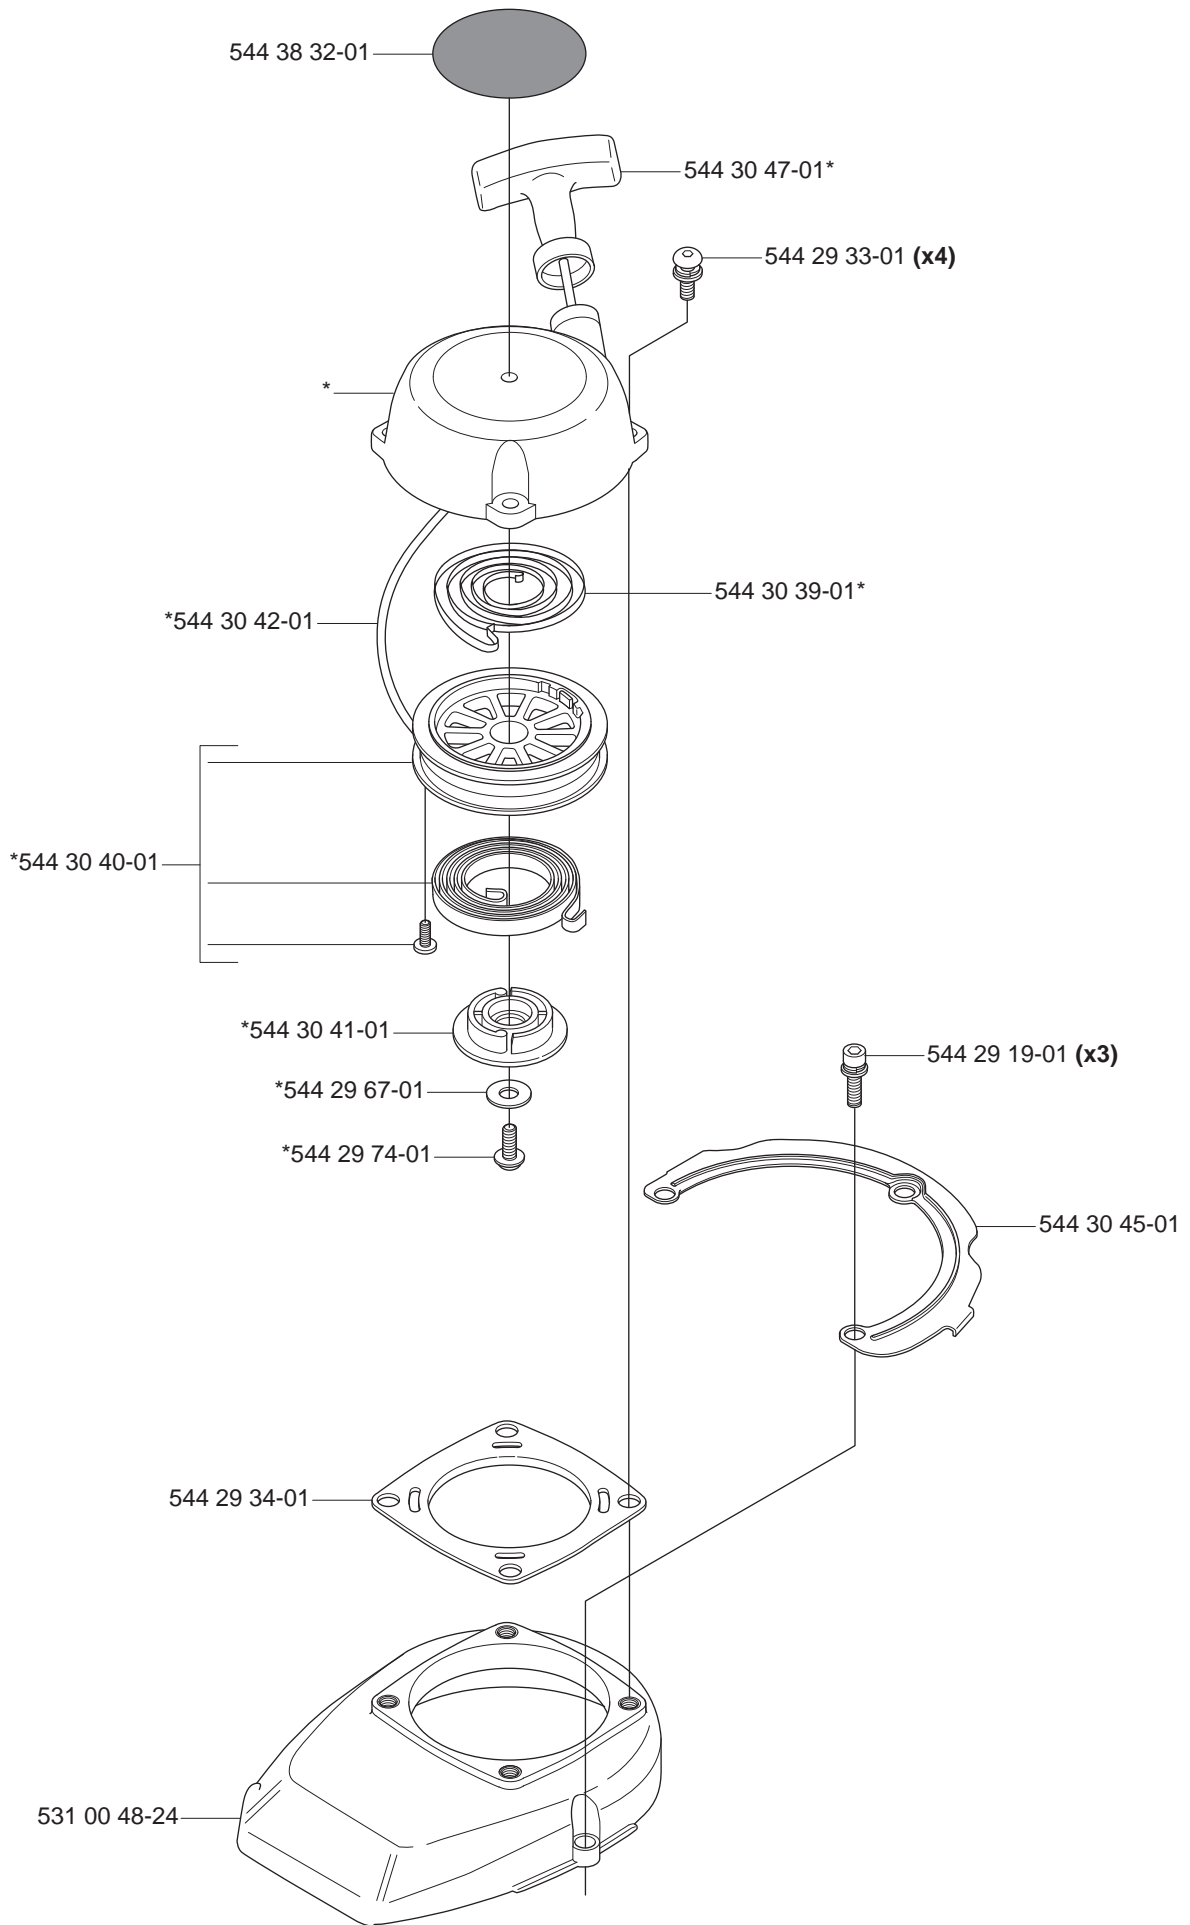


B

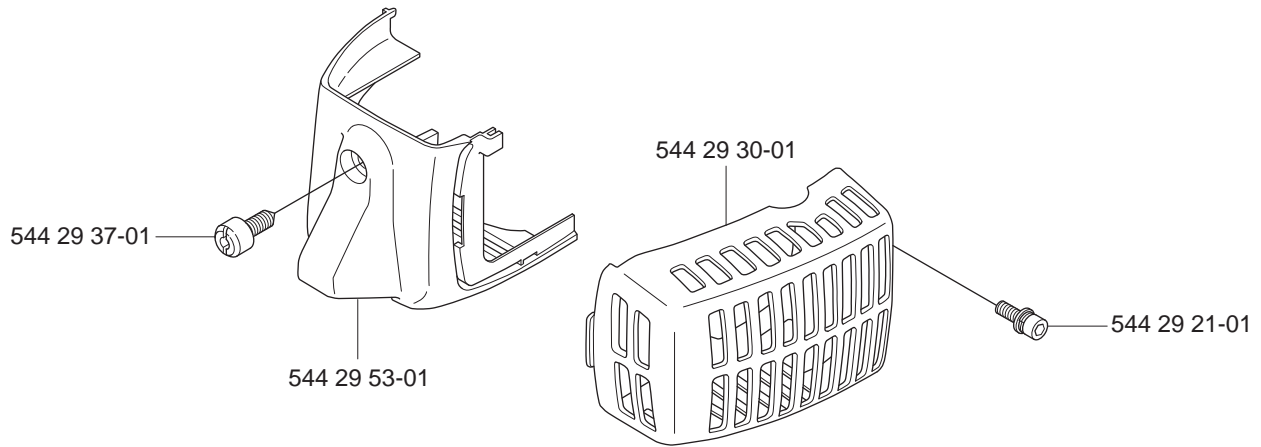


C



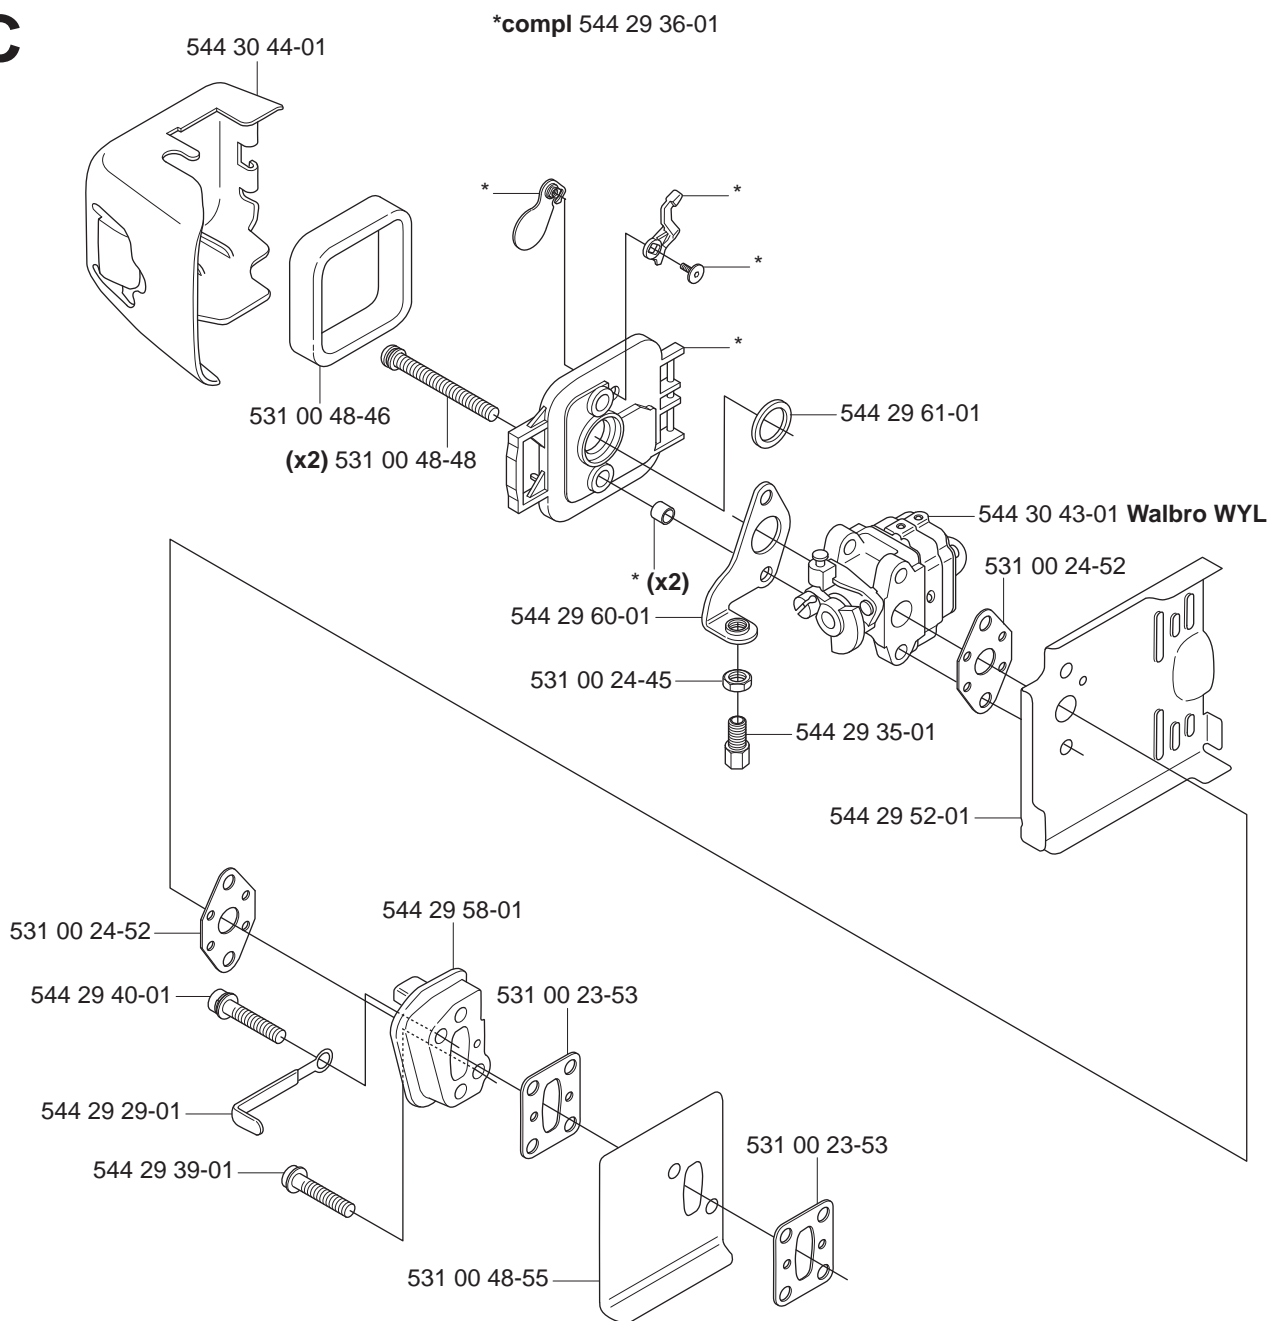


D

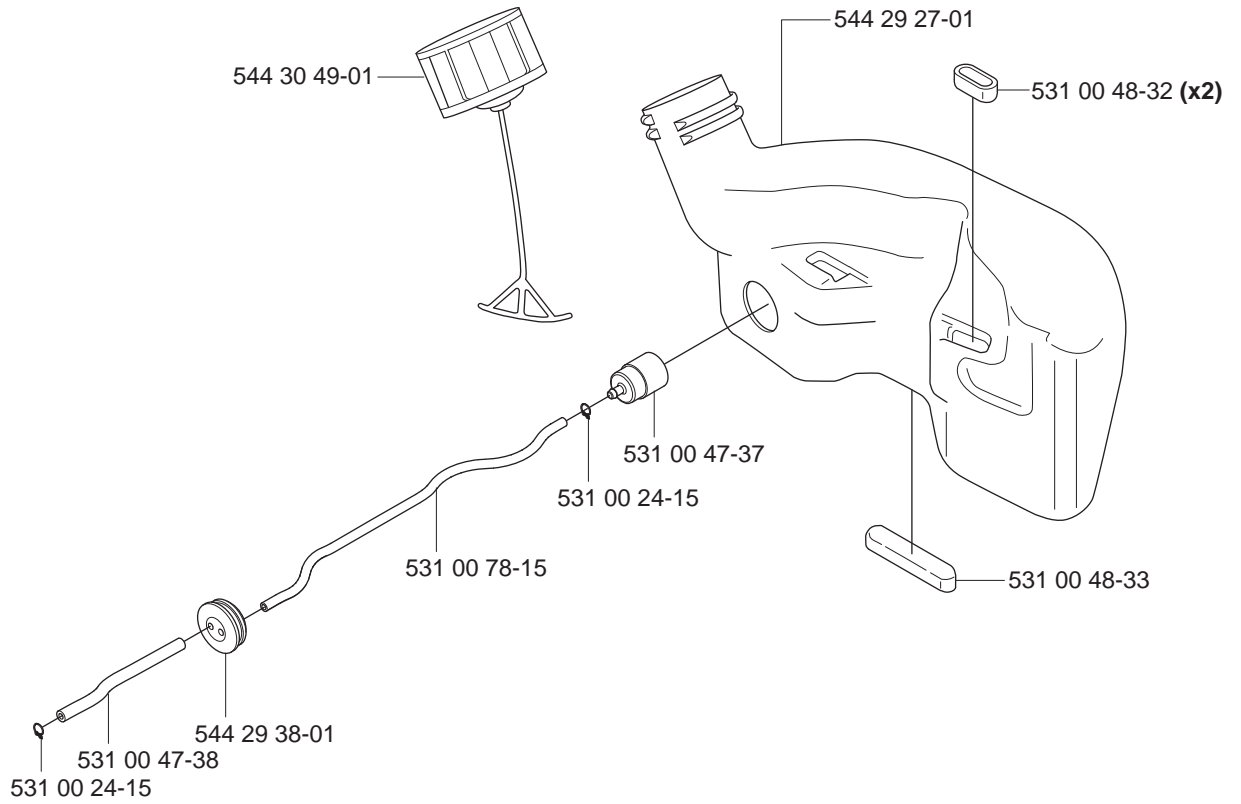


E

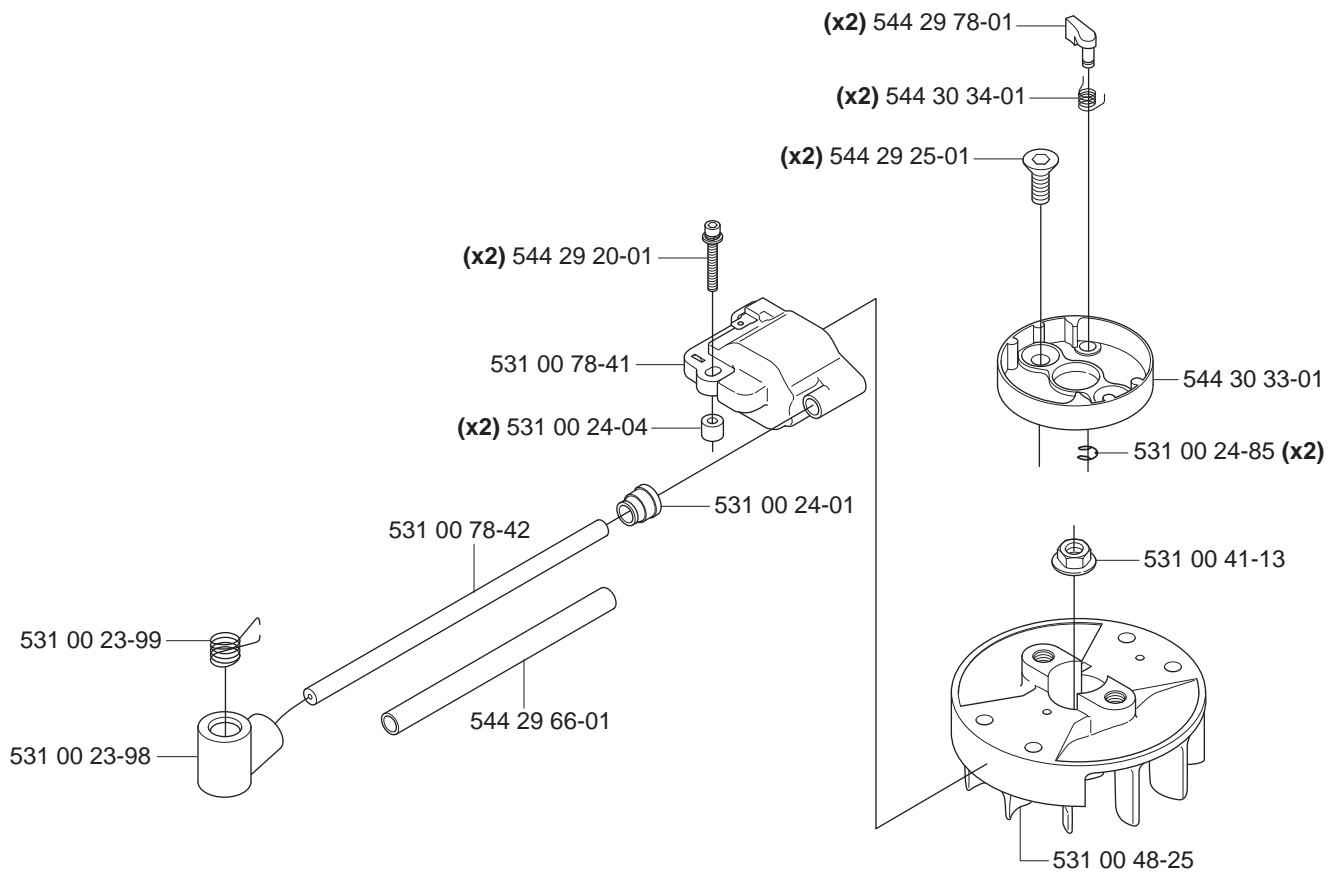

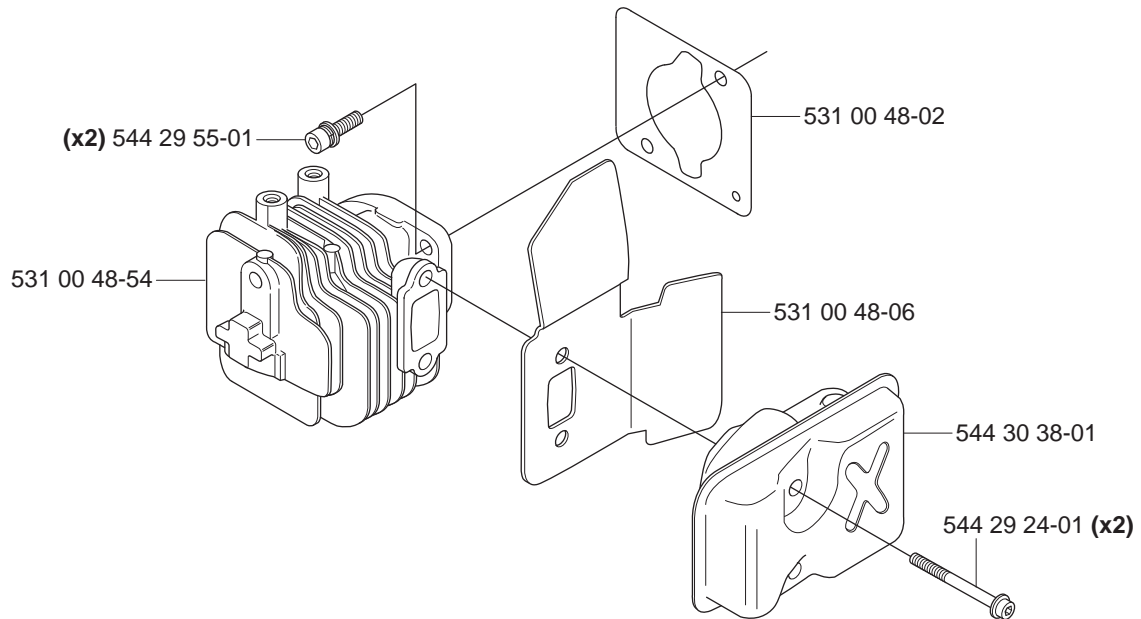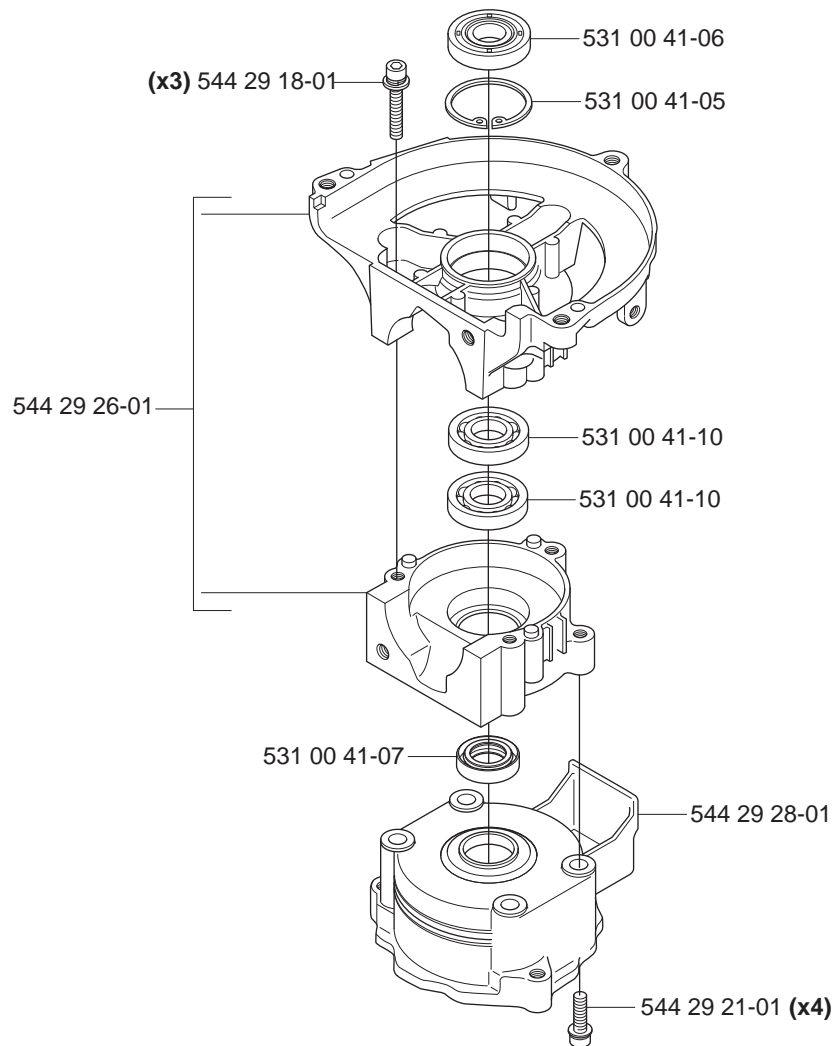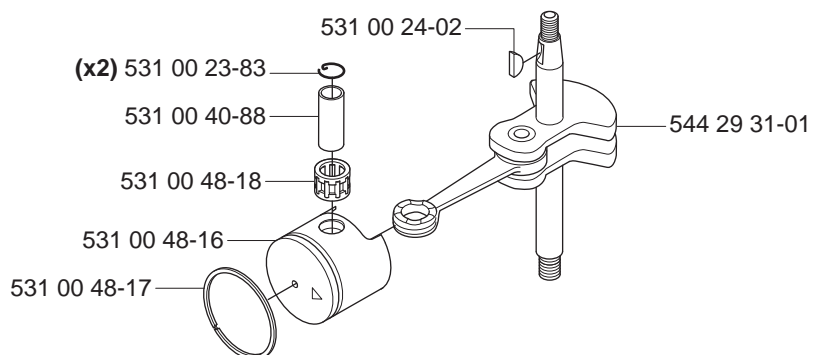
F**G****H**

J

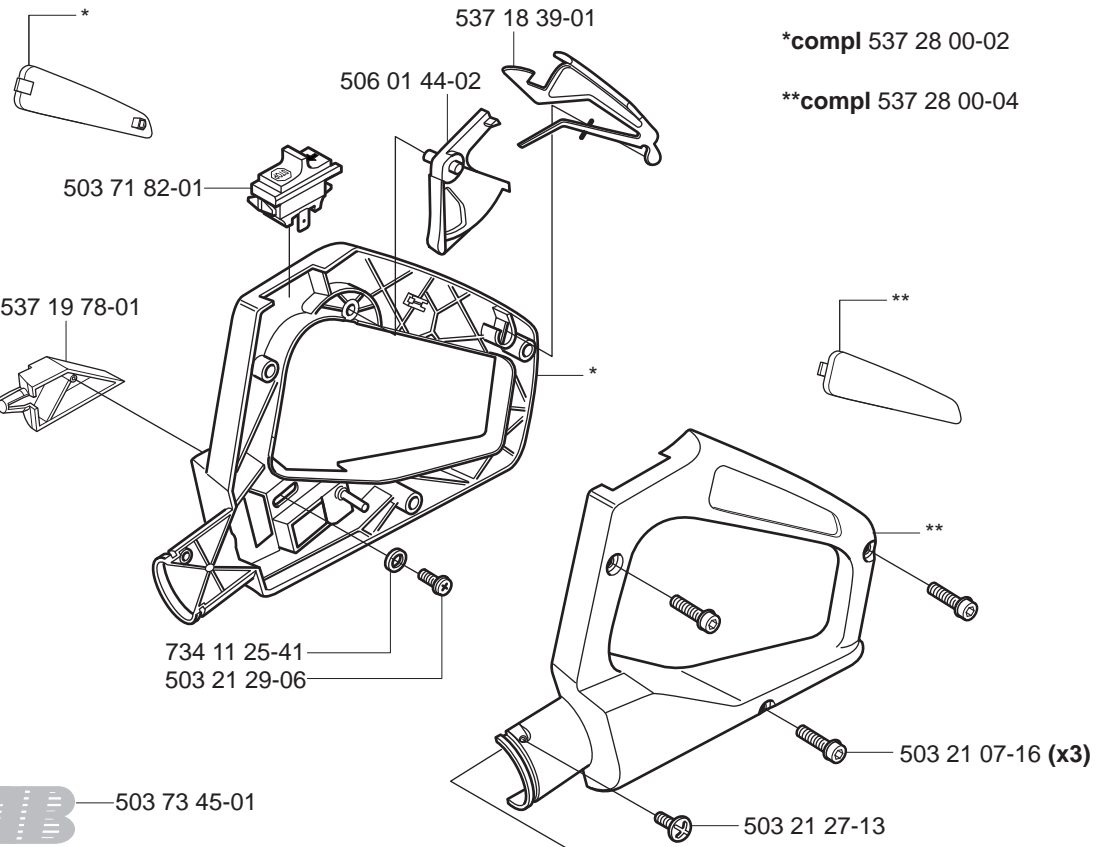


*compl 537 28 00-02


**compl 537 28 00-04

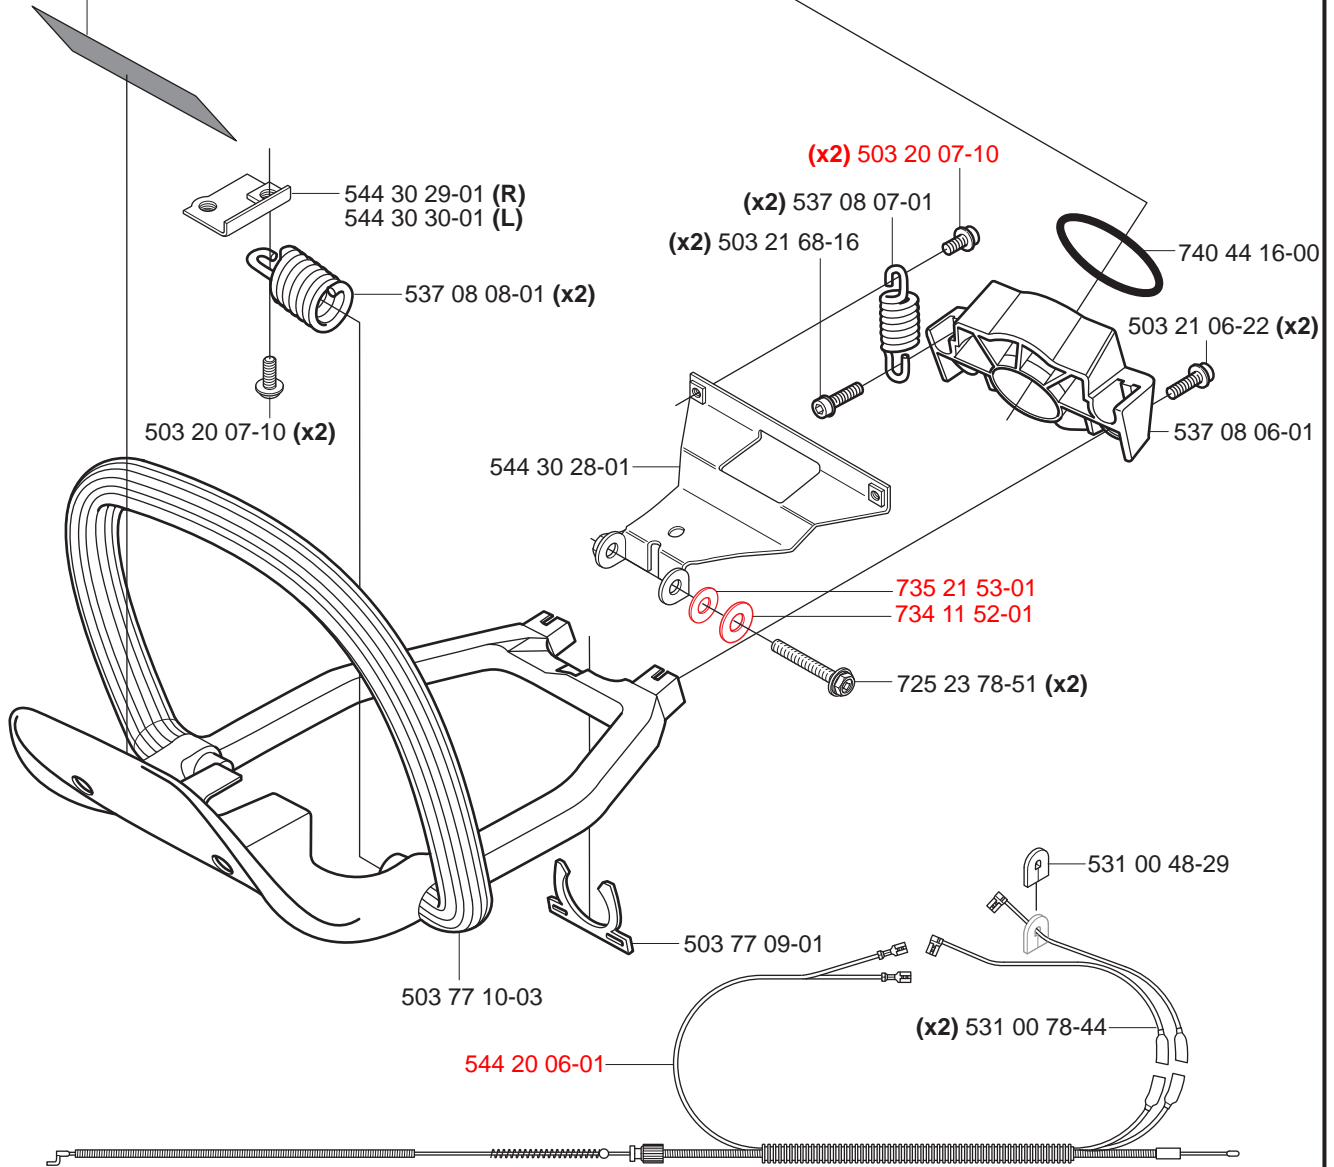


K

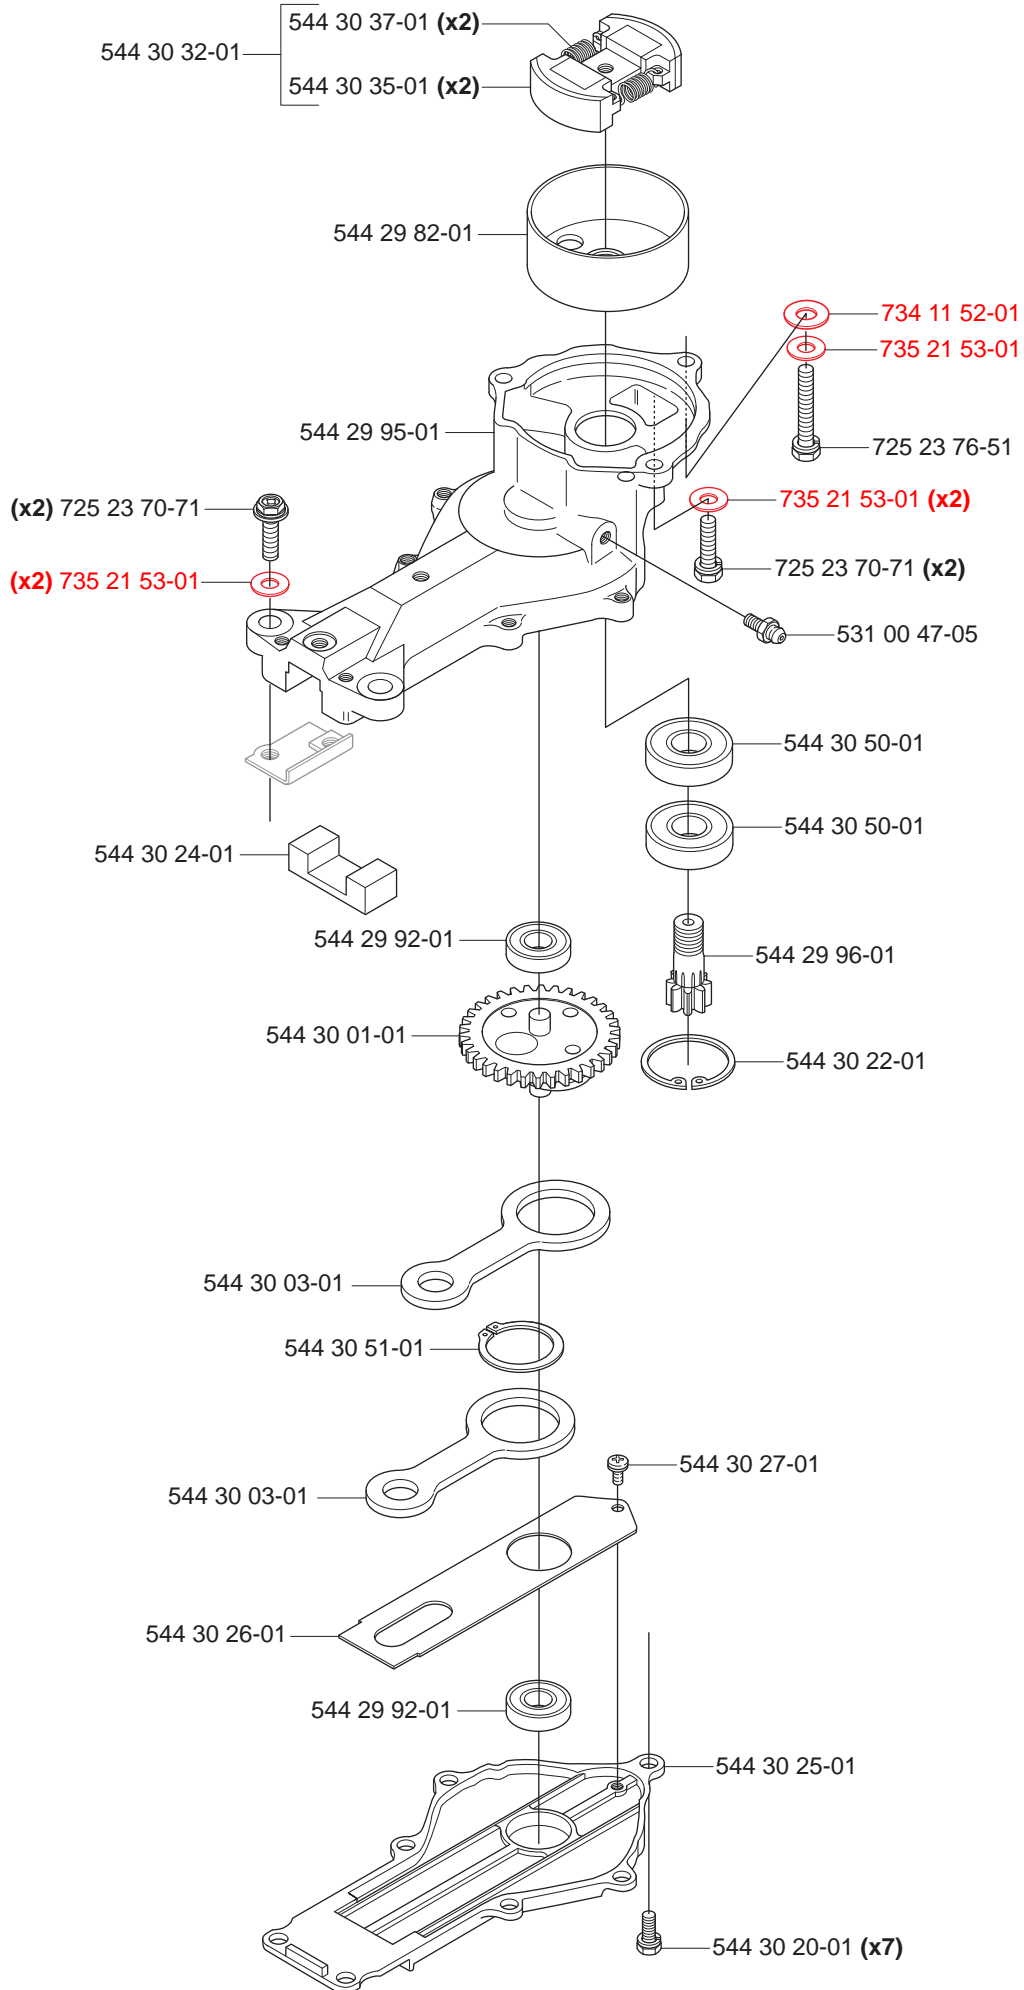





L

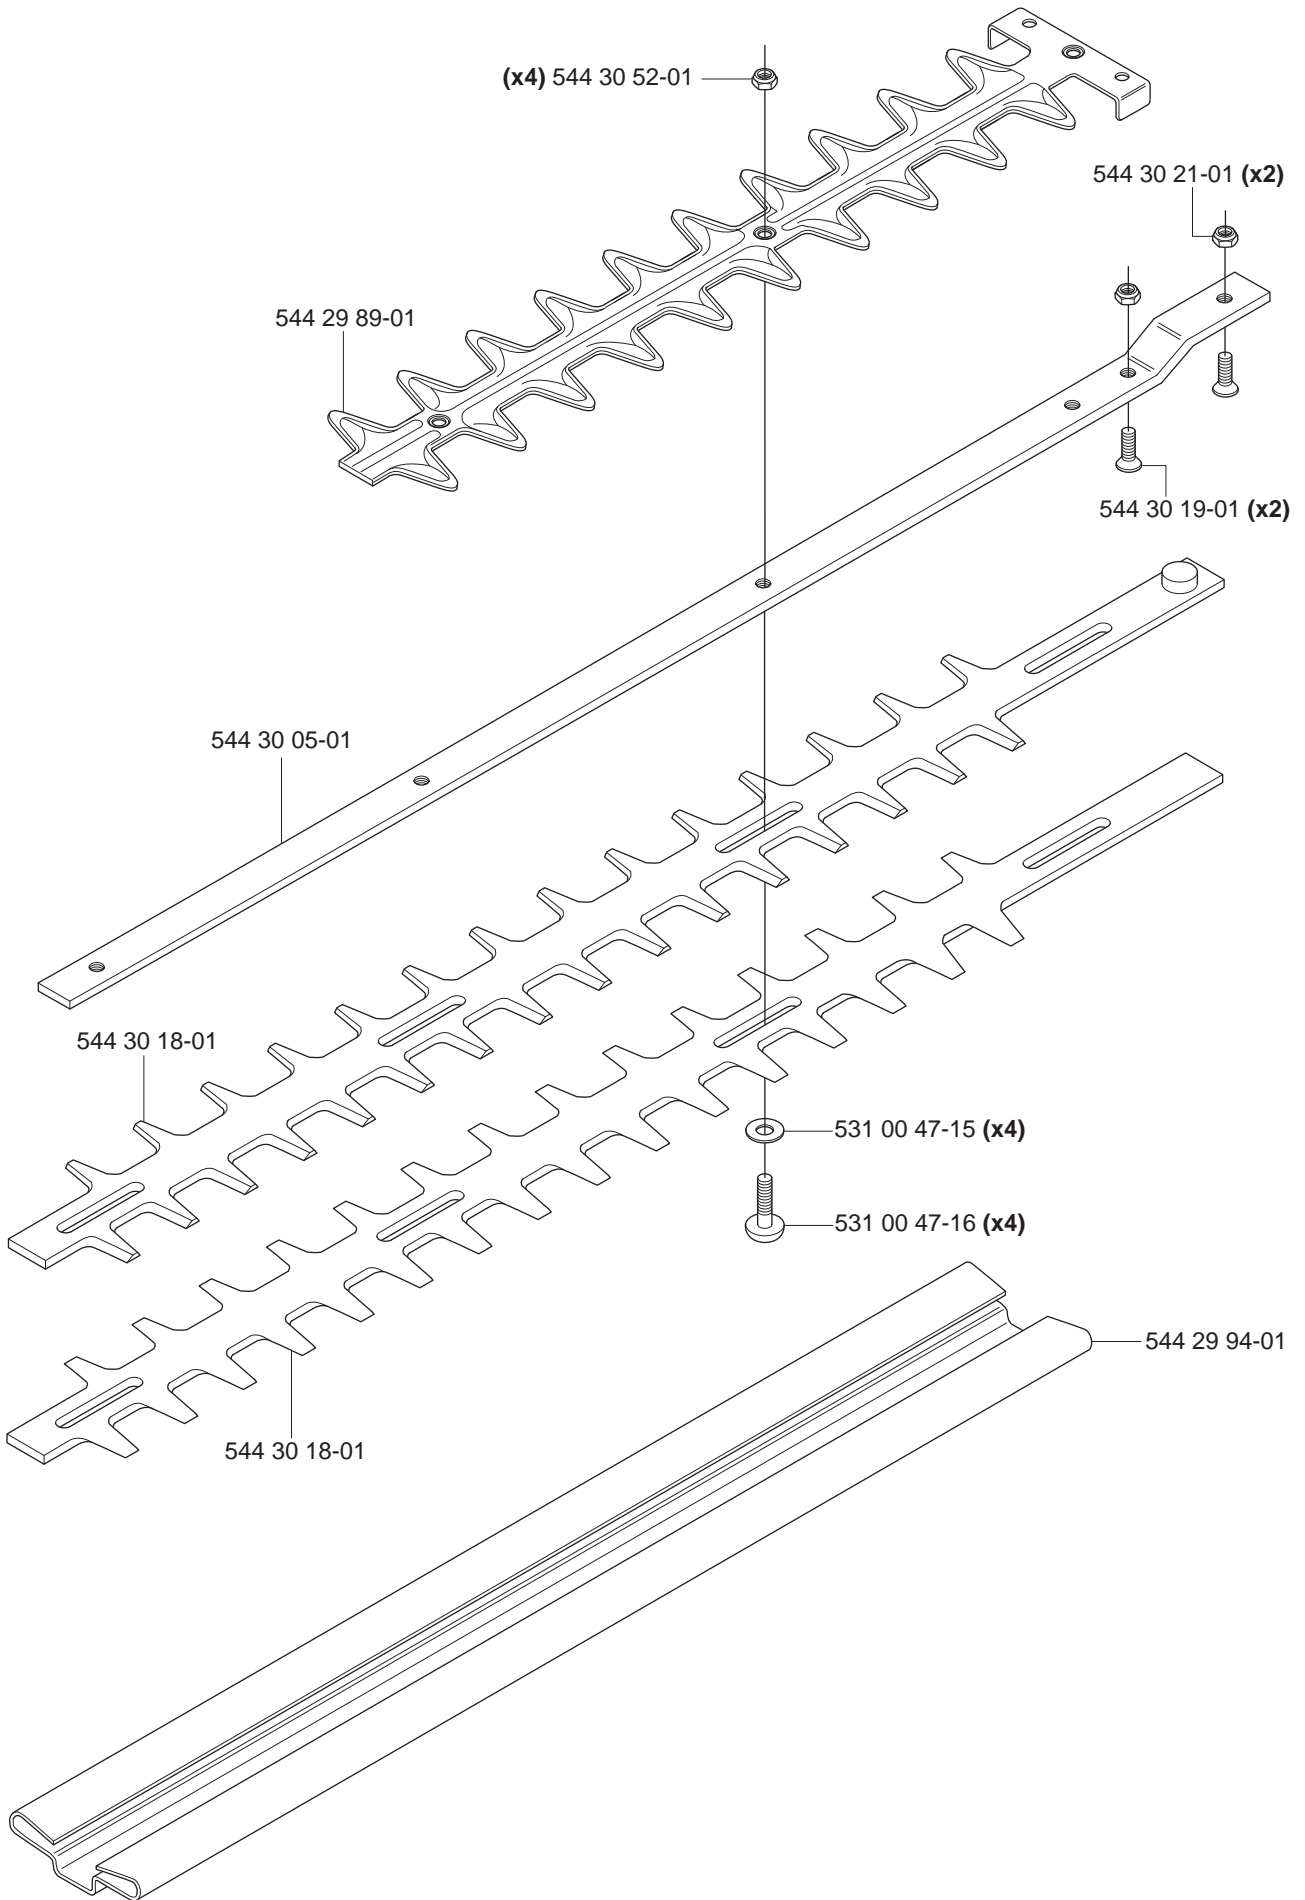

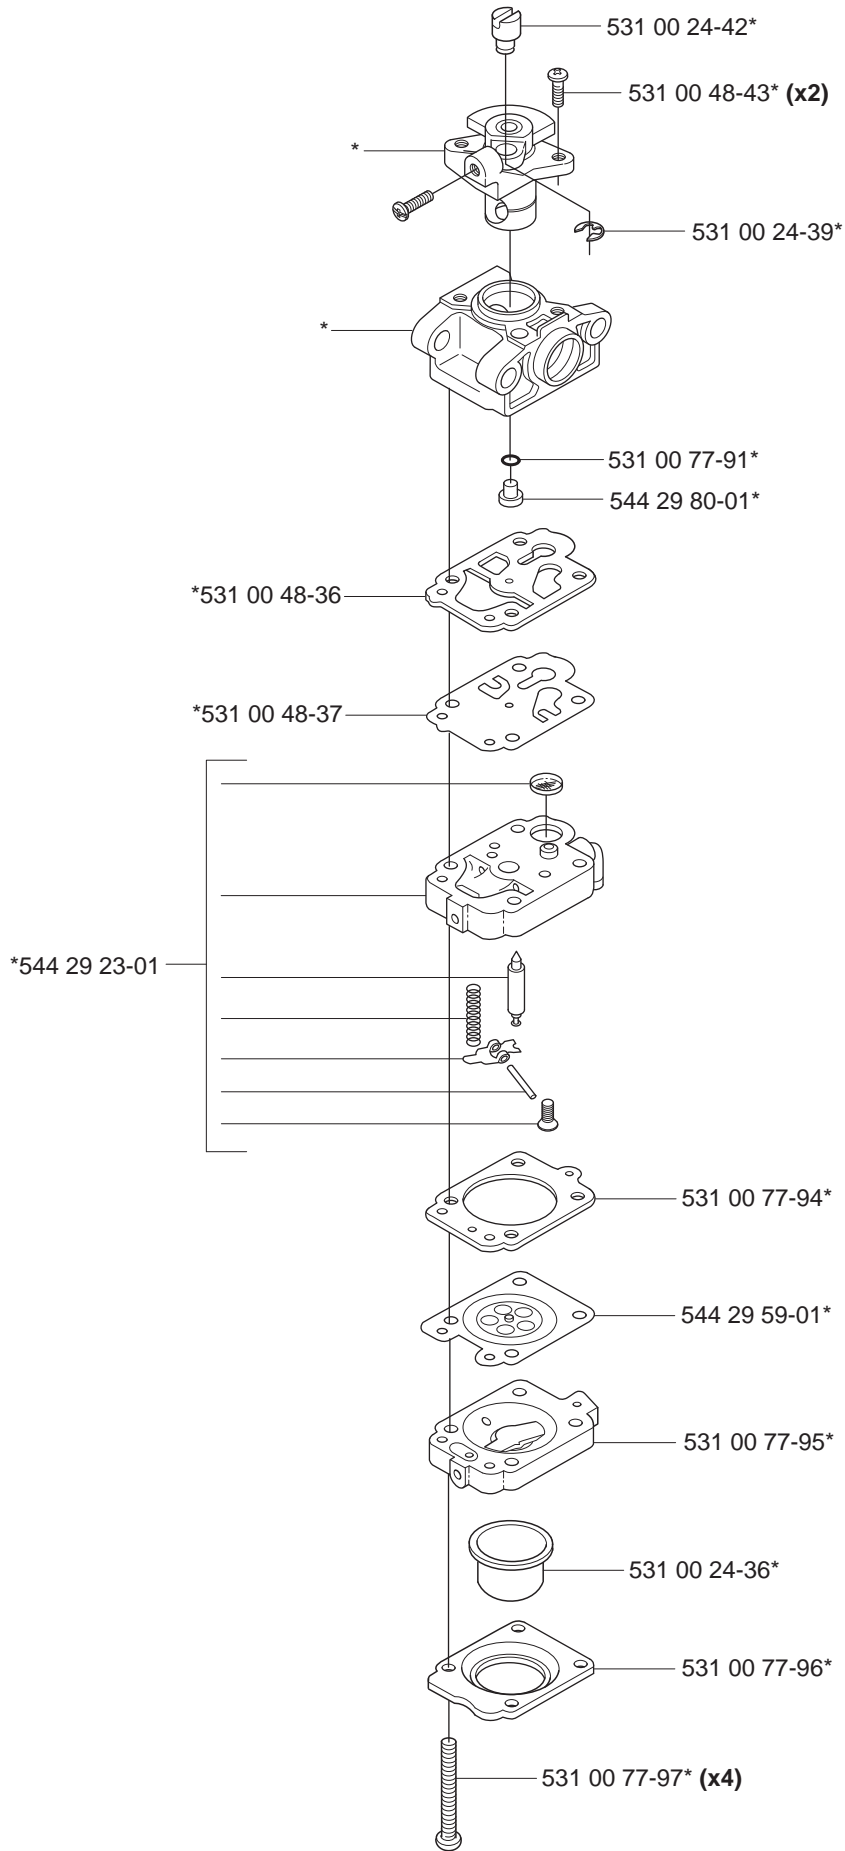


N Accessories
Zubehöre
Accessoires
Acessorios
Tillbehör

*compl 502 21 60-09

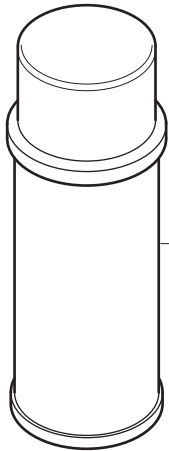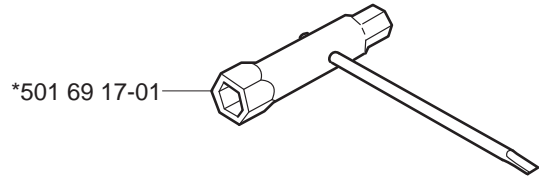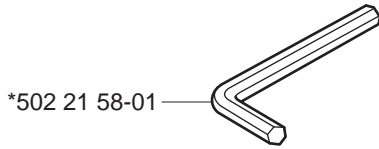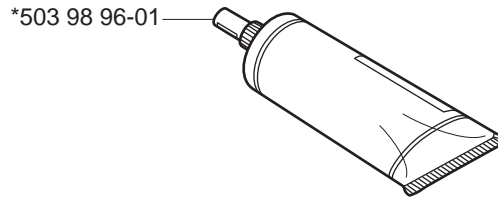

531 00 75-13 **UL22**

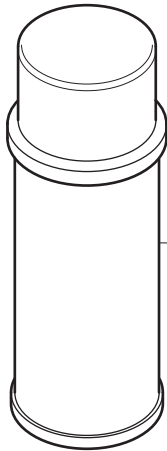

531 00 75-12 **UL21**



531 00 92-05