


▲ WARNING

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

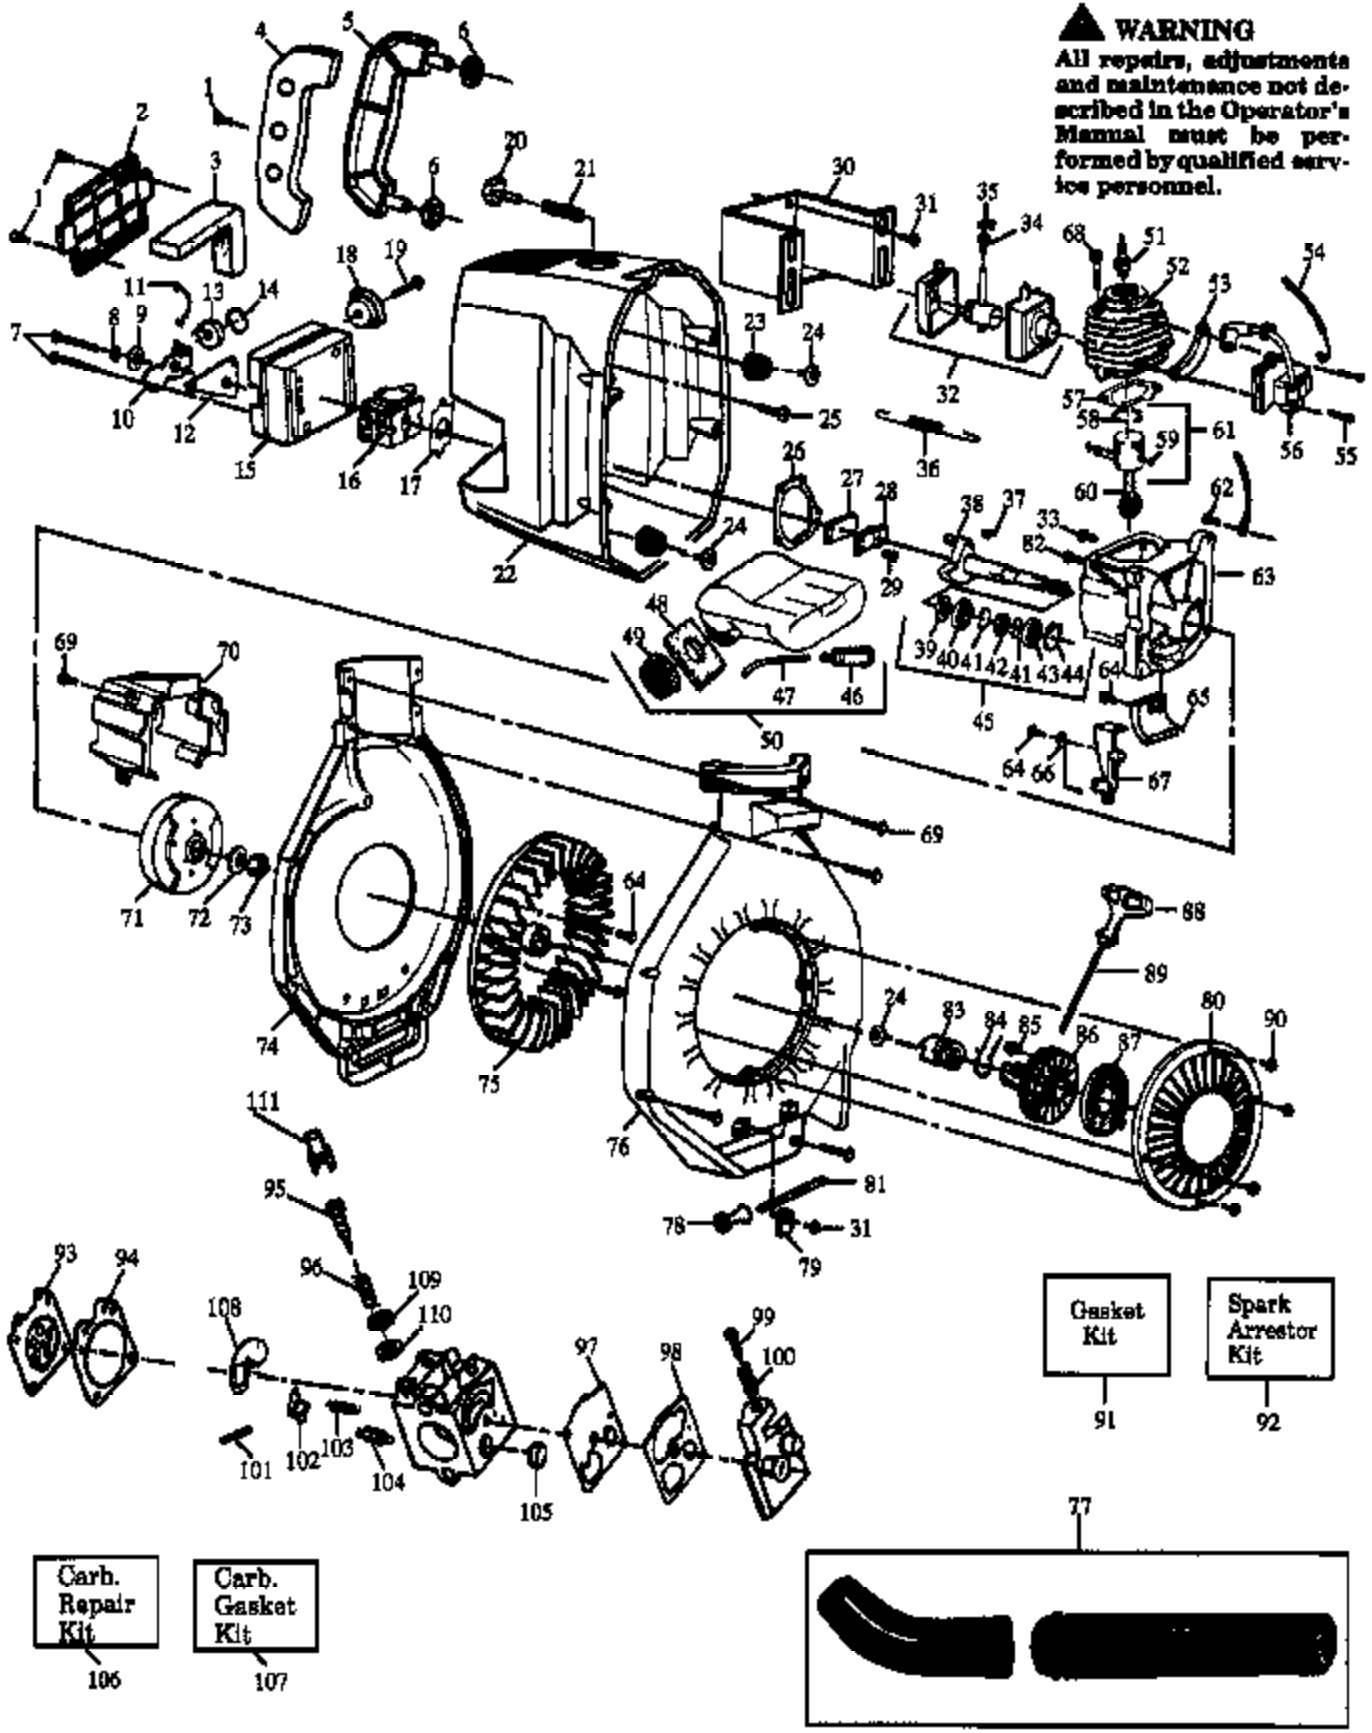


Carb. Repair Kit
106

Carb. Gasket Kit
107

Gasket Kit
91

Spark Arrestor Kit
92

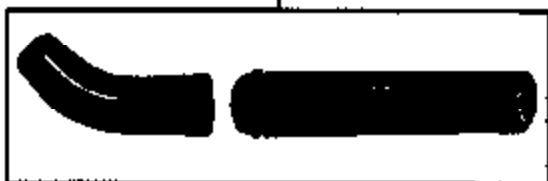

Ref #	Part Number	Qty	Description
1	530015635		Screw
2	530029593		Air Filter Cover
3	530029611		Air Filter
4	530029615		Handle Cover
5	530029614		Handle
6	530029608		Handle Isolator
7	530015887		Screw
8	530015852		Choke Spacer
9	530015254		Wave Washer
10	530029480		Choke Shutter
11	530029485		Throttle Wire
12	530029481		Choke Mtg. Plate
13	530029486		Wave Washer
14	530015147		Wave Washer (Knob)
15	530029592		Air Box
16	530035262		Type 1 (WA-207A)
16	530069637		Type 2 (WA-217, w/ Limiter Cap, # 111)
17	530019164		Carburetor Gasket
18	530029484		Throttle Knob
19	530015880		Screw
20	530029600		Button
21	530029607		Spring
22	530029591		Shroud
23	530029434		Spring
24	530015879		Screw
25	530015876		Screw
26	530019154		Gasket
27	530027593		Reed Valve
28	530029781		Reed Stop
29	530016064		Screw
30	530029597		Heat Shield
31	530015805		Screw
32	530069293		Muffler
33	530015771		Screw
34	530029227		Spark Arrestor Screen
35	530029228		Spark Arrestor Clamp
36	530029116		Muffler Spring
37	530015126		Key
38	530010945		Crankshaft Ass'y. See Service Ref. 1
40	530032103		Inner Bearing
41	530015787		Ring
42	530019158		Crankshaft Seal
43	530032102		Outer Bearing
44	530015789		Retaining Ring
45	530014004		Crankcase/Crankshaft Ass'y.
46	530014362		Fuel Pick-Up Ass'y.
47	530069247		Fuel Line Kit
48	530029602		Foam
49	530014347		Fuel Cap
50	530014267		Fuel Tank Ass'y.
51	952030078		Spark Plug (CJ-8Y)
52	530012244		Cylinder
53	530027525		Spacer
54	530029606		Leadwire Switch
55	530015776		Screw
56	530039137		Ignition Module

PP422 Gas Blow Page 2 of 4
 BOWER ASS'Y

Ref #	Part Number	Qty	Description
57	530019178		Gasket
58	530026413		Piston Ring
59	530015162		Retainer
60	530014005		Piston Rod
61	530069274		Piston Kit (Inc. 58,59, Pin)
62	530015775		Screw
63	530014016		Crankcase Ass'y
64	530015918		Screw
65	530029603		Isolator
66	530029613		Spring
67	530029601		Insulator
68	530015239		Screw
69	530015872		Screw
70	530029433		Same
71	530039139		Flywheel
72	530015149		Washer
73	530626605		Nut
74	530029432		Blower Housing (Upper)
75	530094865		Impeller
76	530014265		Blower Housing (Lower)
77	530069271		Blower Tube Kit
78	530029575		Roller
79	530027523		Retainer
80	530094867		Pulley Housing
81	530015851		Roll Pin
82	530015772		Screw
83	530029448		Pinion
84	530037716		Drag Element
85	530015882		Screw
86	530069306		Starter Pulley
87	530027531		Starter Spring
88	530027569		Starter Handle
89	530069232		Rope Kit
90	530015886		Screw
91	530069302		Gasket Kit
92	530069348		Spark Arrestor Kit
93	530035014		Metering Diaphragm
94	530035151		Metering Diaphragm Gasket
95	530035212		Mixture Needle
96	530035214		Mixture Needle Spring
97	530035166		Fuel Pump Diaphragm
98	530035164		Fuel Pump Gasket
99	530035203		Idle Speed Screw Included in Carburetor Kwik Repair Kit.
100	530035208		Idle Speed Spring Included in Carburetor Kwik Repair Kit.
101	530035028		Metering Lever Pin Included in Carburetor Kwik Repair Kit.
102	530035031		Metering Lever Included in Carburetor Kwik Repair Kit.
103	530035188		Metering Lever Spring Included in Carburetor Kwik Repair Kit.
104	530035106		Inlet Needle Valve
105	530035178		Fuel Inlet Screen
106	530035264		Carb. Kwik Repair Kit
107	530035219		Carb. Gasket/Diaphragm Kit Included in Carburetor Kwik Repair Kit.
108	530035211		Circuit Plate Gasket
109	530035217		Mixture Needle Washer

PP422 Gas Blower Page 3 of 4
BOWER ASSEMBLY

Ref #	Part Number	Qty	Description
110	530035218		"O" Ring Mixture
111	530035337		Limiter Cap (Black)
	530082507		Operator Manual Not Shown.
			, Instruction Decal Not Shown.
	530029628		Type 1 Not Shown.
	530038334		Type 2 Decal (Not a serviceable part) Not Shown.

PP422 Gas Blower Page 4 of 4
 BOWER ASSEMBLY