




# VIEW 1 OF 3



Ref #	Part Number	Qty	Description
1	34959		Cylinder Ass'y. (Incl. 2, 9 & 20)
2	26727		Dowel Pin
7	34215		Breather Ass'y. (Incl. 8 & 9)
8	32760A		* Breather Gasket
9	30200		Screw, 10-24 x 9/16"
14	28277		Washer
15	31513		Governor Rod
16	31383A		Governor Lever
17	31335		Governor Lever Clamp
18	650548		Screw, 8-32 x 5/16"
19	31361		Extension Spring
20	32600		Oil Seal
30	34600		Crankshaft
40	35544		Piston, Pin & Ring Set (Std.)
40	35545		Piston, Pin & Ring Set (.010 OS)
40	35546		Piston, Pin & Ring Set (.020 OS)
41	35541		Piston & Pin Ass'y. (Std.) (Incl. 43)
41	35542		Piston & Pin Ass'y. (.010 OS) (Incl. 43)
41	35543		Piston & Pin Ass'y. (.020 OS) (Incl. 43)
42	35547		Ring Set (Std.)
42	35548		Ring Set (.010 OS)
42	35549		Ring Set (.020 OS)
43	20381		Piston Pin Retaining Ring
45	30963B		Connecting Rod (Incl. 46)
46	32610A		Connecting Rod Bolt
48	27241		Valve Lifter
50	33553		Camshaft (Mech. Compression Release)
52	29914		Oil Pump Ass'y.
69	35261		* Mounting Flange Gasket
70	33521D		Mounting Flange (Incl. 58 & 72 thru 8 0)
72	30572		Oil Drain Plug (Incl. 73)
73	28833		* Oil Plug Gasket
75	26208		Oil Seal
80	30574		Governor Shaft
81	30590A		Washer
82	30591		Governor Gear Ass'y. (Incl. 81)
83	30588A		Governor Spool
84	29193		Retaining Ring
86	650488		Screw, 1/4-20 x 1-1/4"
89	611004		Flywheel Key
90	611112		Flywheel
92	650815		Belleville Washer
93	650816		Flywheel Nut
100	34443A		Solid State Ignition
101	610118		Spark Plug Cover
103	650814		Screw, Torx T-15, 10-24 x 1"
110	34961		Ground Wire
119	32643A		* Cylinder Head Gasket
120	34335		Cylinder Head
125	29314B		Intake Valve (Std.) (Incl. 151)
125	29315C		Intake Valve (1/32" OS) (Incl. 151)
126	29313C		Exhaust Valve (Std.) (Incl. 151)
126	29315C		Exhaust Valve (1/32" OS) (Incl. 151)
130	6021A		Screw, 5/16-18 x 1-1/2"
135	35395		Resistor Spark Plug (RJ19LM)
150	31672		Valve Spring
151	31673		Lower Valve Spring Cap
169	27234A		* Valve Spring Cover Gasket









Ref #	Part Number	Qty	Description
172	32755		Valve Spring Box Cover
174	650128		Screw, 10-24 x 1/2"
178	29752		Nut, 1/4-28
182	6201		Screw, 1/4-28 x 7/8"
184	26756		* Carburetor Gasket
186	34337		Governor Link
189	650839		Screw, 1/4-20 x 3/8"
189A	650837		Screw, 10-32 x 1/4"
190	35831		Brake Lever
191	35015A		S.E. Brake Bracket (Incl. 195)
192	34966		Control Link
193	34965		Extension Spring
194	32309		Retaining Ring
195	610973		Terminal
200	35727		Control Bracket (Incl. 202 thru 205)
202	33802		Compression Spring
203	31342		Compression Spring
204	650549		Screw, 5-40 x 7/16"
205	650777		Screw, 6-32 x 21/32"
207	34336		Throttle Link
209	30200		Screw, 10-24 x 9/16"
215	32410		Control Knob
223	650451		Screw, 1/4-20 x 1"
224	34690A		* Intake Pipe Gasket
238	650932		Screw, 10-32 x 49/64"
239	34338		* Air Cleaner Gasket
241A	35797		Air Cleaner Collar
250C	35065		Air Cleaner Cover
255	35176		Speed Control Cover
256	650807		Screw, 10-32 x 7/16"
260B	35393		Blower Housing
261	30200		Screw, 10-24 x 9/16"
262	650831		Screw, 1/4-20 x 15/32"
277	650795		Screw, 1/4-20 x 2-1/4"
285	35000		Starter Cup
287B	650884		Screw, 8-32 x 1/2"
290	30705		Fuel Line
292	26460		Fuel Line Clamp
298	28763		Screw, 10-32 x 35/64"
300B	34369A		Fuel Tank (Incl. 292 & 301A)
305	35577		Oil Fill Tube
306	34265		Fill Tube Gasket
307	35499		"O" Ring
309	650562		Screw, 10-32 x 1/2"
310	35578		Dipstick
313	34080		Flywheel Key Spacer
327	35392		Starter Plug
354	35025		Rope Retaining Staple
370A	35391		Instruction Decal
380	632162		Carburetor (Incl. 184)
390B	590621		Rewind Starter
400	33238D		Gasket Set (Incl. items marked *)

# VIEW 2 OF 3

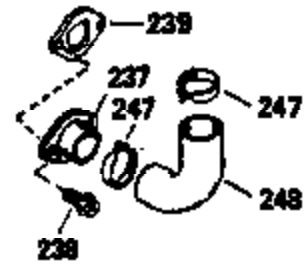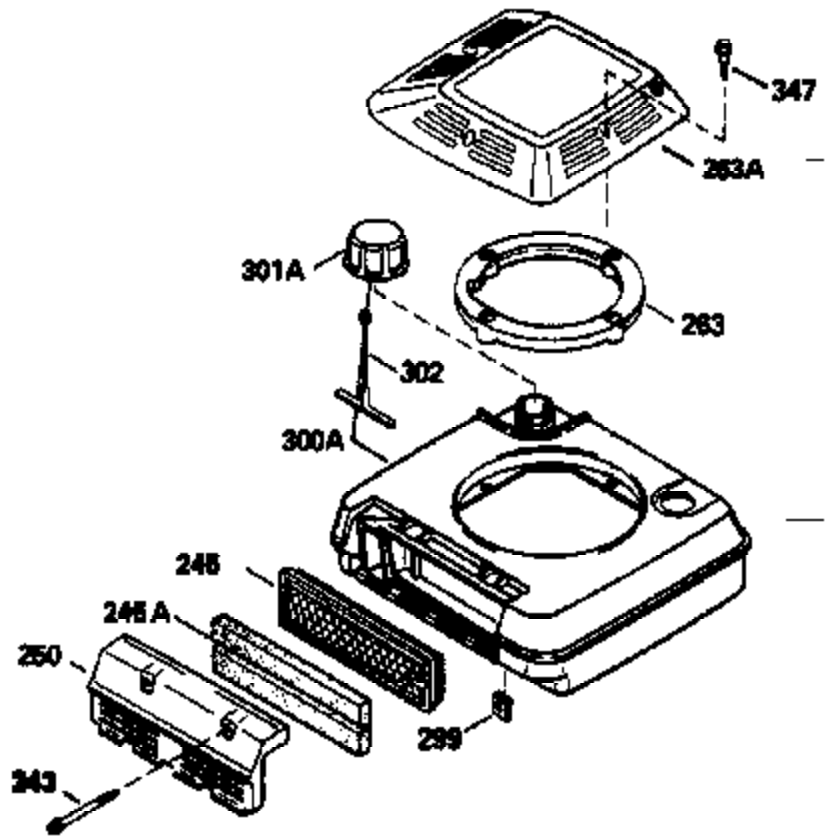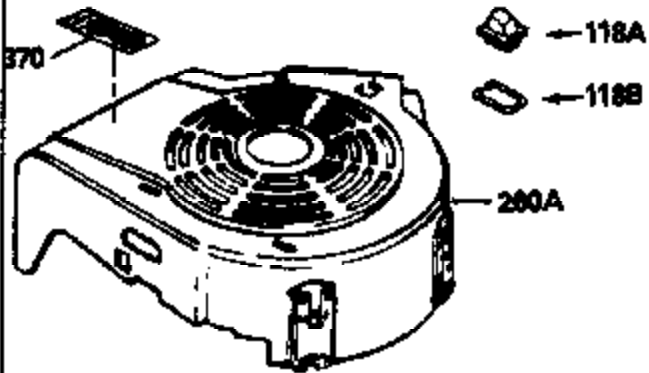

Ref #	Part Number	Qty	Description
189A	650837		Screw, 10-32 x 1/4"
238	650932		Screw, 10-32 x 49/64"
239	34338		* Air Cleaner Gasket
241A	35797		Air Cleaner Collar
245A	35066		Air Cleaner Filter
250C	35065		Air Cleaner Cover
260B	35393		Blower Housing
287B	650884		Screw, 8-32 x 1/2"
300B	34369A		Fuel Tank (Incl. 292 & 301A)
301A	35355		Fuel Cap
354	35025		Rope Retaining Staple
357	34985		Starter Rope Retainer (Incl. 354)
390B	590621		Rewind Starter

**VIEW 3 OF 3**

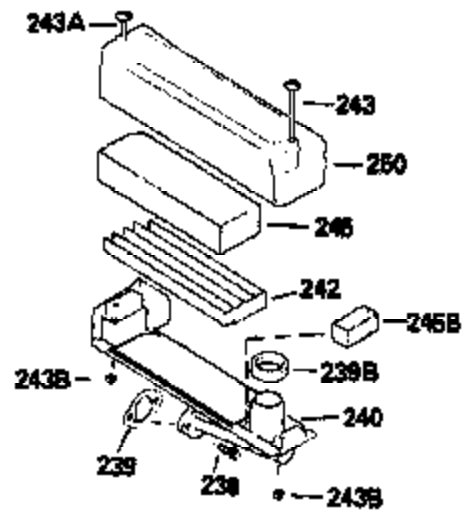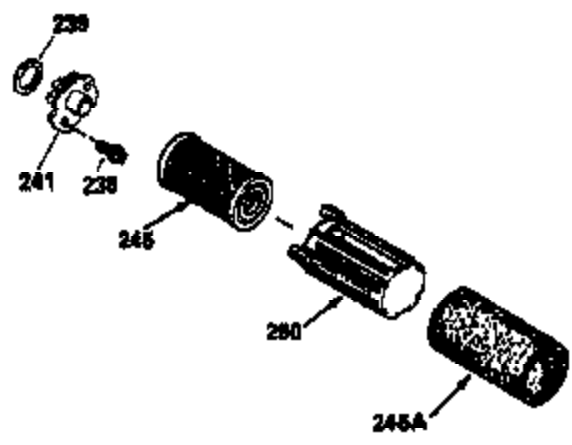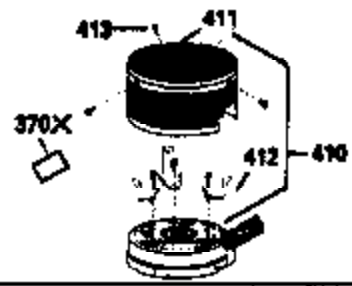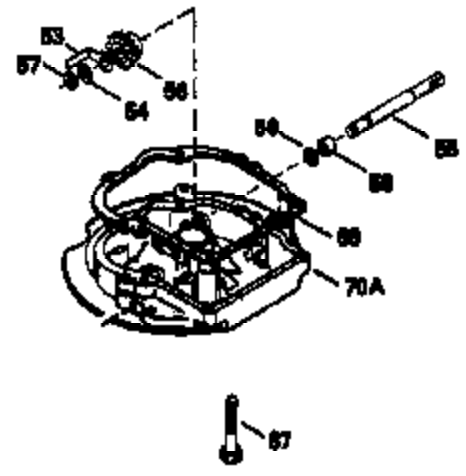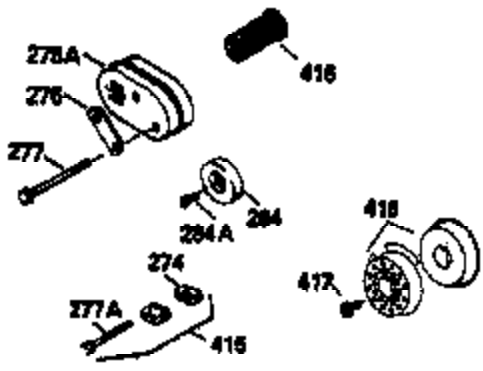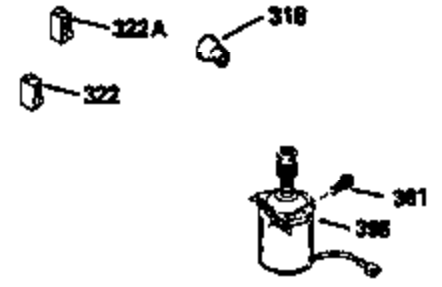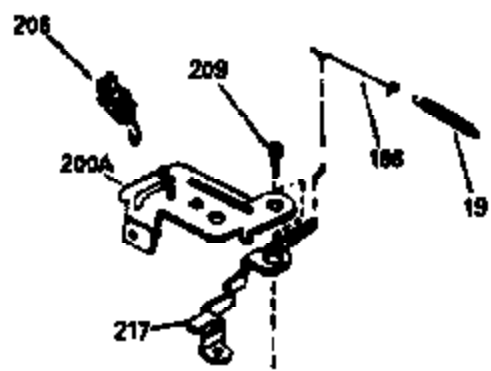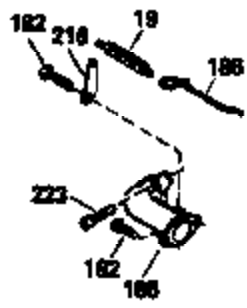

Ref #	Part Number	Qty	Description
19	31361		Extension Spring
53	31745		Washer
54	31787		Washer
55	33774		P.T.O. Shaft
56	33401		R.H. Worm Gear
57	31749		Retaining Ring
58	31744		Oil Seal
59	31747		Washer
69	35261		* Mounting Flange Gasket
87	650492		Screw, 1/4-20 x 2-1/4"
182	6201		Screw, 1/4-28 x 7/8"
185	31384A		Intake Pipe (Incl. 224)
186	34337		Governor Link
189A	650837		Screw, 10-32 x 1/4"
209	30200		Screw, 10-24 x 9/16"
223	650451		Screw, 1/4-20 x 1"
238	650932		Screw, 10-32 x 49/64"
239	34338		* Air Cleaner Gasket
241A	35797		Air Cleaner Collar
245A	35066		Air Cleaner Filter
250C	35065		Air Cleaner Cover
260B	35393		Blower Housing
275A	34613		Muffler
276	33753		Locking Plate
277	650795		Screw, 1/4-20 x 2-1/4"
287B	650884		Screw, 8-32 x 1/2"
300B	34369A		Fuel Tank (Incl. 292 & 301A)
354	35025		Rope Retaining Staple
390B	590621		Rewind Starter