





# VIEW 1 OF 3

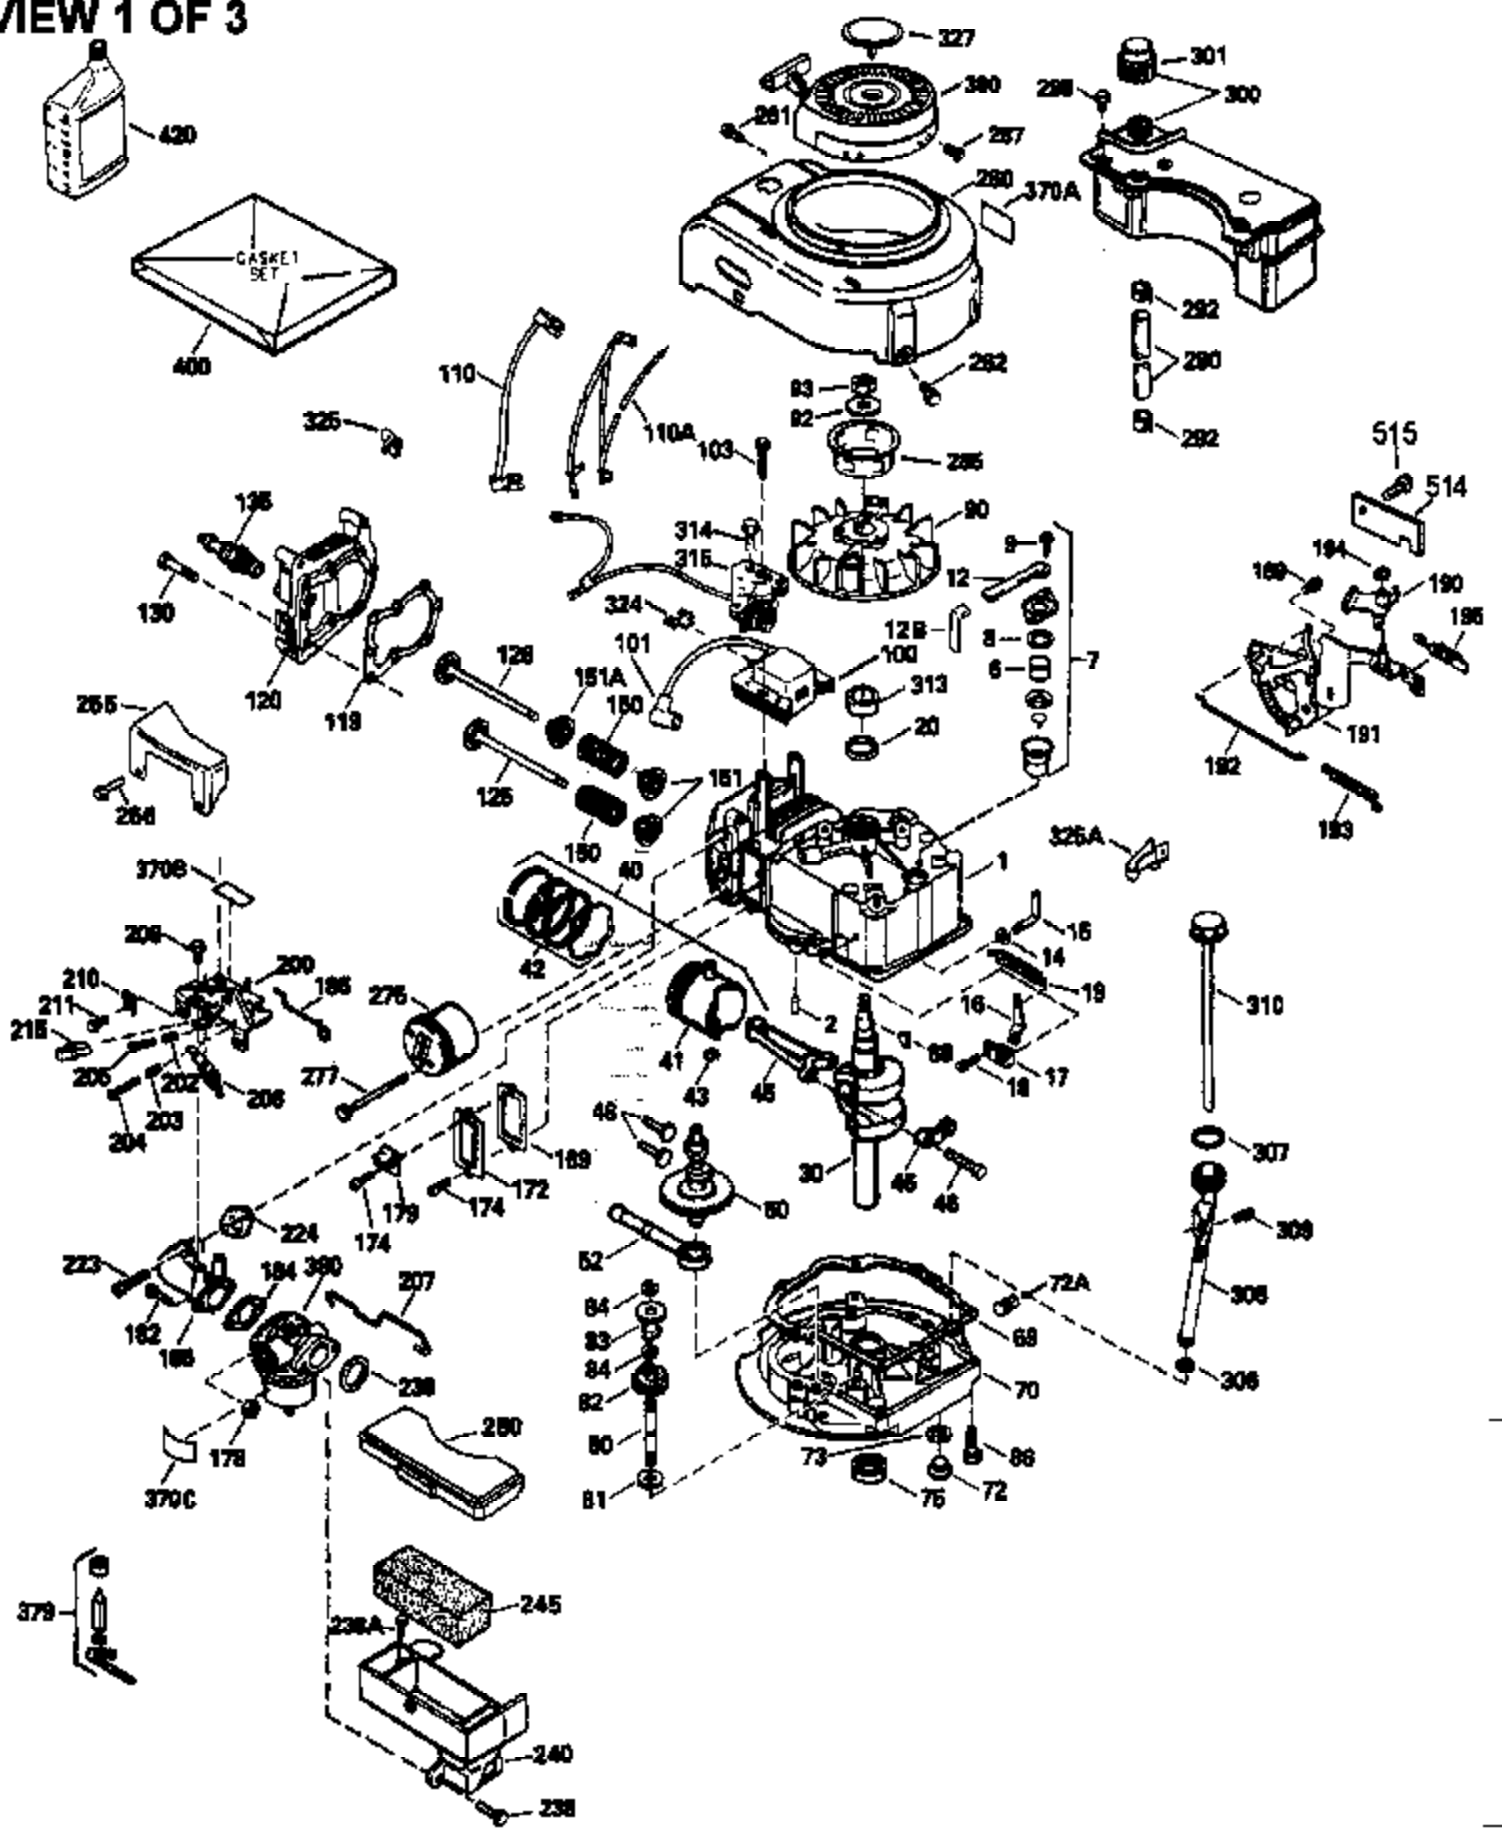

Ref #	Part Number	Qty	Description
1	34959		Cylinder Ass'y. (Incl. 2, 9 & 20)
2	26727		Dowel Pin
7	34215		Breather Ass'y. (Incl. 8 & 9)
8	32760A		* Breather Gasket
9	30200		Screw, 10-24 x 9/16"
14	28277		Washer
15	31513		Governor Rod
16	31383A		Governor Lever
17	31335		Governor Lever Clamp
18	650548		Screw, 8-32 x 5/16"
19	31361		Extension Spring
20	32600		Oil Seal
30	34600		Crankshaft
40	35544		Piston, Pin & Ring Set (Std.)
40	35545		Piston, Pin & Ring Set (.010 OS)
40	35546		Piston, Pin & Ring Set (.020 OS)
41	35541		Piston & Pin Ass'y. (Std.) (Incl. 43)
41	35542		Piston & Pin Ass'y. (.010 OS) (Incl. 43)
41	35543		Piston & Pin Ass'y. (.020 OS) (Incl. 43)
42	35547		Ring Set (Std.)
42	35548		Ring Set (.010 OS)
42	35549		Ring Set (.020 OS)
43	20381		Piston Pin Retaining Ring
45	30963B		Connecting Rod (Incl. 46)
46	32610A		Connecting Rod Bolt
48	27241		Valve Lifter
50	33148A		Camshaft (Compression Release)
52	29914		Oil Pump Ass'y.
69	35261		* Mounting Flange Gasket
70	33521D		Mounting Flange (Incl. 58 & 72 thru 8 0)
72	30572		Oil Drain Plug (Incl. 73)
73	28833		* Oil Plug Gasket
75	26208		Oil Seal
80	30574		Governor Shaft
81	30590A		Washer
82	30591		Governor Gear Ass'y. (Incl. 81)
83	30588A		Governor Spool
84	29193		Retaining Ring
86	650488		Screw, 1/4-20 x 1-1/4"
89	611004		Flywheel Key
90	611112		Flywheel
92	650815		Belleville Washer
93	650816		Flywheel Nut
100	34443A		Solid State Ignition
101	610118		Spark Plug Cover
103	650814		Screw, Torx T-15, 10-24 x 1"
110	34231		Ground Wire
119	32643A		* Cylinder Head Gasket
120	34335		Cylinder Head
125	29314B		Intake Valve (Std.) (Incl. 151)
125	29315C		Intake Valve (1/32" OS) (Incl. 151)
126	29313C		Exhaust Valve (Std.) (Incl. 151)
126	29315C		Exhaust Valve (1/32" OS) (Incl. 151)
130	6021A		Screw, 5/16-18 x 1-1/2"
135	35395		Resistor Spark Plug (RJ19LM)
150	31672		Valve Spring
151	31673		Lower Valve Spring Cap
169	27234A		* Valve Spring Cover Gasket









Ref #	Part Number	Qty	Description
172	32755		Valve Spring Box Cover
174	650128		Screw, 10-24 x 1/2"
178	29752		Nut, 1/4-28
182	6201		Screw, 1/4-28 x 7/8"
184	26756		* Carburetor Gasket
186	34337		Governor Link
200	35727		Control Bracket (Incl. 202 thru 205)
202	33802		Compression Spring
203	31342		Compression Spring
204	650549		Screw, 5-40 x 7/16"
205	650777		Screw, 6-32 x 21/32"
206	610973		Terminal
207	34336		Throttle Link
209	30200		Screw, 10-24 x 9/16"
215	32410		Control Knob
223	650451		Screw, 1/4-20 x 1"
224	34690A		* Intake Pipe Gasket
238	650932		Screw, 10-32 x 49/64"
239	34338		* Air Cleaner Gasket
241A	35797		Air Cleaner Collar
250C	35065		Air Cleaner Cover
255	35177		Speed Control Cover
256	650807		Screw, 10-32 x 7/16"
260B	35393		Blower Housing
261	30200		Screw, 10-24 x 9/16"
262	650831		Screw, 1/4-20 x 15/32"
277	650795		Screw, 1/4-20 x 2-1/4"
285	35000		Starter Cup
287B	650884		Screw, 8-32 x 1/2"
290	30705		Fuel Line
292	26460		Fuel Line Clamp
298	28763		Screw, 10-32 x 35/64"
300B	34369A		Fuel Tank (Incl. 292 & 301A)
305	35577		Oil Fill Tube
306	34265		Fill Tube Gasket
307	35499		"O" Ring
309	650562		Screw, 10-32 x 1/2"
310	35578		Dipstick
313	34080		Flywheel Key Spacer
327	35392		Starter Plug
370A	34442A		Instruction Decal
380	632162		Carburetor (Incl. 184)
390B	590635		Rewind Starter
400	33238D		Gasket Set (Incl. items marked *)

# VIEW 2 OF 3

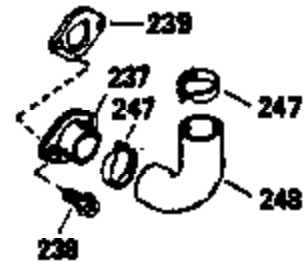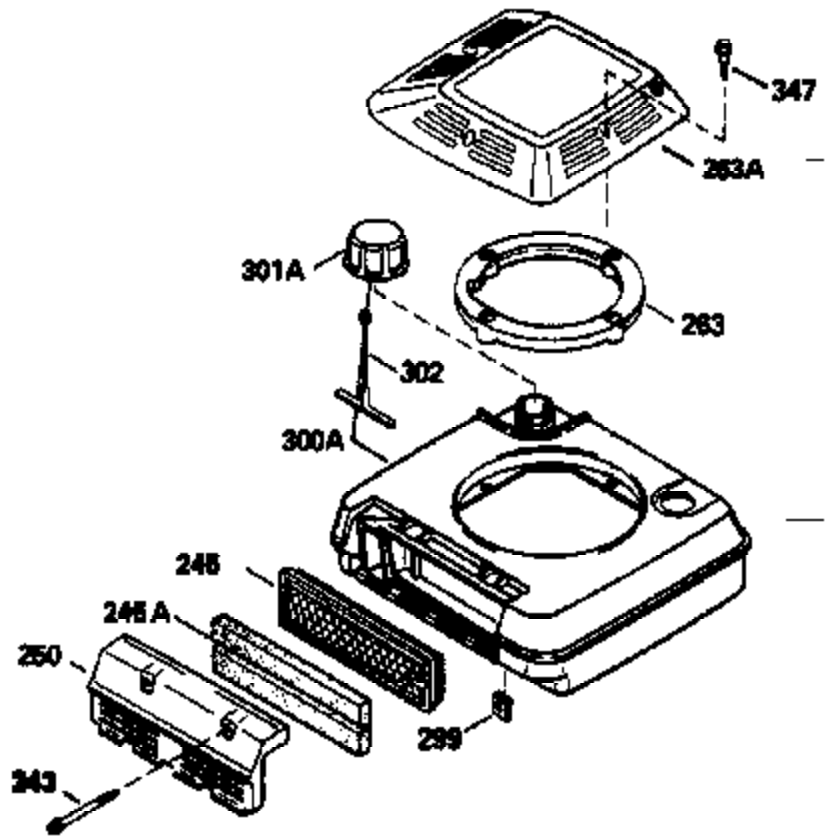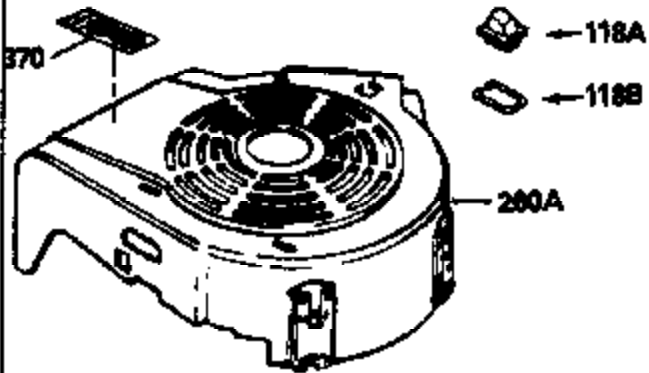

Ref #	Part Number	Qty	Description
238	650932		Screw, 10-32 x 49/64"
239	34338		* Air Cleaner Gasket
241A	35797		Air Cleaner Collar
245A	35066		Air Cleaner Filter
250C	35065		Air Cleaner Cover
260B	35393		Blower Housing
287B	650884		Screw, 8-32 x 1/2"
300B	34369A		Fuel Tank (Incl. 292 & 301A)
301A	35355		Fuel Cap
390B	590635		Rewind Starter

### VIEW 3 OF 3

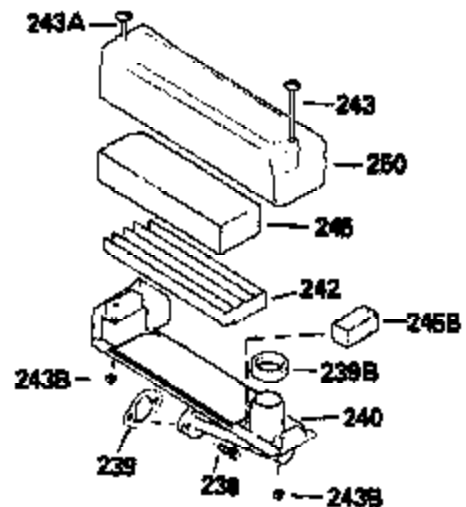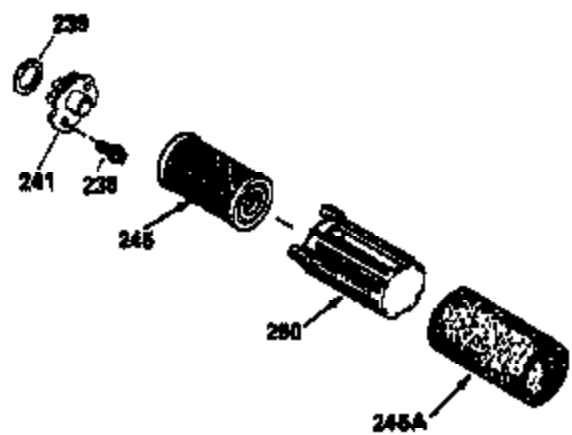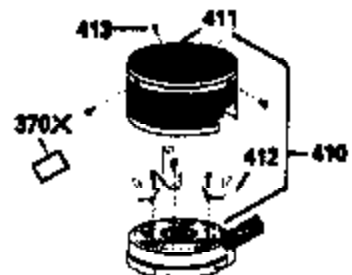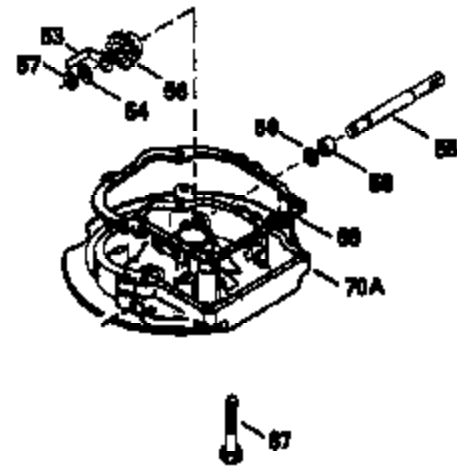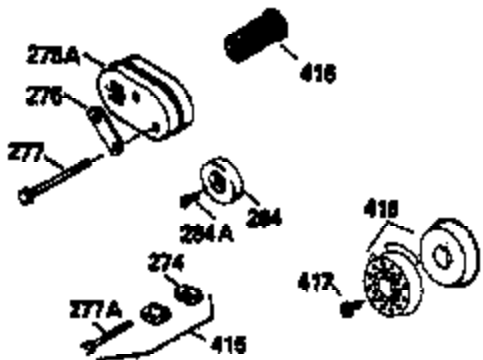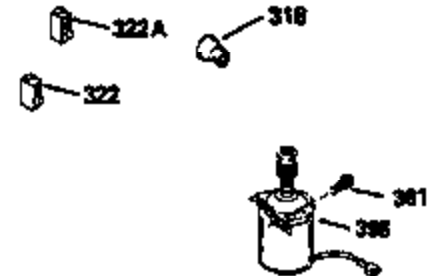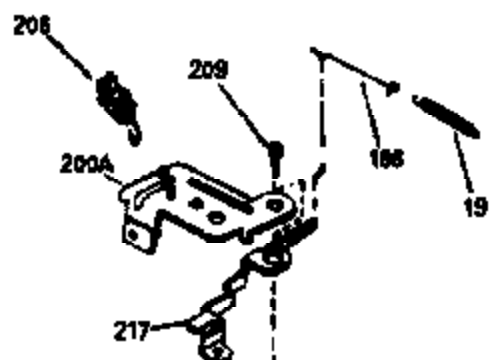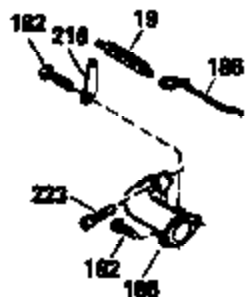

Ref #	Part Number	Qty	Description
	19 31361		Extension Spring
	53 31745		Washer
	54 31787		Washer
	55 33774		P.T.O. Shaft
	56 33401		R.H. Worm Gear
	57 31749		Retaining Ring
	58 31744		Oil Seal
	59 31747		Washer
	69 35261		* Mounting Flange Gasket
	87 650492		Screw, 1/4-20 x 2-1/4"
	182 6201		Screw, 1/4-28 x 7/8"
	185 31384A		Intake Pipe (Incl. 224)
	186 34337		Governor Link
	206 610973		Terminal
	209 30200		Screw, 10-24 x 9/16"
	223 650451		Screw, 1/4-20 x 1"
	238 650932		Screw, 10-32 x 49/64"
	239 34338		* Air Cleaner Gasket
	241A 35797		Air Cleaner Collar
	245A 35066		Air Cleaner Filter
	250C 35065		Air Cleaner Cover
	260B 35393		Blower Housing
	275A 34613		Muffler
	276 33753		Locking Plate
	277 650795		Screw, 1/4-20 x 2-1/4"
	287B 650884		Screw, 8-32 x 1/2"
	300B 34369A		Fuel Tank (Incl. 292 & 301A)
	390B 590635		Rewind Starter