





# VIEW 1 OF 3

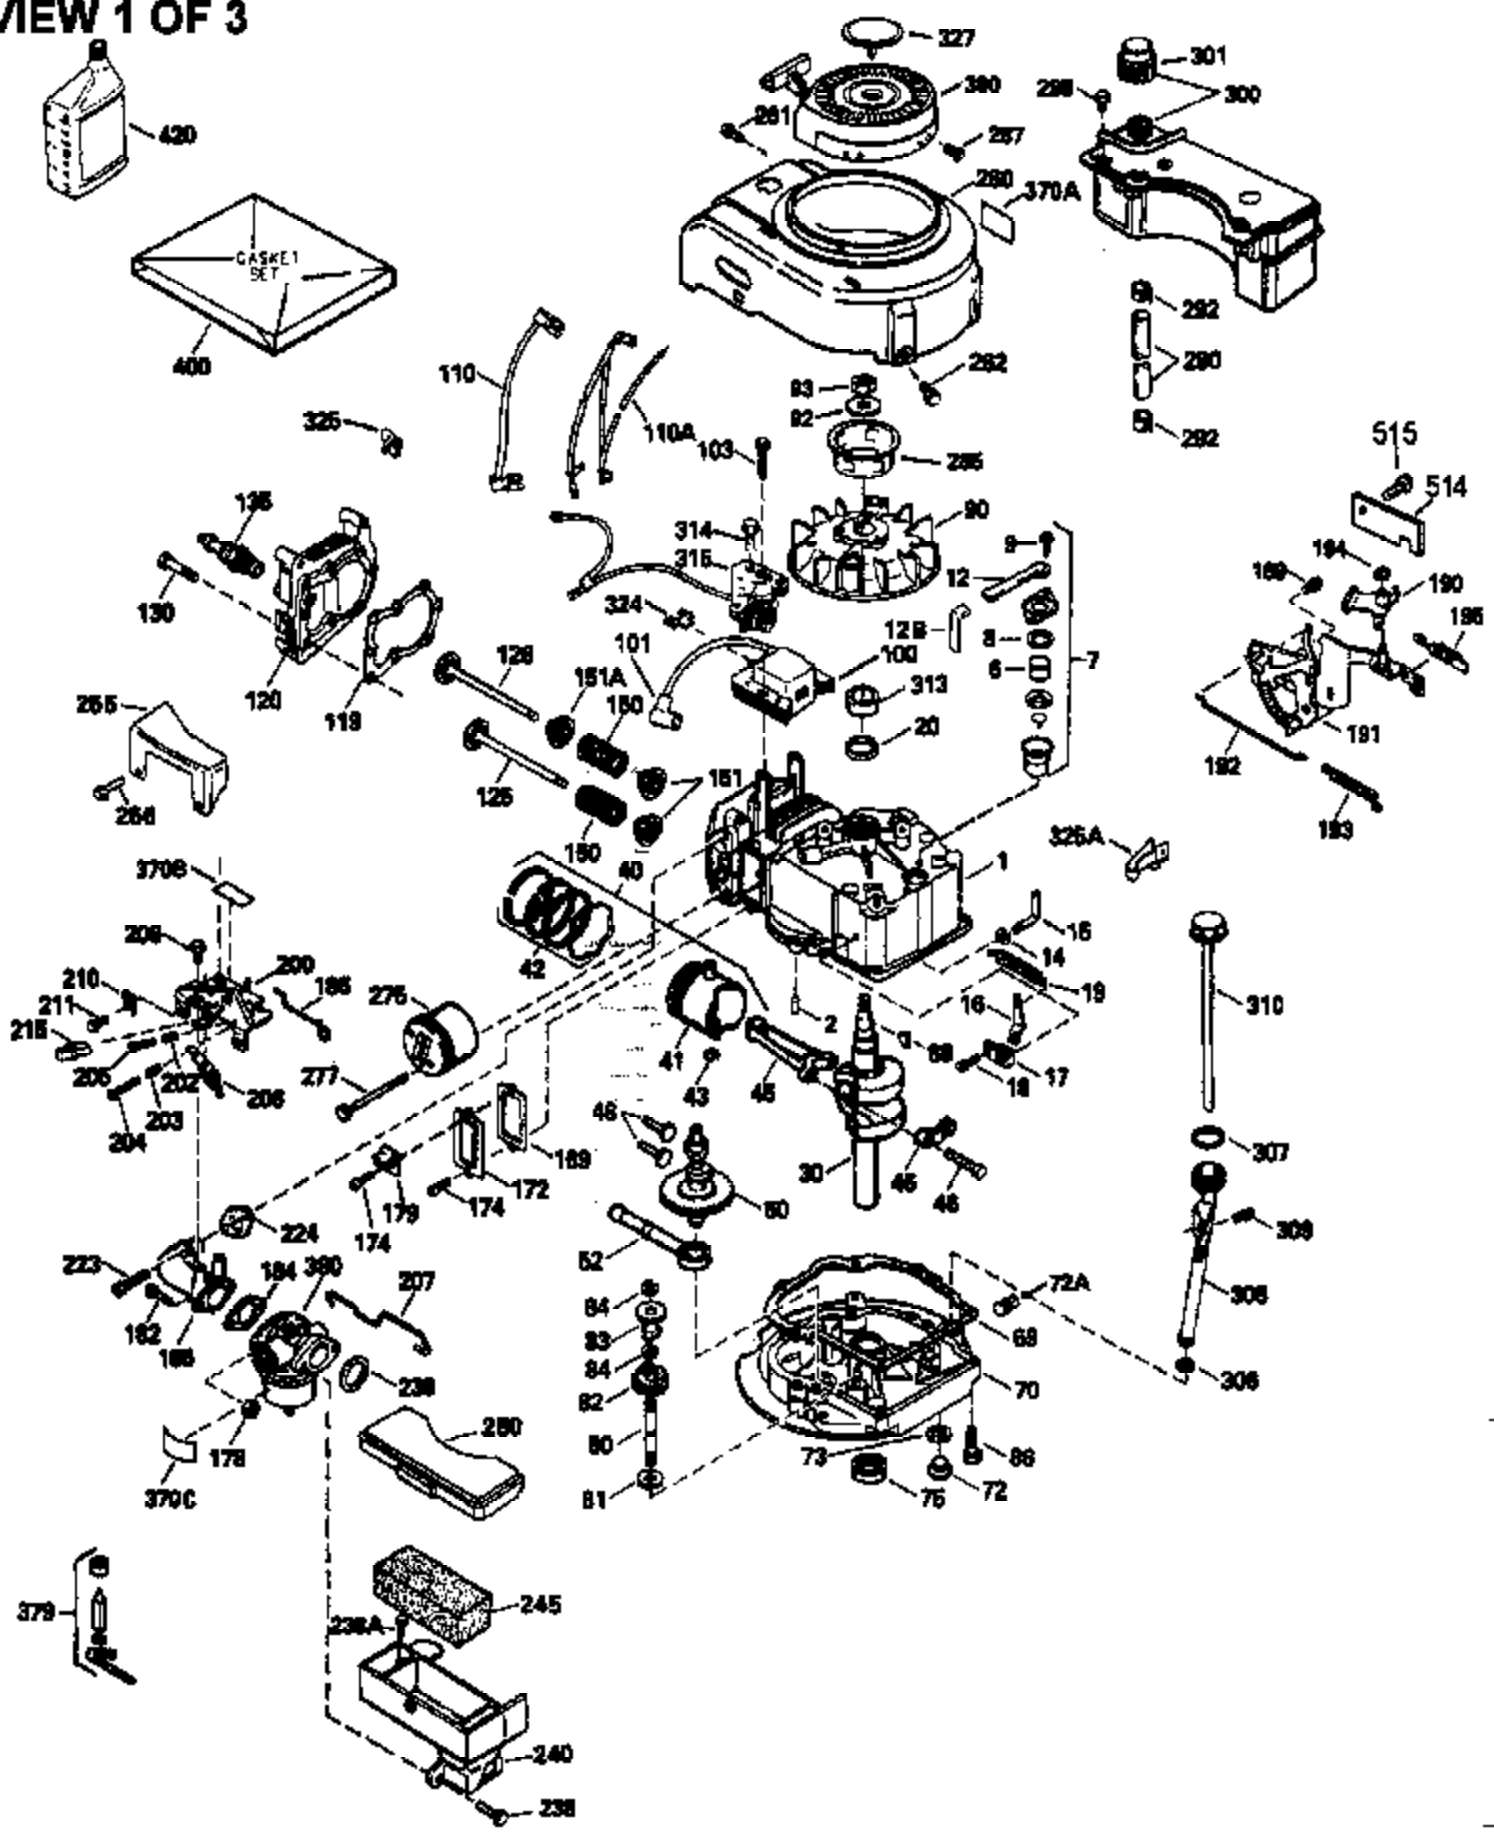

Ref #	Part Number	Qty	Description
	1 34959		Cylinder Ass'y. (Incl. 2, 9 & 20)
	2 26727		Dowel Pin
	7 34215		Breather Ass'y. (Incl. 8 & 9)
	8 32760A		* Breather Gasket
	9 30200		Screw, 10-24 x 9/16"
	14 28277		Washer
	15 30589		Governor Rod (Incl. 14)
	16 31383A		Governor Lever
	17 31335		Governor Lever Clamp
	18 650548		Screw, 8-32 x 5/16"
	19 31361		Extension Spring
	20 32600		Oil Seal
	30 35166		Crankshaft
	40 35544		Piston, Pin & Ring Set (Std.)
	40 35545		Piston, Pin & Ring Set (.010 OS)
	40 35546		Piston, Pin & Ring Set (.020 OS)
	41 35541		Piston & Pin Ass'y. (Std.) (Incl. 43)
	41 35542		Piston & Pin Ass'y. (.010 OS) (Incl. 43)
	41 35543		Piston & Pin Ass'y. (.020 OS) (Incl. 43)
	42 35547		Ring Set (Std.)
	42 35548		Ring Set (.010 OS)
	42 35549		Ring Set (.020 OS)
	43 20381		Piston Pin Retaining Ring
	45 30963B		Connecting Rod (Incl. 46)
	46 32610A		Connecting Rod Bolt
	48 27241		Valve Lifter
	50 33553		Camshaft (Mech. Compression Release)
	52 29914		Oil Pump Ass'y.
	69 35261		* Mounting Flange Gasket
	70 34311C		Mounting Flange (Incl. 72 thru 80)
	72 30572		Oil Drain Plug (Incl. 73)
	72A 9556		Oil Drain Plug
	73 28833		* Oil Plug Gasket
	75 27897		Oil Seal
	80 30574		Governor Shaft
	81 30590A		Washer
	82 30591		Governor Gear Ass'y. (Incl. 81)
	83 30588A		Governor Spool
	84 29193		Retaining Ring
	86 650488		Screw, 1/4-20 x 1-1/4"
	89 611004		Flywheel Key
	90 611112		Flywheel
	92 650815		Belleville Washer
	93 650816		Flywheel Nut
	100 34443A		Solid State Ignition
	101 610118		Spark Plug Cover
	103 650814		Screw, Torx T-15, 10-24 x 1"
	110 34961		Ground Wire
	119 32643A		* Cylinder Head Gasket
	120 34335		Cylinder Head
	125 29314B		Intake Valve (Std.) (Incl. 151)
	125 29315C		Intake Valve (1/32" OS) (Incl. 151)
	126 29313C		Exhaust Valve (Std.) (Incl. 151)
	126 29315C		Exhaust Valve (1/32" OS) (Incl. 151)
	130 6021A		Screw, 5/16-18 x 1-1/2"
	135 35395		Resistor Spark Plug (RJ19LM)
	150 31672		Valve Spring
	151 31673		Lower Valve Spring Cap

Ref #	Part Number	Qty	Description
169	27234A		* Valve Spring Cover Gasket
172	32755		Valve Spring Box Cover
174	650128		Screw, 10-24 x 1/2"
178	29752		Nut, 1/4-28
182	6201		Screw, 1/4-28 x 7/8"
184	26756		* Carburetor Gasket
186	34337		Governor Link
189	650839		Screw, 1/4-20 x 3/8"
189A	650837		Screw, 10-32 x 1/4"
190	35831		Brake Lever
191	35015A		S.E. Brake Bracket (Incl. 195)
192	34966		Control Link
193	34965		Extension Spring
194	32309		Retaining Ring
195	610973		Terminal
200	35727		Control Bracket (Incl. 202 thru 206)
202	33802		Compression Spring
203	31342		Compression Spring
204	650549		Screw, 5-40 x 7/16"
205	650777		Screw, 6-32 x 21/32"
207	34336		Throttle Link
209	30200		Screw, 10-24 x 9/16"
215	32410		Control Knob
223	650451		Screw, 1/4-20 x 1"
224	34690A		* Intake Pipe Gasket
238	650932		Screw, 10-32 x 49/64"
239	34338		* Air Cleaner Gasket
241A	35797		Air Cleaner Collar
250C	35065		Air Cleaner Cover
255	35176		Speed Control Cover
256	650807		Screw, 10-32 x 7/16"
260B	35393		Blower Housing
261	30200		Screw, 10-24 x 9/16"
262	650831		Screw, 1/4-20 x 15/32"
277	650795		Screw, 1/4-20 x 2-1/4"
285	35000		Starter Cup
287B	650884		Screw, 8-32 x 1/2"
290	30705		Fuel Line
292	26460		Fuel Line Clamp
298	28763		Screw, 10-32 x 35/64"
300B	34369A		Fuel Tank (Incl. 292 & 301A)
305	35577		Oil Fill Tube
306	34265		Fill Tube Gasket
307	35499		"O" Ring
309	650562		Screw, 10-32 x 1/2"
310	35578		Dipstick
313	34080		Flywheel Key Spacer
327	35392		Starter Plug
354	35025		Rope Retainer Staple
370A	35391		Instruction Decal
380	632162		Carburetor (Incl. 184)
390B	590621		Rewind Starter
400	33238D		Gasket Set (Incl. items marked *)

# VIEW 2 OF 3

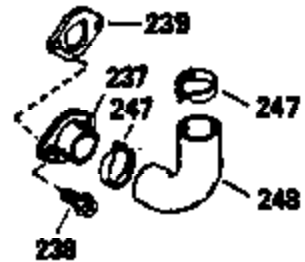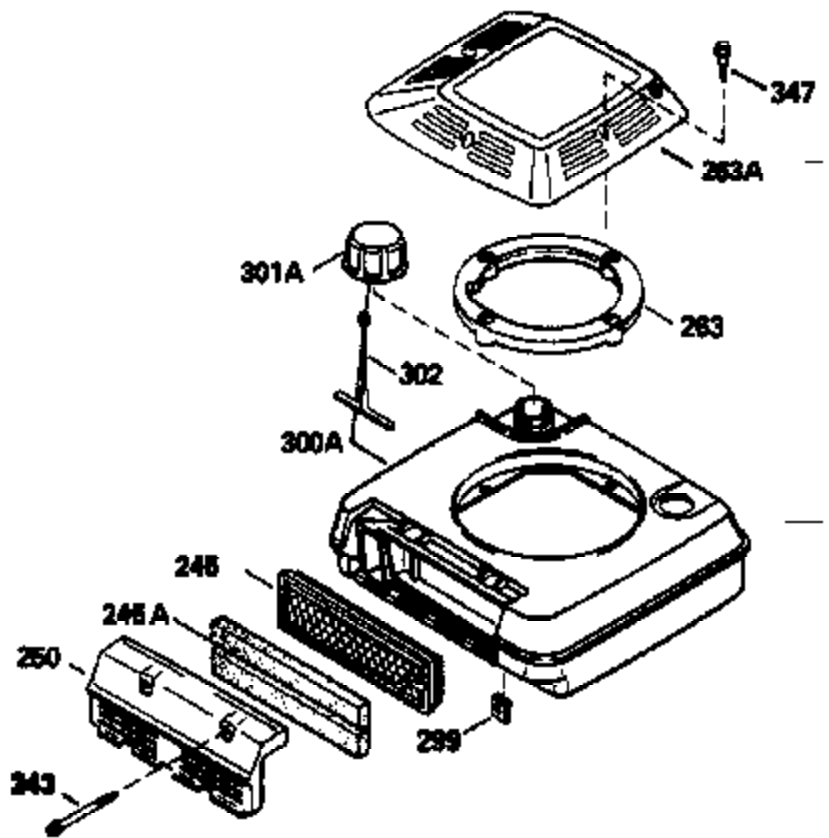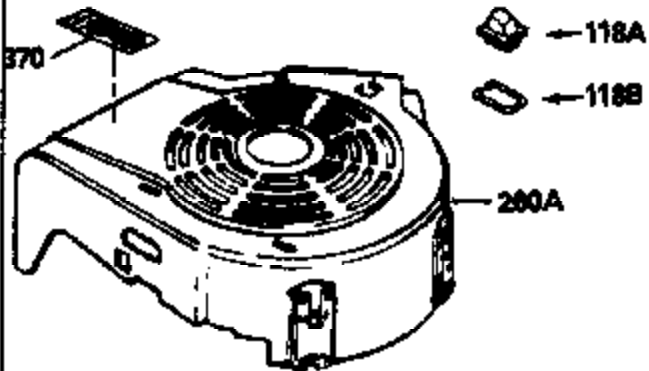

Ref #	Part Number	Qty	Description
189A	650837		Screw, 10-32 x 1/4"
238	650932		Screw, 10-32 x 49/64"
239	34338		* Air Cleaner Gasket
241A	35797		Air Cleaner Collar
245A	35066		Air Cleaner Filter
250C	35065		Air Cleaner Cover
260B	35393		Blower Housing
287B	650884		Screw, 8-32 x 1/2"
300B	34369A		Fuel Tank (Incl. 292 & 301A)
301A	35355		Fuel Cap
354	35025		Rope Retainer Staple
357	34985		Rope Retainer
390B	590621		Rewind Starter



Ref #	Part Number	Qty	Description
	19 31361		Extension Spring
	69 35261		* Mounting Flange Gasket
	182 6201		Screw, 1/4-28 x 7/8"
	185 31384A		Intake Pipe (Incl. 224)
	186 34337		Governor Link
	189A 650837		Screw, 10-32 x 1/4"
	209 30200		Screw, 10-24 x 9/16"
	223 650451		Screw, 1/4-20 x 1"
	238 650932		Screw, 10-32 x 49/64"
	239 34338		* Air Cleaner Gasket
	241A 35797		Air Cleaner Collar
	245A 35066		Air Cleaner Filter
	250C 35065		Air Cleaner Cover
	260B 35393		Blower Housing
	275A 34613		Muffler
	276 33753		Locking Plate
	277 650795		Screw, 1/4-20 x 2-1/4"
	287B 650884		Screw, 8-32 x 1/2"
	300B 34369A		Fuel Tank (Incl. 292 & 301A)
	354 35025		Rope Retainer Staple
	390B 590621		Rewind Starter