

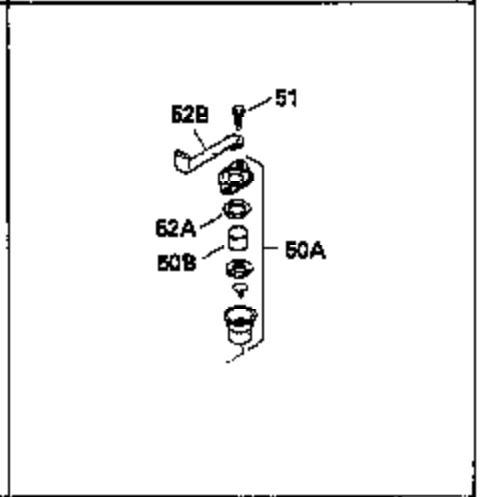
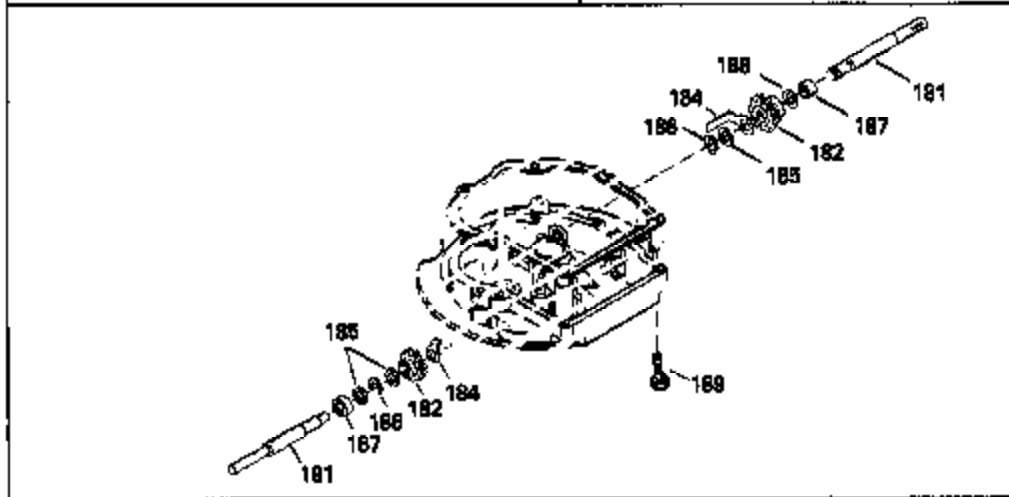
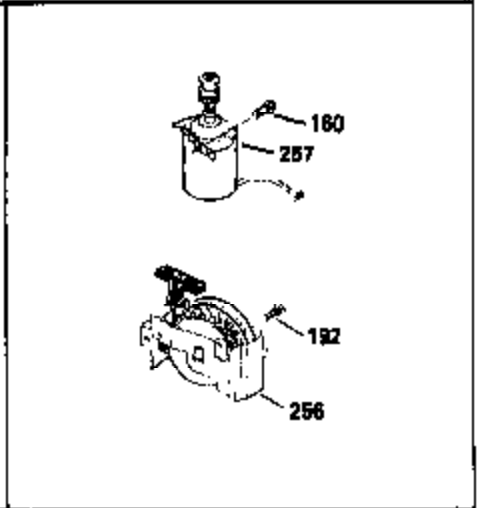
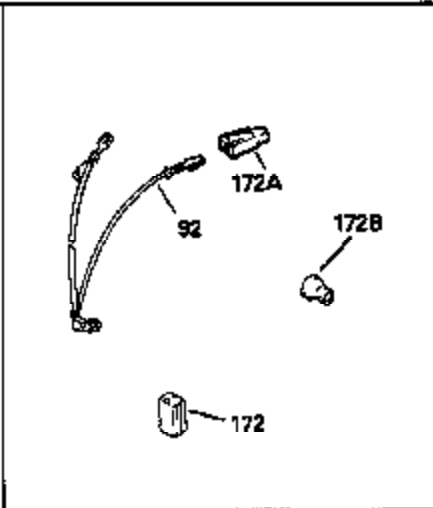


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

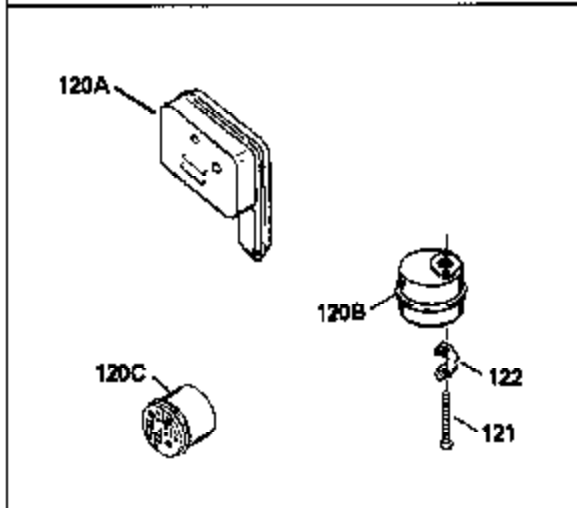

Ref #	Part Number	Qty	Description
1	35007		Cylinder Ass'y. (Incl. 2, 4, 50, 51 & 52)
2	26727		Dowel Pin
3	32323		Washer
4	32600		Oil Seal
5	29314B		Intake Valve (Std.) (Incl. 10)
5	29315C		Intake Valve (1/32" OS) (Incl. 10)
6	29313C		Exhaust Valve (Std.) (Incl. 10)
6	29315C		Exhaust Valve (1/32" OS) (Incl. 10)
9	31672		Valve Spring
10	31673		Lower Valve Spring Cap
11	34577		Crankshaft
14	34535		Piston, Pin & Ring Set (Std.)
14	34536		Piston, Pin & Ring Set (.010 OS)
14	34537		Piston, Pin & Ring Set (.020 OS)
14A	33562B		Piston & Pin Ass'y. (Std.) (Incl. 16)
14A	33563B		Piston & Pin Ass'y. (.010 OS) (Incl. 16)
14A	33564B		Piston & Pin Ass'y. (.020 OS) (Incl. 16)
15	33567		Ring Set (Std.)
15	33568		Ring Set (.010 OS)
15	35569		Ring Set (.020 OS)
16	20381		Piston Pin Retaining Ring
17A	32875		Connecting Rod (Incl. 18A)
18A	32610A		Connecting Rod Bolt
21	27241		Valve Lifter
22	33553		Camshaft (Mech. Compression Release)
23	29914		Oil Pump Ass'y.
24	35261		* Mounting Flange Gasket
25	34311B		Mounting Flange (Incl. 26, 28 & 32)
26	27897		Oil Seal
27	28833		* Drain Plug Gasket
28	30752		Oil Drain Plug
30	650488		Screw, 1/4-20 x 1-1/4"
31	35479		Washer
32	30574		Governor Shaft
33	30591		Governor Gear Ass'y. (Incl. 31)
34	29193		Retaining Ring
35	30588A		Governor Spool
36	31335		Governor Lever Clamp
37	28277		Washer
38	650548		Screw, 8-32 x 5/16"
39	32651		Governor Lever
40	31361		Governor Spring
41	30589		Governor Rod (Incl. 37)
43	611004		Flywheel Key
44	6021A		Screw, 5/16-18 x 1-1/2"
45	35395		Resistor Spark Plug (RJ19LM)
46	33554A		* Cylinder Head Gasket
47	34342		Cylinder Head
50	34215		Breather Ass'y. (Incl. 51 & 52)
51	30200		Screw, 10-24 x 9/16"
52	32760		* Breather Gasket
53	34336		Throttle Link
54	34337		Governor Link
55	32755		Valve Spring Box Cover
56	27234A		* Valve Spring Cover Gasket
57	650128		Screw, 10-24 x 1/2"
59	34690A		* Intake Pipe Gasket
60	33004A		Intake Pipe (Incl. 59)

Ref #	Part Number	Qty	Description
61A	650451		Screw, 1/4-20 x 1"
61	6201		Screw, 1/4-28 x 7/8"
67	26756		* Carburetor Gasket
68	33150		Control Bracket
69	32924		Speed Adjusting Screw Spring
70	650688		Screw, 10-32 x 1"
71	29752		Nut, 1/4-28
73	32971		Air Cleaner Adapter
74	650709		Screw, 10-32 x 7/16"
77	27272		* Air Cleaner Gasket
92A	34961		Ground Wire
98D	35478		Blower Housing
99	650831		Screw, 1/4-20 x 15/32"
100	30200		Screw, 10-24 x 9/16"
101	32671		Fuel Tank (Incl. 102 & 104)
102	33032		Fuel Cap
103	34357		Fuel Line
104	26460		Fuel Line Clamp
106	35016		Fuel Tank Bracket
107	650735		Screw, 10-24 x 3/8"
107A	650665		Screw, 1/4-15 x 7/8"
109A	33155A		Speed Control Ass'y.
114	30200		Screw, 10-24 x 9/16"
115	610973		Terminal
116	27793		Conduit Clip
117	28942		Screw, 10-32 x 3/8"
121	650795		Screw, 1/4-20 x 2-1/4"
122	33753		Locking Plate
124	650562		Screw, 10-32 x 1/2"
125	34265		Oil Fill Tube Gasket
126	35577		Oil Fill Tube
127	35499		"O" Ring
128	35578		Dipstick
129	610118		Spark Plug Cover
130	650816		Flywheel Nut
131	650815		Belleville Washer
132C	35000		Starter Cup
134B	35392		Starter Plug
165	34080		Flywheel Key Spacer
192	650884		Screw, 8-32 x 1/2"
199	650814		Screw, 10-24 x 1"
200	611112		Flywheel
201	34443A		Solid State Ignition
221	35015A		Brake Bracket Ass'y.
223	34966		Control Link
224	34965		Extension Spring
225	34968		Brake Lever
226	32309		Retaining Ring
227	650839		Screw, 1/4-20 x 3/8"
235	35067		Air Cleaner Collar
236	35068		Air Cleaner Clamp
237	35066		Air Cleaner Filter
238	35065		Air Cleaner Cover
255	632399		Carburetor (Incl. 67)
256C	590621		Rewind Starter
258	33576B		Gasket Set (Incl. items marked *)

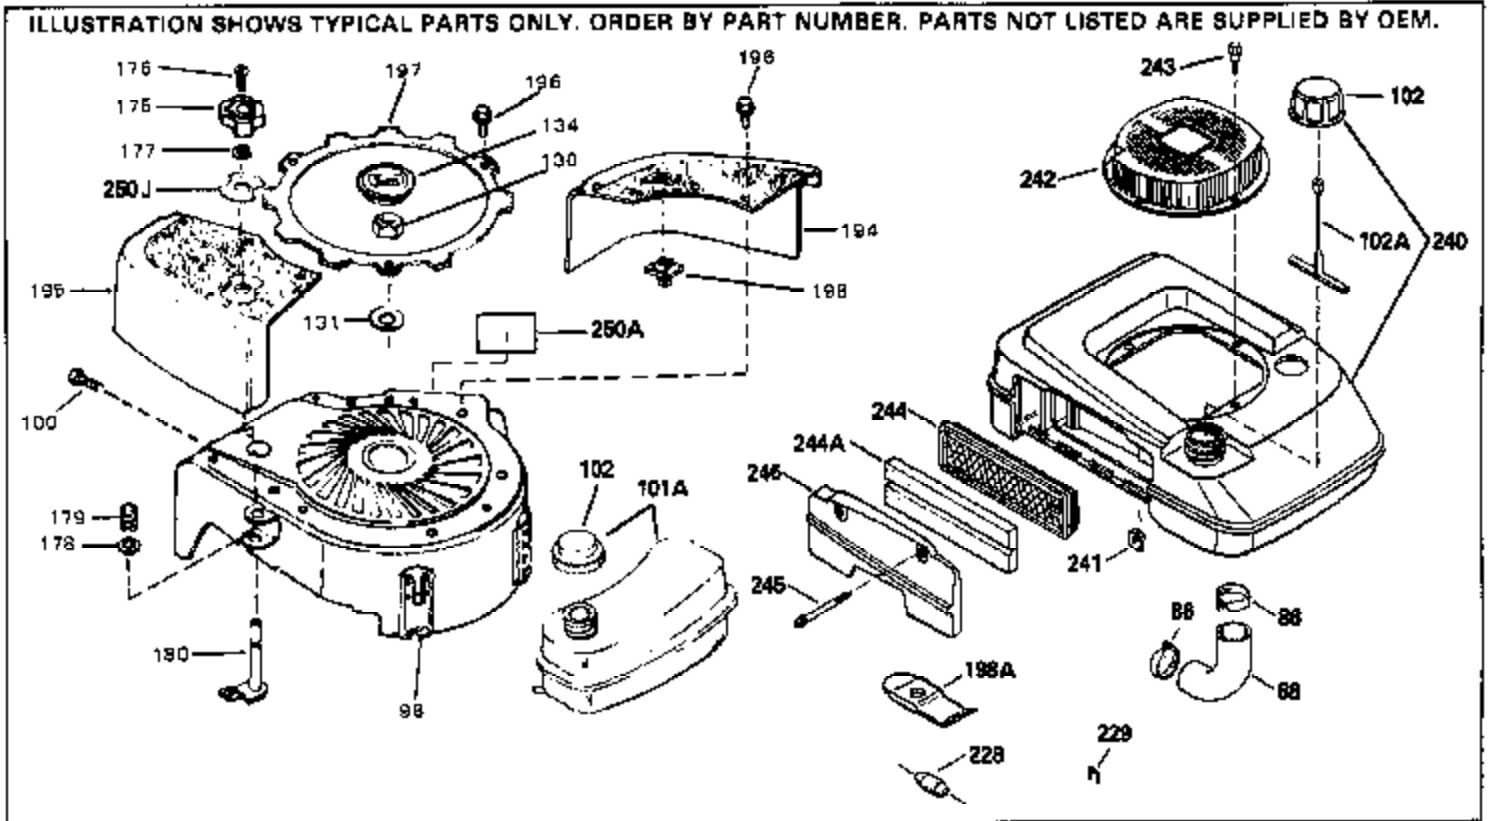

Ref #	Part Number	Qty	Description
17A	32875		Connecting Rod (Incl. 18A)
18A	32610A		Connecting Rod Bolt
51	30200		Screw, 10-24 x 9/16"
61A	650451		Screw, 1/4-20 x 1"
68	33150		Control Bracket
69	32924		Speed Adjusting Screw Spring
70	650688		Screw, 10-32 x 1"
73	32971		Air Cleaner Adapter
74	650709		Screw, 10-32 x 7/16"
77	27272		* Air Cleaner Gasket
92A	34961		Ground Wire
98D	35478		Blower Housing
100	30200		Screw, 10-24 x 9/16"
102	33032		Fuel Cap
106	35016		Fuel Tank Bracket
107A	650665		Screw, 1/4-15 x 7/8"
107	650735		Screw, 10-24 x 3/8"
109A	33155A		Speed Control Ass'y.
116	27793		Conduit Clip
117	28942		Screw, 10-32 x 3/8"
120C	34613		Muffler
121	650795		Screw, 1/4-20 x 2-1/4"
122	33753		Locking Plate
130	650816		Flywheel Nut
131	650815		Belleville Washer
132C	35000		Starter Cup
134B	35392		Starter Plug
192	650884		Screw, 8-32 x 1/2"
198A	35168		Rope Guide Bracket Ass'y.
228	34985		Rope Stop & Staple Ass'y.
256C	590621		Rewind Starter