



		_	
		Qty	Description
	33311B		Cylinder (Incl. 2,3,4,5,184) (2-5/8" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain, 1/4-18
	27876B		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
5	32784		Intake Valve (1/32" OS) (Incl. 9)
6	27878A		Exhaust Valve (Std.)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7	27882		Cap, Upper valve spring
8	27881		Spring, Valve
9	32581		Cap, Lower valve spring
11	32111		Crankshaft (Incl. 12 & 13)
	29783		Pin, Crankshaft gear Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
14	34532		Piston, Pin & Ring Set (.010" OS)
14	34533		Piston, Pin & Ring Set (.020" OS)
14A	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
14A	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	31295C		Rod Assy., Connecting (Incl. 18)
	30682		Bolt, Connecting rod (Early production)
	650662C		Screw, Connecting rod (Late production)
	26073		Connecting rod bolt washer (Early pro duction)
	28264		Connecting rod boil washer (Early pro duction) Connecting rod nut (Used on early pro duction)
	33156		Camshaft
	34034		Lifter, Valve
	31451A		Cylinder Cover (Incl.24, 105, 246, 24 7 & 248)
	28460		Seal, Oil
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	650489		Screw, 1/4-20 x 5/8"
	30939A		Cover, Cylinder head
	28938C		* Gasket, Cylinder head
	31882		Head, Cylinder
	31889		Plug, Spark (Champion D-21 or equival ent)
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		Washer, Flat (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
37	650128		Screw, 10-24 x 1/2" (Use as required)
37	650597		Screw, 10-24 x 5/8" (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	27915A		* Gasket, Intake
	34712		Flange, Carburetor (Incl. 60)
10			

Ref #	Part Number Qt	y Description
	30196	Screw, 5/16-18 x 3/4"
	29918	Lockwasher
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used on early production)
52	32326A	Lever, Governor (New lever does not need 1 of Ref
		#49,51,53,54,132,133)
53	30322	Lock Nut, 8-32 (Use as required)
54	29916	Clamp, Governor lever (Use as require d)
	30205	Bracket, Adjusting
	31710	Link, Throttle
	29216	Locknut, 10-32
		·
	650517	Screw, 1/4-20 x 13/16"
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
	30699C	Rod Assy., Governor (Incl. 64 & 65)
63	30699B	Rod Assy., Governor (This one piece gov. rod is no longer
		used. It is replaced by 30699C assy., Ref.#63A)
64	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	31297	Dipstick (Incl. 68)
	29673	
		* Gasket, Dipstick
	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Hsg. (For elec.starter)(Incl.1 89,190)
	33876	Gasket, Stator
	29536	Baffle, Blower housing
74	650561	Screw, 1/4-20 x 5/8"
75	31688A	* Gasket, Carburetor
81A	650152	Screw, 8-32 x 3/8"
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	28820	Screw, 10-32 x 1/2" (Use as required)
	650521	Screw, 10-32 x 1-1/8" (Use as require d)
	27272A	* Gasket, Air cleaner
	31691	Bracket, Air cleaner
		·
	31715	Body, Air Cleaner
89	730127	Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B) (Use as required)
98	28569	Compression Spring (Used with 29500 screw)(Use as
		required)
Q.R.	32924	Compression Spring (Used with 650688 screw) (Use as
30	02021	required)
98	31342	Compression Spring (Used with 650549 screw) (Use as required)
QQ	650549	Screw, 5-40 x 7/16" (Use as required)
	29500	Screw, 8-32 x 3/4" (Use as required)
	650688	Screw, 10-32 x 3/4 (Use as required)
	30884	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
107	30591	Gear Assy., Governor (Incl. 106)
108	30588A	Spool, Governor
	29193	Ring, Retaining
	30063	Screw, 1/4-20 x 1/2"
	410144B	Fuel Cap (White Plastic)(Standard)(As req.)
110		i doi oap (milio i idolio)(olaridara)(mo req.)

Ref #	Part Number	Qty	Description
115	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required)
119 119 120 132 132 144 146 147 148 186 186 193 224 225B 229 230 244 245 245 246 247 248 266 267 298 298A 298A 298A 298A 298A 299 300	29774 30705 30962 26460 650548 650139 650542 29538 650128 30622A 27275 29443 27276 31386 31726B 28942 27793 31793 31792 31855 650778 650580 650815 8116 34346 550223 33310 31517 32173 30547A 30548B 631021		Fuel Line (Braided 8.25") (Use as required) Fuel Line (Braided 16") (Use as required) Fuel Line (Braided 32") (Use as required) Clamp, Fuel line (Use as required) Screw, 8-32 x 5/16" (Early production) Screw, 8-32 x 1/2" (Early production) Screw, 5/16-18 x 3/4" Base, Engine mounting Screw, 10-24 x 1/2" Extension, Blower housing Clip, Wire (Use as required) Clip, Fuel line (Use as required) Cover, Spark Plug Spring, Extension Control Bracket (Incl. 98, 99, 226 & 284A) Screw, 10-32 x 3/8" Clip, Conduit Bearing, Ball Washer, Thrust Retainer, Bearing Washer, Lock Nut, Lock Washer, Belleville Nut, Hex Decal, Instruction Decal, Name Decal, 5 HP Mini-Bike (Use as required) Decal, H.P. (5 H.P.) (Use as required) Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy.
303	631950		Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown)
304	610689A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
310	33235A		* Gasket Set (Incl. items marked *)

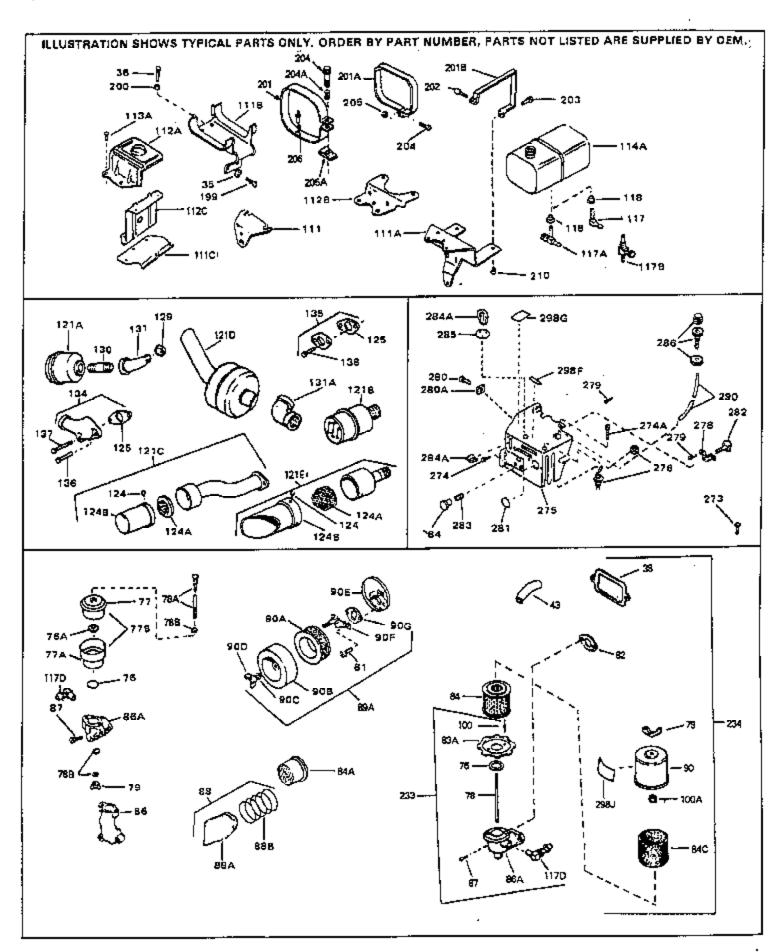

Ref #	Part Number	Qty	Description
35	26073		Washer, Flat (Use as required)
35	650570		Washer, Flat (Use as required)
35	650691		Washer, Flat (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	28820		Screw, 10-32 x 1/2" (Use as required)
	650521		Screw, 10-32 x 1-1/8" (Use as require d)
	27272A		* Gasket, Air cleaner
	31700		Element, Air cleaner
	34697		Air Cleaner Elbow Assy.(Use in 730561 only.)
	730128		Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
00/1	730120		298B) (Use as req.)
			230D) (USE as 1eq.)
111B	34823		Bracket, Lower fuel tank
114A	33050		Fuel Tank (Incl. 115)
117D	31887		Fitting, Fuel line
117B	33053		Valve, Fuel strainer & shut-off
121A	29633		Muffler
121E	391026		Muffler (Incl. 124, 124A & 124B) (This spark arrester
			mufflercan be used on any model)
1011	22474		Muffler Careen (Llee as required)
	33171		Muffler Screen (Use as required)
	33185		Cover & Tube, Muffler (Use as require d)
	650578		Screw, 8-18 x 3/8"
	32862		Nut, Conduit (1/4" thick)
	30244		Nipple, Pipe (2.5")
	30209		Elbow, Exhaust (45 degree)
	31288		Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130		Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29212		Screw, 1/4-28 x 7/16"
	650570		Washer, Flat
	31979		Strap, Fuel tank
	650451		Screw, 1/4-20 x 1"
	650456		Nut, 1/4-20
233	34819		Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
			730561 ass'y. only)
234	730561		Air Cleaner Kit
201	700001		(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
			(Use only on engines with an externally ventedfully
			adjustable carburetor.)
			•
	650687		Screw, 10-32 x 5/16" (Use as required)
284A	32410		Knob, Speed control

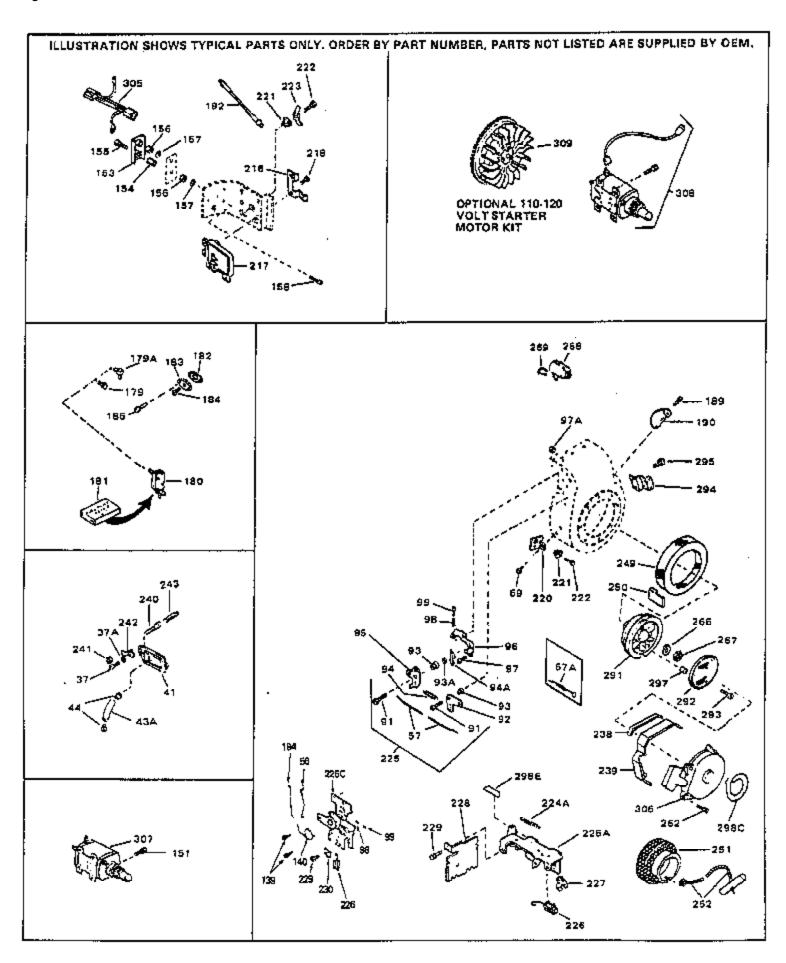

Ref #	Part Number	Qty	Description
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	27261		Washer, Flat (Use as required)
	28425		Cover, Valve spring
	35350		Tube, Breather
	31710		Link, Throttle
	29747B		Screw, 5/16-24 x 21/32"
98	28569		Compression Spring (Used with 29500 screw)(Use as required)
98	32924		Compression Spring (Used with 650688 screw) (Use as required)
98	31342		Compression Spring (Used with 650549 screw) (Use as required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
	29500		Screw, 8-32 x 3/4" (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
182	32683A		Gasket, Fuel pump cover (Use as required)
183	32955		Cover, Fuel pump pad (Use as required)
184	9556		Plug, Pipe 1/8-27 (Use as required)
185	30063		Screw, 1/4-20 x 1/2" (Use as required)
	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
	33177		Terminal (Use as required)
	28942		Screw, 10-32 x 3/8"
	27793		Clip, Conduit
	28301		Pulley, Rope starter
	590343		Rope Assy., Starter
	650815		Washer, Belleville
	8116		Nut, Hex
	33018		Harness Assy., Adapter (Use as required)
	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)