

Ref #	Part Number Qty	Description
1	33311B	Cylinder (Incl. 2, 3, 4 & 41)(2-5/8" Bore)
2	27652	Pin, Dowel
3	27642	Pipe plug, 1/4-18
4	27876B	Seal, Oil
	29536	Blower Housing Baffle (Without electric starter knock out)
_		(Use as required)
5	35256A	Blower Housing Baffle (With electric starter knockout) (As req.)(point ign.)
6	650561	Screw, 1/4-20 x 5/8"
	29538	Base, Engine mounting
	650542	Screw, 5/16-18 x 3/4"
	30813	Crankshaft
	29783	
	27884	Pin, Crankshaft gear (Used on early p rod.) Gear, Crankshaft (Used on early production) This gear is
11	27004	serviceable ONLY when it is pinned to the crankshaft.
13	34531	Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
13	34532	Piston, Pin & Ring Set (.010" OS)
13	34533	Piston, Pin & Ring Set (.020" OS)
13A	33312B	Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
13A	33313B	Piston & Pin Ass'y. (.010" OS) (Incl. 14)
13A	33314B	Piston & Pin Ass'y. (.020" OS) (Incl. 14)
14	27888	Ring, Piston pin retaining
15	34854	Ring Set (Std.) (2-5/8" Bore)
	34855	Ring Set (.010" OS)
	34856	Ring Set (.020" OS)
	31295C	Rod Assy., Connecting (Incl. 17)
	650662C	Bolt, Connecting rod (Incl. 2 pieces)
	34034	Lifter, Valve
	33156	Camshaft
	30622A	Extension, Blower housing
	650128	Screw, 10-24 x 1/2"
	650561	Screw, 1/4-20 x 5/8" (Use as required)
	30063	Screw, 1/4-20 x 1/2" (Use as required)
	30684	Gasket Cylinder Cover
	31303B	Cover, Cylinder (Incl. 26 & 34)
	31546	Bushing, Crankshaft
	28427	Seal, Oil
	650488	Screw, 1/4-20 x 1-1/4"
	650493	Screw, 1/4-20 x 1-1/4 Screw, 1/4-20 x 1-3/4"
	30699C	Rod Assy., Governor (Incl. 30 & 31)
	30700	Yoke, Governor (Incl. 30 & 31)
	650494	
	29642	Screw, 6-40 x 5/16"
		Ring, Retaining
	31845	Shaft, Mechanical governor
	30588A	Spool, Governor
	35479	Washer, Flat
	29193	Ring, Retaining
	30591	Gear Assy., Governor
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	32783	Intake Valve (Std.)
	32784	Intake Valve (1/32" OS)
	27878A	Exhaust Valve (Std.)
	27880A	Exhaust Valve (1/32" OS)
43	27882	Cap, Upper valve spring
44	27881	Spring, valve

	Part Number Qty	
45	32581	Cap, Lower valve spring
46	33876	Gasket, Stator
	650489	Screw, 1/4-20 x 5/8"
	34240	Ground Wire
	30884	Key, Flywheel
	28938C	
		Gasket, Cylinder head
	30938A	Head, Cylinder
	33636	Resistor Spark Plug (RJ-8C)
	610118	Cover, Spark plug (Use as required)
	30939A	Cover Assy., Cylinder head
	650690	Washer, Belleville (Use as required)
56A	650691	Washer, Flat (Use as required)
56	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
56	650694A	Screw, 5/16-18 x 2" (Use as required)
56	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	30322	Locknut, 8-32
	29916	Clamp, Governor lever (Use as require d)
	33454	Lever Assy., Governor
	29918	Washer, Lock, No. 8 E.T.
	650548	Screw, 8-32 x 5/16"
	29216	Locknut, 10-32
	29826	Screw, 10-32 x 3/4"
	34661	Link, Governor
	34662	Link, Throttle
	34664	Control Bracket (Incl. 68, 69, 72 & 1 38)
	31342	Spring, Compression
69	650549	Screw, 5-40 x 7/16"
70	27793	Clip, Conduit
71	28942	Screw, 10-32 x 3/8"
72	610973	Terminal Assy. (Use as required)
	27896A	Gasket, Valve chamber cover
	28423	Breather Assy., Valve
	28424	Element, Breather
	28425	Cover, Valve spring box
	650128	Screw, 10-24 x 1/2"
	35350	Tube Breather
	27915A	* Gasket, Intake pipe to cylinder
		· · · · · · · · · · · · · · · · · · ·
	34712	Flange, Carburetor (Incl. 86A)
	30196	Screw, 5/16-18 x 3/4"
	31688A	* Gasket, Carburetor
	650517	Screw, 1/4-20 x 13/16"
	27272A	* Air Cleaner Gasket (Use as required)
	30767	Spacer, Cleaner (Use as required)
94A	34819	Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
		730561 assembly only)
101	24150	Product Fuel tonk
	34158 650665	Bracket, Fuel tank
	650665	Screw, 1/4-14 x 7/8"
	34159	Plate, Fuel tank mounting
104	34186A	Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built
		with different size fuel inlet openings. Tanks with the 1-3/16"
		I.D. opening use fuel cap 33032 or 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
105	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
105	33032	Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as
		required)

Ref #	Part Number Qty	Description
105	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
105	35355	Fuel Cap (Red plastic) (Use as requir ed)
	29774	Fuel Line (Braided, 8 1/4") (Use as required)
		. , ,
	30962	Fuel Line (Braided, 32") (Use as required)
	26460	Clamp, Fuel line (Use as required)
	35260	Blower Housing
	29747B	Screw, 5/16-24 x 21/32"
	27930A	* Gasket, Exhaust flange
	32401	Muffler
	391026	Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
111D	33714	Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
111E	34390	Deflector, Exhaust (Optional)
112	30196	Screw, 5/16-18 x 3/4"
113	26073	Washer, Flat
	650694A	Screw, 5/16 - 18 x 2"
	32125	Cup, Starter
	35009	Screen, Starter cup
	650815	Washer, Belleville
	8116	Nut, Hex
	29716	Screw, 1/4-28 x 7/16"
	35438	
		Knob, Speed control
	34663	Spring, Speed control
	650821	Screw, 10-32 x 1/2"
	33171	Screen, Muffler (Use as required)
	33185	Cover & tube, Muffler (Use as require d)
	650578	Screw, 8-18 x 3/8" (Use as required)
	33700	Cover & Tube, Muffler (Use as require d)
	33323	Screen, Muffler (Use as required)
145	34011A	Dipstick (Incl. 146)
146	33590	"O" Ring
147	33893A	Oil Fill Tube
148	34814	Primer Assy.
	32180C	Line, Primer
	34672	Cover, Carburetor
	650764	Nut, "U" Clip
	650760	Screw, 8-32 x 3/8"
	34126	Bracket, Grommet mounting
	650257	Screw, 8-32 x 5/16"
	650765	Screw, 10-32 x 3/10"
	28820	Screw, 10-32 x 1/2"
		•
	32398	Bracket, Choke
	650760	Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	34127	Guard, Starter
	32576	Seal, Snow Guard
	730130	Muffler Adapter Kit (Incl.110,112)(As req.)
201	730164	Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 &
		230)(As req.)
201	700164	Air Clanner Vit Mini hike (Incl 97 100 101 100 100 9 104)
201	730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124)
		(Use as required)
201B	730561	Air Cleaner Kit
		(Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C)
		(Used only on engine with an externally vented fully
		adjustable carburetor)
		•
230B	34144	Decal, Primer

Ref #	Part Number	Qty	Description
230F	34414		Decal, Warning
230	34346		Decal, Instruction
230	34416		Decal, Instruction
230	550223		Decal, Name
231	30547A		Breaker Assy (Used on Std. Point igni tion)
231A	30548B		Condenser
232A	631021		Inlet, Needle Seat & Clip Assy.
240	611077		Alternator (Optional)
241	650868		Screw, 8-18 x 1-1/8" (3 required)(Opt .)
242	611078		Connector, A.C. Lighting (Optional)
242	611079		Connector, D.C. Charging (Optional)
243	590610		Tube, Centering (Optional)
244	590613		Alternator Shaft (Optional)
250	631927		Carburetor (Incl. 85) (Refer to Division 5, Section A, Page
			140 for breakdown)
251	610689A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
252	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
254	33328D		Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A		Gasket Set (Incl. items marked*)