



Ref #	Part Number	Qtv	Description
1			Cylinder (Incl. 2,3,4,5,184) (2-5/8" Bore)
2	27652		Pin, Dowel
	27642		Plug, Oil drain, 1/4-18
	27876B		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (3.2" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	30813		Crankshaft (Incl. 12 & 13)
12	29783		Pin, Crankshaft gear Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
14	34532		Piston, Pin & Ring Set (.010" OS)
14	34533		Piston, Pin & Ring Set (.020" OS)
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	31295C		Rod Assy., Connecting (Incl. 18)
	30682		Bolt, Connecting rod (Early productio n)
	650662C		
	26073		Screw, Connecting rod (Late production)
			Connecting rod bolt washer (Early pro duction)
	28264		Connecting rod nut (Used on early pro duction)
	33985		Camshaft (Extended)
	34034		Lifter, Valve
	31720A		Cylinder Cover (Incl. 24, 24A, 27 & 1 05)
	28427		Seal, Oil
	28926		Seal, Oil
	30684		* Gasket, Cylinder cover
	31546		Bushing, Crankshaft
28	650488		Screw, 1/4-20 x 1-1/4"
29	650493		Screw, 1/4-20 x 1-3/4"
30	650489		Screw, 1/4-20 x 5/8"
31	30939A		Cover, Cylinder head
32	28938C		* Gasket, Cylinder head
33	30938A		Head, Cylinder (Incl. 3 of 36)
	33636		Resistor Spark Plug
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650128 650507		Screw, 10-24 x 1/2" (Use as required)
	650597 27006A		Screw, 10-24 x 5/8" (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
41	28425		Cover, Valve spring

	5 (1)	<u> </u>	
		Qty	Description **Operation**
	27915A		* Gasket, Intake
	30195A		Flange, Carburetor (Incl. 79 & 80)
	30196		Screw, 5/16-18 x 3/4"
	29918		Lockwasher
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used on early productio n)
52	32326A		Lever, Governor (New lever does not need 1 of Ref
			#49,51,53,54,132,133)
53	30322		Lock Nut, 8-32 (Use as required)
	29916		Clamp, Governor lever (Use as required)
	30205		·
	30824		Bracket, Adjusting
			Link, Throttle
	29216		Locknut, 10-32
	29752		Nut & Lockwasher, 1/4-28
	650572		Screw, 1/4-28 x 1-1/8"
	29826		Screw, 10-32 x 3/4"
	29642		Ring, Retaining
63	30699B		Rod Assy., Governor (This one piece gov. rod is no longer
			used. It is replaced by 30699C assy., Ref.#63A)
63A	30699C		Rod Assy., Governor (Incl. 64 & 65)
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	34011A		Dipstick (Incl. 68)
	33893A		Oil Fill Tube
	33590		"O" Ring
	29747B		Screw, 5/16-24 x 21/32"
	32158E		Blower Hsg. (For elec.starter)(Incl.1 89,190)
	33876		Gasket, Stator
	29536		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
	650152		Screw, 8-32 x 3/8"
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	28820		Screw, 10-32 x 1/2" (Use as required)
	650521		Screw, 10-32 x 1-1/8" (Use as required)
	27272A		
	31691		* Gasket, Air cleaner
	30727		Bracket, Air cleaner
			Element, Air cleaner
	31715 730127		Body, Air cleaner
09	130121		Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B) (Use as required)
			(Ose as required)
98	28569		Compression Spring (Used with 29500 screw)(Use as
			required)
00	32924		Compression Spring (Used with 650688 screw) (Use as
90	32924		
			required)
98	31342		Compression Spring (Used with 650549 screw) (Use as
			required)
00	650540		• ,
	650549		Screw, 5-40 x 7/16" (Use as required)
	29500		Screw, 8-32 x 3/4" (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
	30884		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	31845		Shaft, Mechanical governor
106	30590A		Washer, Flat

Ref #	Part Number Q	y Description
	30591	Gear Assy., Governor (Incl. 106)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650665	Screw, 1/4-15 x 3/4"
	650561	Screw, 1/4-20 x 5/8"
	35584	Fuel Tank (Incl. 115 & 120)
	410144B	Fuel Cap (White Plastic)(Standard)(As req.)
	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use
113	33032	as required)
115	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required)
	29774	Fuel Line (Braided 8.25") (Use as req uired)
119	30705	Fuel Line (Braided 16") (Use as requi red)
119	30962	Fuel Line (Braided 32") (Use as requi red)
120	26460	Clamp, Fuel line (Use as required)
125	27930A	* Gasket, Exhaust
126	30196	Screw, 5/16-18 x 3/4"
132	650548	Screw, 8-32 x 5/16" (Early production )
	650139	Screw, 8-32 x 1/2" (Early production)
	650542	Screw, 5/16-18 x 3/4"
	29538	Base, Engine mounting
	650128	Screw, 10-24 x 1/2"
	30622A	Extension, Blower housing
	27275	Clip, Wire (Use as required)
	29443	Clip, Fuel line (Use as required)
	610118	Cover, Spark plug
	28942	Screw, 10-32 x 3/8"
	27793	Clip, Conduit
	35349	Ground Wire
	29716	
		Screw, 1/4-28 x 7/16"
	32125	Cup, Starter
	590417	Screen, Starter cup
	650815	Washer, Belleville
	8116	Nut, Hex
	550223	Decal, Name
	33310	Decal, 5 HP Mini-Bike (Use as require d)
	31517	Decal, H.P. (5 H.P.) (Use as required)
	32173	Decal, H.P. (6 H.P.) (Use as required )
	34346	Decal, Instruction
	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
303	631824	Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 206for breakdown)
304	610689A	Magneto NOTE: The complete magneto is not available as
		an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
306	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
310	33235A	* Gasket Set (Incl. items marked *)

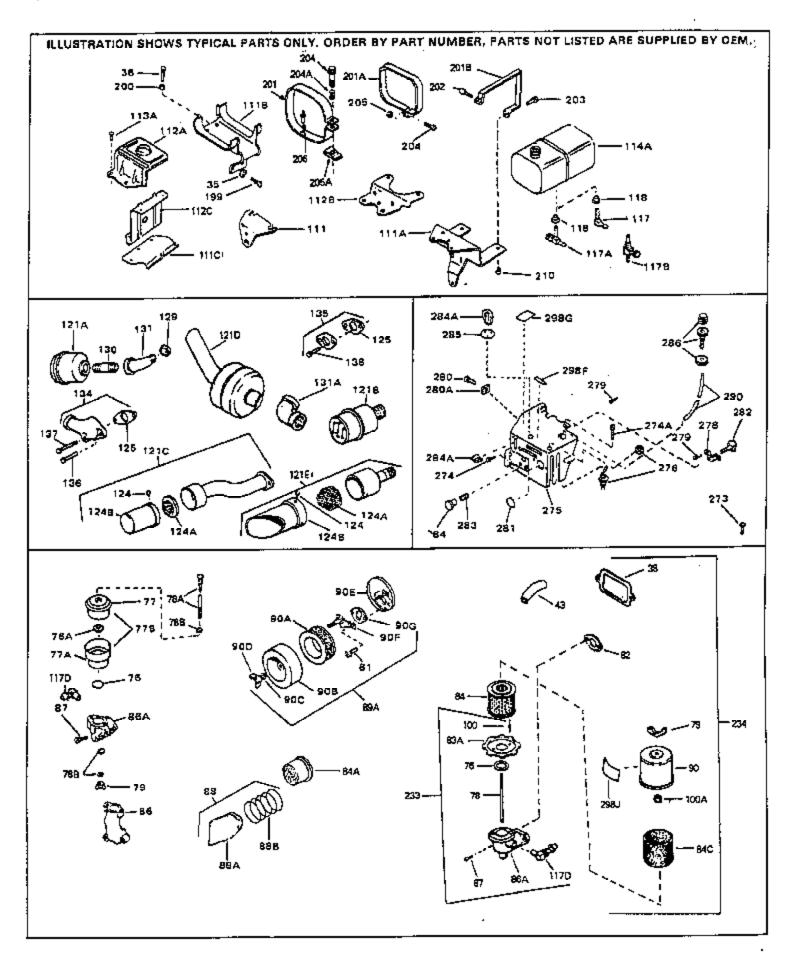

Ref #	Part Number	Qty Description
35	26073	Washer, Flat (Use as required)
35	650570	Washer, Flat (Use as required)
35	650691	Washer, Flat (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A	Screw, 5/16-18 x 2" (Use as required)
38	27896A	* Gasket, Breather cover
81	30196	Screw, 5/16-18 x 3/4" (Use as require d)
81	28820	Screw, 10-32 x 1/2" (Use as required)
81	650521	Screw, 10-32 x 1-1/8" (Use as require d)
82	27272A	* Gasket, Air cleaner
86A	34697	Air Cleaner Elbow Assy.(Use in 730561 only.)
89A	730128	Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
		298B) (Use as req.)
111	34816	Bracket, Lower fuel tank
	33166A	Bracket, Upper fuel tank
	650665	Screw, 1/4-15 x 3/4"
	391006	Muffler (Incl. 124, 124A & 124B)
	391026	Muffler (Incl. 124, 124A & 124B) (This spark arrester
1212	001020	mufflercan be used on any model)
	33171	Muffler Screen (Use as required)
	33185	Cover & Tube, Muffler (Use as require d)
	650578	Screw, 8-18 x 3/8"
	27930A	* Gasket, Exhaust
	31288	Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130	Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
233	34819	Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
		730561 ass'y. only)
234	730561	Air Cleaner Kit
		(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
		(Use only on engines with an externally ventedfully
		adjustable carburetor.)
272	650687	Screw, 10-32 x 5/16" (Use as required )
213	000001	Sciew, 10-32 x 3/10 (Use as required)

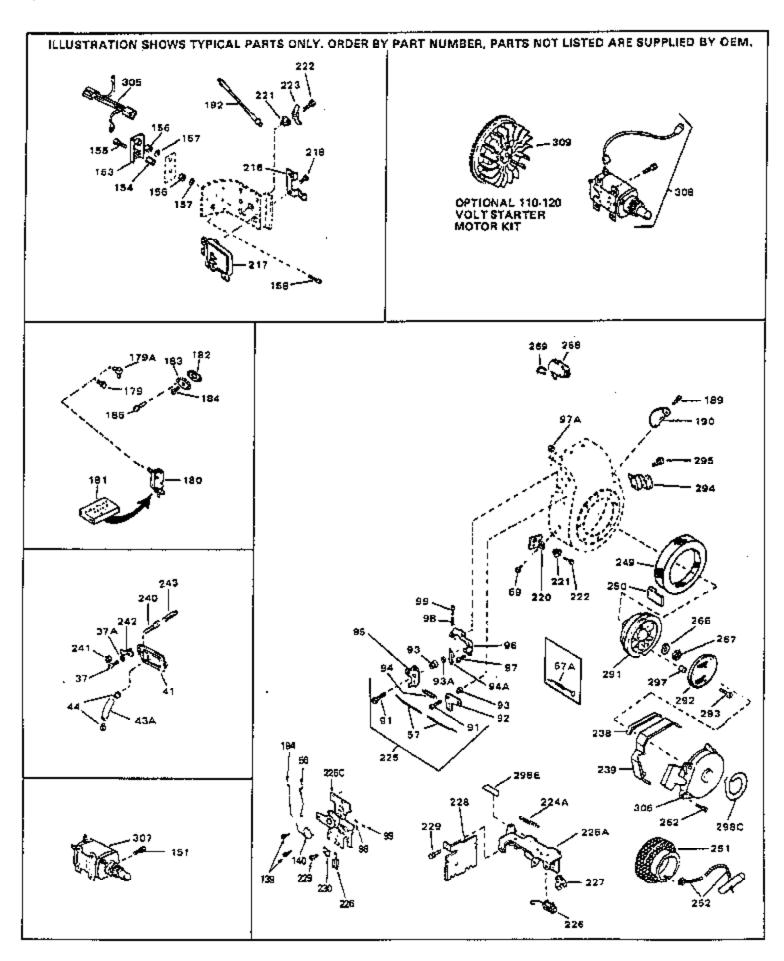

Ref #	Part Number	Qty	Description
	27261		Washer, Flat (Use as required)
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
41	28425		Cover, Valve spring
43A	35350		Tube, Breather
56	30824		Link, Throttle
69	29747B		Screw, 5/16-24 x 21/32"
98	28569		Compression Spring (Used with 29500 screw)(Use as
			required)
98	32924		Compression Spring (Used with 650688 screw) (Use as
			required)
98	31342		Compression Spring (Used with 650549 screw) (Use as
			required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
99	29500		Screw, 8-32 x 3/4" (Use as required)
99	650688		Screw, 10-32 x 1 (Use as required)
182	32683A		Gasket, Fuel pump cover (Use as requi red)
183	32955		Cover, Fuel pump pad (Use as required )
184	9556		Plug, Pipe 1/8-27 (Use as required)
185	30063		Screw, 1/4-20 x 1/2" (Use as required )
225A	33110A		Control Bracket (Incl. 224A & 226)
225	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
	33177		Terminal (Use as required)
229	28942		Screw, 10-32 x 3/8"
	27793		Clip, Conduit
	29716		Screw, 1/4-28 x 7/16"
	650815		Washer, Belleville
	8116		Nut, Hex
	33018		Harness Assy., Adapter (Use as requir ed)
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for
			breakdown)
308	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)