



		Qty	Description
	33311B		Cylinder (Incl. 2,3,4,5,184) (2-5/8" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain, 1/4-18
	27876B		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
5	32784		Intake Valve (1/32" OS) (Incl. 9)
6	27878A		Exhaust Valve (Std.)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7	27882		Cap, Upper valve spring
8	27881		Spring, Valve
	32581		Cap, Lower valve spring
	31790		Crankshaft (Incl. 12 & 13)
	29783		Pin, Crankshaft gear Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is
4.4	0.4504		serviceable ONLY when itis pinned to the crankshaft.
	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532		Piston, Pin & Ring Set (.010" OS)
	34533		Piston, Pin & Ring Set (.020" OS)
	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
16	27888		Ring, Piston pin retaining
17	31295C		Rod Assy., Connecting (Incl. 18)
18A	30682		Bolt, Connecting rod (Early productio n)
18	650662C		Screw, Connecting rod (Late productio n)
19	26073		Connecting rod bolt washer (Early pro duction)
20	28264		Connecting rod nut (Used on early pro duction)
21	33156		Camshaft
	34034		Lifter, Valve
	31451A		Cylinder Cover (Incl.24, 105, 246, 24 7 & 248)
	28460		Seal, Oil
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	650489		Screw, 1/4-20 x 5/8"
	30939A		Cover, Cylinder head
	28938C		* Gasket, Cylinder head
	30938A		Head, Cylinder (Incl. 3 of 36)
	33636		Resistor Spark Plug
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		
			Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	27915A		* Gasket, Intake
46	30195A		Flange, Carburetor (Incl. 79 & 80)

Ref #	Part Number	Qty	Description
48	30196	•	Screw, 5/16-18 x 3/4"
	29918		Lockwasher
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used on early productio n)
52	32326A		Lever, Governor (New lever does not need 1 of Ref
			#49,51,53,54,132,133)
	0000		
	30322		Lock Nut, 8-32 (Use as required)
54	29916		Clamp, Governor lever (Use as require d)
55	30205		Bracket, Adjusting
	31710		Link, Throttle
	29216		Locknut, 10-32
			·
	29752		Nut & Lockwasher, 1/4-28
	650572		Screw, 1/4-28 x 1-1/8"
61	29826		Screw, 10-32 x 3/4"
62	29642		Ring, Retaining
	30699C		Rod Assy., Governor (Incl. 64 & 65)
	30699B		Rod Assy., Governor (This one piece gov. rod is no longer
05	30099D		
			used. It is replaced by 30699C assy., Ref.#63A)
64	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
			•
	34011A		Dipstick (Incl. 68)
	33893A		Oil Fill Tube
68	33590		"O" Ring
69	29747B		Screw, 5/16-24 x 21/32"
	32158E		Blower Hsg. (For elec.starter)(Incl.1 89,190)
	33876		Gasket, Stator
			·
	29536		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
75	31688A		* Gasket, Carburetor
81A	650152		Screw, 8-32 x 3/8"
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	28820		Screw, 10-32 x 1/2" (Use as required)
	650521		Screw, 10-32 x 1-1/8" (Use as require d)
	27272A		* Gasket, Air cleaner
	31691		Bracket, Air cleaner
84B	30727		Element, Air cleaner
85	31715		Body, Air cleaner
	730127		Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
33	100.21		(Use as required)
			(OSC as required)
98	28569		Compression Spring (Used with 29500 screw)(Use as
			required)
			• ,
98	32924		Compression Spring (Used with 650688 screw) (Use as
			required)
			• •
98	31342		Compression Spring (Used with 650549 screw) (Use as
			required)
			• ,
99	650688		Screw, 10-32 x 1 (Use as required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
	29500		Screw, 8-32 x 3/4" (Use as required)
	30884		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	31845		Shaft, Mechanical governor
106	30590A		Washer, Flat
107	30591		Gear Assy., Governor (Incl. 106)
	30588A		Spool, Governor
.00			

D-11	Dad N. ark are	December
		Description Patricing
	29193	Ring, Retaining
	650665	Screw, 1/4-15 x 3/4"
	30063	Screw, 1/4-20 x 1/2"
	34156A	Fuel Tank (Incl. 115 & 120)
115	410144B	Fuel Cap (White Plastic)(Standard)(As req.)
115	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use
		as required)
445	04040	•
115	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required)
119	29774	Fuel Line (Braided 8.25") (Use as req uired)
	30705	Fuel Line (Braided 16") (Use as requi red)
	30962	Fuel Line (Braided 32") (Use as requi red)
	26460	Clamp, Fuel line (Use as required)
	27930A	* Gasket, Exhaust
	650548	·
		Screw, 8-32 x 5/16" (Early production)
	650139	Screw, 8-32 x 1/2" (Early production)
	650542	Screw, 5/16-18 x 3/4"
	29538	Base, Engine mounting
	650128	Screw, 10-24 x 1/2"
	30622A	Extension, Blower housing
186	27275	Clip, Wire (Use as required)
186	29443	Clip, Fuel line (Use as required)
193	610118	Cover, Spark plug
224	31386	Spring, Extension
	31726B	Control Bracket (Incl. 98, 99, 226 & 284A)
	34235	Ground Wire
	31793	Bearing, Ball
	31792	Washer, Thrust
	31855	
		Retainer, Bearing
	650778	Washer, Lock
	650580	Nut, Lock
	29716	Screw, 1/4-28 x 7/16"
	32125	Cup, Starter
	590417	Screen, Starter cup
266	650815	Washer, Belleville
	8116	Nut, Hex
298A	550223	Decal, Name
298A	33310	Decal, 5 HP Mini-Bike (Use as require d)
298A	31517	Decal, H.P. (5 H.P.) (Use as required)
298A	32173	Decal, H.P. (6 H.P.) (Use as required)
298	34346	Decal, Instruction
	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
	631828	Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A,
303	031020	page 144 for breakdown)
		page 144 Ioi bieakuowii)
304	610689A	Magneto NOTE: The complete magneto is not available as
		an assembly. The magneto number is shown for reference
		purposes only. Order component parts individually, as
		shown in parts list. (Refer to Division 5, Section B, page 24
		for breakdown)
		•
306	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
		breakdown)
040	222251	•
310	33235A	* Gasket Set (Incl. items marked *)

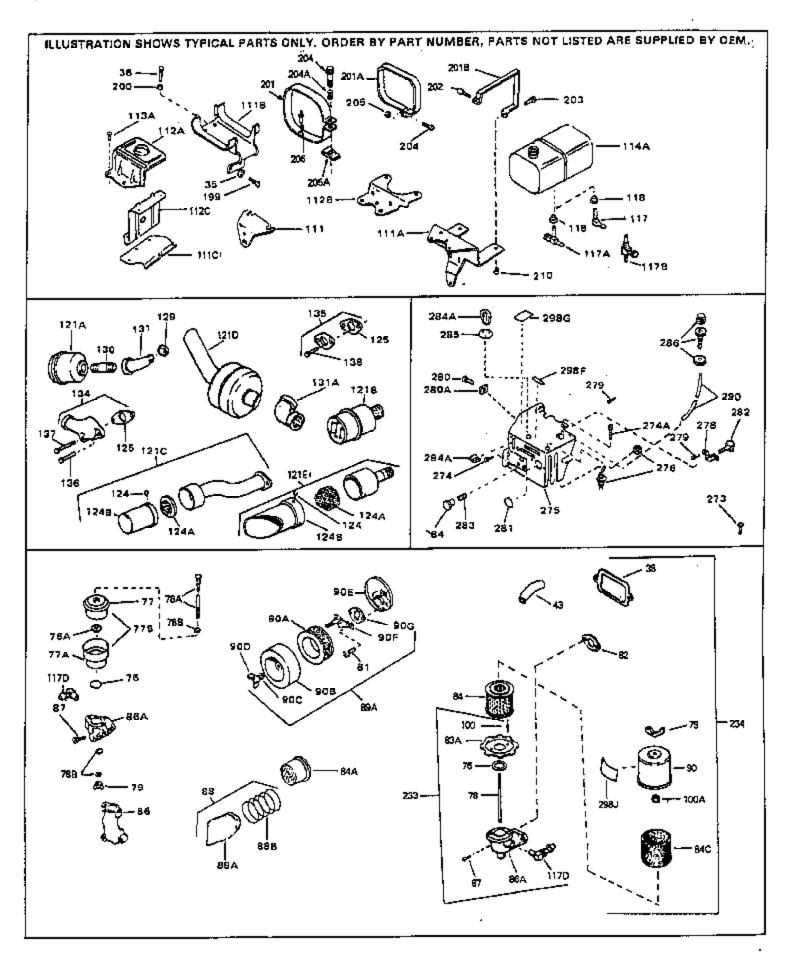

Ref #	Part Number	Qty	Description
	26073	,	Washer, Flat (Use as required)
35	650570		Washer, Flat (Use as required)
35	650691		Washer, Flat (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
38	27896A		* Gasket, Breather cover
81	30196		Screw, 5/16-18 x 3/4" (Use as require d)
81	28820		Screw, 10-32 x 1/2" (Use as required)
81	650521		Screw, 10-32 x 1-1/8" (Use as require d)
82	27272A		* Gasket, Air cleaner
86A	34697		Air Cleaner Elbow Assy.(Use in 730561 only.)
89A	730128		Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
			298B) (Use as req.)
111C	34167		Bracket, Lower fuel tank mtg.
	34168		Bracket, Upper fuel tank
	650665		Screw, 1/4-15 x 3/4"
	32961		Valve, Fuel shut-off
	391026		Muffler (Incl. 124, 124A & 124B) (This spark arrester
1212	001020		mufflercan be used on any model)
4044	00474		• •
	33171		Muffler Screen (Use as required)
	33185		Cover & Tube, Muffler (Use as require d)
	650578		Screw, 8-18 x 3/8"
	27930A		* Gasket, Exhaust
	31288		Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130		Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	650697A 30196		Screw, 5/16-18 x 2-1/2" (Use as requi red) Screw, 5/16-18 x 3/4" (Use as require d)
	34819		Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
233	34019		730561 ass'y. only)
234	730561		Air Cleaner Kit
			(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
			(Use only on engines with an externally ventedfully
			adjustable carburetor.)
273	650687		Screw, 10-32 x 5/16" (Use as required)
	32410		Knob, Speed control
204/ (<u></u>		. a.e., opoed control

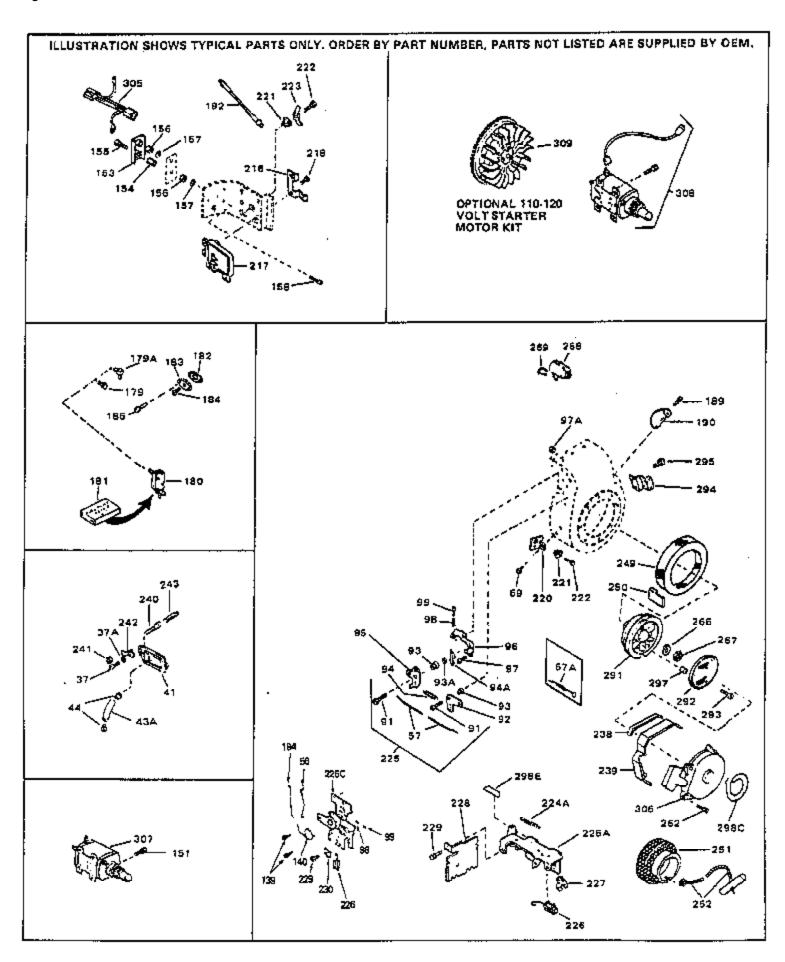

Ref #	Part Number Qty	Description
37	650128	Screw, 10-24 x 1/2" (Use as required)
37	650597	Screw, 10-24 x 5/8" (Use as required)
37A	27261	Washer, Flat (Use as required)
41	28425	Cover, Valve spring
43A	35350	Tube, Breather
56	31710	Link, Throttle
69	29747B	Screw, 5/16-24 x 21/32"
98	28569	Compression Spring (Used with 29500 screw)(Use as required)
98	32924	Compression Spring (Used with 650688 screw) (Use as required)
98	31342	Compression Spring (Used with 650549 screw) (Use as required)
99	650688	Screw, 10-32 x 1 (Use as required)
	650549	Screw, 5-40 x 7/16" (Use as required)
	29500	Screw, 8-32 x 3/4" (Use as required)
	32683A	Gasket, Fuel pump cover (Use as requi red)
	32955	Cover, Fuel pump pad (Use as required)
	9556	Plug, Pipe 1/8-27 (Use as required)
	30063	Screw, 1/4-20 x 1/2" (Use as required)
	730152	Control Bracket(Incl.91 thru 97)(As r eq.)
	33177	Terminal (Use as required)
	29716	Screw, 1/4-28 x 7/16"
	650815	Washer, Belleville
	8116	Nut, Hex
305	33018	Harness Assy., Adapter (Use as requir ed)
306	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
308	33328D	Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)