



		Qty	Description
	33311B		Cylinder (Incl. 2,3,4,5,184) (2-5/8" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain, 1/4-18
	27876B		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7	27882		Cap, Upper valve spring
8	27881		Spring, Valve
9	32581		Cap, Lower valve spring
11	31826		Crankshaft (Incl. 12 & 13)
12	29783		Pin, Crankshaft gear Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
14	34532		Piston, Pin & Ring Set (.010" OS)
14	34533		Piston, Pin & Ring Set (.020" OS)
15	34854		Ring Set (Std.) (2-5/8" Bore)
15	34855		Ring Set (.010" OS)
15	34856		Ring Set (.020" OS)
16	27888		Ring, Piston pin retaining
17	31295C		Rod Assy., Connecting (Incl. 18)
18	650662C		Screw, Connecting rod (Late productio n)
18A	30682		Bolt, Connecting rod (Early productio n)
19	26073		Connecting rod bolt washer (Early pro duction)
	28264		Connecting rod nut (Used on early pro duction)
	33156		Camshaft
	34034		Lifter, Valve
	31451A		Cylinder Cover (Incl.24, 105, 246, 24 7 & 248)
	28460		Seal, Oil
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	650489		Screw, 1/4-20 x 5/8"
	30939A		Cover, Cylinder head
	28938C		* Gasket, Cylinder head
	30938A		Head, Cylinder (Incl. 3 of 36)
	33636		Resistor Spark Plug
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		
	27915A		Cover, Valve spring * Gasket Intaka
			* Gasket, Intake
40	30195A		Flange, Carburetor (Incl. 79 & 80)

Ref #	Part Number Q	ty Description
	30196	Screw, 5/16-18 x 3/4"
	29918	Lockwasher
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used on early productio n)
52	32326A	Lever, Governor (New lever does not need 1 of Ref
		#49,51,53,54,132,133)
53	30322	Lock Nut, 8-32 (Use as required)
54	29916	Clamp, Governor lever (Use as require d)
	30205	Bracket, Adjusting
	31710	Link, Throttle
	29216	Locknut, 10-32
		·
	29752	Nut & Lockwasher, 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
	29826	Screw, 10-32 x 3/4"
62	29642	Ring, Retaining
63A	30699C	Rod Assy., Governor (Incl. 64 & 65)
63	30699B	Rod Assy., Governor (This one piece gov. rod is no longer
		used. It is replaced by 30699C assy., Ref.#63A)
64	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
		·
	31297	Dipstick (Incl. 68)
	29673_	* Gasket, Dipstick
	29747B	Screw, 5/16-24 x 21/32"
70	32158E	Blower Hsg. (For elec.starter)(Incl.1 89,190)
71	33876	Gasket, Stator
73	29536	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	650152	Screw, 8-32 x 3/8"
		·
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	28820	Screw, 10-32 x 1/2" (Use as required)
	650521	Screw, 10-32 x 1-1/8" (Use as require d)
	27272A	* Gasket, Air cleaner
83	31691	Bracket, Air cleaner
85	31715	Body, Air cleaner
	730127	Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
		(Use as required)
00	20560	•
90	28569	Compression Spring (Used with 29500 screw)(Use as
		required)
98	32924	Compression Spring (Used with 650688 screw) (Use as
		required)
QR	31342	Compression Spring (Used with 650549 screw) (Use as
90	31342	required)
	650549	Screw, 5-40 x 7/16" (Use as required)
99	29500	Screw, 8-32 x 3/4" (Use as required)
99	650688	Screw, 10-32 x 1 (Use as required)
	30884	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
		·
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 106)
	30588A	Spool, Governor
	29193	Ring, Retaining
111D	34158	Bracket, Lower fuel tank

Dof #	Dort Number	Nt. Description
-		Nty Description
	34159	Plate, Upper fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	650665	Screw, 1/4-15 x 3/4"
	34186A	Fuel Tank (Incl. 115 & 120)
115	410144B	Fuel Cap (White Plastic)(Standard)(As req.)
115	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use
		as required)
445	0.404.0	•
115	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required)
119	29774	Fuel Line (Braided 8.25") (Use as req uired)
	30705	Fuel Line (Braided 16") (Use as requi red)
	30962	Fuel Line (Braided 32") (Use as required)
	26460	· · · · · · · · · · · · · · · · · · ·
		Clamp, Fuel line (Use as required)
	27930A	* Gasket, Exhaust
	650548	Screw, 8-32 x 5/16" (Early production)
	650139	Screw, 8-32 x 1/2" (Early production)
144	650542	Screw, 5/16-18 x 3/4"
146	29538	Base, Engine mounting
147	650128	Screw, 10-24 x 1/2"
148	30622A	Extension, Blower housing
	30747	Clip, Shorting
	650890	Lockwasher
	27275	Clip, Wire (Use as required)
	29443	Clip, Fuel line (Use as required)
	27276	· · · · · · · · · · · · · · · · · · · ·
		Cover, Spark Plug
	31386	Spring, Extension
	31726B	Control Bracket (Incl. 98, 99, 226 & 284A)
	31793	Bearing, Ball
	31792	Washer, Thrust
246	31855	Retainer, Bearing
247	650778	Washer, Lock
248	650580	Nut, Lock
266	650815	Washer, Belleville
	8116	Nut, Hex
	34346	Decal, Instruction
	550223	Decal, Name
	33310	Decal, 7 HP Mini-Bike (Use as require d)
	31517	Decal, H.P. (5 H.P.) (Use as required)
		· · · · · · · · · · · · · · · · · · ·
	32173	Decal, H.P. (6 H.P.) (Use as required)
	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
303	631828	Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A,
		page 144 for breakdown)
204	610689A	Magnete NOTE: The complete magnete is not available as
304	010009A	Magneto NOTE: The complete magneto is not available as
		an assembly. The magneto number is shown for reference
		purposes only. Order component parts individually, as
		shown in parts list. (Refer to Division 5, Section B, page 24
		for breakdown)
240	33235A	* Gasket Set (Incl. items marked *)
310	00Z00A	Cashel Sel (IIIGI. Ilems marked)

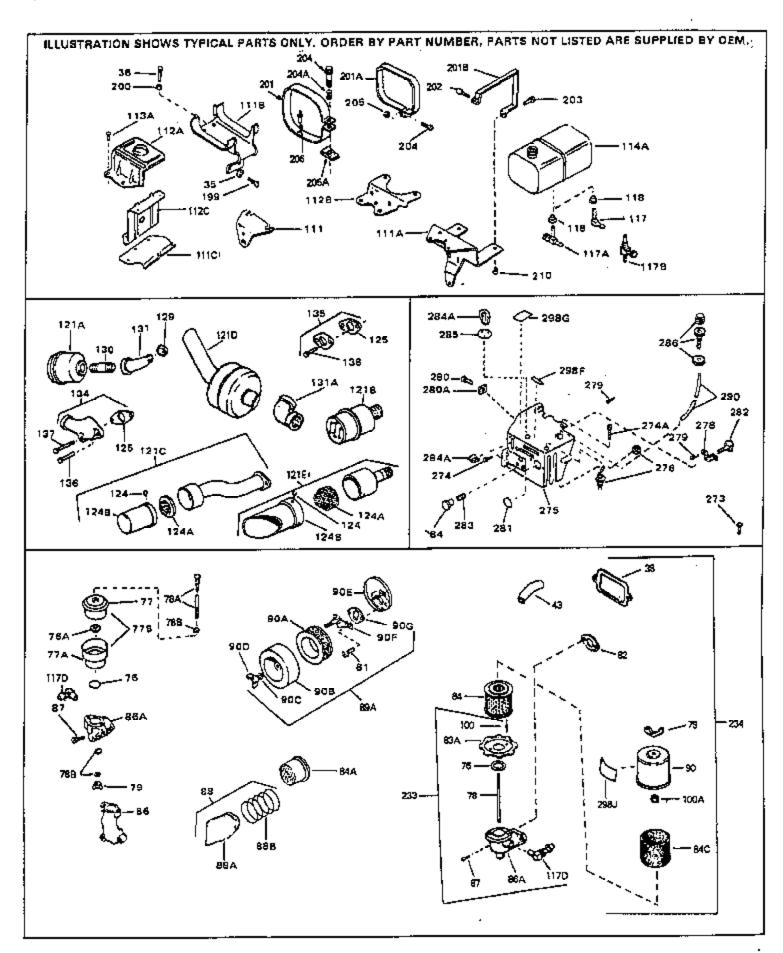

Ref #	Part Number	Qty	Description
	26073		Washer, Flat (Use as required)
35	650570		Washer, Flat (Use as required)
35	650691		Washer, Flat (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
38	27896A		* Gasket, Breather cover
81	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	28820		Screw, 10-32 x 1/2" (Use as required)
	650521		Screw, 10-32 x 1-1/8" (Use as require d)
	27272A		* Gasket, Air cleaner
	31700		Element, Air cleaner
	34697		Air Cleaner Elbow Assy.(Use in 730561 only.)
	730128		Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
			298B) (Use as req.)
113A	650665		Screw, 1/4-15 x 3/4"
	391026		Muffler (Incl. 124, 124A & 124B) (This spark arrester
			mufflercan be used on any model)
121Δ	29633		Muffler
	33171		Muffler Screen (Use as required)
	33185		Cover & Tube, Muffler (Use as require d)
	650578		Screw, 8-18 x 3/8"
	27930A		* Gasket, Exhaust
	32862		Nut, Conduit (1/4" thick)
	30244		Nipple, Pipe (2.5")
	30209		Elbow, Exhaust (45 degree)
	31288		Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130		Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	30196		Screw, 5/16-18 x 3/4" (Use as required)
	34819		Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
255	34019		730561 ass'y. only)
			3,
234	730561		Air Cleaner Kit
			(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
			(Use only on engines with an externally ventedfully
			adjustable carburetor.)
273	650687		Screw, 10-32 x 5/16" (Use as required)
	32410		Knob, Speed control
_3 ;; (/ -1

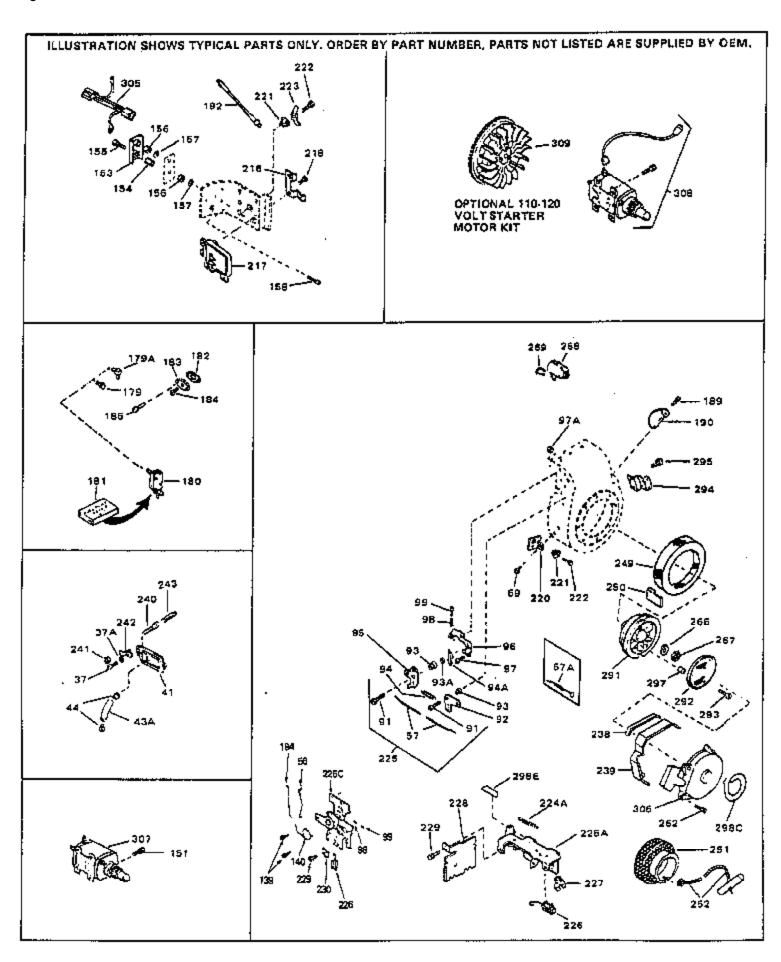

Ref #	Part Number (Oty Description
37A	27261	Washer, Flat (Use as required)
37	650128	Screw, 10-24 x 1/2" (Use as required)
37	650597	Screw, 10-24 x 5/8" (Use as required)
41	28425	Cover, Valve spring
43A	35350	Tube, Breather
56	31710	Link, Throttle
69	29747B	Screw, 5/16-24 x 21/32"
98	28569	Compression Spring (Used with 29500 screw)(Use as required)
98	32924	Compression Spring (Used with 650688 screw) (Use as required)
98	31342	Compression Spring (Used with 650549 screw) (Use as required)
99	650549	Screw, 5-40 x 7/16" (Use as required)
	29500	Screw, 8-32 x 3/4" (Use as required)
99	650688	Screw, 10-32 x 1 (Use as required)
182	32683A	Gasket, Fuel pump cover (Use as requi red)
183	32955	Cover, Fuel pump pad (Use as required)
184	9556	Plug, Pipe 1/8-27 (Use as required)
185	30063	Screw, 1/4-20 x 1/2" (Use as required)
225	730152	Control Bracket(Incl.91 thru 97)(As r eq.)
	33177	Terminal (Use as required)
	28301	Pulley, Rope starter
	590343	Rope Assy., Starter
	650815	Washer, Belleville
	8116	Nut, Hex
	33018_	Harness Assy., Adapter (Use as requir ed)
308	33328D	Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt
		starter motor kit may have been added to this engine. This
		can be added only if cylinder has drilled and tapped starter
		mounting bosses and a ring gear flywheel has been added
		(see #309). Refer to service number stamped on end cap of motor,
309	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)