



	D. W. J.	<u> </u>	
	Part Number	Qty	Description
1			Cylinder (Incl. 2,3,4,5,184) (2-5/8" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain, 1/4-18
	27876B		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
5	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	32581		• •
			Cap, Lower valve spring
	31830		Crankshaft
12	29783		Pin, Crankshaft gear Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is
10	27001		serviceable ONLY when itis pinned to the crankshaft.
			Serviceable CIVET When its pirited to the Granishan.
14	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
14	34532		Piston, Pin & Ring Set (.010" OS)
14	34533		Piston, Pin & Ring Set (.020" OS)
14A	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	31295C		Rod Assy., Connecting (Incl. 18)
	30682		Bolt, Connecting rod (Early production)
	650662C		Screw, Connecting rod (Late productio n)
	26073		Connecting rod bolt washer (Early pro duction)
20	28264		Connecting rod nut (Used on early pro duction)
21	33156		Camshaft
22	34034		Lifter, Valve
23	31451A		Cylinder Cover (Incl.24, 105, 246, 24 7 & 248)
24	28460		Seal, Oil
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	650489		Screw, 1/4-20 x 5/8"
	30939A		Cover, Cylinder head
	28938C		* Gasket, Cylinder head
	30938A		Head, Cylinder (Incl. 3 of 36)
	33636		Resistor Spark Plug
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
37	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	27915A		* Gasket, Intake
46	34712		Flange, Carburetor (Incl. 60)

	5 (1)	
		y Description
	30196	Screw, 5/16-18 x 3/4"
	29918	Lockwasher
	650548	Screw, 8-32 x 5/16"
51	30319	Rivet, Split (Used on early productio n)
52	33454	Lever Assy., Governor
53	30322	Lock Nut, 8-32 (Use as required)
	29916	Clamp, Governor lever (Use as require d)
	34662	Link, Throttle
	29216	Locknut, 10-32
	650517	Screw, 1/4-20 x 13/16"
		·
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
63	30699B	Rod Assy., Governor (This one piece gov. rod is no longer
		used. It is replaced by 30699C assy., Ref.#63A)
634	30699C	Rod Assy., Governor (Incl. 64 & 65)
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	31297	Dipstick (Incl. 68)
	29673	* Gasket, Dipstick
	29747B	Screw, 5/16-24 x 21/32"
70	32158E	Blower Hsg. (For elec.starter)(Incl.1 89,190)
71	33876	Gasket, Stator
73	29536	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	650152	Screw, 8-32 x 3/8"
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	28820	
		Screw, 10-32 x 1/2" (Use as required)
	650521	Screw, 10-32 x 1-1/8" (Use as require d)
	27272A	* Gasket, Air cleaner
	31691	Bracket, Air cleaner
	30727	Element, Air cleaner
	31715	Body, Air cleaner
89	730127	Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
		(Use as required)
00	20560	Compression Chring (Lland with 20500 corew)/Llan as
96	28569	Compression Spring (Used with 29500 screw)(Use as
		required)
98	32924	Compression Spring (Used with 650688 screw) (Use as
		required)
98	31342	Compression Spring (Used with 650549 screw) (Use as
		required)
ΩΩ	650549	Screw, 5-40 x 7/16" (Use as required)
	29500	
		Screw, 8-32 x 3/4" (Use as required)
	650688	Screw, 10-32 x 1 (Use as required)
	30884	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
105	31845	Shaft, Mechanical governor
106	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 106)
	30588A	Spool, Governor
	29193	Ring, Retaining
	34158	Bracket, Lower fuel tank
		·
	34159	Plate, Upper fuel tank mtg.
113	650561	Screw, 1/4-20 x 5/8"

Rof #	Part Number	Otv.	Description
		Qty	
	650665		Screw, 1/4-15 x 3/4"
114	34186A		Fuel Tank (Incl. 115 & 120)
115	410144B		Fuel Cap (White Plastic)(Standard)(As req.)
115	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use
			as required)
			ao roquirou)
115	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required)
			. ,
119	29774		Fuel Line (Braided 8.25") (Use as req uired)
119	30705		Fuel Line (Braided 16") (Use as requi red)
119	30962		Fuel Line (Braided 32") (Use as requi red)
	26460		Clamp, Fuel line (Use as required)
	30196		Screw, 5/16-18 x 3/4"
	650548		Screw, 8-32 x 5/16" (Early production )
	650139		Screw, 8-32 x 1/2" (Early production)
144	650542		Screw, 5/16-18 x 3/4"
146	29538		Base, Engine mounting
	650128		Screw, 10-24 x 1/2"
	30622A		Extension, Blower housing
			<u> </u>
	30747		Clip, Shorting
	650890		Lockwasher
186	27275		Clip, Wire (Use as required)
186	29443		Clip, Fuel line (Use as required)
244	31793		Bearing, Ball
	31792		Washer, Thrust
	31855		Retainer, Bearing
	650778		Washer, Lock
	650580		Nut, Lock
262	29716		Screw, 1/4-28 x 7/16"
264	32125		Cup, Starter
265	590417		Screen, Starter cup
	650815		Washer, Belleville
	8116		Nut, Hex
	550223		
			Decal, Name
	33310		Decal, 5 HP Mini-Bike (Use as require d)
	31517		Decal, H.P. (5 H.P.) (Use as required )
298A	32173		Decal, H.P. (6 H.P.) (Use as required)
298	34346		Decal, Instruction
	33962		Decal, Control
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
303	632178		Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A,
			page 176 for breakdown)
004	0400004		Manuel NOTE The consists account is not a sileline
304	610689A		Magneto NOTE: The complete magneto is not available as
			an assembly. The magneto number is shown for reference
			purposes only. Order component parts individually, as
			shown in parts list. (Refer to Division 5, Section B, page 24
			for breakdown)
			,
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for
			breakdown)
			,
310	33235A		* Gasket Set (Incl. items marked *)

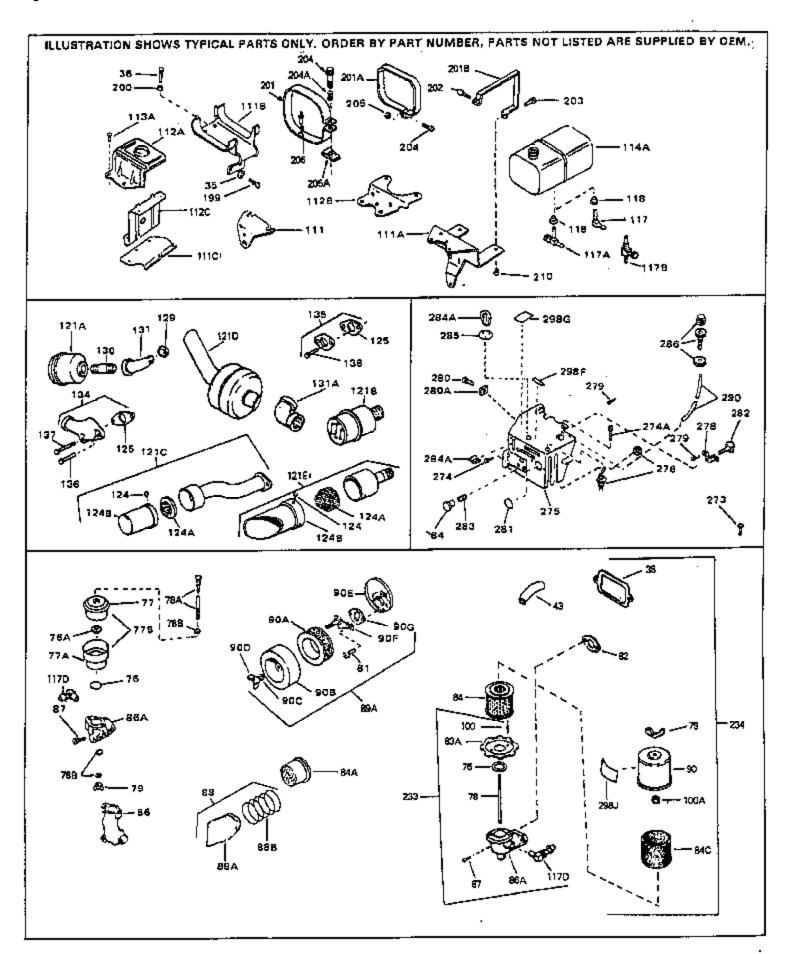

Ref #	Part Number	Qty Description
35	26073	Washer, Flat (Use as required)
35	650570	Washer, Flat (Use as required)
35	650691	Washer, Flat (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A	Screw, 5/16-18 x 2" (Use as required)
38	27896A	* Gasket, Breather cover
81	30196	Screw, 5/16-18 x 3/4" (Use as require d)
81	28820	Screw, 10-32 x 1/2" (Use as required)
81	650521	Screw, 10-32 x 1-1/8" (Use as require d)
82	27272A	* Gasket, Air cleaner
86A	34697	Air Cleaner Elbow Assy.(Use in 730561 only.)
89A	730128	Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
		298B) (Use as req.)
113∆	650665	Screw, 1/4-15 x 3/4"
	391026	Muffler (Incl. 124, 124A & 124B) (This spark arrester
12.15	001020	mufflercan be used on any model)
		• ,
	29633	Muffler
	33171	Muffler Screen (Use as required)
	33185	Cover & Tube, Muffler (Use as require d)
	650578	Screw, 8-18 x 3/8"
	32862	Nut, Conduit (1/4" thick)
	30244	Nipple, Pipe (2.5")
	30209	Elbow, Exhaust (45 degree)
	31288	Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130	Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
233	34819	Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
		730561 ass'y. only)
234	730561	Air Cleaner Kit
		(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
		(Use only on engines with an externally ventedfully
		adjustable carburetor.)
272	650687	Screw, 10-32 x 5/16" (Use as required )
	32410	Knob, Speed control
20 <del>4</del> A	J2710	Milos, opeca control

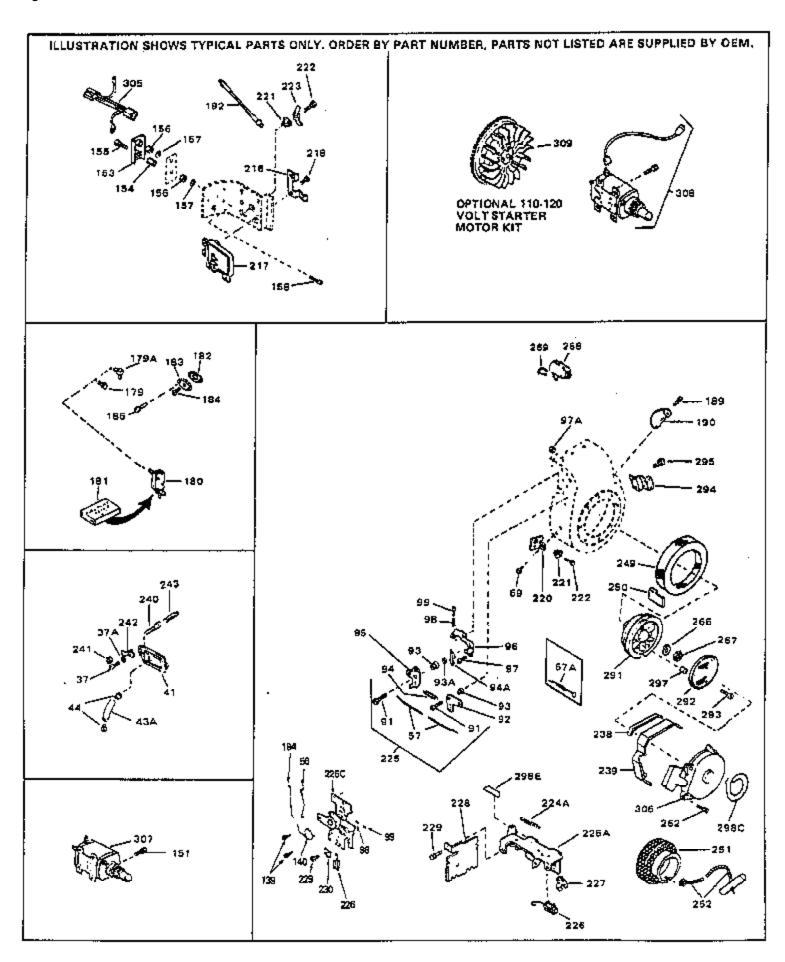

Ref #	Part Number (	Qty Description
37	650128	Screw, 10-24 x 1/2" (Use as required)
37	650597	Screw, 10-24 x 5/8" (Use as required)
37A	27261	Washer, Flat (Use as required)
41	28425	Cover, Valve spring
43A	35350	Tube, Breather
56	34662	Link, Throttle
69	29747B	Screw, 5/16-24 x 21/32"
98	28569	Compression Spring (Used with 29500 screw)(Use as required)
		• •
98	32924	Compression Spring (Used with 650688 screw) (Use as required)
98	31342	Compression Spring (Used with 650549 screw) (Use as required)
99	650549	Screw, 5-40 x 7/16" (Use as required)
	29500	Screw, 8-32 x 3/4" (Use as required)
	650688	Screw, 10-32 x 1 (Use as required)
	32683A	Gasket, Fuel pump cover (Use as requi red)
	32955	Cover, Fuel pump pad (Use as required)
	9556	Plug, Pipe 1/8-27 (Use as required)
	30063	Screw, 1/4-20 x 1/2" (Use as required )
	34661	Link, Governor
	34677	Control Bracket (Incl. 98, 99, 140 & 226)
	730152	Control Bracket(Incl.91 thru 97)(As r eq.)
	33177	Terminal (Use as required)
	29716	Screw, 1/4-28 x 7/16"
	650815	Washer, Belleville
	8116	Nut, Hex
	33018	Harness Assy., Adapter (Use as requir ed)
	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
		breakdown)
308	33328D	Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)