


Ref #	Part Number	Otv	Description
	33311B	٠.,	Cylinder (Incl. 2,3,4,5,184) (2-5/8" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain, 1/4-18
	27876B		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
6	27878A		Exhaust Valve (Std.)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	32581		Cap, Lower valve spring
			•
	30543		Crankshaft (Incl. 12 & 13)
12	29783		Pin, Crankshaft gear Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is
13	27004		• • • • • • • • • • • • • • • • • • • •
			serviceable ONLY when itis pinned to the crankshaft.
14	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532		Piston, Pin & Ring Set (0.10" OS)
	34533		Piston, Pin & Ring Set (.010 OS)
	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
14A	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
15	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	31295C		Rod Assy., Connecting (Incl. 18)
18	650662C		Screw, Connecting rod (Late productio n)
18A	30682		Bolt, Connecting rod (Early productio n)
	26073		Connecting rod bolt washer (Early pro duction)
	28264		Connecting rod nut (Used on early pro duction)
	33156		Camshaft
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 27 & 105)
	28427		Seal, Oil
26	30684		* Gasket, Cylinder cover
27	31546		Bushing, Crankshaft
28	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	650489		Screw, 1/4-20 x 5/8"
	30939A		Cover, Cylinder head
			· ·
	28938C		* Gasket, Cylinder head
	30938A		Head, Cylinder (Incl. 3 of 36)
	33636		Resistor Spark Plug
35	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
37	650128		Screw, 10-24 x 1/2" (Use as required)
37	650597		Screw, 10-24 x 5/8" (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
45	27915A		* Gasket, Intake

Dof #	Part Number	a. Description
	Part Number Q: 30195A	by Description Flange, Carburetor (Incl. 79 & 80)
	30196	Screw, 5/16-18 x 3/4"
	29918	Lockwasher
	650548	Screw, 8-32 x 5/16"
51	30319	Rivet, Split (Used on early productio n)
52	32326A	Lever, Governor (New lever does not need 1 of Ref
		#49,51,53,54,132,133)
E 2	30322	Look Nut. 9.22 (Lloo on required)
		Lock Nut, 8-32 (Use as required)
	29916	Clamp, Governor lever (Use as require d)
	30205	Bracket, Adjusting
	31710	Link, Throttle
	29216	Locknut, 10-32
59	29752	Nut & Lockwasher, 1/4-28
60	650572	Screw, 1/4-28 x 1-1/8"
61	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
	30699C	Rod Assy., Governor (Incl. 64 & 65)
	30699B	Rod Assy., Governor (This one piece gov. rod is no longer
00	000002	used. It is replaced by 30699C assy., Ref.#63A)
		,
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
66A	31297	Dipstick (Incl. 68)
68	29673	* Gasket, Dipstick
69	29747B	Screw, 5/16-24 x 21/32"
70	32158E	Blower Hsg. (For elec.starter)(Incl.1 89,190)
	33876	Gasket, Stator
	29536	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	28820	Screw, 10-32 x 1/2" (Use as required)
	650521	Screw, 10-32 x 1-1/8" (Use as require d)
	650152	Screw, 8-32 x 3/8"
	27272A	* Gasket, Air cleaner
	31691	Bracket, Air cleaner
	30727	Element, Air cleaner
85	31715	Body, Air cleaner
89	730127	Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
		(Use as required)
QR	28569	Compression Spring (Used with 29500 screw)(Use as
30	20000	required)
98	32924	Compression Spring (Used with 650688 screw) (Use as
		required)
98	31342	Compression Spring (Used with 650549 screw) (Use as
00	0.0.2	required)
	650688	Screw, 10-32 x 1 (Use as required)
	650549	Screw, 5-40 x 7/16" (Use as required)
99	29500	Screw, 8-32 x 3/4" (Use as required)
102	30884	Key, Flywheel
103	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 106)
		· ,
108	30588A	Spool, Governor


		Qty	
109	29193		Ring, Retaining
113A	650665		Screw, 1/4-15 x 3/4"
	650561		Screw, 1/4-20 x 5/8"
	35584		Fuel Tank (Incl. 115 & 120)
	410144B		Fuel Cap (White Plastic)(Standard)(As req.)
	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use
113	33032		as required)
			• •
115	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required)
119	29774		Fuel Line (Braided 8.25") (Use as req uired)
119	30705		Fuel Line (Braided 16") (Use as required)
119	30962		Fuel Line (Braided 32") (Use as requi red)
	26460		Clamp, Fuel line (Use as required)
	32401		Muffler
	34174		Deflector, Exhaust
	650665		Screw, 1/4-15 x 7/8"
	27930A		* Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	26073 650604A		Washer, Flat
	650694A		Screw, 5/16-18 x 2" Screw, 8/32 x 5/16" (Forth production)
	650548		Screw, 8-32 x 5/16" (Early production)
	650139		Screw, 8-32 x 1/2" (Early production)
	650542		Screw, 5/16-18 x 3/4"
	29538		Base, Engine mounting
	650128		Screw, 10-24 x 1/2"
	30622A		Extension, Blower housing
149A	30747		Clip, Shorting
150	650890		Lockwasher
186	27275		Clip, Wire (Use as required)
	29443		Clip, Fuel line (Use as required)
	31386		Spring, Extension
	28942		Screw, 10-32 x 3/8"
	27793		Clip, Conduit
	29716		Screw, 1/4-28 x 7/16"
	32125		Cup, Starter
	590417		Screen, Starter cup
	650815		Washer, Belleville
	8116		Nut, Hex
	34346		Decal, Instruction
	550223		Decal, Name
	33310		Decal, 5 HP Mini-Bike (Use as require d)
	31517		Decal, H.P. (5 H.P.) (Use as required)
	32173		Decal, H.P. (6 H.P.) (Use as required)
	30547A		Contact Assy., Breaker
300	30548B		Condenser
301	631021		Inlet Needle, Seat & Clip Assy.
	631828		Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A,
			page 144 for breakdown)
3∩/	610689A		Magneto NOTE: The complete magneto is not available as
504	0.0000/1		an assembly. The magneto number is shown for reference
			purposes only. Order component parts individually, as
			shown in parts list. (Refer to Division 5, Section B, page 24
			for breakdown)
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for
			hreakdown)

breakdown)

Ref # Part Number	Qty Description
310 33235A	* Gasket Set (Incl. items marked *)

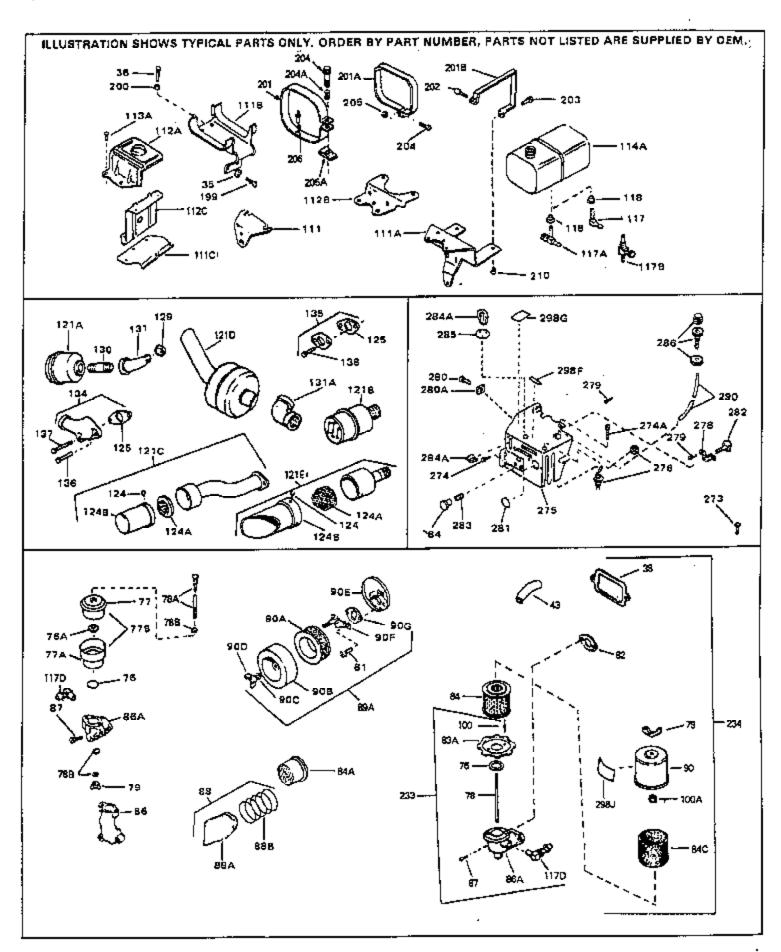

Ref #	Part Number C	Oty Description
	26073	Washer, Flat (Use as required)
35	650570	Washer, Flat (Use as required)
35	650691	Washer, Flat (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
36	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
36	650694A	Screw, 5/16-18 x 2" (Use as required)
38	27896A	* Gasket, Breather cover
81	30196	Screw, 5/16-18 x 3/4" (Use as require d)
81	28820	Screw, 10-32 x 1/2" (Use as required)
81	650521	Screw, 10-32 x 1-1/8" (Use as require d)
82	27272A	* Gasket, Air cleaner
86A	34697	Air Cleaner Elbow Assy.(Use in 730561 only.)
89A	730128	Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
		298B) (Use as req.)
111	33167	Bracket, Lower fuel tank
	33166A	Bracket, Upper fuel tank
	650665	Screw, 1/4-15 x 3/4"
	391026	Muffler (Incl. 124, 124A & 124B) (This spark arrester
1212	001020	mufflercan be used on any model)
		• •
	33171	Muffler Screen (Use as required)
	33185	Cover & Tube, Muffler (Use as require d)
	650578	Screw, 8-18 x 3/8"
	27930A	* Gasket, Exhaust
	31288	Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130	Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
233	34819	Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
		730561 ass'y. only)
234	730561	Air Cleaner Kit
		(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
		(Use only on engines with an externally ventedfully
		adjustable carburetor.)
272	650687	Scrow 10.22 v 5/16" (Lico as required.)
213	030007	Screw, 10-32 x 5/16" (Use as required)

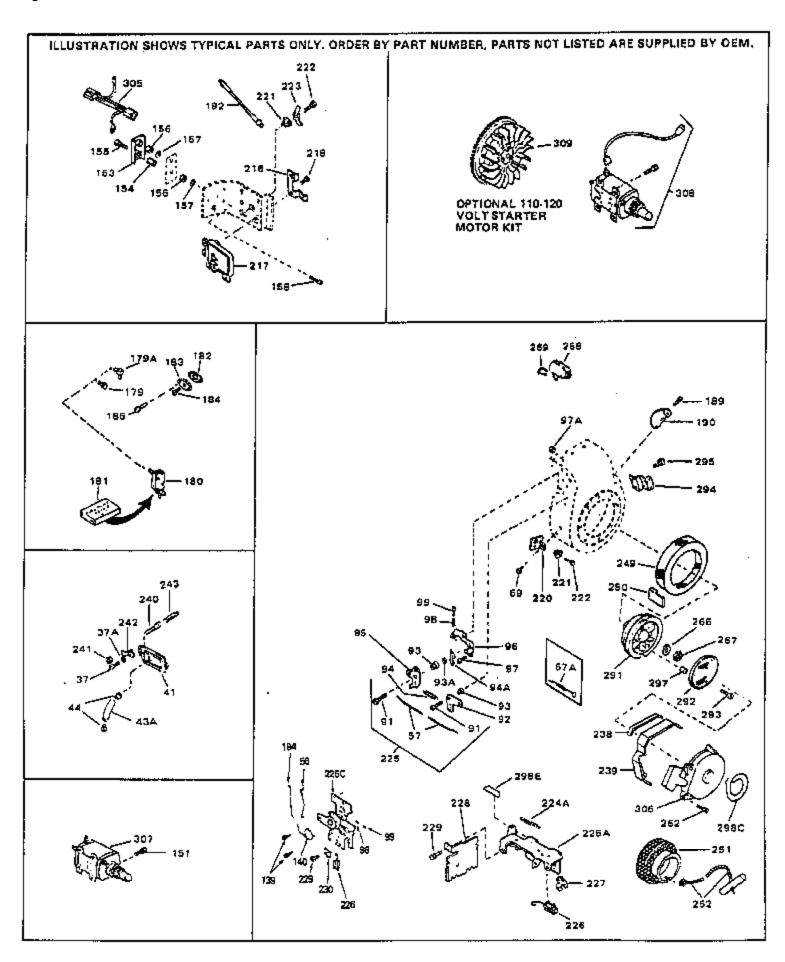

Det #	Dowt Nicroshou	Ot	Description
	Part Number	Qıy	Description
	27261		Washer, Flat (Use as required)
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	28425		Cover, Valve spring
	35350		Tube, Breather
	31710		Link, Throttle
	29747B		Screw, 5/16-24 x 21/32"
98	28569		Compression Spring (Used with 29500 screw)(Use as required)
98	32924		Compression Spring (Used with 650688 screw) (Use as required)
98	31342		Compression Spring (Used with 650549 screw) (Use as required)
99	650688		Screw, 10-32 x 1 (Use as required)
	650549		Screw, 5-40 x 7/16" (Use as required)
	29500		Screw, 8-32 x 3/4" (Use as required)
182	32683A		Gasket, Fuel pump cover (Use as required)
183	32955		Cover, Fuel pump pad (Use as required)
	9556		Plug, Pipe 1/8-27 (Use as required)
185	30063		Screw, 1/4-20 x 1/2" (Use as required)
225	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
227	33177		Terminal (Use as required)
229	28942		Screw, 10-32 x 3/8"
230	27793		Clip, Conduit
262	29716		Screw, 1/4-28 x 7/16"
266	650815		Washer, Belleville
267	8116		Nut, Hex
305	33018		Harness Assy., Adapter (Use as requir ed)
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
308	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)